


# Twin Pack™ Paper Roll Clamps

- Handles 1 or 2 rolls side-by-side
- Clean, grease-free handling — no lube arm slides
- Features ARPAD™ (Automatic Roll Positioning Arm Design)
- Internal sideshift improves maneuverability

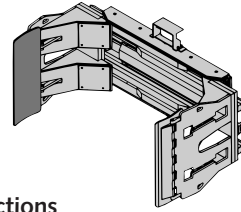

## Sideshifting Twin Pack Paper Roll Clamps (Non-Rotating), 2 Functions

Model Number	Capacity (lb @ LC, in)	Roll Range, 2 Rolls (in)	Roll Range, <sup>1</sup> Roll (in)	Mounting Class
LCT-55NS-T3442	5,500 @ 21	2 x (34–42)	34–42	III
LCT-55NS-T3445	5,500 @ 26	2 x (34–45)	34–51	
NSQ-65NS-T3445	6,500 @ 26	2 x (34–45)	34–51	
NSQ-65NS-T3451	6,500 @ 30	2 x (34–51)	34–60	
NSQ-77NS-T3445	7,700 @ 26	2 x (34–45)	34–51	III or IV
NSQ-77NS-T3451	7,700 @ 30	2 x (34–51)	34–60	
NSQ-88NS-T3445	8,800 @ 26	2 x (34–45)	34–51	
NSQ-88NS-T3451	8,800 @ 30	2 x (34–51)	34–60	IV
NSQ-11NS-T3451	11,000 @ 30	2 x (34–51)	34–60	

<sup>1</sup> Handles two rolls side by side. Handles four rolls: two high, two wide.

## Recommended Hydraulic Supply

Model Number	Flow (gpm)	Max psi
LCT Models	7–10	2,500
NSQ Models	15–18	2,250

Hydraulic flow less than minimum may reduce operating speed and/or cause irregular arm movement. Higher flow may result in heat build-up, erratic operation and shortened hydraulic system life.

## Minimum Truck Carriage Width

Model Number	Body Width (in)	Minimum Truck Carriage Width (in)
LCT-55	52	39
NSQ-65/77/88	62	39
NSQ-11	64	46

## Installation Equipment

Model Number	Item
YHJL-8-D-30 <sup>1</sup>	Jump lines: 2 functions, #8 hose

<sup>1</sup> Includes the hoses and fittings to connect a standard attachment to the hose terminal on the lift truck carriage.

## Optional Equipment

Model Number	Item
YL-279	Single setting relief valve
YL-354	Three position relief valve
2520877	Pressure gauge
YSVK-1	Solenoid installation kits <sup>1</sup> – 2 functions
2527912	Set of 2 quick disconnect hydraulic couplings <sup>2</sup>
Y088122.1	Control knob – 2 functions (1 button)
	Bumper pad
	Clamp force gauge

<sup>1</sup> Includes the hoses and fittings to connect a standard attachment to the hose terminal on the lift truck carriage.

<sup>2</sup> See page J-3 for more information on quick disconnect coupling kits.

## Optional Mounting Hooks

	Description
Class III	Quick change hooks
Class IV	Quick change hooks
Class III/IV	Dual bolt-on hooks
Class III/IV	Dual quick change hooks
	Pin/shaft mounting