


FREEMAN

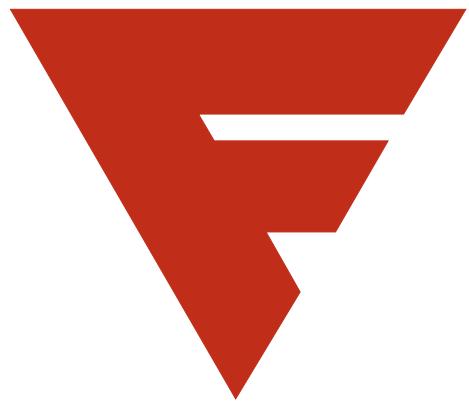

Parts Manual

**Model 270/275
Automatic Hay Baler**

**Starting in 2011, With Serial Numbers:
270E14-004
275XXX-705**



WARNING

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after handling.

Other chemicals in this vehicle are also known to the State of California to cause cancer, birth defects, and other reproductive harm.

Section 0

General Information

Section	Page Number
Table of Contents.....	0-2
Alphabetical Index	0-4
Introduction.....	0-6
Serial Number Location	0-7
Safety.....	0-8

Table of Contents

Section 0

General Information	
Table of Contents.....	0-2
Alphabetical Index	0-4
Introduction.....	0-6
Serial Number Location.....	0-7
Safety	0-8

Section 1**Front End**

Drawbar Installation, Engine.....	1-3
Drawbar Assembly, Engine.....	1-4
Drawbar Installation RH, Driveline.....	1-7
Drawbar Assembly RH, Driveline	1-8
Drawbar Installation LH, Driveline	1-11
Drawbar Assembly LH, Driveline	1-12
Drawbar Installation RH, Hydro	0-5
Drawbar Assembly RH, Hydro.....	0-5
Drawbar Installation LH, Hydro	0-5
Drawbar Assembly LH, Hydro	1-18
Swing Drawbar Installation, Hydro LH.....	1-19
Front End Installation, 14" 2-Tie	1-20
Front End Assembly, 14" 2-Tie.....	1-21
Front End Installation, 16" 2-Tie	1-22
Front End Assembly, 16" 2-Tie.....	1-23

Section 2**Frame and Tension System**

Chamber Installation / Frame, 14" 2-Tie	2-3
Chamber Installation / Frame, 16" 2-Tie	2-6
Haydog Installation, Conventional 2-Tie	2-9
Haydog Installation, Tailless 2-Tie	2-10
Tensioning/Rear Mounts Installation, 14" Chamber.....	2-11
Tensioning/Rear Mounts Installation, 16" Chamber.....	2-13
Pump Tank Assembly	2-15
Tension Bypass Box Assembly.....	2-16
Tandem Tension, 3 Ram, 14" 2-Tie	2-17
Tandem Tension, 3 Ram, 16" 2-Tie	2-18
Dual Tension Rams.....	2-19
Ram Assembly, Dual	2-20
Ram Assembly, Single	2-21
Auto Tension Release	2-22
Upper Linkage Sub Assembly	2-24
Lower Linkage Sub Assembly	2-25
Throttle/Tension Control Box Installation, Engine	2-26
Throttle/Tension Control Box Assembly, Engine	2-27
Throttle/Tension Control Box Installation, Driveline	2-28
Throttle/Tension Control Box Installation, Hydro.....	2-30
Tension Control Assembly, Hydro/Driveline	2-31
Frame & Axle Installation, 14" 2 Tie, Bullgear.....	2-32
Frame & Axle Installation, 16" 2 Tie, Bullgear.....	2-33
Single 8-Hole Flotation RH 2 & 3 Tie	2-34
8-Hole Flotation LH 2 Tie	2-35
Tandem 8-Hole Flotation LH 2 Tie	2-36
Pickup Depth Wheel	2-37
Tandem 8-Hole Flotation RH 2 & 3 Tie	2-38
Single 8-Hole Highway RH 2 & 3 Tie	2-39

Tandem 8-Hole Highway RH	2-40
Tandem 8-Hole Highway LH 2 Tie	2-41
Tire & Wheel 8-Hole Highway LH 2 Tie	2-42
Tire & Wheel 8-Hole Highway LH 2 Tie	2-43

Section 3**Shielding**

Shielding Installation, Pickup	3-3
Shielding Installation, LH, 14" Chamber	3-4
Shielding Installation LH, Hydro & Engine, 16".....	3-5
Shielding Assembly, Pick Up Drive	3-8
Shielding Installation, Feed Arm/Con Rod,14".....	3-9
Shielding Installation, Feed Arm/Con Rod,16".....	3-10
Shielding Installation, Knotter / Drive Arm	3-11
Shielding Installation, Feed House W/Decals, 270.....	3-12
Shielding Installation, Feed House W/Decals, 275.....	3-14
Shielding Installation, Belt, Engine	3-16
Shield Assembly, Belt, Engine	3-17
Shielding Installation, Belt, PTO	3-18
Shield Assembly, Belt, PTO	3-19
Shielding Installation, Belt, Hydro.....	3-20
Shield Assembly, Belt, Hydro.....	3-21
Shielding Installation, Top Chamber, Hydro	3-22
Shielding Installation, Meter Wheel	3-23
Shielding Installation, Bullgear, Hydro/Driveline/SP Balers .	3-24

Section 4**Power Unit**

Engine Installation	4-3
Air Cleaner Assembly	4-4
Engine Assembly	4-5
Control Box Assembly	4-6
Module Assembly	4-10
Clutch	4-11
Snorkel Installation	4-13
Snorkel Assembly with Door	4-14
Side Support Bracket Assembly	4-15
Fuel Tank Installation, 16 Gallon.....	4-16
Fuel Tank Assembly, 16 Gallon.....	4-18
Driveline PTO Installation, 2-Tie Bullgear	4-19
Driveline Assembly	4-24

Section 5**Drive System**

Pinion Shaft Installation	5-3
Pinion Shaft Assembly	5-4
Pinion Shaft Installation Instructions.....	5-5
Bullgear/Plunger Installation, RH Drawbar, 14" 2 Tie	5-6
Bullgear/Plunger Installation, LH Drawbar, 14" 2 Tie	5-8
Plunger/Connector Rod Assembly, 14" 2 Tie	5-10
Connector Rod Assembly, 14" 2-Tie	5-13
Side Plate Assembly, LH, 14" Chamber	5-14
Side Plate Assembly, RH, 14" Chamber	5-15
Bullgear/Plunger Installation, RH Drawbar, 16" 2 Tie	5-16
Bullgear/Plunger Installation, LH Drawbar, 16" 2 Tie	5-18
Plunger/Connector Rod Assembly, 16" 2 Tie	5-20
Connector Rod Assembly, 16" 2-Tie, 2 Piece	5-23

Table of Contents

Side Plate Assembly, LH, 16" Chamber	5-24	Knotter Installation, Tailless 2 Tie	8-19
Side Plate Assembly, RH, 16" Chamber	5-25	Knotter Assembly, Tailless 2 Tie	8-23
Flywheel Installation	5-26	Knotter Head Assembly, Tailless	8-28
Flywheel Assembly	5-27	Trip Mount Assembly, Tailless 2 Tie	8-31
Tank Installation, Bullgear Luber	5-28	Knotter Drive Installation	8-32
Tank and Pump Assembly, Bullgear Luber	5-29	Knotter Fan Installation	8-34
Bullgear/Luber Installation, 2-Tie	5-30	Knotter Fan Assembly	8-35
Bullgear/Luber Assembly, 2-Tie	5-31	Top Plate Installation, Conventional 2 Tie	8-36
Manifold Assembly, Bullgear Luber	5-32	Top Plate Installation, Tailless 2 Tie	8-37
Bullgear Shield/Oil Cooler Shroud Assembly	5-33	Twine Box Installation, 6 Compartment	8-38
Manifold Assembly, Bullgear Luber, Hydro	5-35	Twine Box Assembly, 6 Compartment	8-40
Section 6	Pickup	Twine Box Installation, 9 Compartment	8-42
Pickup Installation, 14" 2-Tie	6-3	Twine Box Assembly, 9 Compartment	8-44
Pickup Installation, 16" 2-Tie	6-6	Twine Box Installation, 12 Compartment	8-46
Pickup Clutch Assembly	6-9	Twine Box Assembly, 12 Compartment	8-48
Pickup Sprocket Assembly	6-10	Twine Tension Frame Assembly	8-50
Pickup Assembly, Super Sweep	6-11	Twine Box Divider, 12 Compartment	8-51
Cam Lever Assembly	6-15	Section 9	Needle Yoke and Needles
(Manual) Spring, Pick Up Installation	6-16	Needles and Yoke Installation, Conventional, 14"	9-3
Spring Assembly, Manual Pickup Lift	6-17	Needles and Yoke Installation, Conventional, 16"	9-7
Electric Pickup Lift, 14" Frame	6-18	Needles and Yoke Installation, Tailless, 14"	t9-11
Electric Pickup Lift, 16" Frame	6-21	Needles and Yoke Installation, Tailless, 16"	9-14
Wiring Diagram, Control Box	6-24	Section 10	Hydraulic System
Electric Lift Control Box Assembly	6-25	Tensioning Hoses Installation	See Section 2
Pickup Lift, 14" W/Engine, Hydro	6-26	Section 11	Electrical System
Pickup Lift, 16" W/Engine, Hydro	6-29	Electrical Installation, Engine	11-3
Spring Assembly, Electric/Hyd Pickup Lift	6-32	Electrical Schematic, Engine	11-4
Section 7	Feeder & Feed Fork	Highway Lights & Sensor Harness Wiring Diagram	11-5
Feed Arm Drive/Fork Installation, 14" 2-Tie	7-3	Light Installation Sidefeeds	11-7
Feedfork Assembly, 14" 2-Tie	7-5	Light Assembly, LH	11-8
Feed Arm Drive/Fork Installation, 16" 2-Tie	7-7	Light Assembly, RH	11-9
Feedfork Assembly, 16" 2-Tie	7-9	Work Light Sub-Assembly, RH	11-10
Connecting Rod Assembly	7-11	Work Light Sub-Assembly, Front	11-11
Pivot Shaft Assembly, Feed Arm	7-12	Section 12	Misc Parts and Optional Eqpmnt
Feed House Installation, 14" Chamber	7-16	Bale Chute Installation	12-3
Feeder House Assembly, 14" Chamber	7-21	Bale Chute Attachment	12-4
Feed House Installation, 16" Chamber	7-22	Bale Counter Installation	12-5
Feeder House Assembly, 16" Chamber	7-27	Bale Counter Assembly	12-6
Section 8	Knotter	Bale Weight Indicator Installation	12-7
Knotter Installation, Conventional 2 Tie	8-3	Bale Weight Indicator Assembly	12-9
Tank/Pump Assembly, Conventional Knotter	8-6	Hay Saver Wheel Installation	12-10
Knotter Assembly, Conventional 2 Tie	8-7	Hay Saver Wheel Assembly	12-11
Housing Assembly, Knotter Clutch	8-13	Tool Box Installation	12-12
Disc and Bearing Assembly	8-14	Slow Moving Vehicle Sign Installation	12-13
Knotter Head Assembly, Conventional	8-15	Decal List, 270	12-14
Meter Wheel Assembly, 2 Tie	8-17	Decal List, 275	12-16
Trip Mount Assembly	8-18	Hitch Ball	12-18
		Misc. Parts	12-19

Alphabetical Index

8-Hole Flotation LH 2 Tie.....	2-35
Air Cleaner Assembly.....	4-4
Auto Tension Release.....	2-22
Bale Chute Attachment.....	12-4
Bale Chute Installation.....	12-3
Bale Counter Assembly.....	12-6
Bale Counter Installation	12-5
Bale Weight Indicator Assembly	12-9
Bale Weight Indicator Installation	12-7
Bullgear/Luber Assembly, 2-Tie.....	5-31
Bullgear/Luber Installation, 2-Tie.....	5-30
Bullgear/Plunger Installation, LH Drawbar, 14" 2 Tie	5-8
Bullgear/Plunger Installation, LH Drawbar, 16" 2 Tie	5-18
Bullgear/Plunger Installation, RH Drawbar, 14" 2 Tie	5-6
Bullgear/Plunger Installation, RH Drawbar, 16" 2 Tie	5-16
Bullgear Shield/Oil Cooler Shroud Assembly	5-33
Cam Lever Assembly	6-15
Chamber Installation / Frame, 14" 2-Tie	2-3
Chamber Installation / Frame, 16" 2-Tie	2-6
Clutch	4-11
Connecting Rod Assembly	7-11
Connector Rod Assembly, 14" 2-Tie	5-13
Connector Rod Assembly, 16" 2-Tie, 2 Piece	5-23
Control Box Assembly	4-6
Dawbar Installation LH, Hydro	1-17
Dawbar Installation RH, Hydro	1-15
Decal List, 270.....	12-14
Decal List, 275.....	12-16
Disc and Bearing Assembly.....	8-14
Drawbar Assembly, Engine.....	1-4
Drawbar Assembly LH, Driveline	1-12
Drawbar Assembly LH, Hydro	1-18
Drawbar Assembly RH, Driveline	1-8
Drawbar Assembly RH, Hydro.....	1-16
Drawbar Installation, Engine.....	1-3
Drawbar Installation LH, Driveline	1-11
Drawbar Installation RH, Driveline.....	1-7
Dual Tension Rams.....	2-19
Electrical Installation, Engine.....	11-3
Electrical Schematic, Engine	11-4
Electric Lift Control Box Assembly.....	6-25
Electric Pickup Lift, 14" Frame	6-18
Electric Pickup Lift, 16" Frame	6-21
Engine Assembly	4-5
Engine Installation	4-3
Feed Arm Drive/Fork Installation, 14" 2-Tie.....	7-3
Feed Arm Drive/Fork Installation, 16" 2-Tie	7-7
Feeder House Assembly, 14" Chamber	7-21
Feeder House Assembly, 16" Chamber	7-27
Feedfork Assembly, 14" 2-Tie	7-5
Feedfork Assembly, 16" 2-Tie	7-9
Feed House Installation, 14" Chamber	7-16
Feed House Installation, 16" Chamber	7-22
Flywheel Assembly	5-27
Flywheel Installation	5-26
Frame & Axle Installation, 14" 2 Tie, Bullgear.....	2-32
Frame & Axle Installation, 16" 2 Tie, Bullgear.....	2-33
Front End Assembly, 14" 2-Tie.....	1-21
Front End Assembly, 16" 2-Tie.....	1-23
Front End Installation, 14" 2-Tie	1-20
Front End Installation, 16" 2-Tie	1-22
Fuel Tank Assembly, 16 Gallon.....	4-18
Fuel Tank Installation, 16 Gallon.....	4-16
Haydog Installation, Conventional 2-Tie	2-9
Haydog Installation, Tailless 2-Tie	2-10
Hay Saver Wheel Assembly	12-11
Hay Saver Wheel Installation	12-10
Highway Lights & Sensor Harness Wiring Diagram	11-5
Hitch Ball	12-18
Housing Assembly, Knotter Clutch	8-13
Knotter Assembly, Conventional 2 Tie	8-7
Knotter Assembly, Tailless 2 Tie	8-23
Knotter Drive Installation	8-32
Knotter Fan Assembly	8-35
Knotter Fan Installation	8-34
Knotter Head Assembly, Tailless.....	8-28
Knotter Installation, Conventional 2 Tie	8-3
Knotter Installation, Tailless 2 Tie	8-19
Light Installation Sidefeeds.....	11-7
Lower Linkage Sub Assembly	2-25
Manifold Assembly, Bullgear Luber.....	5-32
Manifold Assembly, Bullgear Luber, Hydro	5-35
Meter Wheel Assembly, 2 Tie	8-17
(Manual) Spring, Pick Up Installation	6-16
Module Assembly	4-10
Needles and Yoke Installation, Conventional, 14"	9-3
Needles and Yoke Installation, Conventional, 16"	9-7
Needles and Yoke Installation, Tailless, 14"	9-11
Needles and Yoke Installation, Tailless, 16"	9-14

Alphabetical Index

Pickup Assembly, Super Sweep	6-11	Tandem 8-Hole Flotation RH 2 & 3 Tie	2-38
Pickup Clutch Assembly	6-9	Tandem 8-Hole Highway LH 2 Tie	2-41
Pickup Depth Wheel	2-37	Tandem 8-Hole Highway RH	2-40
Pickup Installation, 14" 2-Tie	6-3	Tandem Tension, 3 Ram, 14" 2-Tie..	2-17
Pickup Installation, 16" 2-Tie	6-6	Tandem Tension, 3 Ram, 16" 2-Tie..	2-18
Pickup Lift, 14" W/Engine, Hydro	6-26	Tank/Pump Assembly, Conventional Knotter	8-6
Pickup Lift, 16" W/Engine, Hydro	6-29	Tank and Pump Assembly, Bullgear Luber	5-29
Pickup Sprocket Assembly	6-10	Tank Installation, Bullgear Luber	5-28
Pinion Shaft Assembly.....	5-4	Tension Bypass Box Assemby	2-16
Pinion Shaft Installation	5-3	Tension Control Assembly, Hydro/Driveline	2-31
Pinion Shaft Installation Instructions.....	5-5	Tensioning/Rear Mounts Installation, 14" Chamber.....	2-11
Pivot Shaft Assembly, Feed Arm	7-12	Tensioning/Rear Mounts Installation, 16" Chamber.....	2-13
Plunger/Connector Rod Assembly, 14" 2 Tie	5-10	Throttle/Tension Control Box Assembly, Engine	2-27
Plunger/Connector Rod Assembly, 16" 2 Tie	5-20	Throttle/Tension Control Box Installation, Driveline	2-28
Pump Tank Assembly	2-15	Throttle/Tension Control Box Installation, Engine	2-26
Ram Assembly, Dual	2-20	Throttle/Tension Control Box Installation, Hydro.....	2-30
Ram Assembly, Single	2-21	Tire & Wheel 8-Hole Highway LH 2 Tie	2-42
Shield Assembly, Belt, Engine	3-17	Tire & Wheel 8-Hole Highway LH 2 Tie	2-43
Shield Assembly, Belt, Hydro.....	3-21	Tool Box Installation.....	12-12
Shield Assembly, Belt, PTO	3-19	Top Plate Installation, Conventional 2 Tie	8-36
Shielding Assembly, Pick Up Drive	3-8	Top Plate Installation, Tailless 2 Tie	8-37
Shielding Installation, Belt, PTO	3-18	Trip Mount Assembly	8-18
Shielding Installation, Feed Arm/Con Rod,14".....	3-9	Trip Mount Assembly, Tailless 2 Tie	8-31
Shielding Installation, Feed Arm/Con Rod,16".....	3-10	Twine Box Assembly, 12 Compartment	8-48
Shielding Installation, Feed House W/Decals, 270.....	3-12	Twine Box Assembly, 6 Compartment	8-40
Shielding Installation, Knotter / Drive Arm	3-11	Twine Box Assembly, 9 Compartment	8-44
Shielding Installation, LH, 14" Chamber.....	3-4	Twine Box Divider, 12 Compartment	8-51
Shielding Installation, Meter Wheel	3-23	Twine Box Installation, 12 Compartment	8-46
Shielding Installation, Pickup.....	3-3	Twine Box Installation, 6 Compartment	8-38
Shielding Installation, Top Chamber, Hydro	3-22	Twine Box Installation, 9 Compartment	8-42
Shielding Installation, Bullgear, Hydro/Driveline/SP Balers .	3-24	Twine Tension Frame Assembly	8-50
Shielding Installation LH, Hydro & Engine, 16".....	3-5	Upper Linkage Sub Assembly	2-24
Side Plate Assembly, LH, 14" Chamber.....	5-14	Wiring Diagram, Control Box	6-24
Side Plate Assembly, LH, 16" Chamber.....	5-24	Knotter Head Assembly, Conventional	8-15
Side Plate Assembly, RH, 14" Chamber	5-15	Light Assembly, LH	11-8
Side Plate Assembly, RH, 16" Chamber	5-25	Light Assembly, RH	11-9
Side Support Bracket Assembly	4-15	Misc. Parts	12-19
Single 8-Hole Flotation RH 2 & 3 Tie	2-34	Shielding Installation, Belt, Engine	3-16
Single 8-Hole Highway RH 2 & 3 Tie	2-39	Shielding Installation, Belt, Hydro.....	3-20
Slow Moving Vehicle Sign Installation.....	12-13	Shielding Installation, Feed House W/Decals, 275	3-14
Snorkel Assembly with Door.....	4-14	Spring Assembly, Manual Pickup Lift	6-17
Snorkel Installation	4-13	Work Light Sub-Assembly, Front	11-11
Spring Assembly, Electric/Hyd Pickup Lift	6-32	Work Light Sub-Assembly, RH	11-10
Swing Drawbar Installation, Hydro LH.....	1-19		
Tandem 8-Hole Flotation LH 2 Tie	2-36		

Introduction

This manual contains all components of the baler that can be separately identified as well as parts necessary for equipment support. The parts pages are divided into 12 sections. You can find the parts page relevant to your project in either the Table of Contents (Page 0-2) or in the Alphabetical Index (Page 0-4).

Illustrations

Illustrations are provided whenever possible to represent component parts and the mounting location of those parts. The numbered labels correspond to the item numbers in the parts list.

Parts Lists

Component parts lists are presented in a 5-column format:

Item: Index numbers found in this column correspond to the numbers found on the respective parts location illustration. Some items are shown for reference purposes only to illustrate their relationship to other systems.

Notes: This column identifies footnotes applicable to specified items.

Part Number: This column lists the Allied Systems Company Part Number.

Quantity: This column lists the total number of a specific item required per assembly or subassembly. This number may not necessarily be the number of items used in the end item or system. Only one set of components is listed whenever the components of two assemblies are the same.

"A/R" (as required) identifies bulk items whose length or other dimension must be specified when requisitioning.

"Ref" identifies items shown for reference purposes only to illustrate their relationship to other systems.

"NSS" (not sold separately) identifies items such as valve housings and spools, ring gears and pinions, etc., which must be ordered as a set because they are closely mated at manufacture.

Description: This column lists the item nomenclature along with those modifiers necessary to identify the item. Additionally, cross references for repairable subassemblies are listed in this column. One dot preceding the description indicates that the item is a component part of the previously listed item or assembly with no dot. Two dots indicate that the item is part of the previously listed item with one dot.

Example:

- Engine Installation
- . Engine Assembly
- .. Manifold Assembly
- .. Control Box Assembly
- ... Module Assembly

The Engine Assembly is a first level subassembly of the Engine Installation as indicated with one dot. The Manifold Assembly and the Control Box Assembly are second level components of the Engine Assembly as indicated by the two dots. The Module Assembly is a third level component of the Control Box Assembly which is indicated with three dots.

Updating and Reordering Manuals

The parts lists, illustrations and specifications in this manual are based on the latest information available at the time of publication. Your machine may have product improvements and options not yet contained in this manual. A copy of this manual is supplied with each machine. Additional copies are available through your dealer. When ordering additional manuals, use the reorder number listed on the front cover and the quantity needed.

Serial Number Location

Each Freeman Baler is identified by means of a baler model number and baler serial number. As a further identification, all power units are provided with a serial number. The serial number is an important piece of information about the machine and it may be necessary to know it before obtaining the correct replacement part. The serial number is located on the top chamber rail on the rear left-hand side, above the tool box. To ensure prompt, efficient service when ordering parts or requesting repairs from your authorized Freeman dealer, record the serial numbers in the spaces provided.

Baler Serial Number

Rear, left side of baler on upper frame.

Power Unit Serial Number


Deutz Diesel - forward side of engine on block.

Driveline P.T.O. 540 RPM - top of gearbox.

NOTE: Reference to left-hand and right-hand used throughout the manual are understood to mean from a position facing in the direction of travel.

Side Feed Baler Serial Number Format As Of 2011

<u>Twines/Bale</u>	3 8 5	E	1 6	-	1 2 3
2 - 2-Tie					<u>Sequential</u>
3 - 3-Tie					<u>Number</u>
<u>Model</u>					<u>Dash - Bullgears</u>
7 - Base					G - Gearbox
8 - Premium					<u>Plunger Size</u>
<u>Knotter</u>					14", 15", 16"
0 - Conventional					<u>Drive Type</u>
5 - Tailless					E - Engine
					H - Hydro
					D - Driveline
					S - Self Propelled

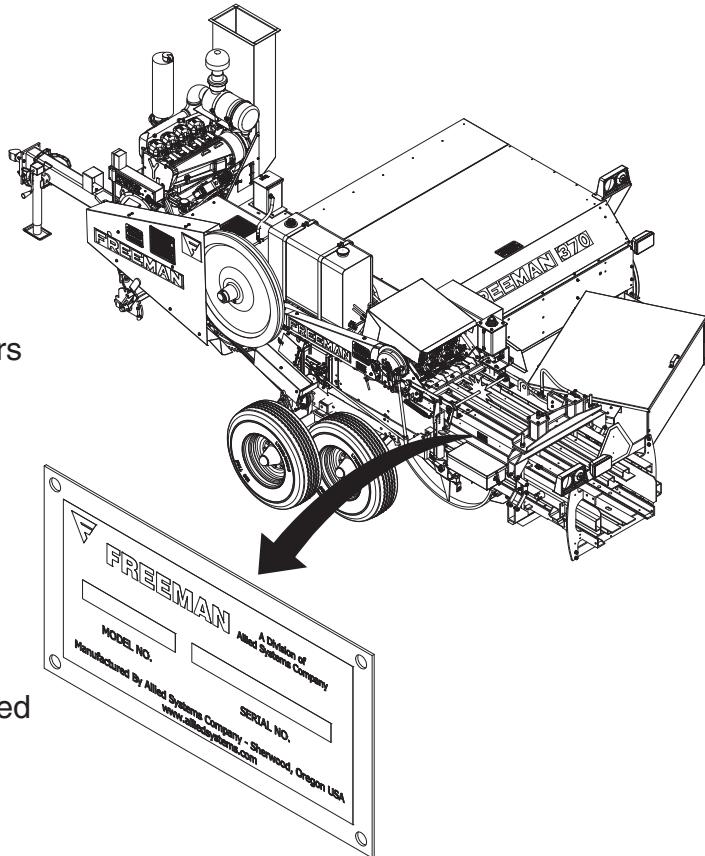

Baler Serial Number Location

Safety

General

The following pages contain general safety warnings which supplement specific warnings and cautions appearing elsewhere in this manual. All electrical and hydraulic equipment is potentially hazardous. You must thoroughly review and understand this Safety Section before attempting to operate, troubleshoot, maintain or service this baler.

Time, money and effort have been invested in making your Baler a safe product. The dividend from this investment is **YOUR PERSONAL SAFETY**.

However, it must be realized that no power-driven equipment can be any safer than the person behind the controls. If you don't operate and maintain your Freeman Baler safely, our efforts will have been in vain.

The safety instructions and warnings, as documented in this manual and shipped with the machine, provide the most reliable procedures for the safe operation and maintenance of your Baler. It's your responsibility to see that they are carried out.

Allied Systems Company cannot anticipate all worksite conditions, local regulations, etc. It is the responsibility of the end user to be aware of and obey any specific worksite, local, state, or national regulations or procedures that are applicable to operating this baler.

NOTE: All possible safety hazards cannot be anticipated so as to be included in this manual. Therefore, you must always be alert to potential hazards that could endanger personnel and/or damage the equipment.

Intended Use Statement:

This baler is intended to gather and compress loose, fibrous material (i.e., hay) and form it into rectangular bales. Use in any other way is considered to be contrary to the intended use. If you are unsure of the material you intend to bale, consult the factory.

Safety Symbols

The following symbols/terms are used to emphasize safety precautions and notices in this manual:



DANGER

The “DANGER” symbol indicates a hazardous situation which, if not avoided, will result in death or serious injury. Carefully read the message that follows to prevent serious injury or death.



WARNING

The “WARNING” symbol indicates a hazardous situation which, if not avoided, could result in death or serious injury. Carefully read the message that follows to prevent serious injury or death.



CAUTION

The “CAUTION” symbol indicates a hazardous situation which, if not avoided, could result in minor or moderate injury, or equipment damage. Carefully read the message that follows to prevent minor or moderate injury.

NOTICE

The “NOTICE” symbol alerts to a situation that is not related to personal injury but may cause equipment damage.

NOTE: ...

The term “NOTE” highlights operating procedures or practices that may improve equipment reliability and/or personnel performance, or to emphasize a concept.

Operation Warnings

Safety



WARNING

Warning: Failure to observe the following safety rules may result in extreme personal injury, dismemberment or death. It is the operator's responsibility to understand the proper and safe use of this baler.

- Make sure that you read, understand, and obey all of the safety precautions and operating instructions in this Parts Manual.
- Keep this Parts Manual and the Safety Card (Allied form #89-028) with the baler at all times.
- Do not operate the baler unless you are authorized and trained to do so. If it has been some time since you last operated the baler, re-familiarize yourself with the baler before starting, then proceed slowly.
- Do not operate the baler if you are aware of any malfunctions, needed maintenance or repairs.
- Stop the baler immediately if any problems arise.
- Never allow others to ride on the baler.
- Never allow anyone within 10 ft of the baler while the baler is in operation.
- Never operate the baler without all safety shielding in place.
- Keep hands, feet, hair, jewelry and clothing away from moving parts, including but not limited to the pickup, knotter, and PTO shaft.
- Avoid wearing loose clothing which can easily be caught in moving parts.
- Use appropriate signs (i.e., Slow Moving Vehicle sign), signals or warning lights when transporting on highways.
- Always use lights when working at night or in low light conditions.
- Know your job-site rules. Some have site specific directions and procedures. The methods outlined in this manual provide a basis for safe operation of the

baler. Because of special conditions, your company's baling procedures may be somewhat different from those shown in this manual.

- Do not start the tractor if the key had been marked with a "DO NOT START" or "RED" tag.
- Never operate any of the tractor's controls from anywhere other than the operator's seat.
- Alert personnel in the area before starting the engine, and make sure everyone is clear. Be sure that all controls are in neutral and the baler is disengaged before starting the engine.
- Each country has its own safety legislation. It is in the operator's own interest to be conversant with these regulations and to comply with them in full. This also applies to local bylaws and regulations in force on a particular worksite.
- Should the recommendations in this manual deviate from those in the user' country, the national regulations should be followed.
- Never attempt to disconnect any of the safety devices built into the baler or tractor.
- Maintain proper clearance from energized equipment, energized power lines or other power sources. High voltage electricity can discharge to ground without direct contact with the baler's or tractor's structure. If the baler or tractor contacts energized equipment, or if electrical energy does discharge through the machine—stay clear, and prevent anyone else from coming in contact with the baler or tractor. If you are on the tractor, stand fast, avoid contact with metal surfaces, and do not permit anyone to come into contact with the tractor or baler. Finally, **Do not jump off.**



Hydraulic Hazards

Be aware of the hazards of pressurized hydraulics:

- Wear personal protective equipment, such as gloves and safety glasses, whenever servicing or checking a hydraulic system.
- Assume that all hydraulic hoses and components are pressurized. Relieve all hydraulic pressure before disconnecting any hydraulic line.

General Information

- Never try to stop or check for a hydraulic leak with any part of your body; use a piece of cardboard to check for hydraulic leaks.
- Small hydraulic hose leaks are extremely dangerous, and can inject hydraulic oil under the skin, even through gloves.
- Infection and gangrene are possible when hydraulic oil penetrates the skin. See a doctor immediately to prevent loss of limb or death.

Maintenance Safety

- Perform all routine maintenance outlined in this Operator's Manual in the time intervals indicated.
- Maintenance, lubrication and repair of this machine can be dangerous unless performed properly. In order to ensure safety, each person working on this baler must have the necessary skills, information, tools and equipment, and satisfy himself that his work method is safe, correct, and meets his own company's requirements.
- Do not attempt to make adjustments, or perform repairs unless you are authorized and qualified to do so.
- Never attempt to service energized equipment.
- Do not rely on the hydraulic system to support any part of the baler during maintenance or lubrication. Never stand under a baler component that is supported only by the hydraulic system. Ensure components are resting on their mechanical stops or supported with appropriate safety stands during maintenance or lubrication.
- Never attempt servicing while the baler is moving. Shut off the tractor and secure power.
- Shut off tractor and baler engine, engage the parking brake, disengage the baler, and wait for all movement to stop before adjusting, lubricating, cleaning, or servicing the baler.
- Tag the key switch with a "DO NOT START" sign and/or remove the key.
- Always perform all maintenance and lubrication procedures with the baler on level ground, parked in a safe area.
- Block the tires to keep the machine from rolling.



- Any unauthorized modifications made to the baler by the customer or parties other than Allied Systems will relieve Allied Systems Company and your Freeman dealer of any liability for damage or injury.
- Replace any worn parts only with genuine Freeman parts. Call your dealer for assistance.
- Unless specified in service procedures, never attempt maintenance or lubrication procedures while the baler is moving or the engine is running.
- Engine exhaust fumes can cause death. If it is necessary to run the engine in an enclosed space, remove the exhaust fumes from the area with an exhaust pipe extension. Use ventilation fans and open shop doors to provide adequate ventilation.
- DO NOT remove the radiator cap when the engine is hot. The coolant will be under pressure and can flash to steam with explosive force, causing severe burns. To prevent burns, remove the radiator cap only when the engine is cool.
- Batteries contain sulfuric acid which can cause severe burns. Avoid contact with skin, eyes or clothing.
- Batteries produce explosive gases. Keep sparks, flame and cigarettes away. Ventilate when charging or servicing in an enclosed space. Always shield your eyes when working near batteries. When removing battery cables, disconnect the negative (-) cable first. When installing a battery, always connect the positive (+) cable first. This procedure will help to prevent a spark which could cause an explosion.
- Before making adjustments to the engine or chassis electrical system, disconnect the battery. An electrical spark could cause a fire, explosion or severe burns.



Safety Equipment

- Ensure test equipment is in good condition.
- If an instrument must be held while taking measurements, ground the case of the instrument before energizing equipment.
- Do not touch live equipment or personnel working

on live equipment while holding a multimeter. Some types of measuring devices should not be grounded—do not hold such devices while taking measurements.

- Prevent personal injury or equipment damage by using a lifting device with a lifting capacity greater than twice the weight of any equipment to be lifted.
- Always use personal protective equipment (PPE) appropriate to the situation. This may include the use of hearing protection, eye protection, a respirator, a hard hat, leather gloves, steel toed boots, etc.



Electrical Hazards

- An electric shock could be fatal. Ensure power to the baler is “OFF” before opening electrical panels.
- All electrical cables and connectors must be in good condition (free of corrosion, damage, etc). Use caution in wet weather to avoid danger from electrical shock. Never attempt electrical testing or repair while standing in water.
- Do not wear electrically conductive jewelry, clothing, or other items while working on the electrical system.

Hot Oil Hazards

- Burns from hot oil can be severe—Always allow lubricating and hydraulic oil to cool before draining.

Compressed Air Hazards

- When using compressed air to dry parts, pressure should not exceed 30 psi (200 kPa).
- Air pressure penetrating your skin can be fatal. Never direct compressed air at anyone.

Fire Safety



WARNING

WARNING: Diesel fuel and hydraulic oil are flammable. Never smoke while handling fuel or working on the fuel system. The fumes in an empty fuel container are explosive. Never cut or weld on or near fuel lines, tanks, or containers. Keep open flames and sparks away from the machine.



Reduce the Risk of Fire

- Keep the baler free of oil, grease, hay, and trash accumulations. Regular cleaning is recommended for fire prevention and general safety. Use an approved solvent to clean machine parts. Never use gasoline or diesel fuel.
- Shut off the engine and electrical equipment while filling the fuel tank. Use extra caution when fueling a hot engine. Always ground the fuel nozzle against the filler neck to avoid sparks.
- Never overfill the fuel or hydraulic tanks. Any overflow could cause a fire. Immediately repair any hydraulic or fuel leaks and clean up any spills.
- Handle all solvents and dry chemicals according to



General Information

procedures identified on manufacturer's containers. Work in a well-ventilated area. Make sure you know where fire extinguishers are kept and how to use them.

- Avoid spilling fuel or other hazardous liquids. If a spill occurs, follow local or state regulations for clean-up. Contact your state's OSHA office for details.
- Always ensure that excess grease and oil accumulation, including spillage, is cleaned up immediately.
- Inspect the baler daily for potential fire hazards and make any necessary repairs immediately.
- Check all the electrical wiring and connections for defects, and repair or replace as necessary. Keep battery terminals clean and tight.
- Never perform welding operations until the entire machine has undergone a thorough cleaning. In addition, cover rubber hoses, disconnect the battery, and have at least a fire extinguisher at hand.
- Hydraulic fluid is flammable. Do not weld on or near pipes, tubes, or hoses that are filled with fluid. Do not smoke when checking or filling the tank. Keep open flames and sparks away from the baler.
- Hay dust is combustible. Do not have an open flame or weld in dusty environments.
- Maintain the engine cooling system to avoid overheating.
- Remember, there is always a risk of fire.



Fire Suppression

- Do not panic. At the first sign of trouble (burning smell, smoke, visible flame, etc), stop the tractor and turn off the engine in the clearest area available, with the tractor upwind from the baler if possible.
- If the fire cannot be extinguished safely, immediately evacuate the area. DO NOT attempt to extinguish it. DO NOT risk personal injury. Contact your local fire department.
- If you have determined that the fire may be safely extinguished, use the fire extinguisher according to the manufacturer's instructions, or use the water pump, aiming water at the base of the fire.
- When the baler has fully cooled, thoroughly inspect, and make all necessary repairs to return the baler to normal operation.
- Recharge or replace the extinguishers before returning to work.

Fire Fighting Equipment

- It is recommended to carry an "ABC" fire extinguisher on the baler or in the pull vehicle at all times. Install it within easy reach of the operator in a position that protects it from damage. Use only a "quick release" type of mount. It is also recommended to carry a four gallon water container with a pump, or as required by local and state law.
- Keep your fire extinguisher(s) fully charged and in good working order. Know how to use them.
- Read and understand the instructions printed on the canisters and learn how to operate them. Learn how to remove the canisters from their mounting brackets in the shortest amount of time.
- Service the extinguisher according to the manufacturer's specifications. Service after every use, no matter how short a time.


Section 1

Front End

Drawbar Installation, Engine	1-3
. Drawbar Assembly, Engine	1-4
Drawbar Installation RH, Driveline	1-7
. Drawbar Assembly RH, Driveline	1-8
Drawbar Installation LH, Driveline	1-11
. Drawbar Assembly LH, Driveline.....	1-12
Dawbar Installation RH, Hydro	1-15
. Drawbar Assembly RH, Hydro	1-16
Dawbar Installation LH, Hydro.....	1-17
. Drawbar Assembly LH, Hydro.....	1-18
Swing Drawbar Installation, Hydro LH.....	1-19
Front End Installation, 14" 2-Tie.....	1-20
. Front End Assembly, 14" 2-Tie	1-21
Front End Installation, 16" 2-Tie.....	1-22
. Front End Assembly, 16" 2-Tie	1-23

This page is intentionally left blank.

Drawbar Installation, Engine

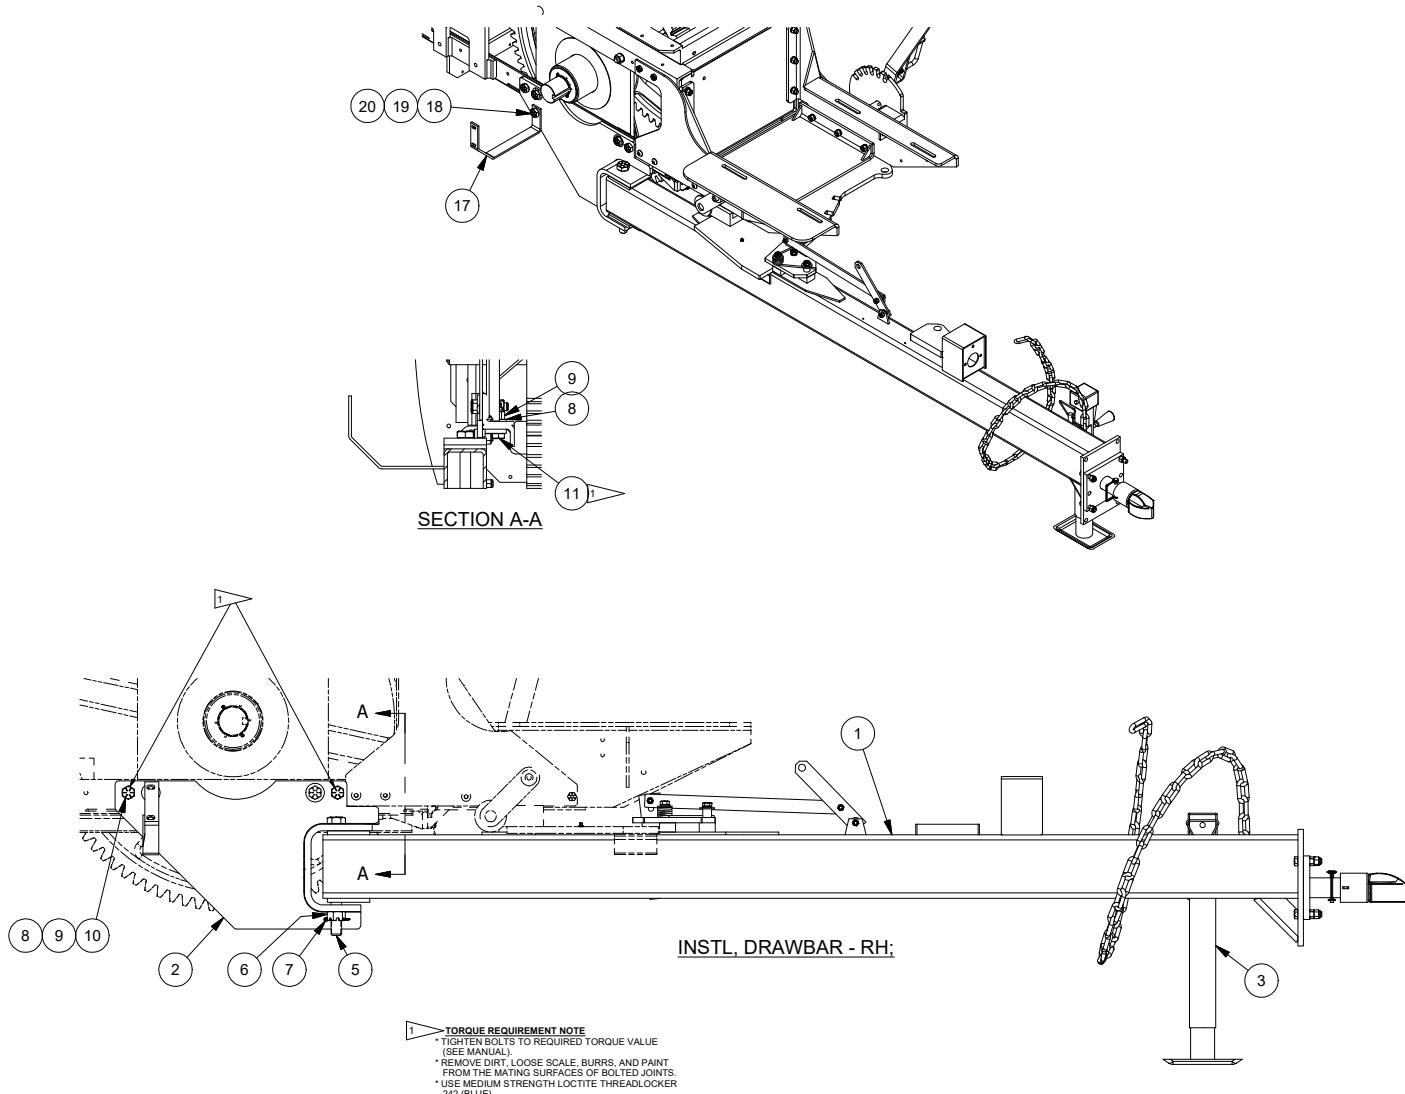


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
910149							
1	*a 903505	1	. Drawbar Assembly	9	R13811196	3	. Nut Lock
2	910465	1	. Drawbar Bracket, RH	10	Y17C-1236	2	. Capscrew
3	JCK0178203	1	. Jack, Sidewind	11	221657W	1	. Capscrew
4	ROP0000012	1	. Rope	17	910483	1	. Brace Crank Arm Shield Plate
5	PIN0018909	1	. Pin, Pivot	18	180189W	1	. Capscrew
6	NSL0001000	1	. Hex Nut Slotted	19	200608	1	. Washer
7	212255	1	. Cotter Pin	20	221716W	1	. Hex Nut
8	221777W	3	. Washer				

*a See Separate Coverage (Page 1-4)

Rev A

Drawbar Assembly, Engine

Page 1 of 3

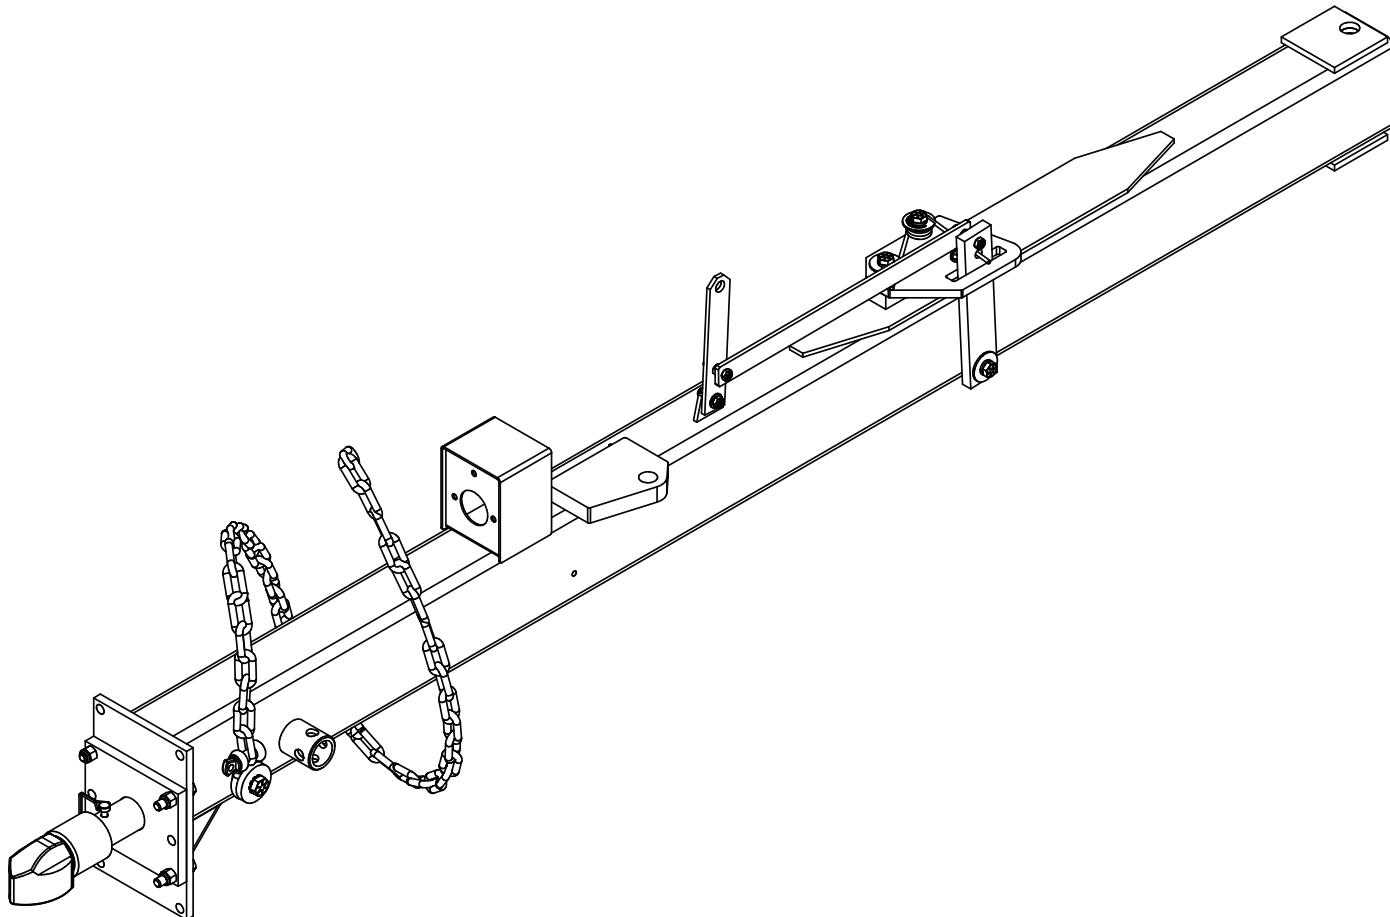


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
903505			Drawbar Assembly, Engine				
1	BSH0011985	2	. Bushing	16	221560W	2	. Capscrew
2	BKT037159B	1	. Bracket	17	R13811077	2	. Capscrew
3	CHN0000370	1	. Chain, Ag Safety	18	Y18C-1016	1	. Capscrew
4	F000000440	1	. Ferrule	19	SMS0000184	2	. Screw, Ser Flg
5	F000001891	1	. Spring, Torsion Latch	20	221767W	2	. Washer
6	HTH0021097	1	. Hitch	21	15178W	3	. Washer
7	LEV0013885	1	. Bar, Lever	22	234665	4	. Lockwasher
8	LTH0011229	1	. Tongue Latch	23	WAS037158A	1	. Washer, Safety Chain
9	904696	1	. Bar,Link	24	WES0006250	1	. Washer
10	PLT0011228	1	. Plate, Tongue Latch	25	221707W	2	. Hex Nut
11	903506	1	. RH Drawbar	26	237567	3	. Locknut
12	221574W	4	. Capscrew	27	223587	4	. Locknut
13	221499W	1	. Capscrew				
14	Y17C-0624	1	. Capscrew				
15	R13801813	1	. Capscrew				

Rev G


Drawbar Assembly, Engine

Page 2 of 3

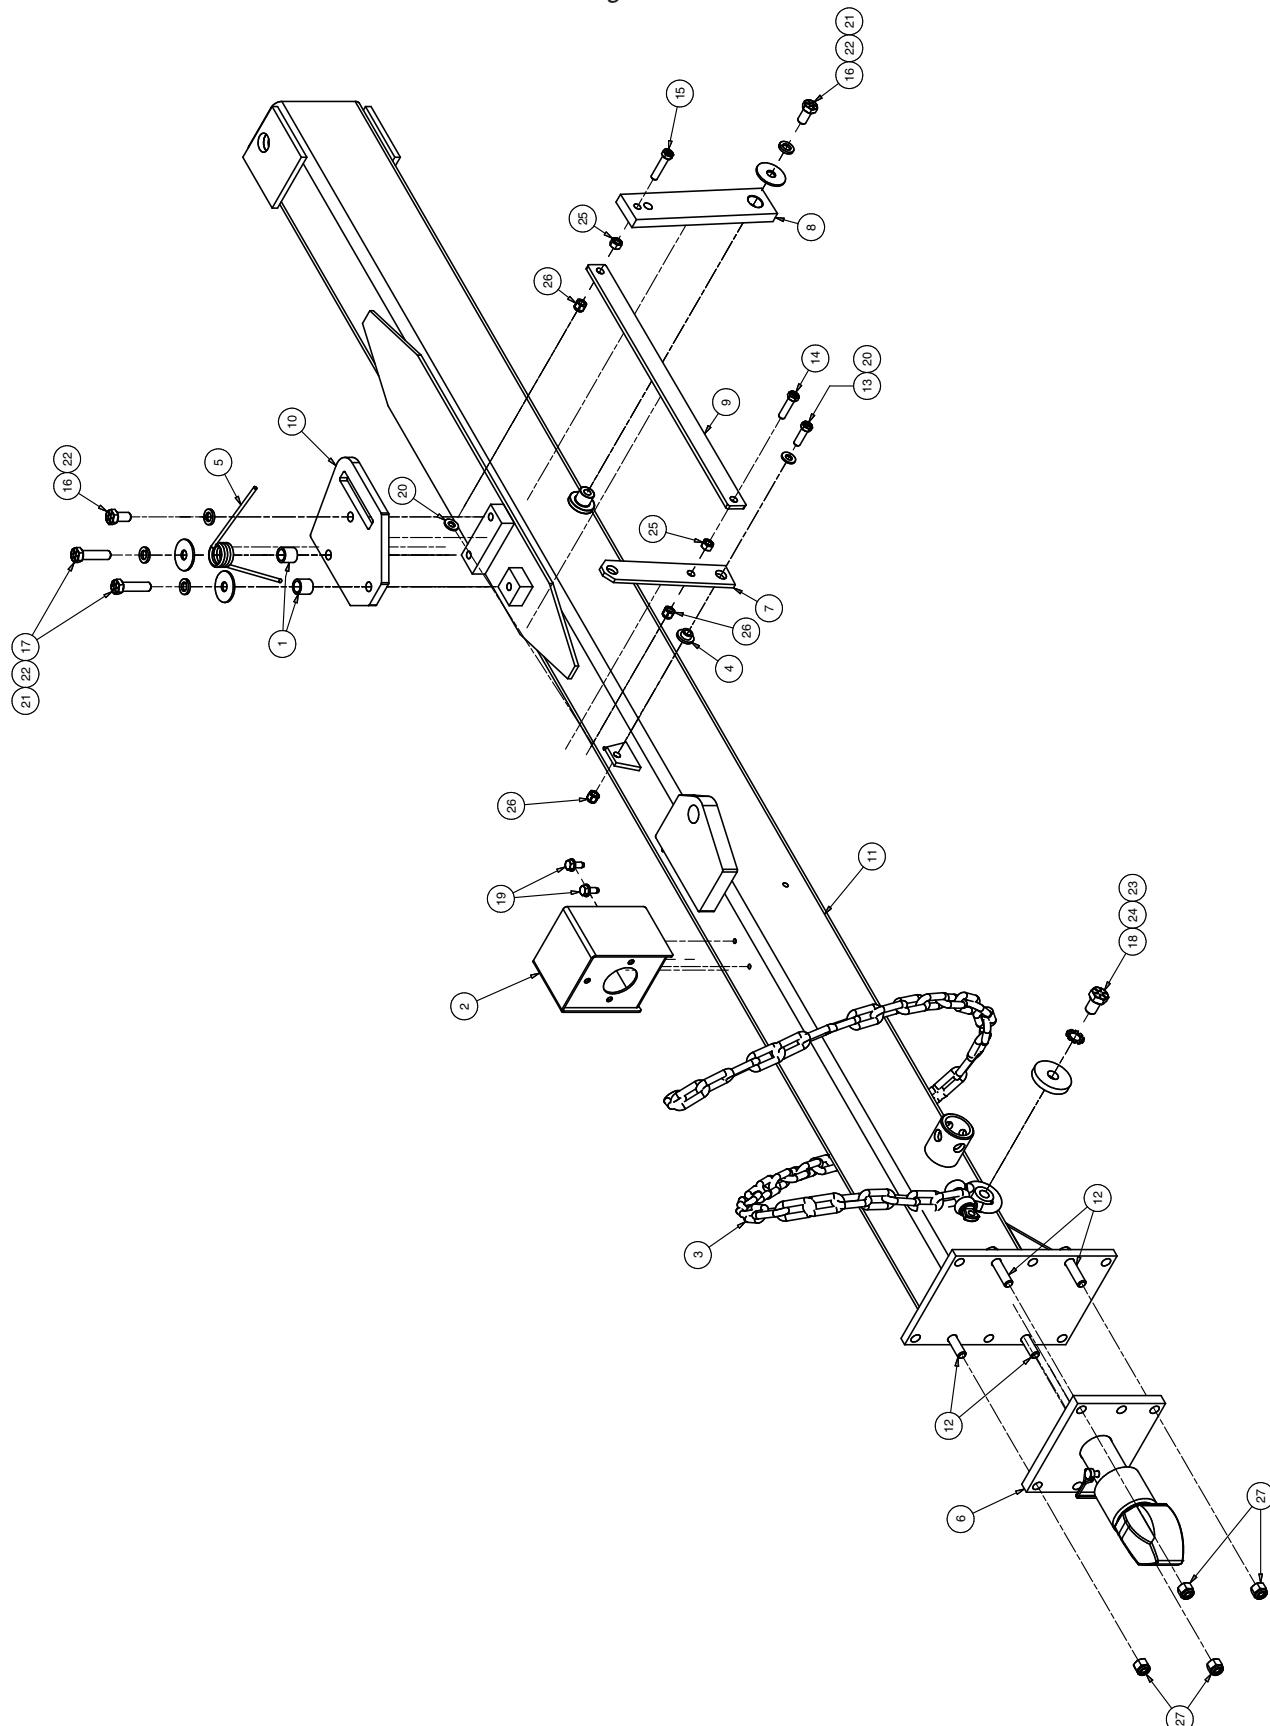


Drawbar Assembly, Engine

Page 3 of 3

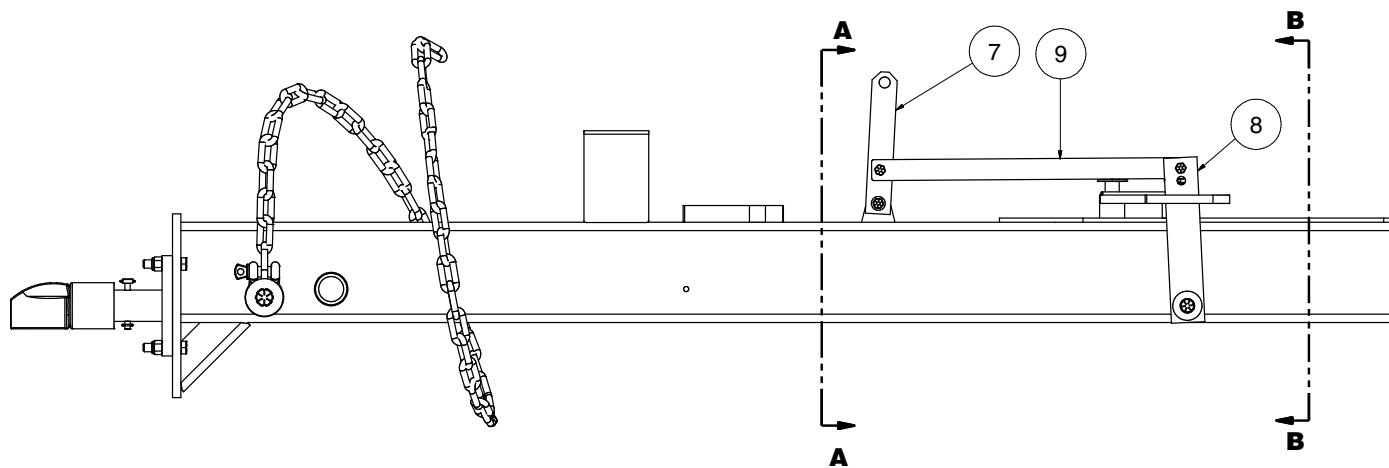


NOTES:

- 1 TIGHTEN NUT TO CLAMP ITEM 9.
- 2 DO NOT OVERTIGHTEN, ITEM 8 MUST ROTATE FREELY.
- 3 DO NOT OVERTIGHTEN, ITEM 7 MUST ROTATE FREELY.

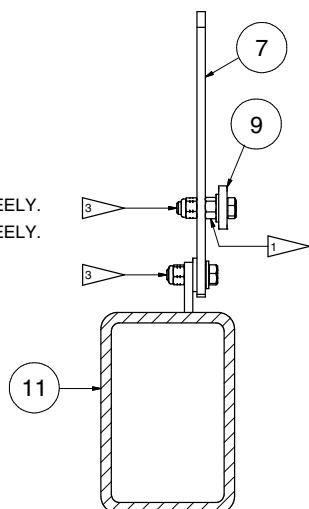


SECTION A-A

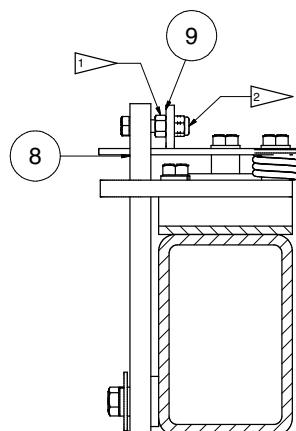

SECTION B-B

Drawbar Installation RH, Driveline

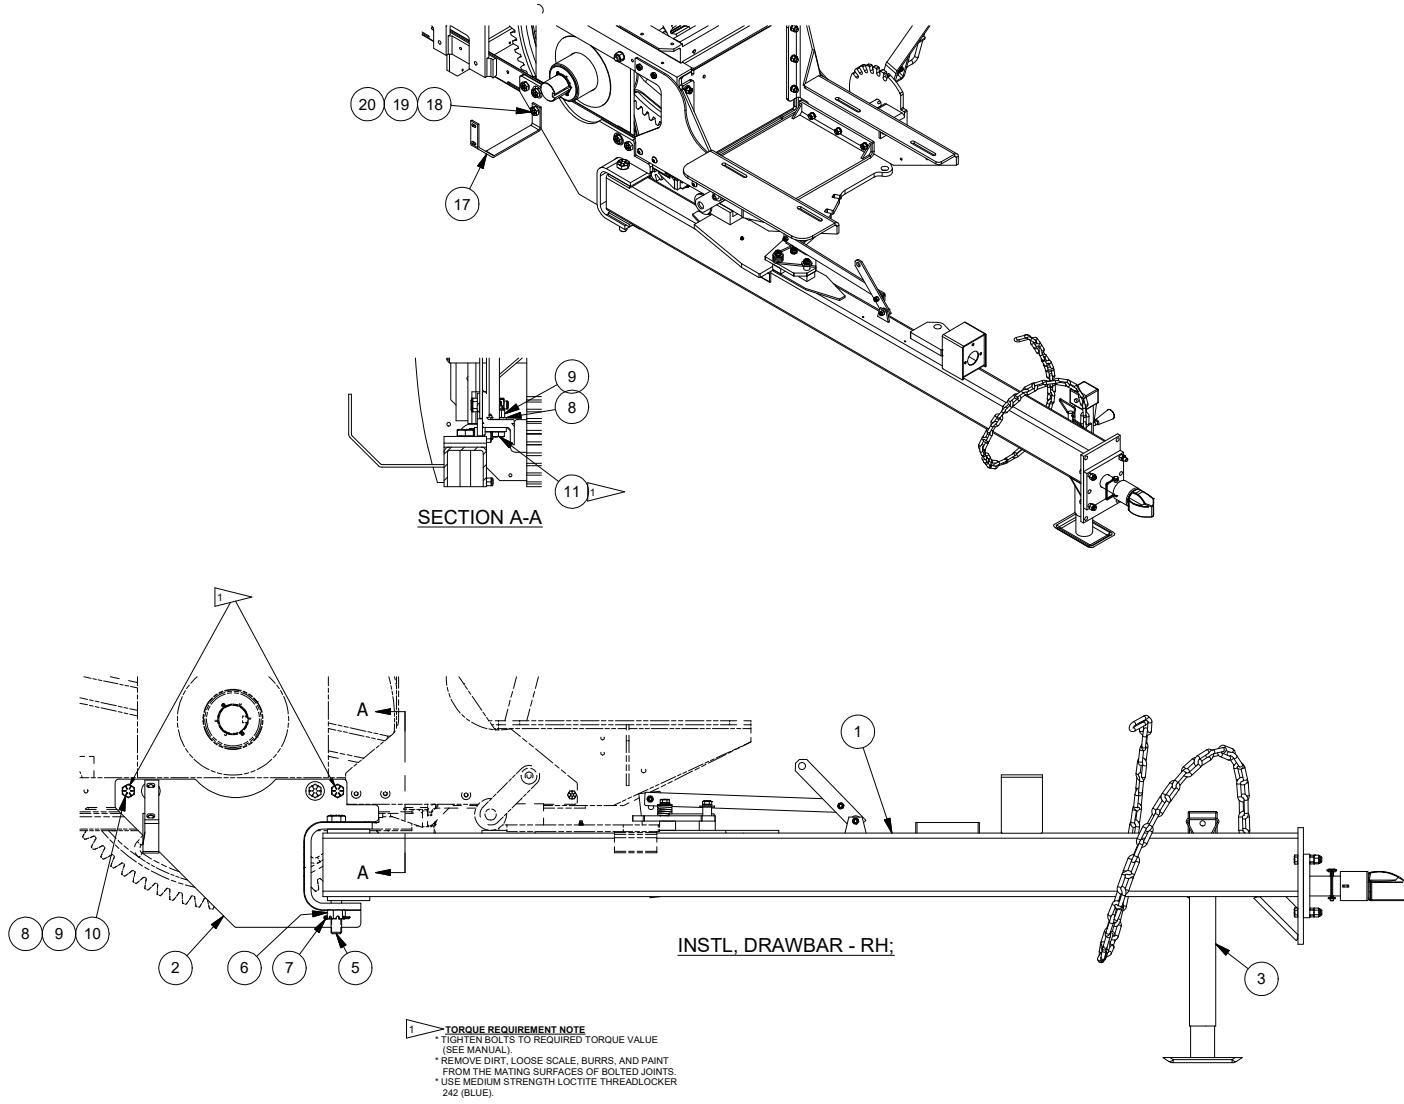


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
910142			Drawbar Installation RH				
1	*a 909356	1	. Drawbar Assembly	9	R13811196	3	. Nut Lock
2	910465	1	. Drawbar Bracket, RH	10	Y17C-1236	2	. Capscrew
3	JCK0178203	1	. Jack, Sidewind	11	221657W	1	. Capscrew
4	ROP0000012	1	. Rope	17	910483	1	. Brace Crank Arm Shield Plate
5	PIN0018909	1	. Pin, Pivot	18	180189W	1	. Capscrew
6	NSL0001000	1	. Hex Nut Slotted	19	200608	1	. Washer
7	212255	1	. Cotter Pin	20	221716W	1	. Hex Nut
8	221777W	3	. Washer				

*a See Separate Coverage (Page 1-8)

Rev A

Drawbar Assembly RH, Driveline

Page 1 of 3

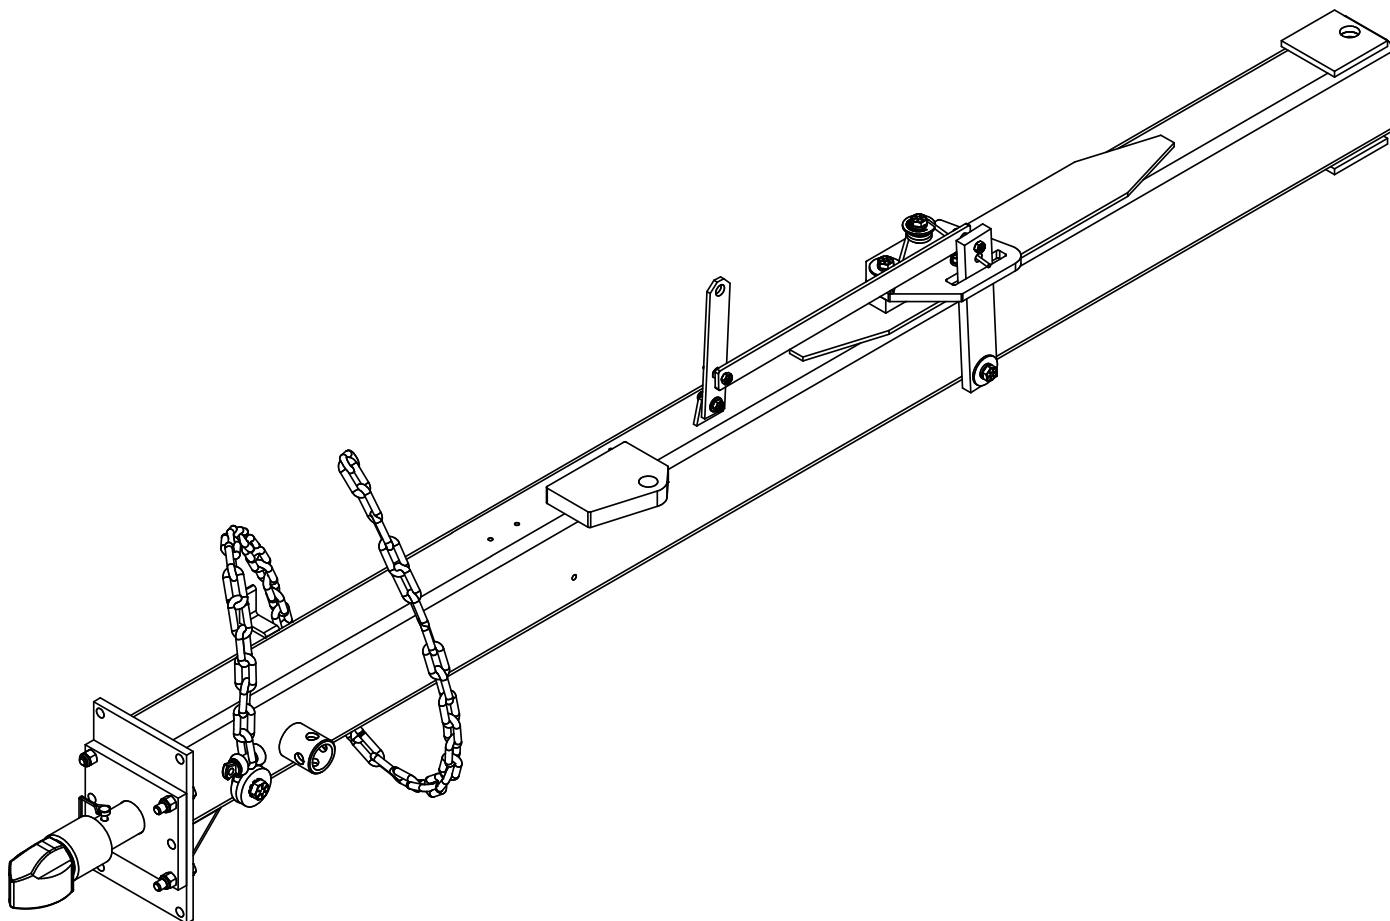


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
909356							
1	BSH0011985	2	. Bushing	16	221560W	2	. Capscrew
3	CHN0000370	1	. Chain, Ag Safety	17	R13811077	2	. Capscrew
4	F000000440	1	. Ferrule	18	Y18C-1016	1	. Capscrew
5	F000001891	1	. Spring, Torsion Latch	20	221767W	2	. Washer
6	HTH0021097	1	. Hitch	21	15178W	3	. Washer
7	LEV0013885	1	. Bar, Lever	22	234665	4	. Lockwasher
8	LTH0011229	1	. Tongue Latch	23	WAS037158A	1	. Washer, Safety Chain
9	904696	1	. Bar,Link	24	WES0006250	1	. Washer
10	PLT0011228	1	. Plate, Tongue Latch	25	221707W	2	. Hex Nut
11	909352	1	. RH Drawbar	26	237567	3	. Locknut
12	221574W	4	. Capscrew	27	223587	4	. Locknut
13	221499W	1	. Capscrew				
14	Y17C-0624	1	. Capscrew				
15	R13801813	1	. Capscrew				

Rev -E


Drawbar Assembly RH, Driveline

Page 2 of 3

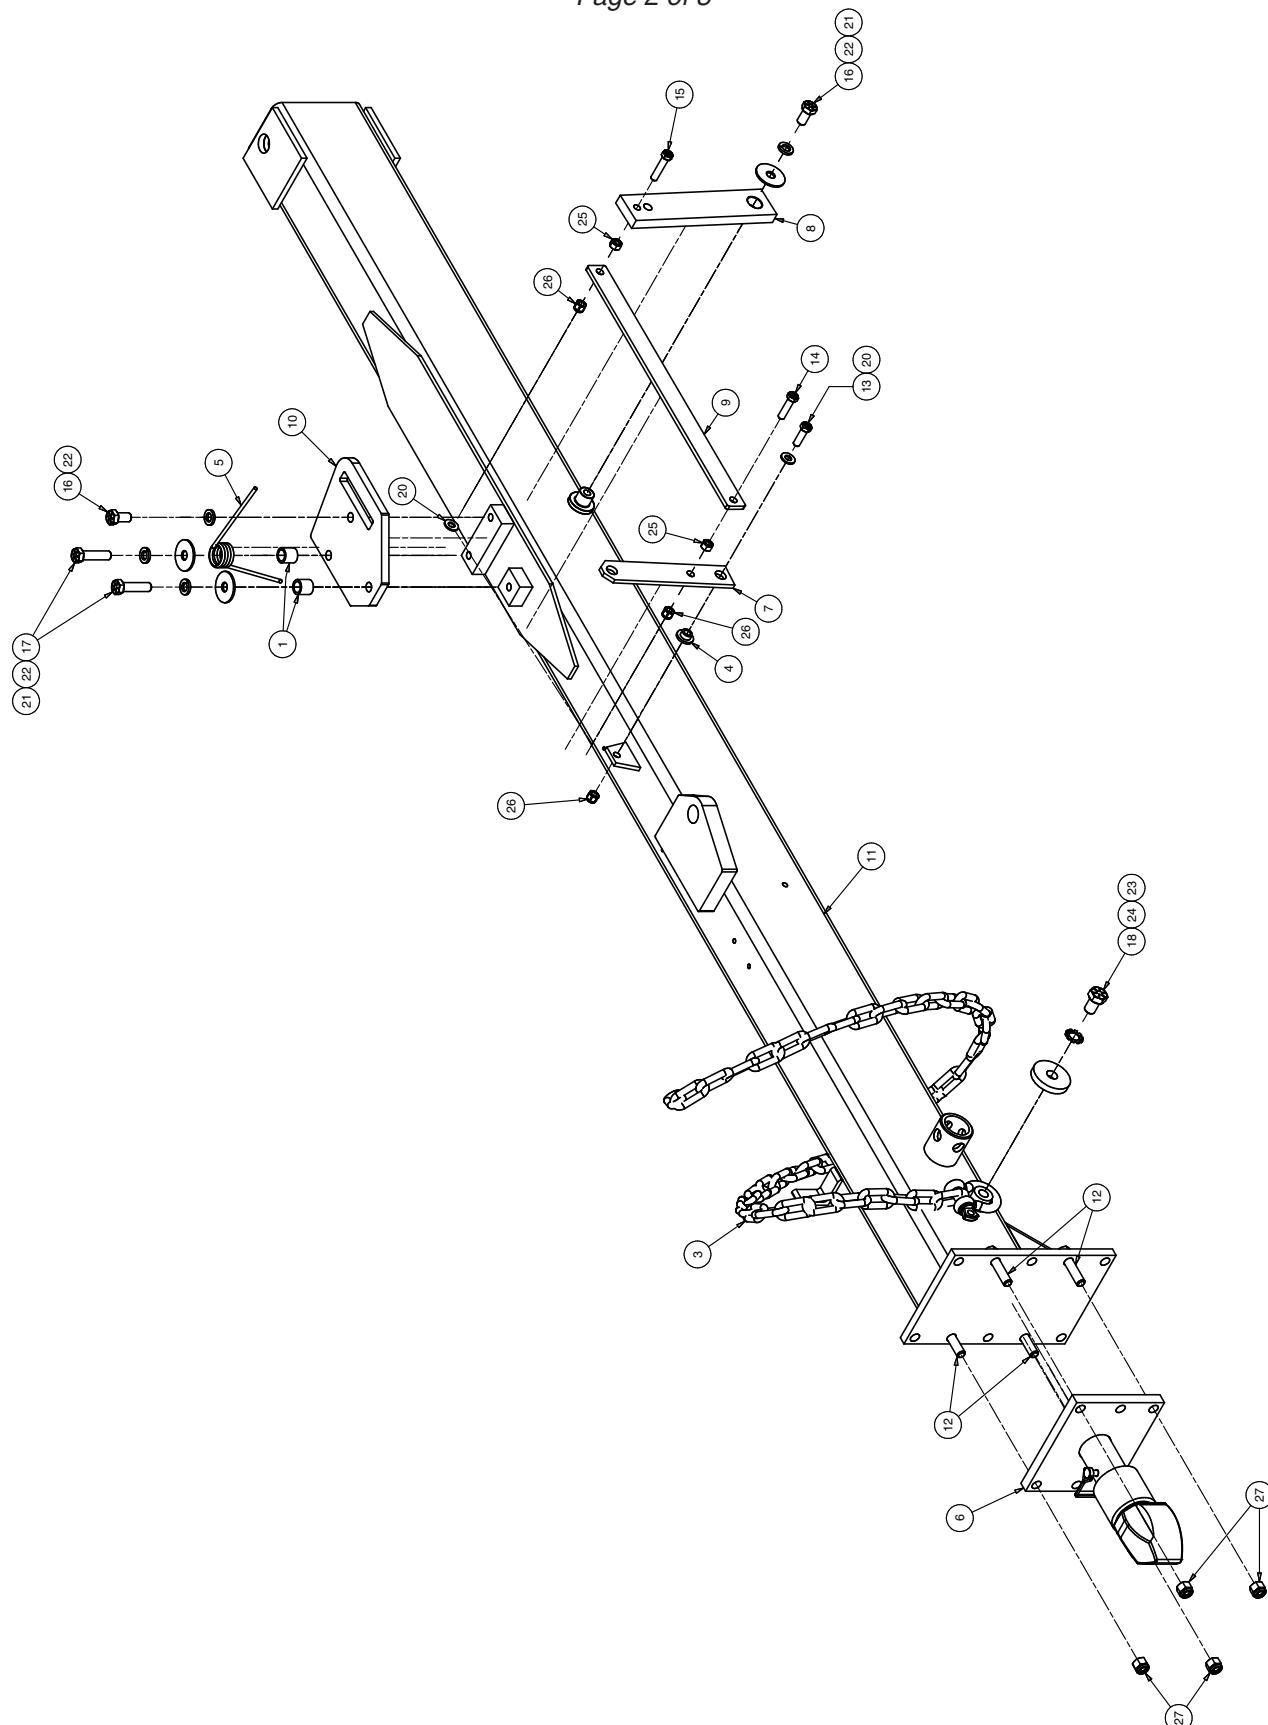


Drawbar Assembly RH, Driveline


Page 3 of 3

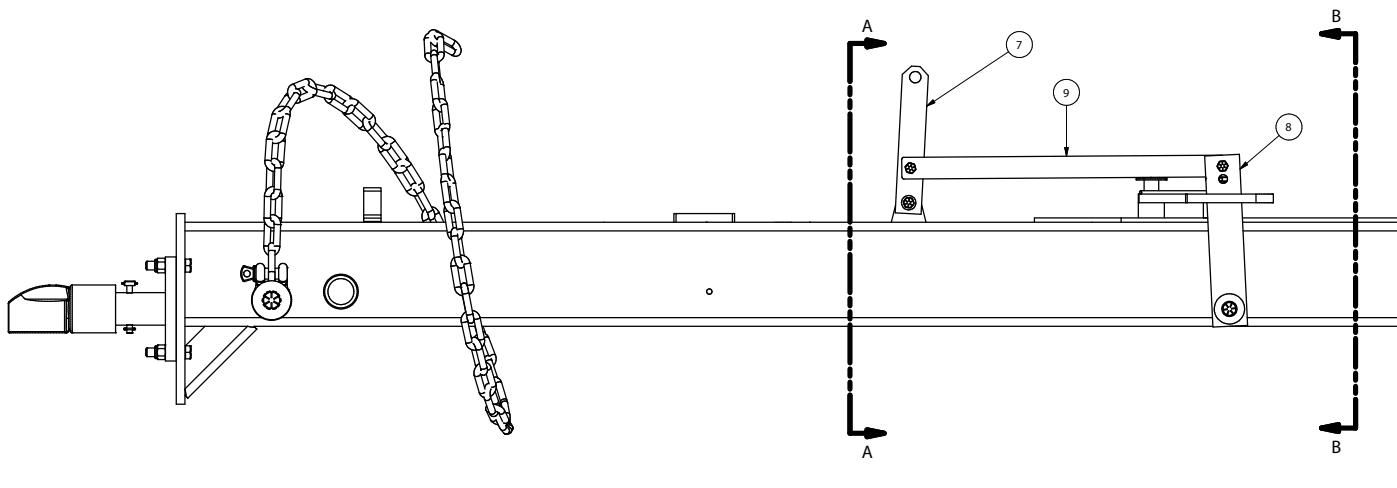

- NOTES:
- 1 TIGHTEN NUT TO CLAMP ITEM 9.
 - 2 DO NOT OVERTIGHTEN, ITEM 8 MUST ROTATE FREELY.
 - 3 DO NOT OVERTIGHTEN, ITEM 7 MUST ROTATE FREELY.

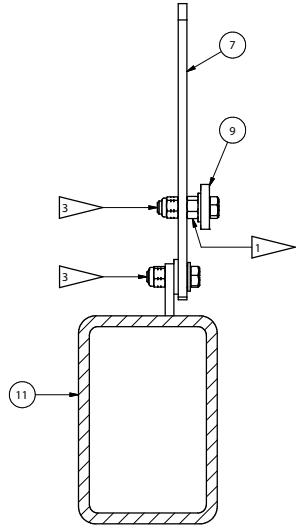


SECTION A-A

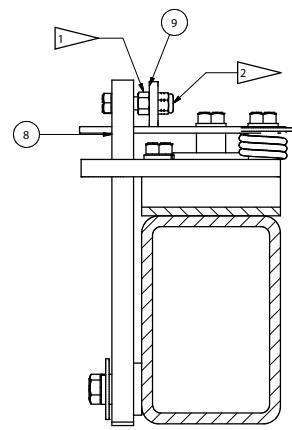

SECTION B-B

Drawbar Installation LH, Driveline

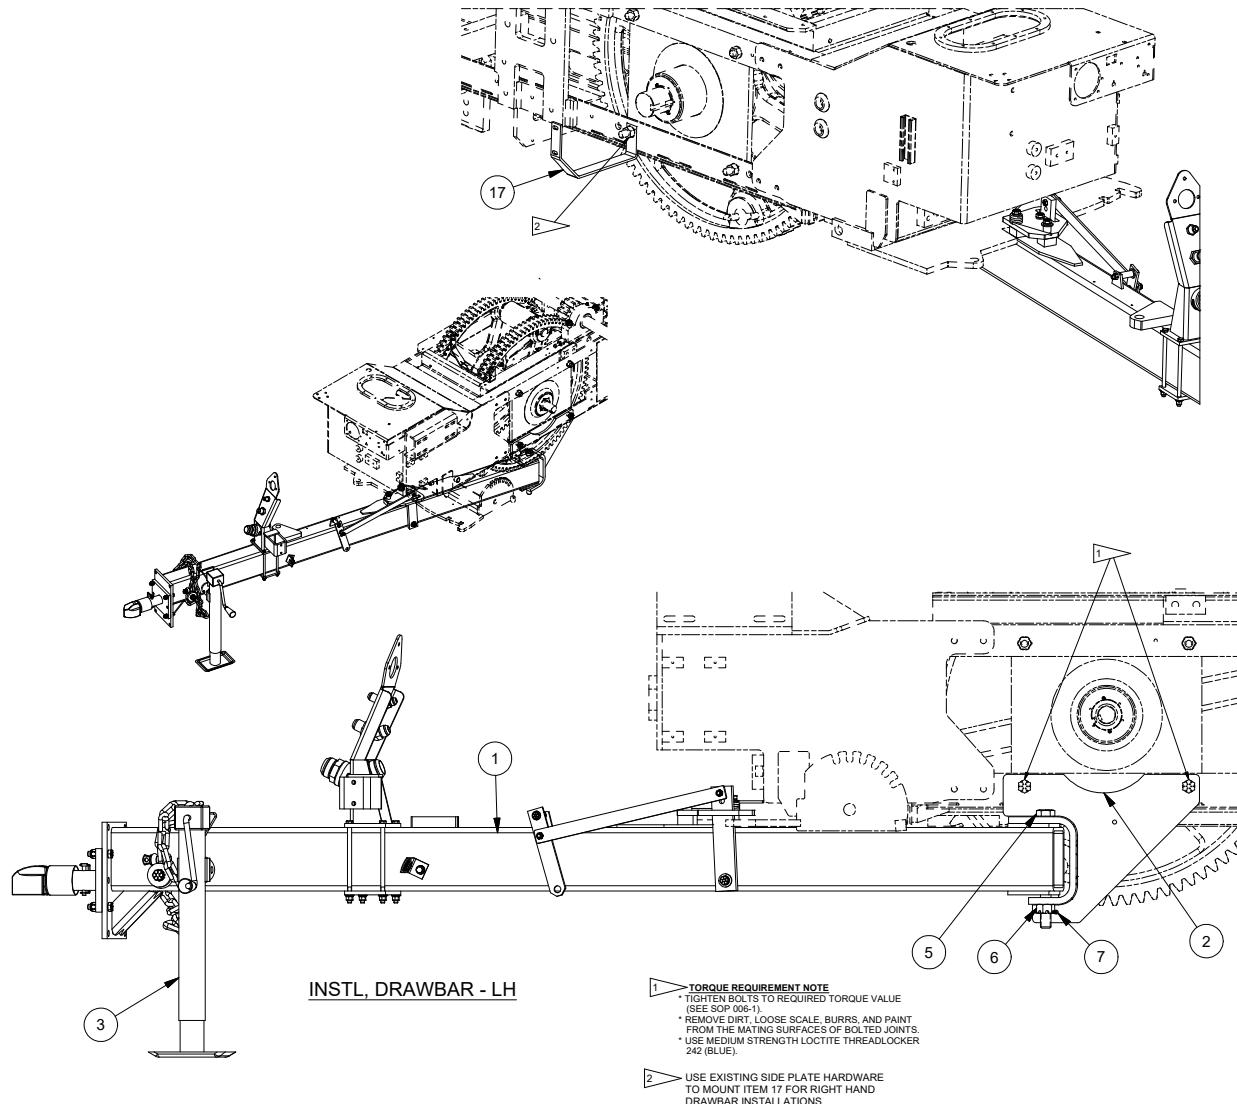


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	910145		Drawbar Installation LH				
1	*a 904111	1	. Drawbar Assembly	9	R13811196	0	. Nut Lock
2	BKT0016306	1	. Drawbar Bracket, Rh	10	Y17C-1236	0	. Capscrew
3	JCK0178203	1	. Jack, Sidewind	11	221657W	0	. Capscrew
4	ROP0000012	1	. Rope	17	910483	1	. Brace Crank Arm Shield Plate
5	PIN0018909	1	. Pin, Pivot	18	180189W	1	. Capscrew
6	NSL0001000	1	. Hex Nut Slotted	19	200608	1	. Washer
7	212255	1	. Cotter Pin	20	221716W	1	. Hex Nut
8	221777W	0	. Washer				

*a See Separate Coverage (Page 1-12)

Rev -

Drawbar Assembly LH, Driveline

Page 1 of 3

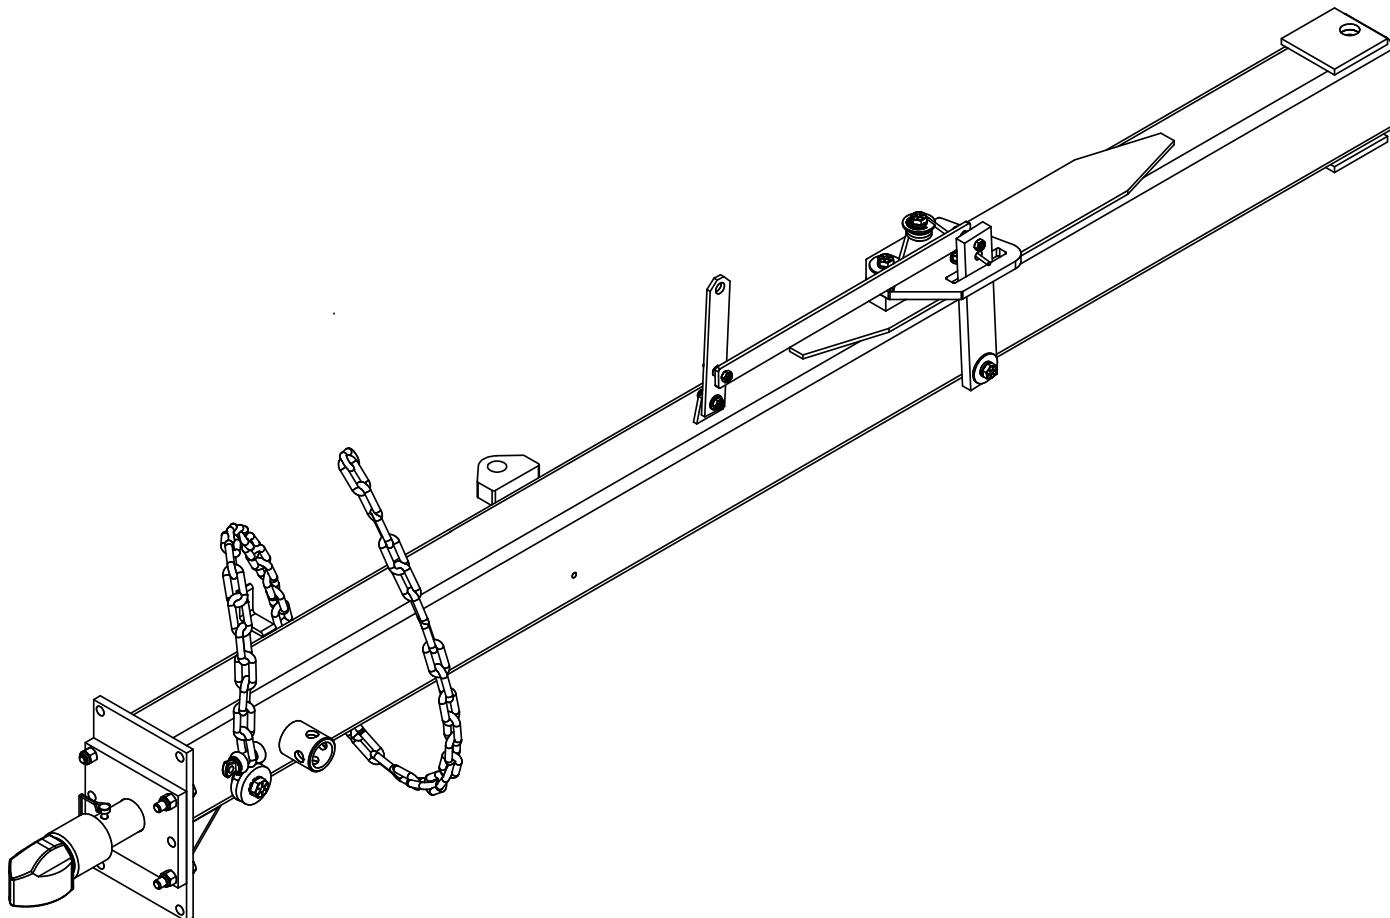


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	904111		Drawbar Assembly; PTO				
1	BSH0011985	2	. Bushing	16	221560W	2	. Capscrew
3	CHN0000370	1	. Chain, Ag Safety	17	R13811077	2	. Capscrew
4	F000000440	1	. Ferrule	18	Y18C-1016	1	. Capscrew
5	F000001891	1	. Spring, Torsion Latch	20	221767W	2	. Washer
6	HTH0021097	1	. Hitch	21	15178W	3	. Washer
7	LEV0013885	1	. Bar, Lever	22	234665	4	. Lockwasher
8	LTH0011229	1	. Tongue Latch	23	WAS037158A	1	. Washer, Safety Chain
9	904696	1	. Bar,Link	24	WES0006250	1	. Washer
10	PLT0011228	1	. Plate, Tongue Latch	25	221707W	2	. Hex Nut
11	904112	1	. LH Drawbar	26	237567	3	. Locknut
12	221574W	4	. Capscrew	27	223587	4	. Locknut
13	221499W	1	. Capscrew				
14	Y17C-0624	1	. Capscrew				
15	R13801813	1	. Capscrew				

Rev DE


Drawbar Assembly LH, Driveline

Page 2 of 3

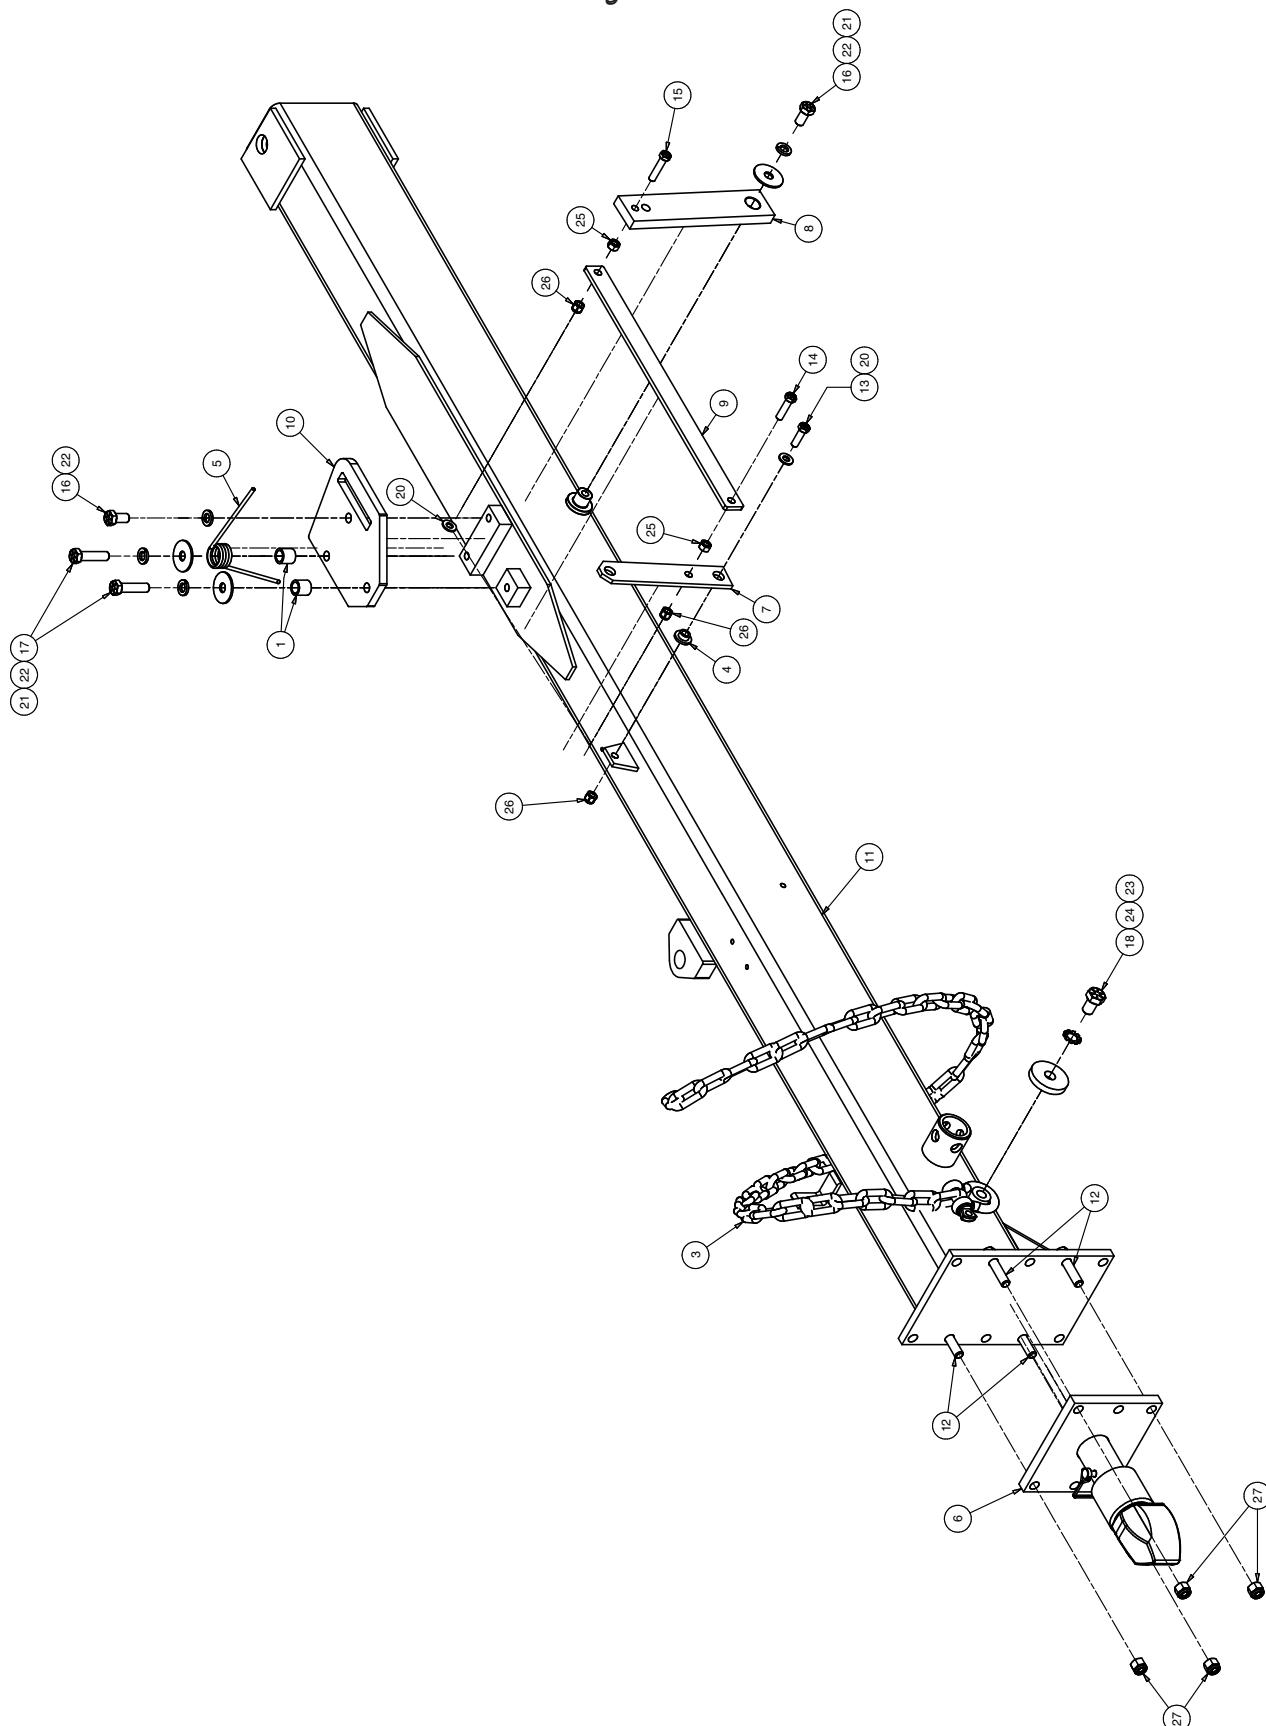


Drawbar Assembly LH, Driveline


Page 3 of 3

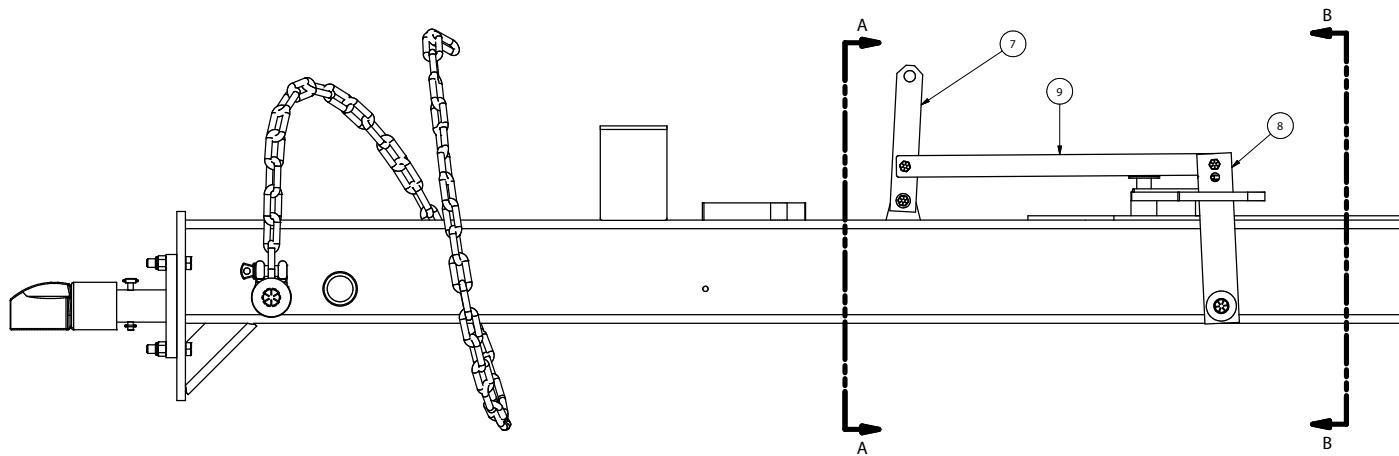

- NOTES:
- 1 TIGHTEN NUT TO CLAMP ITEM 9.
 - 2 DO NOT OVERTIGHTEN, ITEM 8 MUST ROTATE FREELY.
 - 3 DO NOT OVERTIGHTEN, ITEM 7 MUST ROTATE FREELY.

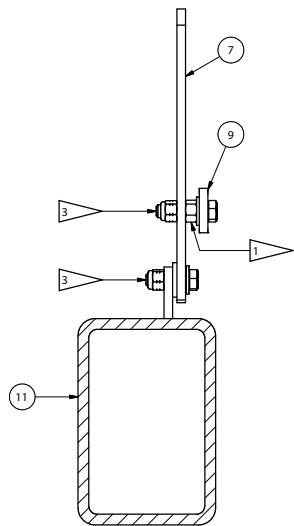


SECTION A-A

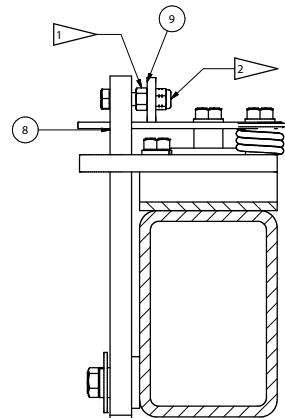

SECTION B-B

Drawbar Installation RH, Hydro

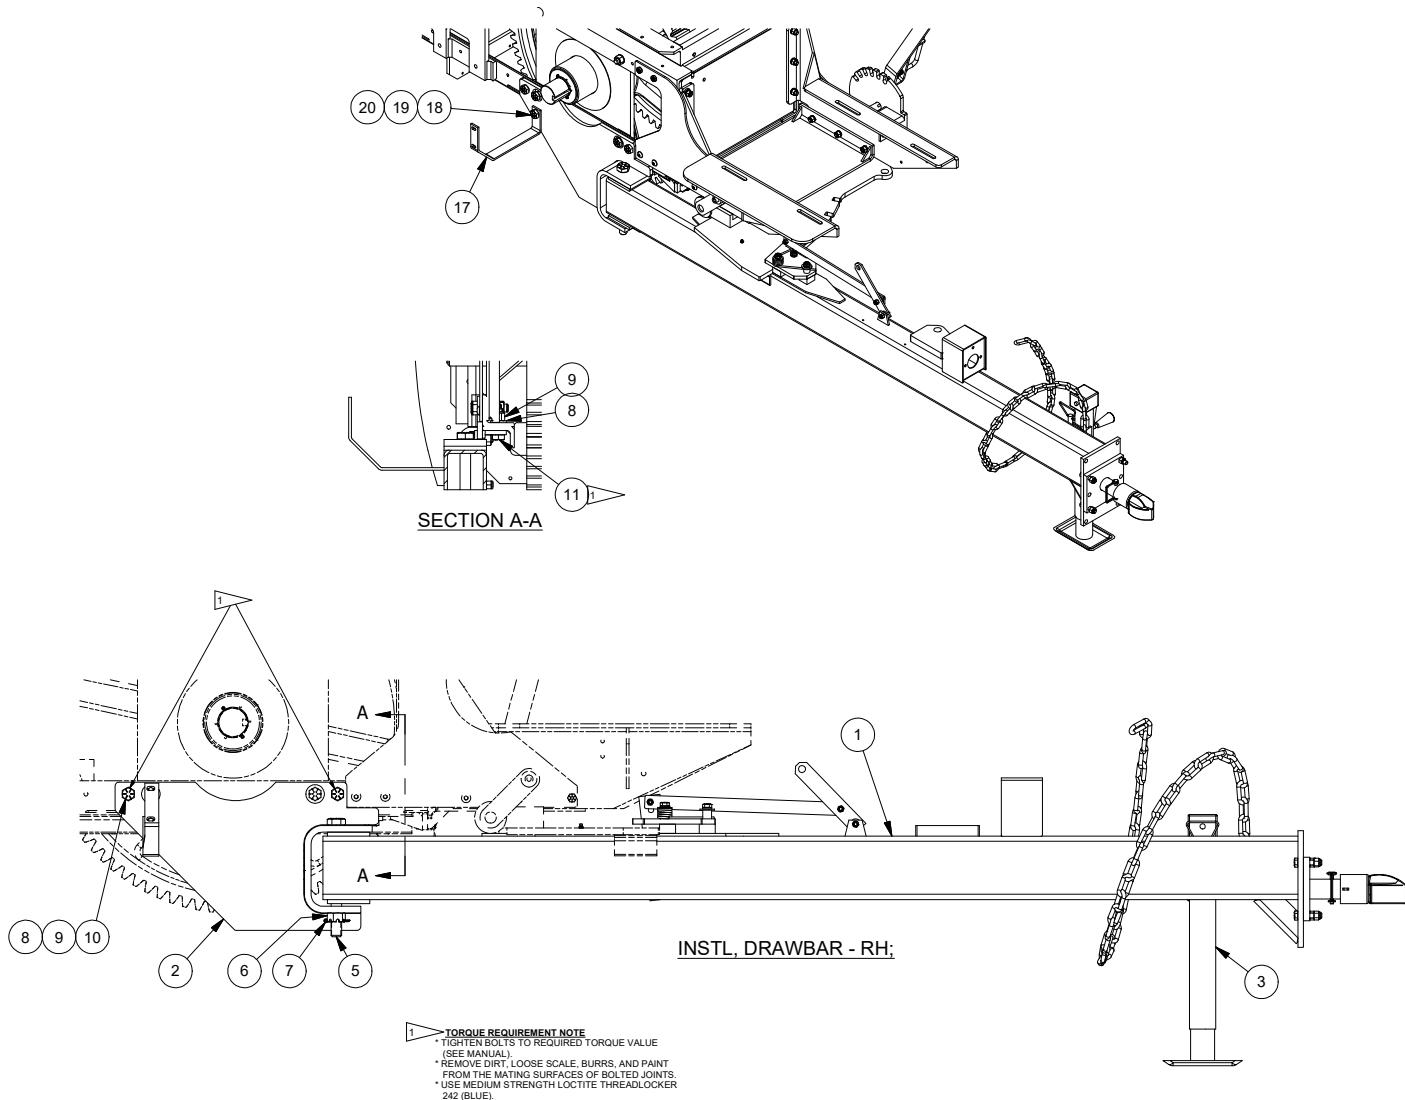


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
910143			Drawbar Installation RH				
1 *a	905872	1	. Drawbar Assembly	9	R13811196	3	. Nut Lock
2	910465	1	. Drawbar Bracket, RH	10	Y17C-1236	2	. Capscrew
3	JCK0178203	1	. Jack, Sidewind	11	221657W	1	. Capscrew
4	ROP0000012	1	. Rope	17	910483	1	. Brace Crank Arm Shield Plate
5	PIN0018909	1	. Pin, Pivot	18	180189W	1	. Capscrew
6	NSL0001000	1	. Hex Nut Slotted	19	200608	1	. Washer
7	212255	1	. Cotter Pin	20	221716W	1	. Hex Nut
8	221777W	3	. Washer				

*a See Separate Coverage (Page 1-16)

Rev A


Drawbar Assembly RH, Hydro

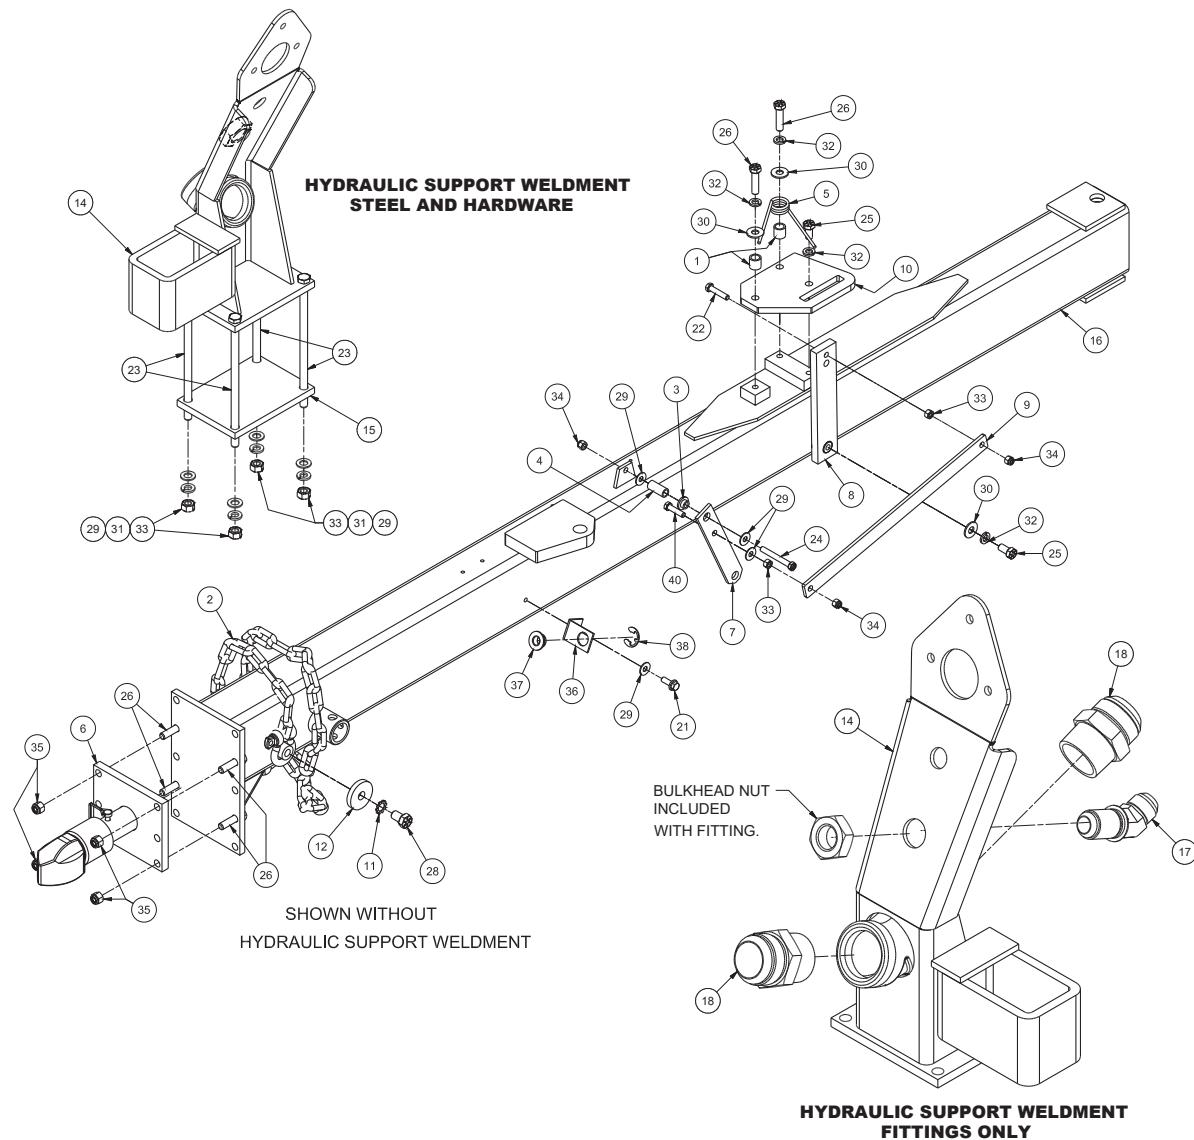

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
905872							
	Drawbar Assembly, Hydro, Gearbox						
1	BSH0011985	2	. Bushing	20	R13801813	1	. Capscrew
2	CHN0000370	1	. Chain, Ag Safety	21	134803W	1	. Screw, Ser Flg
3	F000000440	1	. Ferrule	22	R13811043	1	. Capscrew
4	F000000993	1	. Bushing, Bale Weight Ind	23	221560W	2	. Capscrew
5	F000001891	1	. Spring, Torsion Latch	24	R13811077	6	. Capscrew
6	HTH0021097	1	. Hitch	25	Y18C-1016	1	. Capscrew
7	LEV0013885	1	. Bar, Lever	26	221767W	8	. Washer
8	LTH0011229	1	. Tongue Latch	27	239519	3	. Washer
9	904696	1	. Bar,Link	28	R13812514	4	. Lockwasher
10	PLT0011228	1	. Plate, Tongue Latch	29	234665	4	. Lockwasher
11	WES0006250	1	. Washer	30	221707W	6	. Hex Nut
12	WAS037158A	1	. Washer, Safety Chain	31	237567	3	. Locknut
13	905193	1	. Support	32	223587	4	. Locknut
14	901760	1	. Plate,Mounting	33	F000007973	1	. Holder, Needle Twine Guide
15	903506	1	. Weldment, RH Drawbar	34	F000000856	1	. Bushing
16	17707	1	. Fitting	35	F000000857	1	. Ring, Snap
17	209763	2	. Fitting	36	Y17C-0624	1	. Capscrew
18	059-0042	1	. Fitting	37	14763W	1	. Nut, Bulkhead
19	234697	4	. Capscrew	38	14761W	1	. Nut

Rev B-

Drawbar Installation LH, Hydro

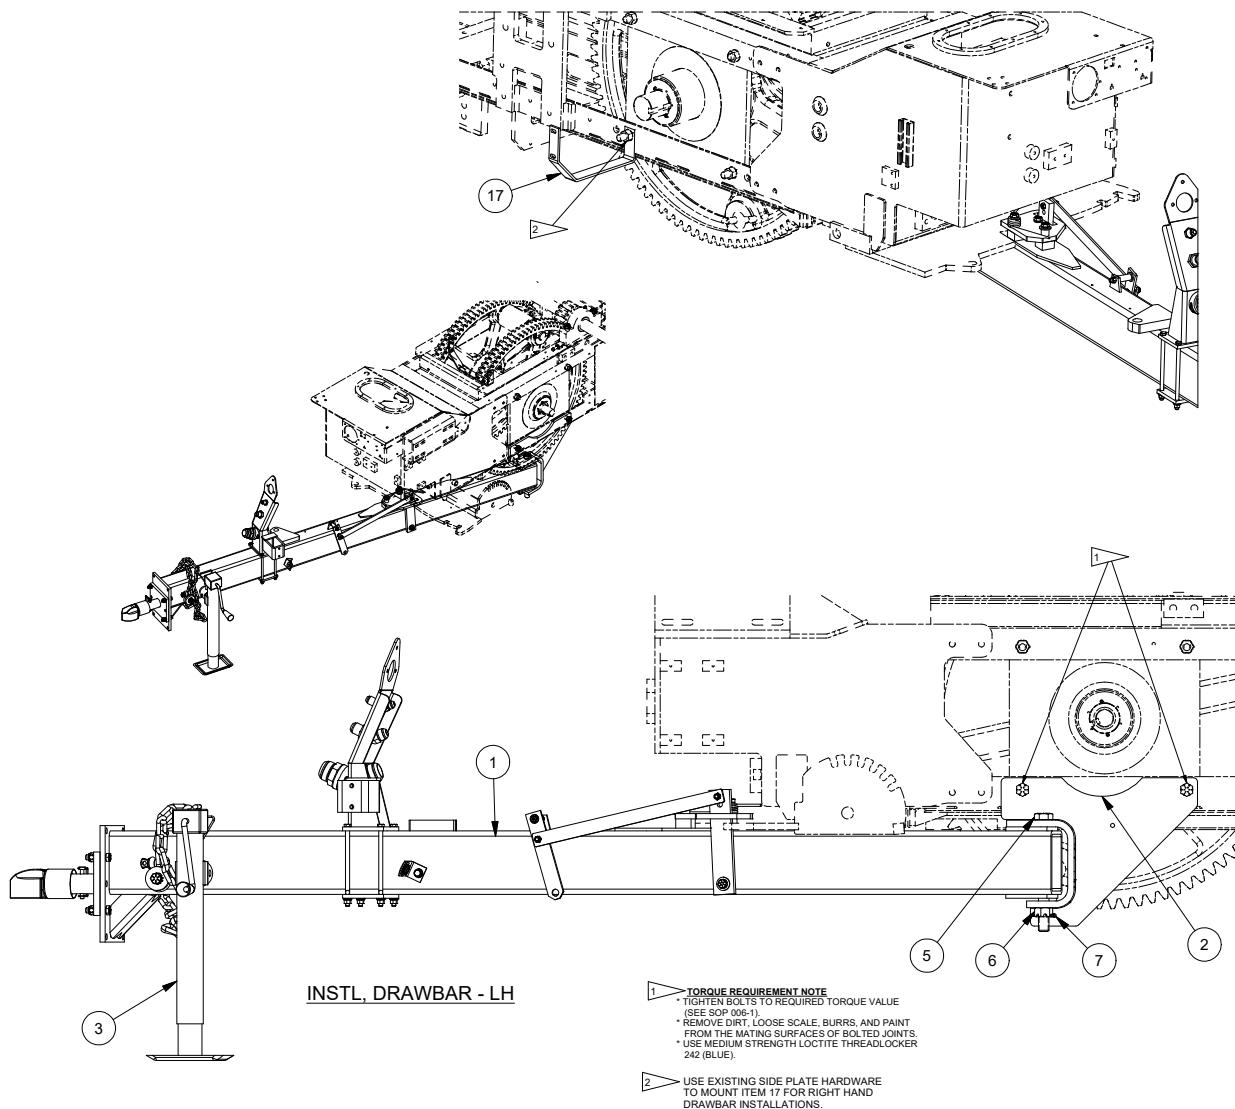


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
910146			Drawbar Installation LH				
1 *a	906884	1	. Drawbar Assembly	9	R13811196	0	. Nut Lock
2	BKT0016306	1	. Drawbar Bracket, Rh	10	Y17C-1236	0	. Capscrew
3	JCK0178203	1	. Jack, Sidewind	11	221657W	0	. Capscrew
4	ROP0000012	1	. Rope	17	910483	1	. Brace Crank Arm Shield Plate
5	PIN0018909	1	. Pin, Pivot	18	180189W	1	. Capscrew
6	NSL0001000	1	. Hex Nut Slotted	19	200608	1	. Washer
7	212255	1	. Cotter Pin	20	221716W	1	. Hex Nut
8	221777W	0	. Washer				

*a See Separate Coverage (Page 1-18)

Rev -

Drawbar Assembly LH, Hydro

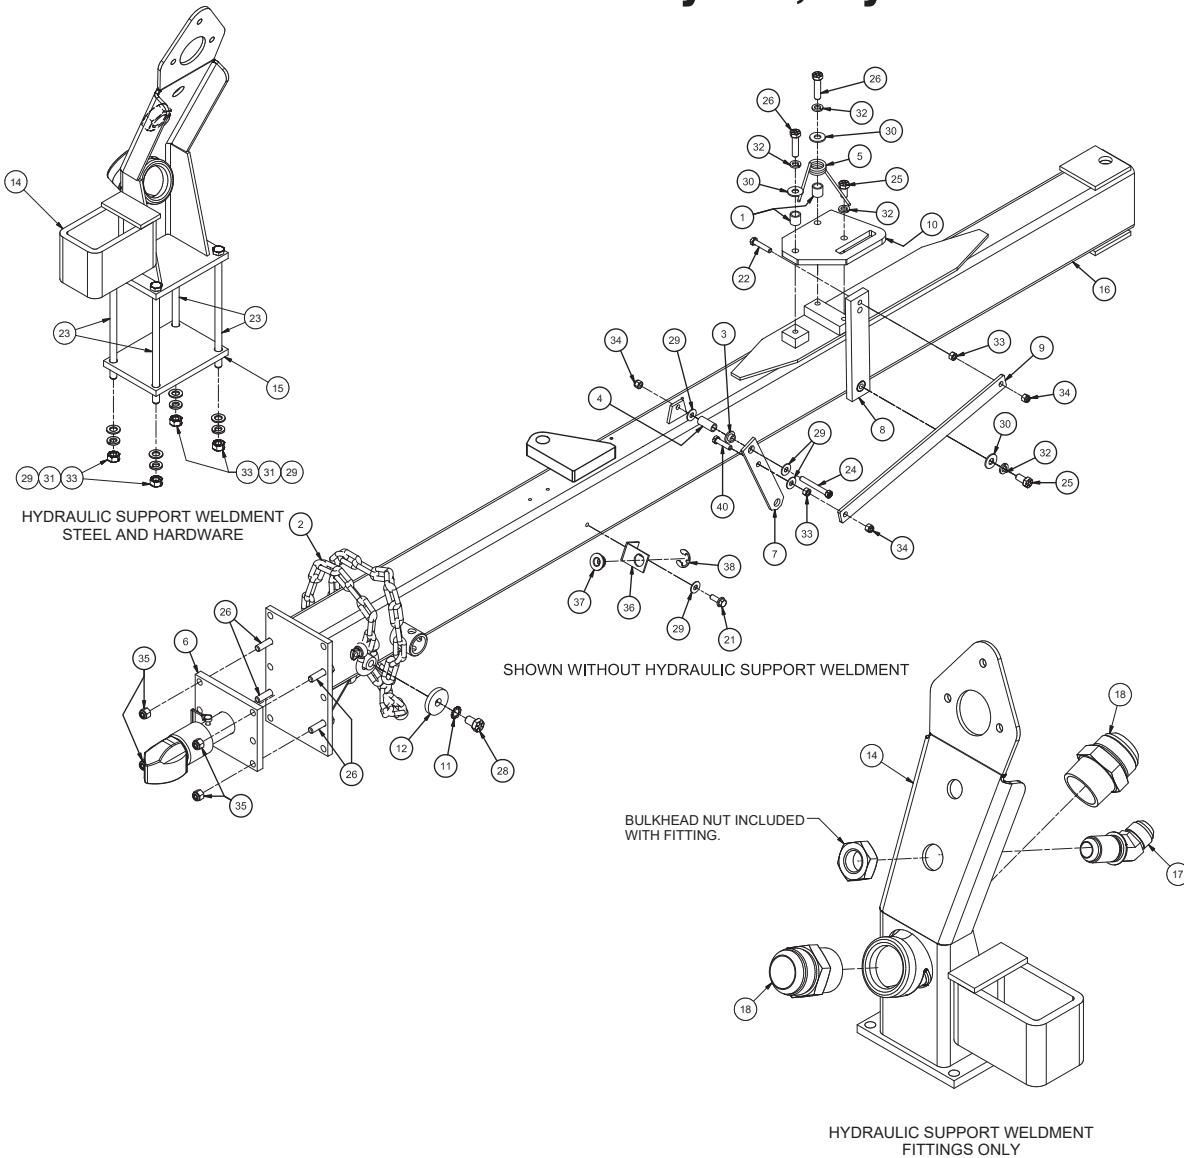


HYDRAULIC SUPPORT WELDMENT FITTINGS ONLY

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
906884							
	Drawbar Assembly, Hydro Gearbox						
1	BSH0011985	2	. Bushing	21	134803W	1	. Screw, Ser Flg
2	CHN0000370	1	. Chain, Ag Safety	22	R13811043	1	. Capscrew
3	F000000440	1	. Ferrule	23	221560W	2	. Capscrew
4	F000000993	1	. Bushing, Bale Weight Ind	24	R13811077	6	. Capscrew
5	F000001891	1	. Spring, Torsion Latch	25	Y18C-1016	1	. Capscrew
6	HTH0021097	1	. Hitch	26	221767W	8	. Washer
7	LEV0013885	1	. Bar, Lever	27	239519	3	. Washer
8	LTH0011229	1	. Tongue Latch	28	R13812514	4	. Lockwasher
9	904696	1	. Bar,Link	29	234665	4	. Lockwasher
10	PLT0011228	1	. Plate, Tongue Latch	30	221707W	6	. Hex Nut
11	WES0006250	1	. Washer	31	237567	3	. Locknut
12	WAS037158A	1	. Washer, Safety Chain	32	223587	4	. Locknut
13	905193	1	. Support	33	F000007973	1	. Holder, Needle Twine Guide
14	901760	1	. Plate,Mounting	34	F000000856	1	. Bushing
15	906883	1	. Weldment, Lh Drawbar	35	F000000857	1	. Ring, Snap
16	17707	1	. Fitting	36	Y17C-0624	1	. Capscrew
17	209763	2	. Fitting	37	14763W	1	. Nut, Bulkhead
18	059-0042	1	. Fitting	38	14761W	1	. Nut
19	234697	4	. Capscrew				
20	R13801813	1	. Capscrew				

Rev A-


Swing Drawbar Installation, Hydro LH

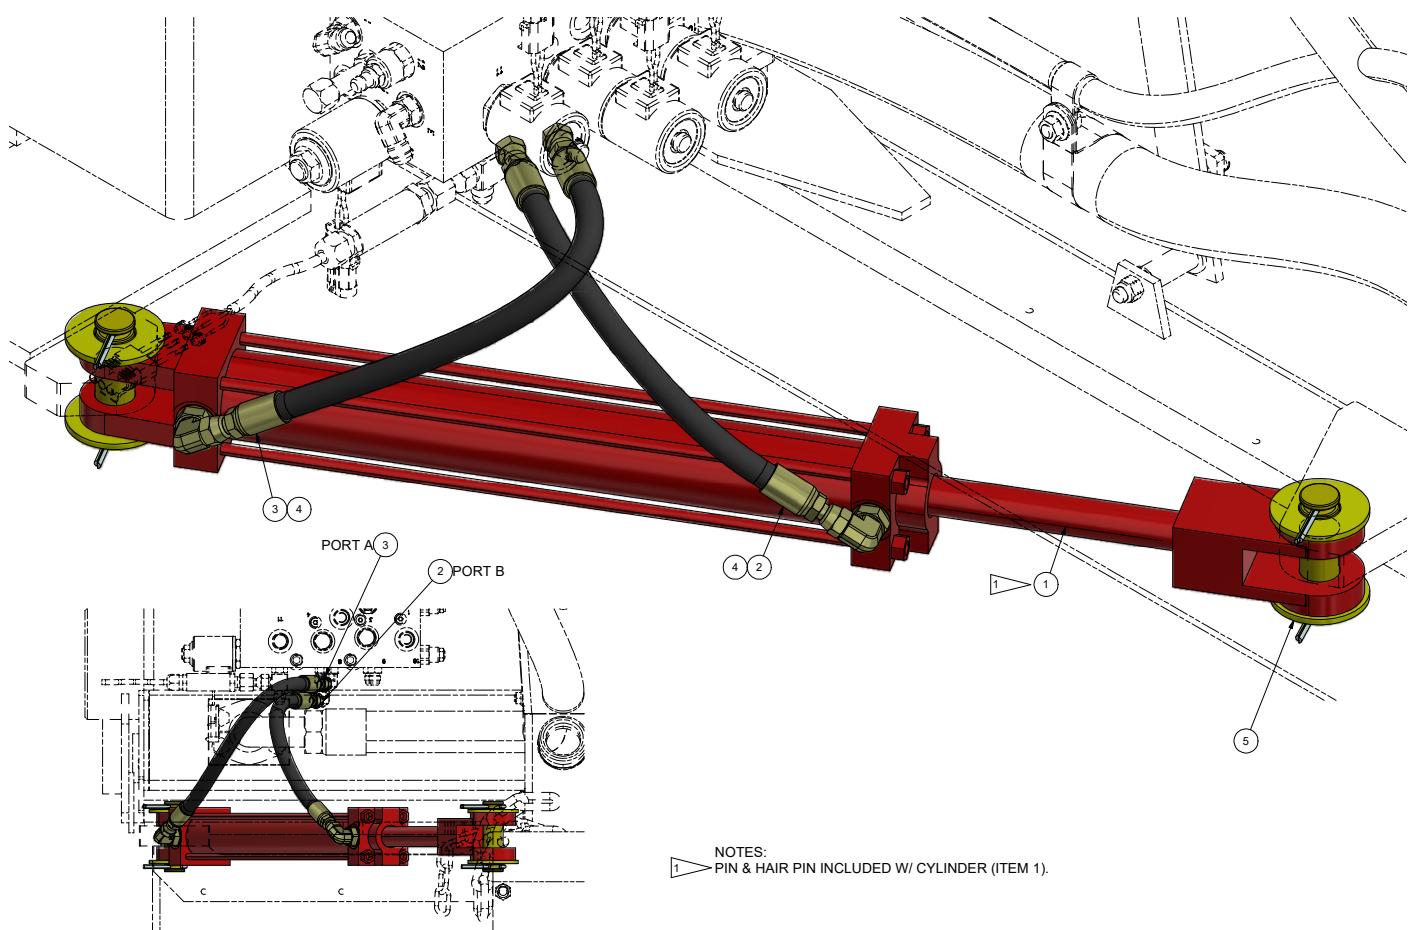

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	910235 CYL0009014	1	Installation, Hydro Swing Db - LH . Cylinder	3	252050	1	. Hose Assembly
	258627	1	. Seal Kit	4	23945	2	. Fitting
2	252050	1	. Hose Assembly	5	R13806990	8	. Washer

Rev -


Front End Installation, 14" 2-Tie

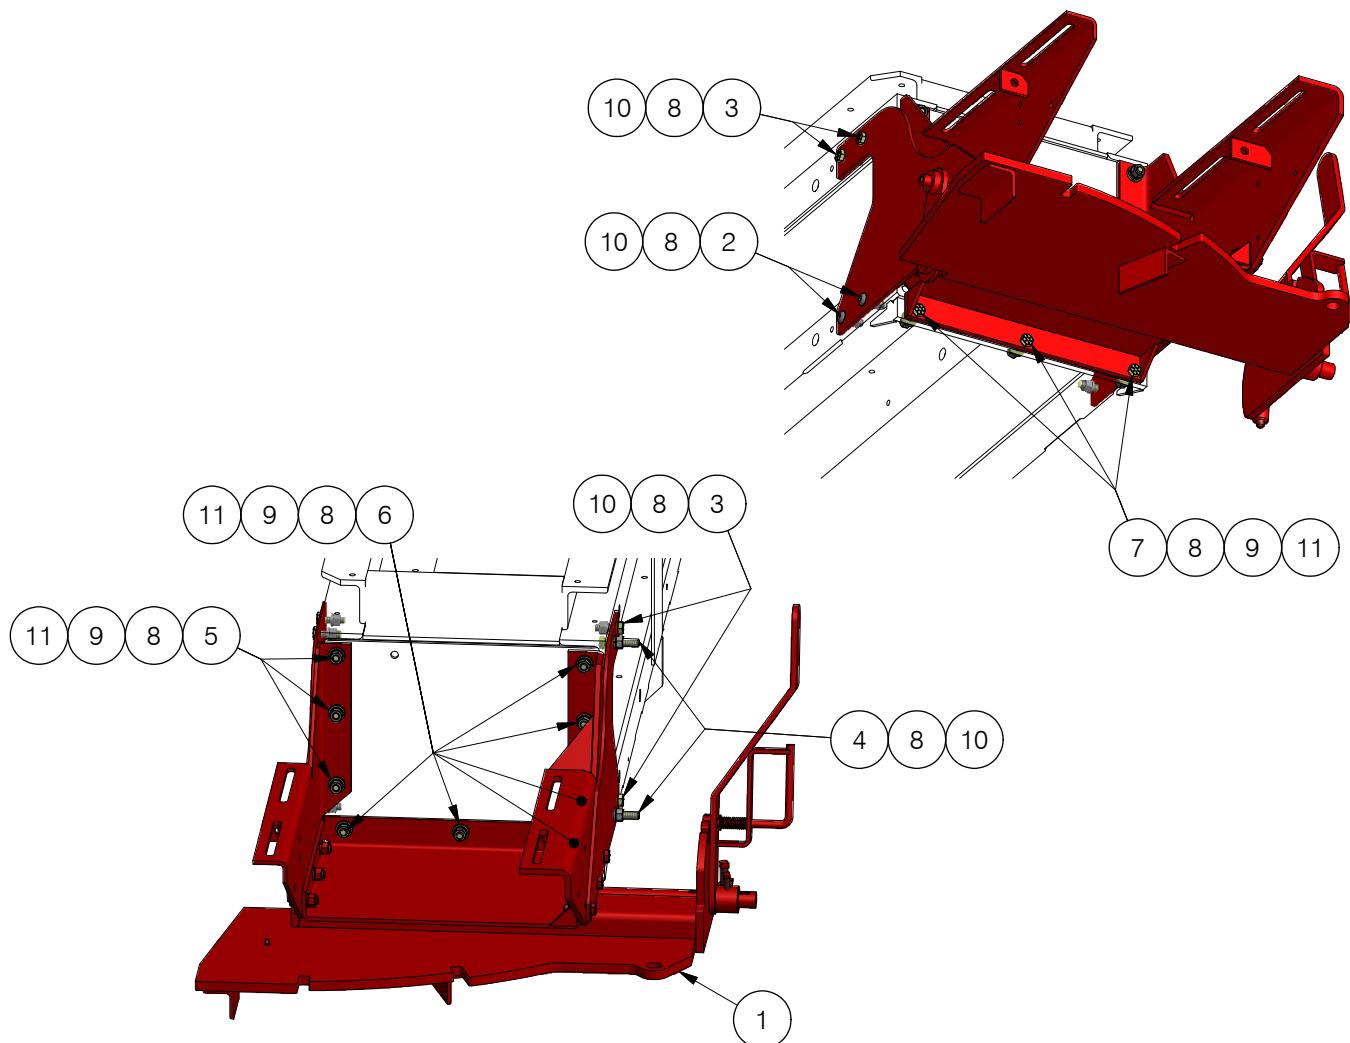

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	904043		Front End Installation				
1	*a 903583	1	. Front End Assembly	8	R13812516	20	. Lockwasher
2	Y25G-0824	2	. Capscrew	9	221771W	12	. Washer
3	200454W	4	. Capscrew	10	221711W	8	. Hex Nut
4	221574W	2	. Capscrew	11	221712W	12	. Hex Nut
5	Y18C-0820	3	. Capscrew				
6	234176	6	. Capscrew				
7	R13806345	3	. Capscrew				

*a See Separate Coverage (Page 1-21)


Front End Assembly, 14" 2-Tie

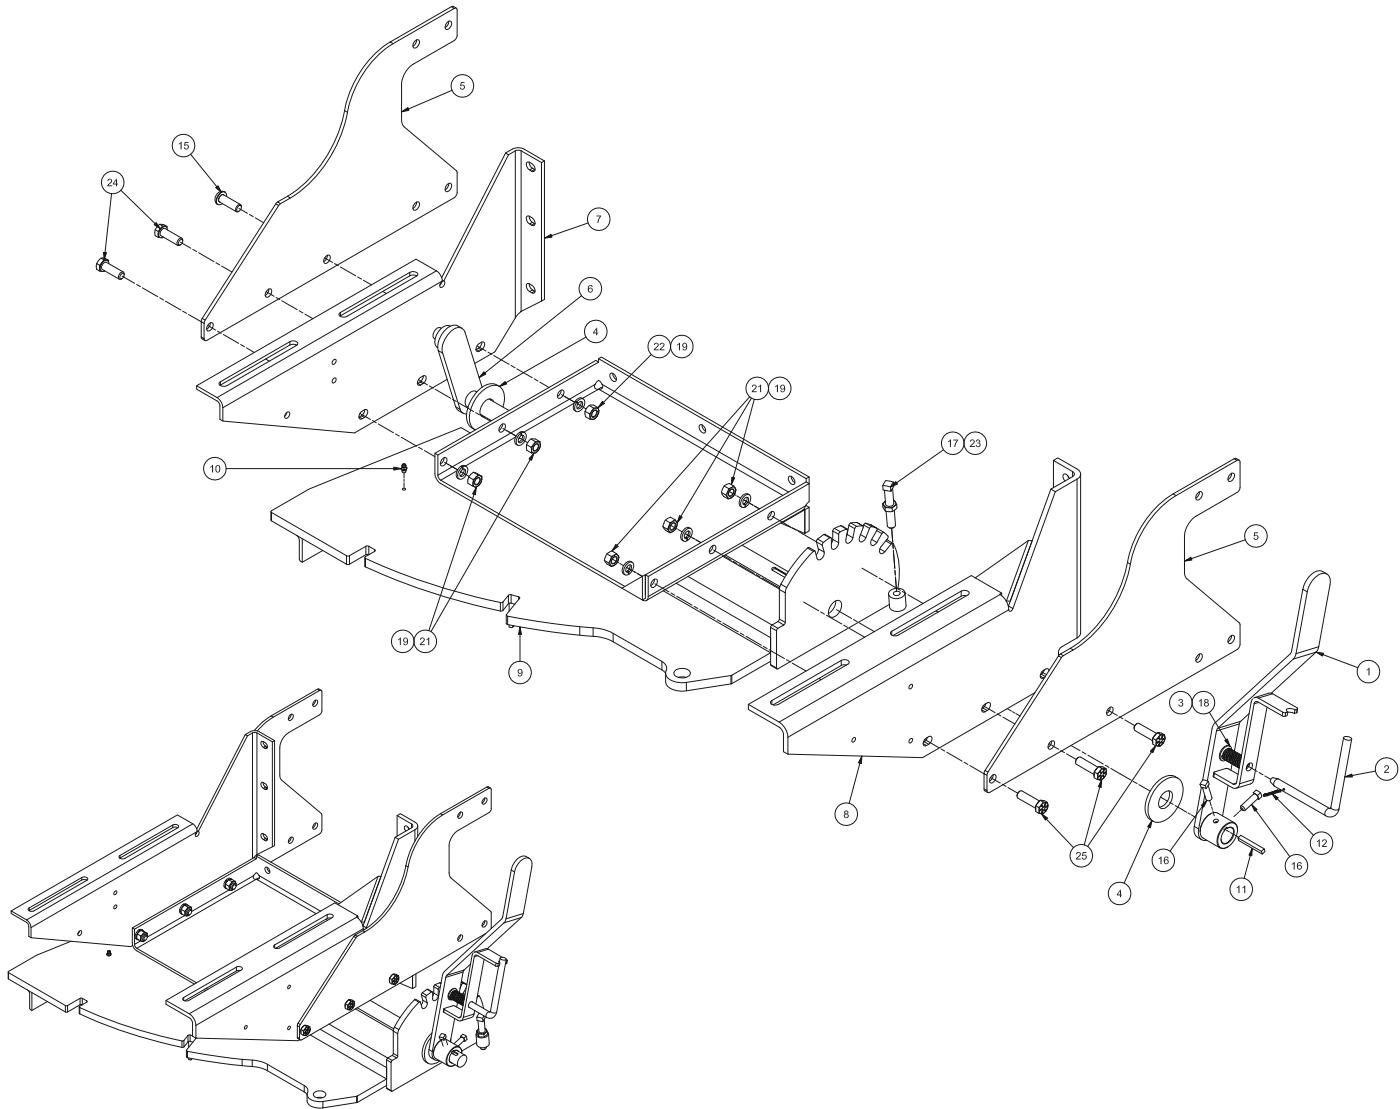

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
903583							
	Front End Subassembly						
1	F000007539	1	. Lever	15	Y25G-0824	1	. Capscrew
2	F000007540	1	. Pin	16	SQS3751250	2	. Set Screw
3	F000007541	1	. Compression Spring	17	SQS5003000	1	. Set Screw
4	F000008247	2	. Washer	18	222615	1	. Flat Washer
5	GUS0024470	2	. Plate, Support	19	R13812516	6	. Lockwasher
6	PLF0024476	1	. Lever	21	221712W	5	. Hex Nut
7	903306	1	. Engine Mount, RH	22	221711W	1	. Hex Nut
8	903307	1	. Engine Mount, LH	23	234218	1	. Jam Nut
9	903555	1	. Hitch	24	234176	2	. Capscrew
10	11079	1	. Fitting, Lube	25	R13806345	3	. Capscrew
11	48688	1	. Key				
12	00103385	1	. Cotter Pin				


Rev E

Front End Installation, 16" 2-Tie

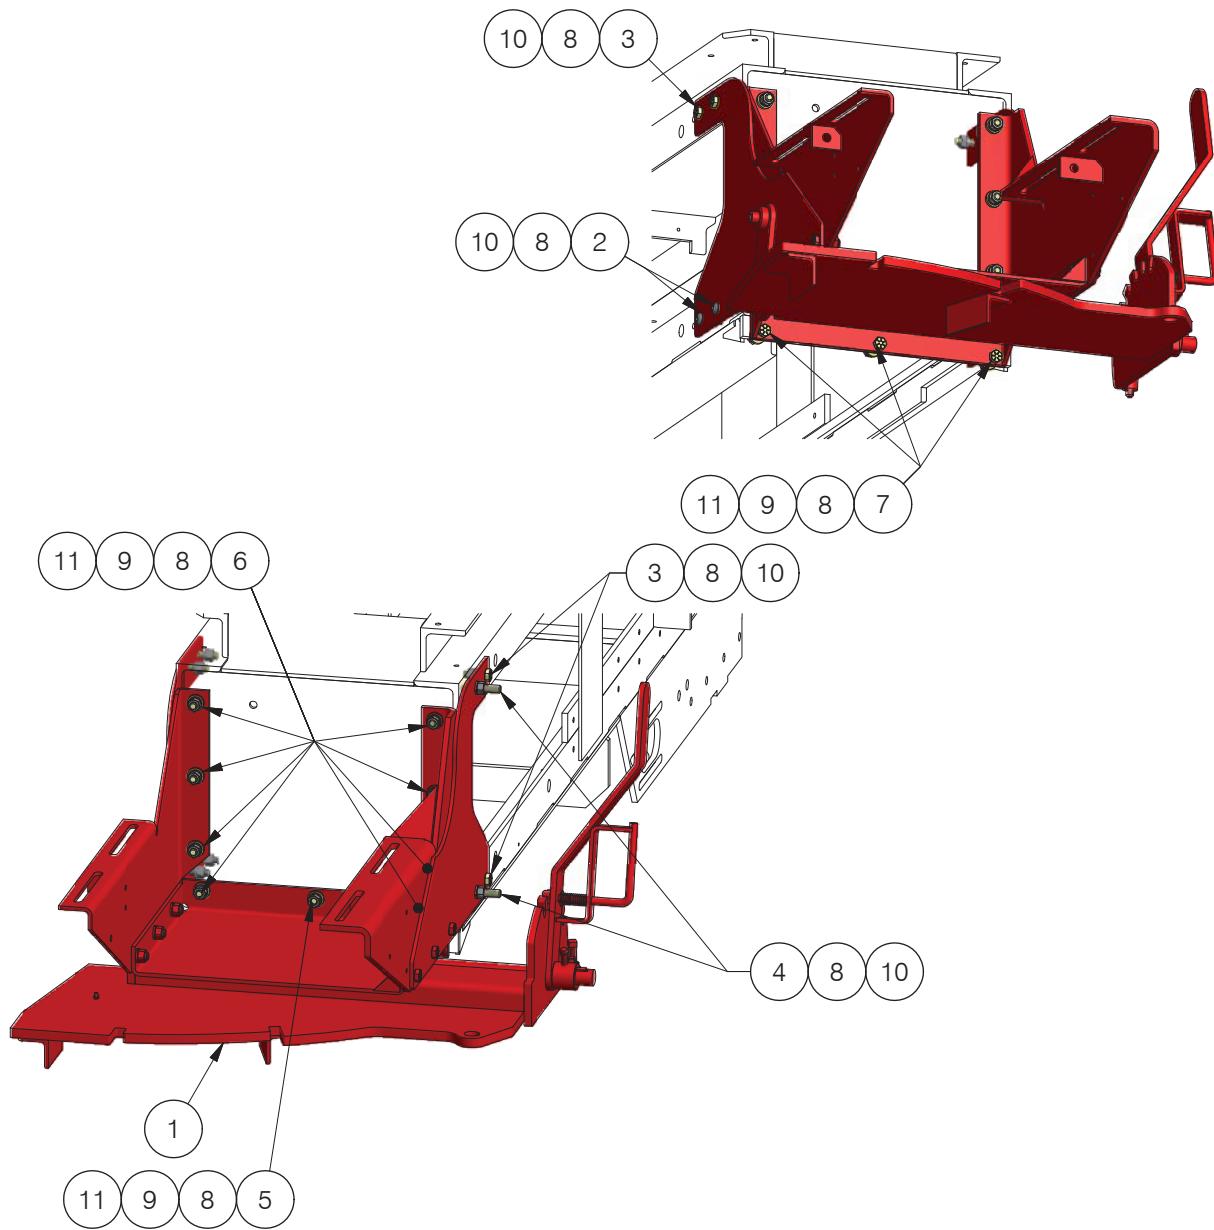

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904045							
1	*a 903554	1	. Front End Assembly	8	R13812516	20	. Lockwasher
2	Y25G-0824	2	. Capscrew	9	221771W	12	. Washer
3	200454W	4	. Capscrew	10	221711W	8	. Hex Nut
4	221574W	2	. Capscrew	11	221712W	12	. Hex Nut
5	Y18C-0820	1	. Capscrew	*a See Separate Coverage Page 1-23			
6	234176	8	. Capscrew				
7	R13806345	3	. Capscrew				

Front End Assembly, 16" 2-Tie

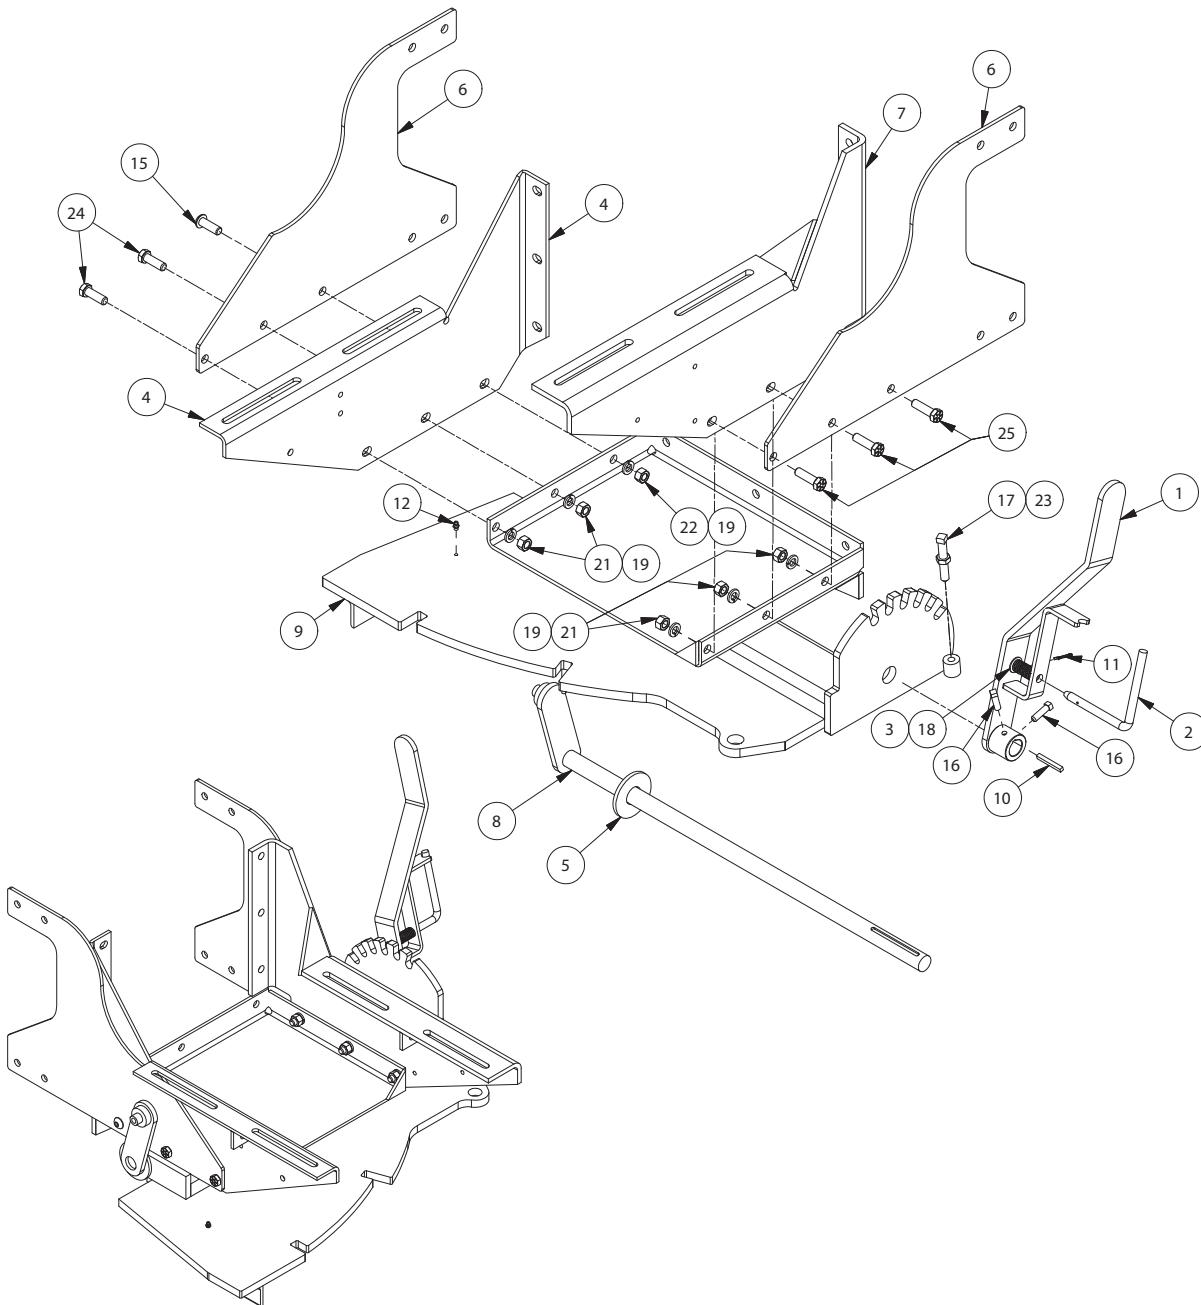

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
903554 Front End Subassembly							
1	F000007539	1	. Lever	15	Y25G-0824	1	. Capscrew
2	F000007540	1	. Pin	16	SQS3751250	2	. Set Screw
3	F000007541	1	. Compression Spring	17	SQS5003000	1	. Set Screw
4	F000007799	1	. Mounting, RH	18	222615	1	. Flat Washer
5	F000008247	1	. Washer	19	R13812516	6	. Lockwasher
6	GUS0024467	2	. Plate, Support Gusset	21	221712W	5	. Hex Nut
7	MNT0023153	1	. Engine Mount, LH	22	221711W	1	. Hex Nut
8	PLF0024476	1	. Lever	23	234218	1	. Jam Nut
9	903555	1	. Hitch	24	234176	2	. Capscrew
10	48688	1	. Key	25	R13806345	3	. Capscrew
11	00103385	1	. Cotter Pin				
12	11079	1	. Fitting, Lube				

Rev D

This page is intentionally left blank.

Section 2


Frame and Tension System

Chamber Installation / Frame, 14" 2-Tie	2-3
Chamber Installation / Frame, 16" 2-Tie	2-6
Haydog Installation, Conventional 2-Tie	2-9
Haydog Installation, Tailless 2-Tie	2-10
Tensioning/Rear Mounts Installation, 14" Chamber.....	2-11
Tensioning/Rear Mounts Installation, 16" Chamber.....	2-13
. Pump Tank Assembly.....	2-15
. Tension Bypass Box Assembly	2-16
Tandem Tension, 3 Ram, 14" 2-Tie	2-17
Tandem Tension, 3 Ram, 16" 2-Tie	2-18
Dual Tension Rams.....	2-19
. Ram Assembly, Dual	2-20
. Ram Assembly, Single	2-21
Auto Tension Release	2-22
. Upper Linkage Sub Assembly.....	2-24
. Lower Linkage Sub Assembly.....	2-25
Throttle/Tension Control Box Installation, Engine	2-26
. Throttle/Tension Control Box Assembly, Engine	2-27
Throttle/Tension Control Box Installation, Driveline	2-28
Throttle/Tension Control Box Installation, Hydro.....	2-30
. Tension Control Assembly, Hydro/Driveline.....	2-31
Frame & Axle Installation, 14" 2 Tie, Bullgear.....	2-32
Frame & Axle Installation, 16" 2 Tie, Bullgear.....	2-33
Single 8-Hole Flotation RH 2 & 3 Tie	2-34
8-Hole Flotation LH 2 Tie	2-35
Tandem 8-Hole Flotation LH 2 Tie	2-36
Pickup Depth Wheel	2-37
Tandem 8-Hole Flotation RH 2 & 3 Tie	2-38
Single 8-Hole Highway RH 2 & 3 Tie	2-39
Tandem 8-Hole Highway RH.....	2-40
Tandem 8-Hole Highway LH 2 Tie	2-41
Tire & Wheel 8-Hole Highway LH 2 Tie	2-42
Tire & Wheel 8-Hole Highway LH 2 Tie	2-43

This page is intentionally left blank.


Chamber Installation / Frame, 14" 2-Tie

Page 1 of 3

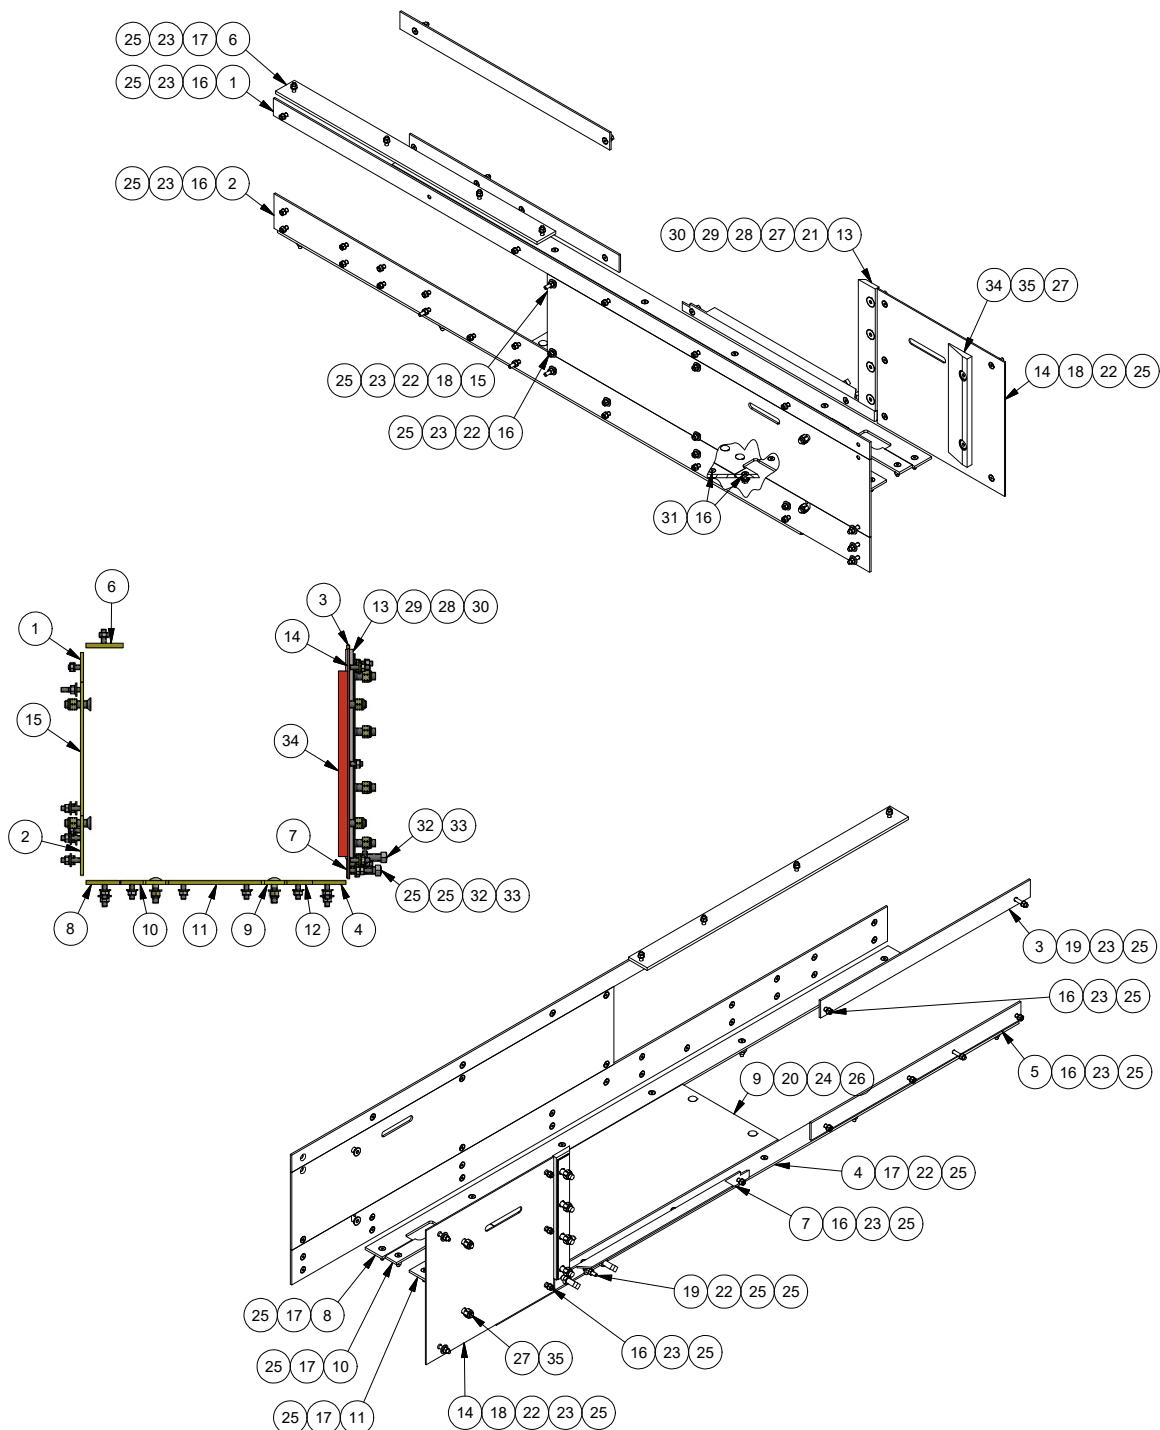

Chamber Installation / Frame, 14" 2-Tie

Page 2 of 3

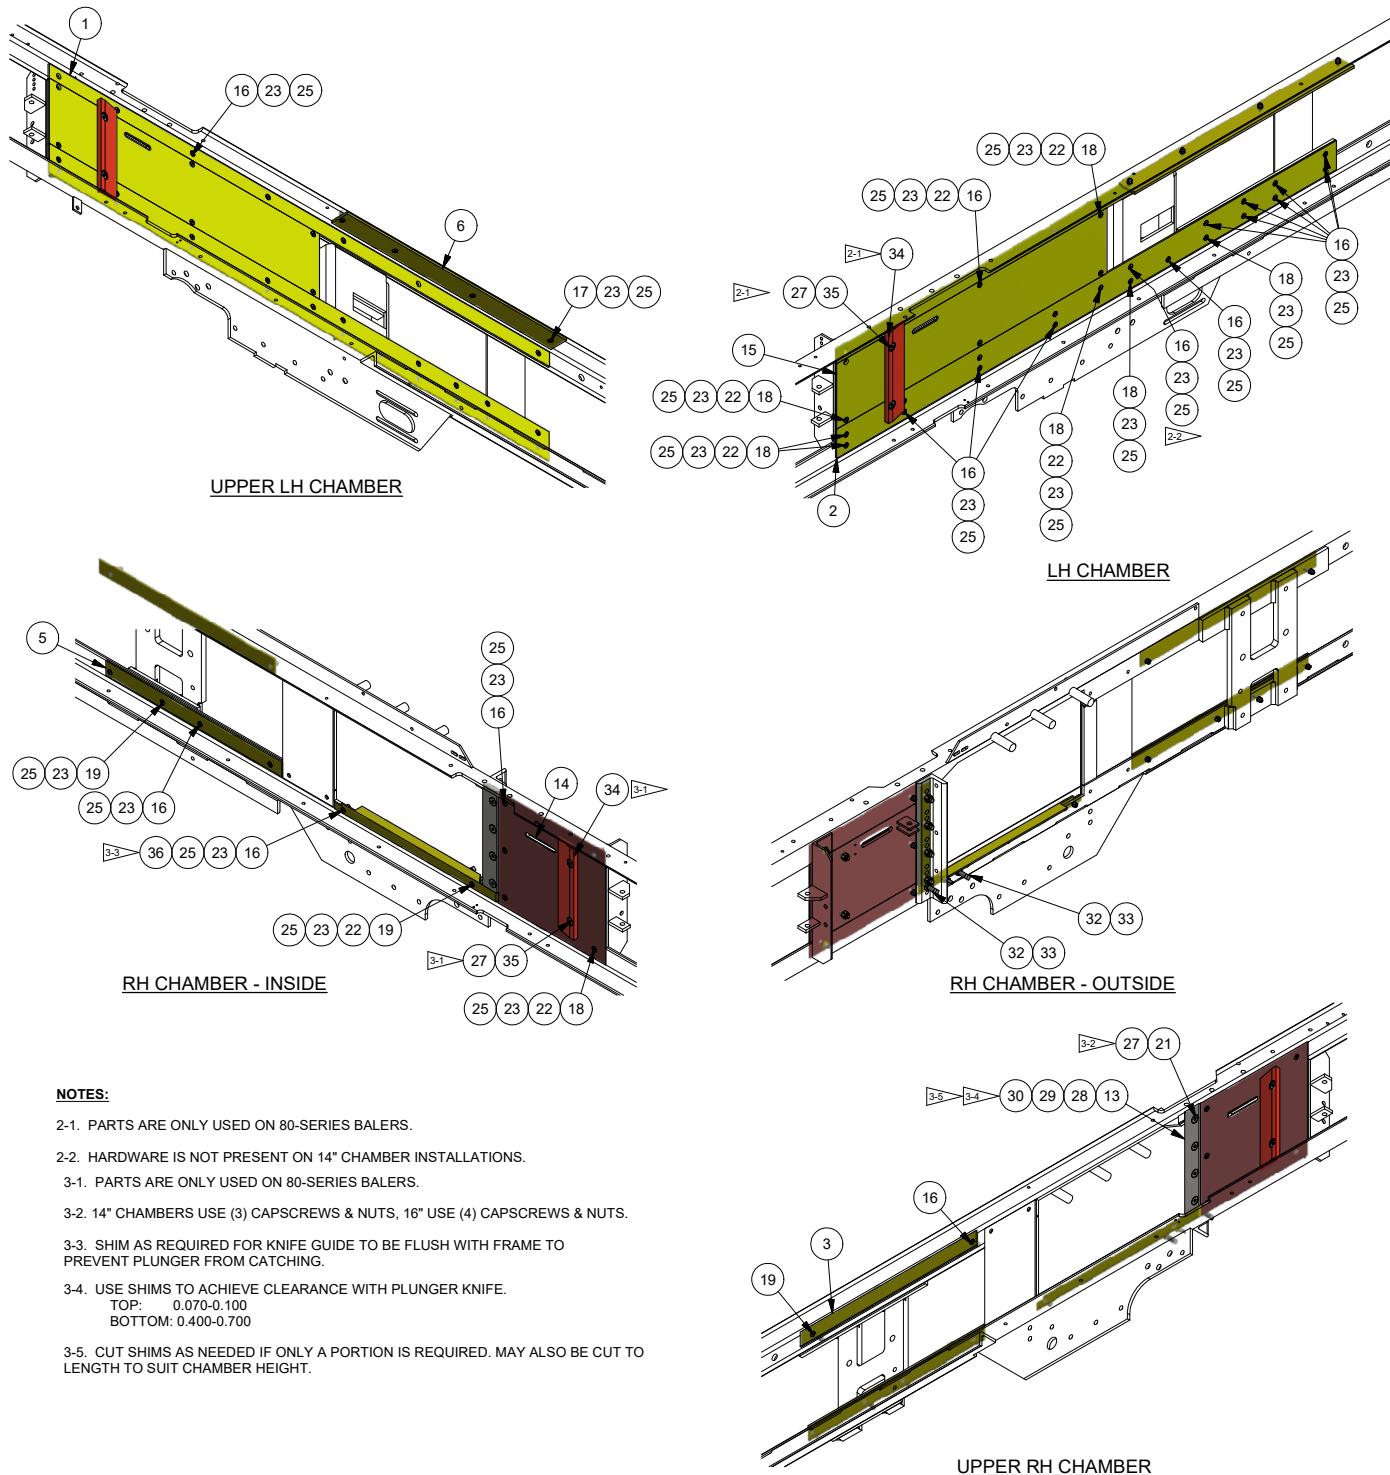


NOTES:

- 2-1. PARTS ARE ONLY USED ON 80-SERIES BALERS.
- 2-2. HARDWARE IS NOT PRESENT ON 14" CHAMBER INSTALLATIONS.
- 3-1. PARTS ARE ONLY USED ON 80-SERIES BALERS.
- 3-2. 14" CHAMBERS USE (3) CAPSCREWS & NUTS, 16" USE (4) CAPSCREWS & NUTS.
- 3-3. SHIM AS REQUIRED FOR KNIFE GUIDE TO BE FLUSH WITH FRAME TO PREVENT PLUNGER FROM CATCHING.
- 3-4. USE SHIMS TO ACHIEVE CLEARANCE WITH PLUNGER KNIFE.
TOP: 0.070-0.100
BOTTOM: 0.400-0.700
- 3-5. CUT SHIMS AS NEEDED IF ONLY A PORTION IS REQUIRED. MAY ALSO BE CUT TO LENGTH TO SUIT CHAMBER HEIGHT.

Chamber Installation / Frame, 14" 2-Tie

Page 3 of 3

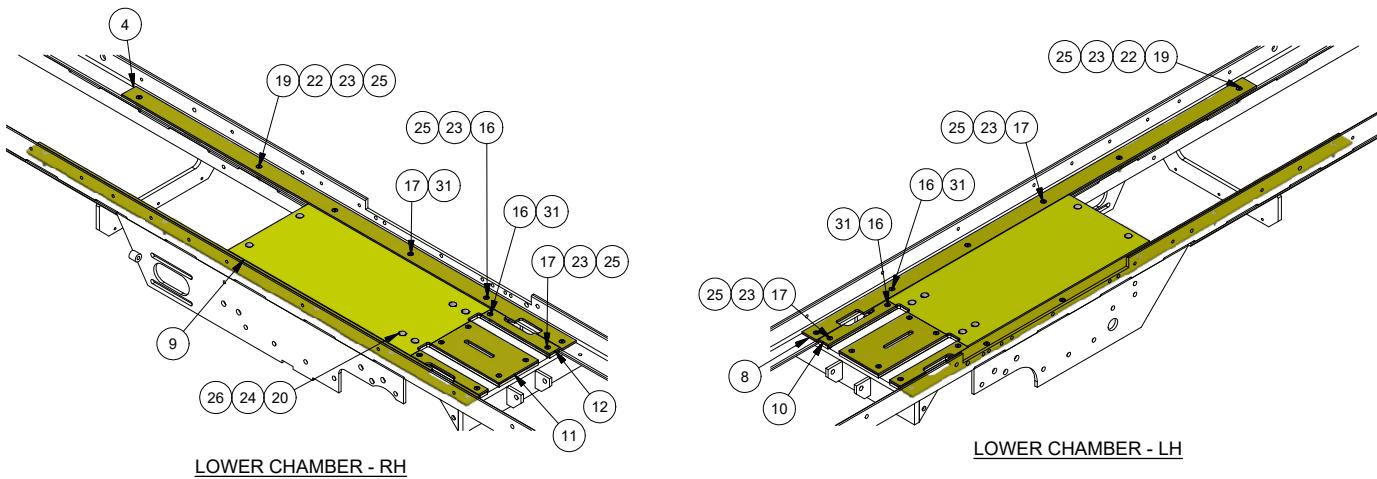


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902541							
1	F000007763	1	. Bar, Side	21	PWB5002000	3	. Bolt, Plow
2	904495	1	. Bar, LH Bottom	22	223428	18	. Flat Washer
3	F000000299	1	. Bar, Upper RH	23	R13812513	60	. Lockwasher
4	F000007767	1	. Plunger Rail, RH Bottom	24	Y27E-06	6	. Lockwasher
5	PLG0026593	1	. Bar, RH Bottom	25	R13811512	62	. Hex Nut
6	PLG035987D	1	. Bar, LH Upper Rail	26	R13811191	6	. Hex Nut
7	F000007439	1	. Knife Guide	27	223587	3	. Nut, Esna
8	F000007762	1	. Plunger Rail, LH Bottom	28	F000001512	AR	.Shim
9	903163	1	. Plate, Bottom Liner	29	SHM0000738	AR	.Shim
10	F000007811	1	. Plate, LH Bottom	30	F000000751	AR	.Shim
11	F000007810	1	. Plate, Bottom	31	191534W	6	.Nut
12	F000007809	1	. Plate, RH Bottom	32	SQS5001750	2	. Set Screw
13	F000007744	1	. Holes , Knife	33	234218	2	. Jam Nut
14	F007220-14	1	. Plate, RH Chamber Liner	34	902729	0	.Bar
15	903925	1	. Plate, LH Chamber Liner	35	Y09G-0828	0	.Capscrew
16	Y09G-0516	36	. Capscrew	36	901737	AR	. Shim
17	Y09G-0520	14	. Capscrew				
18	Y09G-0524	9	. Capscrew				
19	Y09G-0528	7	. Capscrew				
20	CRB3750150	6	. Bolt				

Rev F





Chamber Installation / Frame, 16" 2-Tie

Page 1 of 3

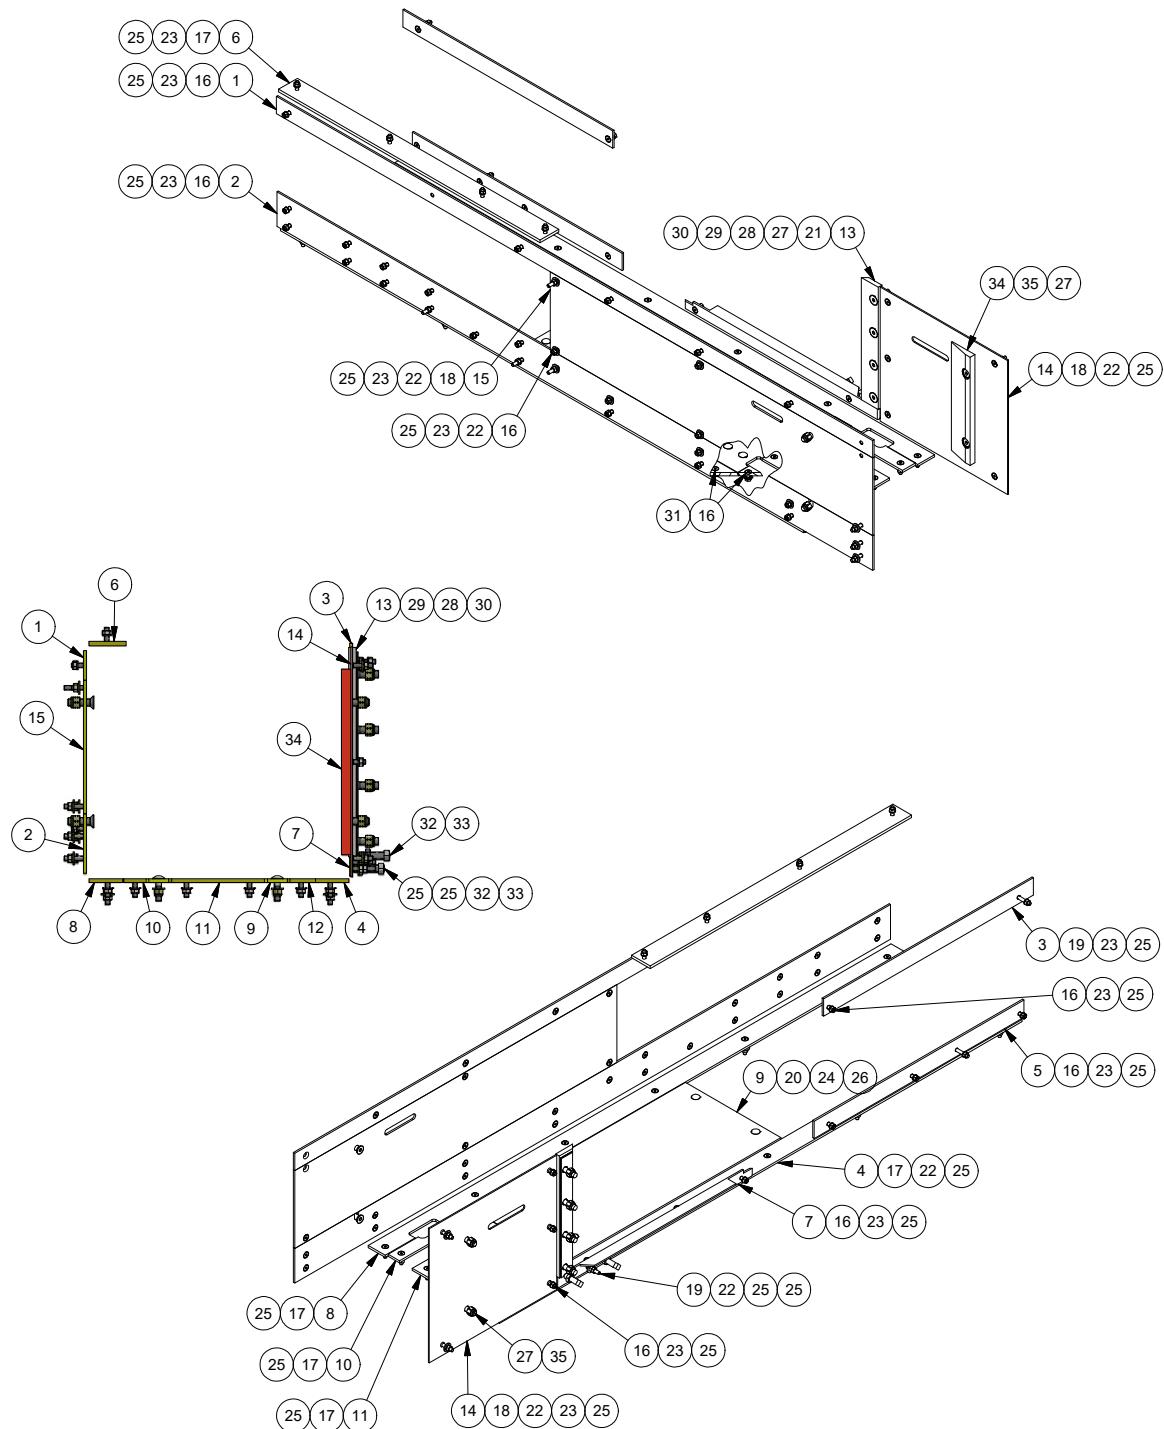


Chamber Installation / Frame, 16" 2-Tie

Page 2 of 3

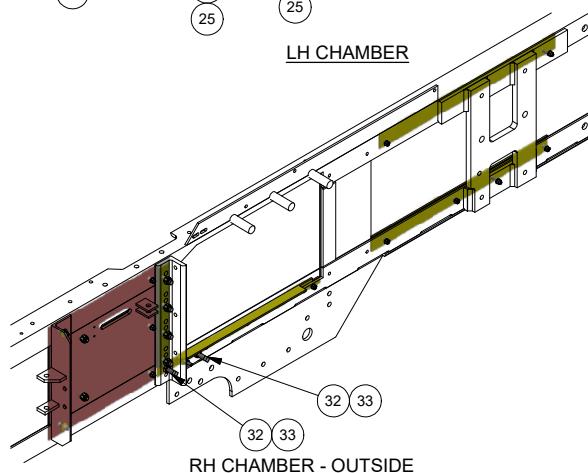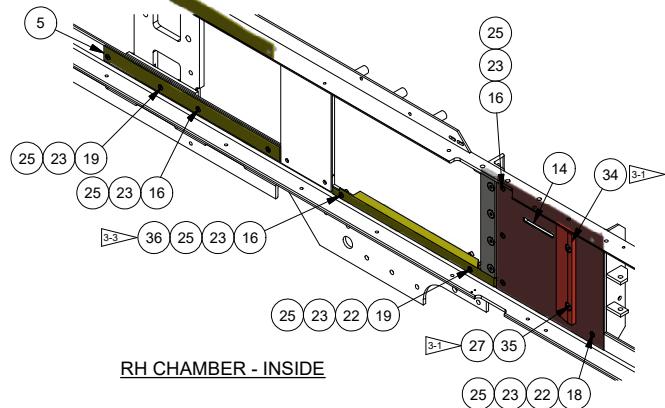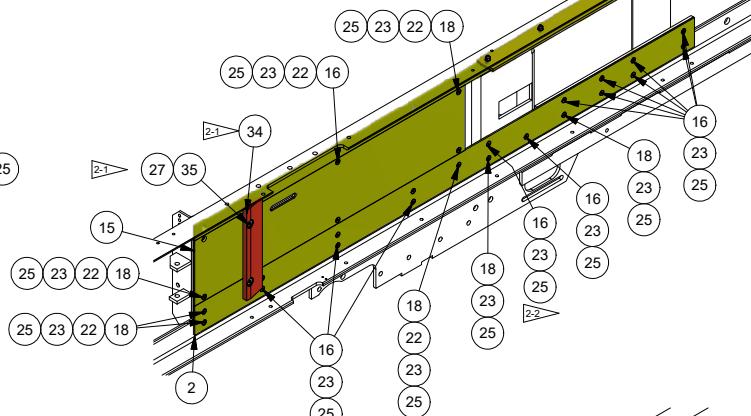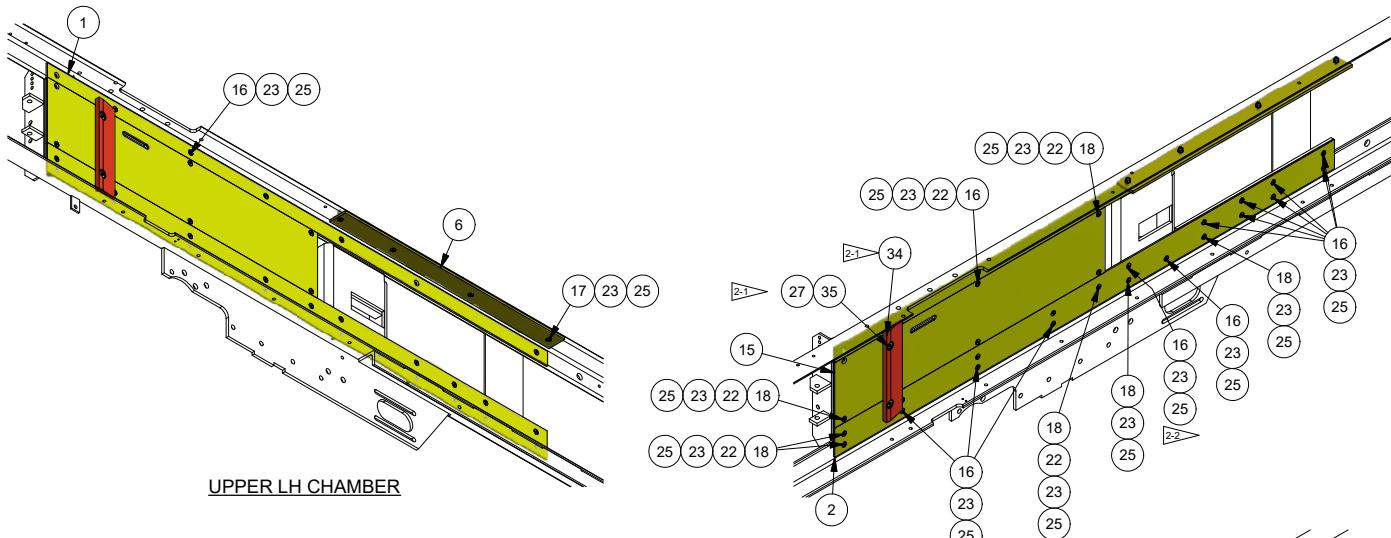



NOTES:

- 2-1. PARTS ARE ONLY USED ON 80-SERIES BALERS.
- 2-2. HARDWARE IS NOT PRESENT ON 14" CHAMBER INSTALLATIONS.
- 3-1. PARTS ARE ONLY USED ON 80-SERIES BALERS.
- 3-2. 14" CHAMBERS USE (3) CAPSCREWS & NUTS, 16" USE (4) CAPSCREWS & NUTS.
- 3-3. SHIM AS REQUIRED FOR KNIFE GUIDE TO BE FLUSH WITH FRAME TO PREVENT PLUNGER FROM CATCHING.
- 3-4. USE SHIMS TO ACHIEVE CLEARANCE WITH PLUNGER KNIFE.
TOP: 0.070-0.100
BOTTOM: 0.400-0.700
- 3-5. CUT SHIMS AS NEEDED IF ONLY A PORTION IS REQUIRED. MAY ALSO BE CUT TO LENGTH TO SUIT CHAMBER HEIGHT.

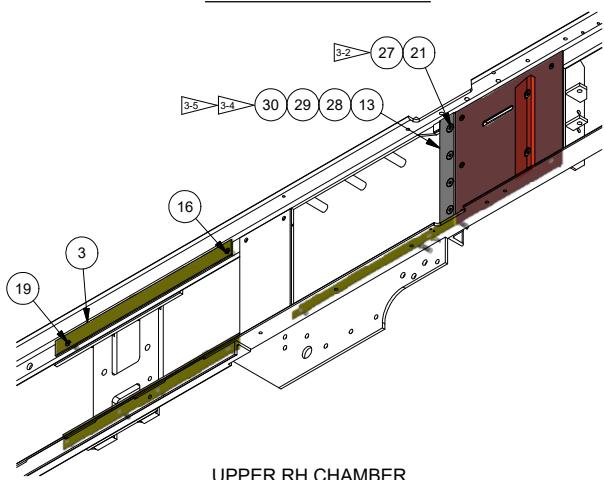

Chamber Installation / Frame, 16" 2-Tie


Page 3 of 3

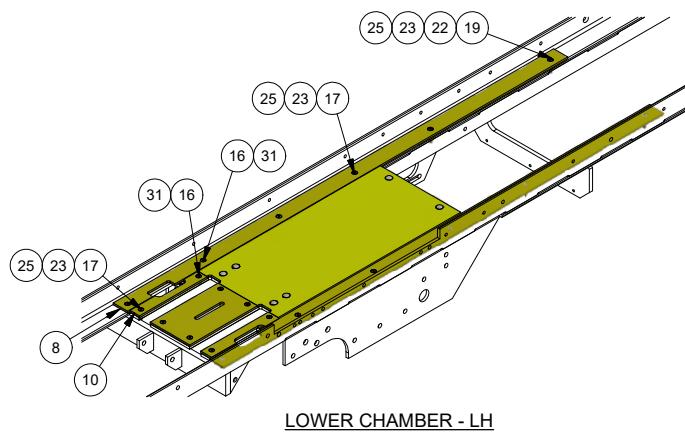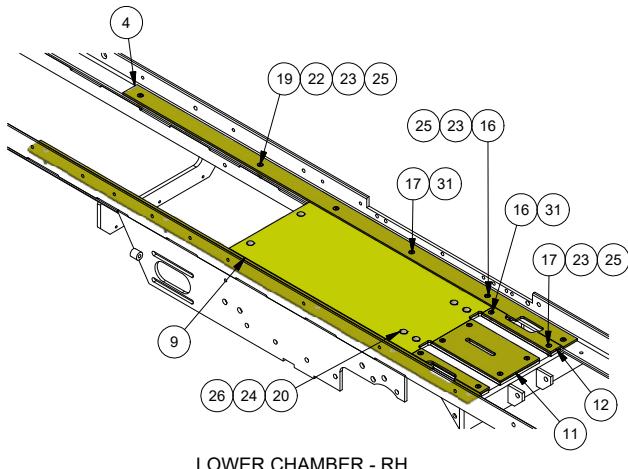

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902543 Chamber Installation							
1	F000007763	1	. Bar, Side	21	PWB5002000	4	. Bolt, Plow
2	903365	1	. Bar, LH Bottom	22	223428	18	. Flat Washer
3	F000000299	1	. Bar, Upper RH	23	R13812513	61	. Lockwasher
4	F000007767	1	. Plunger Rail, RH Bottom	24	Y27E-06	6	. Lockwasher
5	PLG0026593	1	. Bar, RH Bottom	25	R13811512	63	. Hex Nut
6	PLG035987D	1	. Bar, LH Upper Rail	26	R13811191	6	. Hex Nut
7	F000007439	1	. Knife Guide	27	223587	4	. Nut, Esna
8	F000007762	1	. Plunger Rail, LH Bottom	28	F000001512	AR	.Shim
9	903163	1	. Plate, Bottom Liner	29	SHM0000738	AR	.Shim
10	F000007811	1	. Plate, LH Bottom	30	F000000751	AR	.Shim
11	F000007810	1	. Plate, Bottom	31	191534W	6	.Nut
12	F000007809	1	. Plate, RH Bottom	32	SQS5001750	2	. Set Screw
13	F000001609	1	. Holes , Knife	33	234218	2	. Jam Nut
14	F000007220	1	. Plate, RH Chamber Liner	34	902729	0	.Bar
15	904007	1	. Plate, LH Chamber Liner	35	Y09G-0828	0	.Capscrew
16	Y09G-0516	37	. Capscrew	36	901737	AR	. Shim
17	Y09G-0520	14	. Capscrew				
18	Y09G-0524	9	. Capscrew				
19	Y09G-0528	7	. Capscrew				
20	CRB3750150	6	. Bolt				

Rev F


Haydog Installation, Conventional 2-Tie

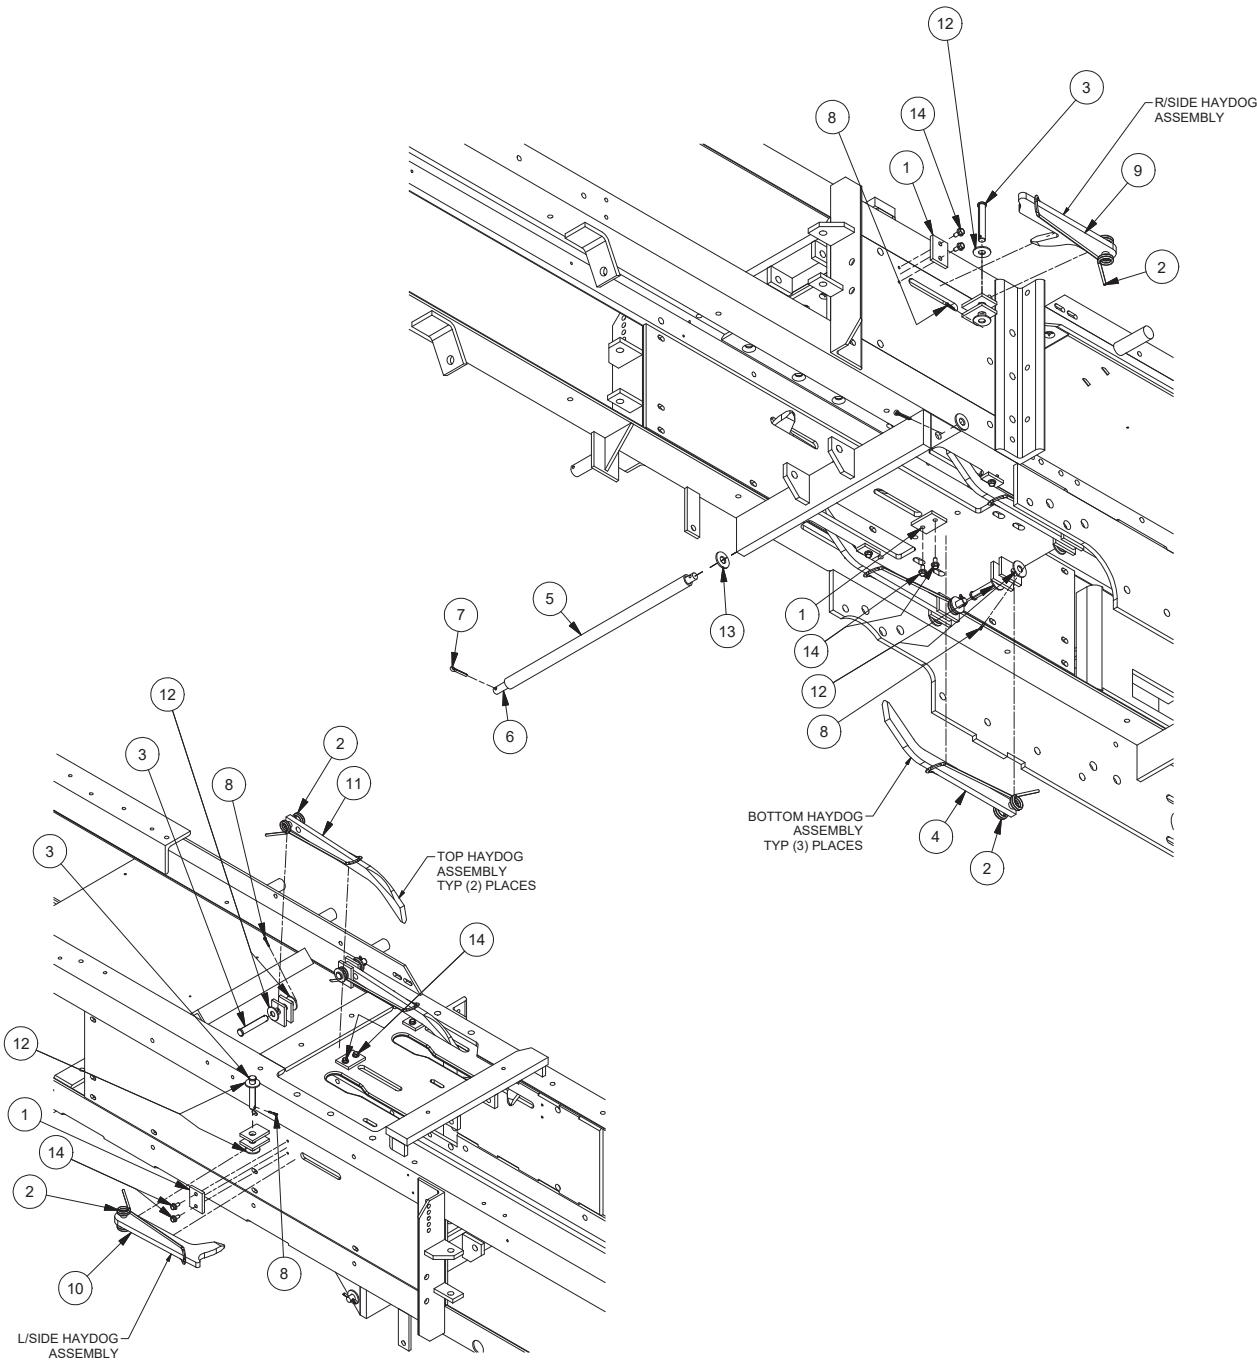

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902667		Haydog Installation				
1	PAD0025218	7	. Pad W/ Holes	9	F000007563	1	. Hay Dog, RH
2	F000000188	7	. Spring, Hay Dog	10	F000007562	1	. Hay Dog, LH
3	F000000220	7	. Pin, Hay Dog	11	F000007911	2	. Hay Dog
4	F000000837	3	. Hay Dog, Bottom	12	15177W	14	. Washer
5	F000008110	1	. Pipe, Bottom Guide	13 *a	223634	2	. Washer
6	F000008109	1	. Rod, Guide	14	221872	13	. Capscrew
7	COT0000801	2	. Cotter Pin				
8	00103385	7	. Use 15223W	*a	Use 15135W		

Rev D

Haydog Installation, Tailless 2-Tie

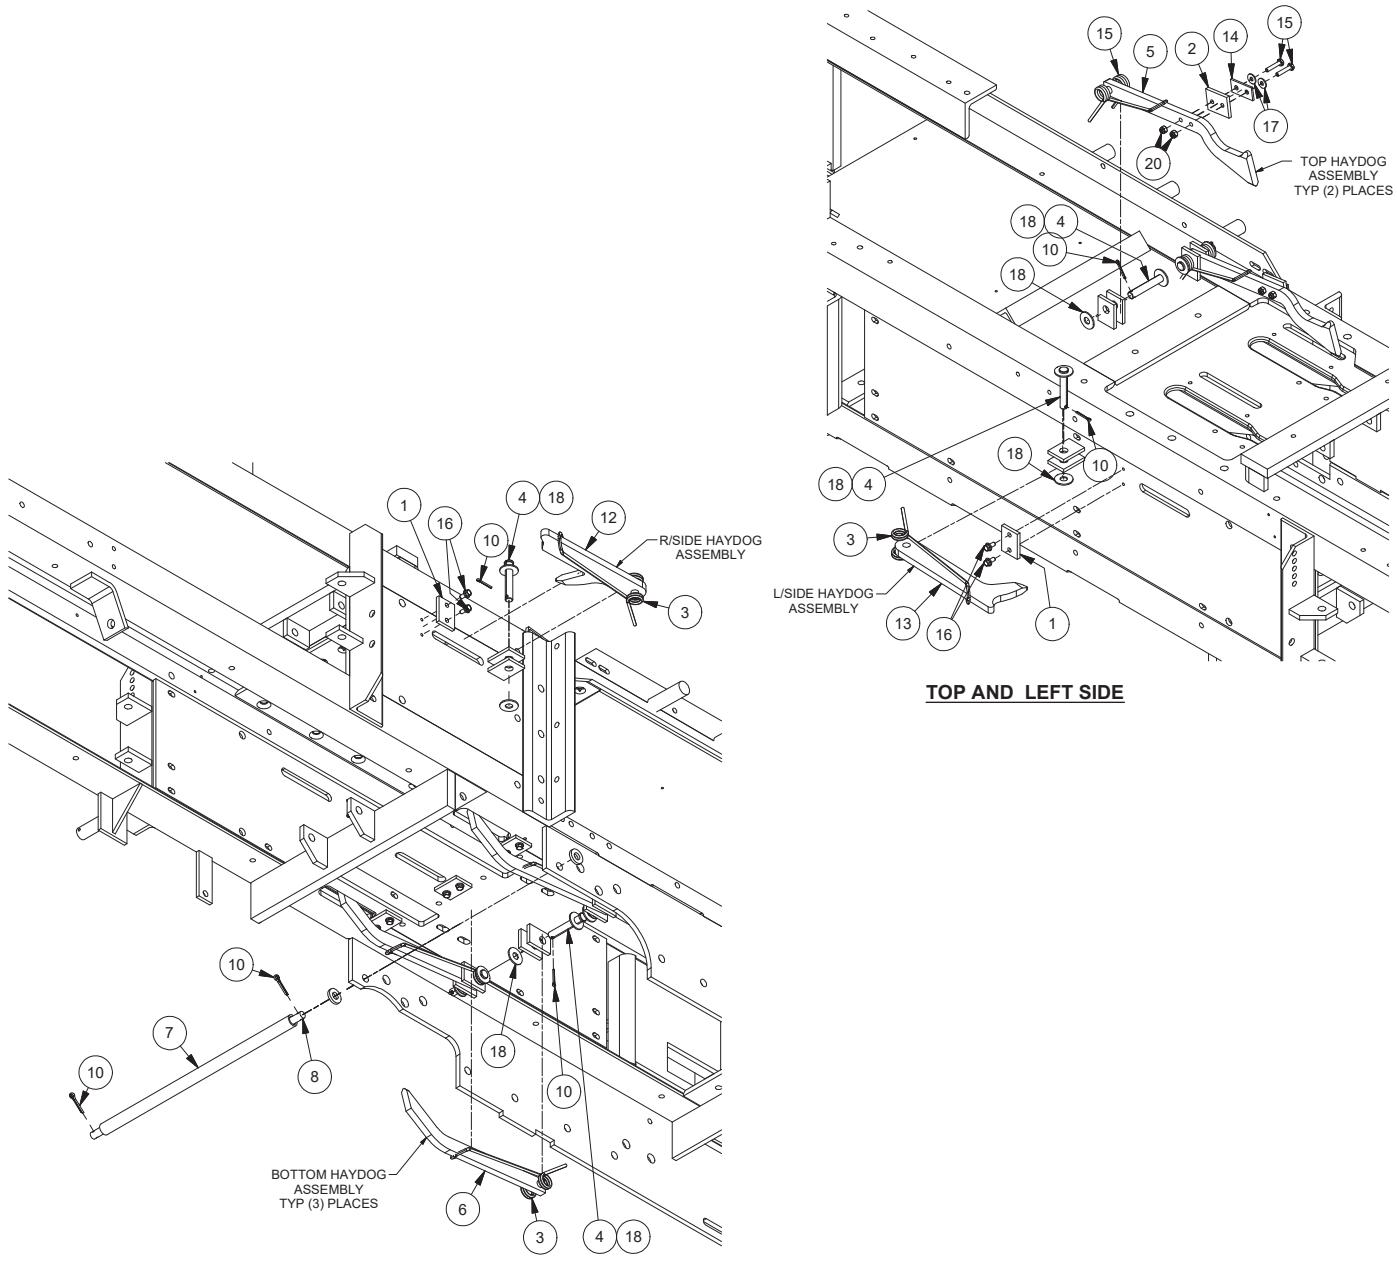


BOTTOM AND RIGHT SIDE

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902668							
1	PAD0025218	5	. Pad W/ Holes	13	F000007562	1	. Hay Dog, LH
2	CUS0032524	2	. Cushion, Black Hay Dog	14	CLP0032525	2	. Plate, Clamp
3	F000000188	5	. Spring, Hay Dog	15	R13801782	4	. Capscrew
4	F000000220	7	. Pin, Hay Dog	16	221872	10	. Capscrew
5	DOG0035704	2	. Hay Dog, Top	17	R13811443	4	. Washer
6	F000000837	3	. Hay Dog, Bottom	18	15177W	14	. Washer
7	F000008110	1	. Pipe, Bottom Guide	19	*a 223634	2	. Washer
8	F000008109	1	. Rod, Guide	20	*b R13811189	4	. Nut
9	COT0000801	2	. Cotter Pin	*a Use 15135W			
10	00103385	7	. Use 15223W	*b Use 15113W			
11	SPG0023160	2	. Spring, Hay Dog				
12	F000007563	1	. Hay Dog, RH				

Rev D


Tensioning/Rear Mounts Installation, 14" Chamber

Page 1 of 2

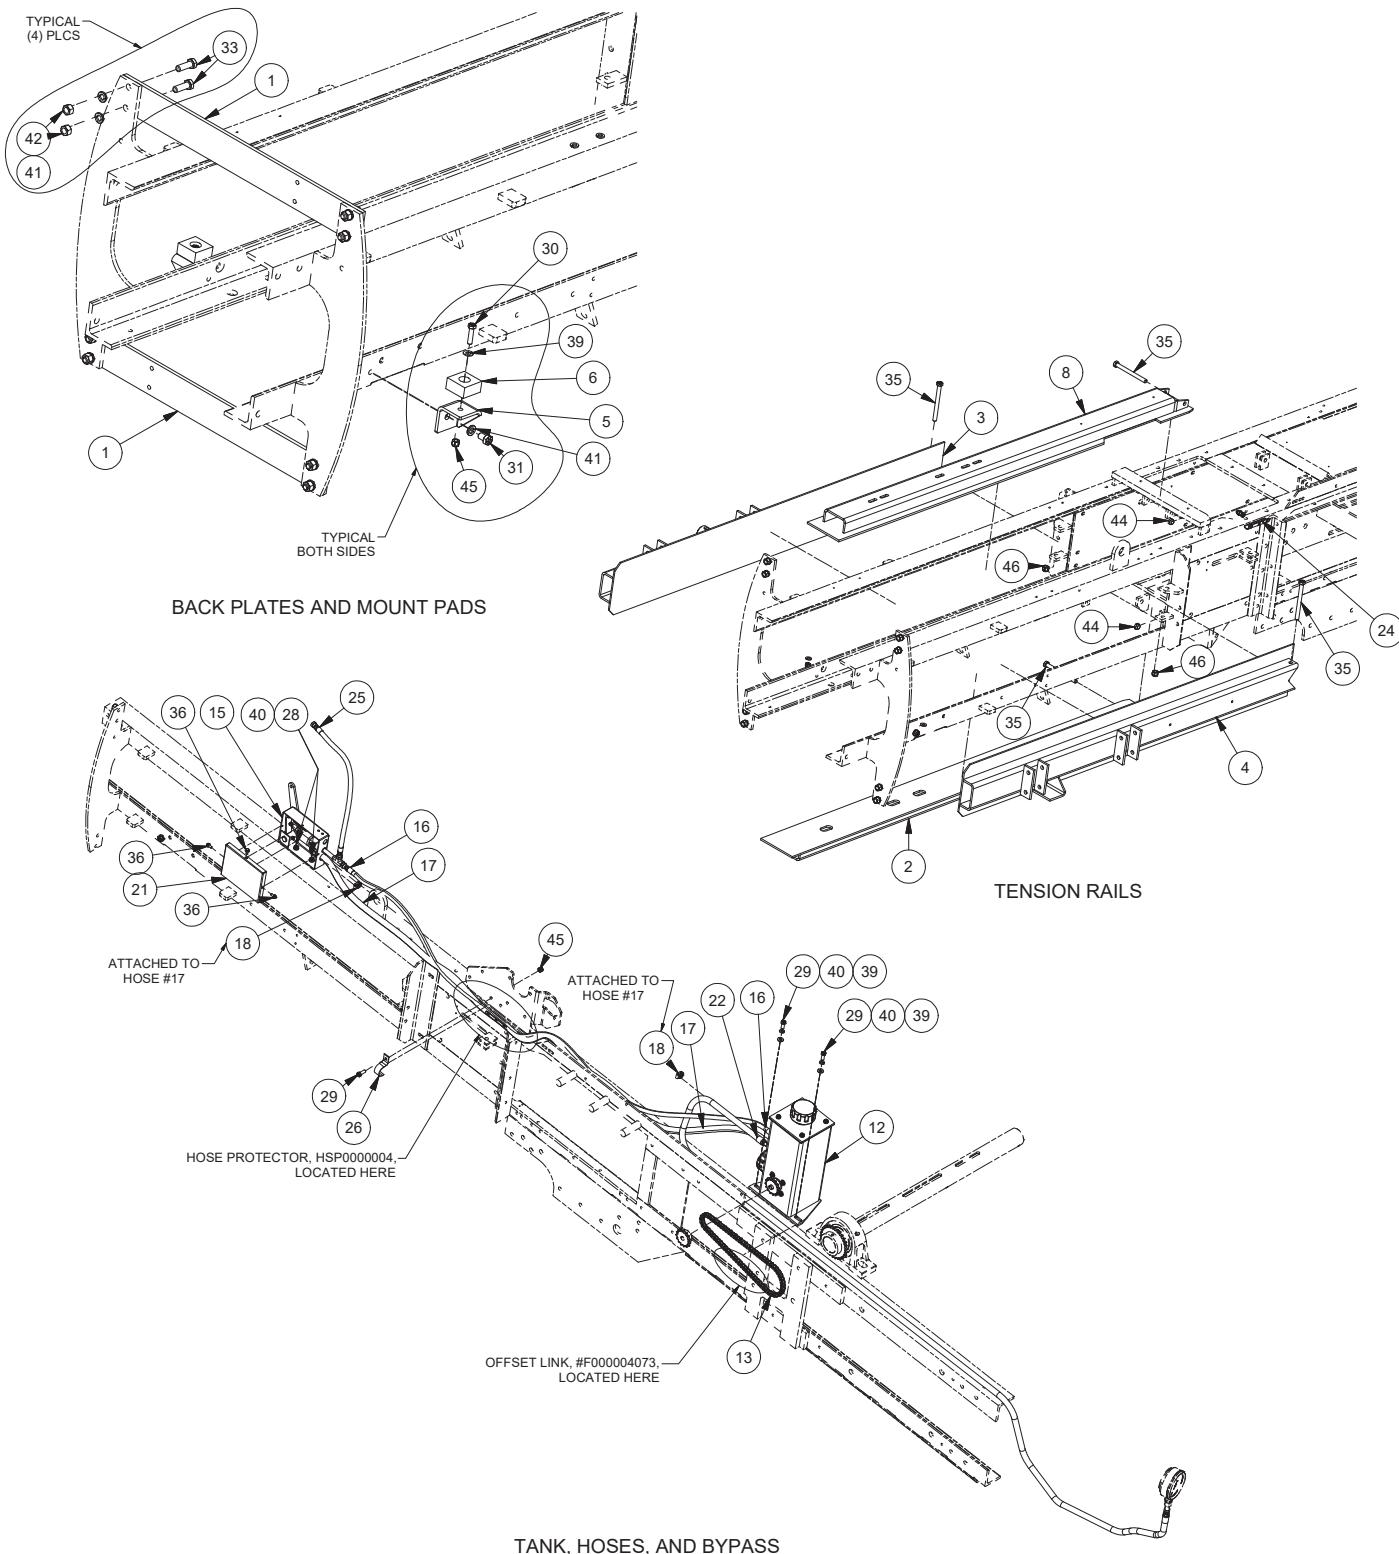

Tensioning/Rear Mounts Installation, 14" Chamber

Page 2 of 2

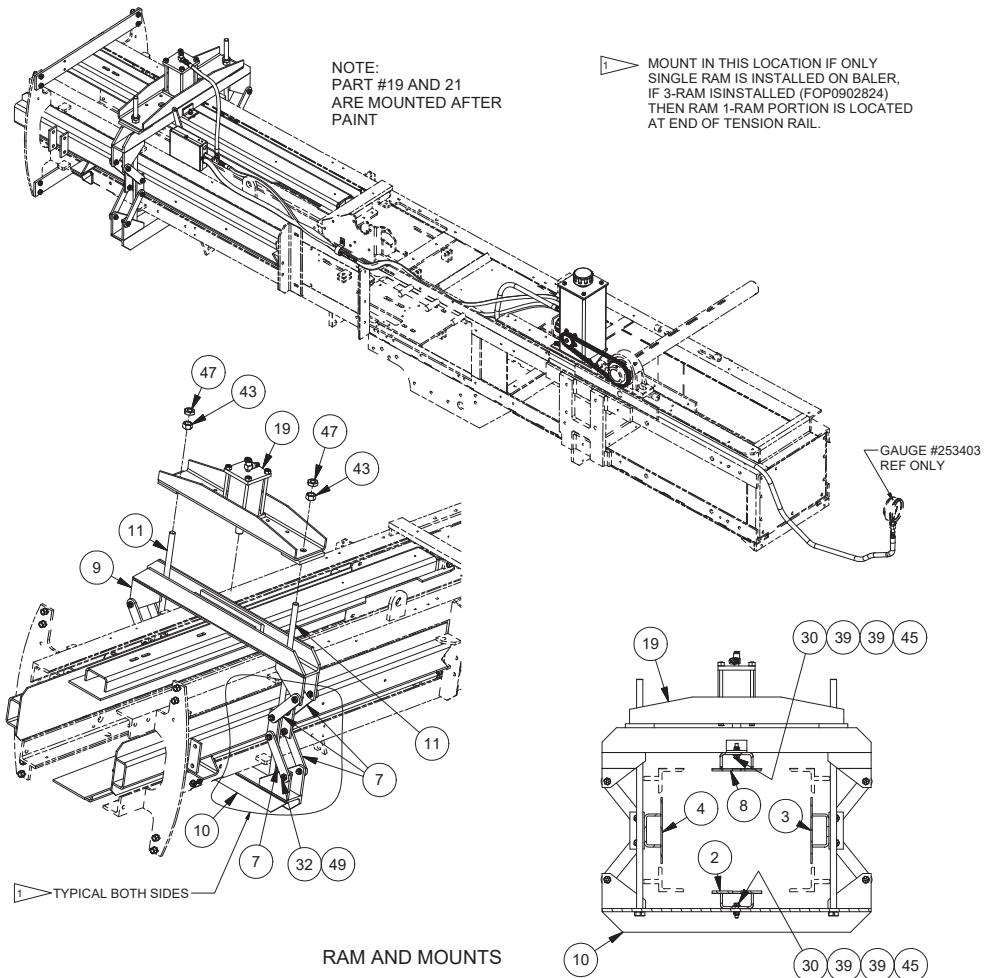

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902666 Tensioning/Rear Mnts Installation							
1	PLT0035098	2	. Plate, Upper	25	FT00000221	1	. Hose Assembly
2	TNS0009809	1	. Tension Rail, Bottom	26	CLP0000165	1	. Clamp, Jiffy
3	TNS037294D	1	. LH Rail Tension	28	R13811031	2	. Capscrew
4	TNS037295D	1	. RH Rail Tension	29	Y17C-0616	3	. Capscrew
5	902597	2	. Plate, Support	30	Y17C-0624	4	. Capscrew
6	PAD0018804	2	. Pad, Support	31	R13801840	2	. Capscrew
7	906611	8	. Plate, Linkage Bar	32	221563W	16	. Capscrew
8	TNS0009808	1	. Tension Rail Weldment, Top	33	200454W	8	. Capscrew
9	TNS0009677	1	. Tension Angle Weldment, Top	35	R13801857	4	. Capscrew
10	TNS0009676	1	. Tension Angle Weldment, Btm	36	SMS0000173	3	. Screw
11	F000600-14	2	. Bolt, Tension	39	15134W	8	. Washer
12	*a FT00015049	1	. Assembly, Pump/Tank	40	R13812514	4	. Lockwasher
13	FT00000556	1	. Assembly, Chain	41	234665	10	. Lockwasher
14	F000004073	1	. Link, Offset	42	221711W	8	. Hex Nut
15	*b FT00000192	1	. Bypass Box	43	221716W	2	. Hex Nut
16	FT00000225	1	. Hose Assembly	44	R13804125	2	. Locknut
17	FT00000191	1	. Hose, Bypass	45	237567	5	. Locknut
18	FT00000252	2	. Hose Clamp	46	223587	2	. Locknut
19	*c FT00000279	1	. Ram Assembly, Single	47	247008	2	. Jam Nut
21	FT00000050	1	. Cover Plate	49	NEJ0000500	16	. Nut, Esna
22	HOS0027946	1	. Hose Assembly				
24	HSP0000004	1	. Hose Protector				

*a See Separate Coverage (Page 2-15)


*b See Separate Coverage (Page 2-16)

*c See Separate Coverage (Page 2-21)

Rev G


Tensioning/Rear Mounts Installation, 16" Chamber

Page 1 of 2

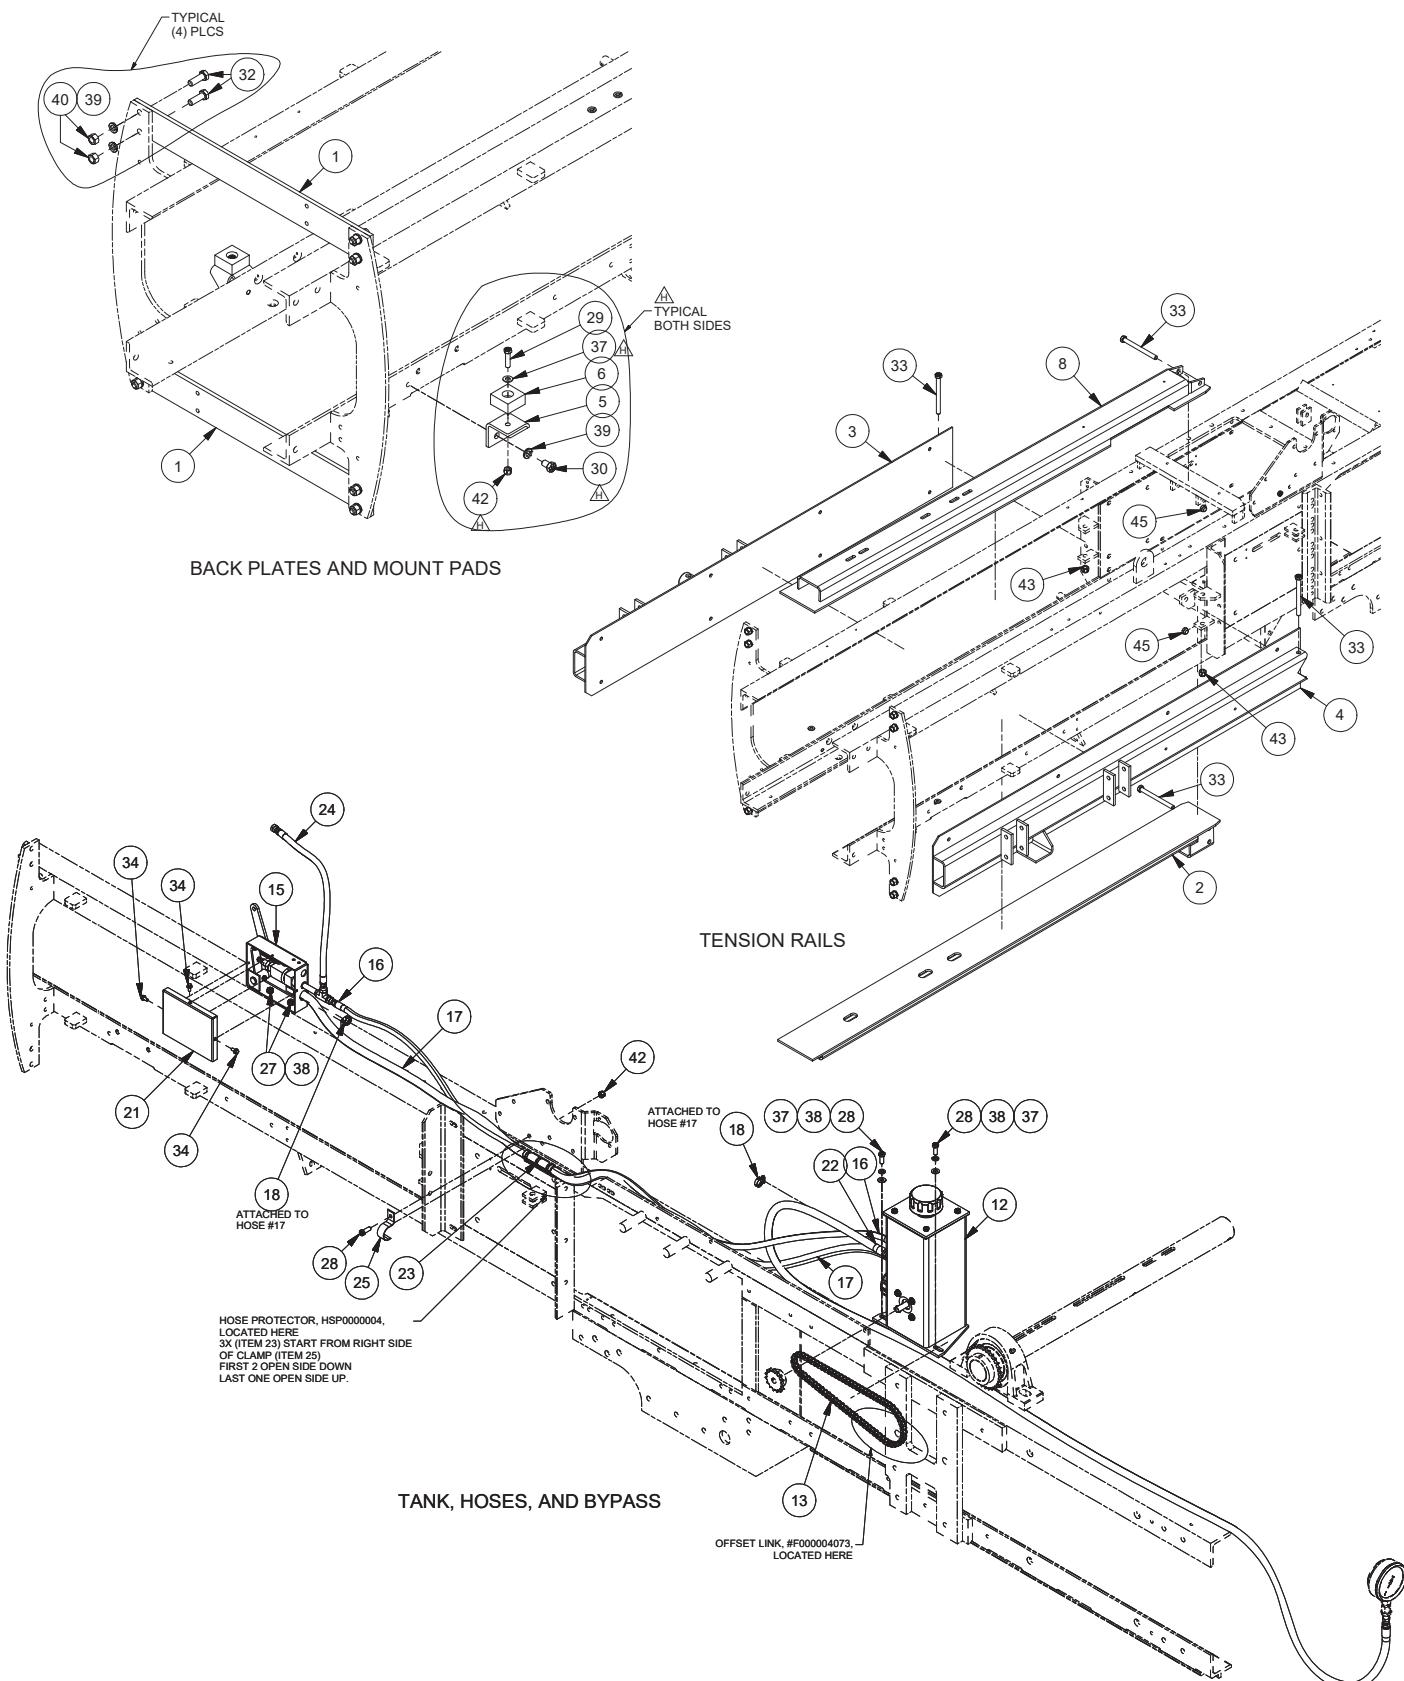


Tensioning/Rear Mounts Installation, 16" Chamber

Page 2 of 2

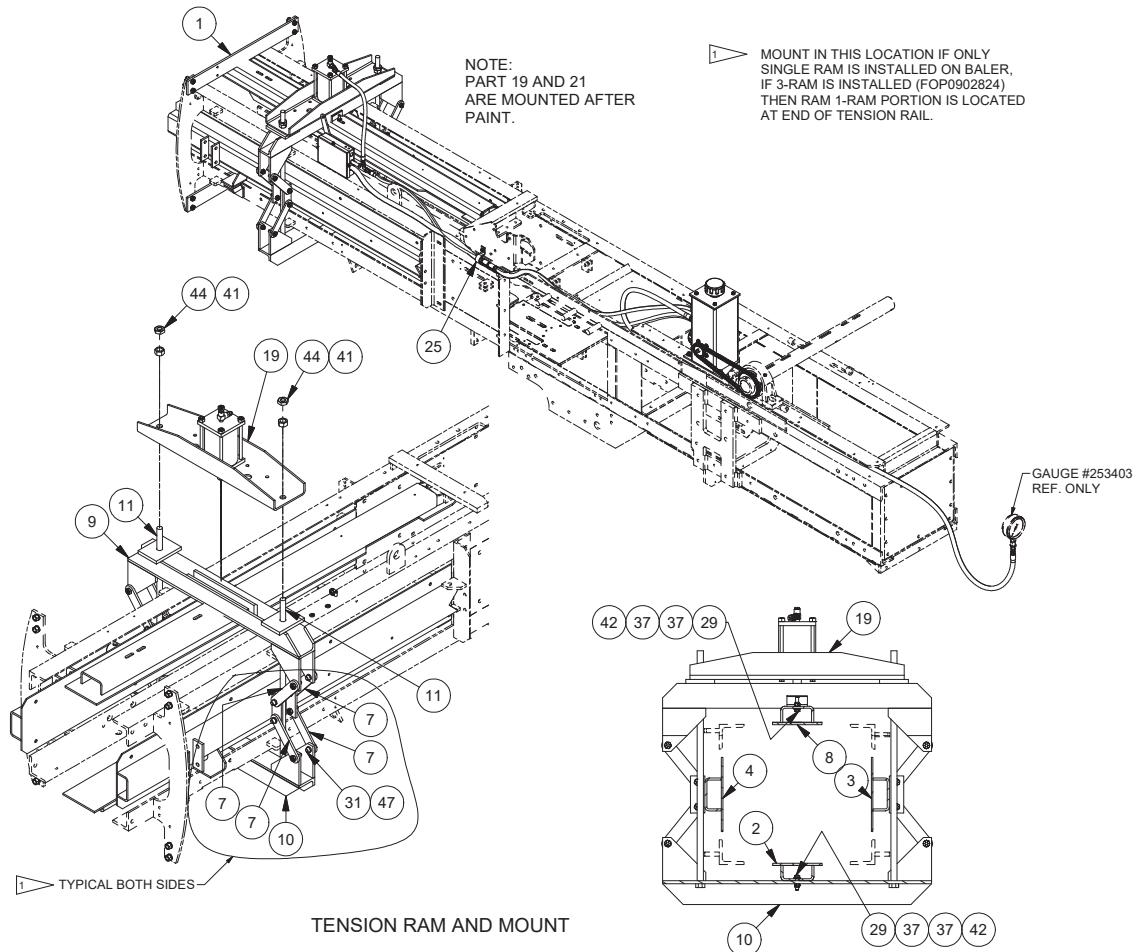

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902665 Tensioning/Rear Mnts Installation							
1	PLT0035098	2	. Plate, Upper	25	CLP0000165	1	. Clamp, Jiffy
2	TNS0009809	1	. Bottom Tension Rail	27	R13811031	2	. Capscrew
3	TNS0018902	1	. LH Tension Rail	28	Y17C-0616	3	. Capscrew
4	TNS0018903	1	. RH Tension Rail	29	Y17C-0624	4	. Capscrew
5	MNT037760B	2	. Plate, Support	30	R13801840	2	. Capscrew
6	PAD0018804	2	. Pad, Support	31	221563W	16	. Capscrew
7	906611	8	. Plate, Linkage Bar	32	200454W	8	. Capscrew
8	TNS0009808	1	. Tension Rail Weldment, Top	33	R13801857	4	. Capscrew
9	TNS0007120	1	. Tension Angle Weldment, Top	34	SMS0000173	3	. Screw
10	TNS0007119	1	. Tension Angle Weldment, Btm	37	R13802623	4	. Use 15134W
11	F000000600	2	. Bolt, Tension	38	R13812514	4	. Lockwasher
12 *a	FT000015049	1	. Assembly, Pump/Tank	39	234665	10	. Lockwasher
13	FT00000556	1	. Assembly, Chain	40	221711W	8	. Hex Nut
14	F000004073	1	. Link, Offset	41	221716W	2	. Hex Nut
15 *b	FT00000192	1	. Bypass Box	42	237567	5	. Locknut
16	FT00000225	1	. Hose Assembly	43	223587	2	. Locknut
17	FT00000191	1	. Hose, Bypass	44	247008	2	. Jam Nut
18	FT00000252	2	. Hose Clamp	45	R13804125	2	. Locknut
19 *c	FT00000279	1	. Ram Assembly, Single	47	NEJ0000500	16	. Nut, Esna
21	FT00000050	1	. Cover Plate	*a See Separate Coverage (Page 2-15)			
22	HOS0027946	1	. Hose Assembly	*b See Separate Coverage (Page 2-16)			
23	HSP0000004	3	. Hose Protector	*c See Separate Coverage (Page 2-21)			
24	FT00000221	1	. Hose Assembly				


Pump Tank Assembly

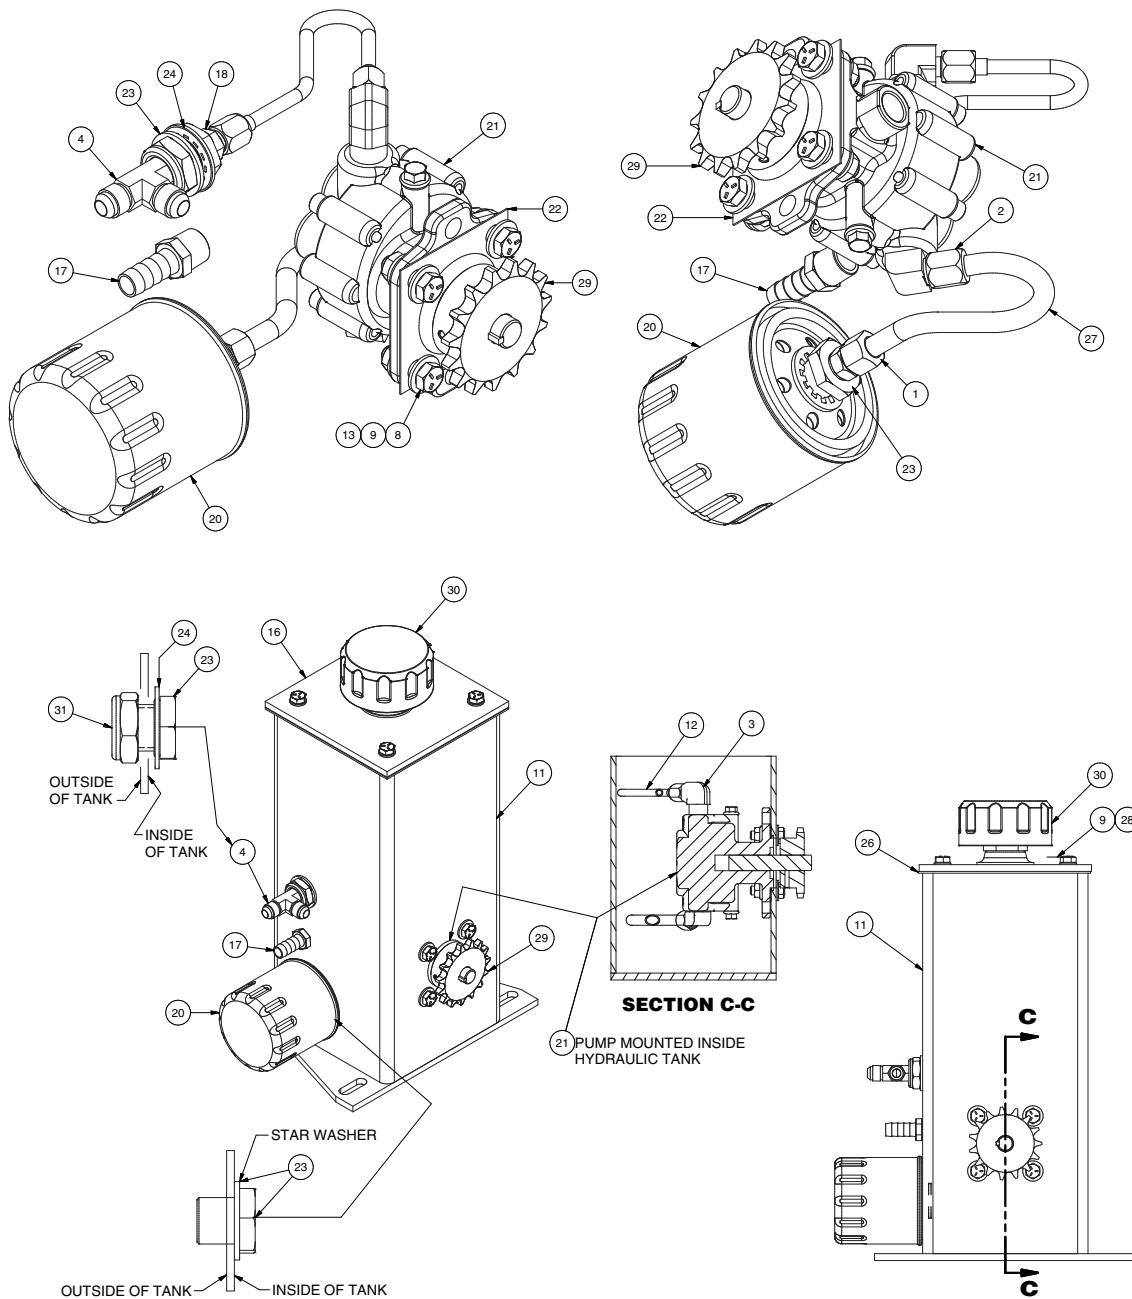

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FT00015049		Pump/Tank Assembly				
1	HYD0068030	1	. Fitting	20	FT00000546	1	. Filter, Pump
2	HYD0069033	1	. Fitting	21	FT00000547	1	. Control, Pump
3	15280	1	. Fitting	22	FT00000548	1	. Gasket
4	209452	1	. Fitting	23	FT00000549	2	. Fitting
8	00273802	4	. Nut	24	12434	1	. Washer
9	18497W	8	. Capscrew	26	F000008198	1	. Gasket F/Auto Luber Tank
11	903651	1	. Tank, Ten Control	27	903652	1	. Tube, Filter Line
12	903653	1	. Tube Assembly	28	214479	4	. Seal
13	WAS0725002	4	. Washer, Copper	29	FT00000555	1	. Drive Sprocket
16	903642	1	. Cover	30	FT00000530	1	. Breather Cap
17	FT00000193	1	. Coupler	31	906920	1	. Nut, Jam
18	209752	1	. Fitting				

Rev L

Tension Bypass Box Assembly

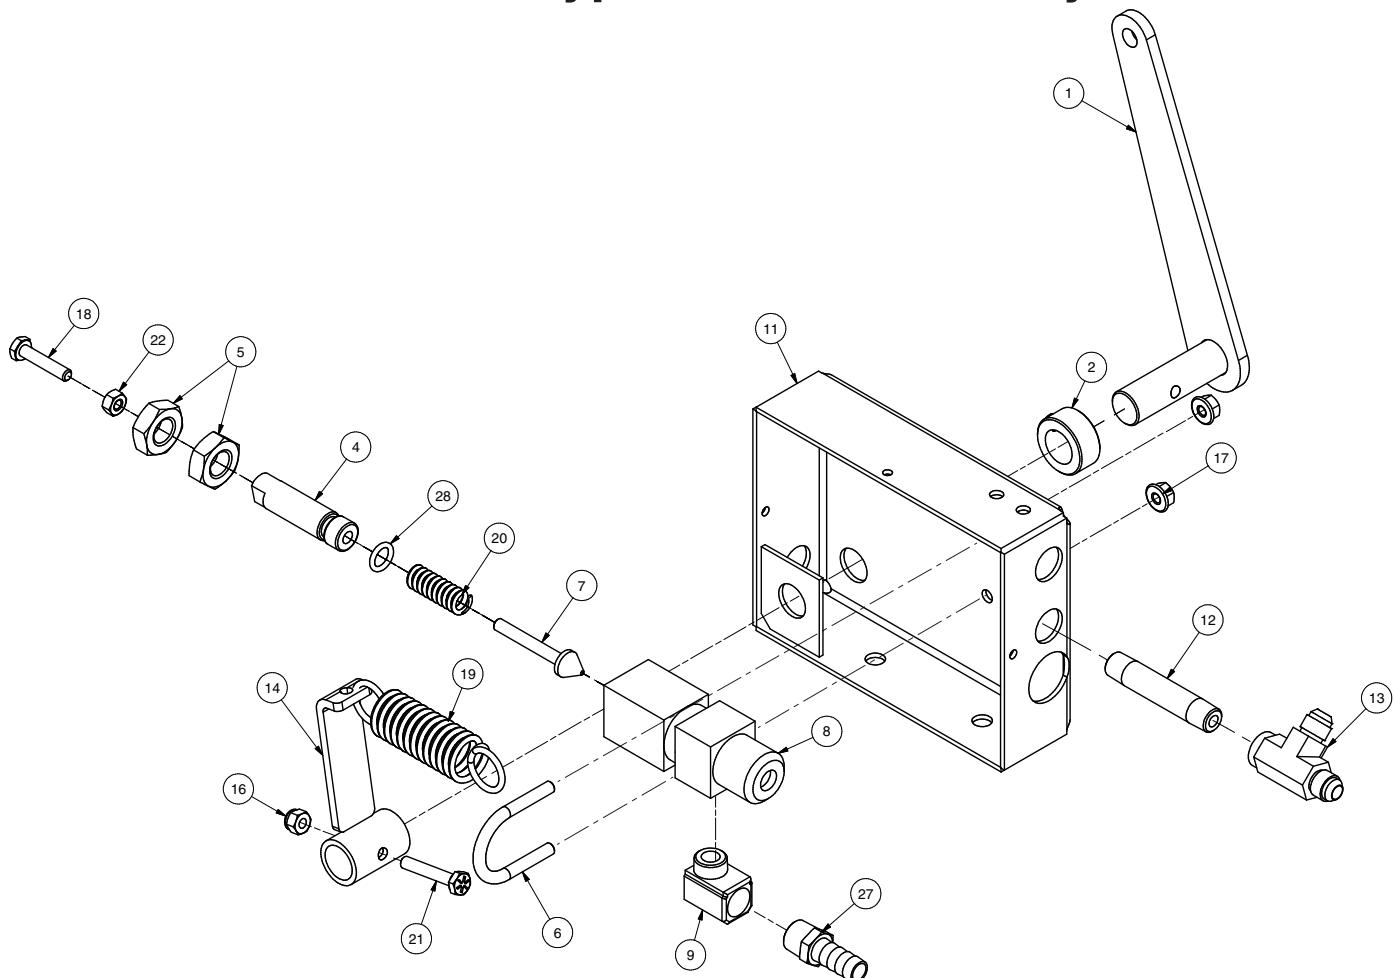



See Page 2-26,
Detail "B", For
Cable/Spring
Connection

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FT00000192		Box Assembly, Bypass				
1	ARM0033234	1	. Arm, Pen	14	FT00000245	1	. Lever
2	F000000172	1	. Set Collar	15	FT00000252	2	. Hose Clamp
3	* FT00000053	1	. O-Ring -Bypass	16	235620	1	. Nut
4	* FT00000054	1	. Plunger	17	09416918	2	. Nut
5	* FT00000055	2	. Jam Nut	18	* R13801782	1	. Capscrew
6	FT00000058	1	. U-Bolt	19	SPG0013399	1	. Tension Control Adjust Spring
7	* FT00000087	1	. Pin, Check	20	* SPG0013400	1	. Spring-Bypass Check Pin
8	* FT00000184	1	. Valve Assembly	21	R13801783	1	. Capscrew
9	* FT00000188	1	. Street Elbow	22	* 221703W	1	. Hex Nut
10	* FT00000193	1	. Coupler	27	FT00000193	1	. Coupler
11	FT00000194	1	. Tension Control By-Pass Box	28	FT00000053	1	. O-Ring, Bypass
12	FT00000223	1	. Heavy Blk Nipple				
13	FT00000224	1	. Npt Female Run Tee				

* Included in Kit FT00000280, Bypass Assy, Complete

Rev K

Tandem Tension, 3 Ram, 14" 2-Tie

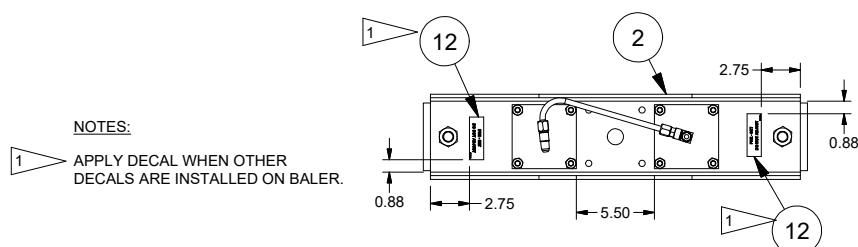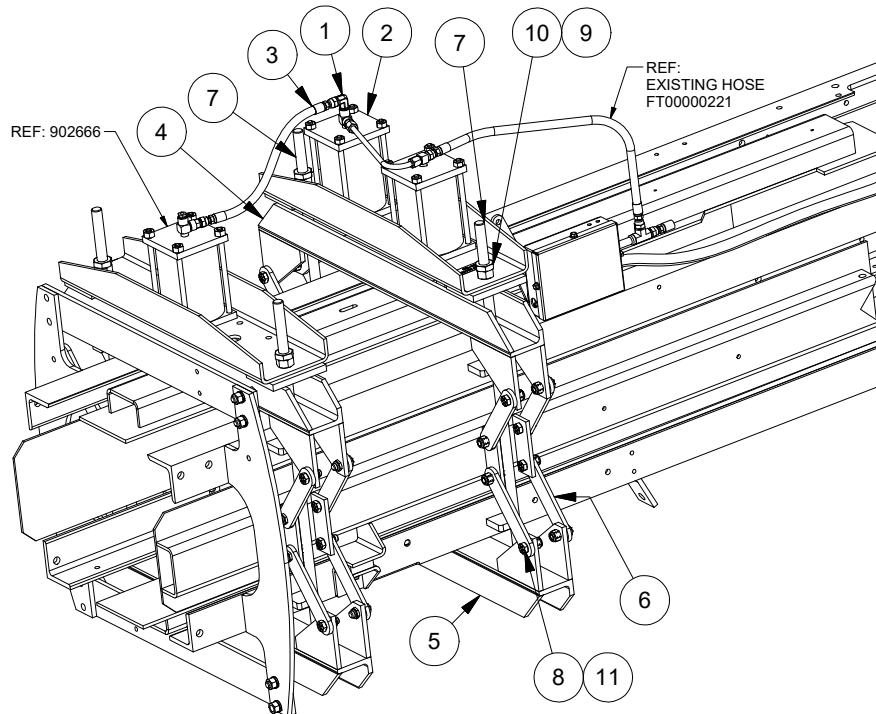


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
FOP0902824			Tandem Tension	8	221563W	16	. Capscrew
1	209409	1	. Fitting	9	221716W	2	. Nut
2	*a FT00000278	1	. Ram Assembly, Dual	10	247008	2	. Nut
3	FT00000221	1	. Hose Assembly	11	223587	16	. Nut
4	TNS0009677	1	. Tension Angle, Top	12	FD00028004	2	. Decal, Preset - Do Not Adjust
5	TNS0009676	1	. Tension Angle, Bottom				
6	906611	8	. Plate, Linkage Bar				
7	F000600-14	2	. Tension Bolt				

*a See Separate Coverage (Page 2-20)

Rev E

Frame and Tension System

Tandem Tension, 3 Ram, 16" 2-Tie

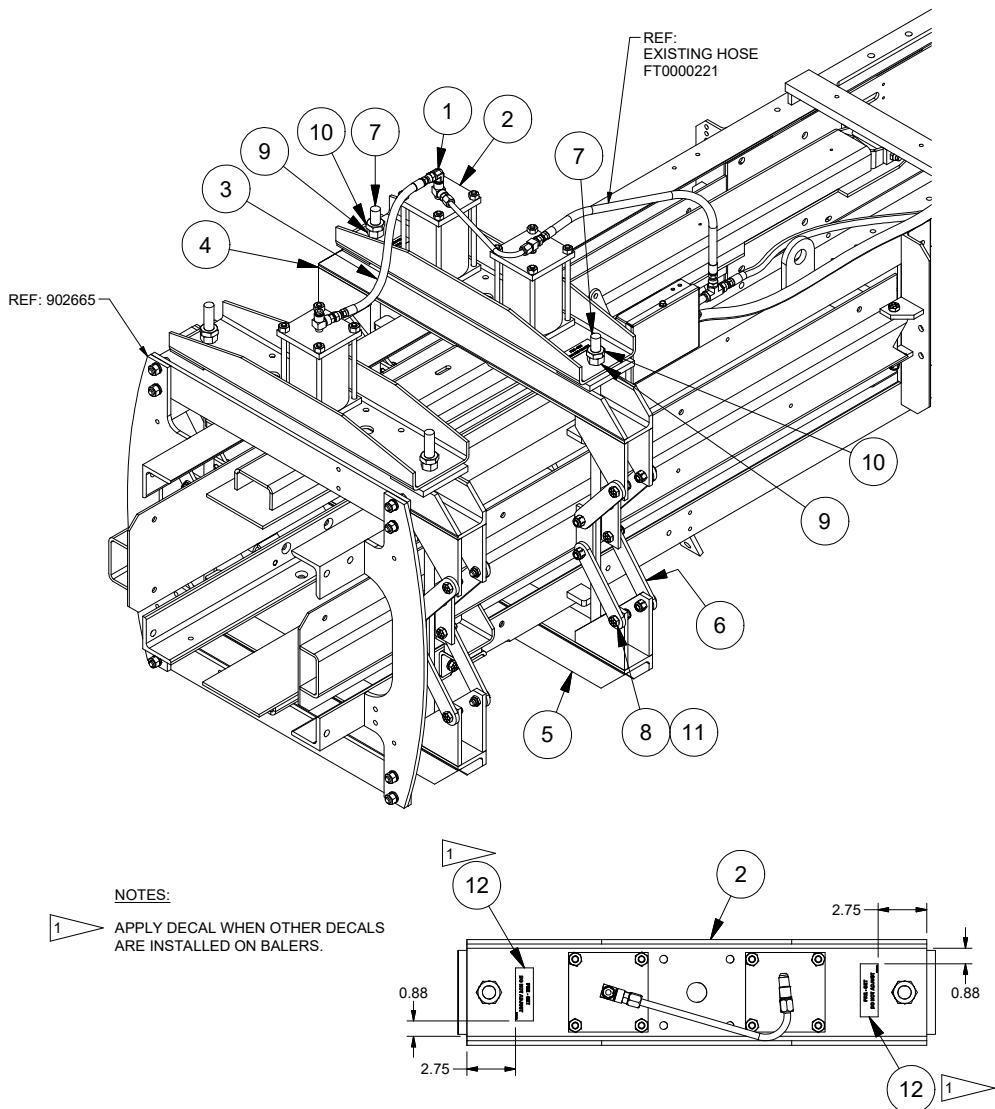


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000144		Tandem Tension-3 Ram, 16" 2 Tie				
1	209409	1	. Fitting	7	F000000600	2	. Bolt, Tension
2	*a FT00000278	1	. Ram Assembly, Dual	8	221563W	16	. Capscrew
3	FT00000221	1	. Hose Assembly	9	221716W	2	. Hex Nut
4	TNS0007120	1	. Tension Angle Weldment,Top	10	247008	2	. Jam Nut
5	TNS0007119	1	. Tension Angle Weldment,Bottom	11	223587	16	. Locknut
6	906611	8	. Plate, Linkage Bar	12	FD00028004	2	. Decal, Pre-set Do Not Adjust

*a See Separate Coverage (Page 2-20)


Rev E

Dual Tension Rams

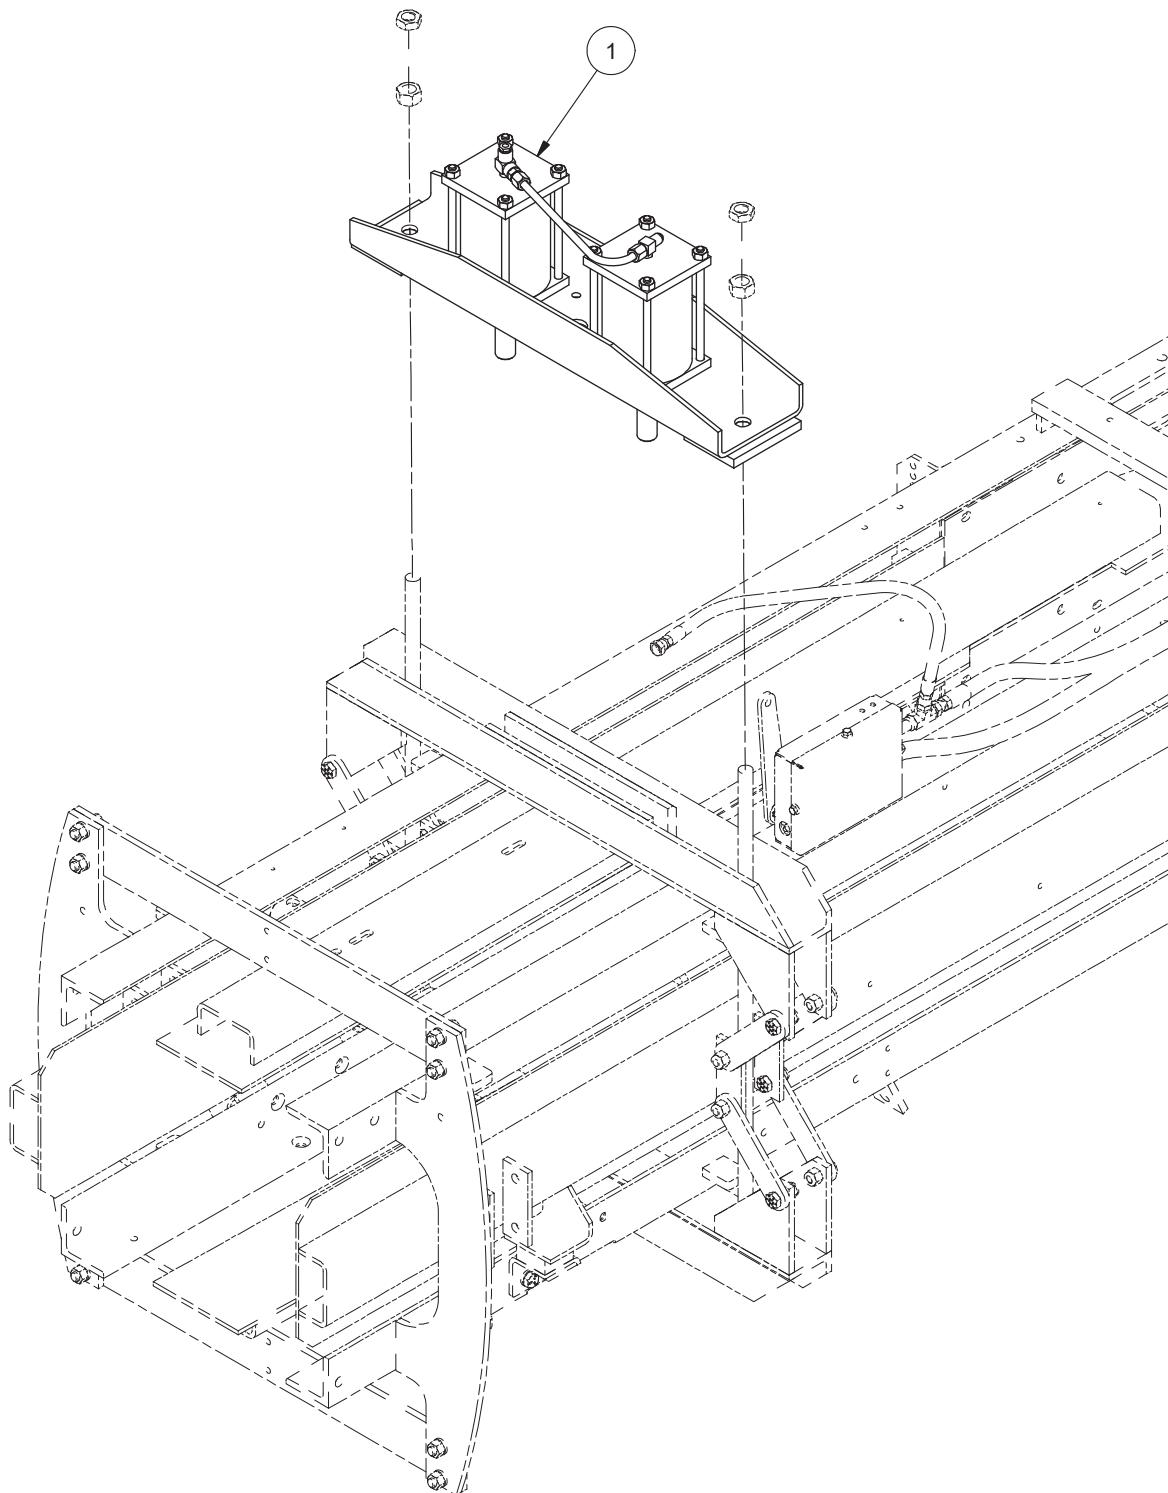


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	FOP0000120 FT00000278	1	Dual Tension Rams 270/275 . Ram Assembly, Dual (Page 2-20)				

Ram Assembly, Dual

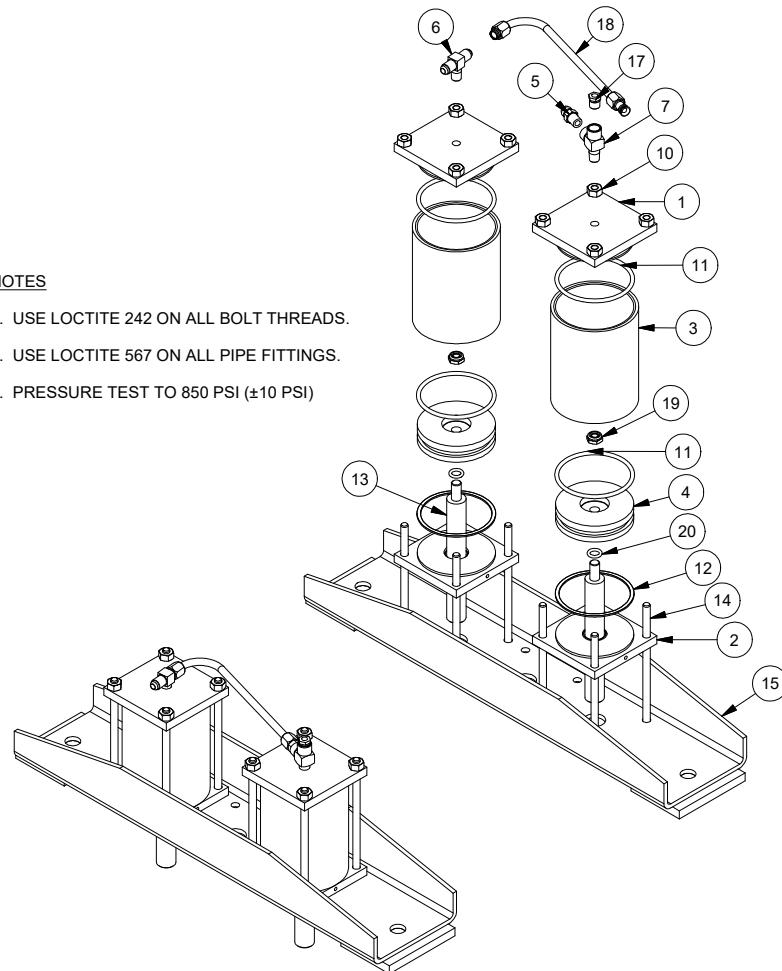

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FT00000278		Ram Assembly, Dual				
1	CYL0013276	2	. Plate, Cylinder Head	12	Y076800-342	2	. Back-Up Ring
2	CYL0013277	2	. 4" Tension Cylinder Base Plate	13	ROD0013505	2	. Rod, Cylinder Tension
3	CYL0013278	2	. Tube, Cylinder	14	SFC0000321	8	. Capscrew
4	CYL0013279	2	. Piston	15	TNS0013283	1	. Tens Ram Frame F/4" Cylinders
5	209754	1	. Fitting	17	209512	1	. Fitting
6	FT00000220	1	. Fitting	18	FT00000230	1	. Tube Assembly
7	225105	1	. Fitting	19	NEJ0005000	2	. Nut, Esna Jam
10	223453	8	. Hex Nut	20	2305351W	2	. O-Ring
11	RNG0002342	4	. O-Ring				Rev E

Ram Assembly, Single

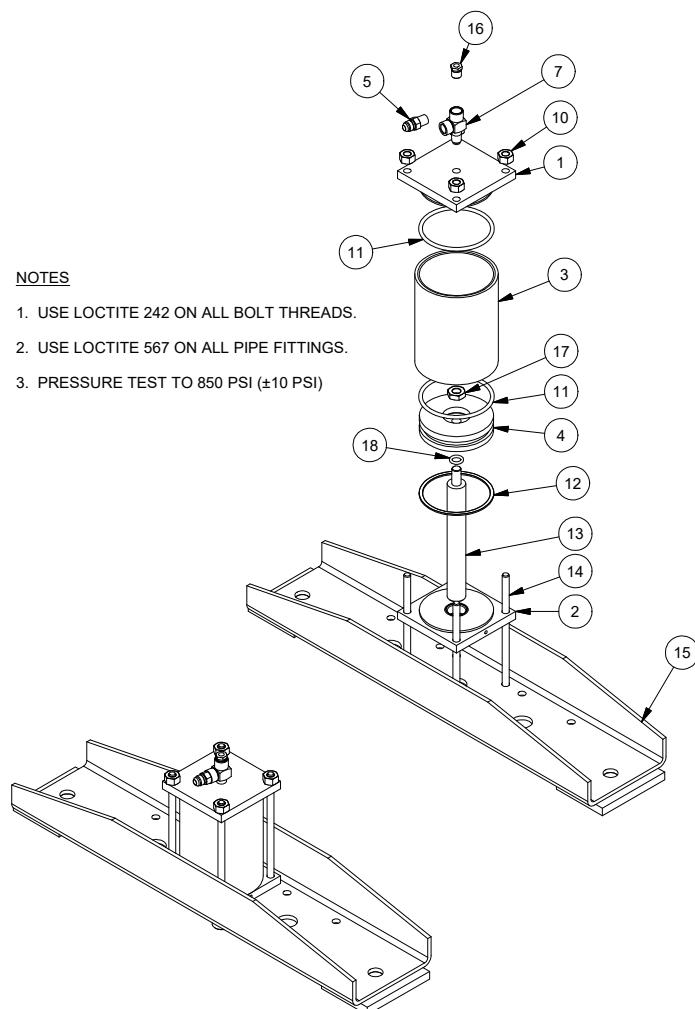


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FT00000279		Ram Assembly, Single				
1	CYL0013276	1	. Plate, Cylinder Head	12	Y076800-342	1	. Back-Up Ring
2	CYL0013277	1	. 4" Tension Cylinder Base Plate	13	ROD0013505	1	. Rod, Cylinder Tension
3	CYL0013278	1	. Tube, Cylinder	14	SFC0000321	4	. Capscrew
4	CYL0013279	1	. Piston	15	TNS0013283	1	. Tens Ram Frame F/4" Cylinders
5	209754	1	. Fitting	16	209512	1	. Fitting
7	225105	1	. Fitting	17	234218	1	. Jam Nut
10	223453	4	. Hex Nut	18	2305351W	1	. O-Ring
11	RNG0002342	2	. O-Ring				

Rev E

Auto Tension Release

Page 1 of 2

- 1 ▶ SET RELEASE AT 1/8" WHEN KNOTTER IS AT TOP DEAD CENTER
- 2 ▶ ADJUST INITIAL SETTING WITH THIS ROD
- 3 ▶ ONLY USE FOR ADJUSTMENT IF INITIAL SETTING WITH NOTE #2 CAN NOT BE ACHEIVED.
- 4. PRESSURE OF TENSION SYSTEM SHOULD DROP 150-200 PSI WHEN KNOTTER CYCLES

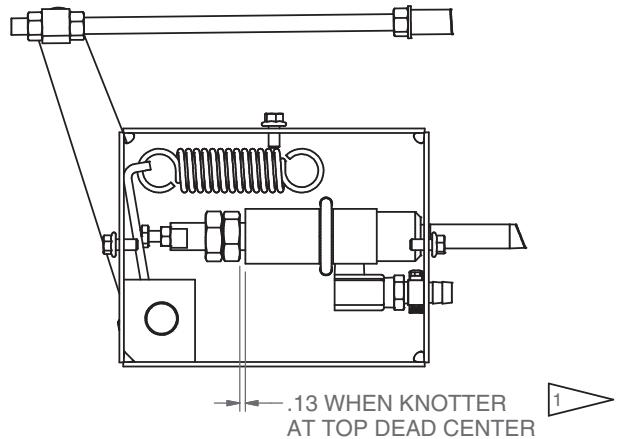

DETAIL A

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000154		Tension Release, Auto				
1	*a 902840	1	. Linkage Sub-Assembly, Upper	9	237567	1	. Locknut
2	00103384	3	. Cotter Pin	10	R13811042	1	. Capscrew
3	*b 902903	1	. Linkage Sub-Assembly, Lower	11	R13812514	1	. Lockwasher
4	F000000246	1	. Washer	12	F000007587	2	. Seal
7	FT00000240	1	. Lever	13	221767W	2	. Flat Washer
8	F000007585	1	. Sleeve, Lever				


Rev EM

*a See Separate Coverage (Page 2-24)


*b See Separate Coverage (Page 2-25)

Auto Tension Release

Page 2 of 2

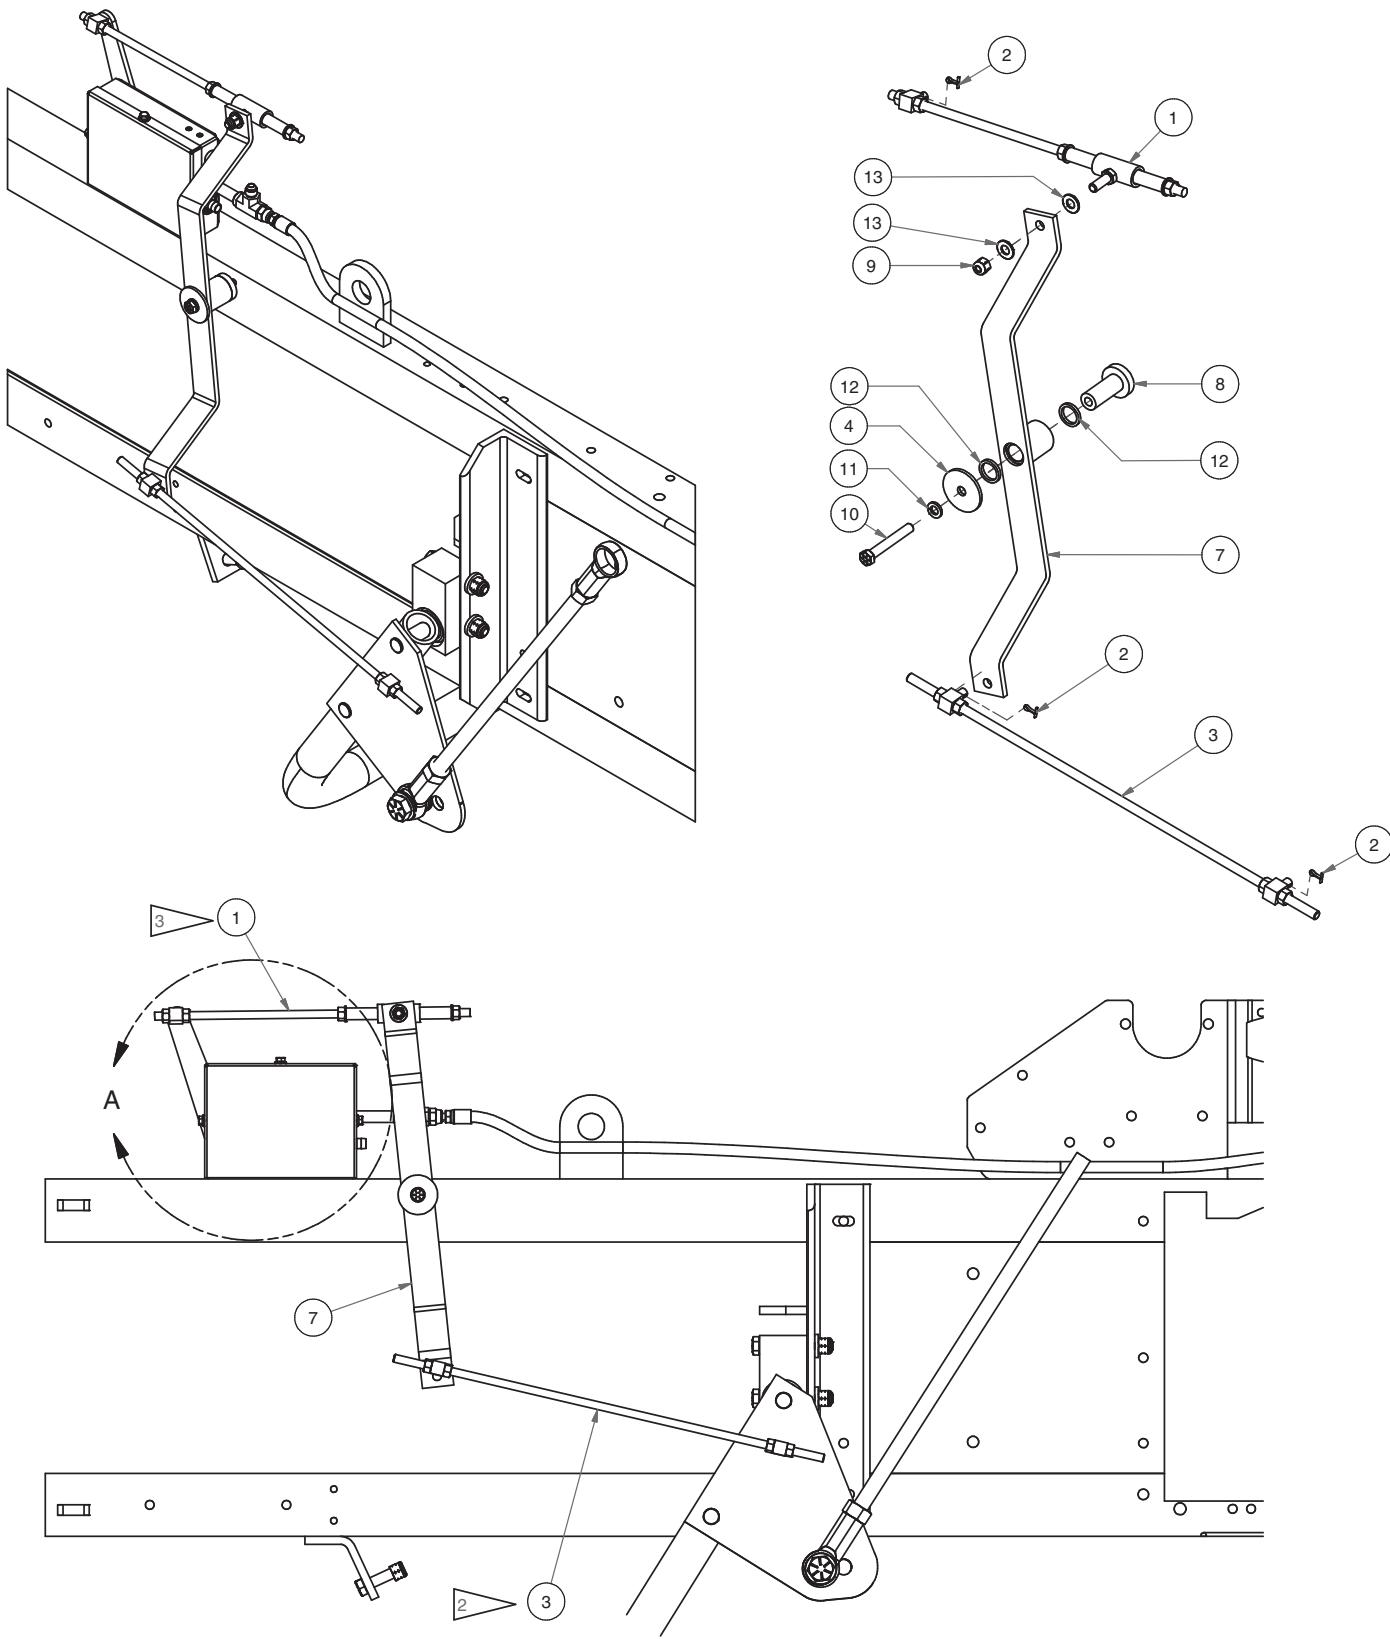


Upper Linkage Sub Assembly

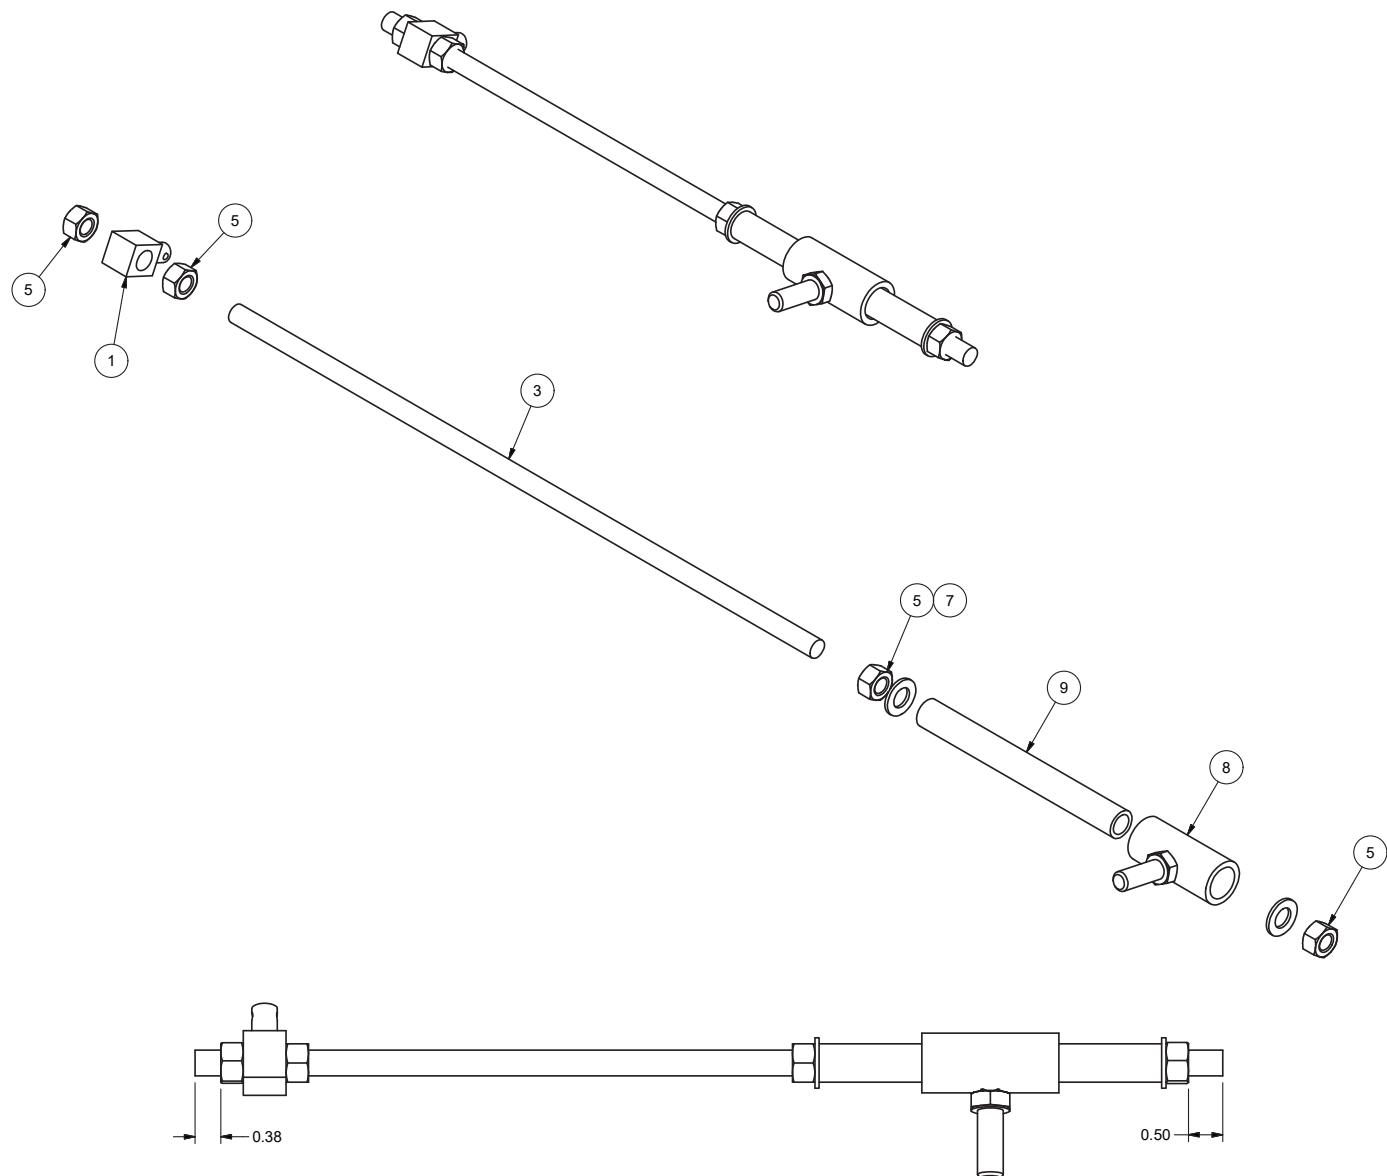

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902840			Linkage Sub-Assembly, Upper				
1	F000000159	1	. Block, Link	7	221767W	2	. Washer
3	FT00000239	1	. Rod	8	FT00000244	1	. Tension Release Rod Guide
5	221707W	4	. Hex Nut	9	FT00000243	1	. Tension Release Rod Sleeve

Rev BB


Lower Linkage Sub Assembly

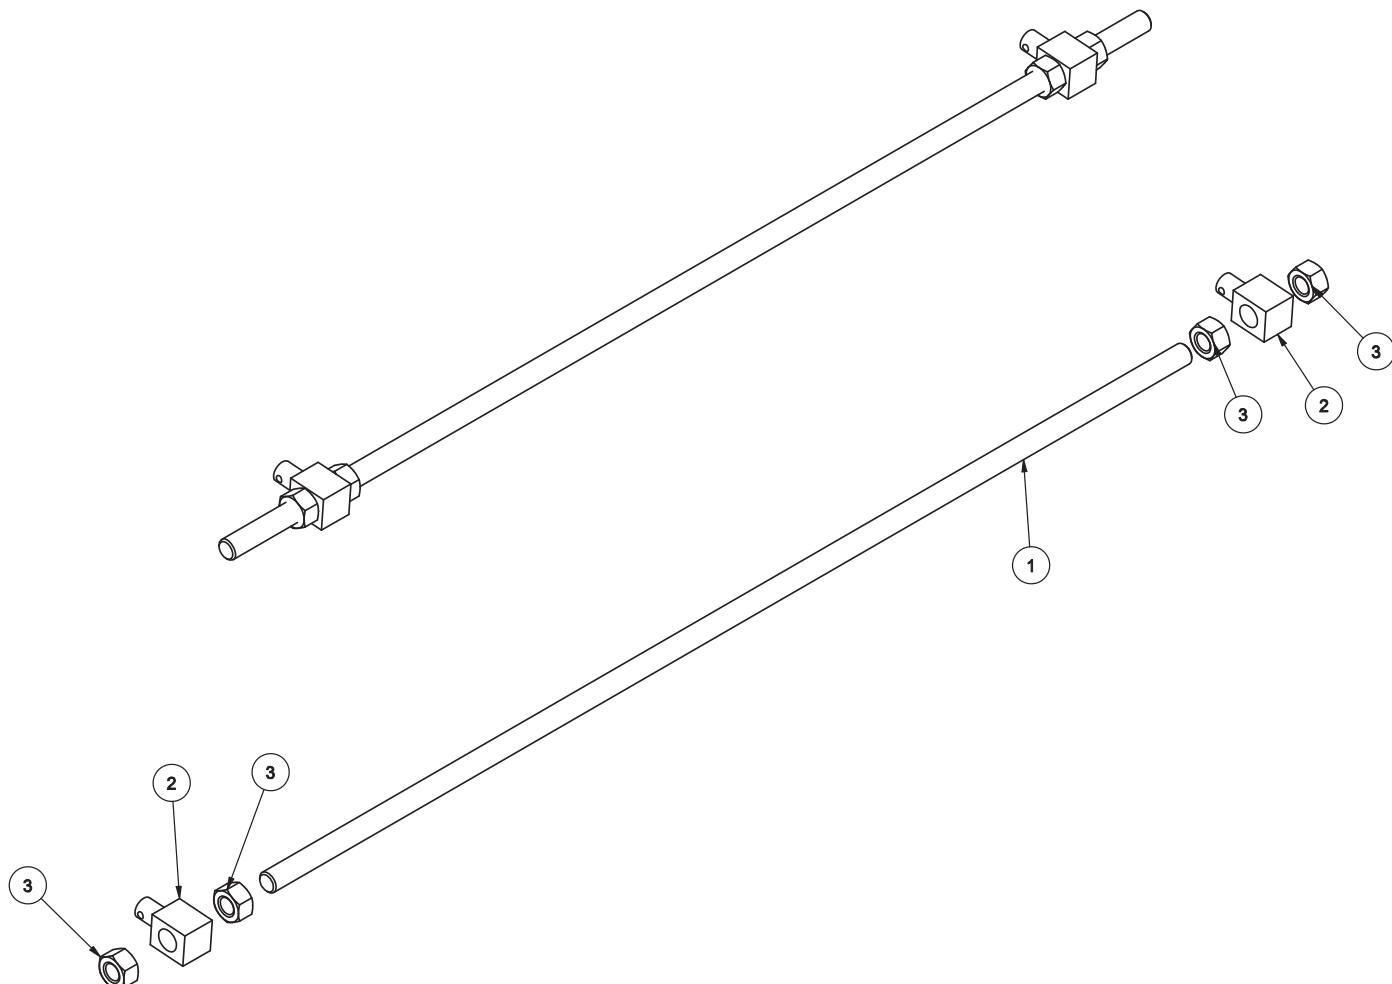

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	902903 F000000159	2	Linkage Sub-Assembly, Lower . Block, Link	2	FT00000241	1	. Rod, Tension Release
				3	221707W	4	. Hex Nut


Rev AA

Throttle/Tension Control Box Installation, Engine

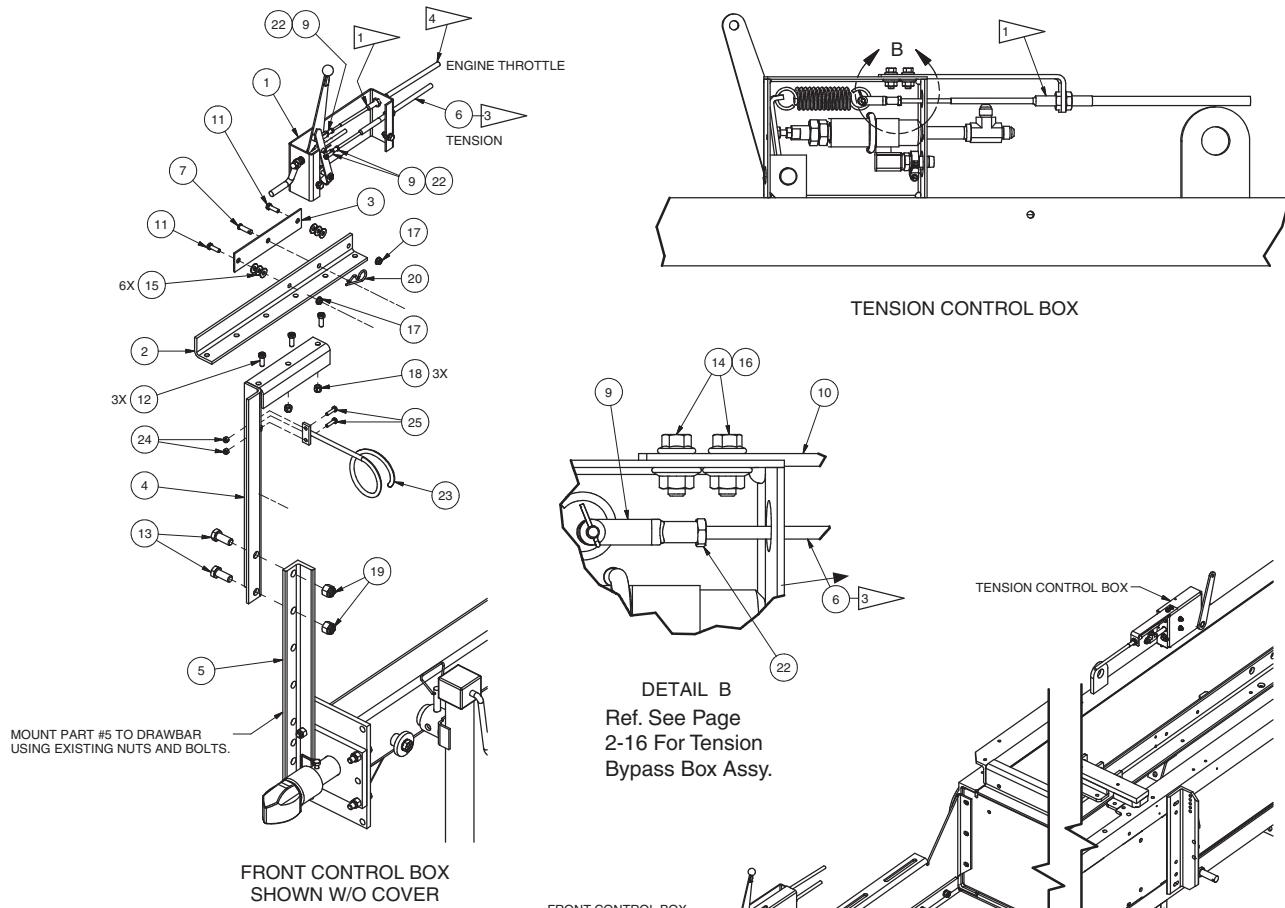

NOTES

- 1 SET FOR MAXIMUM CABLE MOVEMENT
LEAVE 2 THREADS SHOWING AT EACH
END OF CABLE, NO FURTHER ADJUSTMENT
NECESSARY.
- 3 CLEVIS (CLV0125001) AND NUT (R13812544) ARE
REQUIRED ON EACH END OF CABLE.
- 4 EACH END OF THE THROTTLE
CABLE IS CONNECTED USING A CLEVIS AND NUT. CLEVIS
AND NUT CONNECT TO ENGINE PROVIDED WITH ENGINE
ASSY.

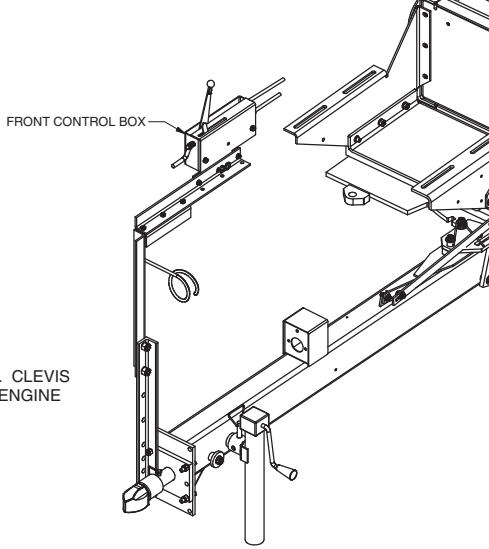


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902828							
1	*a SALPT00023	1	Throttle/Tension Cntrl Box Install	14	SMS0000300	2	. Screw, Ser Flg
2	STN0004937	1	. Control Box Assembly	15	223428	6	. Washer
3	F000001018	1	. Mounting Plate	16	09416918	2	. Nut, Serrated
4	STN0004941	1	. Mounting Plate	17	00273802	2	. Nut, Serrated
5	STN0004939	1	. Tension Control Standard	18	237567	3	. Locknut
6	CBL1743324	1	. Bracket, Control Box Stand	19	Y17D-10	2	. Nut, Esna
7	F000001020	1	. Cable, Control	20	F000001019	1	. Hairpin Cotter
9	CLV0125001	3	. Clevis Pin	22	220044	3	. Hex Nut
10	BKT0024669	1	. Clevis	23	905196	1	. Holder
11	R13811014	2	. Bracket	24	15113W	2	. Nut, Esna
12	Y17C-0616	3	. Capscrew	25	R13810993	2	. Capscrew
13	Y17C-1024	2	. Capscrew				

*a See Separate Coverage Page 2-27

Rev F

Throttle/Tension Control Box Assembly, Engine


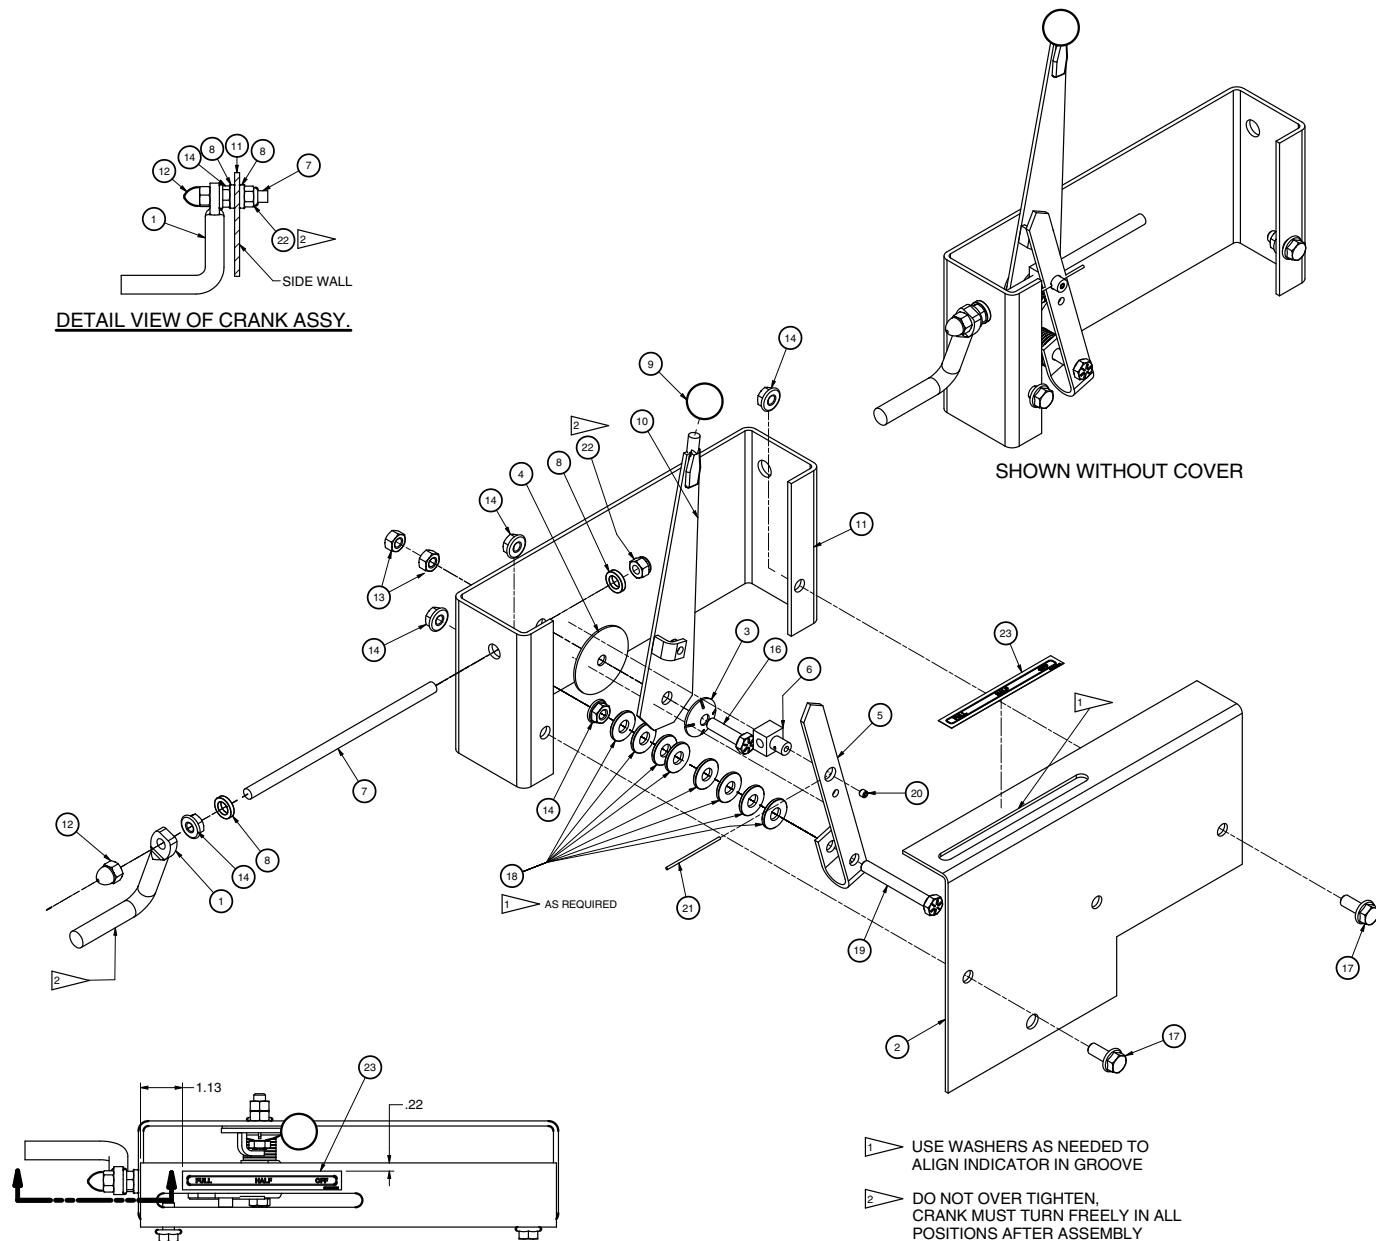


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
SALPT00023 Control Box Assembly							
1	CRA0018809	1	. Rod, Crank	12	NCA0003125	1	. Nut, Acorn
2	CVR0024670	1	. Control Box Cover	13	R13811512	2	. Hex Nut
3	F000001002	1	. Conical Washer	14	00273802	5	. Nut, Serrated
4	F000001003	1	. Disc, Friction	16	R13811015	1	. Capscrew
5	F000001004	1	. Bar, Indicator	17	SMS0000184	2	. Screw, Ser Flg
6	F000001005	1	. Adjusting Stud Nut	18	18515W	8	. Washer
7	F000001006	1	. Rod	19	R13811020	1	. Capscrew
8	905968	2	. Washer, Brass	20	STS1032251	1	. Set Screw
9	F000005554	1	. Knob	21	WIR0150072	1'	. Wire
10	LEV0023762	1	. Lever, Throttle	22	223588	1	. Nut, Esna
11	MNT0024671	1	. Plate, Control Box	23	FD000000001	1	. Decal, Full--Half--Off

Rev G

Throttle/Tension Control Box Installation, Driveline

Page 1 of 2

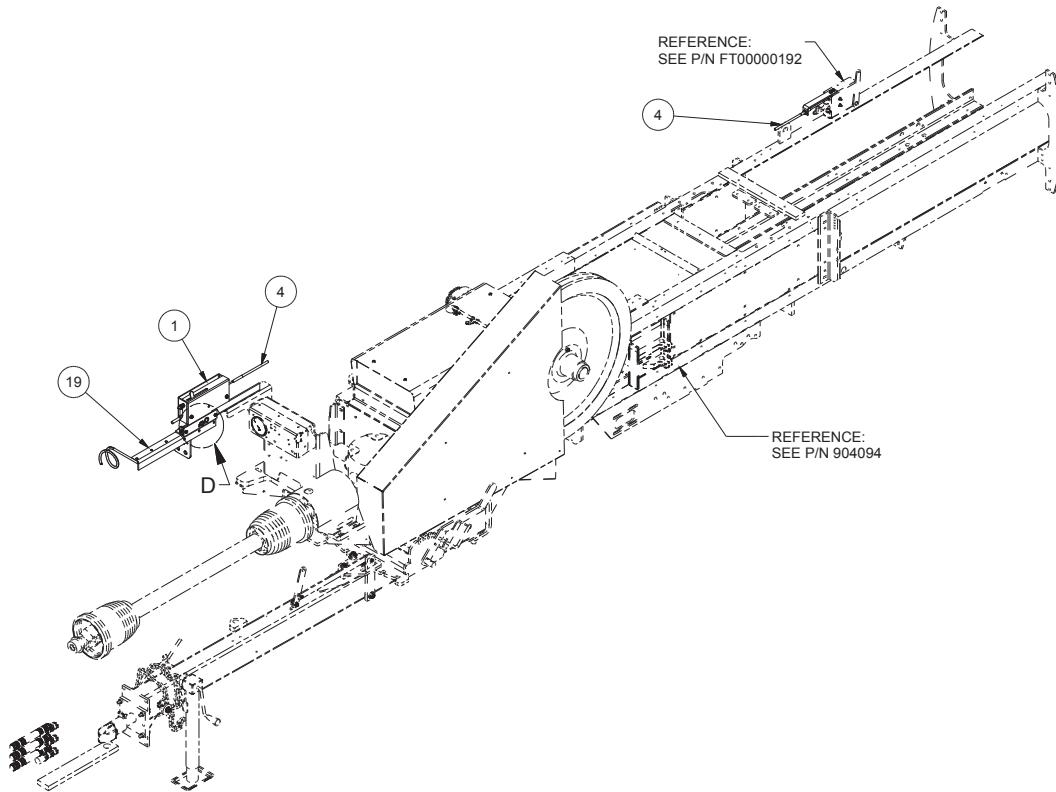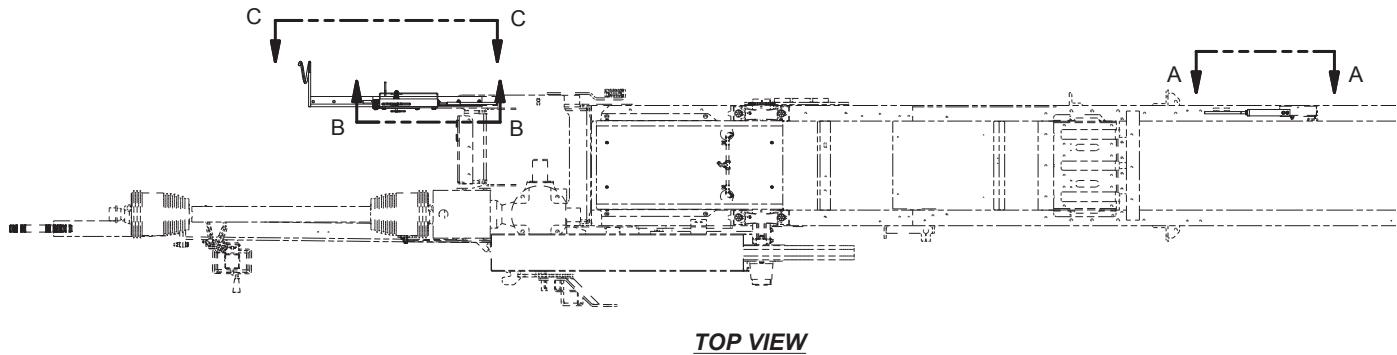



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	906098		Tension Control Box Installation				
1	* 902830	1	. Control Box Assembly	11	SMS0000300	2	. Bolt, Whiz
2	STN0004937	1	. Plate, Mounting	12	223428	6	. Flat Washer
3	F000001018	1	. Plate, Mounting	13	09416918	2	. Nut, Serrated
4	CBL1743324	1	. Cable, Control	14	00273802	2	. Nut, Serrated
5	F000001020	1	. Clevis Pin	15	237567	6	. Nut, Esna
6	F000001019	1	. Pin, Hairpin Cotter	18	220044	2	. Hex Nut
7	CLV0125001	2	. Clevis	19	906181	1	. Holder, Wire/Hose
8	BKT0024669	1	. Bracket, Rear				
9	R13811014	2	. Capscrew				
10	Y17C-0616	6	. Capscrew				

* See Separate Coverage (Page 2-31)

Rev A


Throttle/Tension Control Box Installation, Driveline

Page 2 of 2

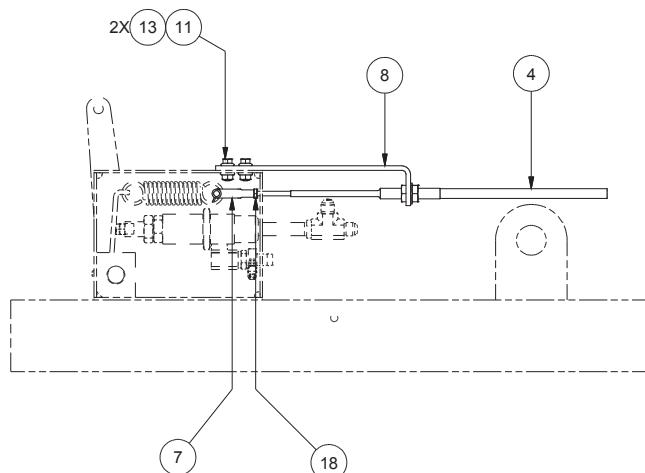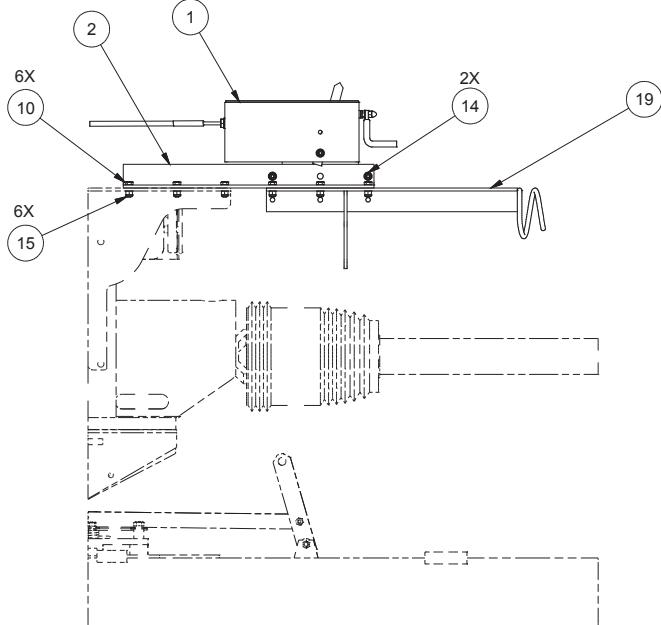


VIEW A-A
CABLE INSIDE TENSION BOX

VIEW C-C
TENSION CONTROL BOX MOUNT
(RIGHT SIDE)

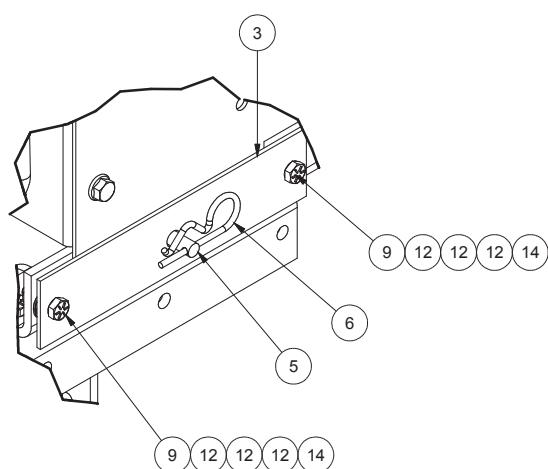


DETAIL D

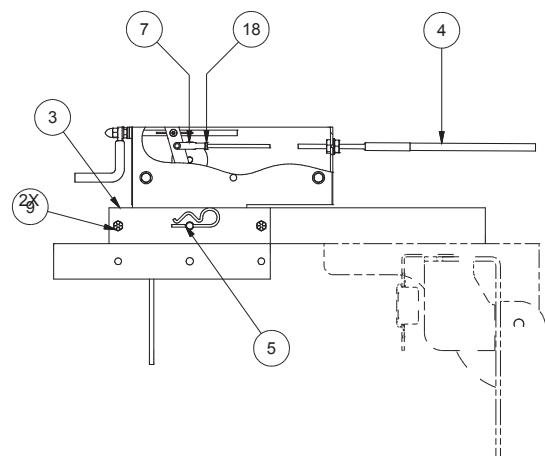

VIEW B-B
CABLE INSIDE TENSION CONTROL
(LEFT SIDE)

Throttle/Tension Control Box Installation, Hydro

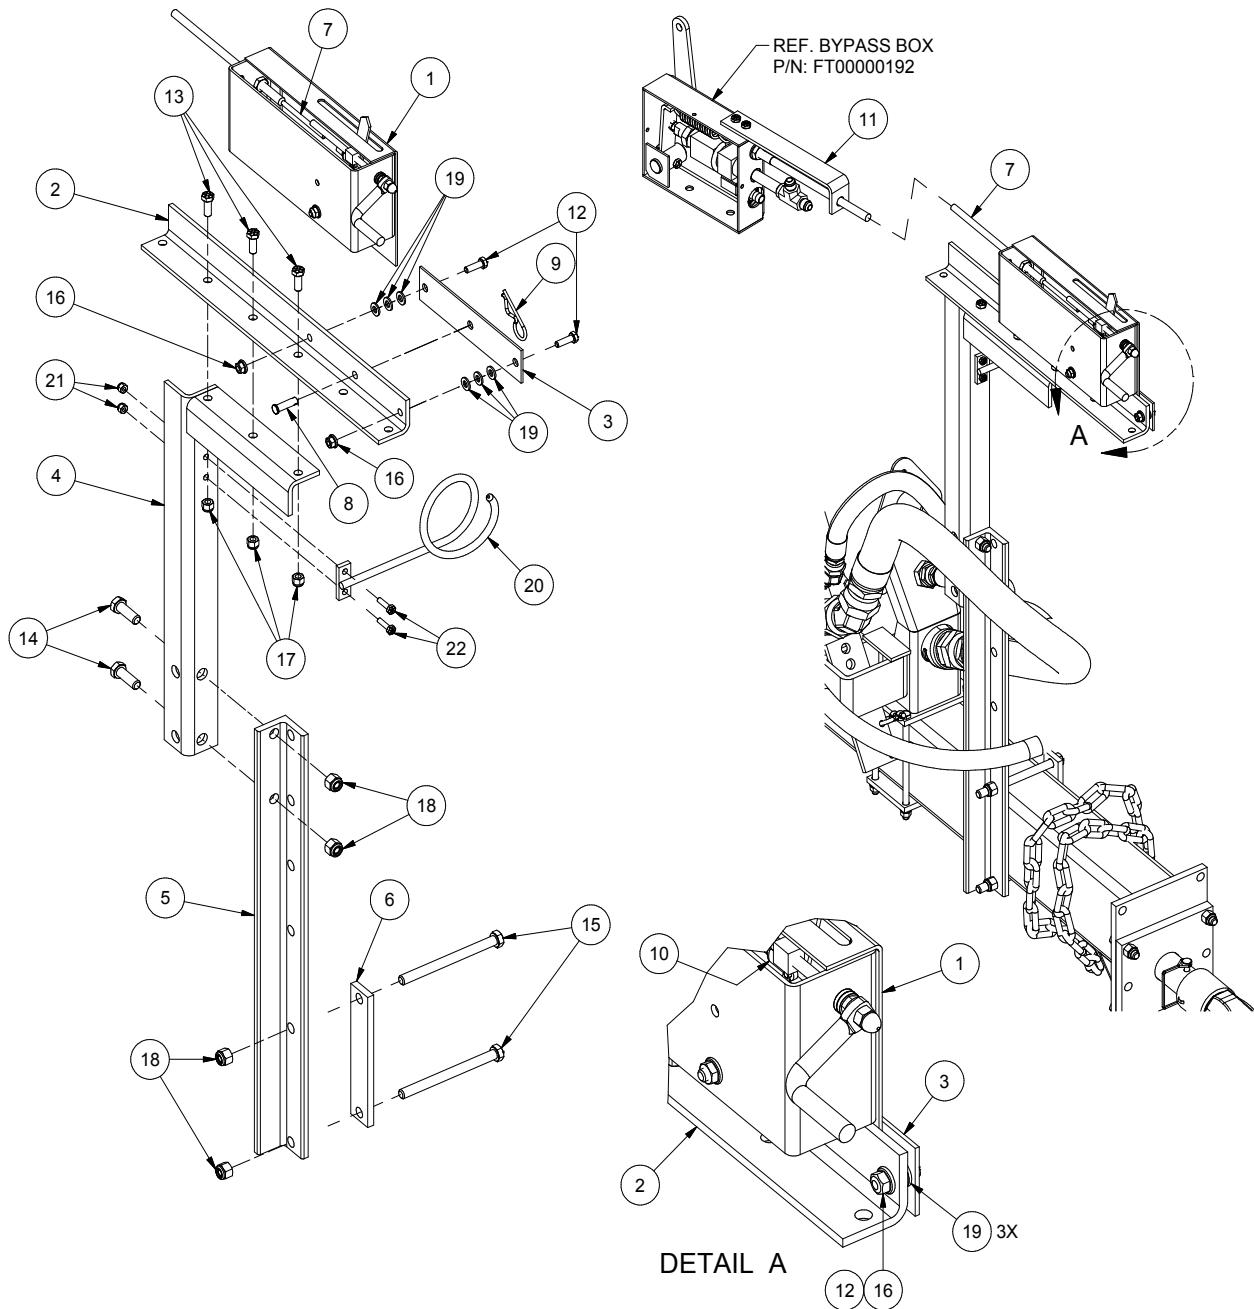


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902829							
1	* 902830	1	. Box Assembly, Tension Control	13	Y17C-0616	3	. Capscrew
2	STN0004937	1	. Plate, Mounting	14	200454W	2	. Capscrew
3	F000001018	1	. Plate, Mounting	15	R13811089	2	. Capscrew
4	STN0004941	1	. Stand	16	00273802	2	. Nut, Serrated
5	STN0011685	1	. Angle	17	237567	3	. Nut, Esna
6	STN0011684	1	. Bar, Clamp	18	223587	4	. Nut, Esna
7	CBL1743324	1	. Cable, Control	19	223428	6	. Flat Washer
8	F000001020	1	. Clevis Pin	20	905196	1	. Holder
9	F000001019	1	. Pin, Hairpin Cotter	21	235620	2	. Nut, Esna
10	CLV0125001	2	. Clevis	22	R13810993	2	. Capscrew
11	BKT0024669	1	. Bracket, Rear				
12	R13811014	2	. Capscrew				

* See Separate Coverage (Page 2-31)

Rev B

Tension Control Assembly, Hydro/Driveline

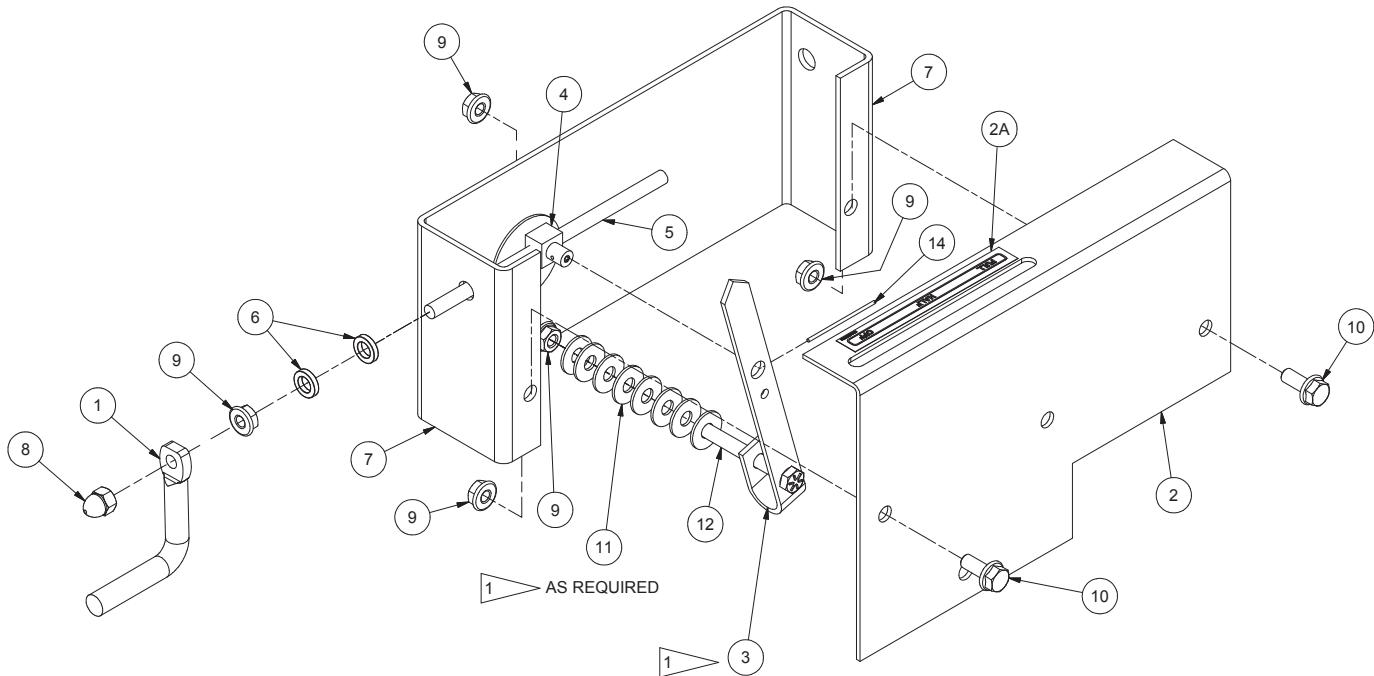


USE WASHERS AS NEEDED TO
ALIGN INDICATOR IN GROOVE

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902830		Box Assembly, Tension Control				
1	CRA0018809	1	. Rod, Crank	8	NCA0003125	1	. Nut, Acorn
2	CVR0024670	1	. Plate, Cover	9	00273802	5	. Nut, Serrated
2A	FD00000001	1	. Decal, Off-Half-Full	10	SMS0000184	2	. Bolt, Whiz
3	F000001004	1	. Bar, Indicator	11	R13802621	A/R	. Flat Washer
4	F000001005	1	. Adjusting Stud Nut	12	R13811020	1	. Capscrew
5	F000001006	1	. Rod	13	STS1032251	1	. Set Screw
6	905968	2	. Washer, Brass	14	WIR0150072	1'	. Wire
7	MNT0024671	1	. Plate, Control Box				

Rev E

Frame & Axle Installation, 14" 2 Tie, Bullgear

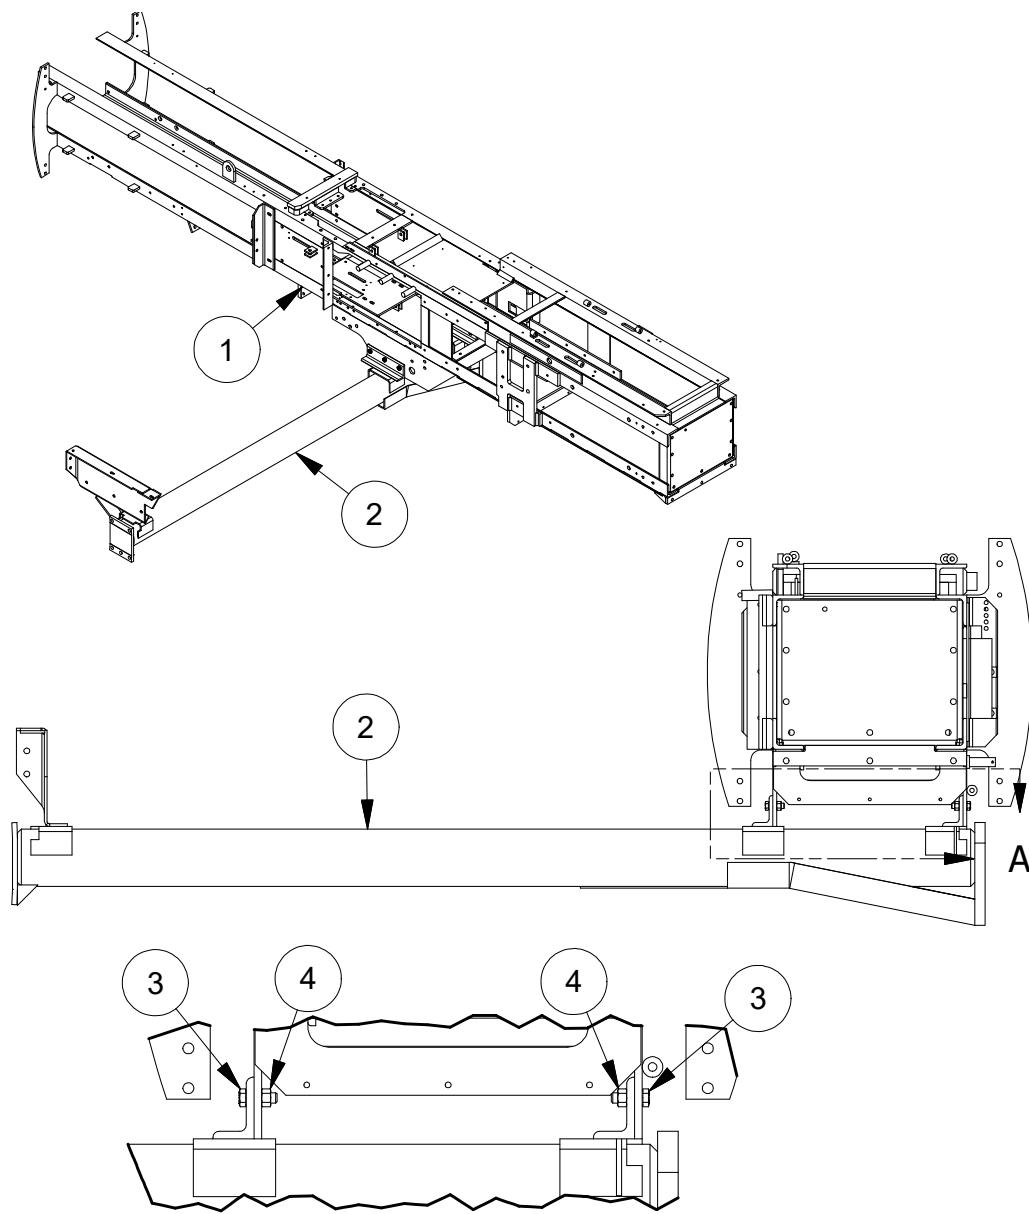

DETAIL A


NOTES:

1. VIEWS ARE OF 16" 3-TIE BULLGEAR FRAME.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	905852		Frame & Axle Installation, 14" 2 Tie, Bullgear				
	909321	1	. Frame & Axle Assy.				
1	922233	1	. . Frame				
2	AXL0022390	1	. . Axle				
3	200454W	6	. Capscrew				
4	223587	6	. Nut				

Rev:B

Frame & Axle Installation, 16" 2 Tie, Bullgear

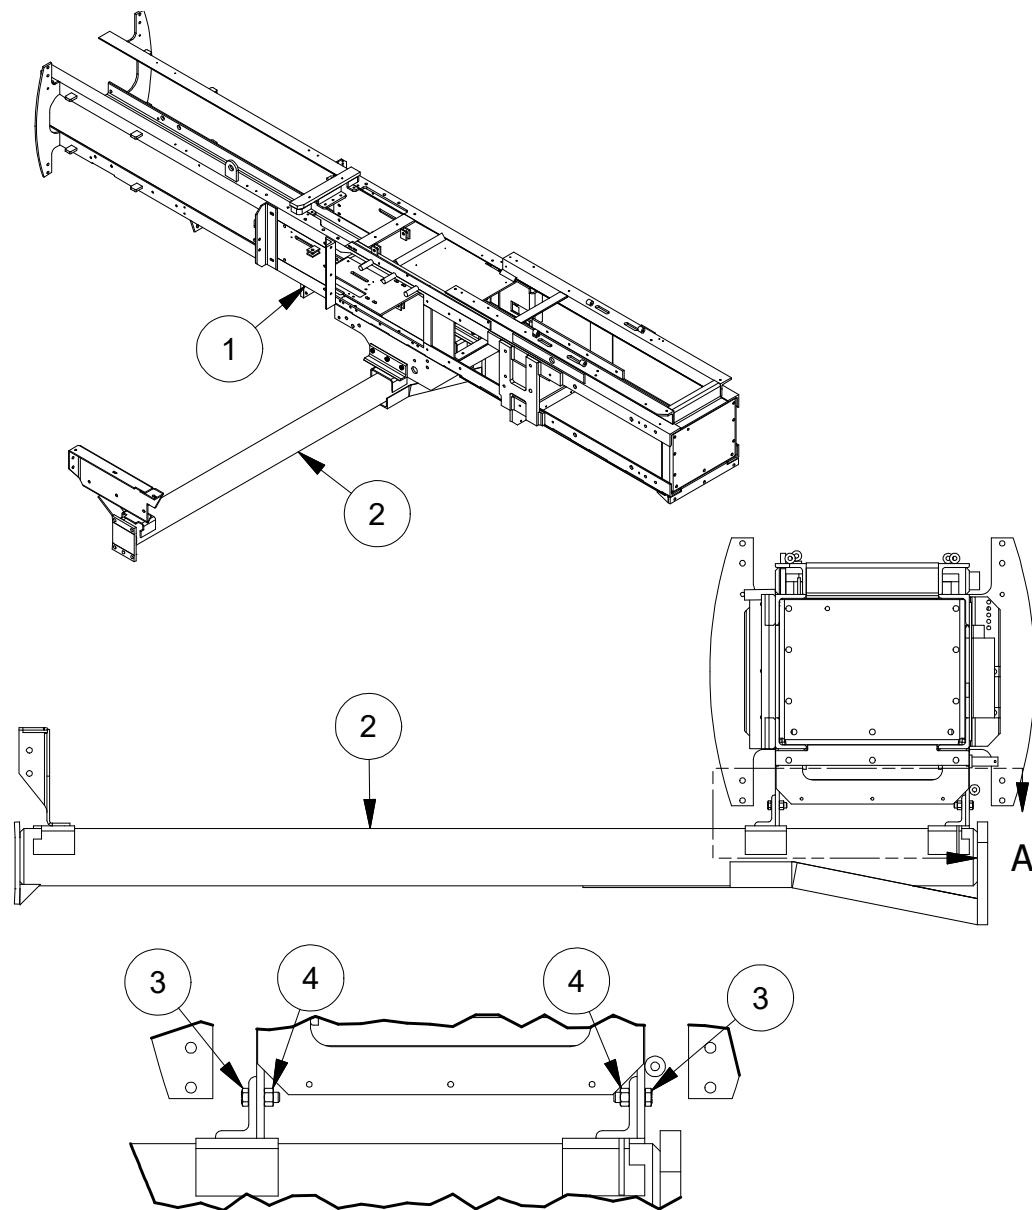

DETAIL A

NOTES:


1. VIEWS ARE OF 16" 3-TIE BULLGEAR FRAME.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	909331		Frame & Axle Installation, 16" 2 Tie, Bullgear				
1	909322	1	. Frame & Axle Assy.				
2	901466	1	... Frame				
3	AXL0022390	1	... Axle				
4	200454W	6	. Capscrew				
	223587	6	. Nut				

Rev:

Single 8-Hole Flotation RH 2 & 3 Tie

FOP0000103

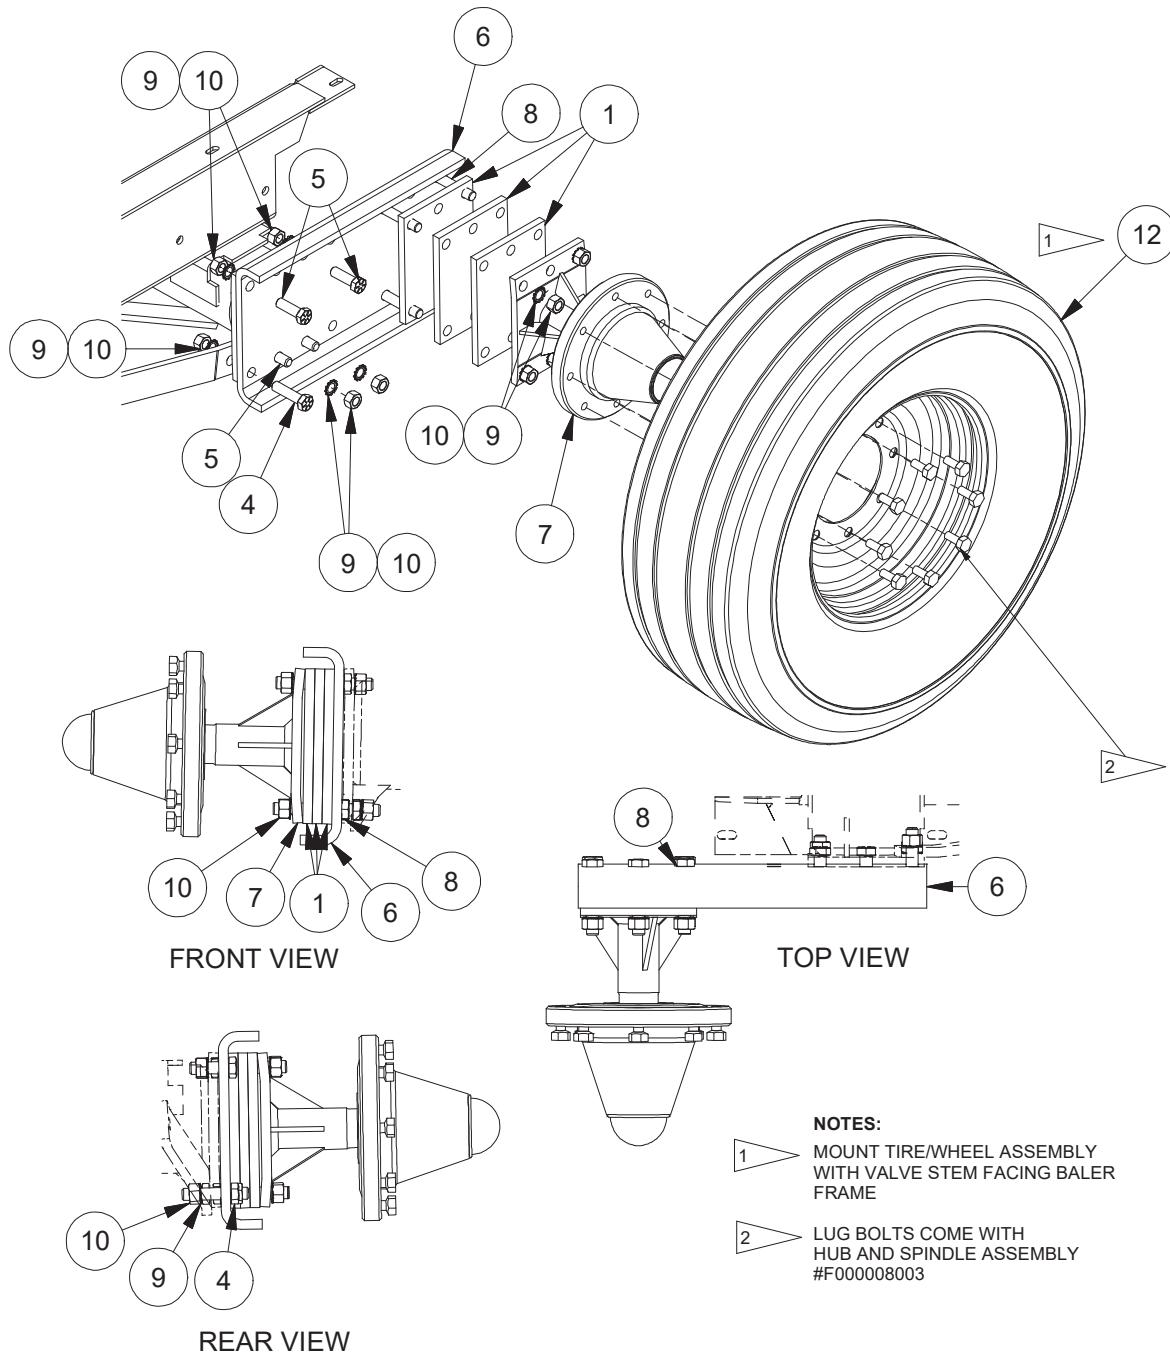


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000103		Single 8-Hole Flotation RH				
01	F000007636	3	. Plate, Spacer	09	WES0006250	10	. Washer
04	R13807958	1	. Capscrew	10	199594W	10	. Hex Nut
05	Y18C-1032	4	. Capscrew	12	901467	1	. Tire & Wheel Assy (Flotation)
06	F000007756	1	. Mounting Channel	F000008184	1	.. Wheel F/Flotation Tire	
07	F000008003	1	. Hub & Spindle Assy	F000008028	1	.. Tire 15" 8-PLY Flotation	
08	219530	5	. Capscrew				

Rev H

8-Hole Flotation LH 2 Tie

FOP0000104


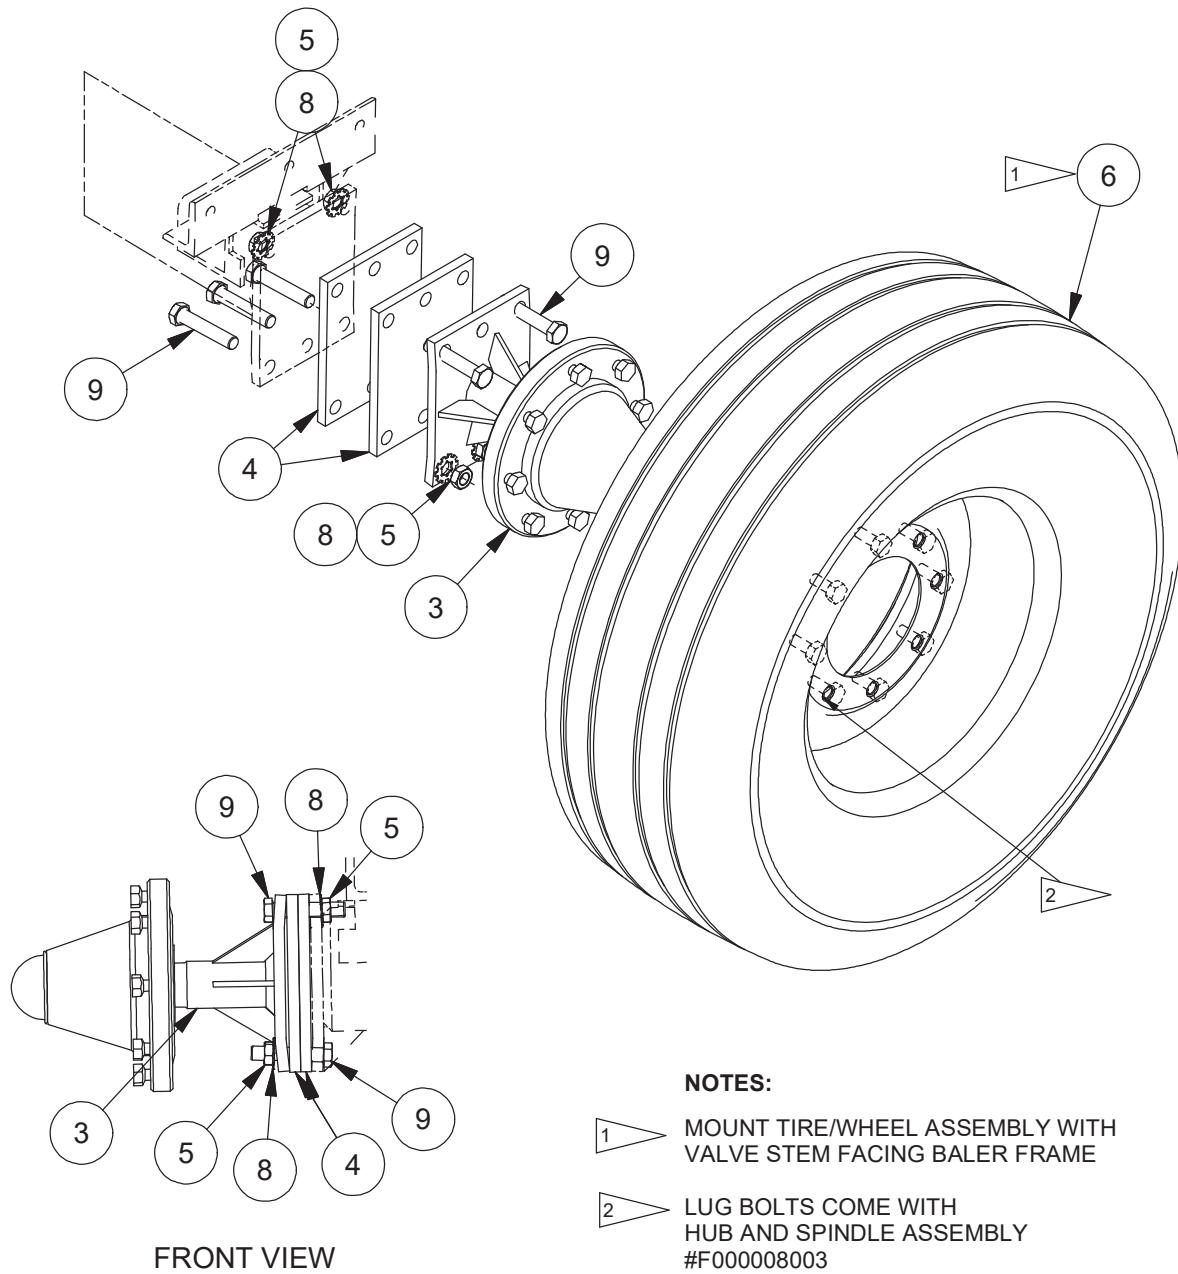


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000104		8-Hole Flotation LH 2 Tie				
3	F000008003	1	. Hub & Spindle Assy	6	901467	1	. Tire & Wheel Assy (Flotation)
4	F000007636	2	. Plate, Spacer		F000008184	1	.. Wheel F/Flotation Tire
5	199594W	5	. Hex Nut		F000008028	1	.. Tire 15 8-PLY Flotation
				8	WES0006250	5	. Washer
				9	221637W	5	. Capscrew


Rev D

Tandem 8-Hole Flotation LH 2 Tie

FOP0000108

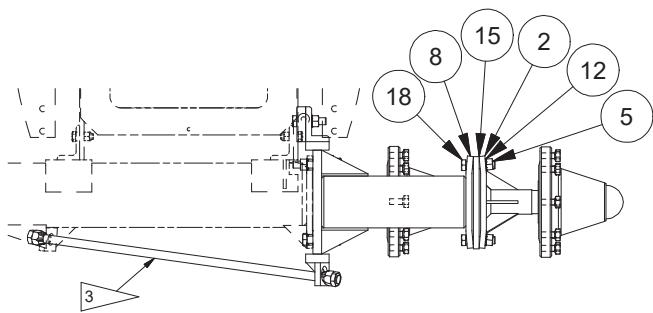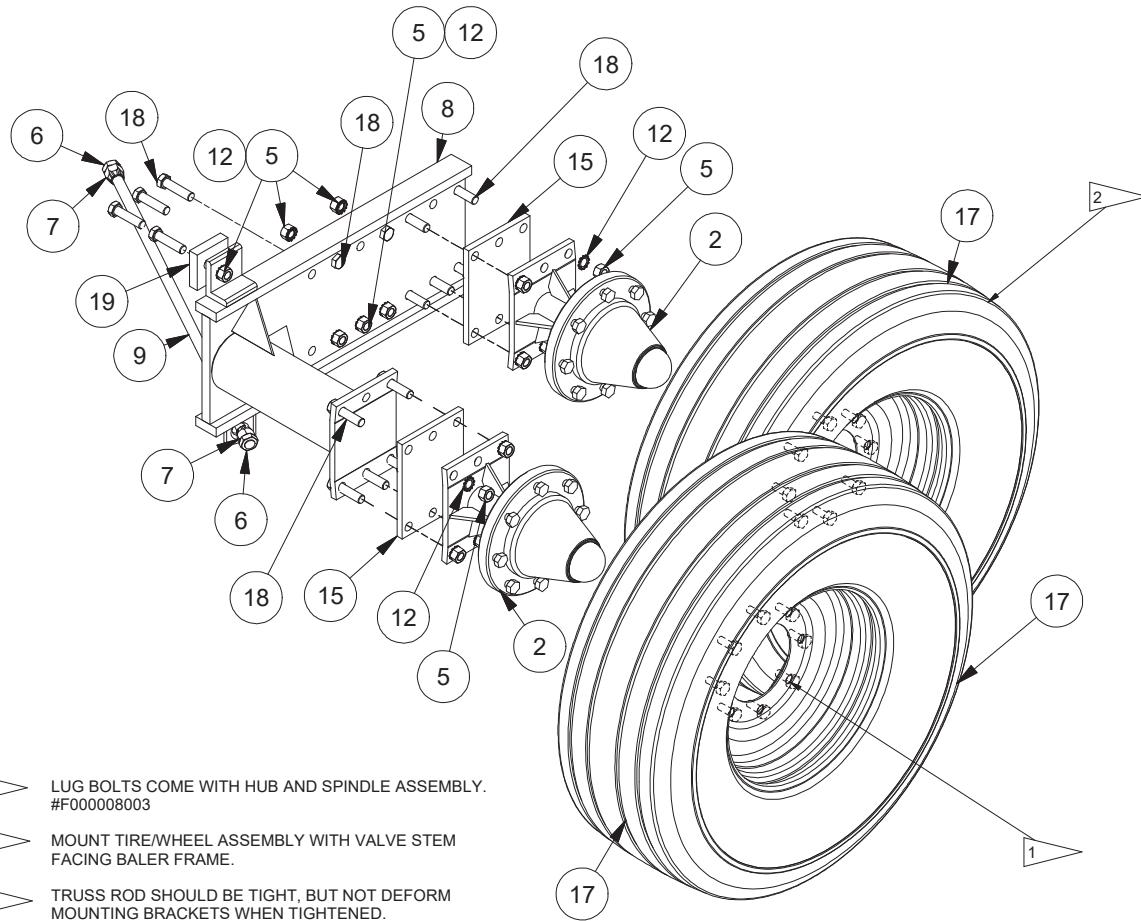

FRONT VIEW

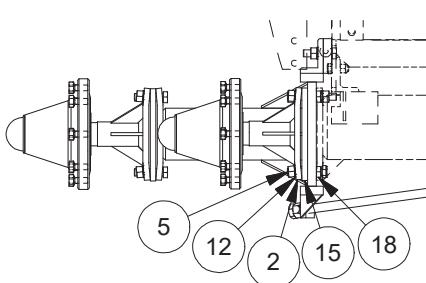


REAR VIEW

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000108		Tandem 8-Hole Flotation LH 2 Tie				
2	F000008003	2	. Hub & Spindle Assy	15	F000007636	2	. Plate, Spacer
5	199594W	16	. Hex Nut	17	901467	2	. Tire & Wheel Assy.
6	R13809570	2	. Jam Nut		F000008184	1	.. Wheel F/Flotation Tire
7	NMS0007125	2	. Nut, Truss Rod		F000008028	1	.. Tire 15 8-PLY Flotation
8	901620	1	. Wheel Mount	18	R13807958	16	. Capscrew
9	RD00708601	1	. Rod, Truss		901675	1	. Bar. Spacer
12	WES0006250	24	. Washer				

Rev C

Pickup Depth Wheel


FOP0000162

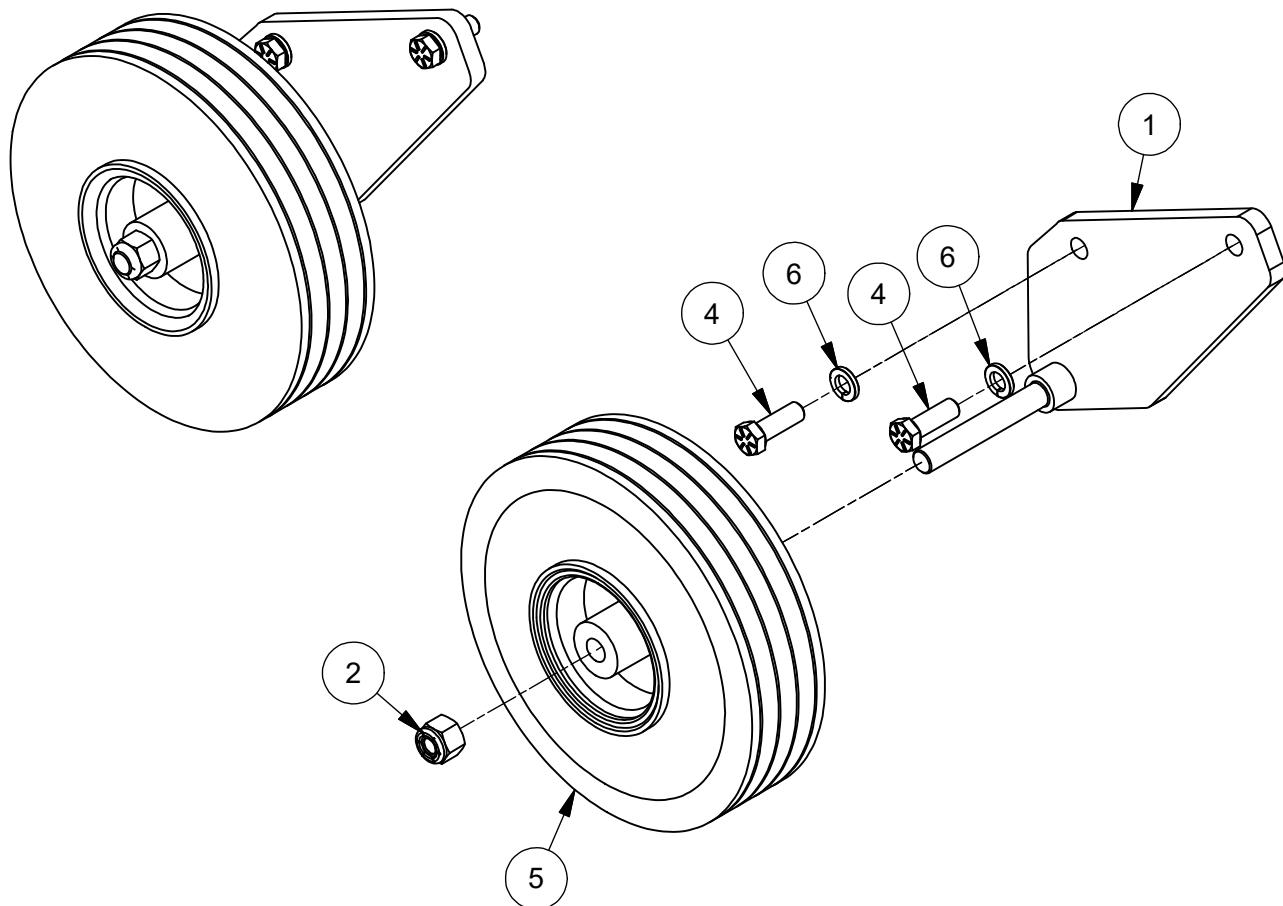

Item	Part No.	Qty	Description
	FOP000016		Pickup Depth Wheel
1	BKT0021956	1	. Bracket
2	224121	1	. Nut
4	200454W	2	. Capscrew
5	909202	1	. Wheel, Rubber
6	234665	2	. Lockwasher

Rev C

Tandem 8-Hole Flotation RH 2 & 3 Tie FOP0000222

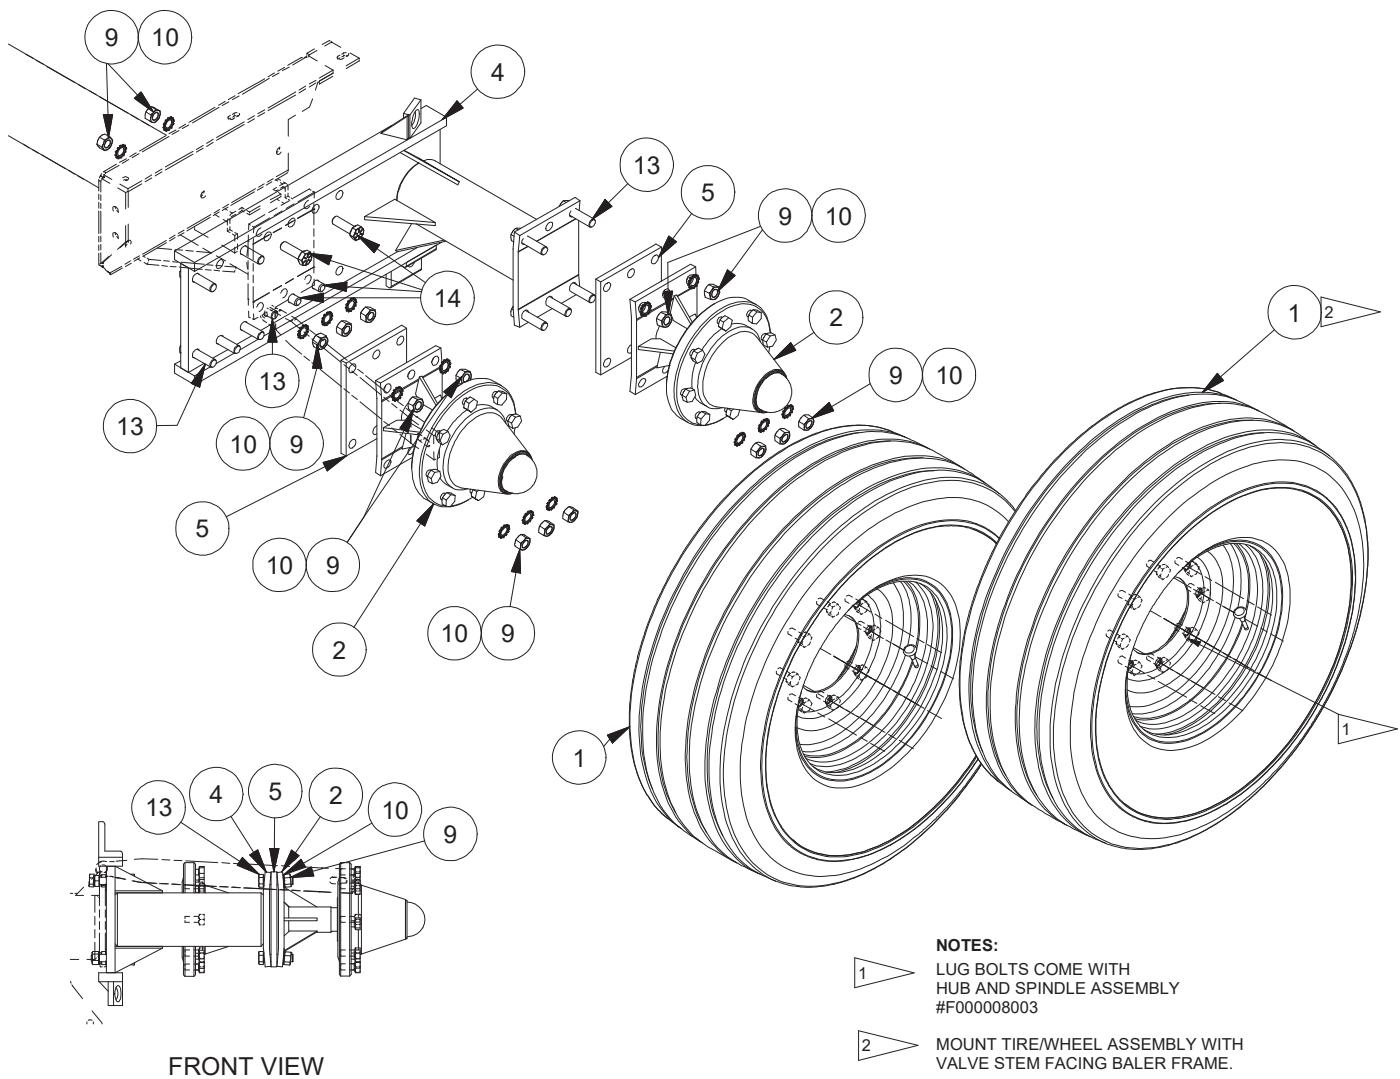


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000222		Tandem 8-Hole Flotation RH 2 & 3 Tie				
1	901467	2	.Tire & Wheel Assy.	5	F000007636	2	.Plate, Spacer
	F000008184	1	. . Wheel F/Flotation Tire	9	199594W	15	.Hex Nut
	F000008028	1	. . Tire 15 8-PLY Flotation	10	WES0006250	15	.Washer
2	F000008003	2	.Hub & Spindle Assy.	13	R13807958	11	.Capscrew
4	901620	1	.Wheel Mount	14	Y18C-1032	4	.Capscrew

Rev E

Single 8-Hole Highway RH 2 & 3 Tie

FOP0000249

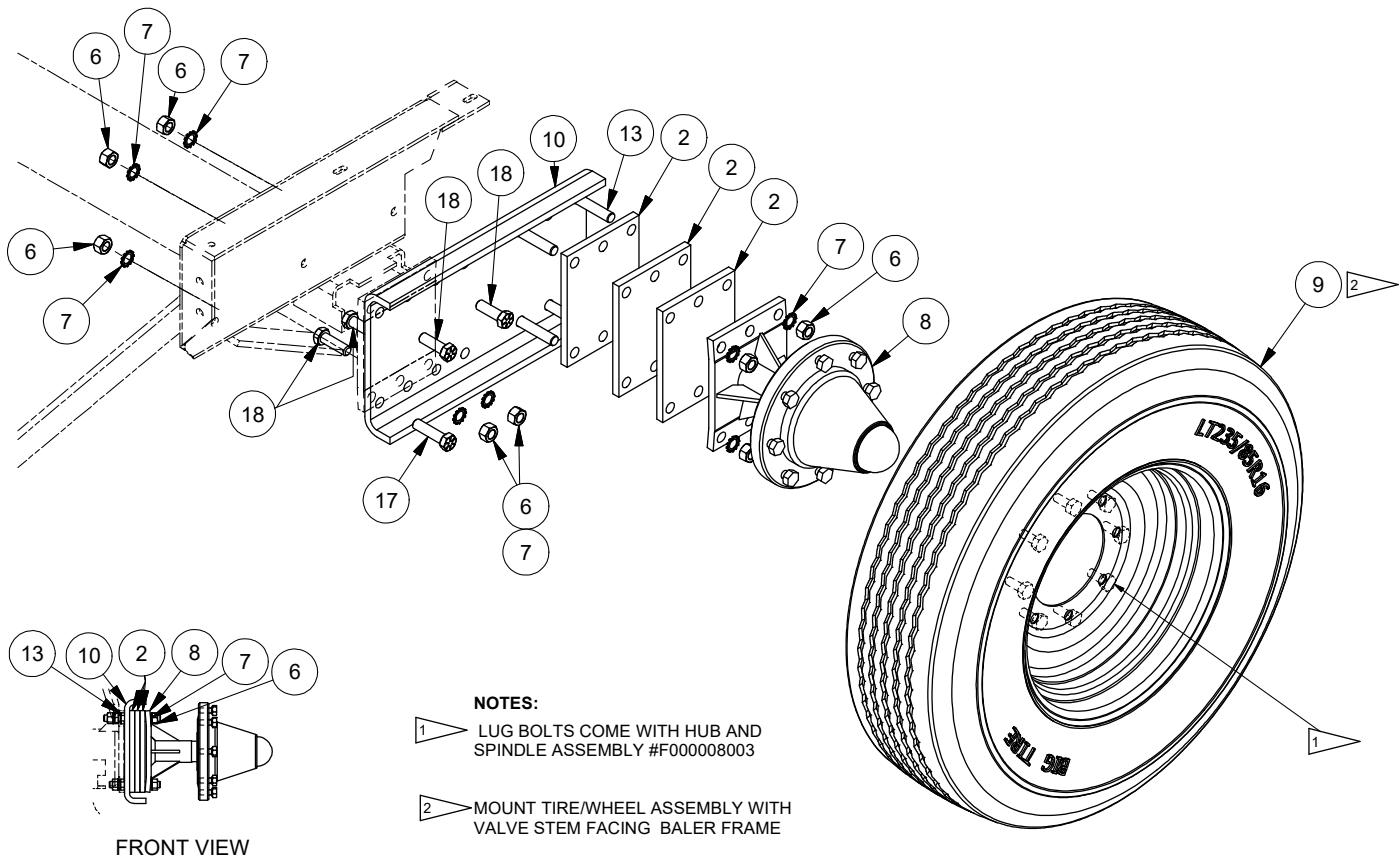


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000249		Single 8-Hole Highway RH 2 & 3 Tie				
2	F000007636	3	. Plate, Spacer	10	F000007756	1	. Mounting Channel
6	199594W	10	. Hex Nut	13	219530	5	. Capscrew
7	WES0006250	10	. Washer	17	R13807958	1	. Capscrew
8	F000008003	1	. Hub & Spindle Assy.	18	Y18C-1032	4	. Capscrew
9	TIR0000002	1	. Tire & Wheel	19	TIR0000002	1	. Highway Tire & Wheel Assy
	WHL0106897	1	.. Wheel F/Highway Tire				
	TIR7501608	1	.. Highway Tire				

Rev F


Tandem 8-Hole Highway RH

FOP0000250

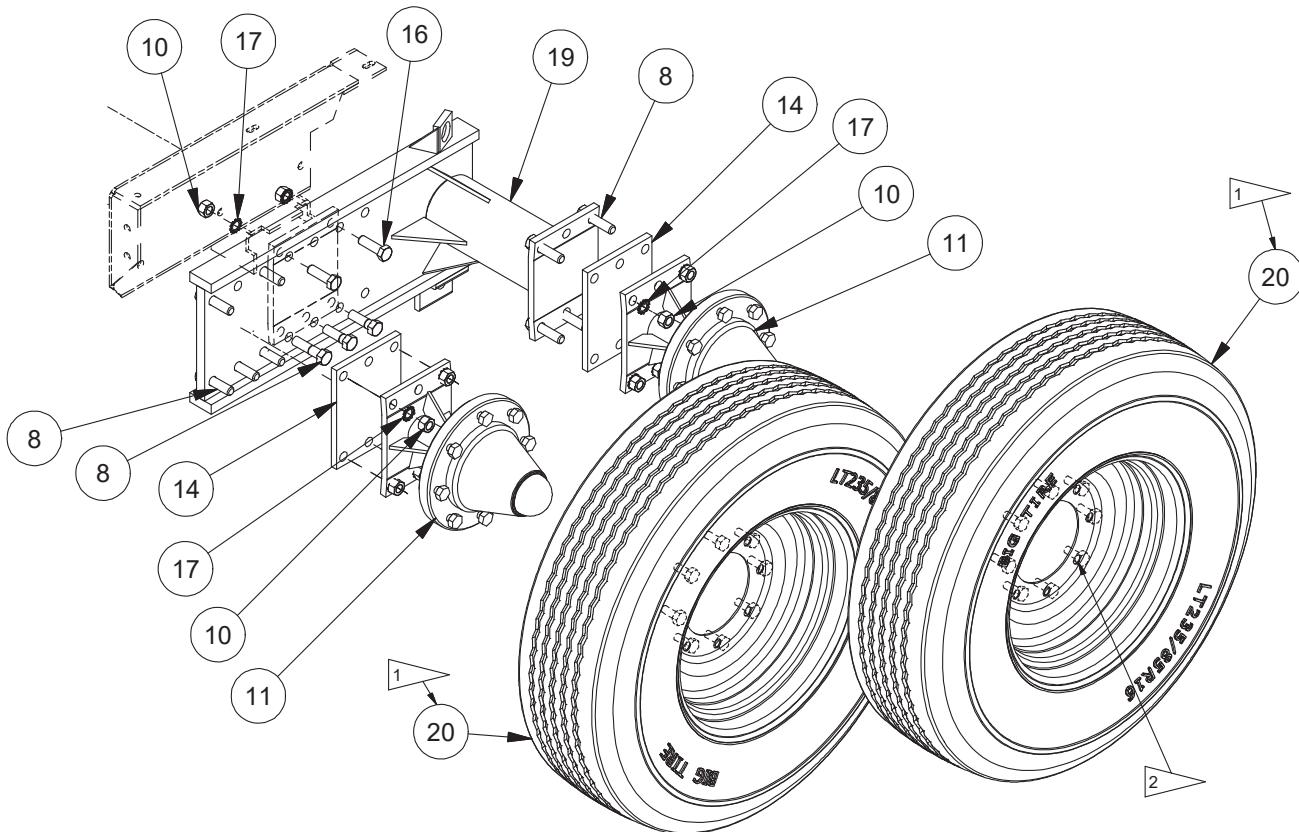


NOTES:

- 1 MOUNT TIRE/WHEEL ASSEMBLY WITH VALVE STEM FACING BALER FRAME
- 2 LUG BOLTS COME WITH THE HUB AND SPINDLE ASSMBLY #F000008003

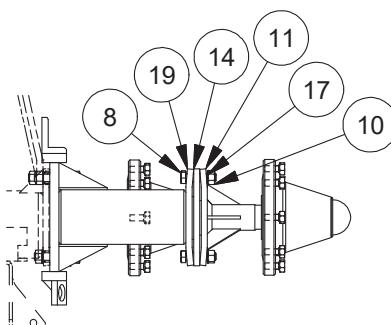

FRONT VIEW

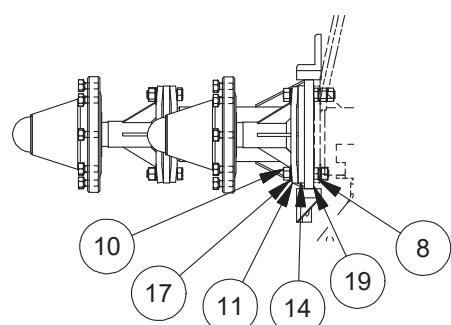

REAR VIEW

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000250		Tandem 8-Hole Highway RH				
8	R13807958	11	. Capscrew	17	WES0006250	15	. Washer
10	199594W	15	. Hex Nut	19	901626	1	. Wheel Mount
11	F000008003	2	. Hub & Spindle Assy.	20	TIR0000002	2	. Tire & Wheel
14	F000007636	2	. Plate, Spacer		WHL0106897	1	. . . Wheel F/Highway Tire
16	Y18C-1032	4	. Capscrew		TIR7501608	1	. . . Highway Tire



Rev F

Tandem 8-Hole Highway LH 2 Tie


FOP0000252

NOTES:

-  MOUNT TIRE/WHEEL ASSEMBLY WITH VALVE STEM FACING BALER FRAME
-  LUG BOLTS COME WITH HUB AND SPINDLE ASSMBLY #F000008003
-  TRUSS ROD SHOULD BE TIGHT, BUT NOT DEFORM MOUNTING BRACKETS WHEN TIGHTENED.

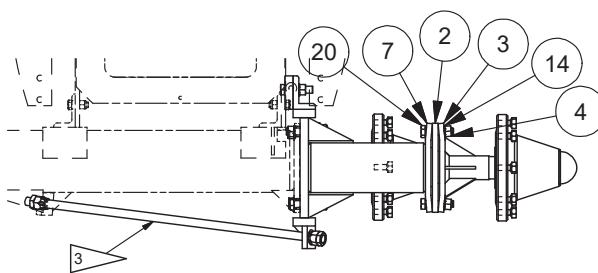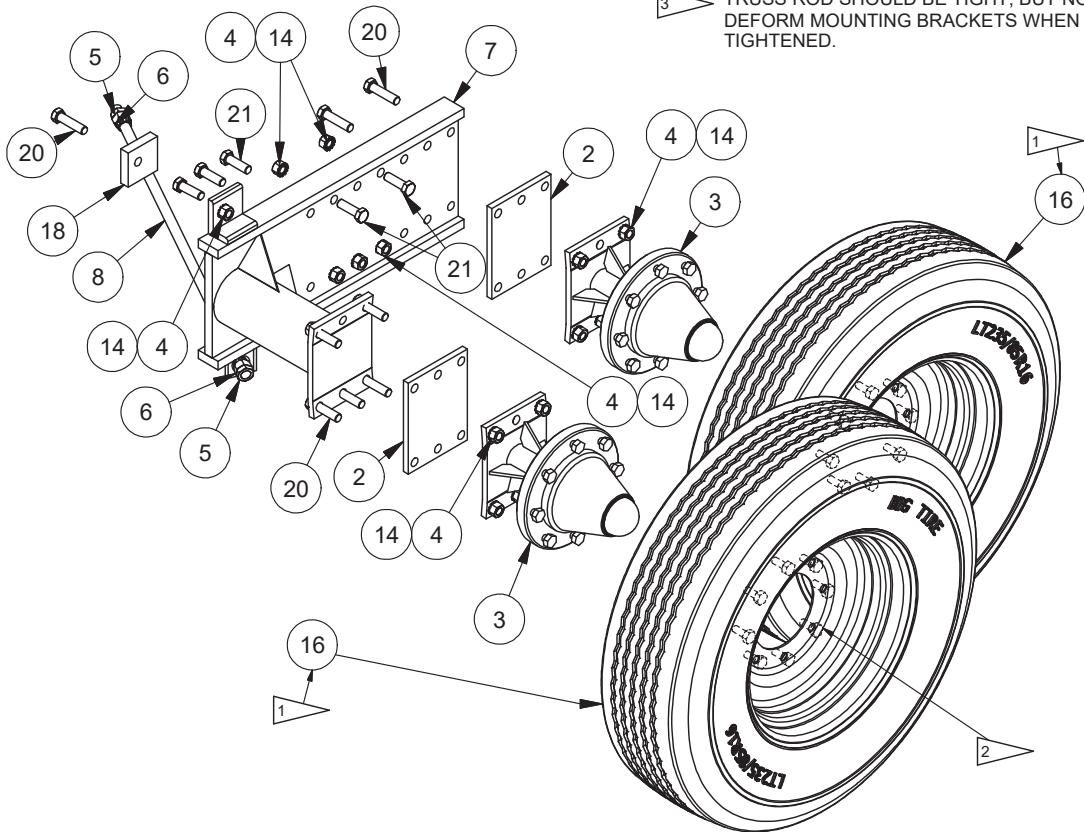

FRONT VIEW

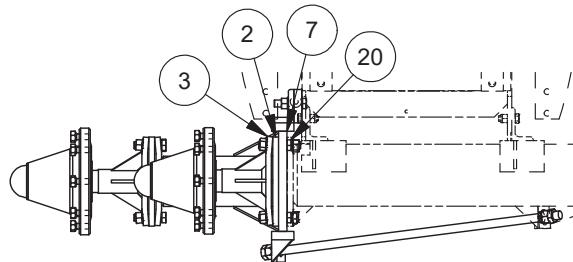


REAR VIEW

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000252		Tandem 8-Hole Highway LH 2 Tie				
2	F000007636	2	. Plate, Spacer	14	WES0006250	16	. Washer
3	F000008003	2	. Hub & Spindle Assy.	16	TIR0000002	2	. Tire & Wheel
4	199594W	16	. Hex Nut	WHL0106897	1	.. Wheel F/Highway Tire	
5	R13809570	2	. Jam Nut	TIR7501608	1	.. Highway Tire	
6	NMS0007125	2	. Nut, Truss Rod	18	901675	1	. Bar, Spacer
7	901626	1	. Wheel Mount	20	R13807958	11	. Capscrew
8	RD00708601	1	. Rod, Truss	21	Y18C-1032	5	. Capscrew

Rev D

Tire & Wheel 8-Hole Highway LH 2 Tie

FOP0000253

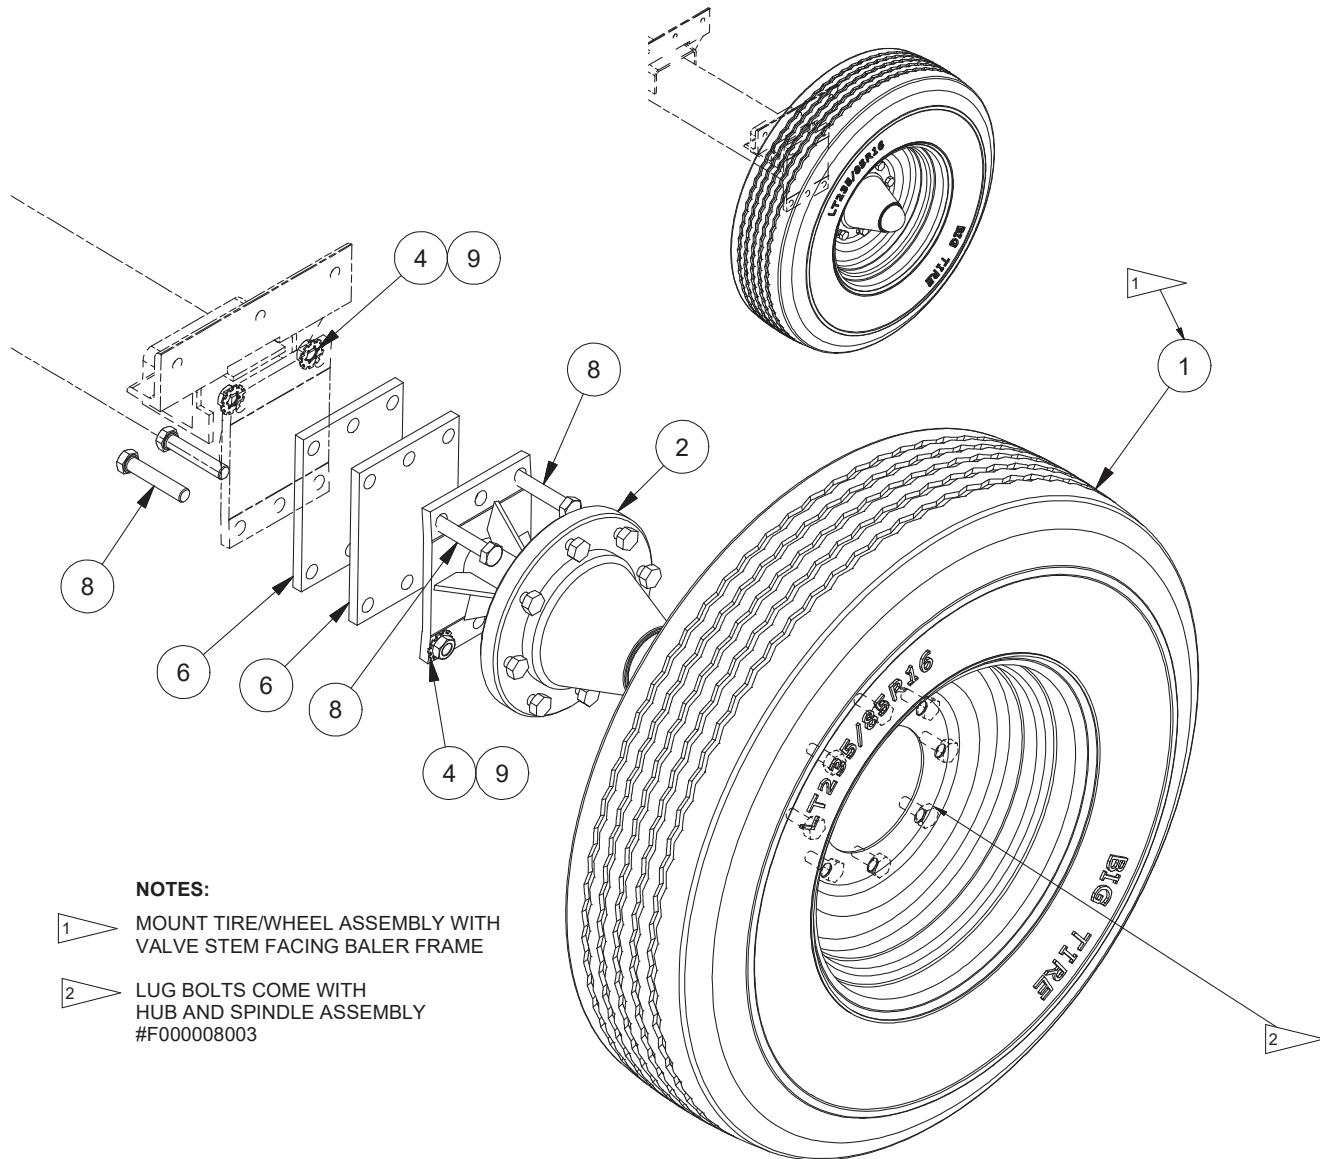


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	FOP0000253		Tire & Wheel 8-Hole Highway LH 2 Tie	4	WES0006250	5	. Washer
	TIR0000002	1	. Tire & Wheel	6	F000007636	2	. Plate, Spacer
	WHL0106897	1	. . Wheel F/Highway Tire	8	221637W	5	. Capscrew
	TIR7501608	1	. . Highway Tire	9	199594W	5	. Hex Nut
2	F000008003	1	. Hub & Spindle Assy.				

Rev D

Tires and Wheels Walking Beam LH

FOP0000259

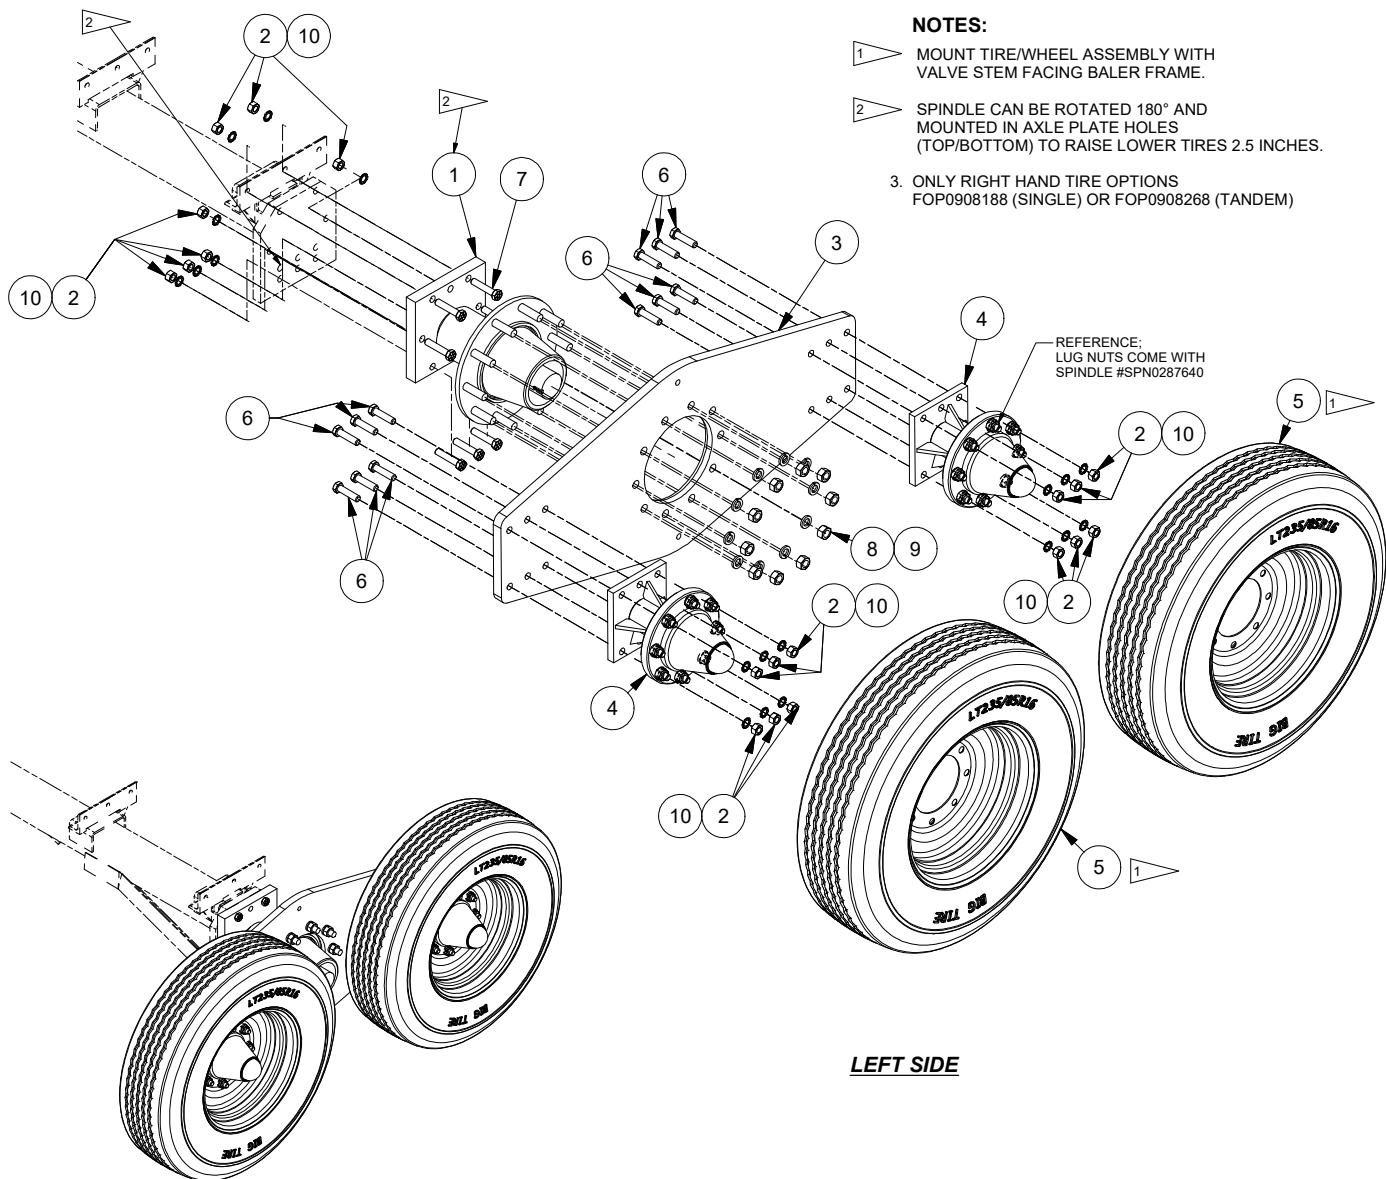

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
Tires and Wheels Walking Beam LH							
1	SPN1024150	1	. Hub & Spindle Assy	6	R13807958	12	. Capscrew
2	199594W	19	. Hex Nut	7	R13806355	7	. Capscrew
3	PLT0029905	1	. Plate	8	221717W	10	. Hex Nut
4	SPN0287640	2	. Spindle & Hub Assy	9	200608	10	. Lockwasher
5	TIR0000002	2	. Tire & Wheel	10	WES0006250	19	. Washer
	WHL0106897	1	.. Wheel F/Highway Tire				
	TIR7501608	1	.. Highway Tire				

Rev N

This page is intentionally left blank.


Section 3

Shielding

Shielding Installation, Pickup	3-3
Shielding Installation, LH, 14" Chamber	3-4
Shielding Installation LH, Hydro & Engine, 16".....	3-5
. Shielding Assembly, Pick Up Drive	3-8
Shielding Installation, Feed Arm/Con Rod,14".....	3-9
Shielding Installation, Feed Arm/Con Rod,16".....	3-10
Shielding Installation, Knotter / Drive Arm	3-11
Shielding Installation, Feed House W/Decals, 270	3-12
Shielding Installation, Feed House W/Decals, 275	3-14
Shielding Installation, Belt, Engine	3-16
. Shield Assembly, Belt, Engine.....	3-17
Shielding Installation, Belt, PTO	3-18
. Shield Assembly, Belt, PTO	3-19
Shielding Installation, Belt, Hydro	3-20
. Shield Assembly, Belt, Hydro	3-21
Shielding Installation, Top Chamber, Hydro	3-22
Shielding Installation, Meter Wheel	3-23
Shielding Installation, Bullgear, Hydro/Driveline/SP Balers	3-24

This page is intentionally left blank.


Shielding Installation, Pickup

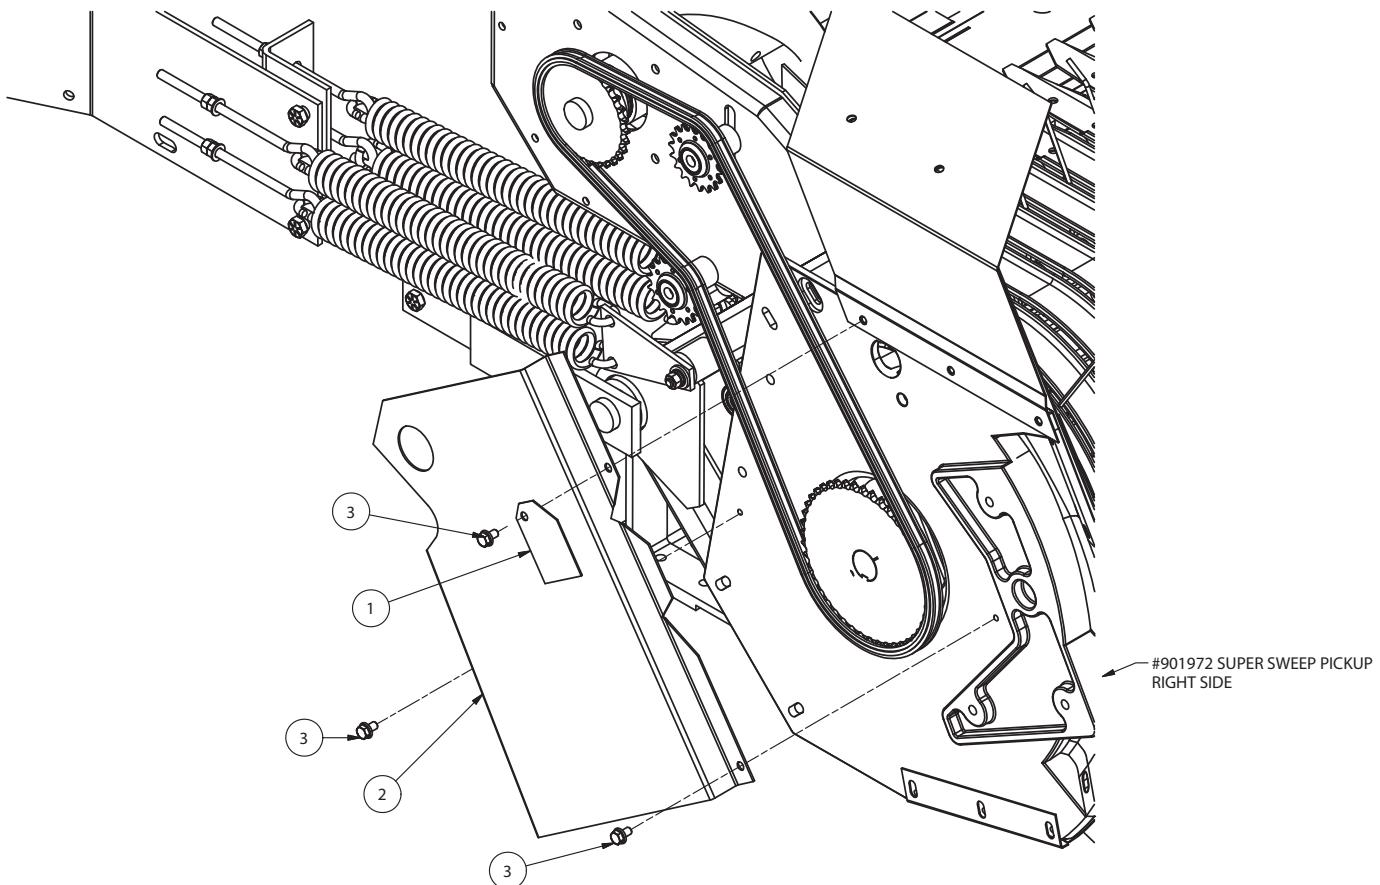

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	CVR0022648	1	Shielding Installation,Pickup				
2	SHD0023680	1	. Plate, Cover				
3	SMS0000198	3	. Auger Drive Chain Shield				
			. Bolt				Rev A

Shielding

Shielding Installation LH, 14" Chamber

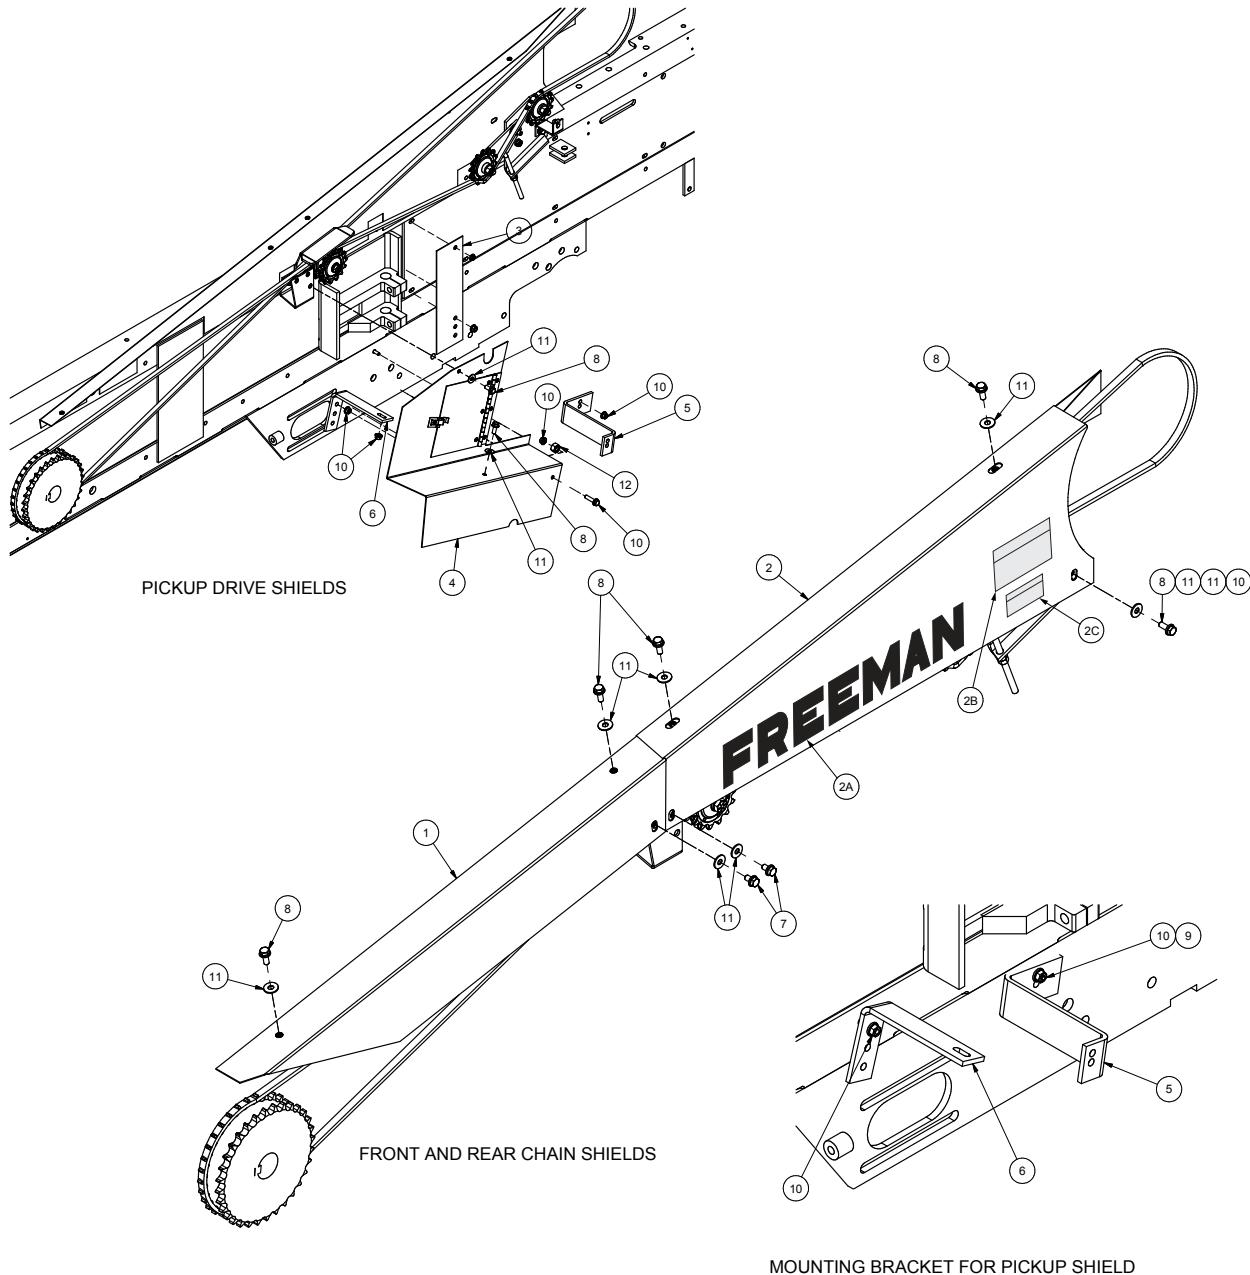


MOUNTING BRACKET FOR PICKUP SHIELD

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	905143		Shielding Installation, Lh, 14" Chamber				
1	F000008152	1	. Plate, Shield	6	BKT0008037	1	. Bracket, Fnt
2	903181	1	. Plate, Shield	7	SMS0000198	2	. Bolt
2A	FD00007112	1	.. Decal "FREEMAN", Red	8	SMS0000184	7	. Bolt
2B	FD00023581	1	.. Decal "Caution: Shut Off..."	9	SMS0000177	1	. Bolt
2C	FD00023572	1	.. Decal "Shields Are For Your..."	10	SMS0000815	1	. Bolt
3	COV0008038	1	. Plate, Cover	11	223428	16	. Washer
4	905164	1	. Shield Assembly, 14" Chm	12	221711	1	. Flange
5	BKT0008024	1	. Bracket, Rear	13	00273802	13	. Nut

Shielding Installation LH, Hydro & Engine, 16"

Page 1 of 3

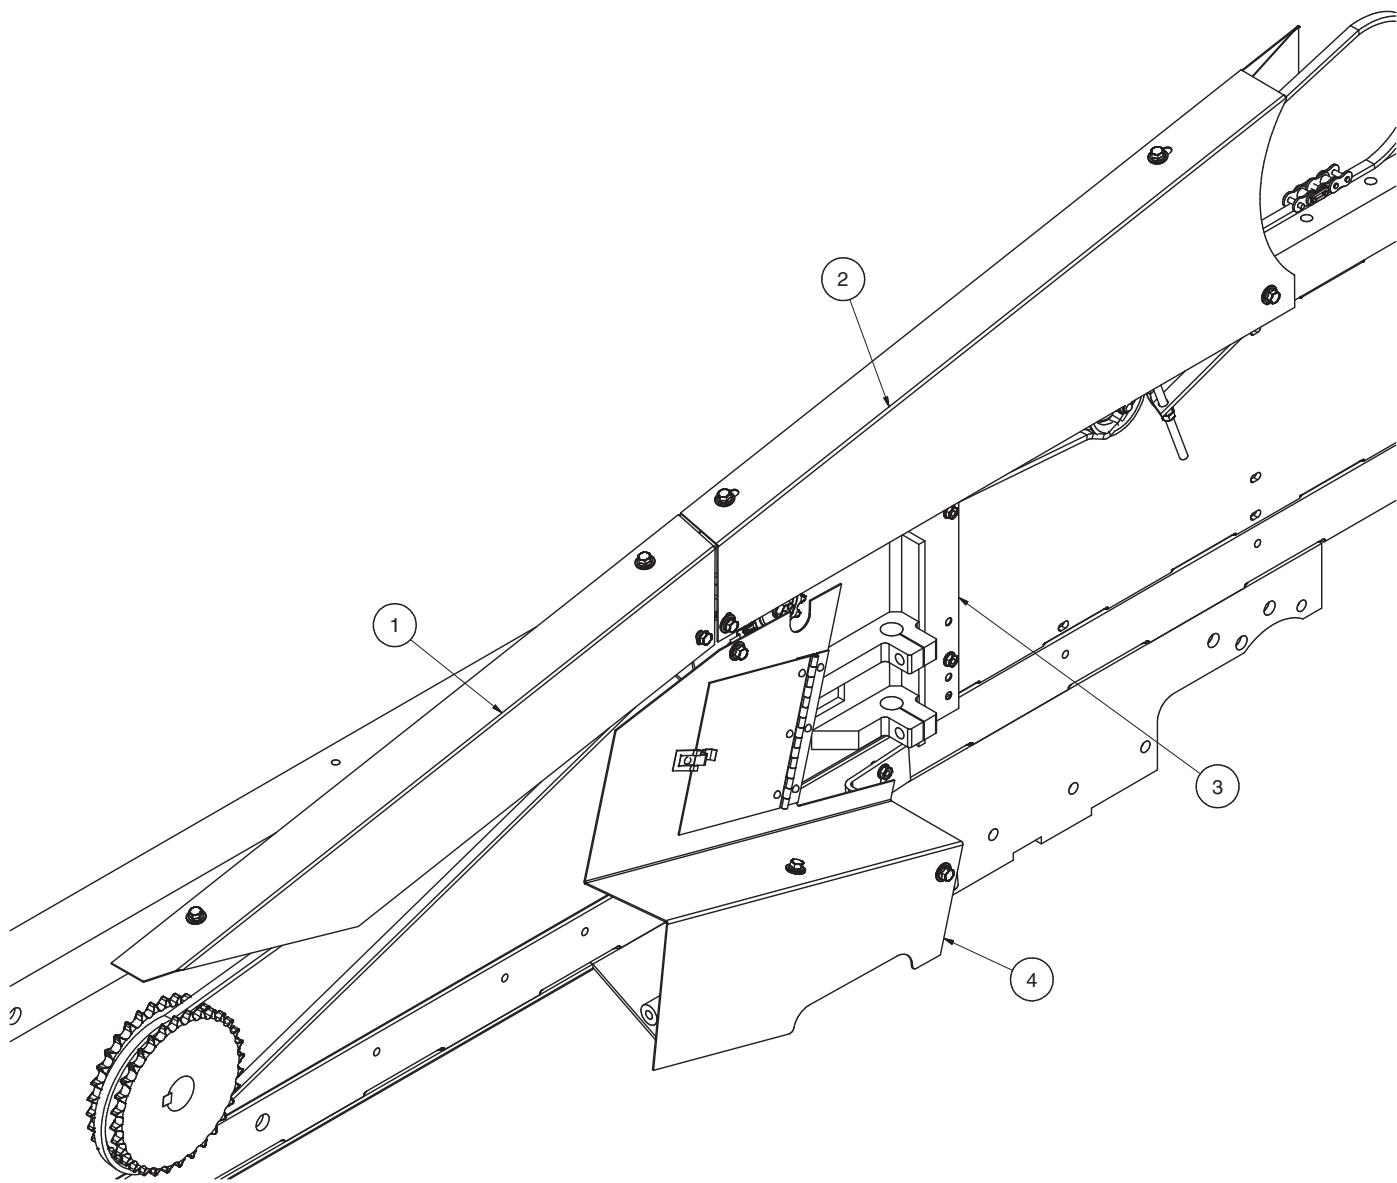



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902809 Shielding Installation, LH, Bullgear							
1	F000008152	1	. Plate, Shield	8	BKT0008037	1	. Bracket, Front
2	903181	1	. Plate, Shield w/Decals	9	SMS0000198	2	. Screw
2a	FD00007112	1	.. Decal, Freeman	10	SMS0000184	8	. Screw
2b	FD00023581	1	.. Decal, Caution - Shut Off Motor	11	223428	12	. Washer
2c	FD00023572	1	.. Decal, Caution- Keep Shields...	12	00273802	7	. Nut, Serrated
3	COV0008038	1	. Plate, Cover	13	NCC0003125	7	. Nut, Cage
4	* SHD0008040	1	. Shield, Pickup Drive Belt				
7	BKT0008024	1	. Bracket, Rear				

* See Separate Coverage (Page 3-8)

Rev D

Shielding Installation LH, Hydro & Engine, 16"


Page 2 of 3

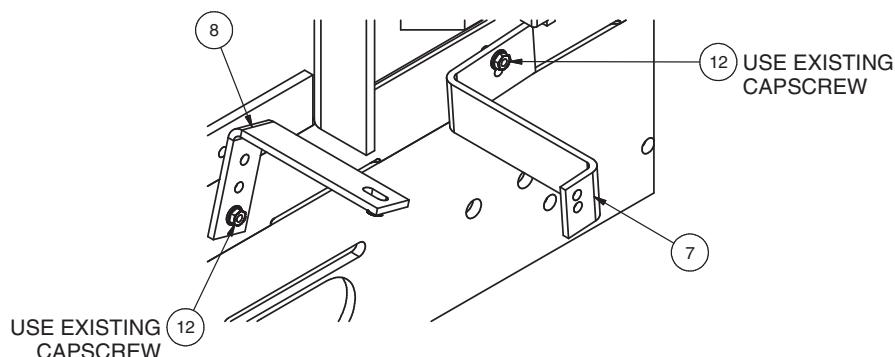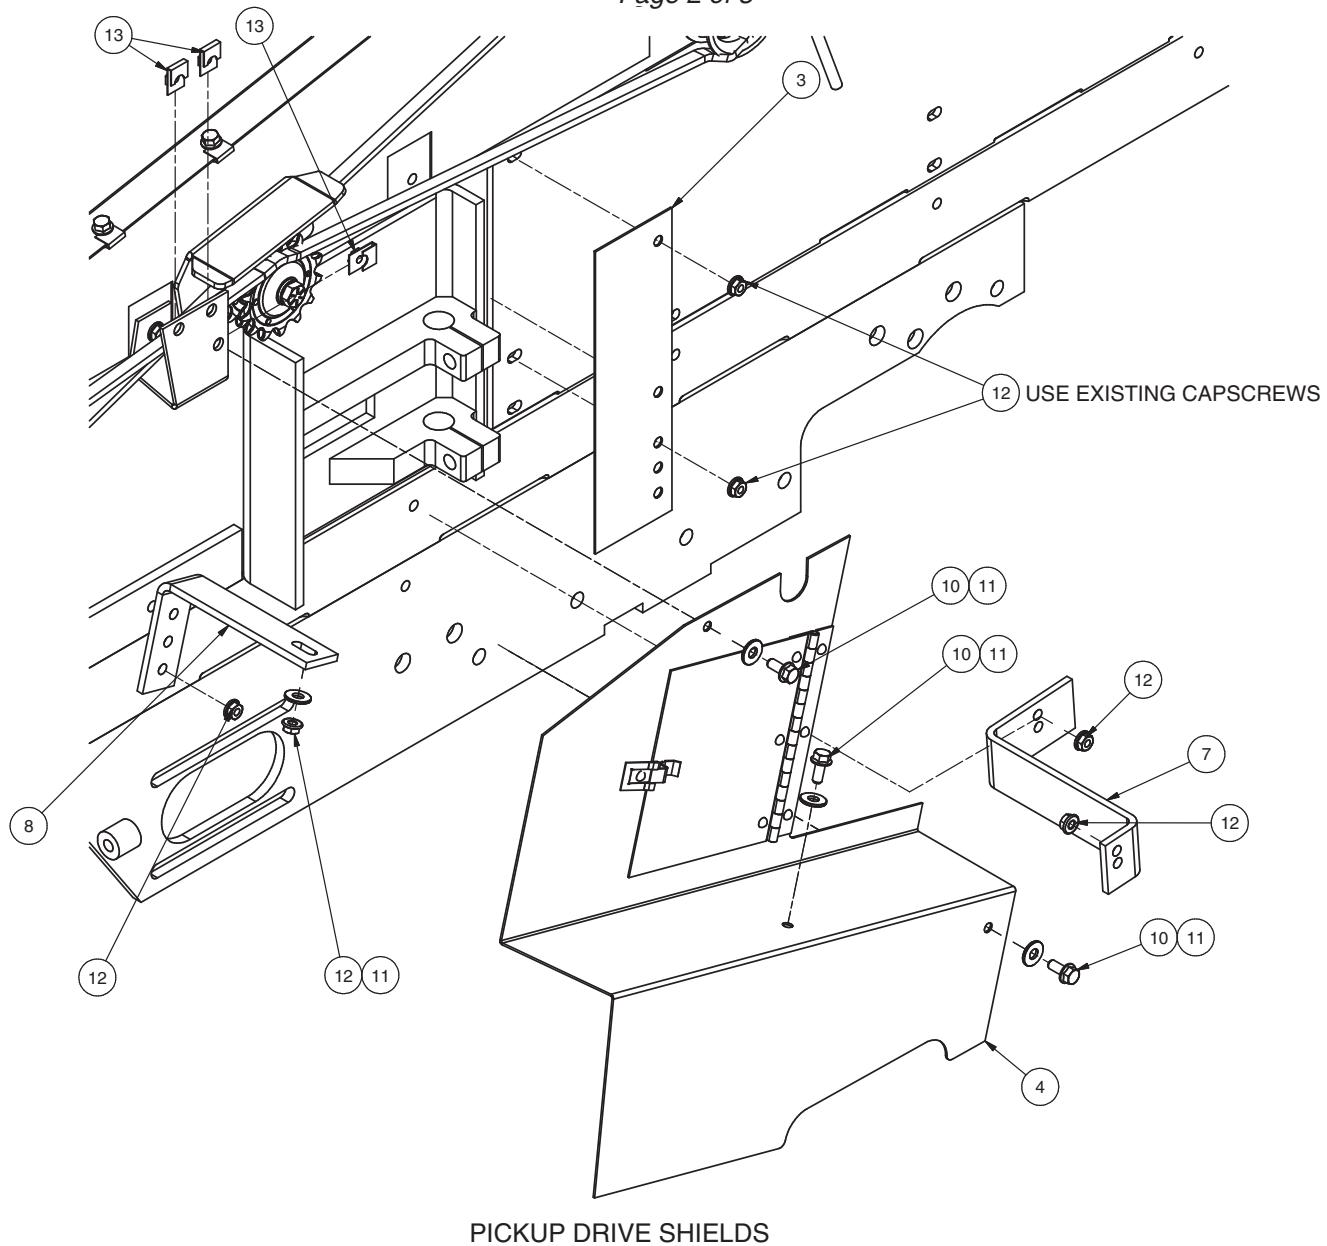

MOUNTING BRACKETS FOR PICKUP SHIELD


Shielding Installation LH, Hydro & Engine, 16"

Page 3 of 3

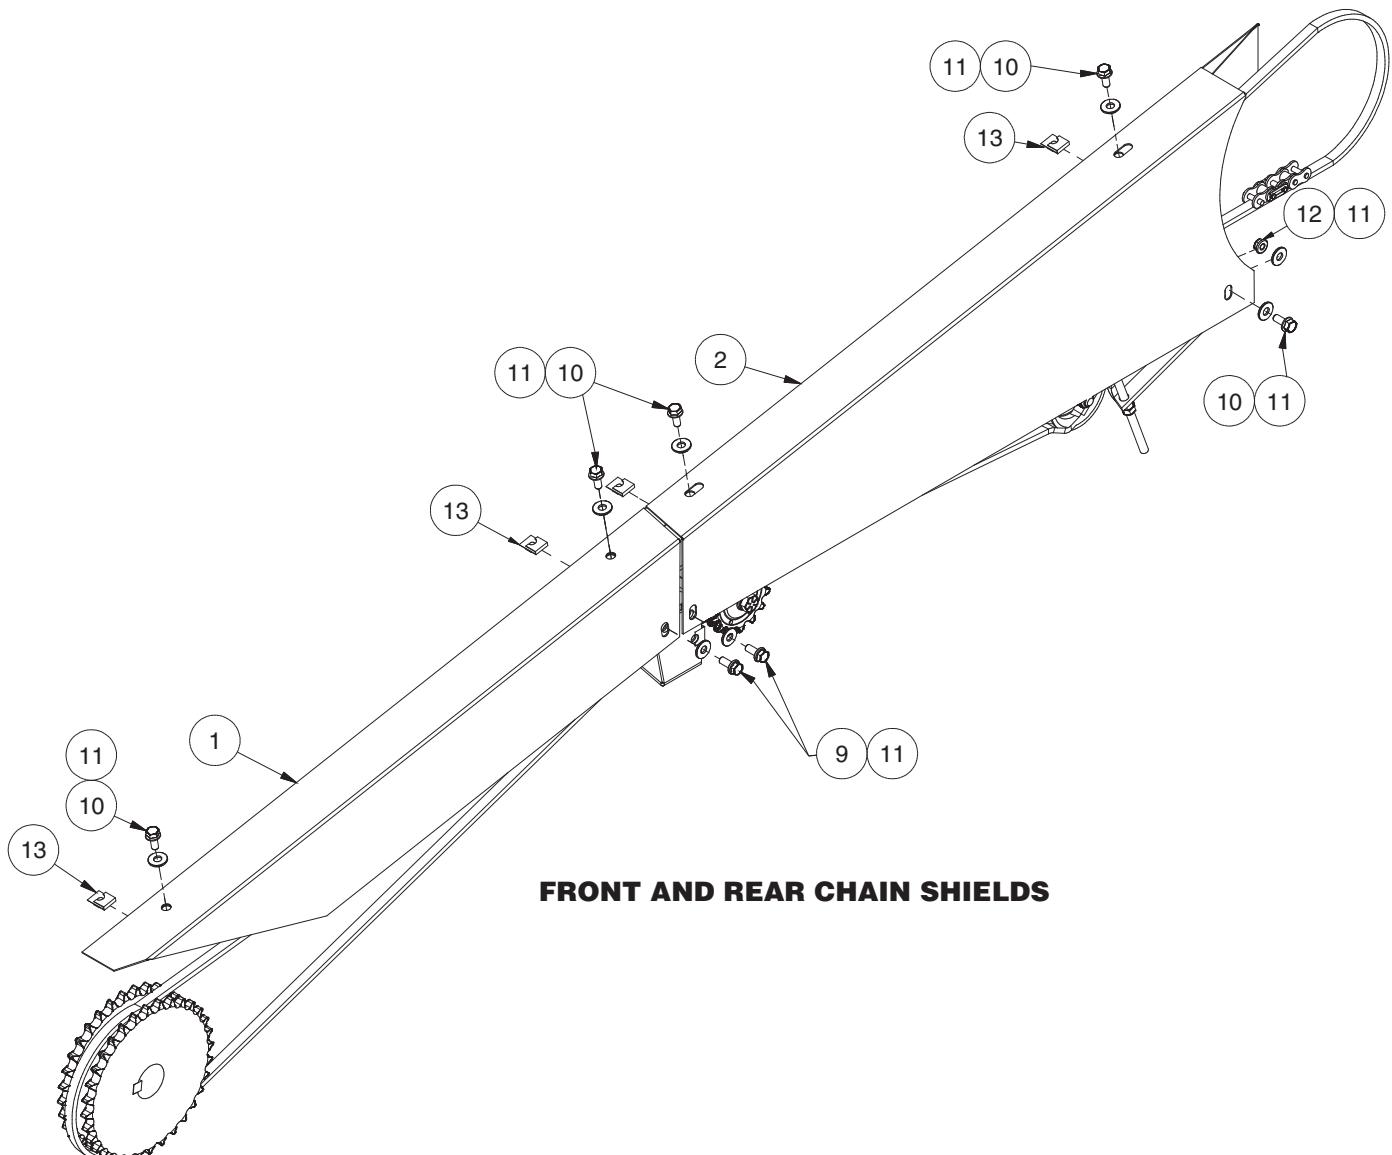


Shielding

Shielding Assembly, Pick Up Drive

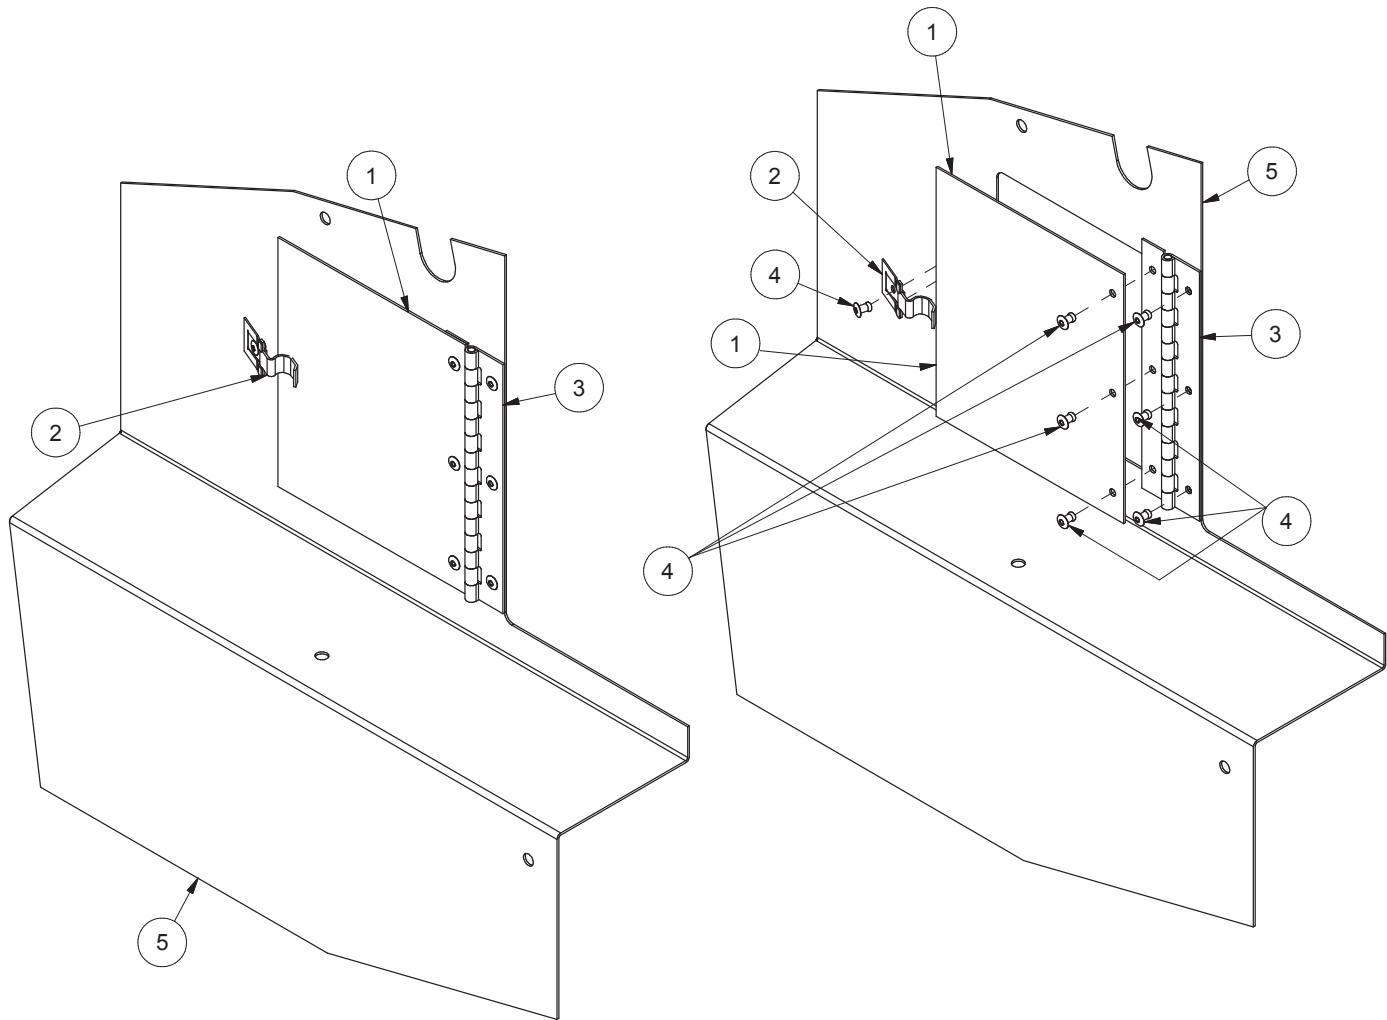

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	SHD0008040		Shield Assembly				
1	DRW0008025	1	. Cover Plate				
2	F000006108	1	. Catch, Inspection Cover				
3	HNG0007094	1	. Hinge				
4	RIV0000604	7	. Rivet				
5	SHD0008026	1	. Plate, Shield				


Shielding Installation, Feed Arm/Con Rod, 14"

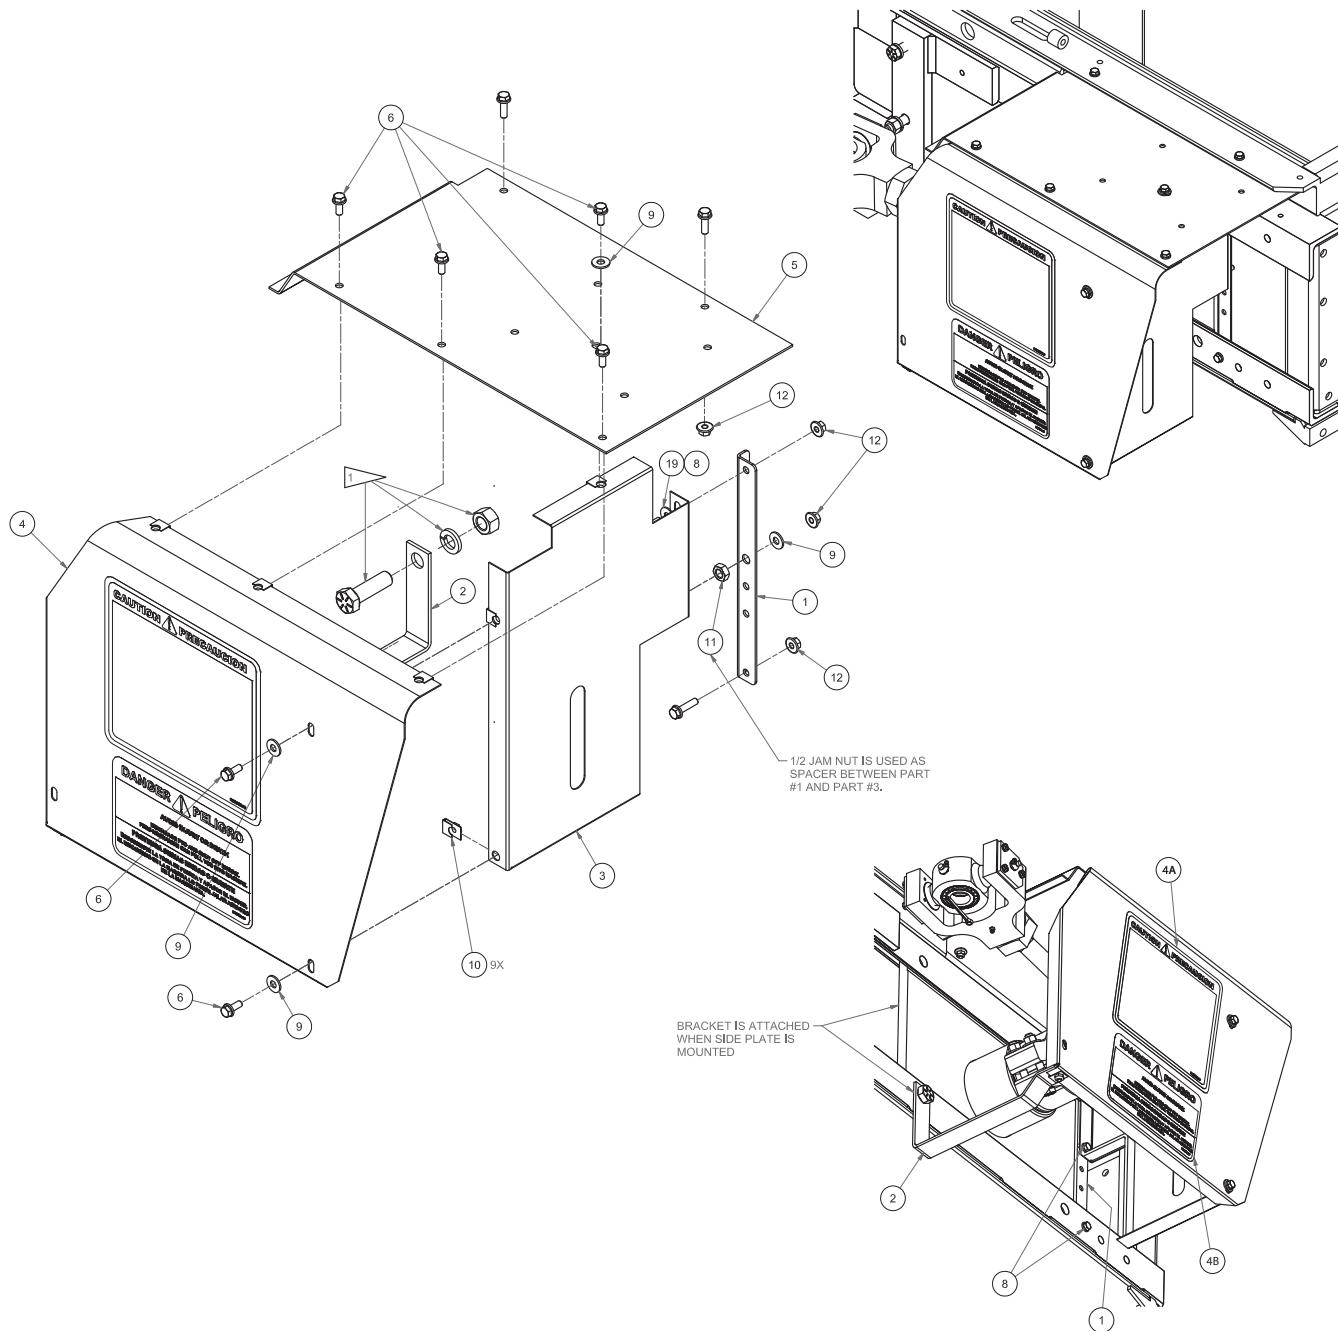

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
905201 Shielding Installation, Feed Arm/Con Rod (14" Engine)							
1	905200	1	. Plate, Fnt	6	SMS0000184	7	. Bolt
2	SHD037328B	1	. Bar, Brace	7	SMS0000177	2	. Bolt
3	903984	1	. Shield, Crank Arm	8	SMS0000815	3	. Bolt
4	903319	1	. Crank Arm Shield w/Decal	9	223428	6	. Washer
4A	FD00023473	1	.. Decal, "Caution"	10	NCC0003125	7	. Nut
4B	FD00025126	1	.. Decal, "Pickup Hazard Warning"	11	221711W	1	. Nut
5	SHD0007002	1	. Plate, Shield	12	00273802	5	. Nut


Shielding

Shielding Inst, Feed Arm/Con Rod, 16"

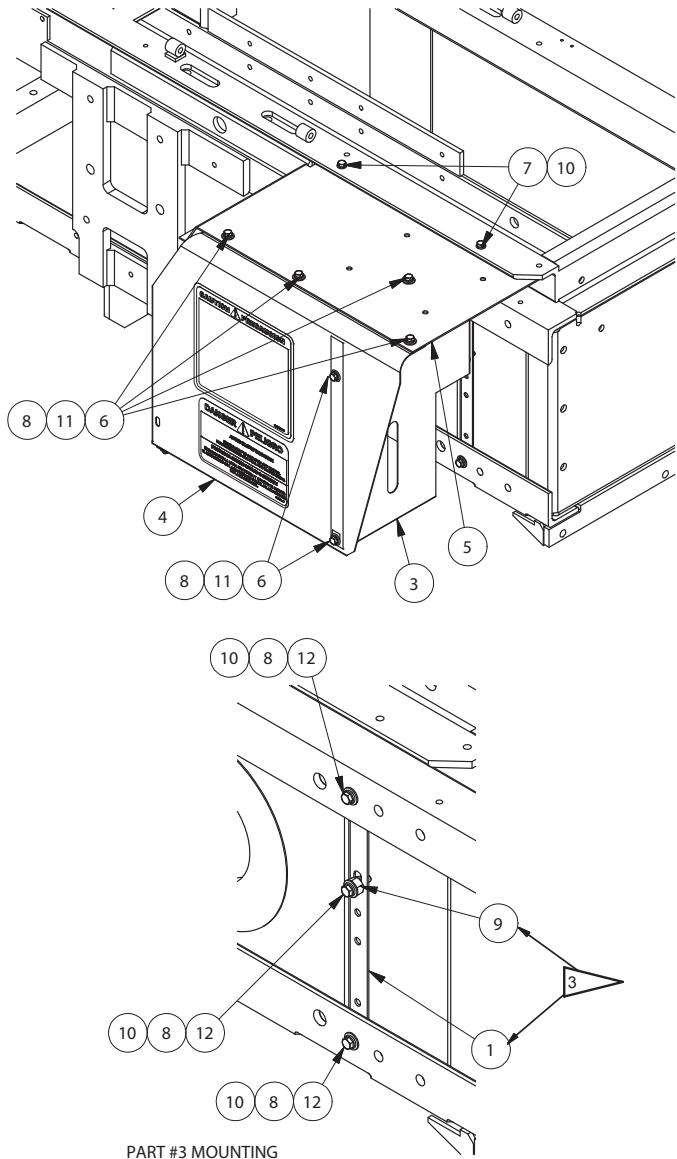

NOTES:


- 1. INSTALL ITEM #2 DURING BULL GEAR INSTALLATION.
- 2. BRACKET IS ATTACHED WHEN SIDE PLATE IS MOUNTED.
- 3. 1/2" NUT IS USED AS SPACER BETWEEN PART #1 AND PART #3.

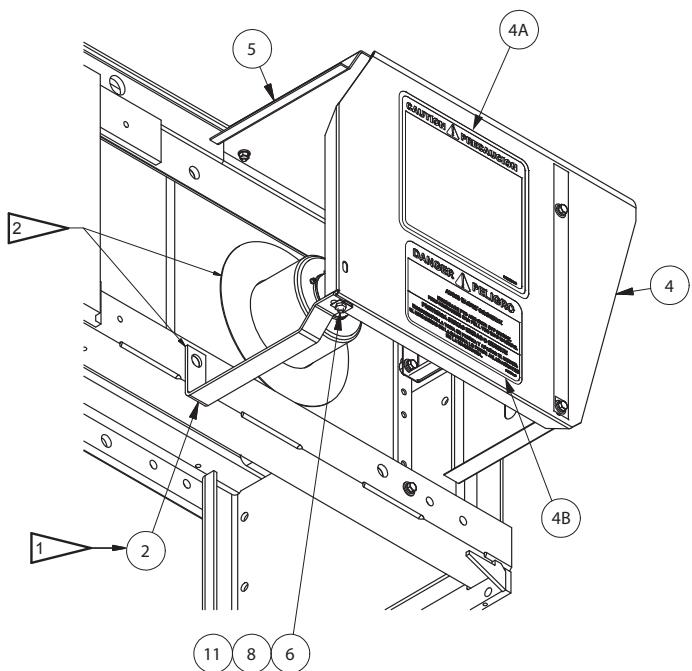


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902811							
1	SHD0006906	1	. Plate, Mounting	7	SMS0000177	2	. Bolt
2	SHD0016332	1	. Plate, Brace	8	223428	10	. Washer
3	903984	1	. Shield, Crank Arm	9	221711W	1	. Nut
4	903319	1	. Crank Arm Shield w/Decal	10	00273802	5	. Nut
4A	FD00023473	1	.. Decal, "Caution"	11	NCC0003125	7	. Nut
4B	FD00025126	1	.. Decal, "Pickup Hazard Warning"	12	SMS0000815	3	. Bolt
5	SHD0007002	1	. Shield				
6	SMS0000184	7	. Bolt				

Rev E

Shielding Installation, Knotter / Drive Arm

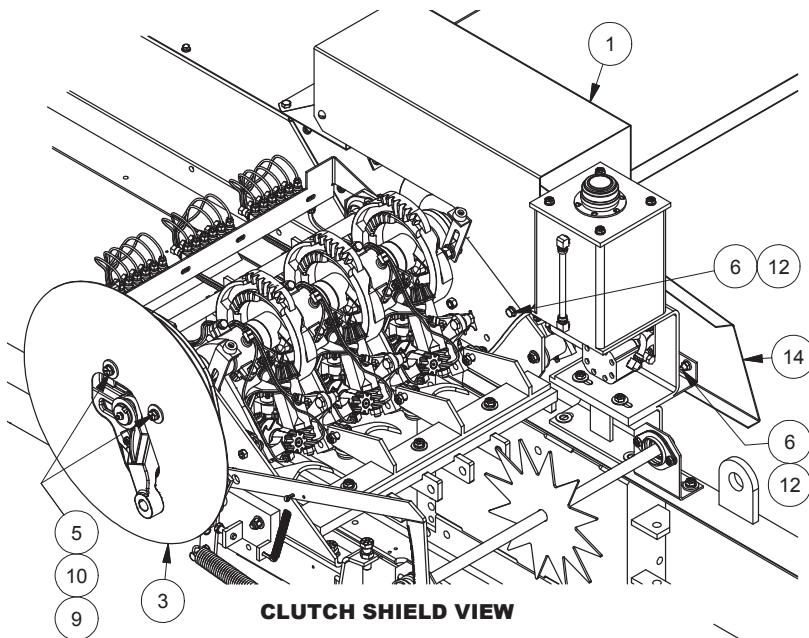

NOTE:
△ 1/2" HEX NUT USED BETWEEN SHIELD AND CLUTCH AS SPACER

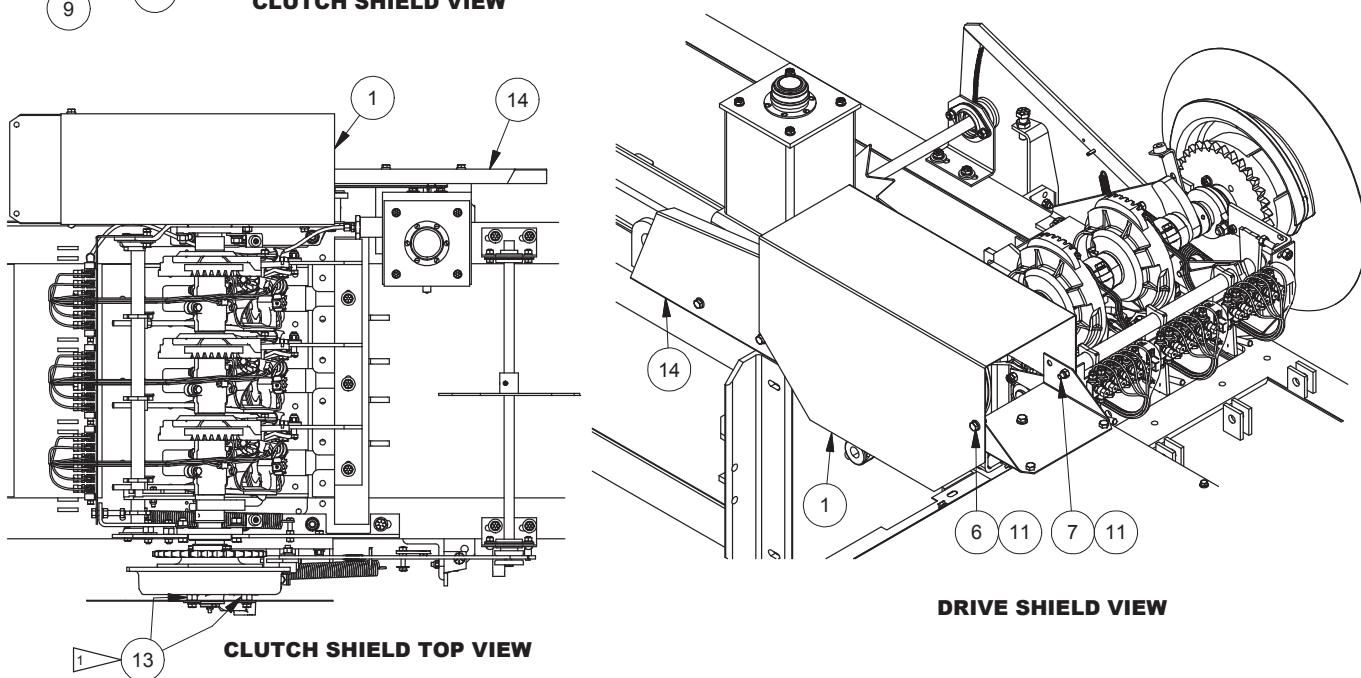


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902812			Shielding Installation				
1	903287	1	. Plate, RH Shield w/Decal	10	R13812514	2	. Lockwasher
1A	FD00023581	1	.. Decal, Caution, Shut Off Motor	11	232939	2	. Nut, Esna
3	F000007987	1	. Knotter Clutch Shield	12	00273802	3	. Nut, Serrated
5	16805W	2	. Capscrew	13	221711W	2	. Hex Nut
6	SMS0000184	4	. Bolt, Whiz	14	F000008203	1	. Plate, Shield
7	235240	1	. Screw, Machine				
9	223427	2	. Washer, Hard				

Rev D


Shielding Installation, Feed House W/Decals, 270

Page 1 of 2

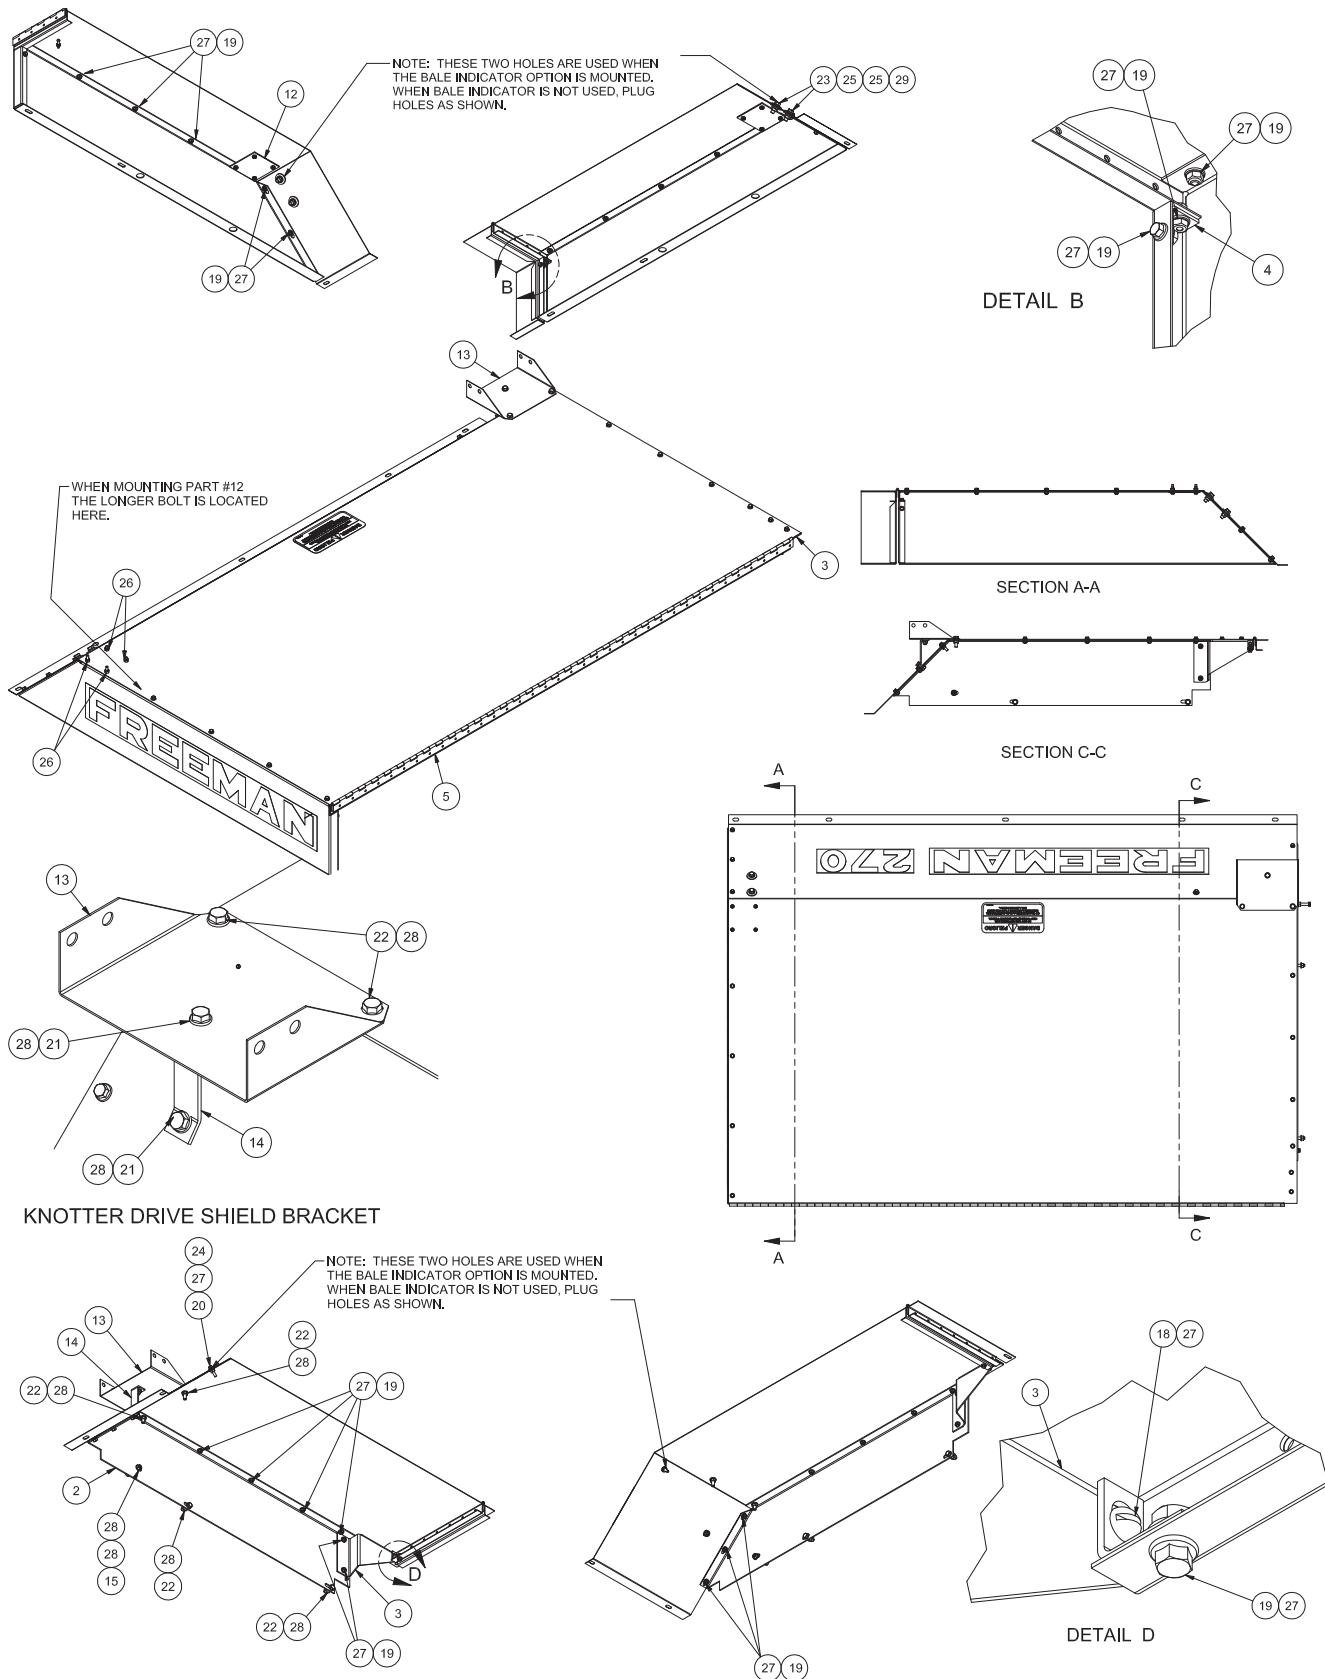

Shielding Installation, Feed House W/Decals, 270

Page 2 of 2

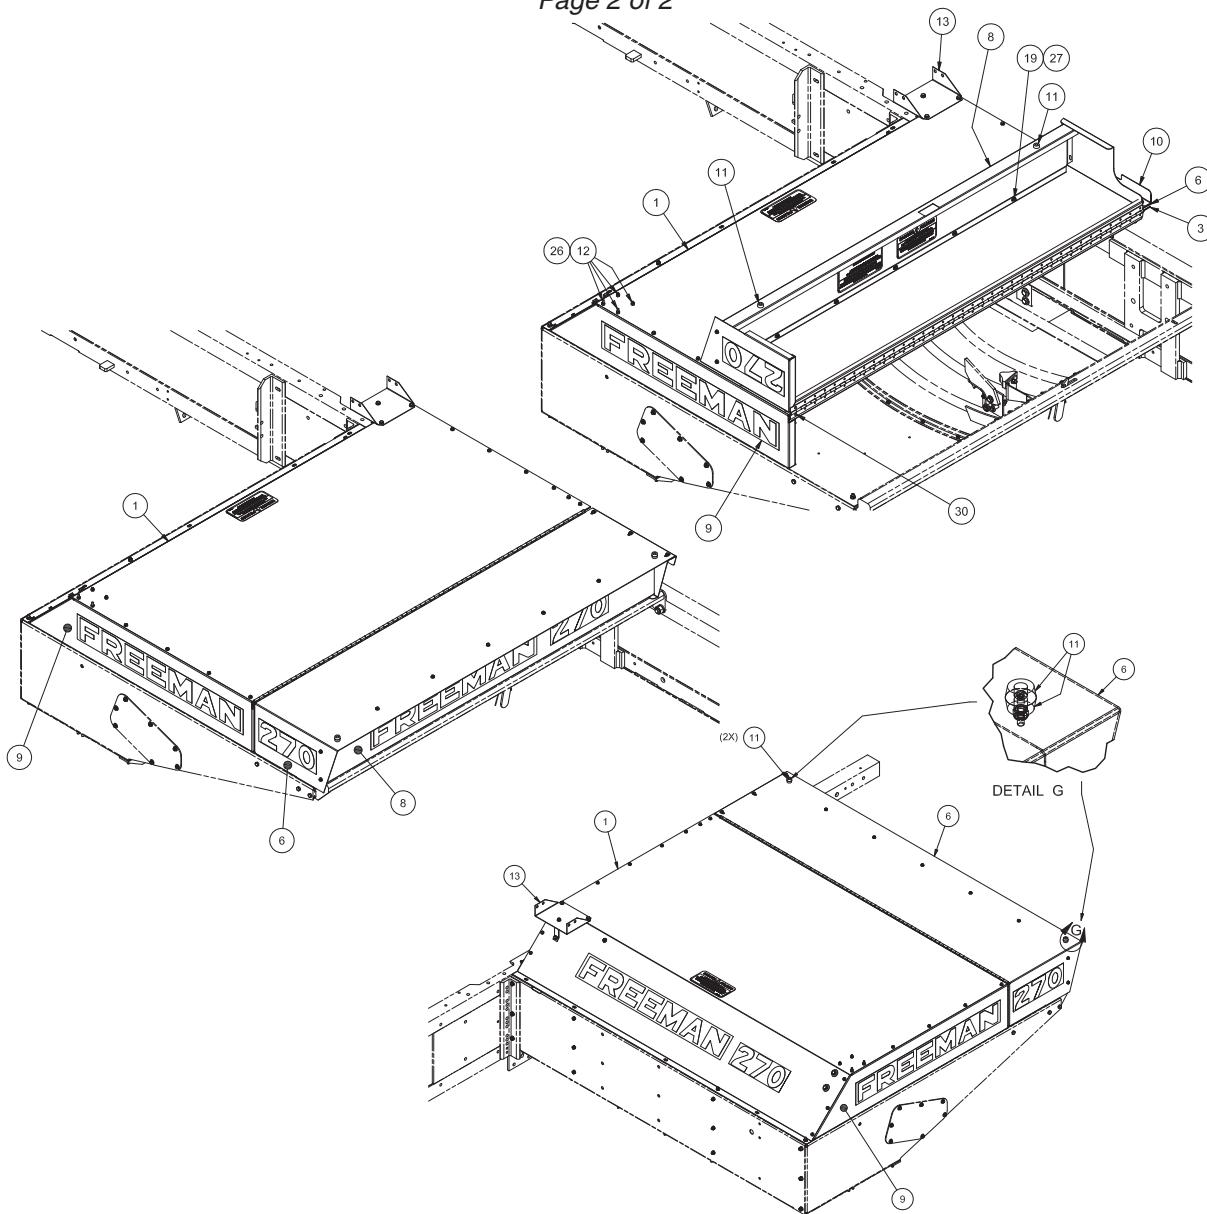


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904085 Shielding Inst,Feed House, 270							
1	903320	1	. Shield & Decal,Rear Pickup	17	00100768	2	. Machine Screw
2	SHD0017231	1	. Plate,Lh Shield	18	R13804248	1	. Machine Screw
3	SUP0017230	1	. Plate,Shield	19	SMS000017332		. Bolt
4	SUP0017229	2	. Bracket	20	SMS0000305	1	. Bolt
5	HNG0020856	1	. Hinge	21	SMS0000184	2	. Bolt
6	904149	1	. Shield & Decal,Top Fnt Sec	22	SMS0000177	4	. Bolt
7	SHD037321D	1	. Plate,Fnt Shield	23	174413W	2	. Screw
8	903308	1	. Shield & Decal,Face Plate	24	223428	1	. Washer
9	903288	1	. Shield & Decal,Rear Sec Pickup	25	223427	4	. Washer
10	SHD037322B	1	. Plate,Shield	26	R13811189	4	. Locknut
11	BMP0004243	6	. Bumper, Rubber	27	09416918	34	. Nut
12	BKT037150A	1	. Bracket Weldment,RH	28	00273802	8	. Nut
13	F000007579	1	. Bracket-Needle Yoke Drive Arm	29	09411507	2	. Nut
14	F000007654	1	. Bracket	30	RIV0000108	72	. Rivet
15	R13811017	1	. Capscrew	31	223799	2	. Nut
16	SMS0000190	2	. Screw				

Rev D


Shielding Installation, Feed House W/Decals, 275

Page 1 of 2

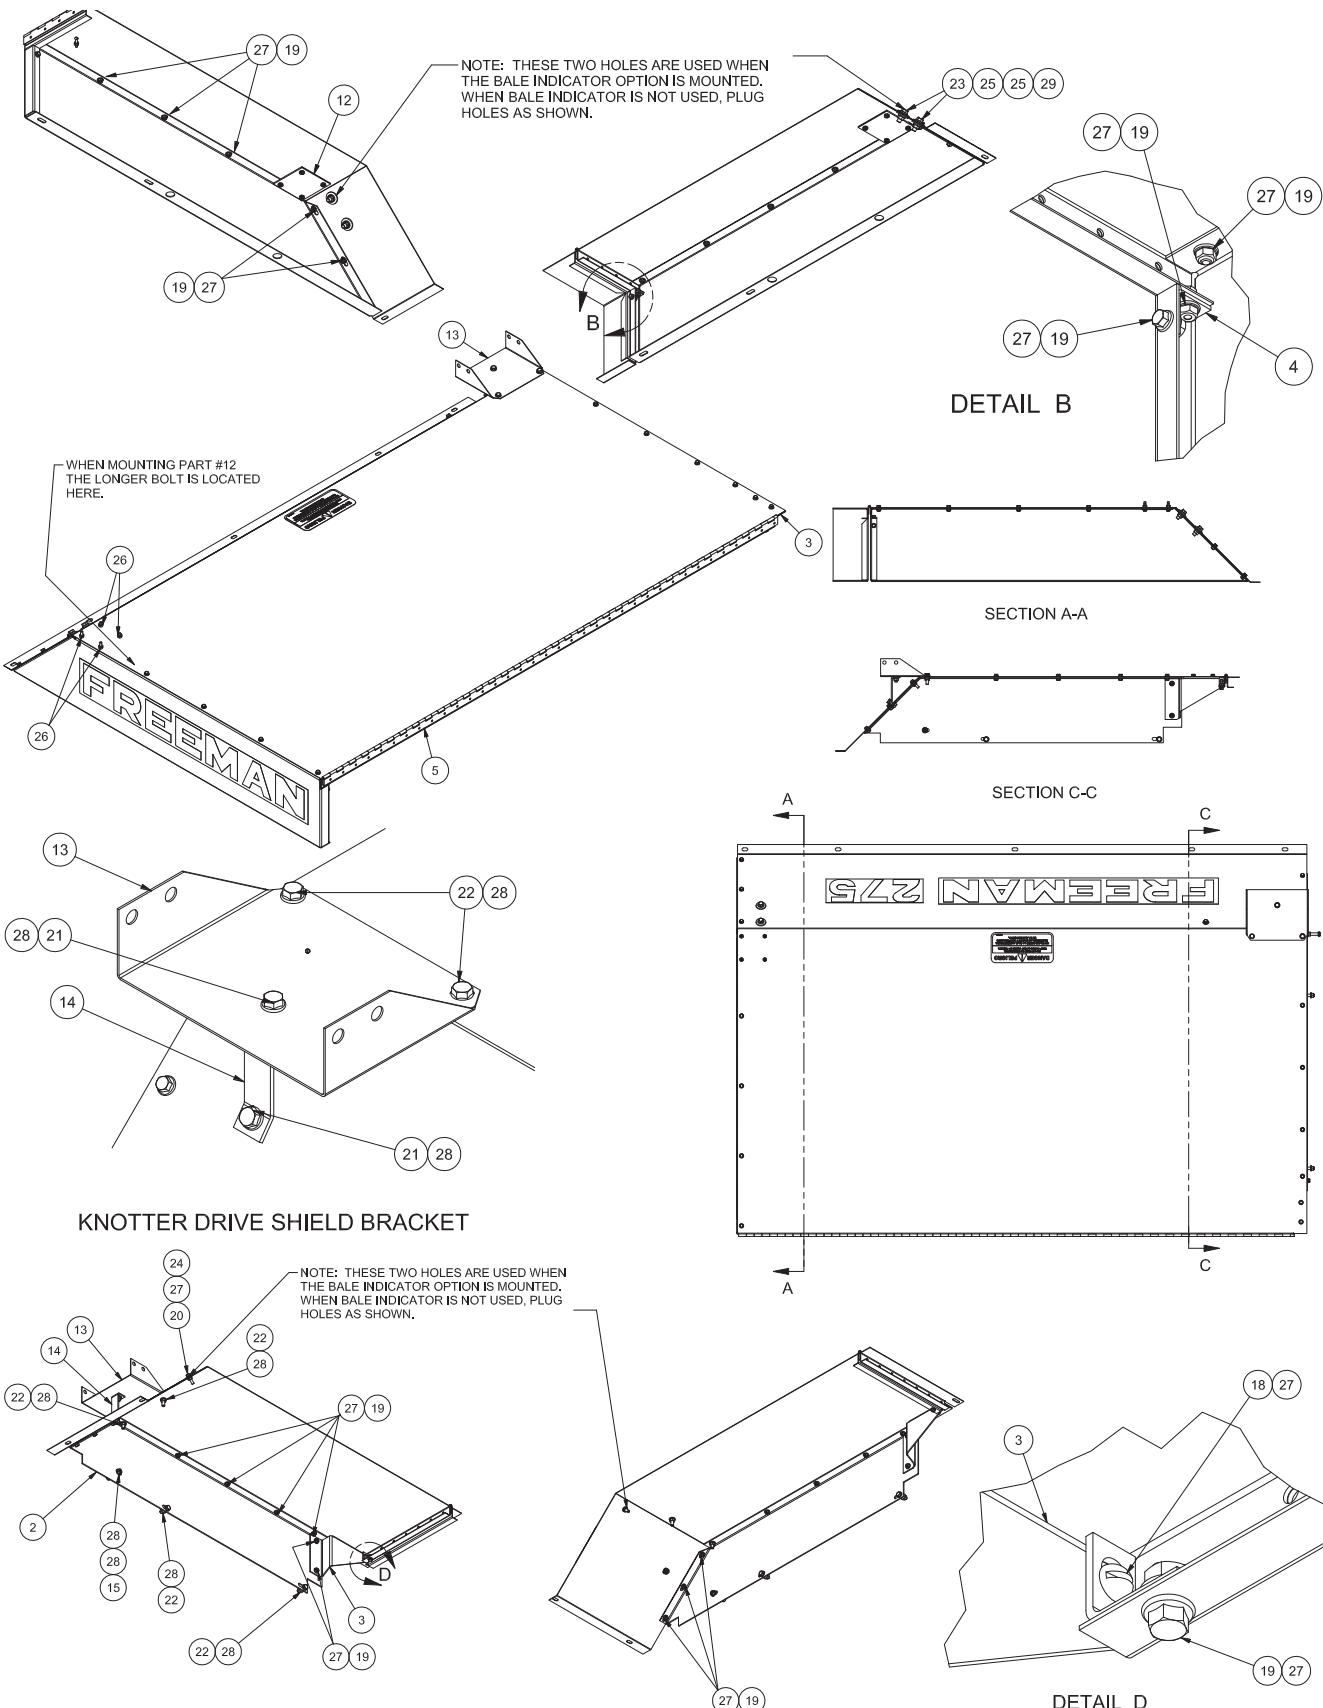

Shielding Installation, Feed House W/Decals, 275



Page 2 of 2

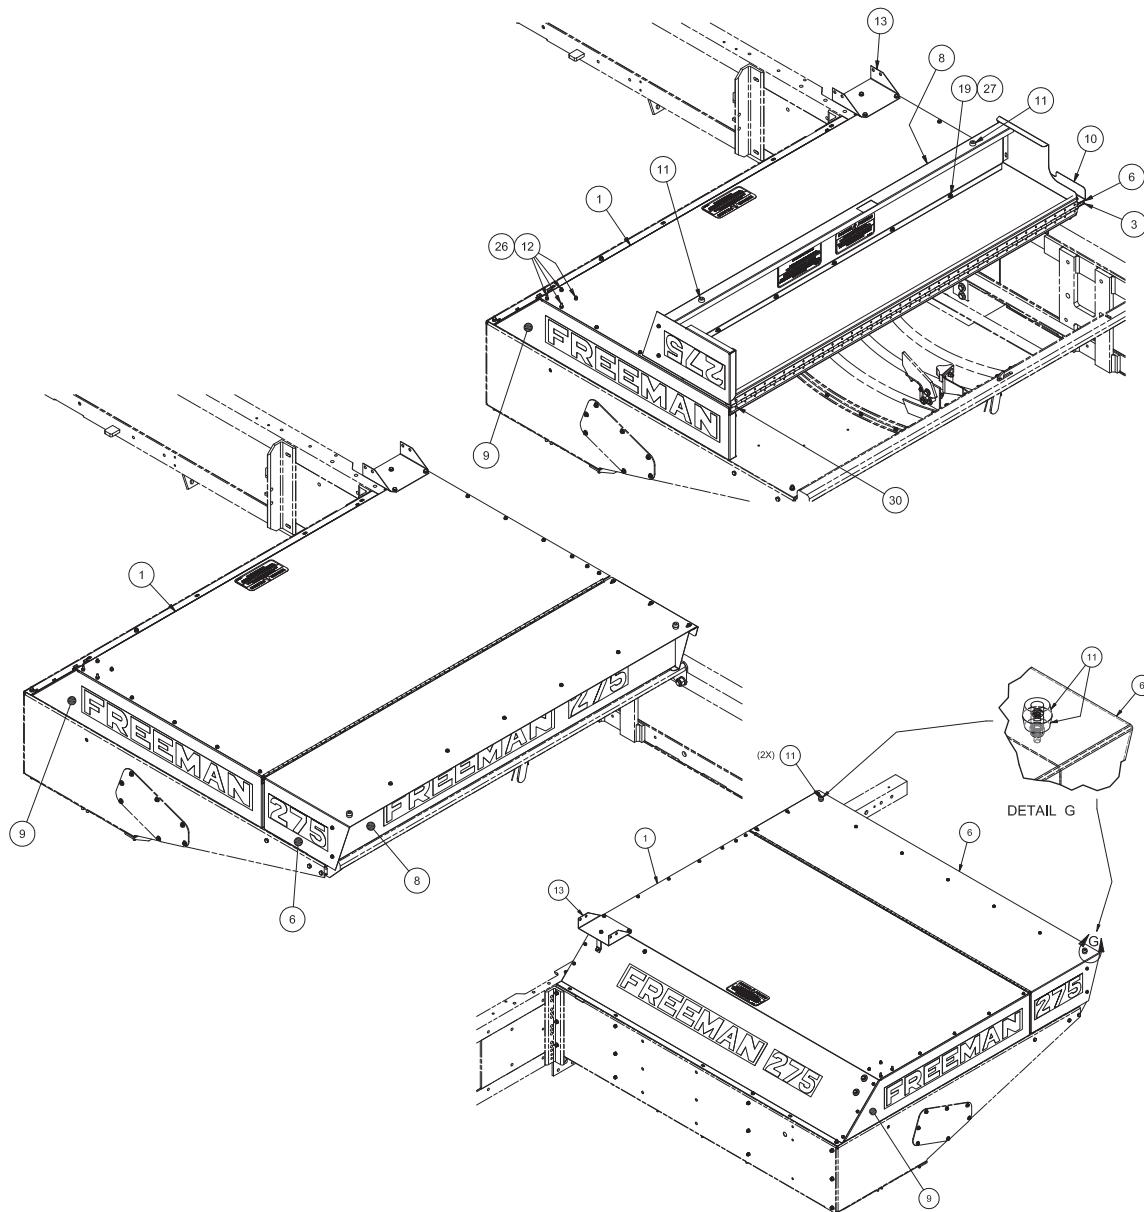

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904086							
1	904151	1	. Shield & Decal,Rear Pickup	17	00100768	2	. Machine Screw
2	SHD0017231	1	. Plate,Lh Shield	18	R13804248	1	. Machine Screw
3	SUP0017230	1	. Plate,Shield	19	SMS000017332		. Bolt
4	SUP0017229	2	. Bracket	20	SMS0000305	1	. Bolt
5	HNG0020856	1	. Hinge	21	SMS0000184	2	. Bolt
6	904150	1	. Shield & Decal,Top Fnt Sec	22	SMS0000177	4	. Bolt
7	SHD037321D	1	. Plate,Fnt Shield	23	174413W	2	. Screw
8	904152	1	. Shield & Decal,Face Plate	24	223428	1	. Washer
9	903288	1	. Shield & Decal,Rear Sec Pickup	25	223427	4	. Washer
10	SHD037322B	1	. Plate,Shield	26	R13811189	4	. Locknut
11	BMP0004243	6	. Bumper, Rubber	27	09416918	34	. Nut
12	BKT037150A	1	. Bracket Weldment,Rh	28	00273802	8	. Nut
13	F000007579	1	. Bracket-Needle Yoke Drive Arm	29	09411507	2	. Nut
14	F000007654	1	. Bracket	30	RIV0000108	72	. Rivet
15	R13811017	1	. Capscrew	31	223799	2	. Nut
16	SMS0000190	2	. Screw				

Rev D

Shielding Installation, Belt, Engine

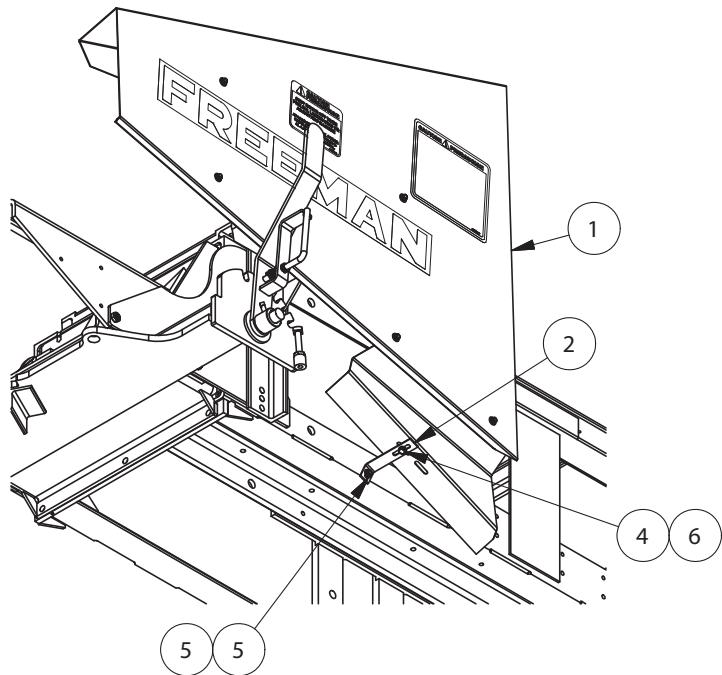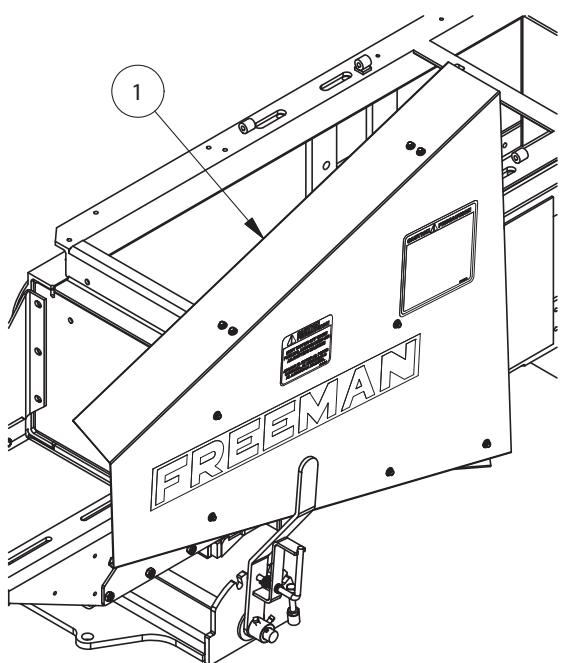


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902813		Shielding Installation, Belt				
1 *a	902240	1	. Shield Subassembly, Belt	5	R13812512	1	. Lockwasher
2	903790	1	. Bracket, Mounting	6	00273802	1	. Nut
3	SMS0000173	1	. Bolt, Whiz	*a See Separate Coverage Page 3-17			
4	SMS0000184	1	. Bolt, Whiz				

*a See Separate Coverage Page 3-17

Rev B


Shielding Assembly, Belt, Engine

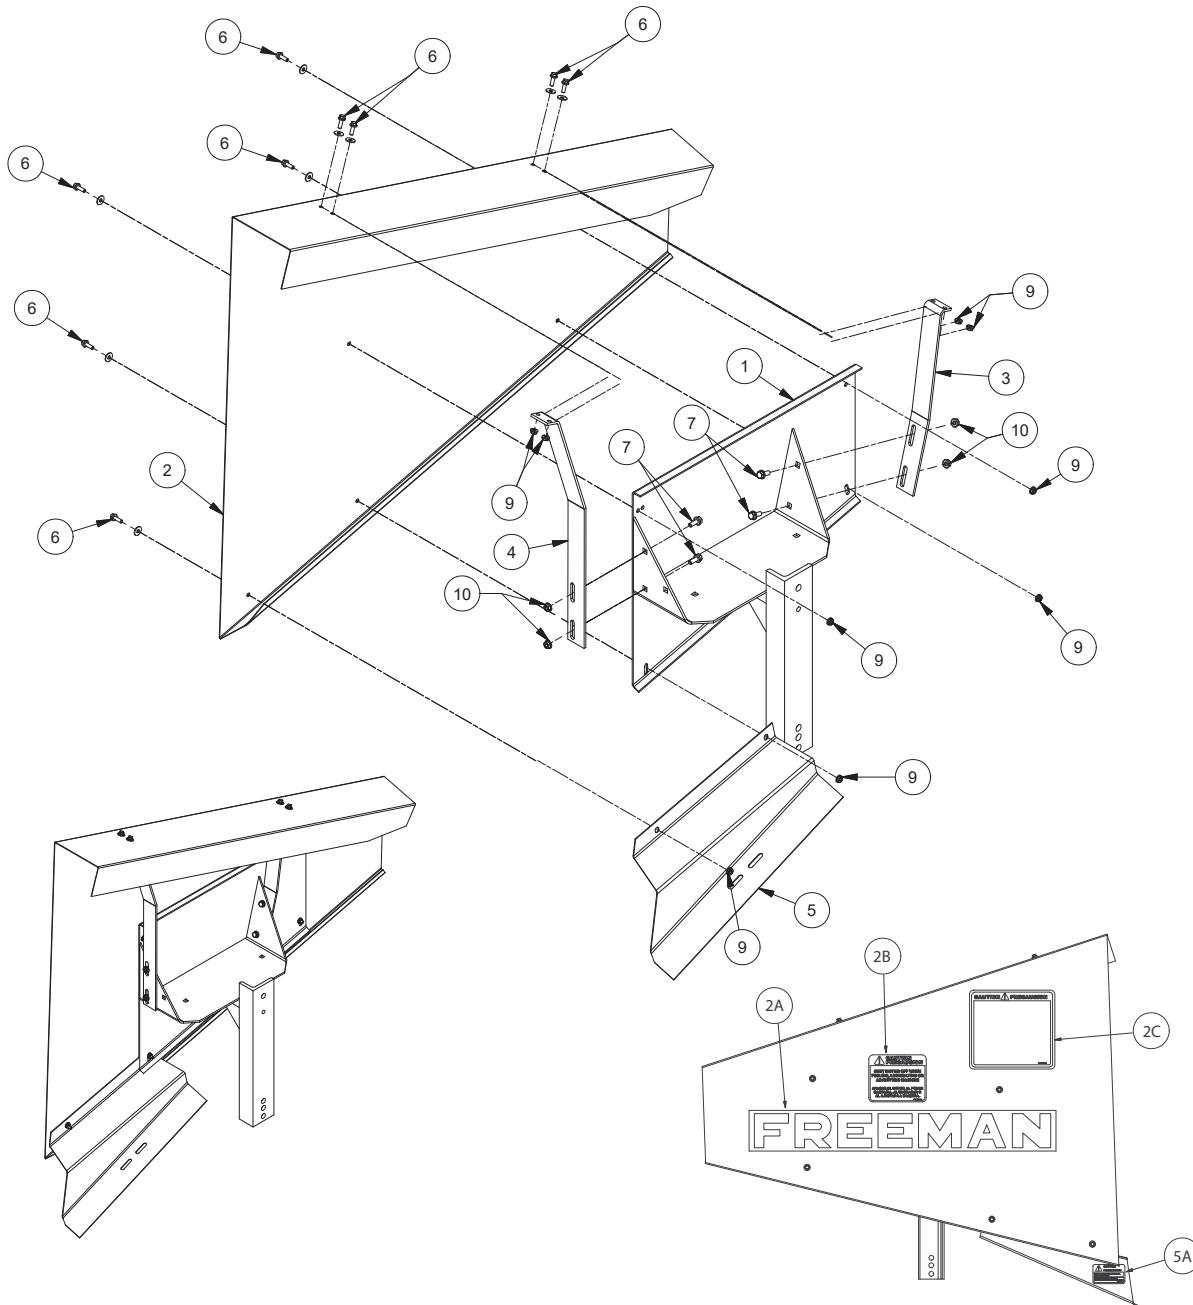

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902240							
1	BKT0017814	1	Shield Subassembly, Belt	5	903281	1	. Belt Shield Extension w/Decals
2	903175	1	. Bracket	5A	FD00023572	1	.. Decal; "Caution Shields Are For..."
2A	FD00007114	1	. Plate, Shield w/Decals	6	399741W	9	. Screw
2B	FD00023581	1	.. Decal; "FREEMAN"	7	SMS0000177	4	. Bolt
2C	FD00023473	1	.. Decal; "Caution Shut Motor Off..."	8	R13811443	9	. Washer
3	BRC0025469	1	.. Decal; "Caution Keep Shields..."	9	09416918	9	. Nut
4	BRC0028437	1	. Plate, Front	10	00273802	4	. Nut
			. Plate, Rear				

Rev D

Shielding Installation, Belt, PTO

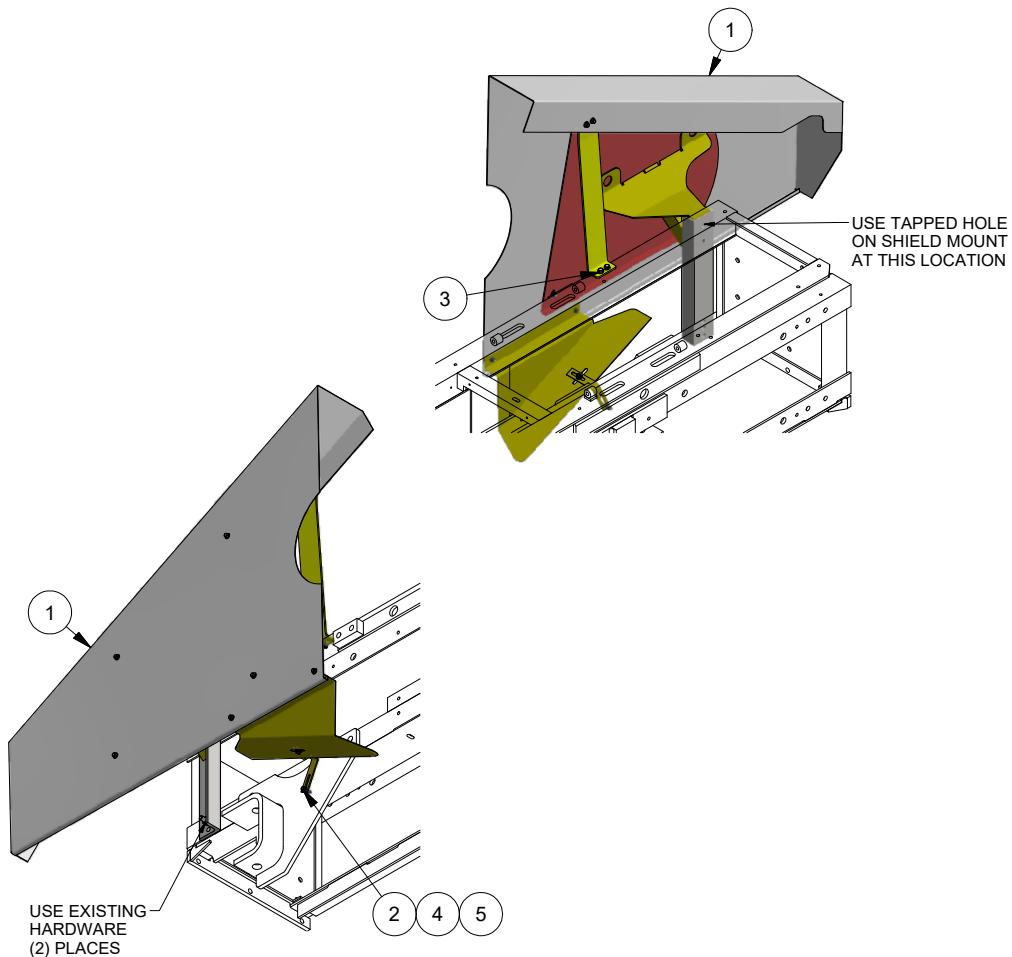


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	910315 *a 910317	1	Shielding Installation, Belt, PTO . Shielding Assembly, Belt, PTO	4	221763W	1	. Washer
2	SMS0000305	1	. Screw, Ser Flg	5	264150W	1	. Nut
3	2305631W	2	. Screw, Ser Flg				

*a See Separate Coverage

Rev -


Shielding Assembly, Belt, PTO

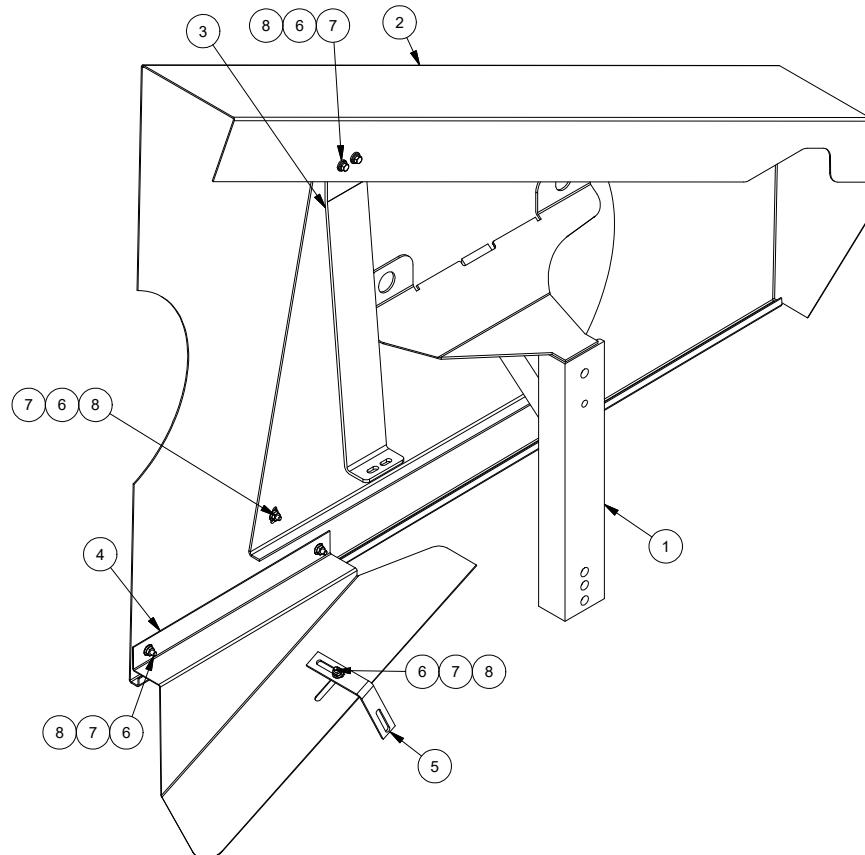

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
			Shielding Assembly, Belt, PTO				
1	904104	1	. Bracket Weldment	5	903790	1	. Bracket
2	904102	1	. Plate, Shield	6	399741W	9	. Screw, Ser Flg
3	910319	1	. Plate, Support Bkt	7	221763W	9	. Washer
4	904108	1	. Plate, Shield Ext	8	264150W	9	. Nut

Rev -

Shielding Installation, Belt, Hydro

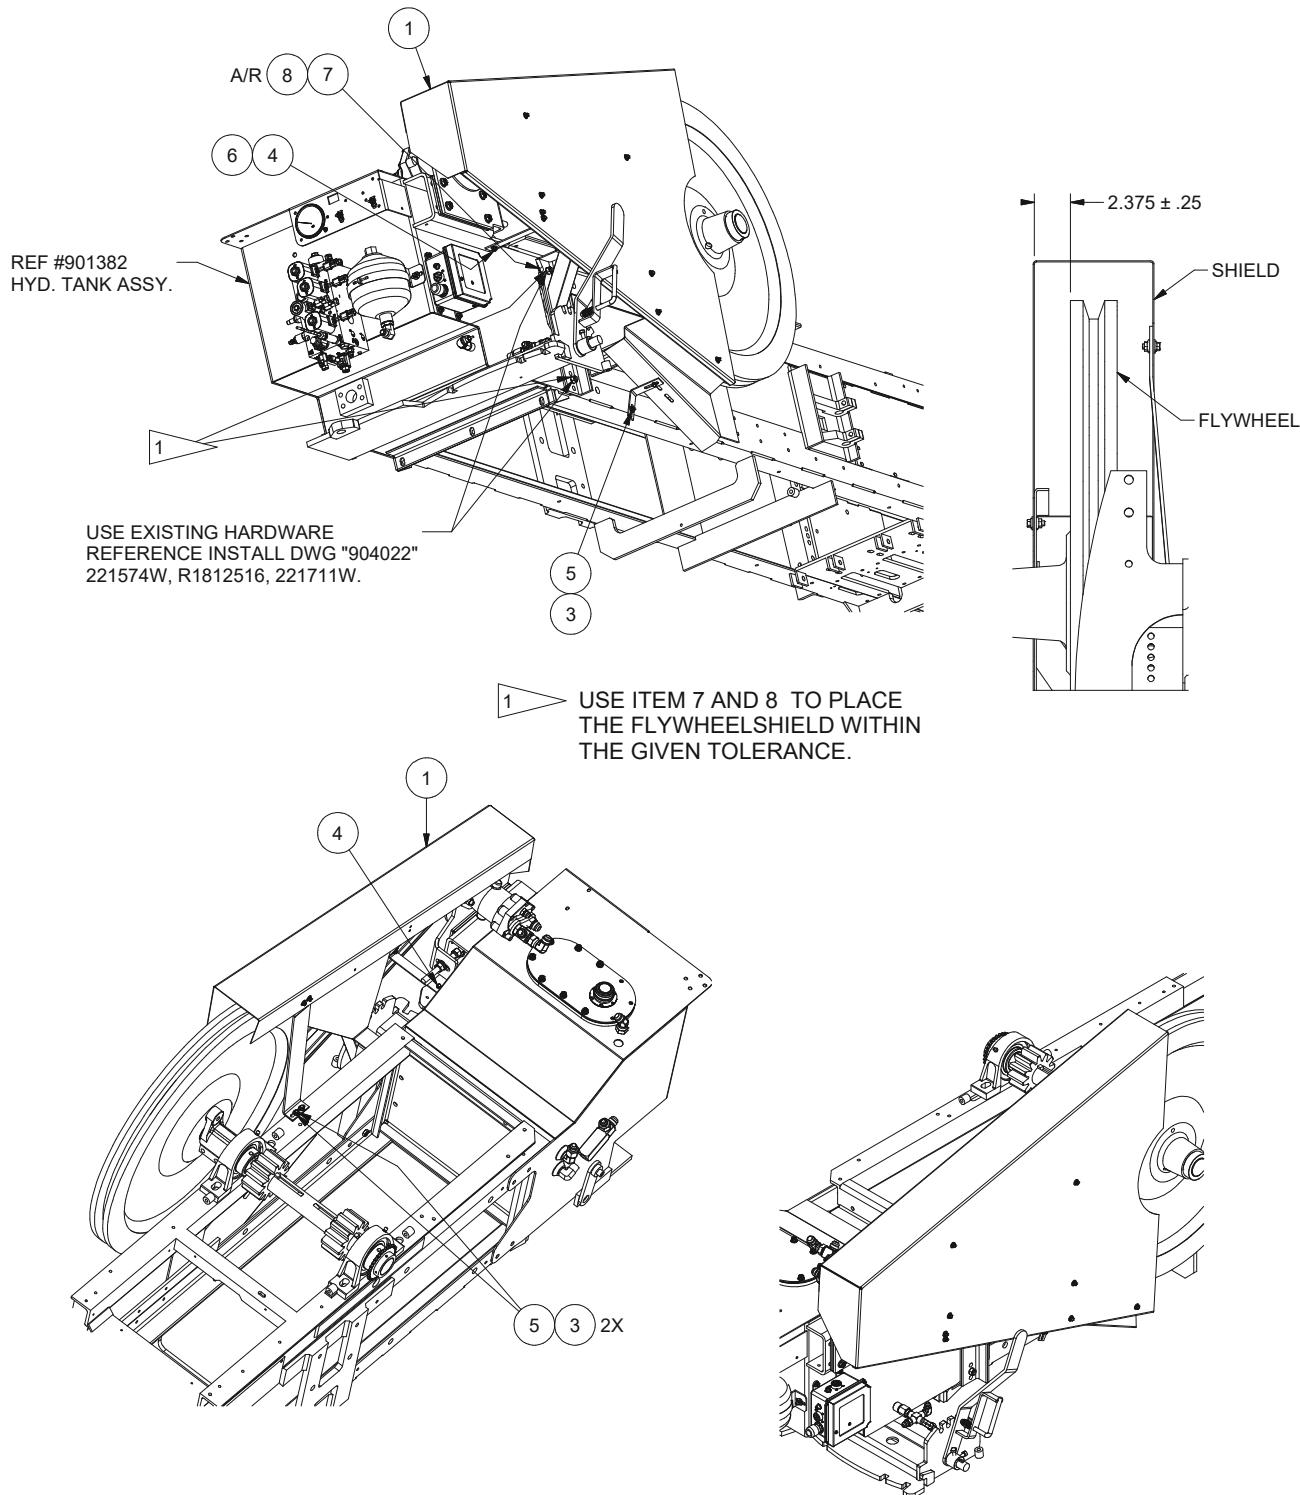


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902814		Shielding Installation,Belt				
1	*a 902815	1	. Shield Sub Assembly, Belt	6	09416918	1	. Nut
3	399741W	3	. Screw	7	SHM0163090	A/R	. Shim
4	SMS0000305	1	. Bolt	8	SHM0163092	A/R	. Shim
5	R13811443	3	. Flat Washer				

*a See Separate Coverage Page 3-21

Rev D


Shielding Assembly, Belt, Hydro

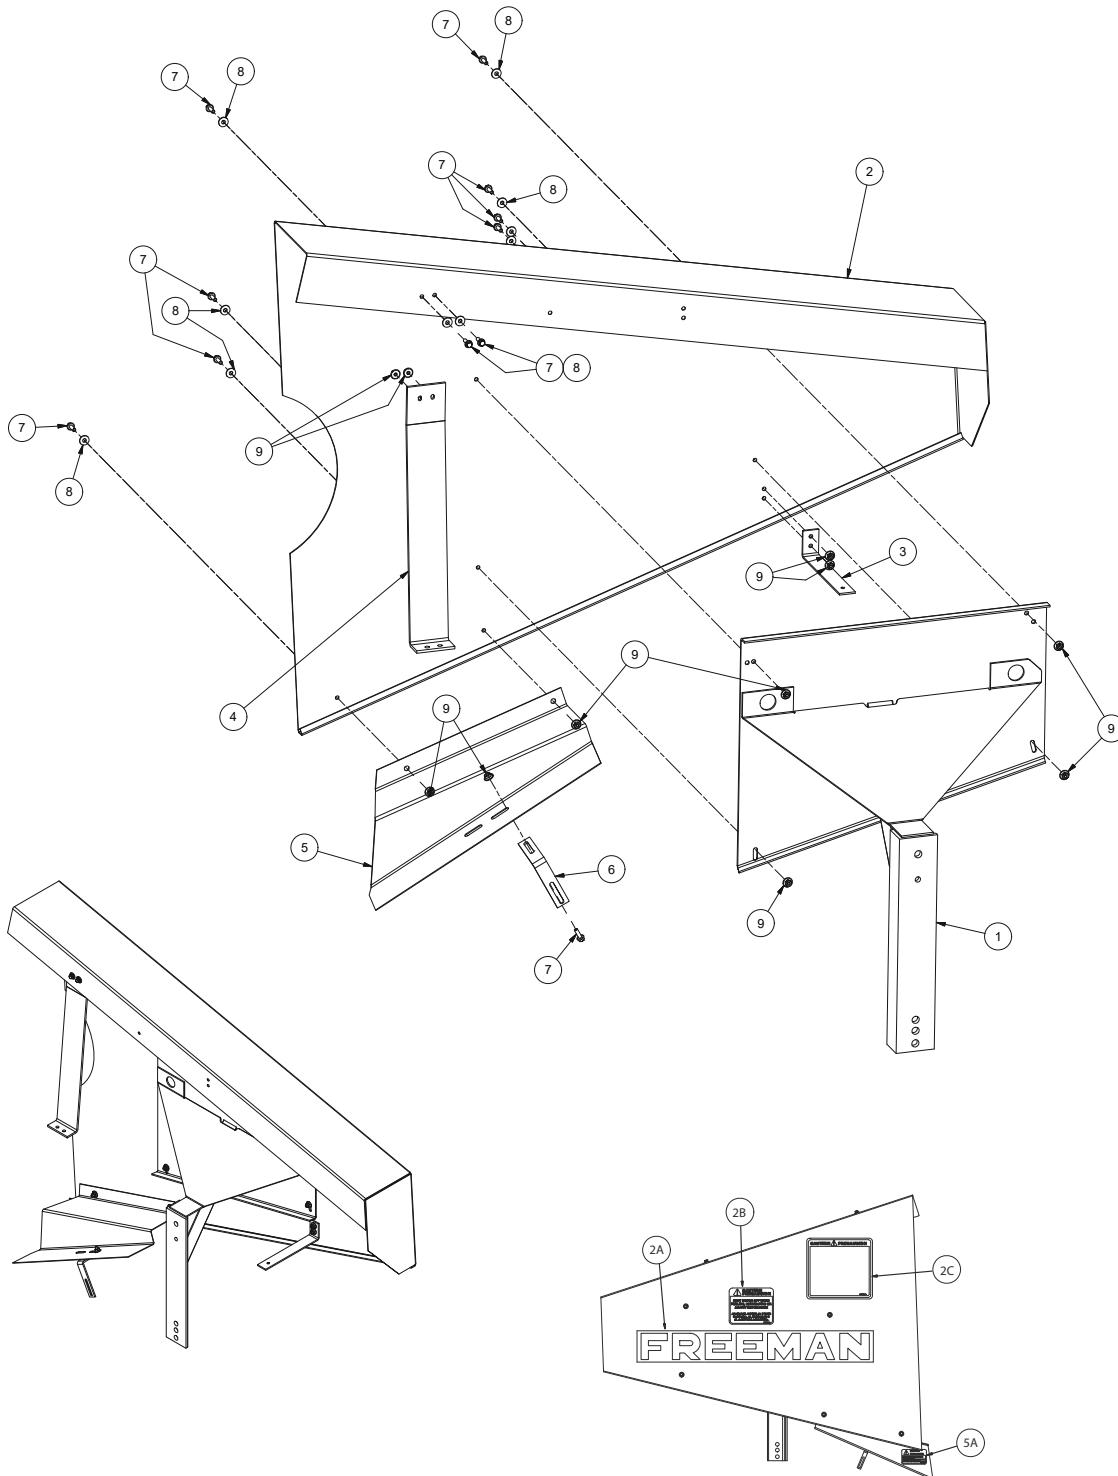

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902815							
1	901725	1	. Bracket	5	SHD0011063	1	. Plate, Shield
2	903276	1	. Plate, Shield W/Decals	5A	FD00023572	1	.. Decal; "Caution Shields Are For..."
2A	FD00007114	1	.. Decal; "FREEMAN"	6	BKT0011131	1	. Bracket
2B	FD00023581	1	.. Decal; "Caution Shut Motor Off..."	7	399741W	11	. Screw
2C	FD00023473	1	.. Decal; "Caution Keep Shields..."	8	R13811443	10	. Washer
3	902403	1	. Bracket, Support	9	09416918	11	. Nut
4	902440	1	. Bracket				

Rev A


Shielding Installation, Top Chamber, Hydro

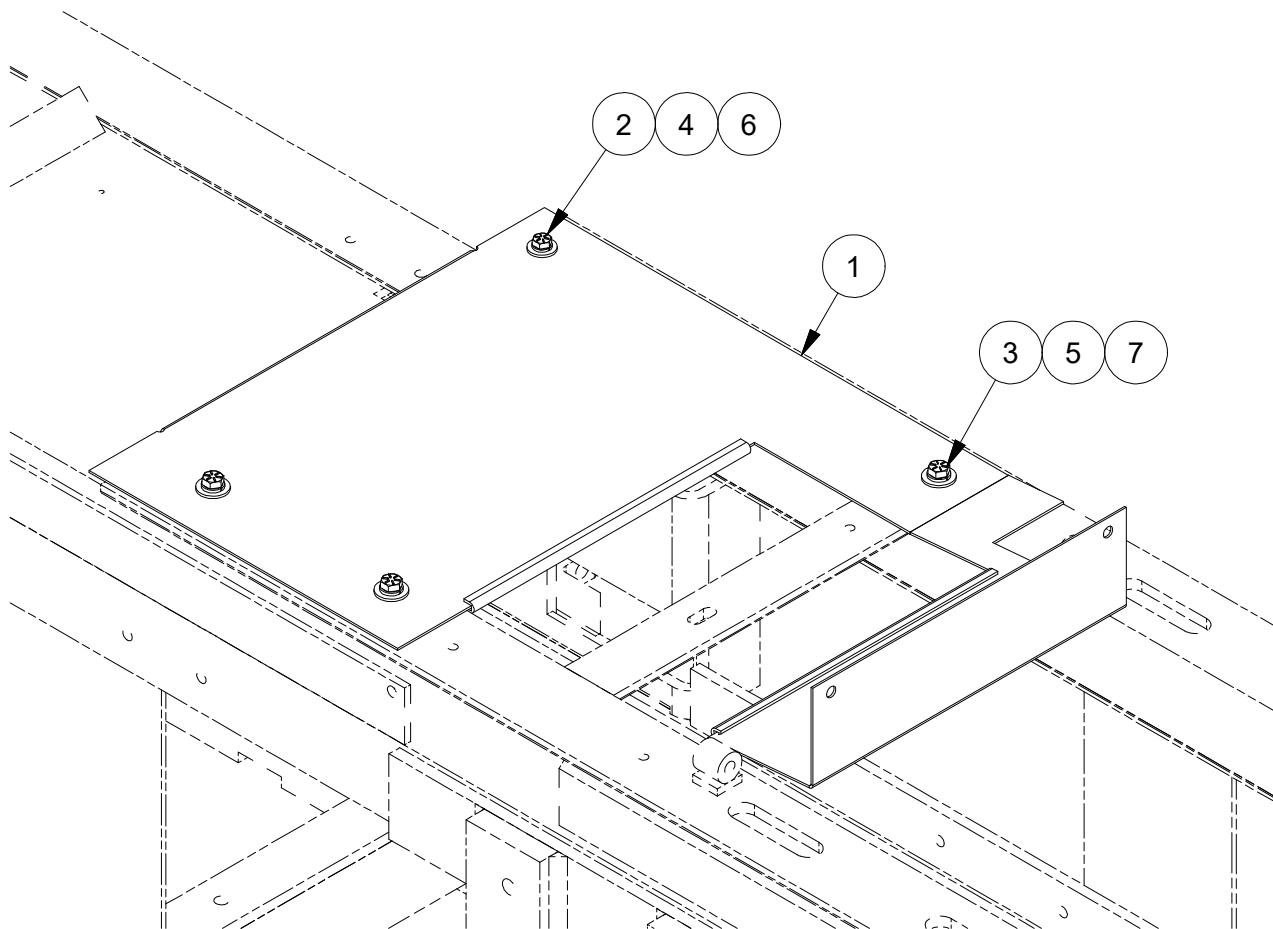

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	910261		Installation, Top Chamber Shield	5	15176W	3	. Washer
2	910262	1	. Assembly, Top Chm Shd	6	R13812513	1	. Lockwasher
3	R13801791	1	. Capscrew	7	R13812514	3	. Lockwasher
4	162572W	3	. Capscrew				
	223428	1	. Washer				

Rev-

Shielding Installation, Meter Wheel

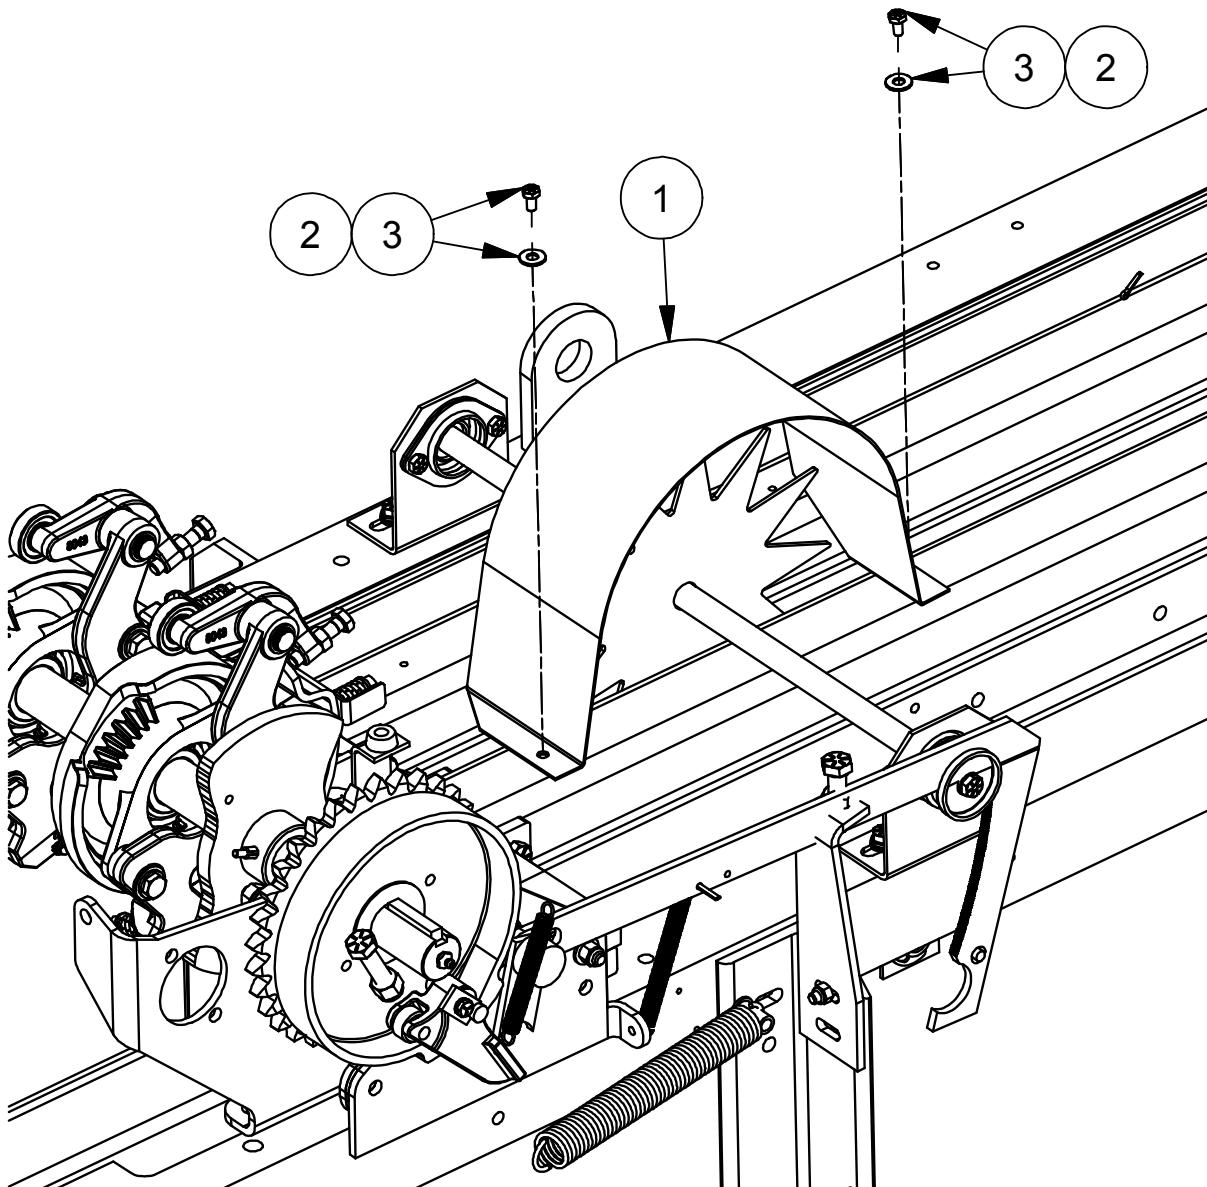


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	906531		Shielding Installation, Meter Wheel				
1	F000001608	1	. Shield, Meter Wheel				
2	R13811443	1	. Washer, Flat				
3	R13810989	1	. Capscrew				

Rev A

Shielding

Bullgear Shield Installation, Hydro/Driveline/SP Balers

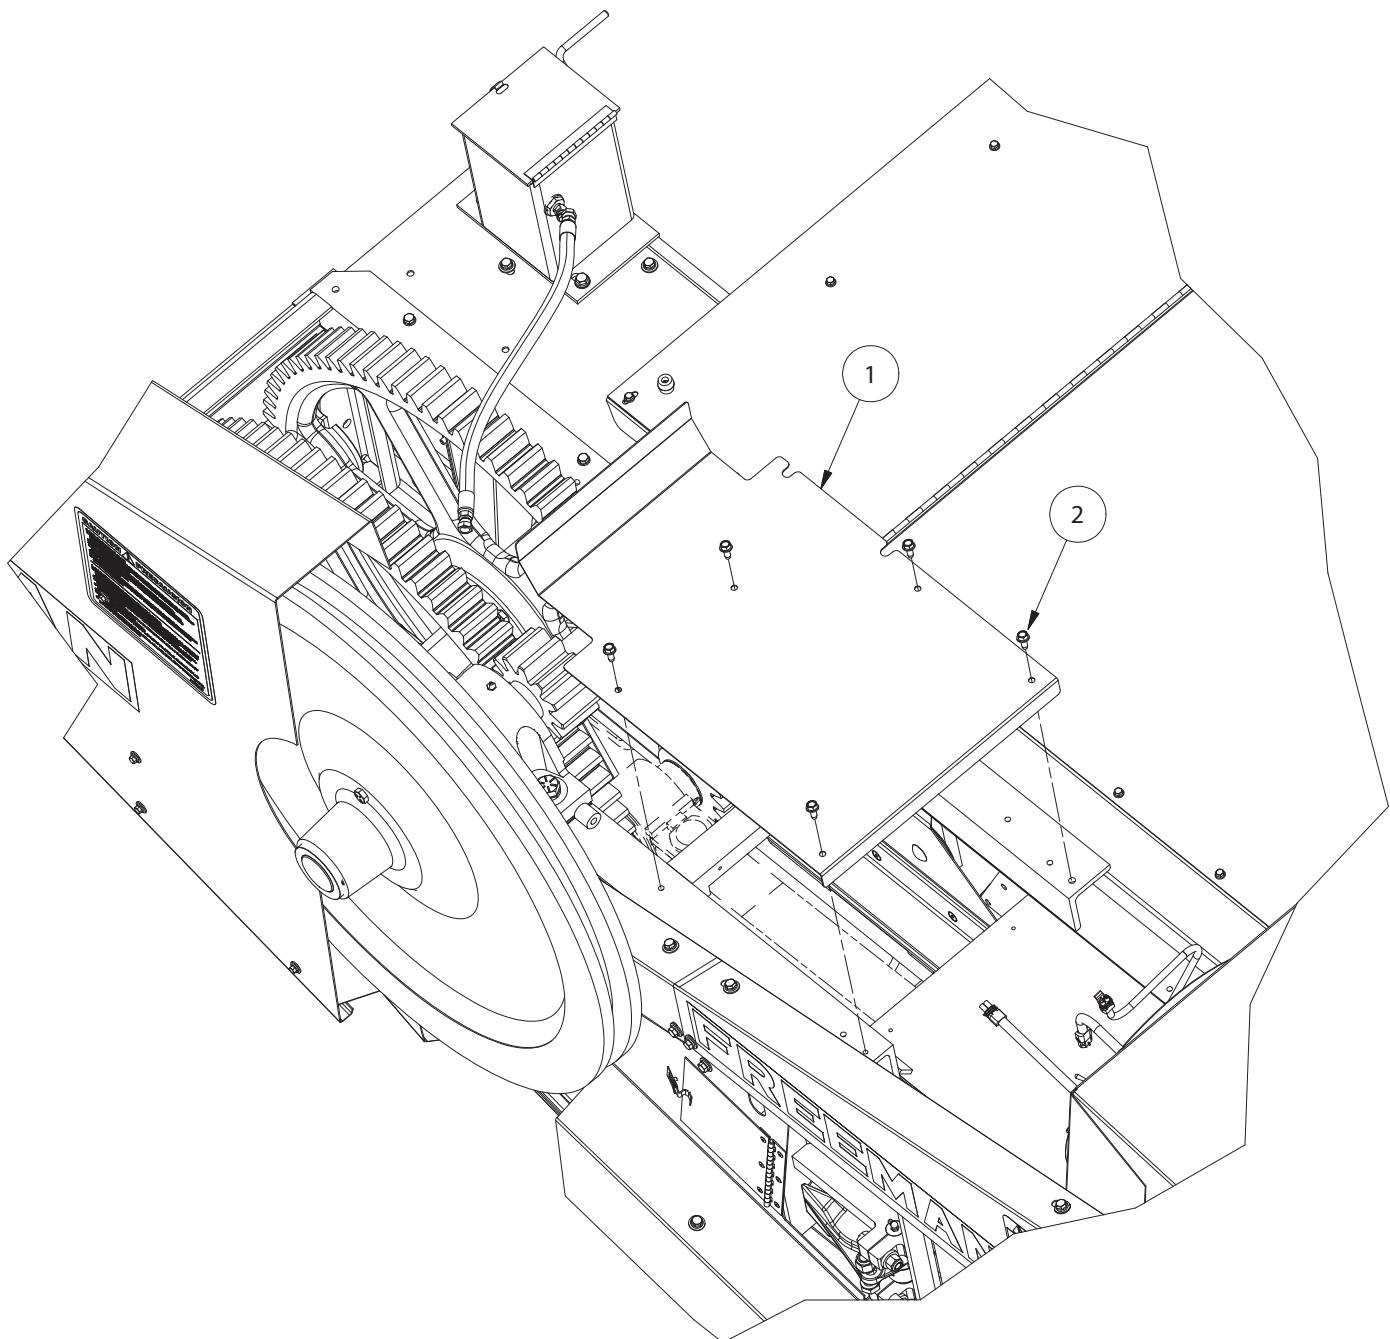


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
Bullgear Shield Installation							
1	SHD037388E	1	Bullgear Shield				
2	SMS0000198	5	Whiz Bolt				

Section 4 Power Unit

Engine Installation	4-3
. Air Cleaner Assembly.....	4-4
. Engine Assembly	4-5
.. Control Box Assembly.....	4-6
.. Module Assembly.....	4-10
... Clutch.....	4-11
Snorkel Installation	4-13
. Snorkel Assembly with Door	4-14
. Side Support Bracket Assembly.....	4-15
Fuel Tank Installation, 16 Gallon.....	4-16
. Fuel Tank Assembly, 16 Gallon	4-18
Driveline PTO Installation, 2-Tie Bullgear.....	4-19
. Driveline Assembly.....	4-24

This page is intentionally left blank.


Engine Installation

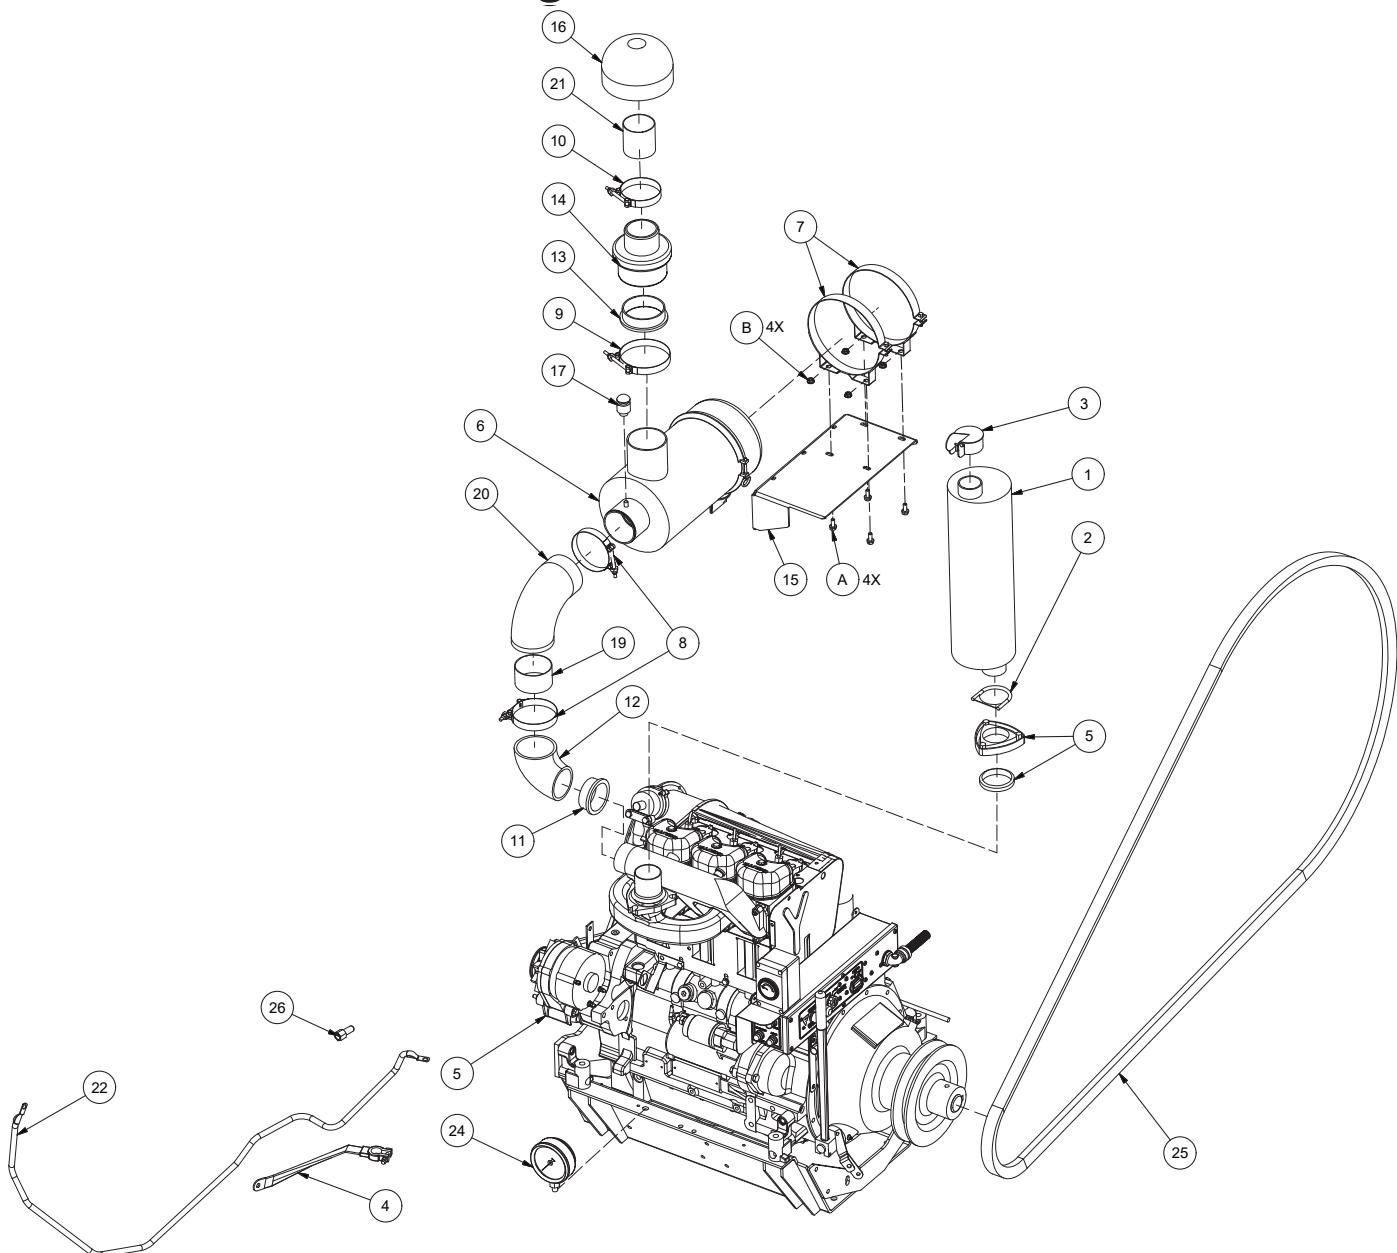

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902964 Engine Installation							
1	252293	1	. Muffler	17	ACL0000004	1	. Indicator
2	CLP0035751	1	. Exhaust Clamp	19	902904	1	. Tube, Spacer
3	EXH0011007	1	. Exhaust Cap	20	902909	1	. Elbow
4	F000007742	1	. Battery Ground Strap 12 Volt	21	902913	1	. Tube
5	*a DTZ3CYL-FA	1	. Engine Assembly	22	CBL0000126	1	. Cable Assembly, Battery
6	*b 254896	1	. Air Cleaner Assembly	23	F000007010	2	. Engine Adjusting Bolt-Plated
7	ACL0004307	2	. Band, Mounting	24	253403	1	. Gauge, Tension Controlled
8	207146	2	. T-Bolt Clamp	25	F000007000	1	. Belt, Drive
9	207147	1	. T-Bolt Clamp	26	HYD5275032	1	. Fitting
10	225370	1	. T-Bolt Clamp	A	-----	-----	. Bolt
11	ACL0000005	1	. Insert, Rubber	B	-----	-----	. Nut
12	4200115	1	. Elbow, Rubber				
13	255118	1	. Reducer, Insert	*a See Separate Coverage Page 4-5			
14	255120	1	. Reducer, Hump Hose	*b See Separate Coverage Page 4-4			
15	902789	1	. Plate, Mounting				
16	252742	1	. Precleaner				

Rev C


Air Cleaner Assembly

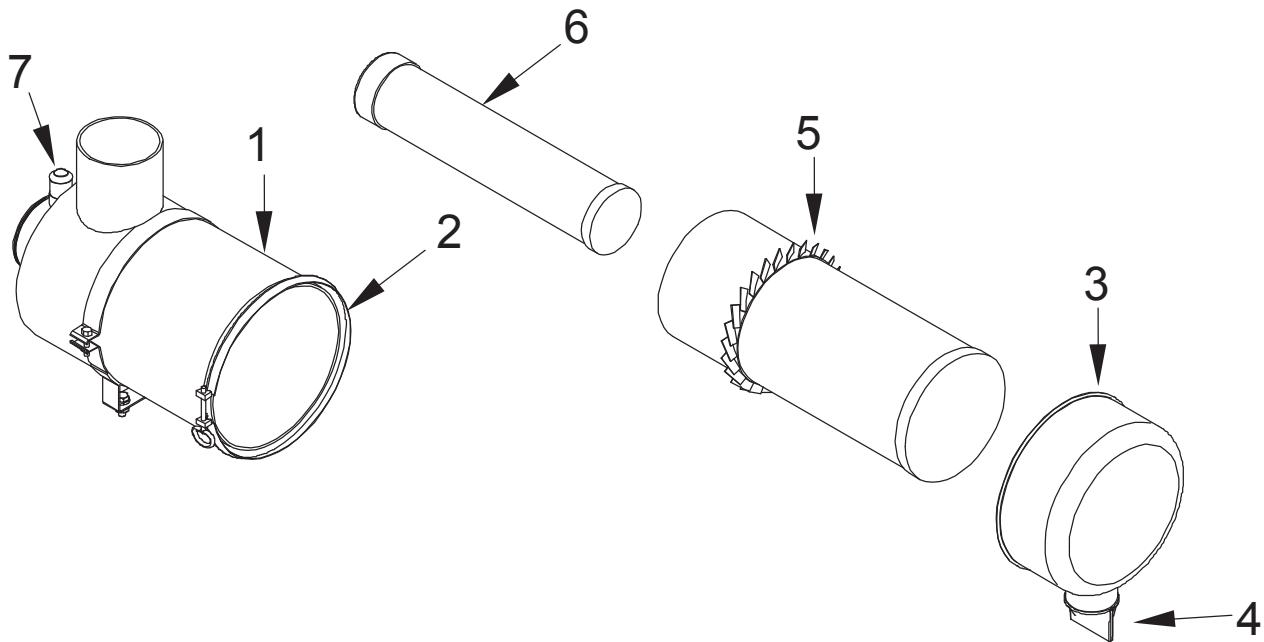

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	254896		Air Cleaner Assembly				
1	255496	1	. Body	5	255494	1	. Filter
2	255492	1	. Body Clamp	6	255495	1	. Filter, Safety
3	255493	1	. Cover	7	ACL0002251	1	. Mini Restriction Indicator
4	255497	1	. Valve, Actuator				

Rev A

Engine Assembly

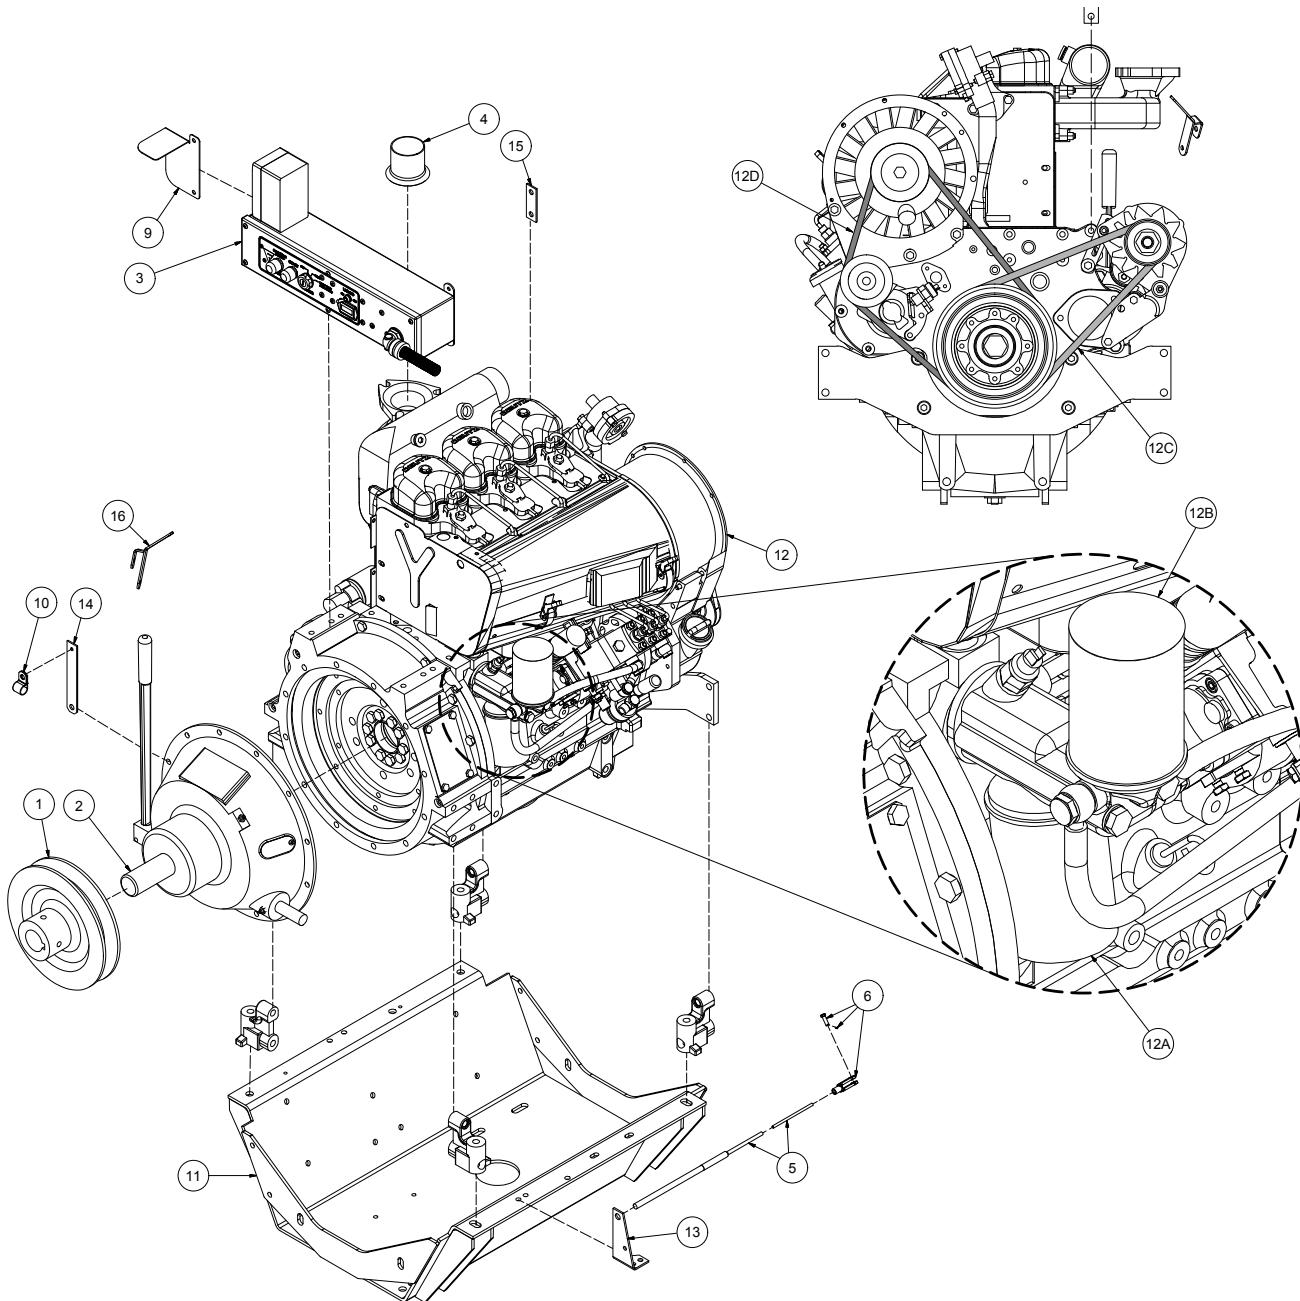

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
DTZ3CYL-FA							
1	F000007699	1	. Motor Pulley	12	252565	1	. Engine
2	*a CLH0001084	1	. Clutch	12A	252494	1	. Filter, Oil
3	*b 903907	1	. Control Box Assembly	12B	257240	1	. Filter, Fuel
4	EXH0013806	1	. Tube, Exh	12C	257241	1	. Belt, Alternator
5	CBL1743180	1	. Cable, Control	12D	253343	1	. Belt, Cooling Fan
6	CLV1756012	1	. Clevis W/Pin & Cotter	13	900534	1	. Plate, Mounting
7	231486	1	. Set Screw	14	F000007013	1	. Bracket
8	STS5000750	1	. Socket Set Screw	15	901187	1	. Bracket
9	SHD0028273	1	. Plate, Shield	16	900537	1	. Arm, Ext
10	209588	1	. Clip, Insul	*a See Separate Coverage Page 4-12			
11	DTZ0011287	1	. Belly Pan	*b See Separate Coverage Page 4-6			

Control Box Assembly

Page 1 of 4


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	903907		Control Box Assembly				
1	BAB0002140	1	. Terminal Block	37	TER0563216	16	. Terminal
2	BOX0029110	1	. Box	38	TER5616120	2	. Terminal
3	BOX0034338	1	. Gauge Assembly, Fuel	39	246143	2	. Relay Socket
4	CBK0005510	1	. Circuit Breaker, 10A, Ignition	40	235217	8	. Connector Female
5	CBK0014520	1	. Circuit Breaker, 20A, Accessories	41	200274	1	. Circuit Breaker, 30A, Lights
6	CBT0000030	1	. Cable Tie	42	208111	1	. Connector, Cord
7	*a CIR0029071	1	. Module Assembly, Auto Shutdown	43	229289	1	. Toggle Switch
8	DTZ0000626	2	. Switch, Push Button	44	231044	1	. Ring, Seal
9	FD00028146	1	. Decal, Front Panel	45	903496	1	. Wire Harness
10	FD00029195	1	. Decal, End Panel	46	SMR6320500	2	. Machine Screw
11	GAG0001133	1	. Hour Meter	47	230640	10	. Machine Screw
12	LIT0001815	4	. Lamp, Bayonet	48	00109451	1	. Machine Screw
13	LIT1250410	4	. Base, Lamp	49	00100766	1	. Machine Screw
14	LIT1251131	4	. Lens, Red	50	18460W	2	. Capscrew
15	NMS0000109	1	. Conduit Locknut	51	00103338	2	. Flat Washer
16	RES0045015	1	. Resistor	52	R13811443	2	. Flat Washer
17	R4510197	2	. Relay	53	WIS0000600	2	. Washer
18	SWI0001140	1	. Switch, Ignition	54	WIS0001000	10	. Lockwasher
19	TER0000099	2PK	. Terminal Lug	55	R13812512	2	. Lockwasher
20	219355	2'	. Wire	56	R13809520	2	. Hex Nut
21	219388	2'	. Wire	57	220044	14	. Hex Nut
22	219405	1'	. Wire	58	221703W	2	. Hex Nut
24	219410	2'	. Wire	59	219404	2'	. Wire
25	219412	2'	. Wire	60	223301	1'	. Wire
26	219414	4'	. Wire	61	219527	1'	. Wire
27	219436	1'	. Wire	62	WIR0016038	2'	. Wire
28	231707	2'	. Wire	63	WIR0016035	2'	. Wire
29	231708	4'	. Wire	64	219400	2'	. Wire
30	237627	1'	. Wire	65	221965	3	. Terminal (QWK SLD Female)
31	241795	1'	. Wire				
32	WIR0016017	2'	. Wire				
33	TER0560616	12	. Terminal Ring				
34	TER0560816	5	. Terminal Ring				

*a See Separate Coverage Page 4-10

Rev H


Control Box Assembly

Page 2 of 4

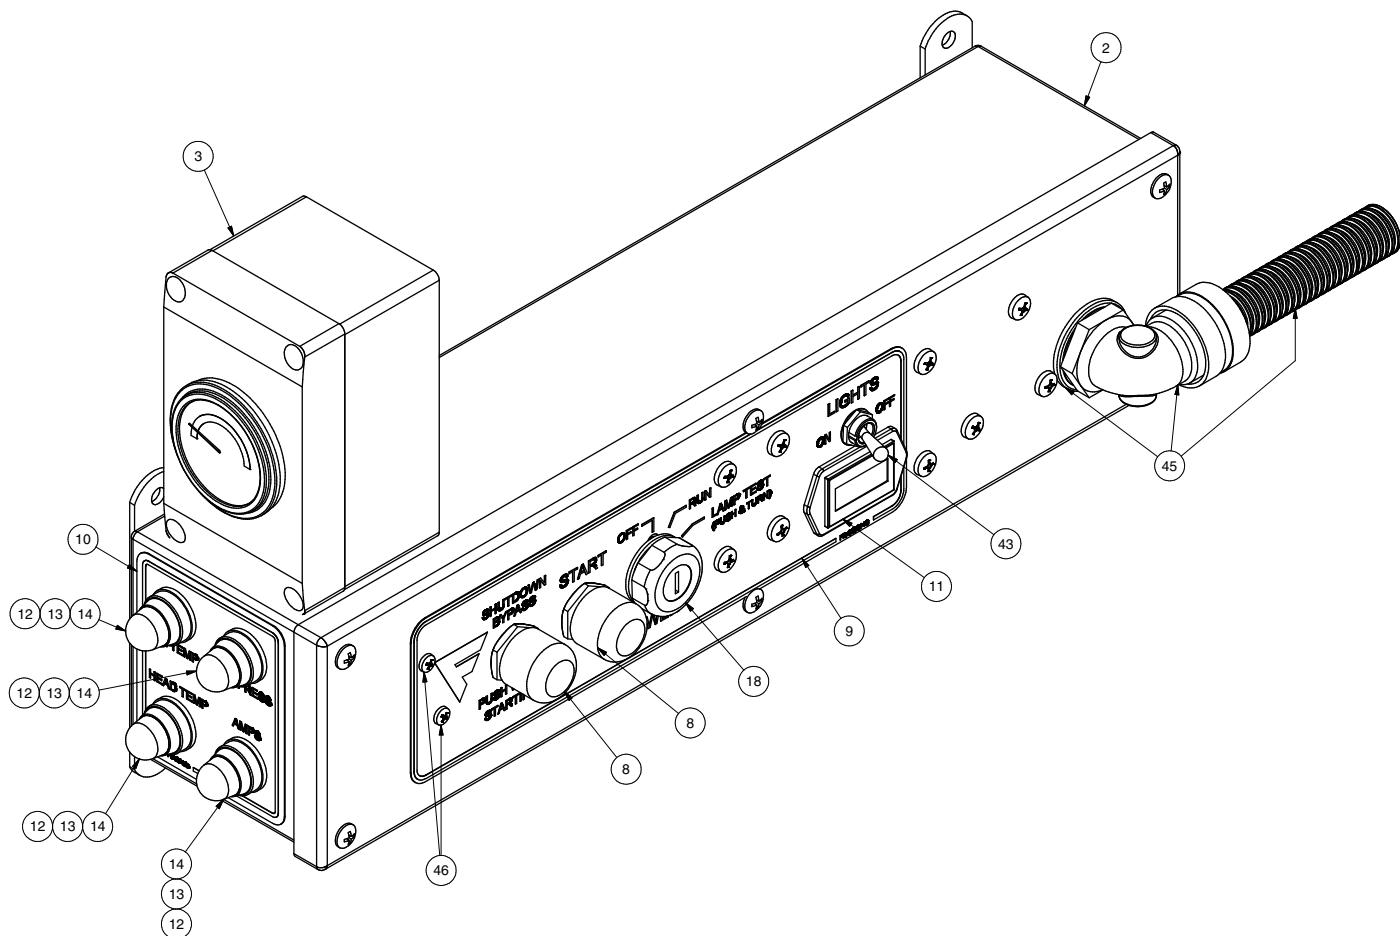


Control Box Assembly

Page 3 of 4

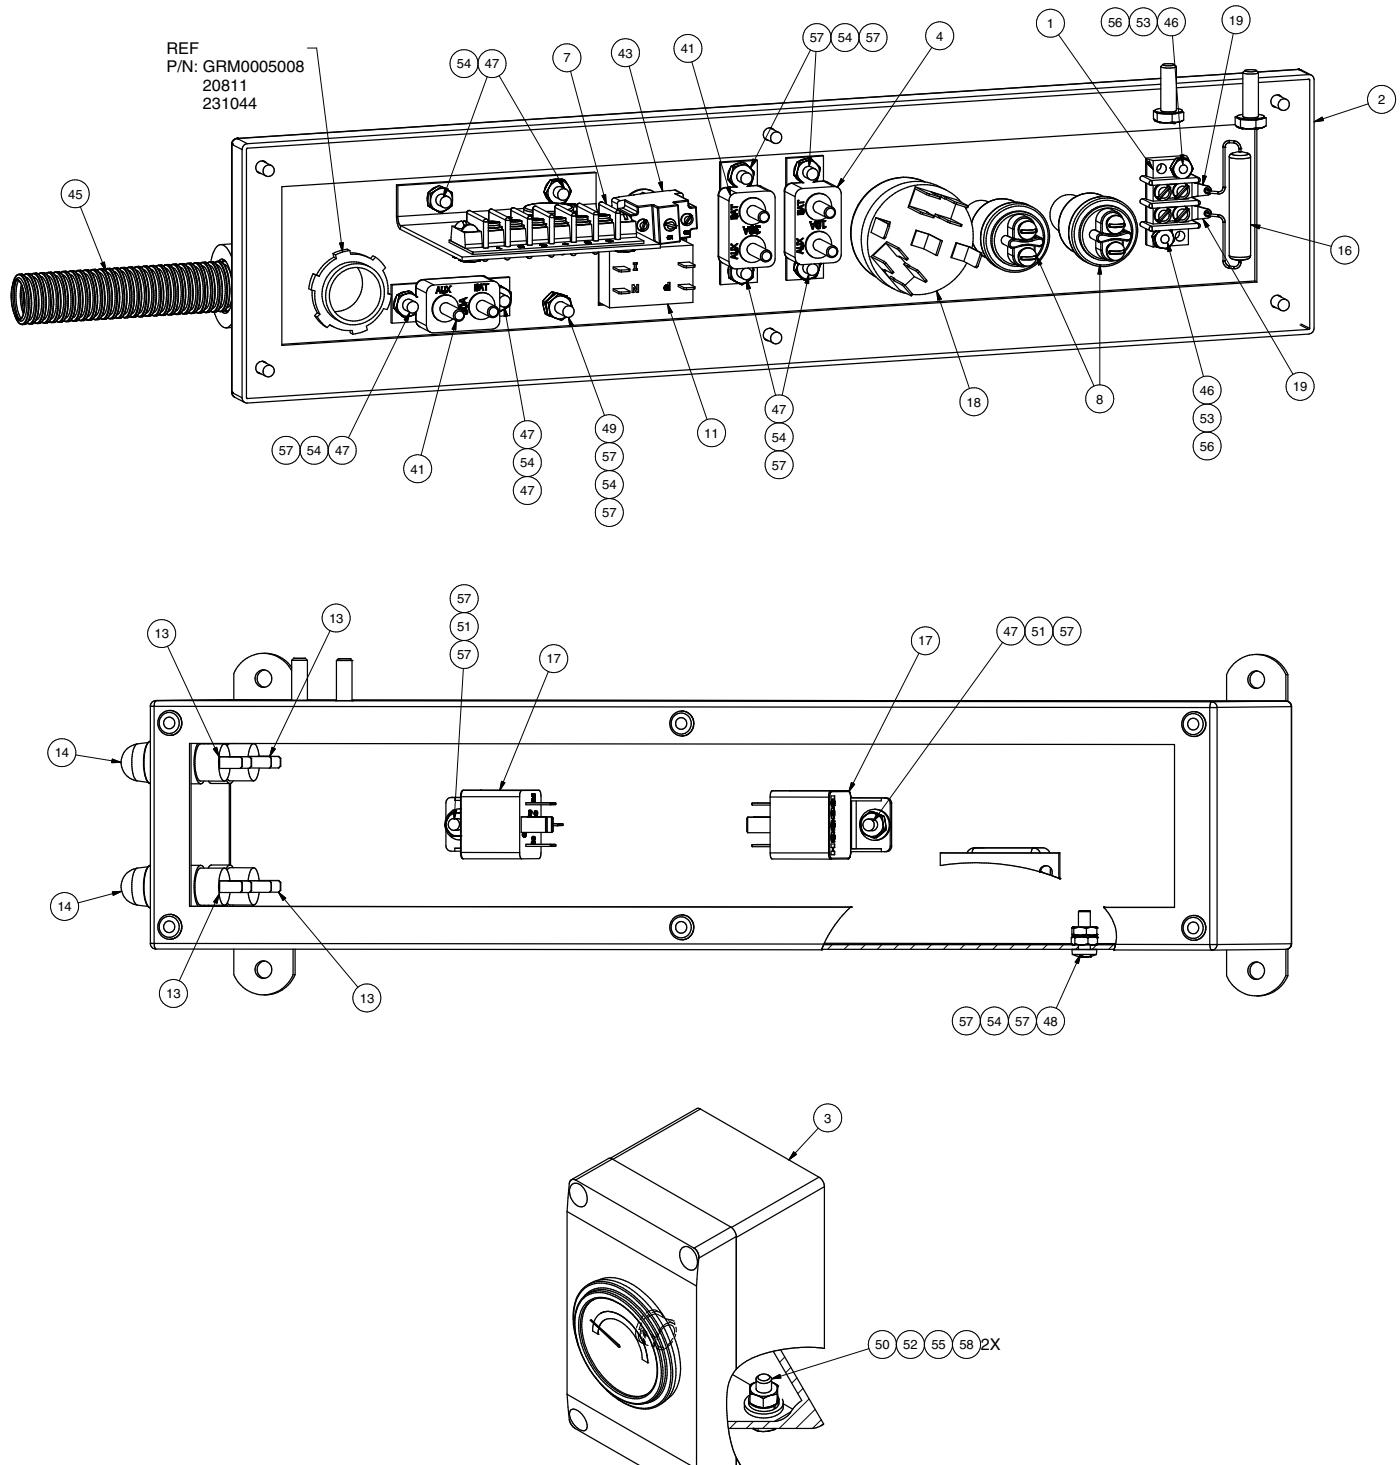


Control Box Assembly

Page 4 of 4

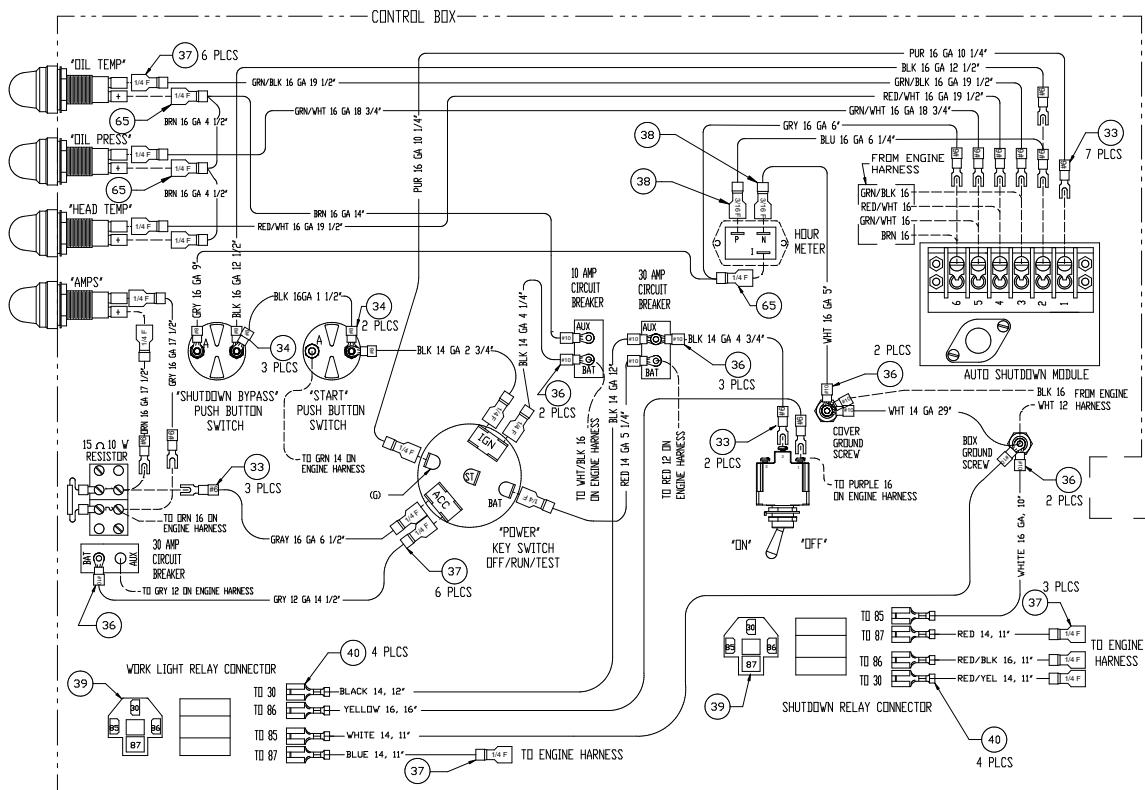

Module Assembly

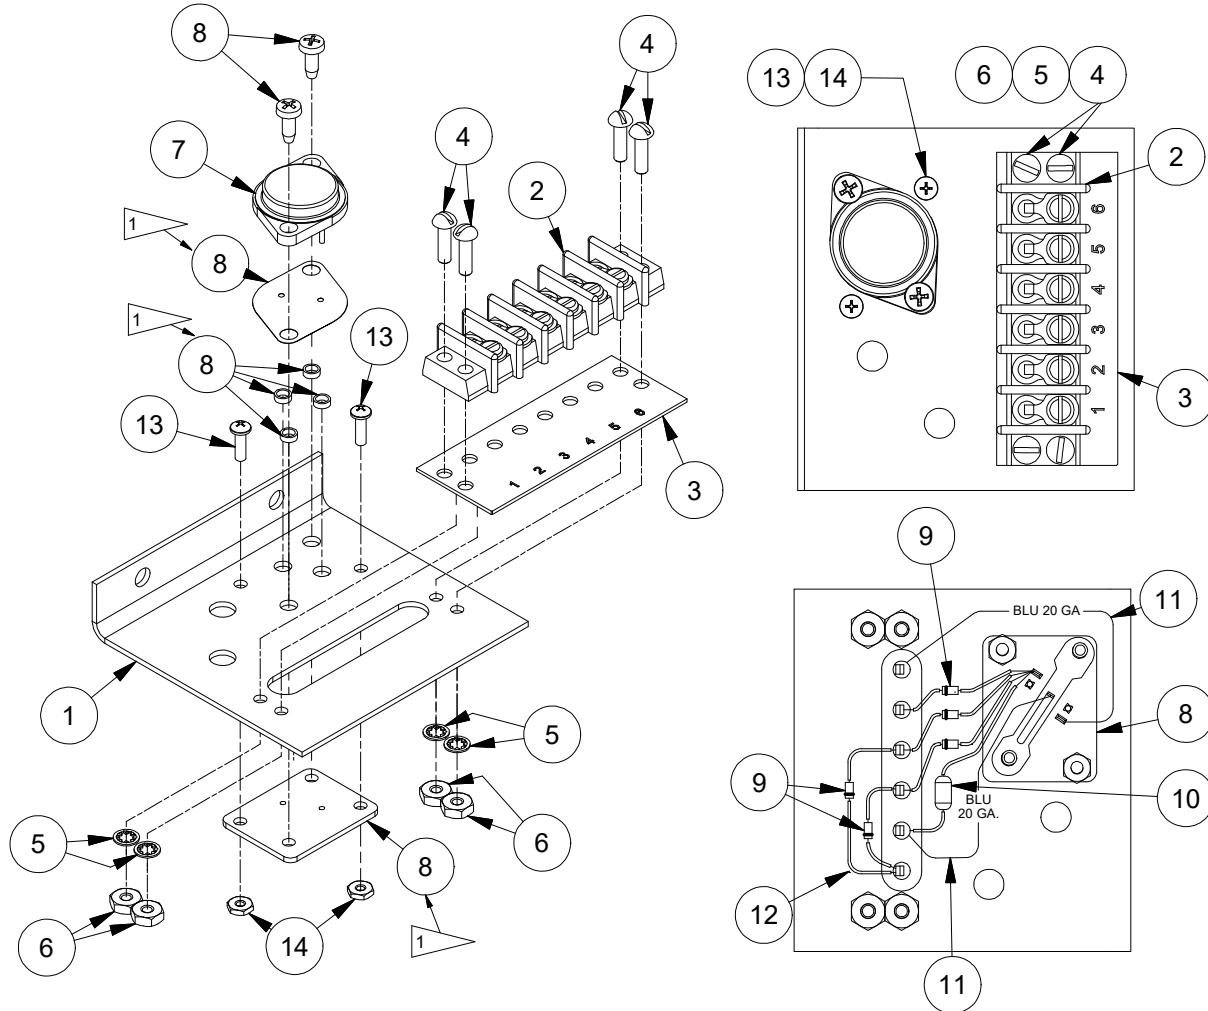NOTES


1. INSTALL ISOLATORS AND PLASTIC SHIELDS AS SHOWN. ISOLATORS AND SHIELD PROVIDED WITH TRANSISTOR SOCKET (SOK5108401). REFER TO PHOTO SHEET FOR ADDITIONAL INFORMATION AND DOCUMENTS FOR SOK5108401.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	CIR0029071		Module Assembly				
1	MNT036760B	1	. Auto Shutdown Mount	9	22635	5	. Diode
2	BAB006140Y	1	. Barrier Block	10	RES0832127	1	. Resistor
3	MSR006140Y	1	. Terminal Marker Strip	11	233701	1'	. Wire
4	SMR6320500	4	. Machine Screw	12	TUB0001800	1'	. Tubing
5	WIS0000600	4	. Washer	13	SMR4400375	2	. Screw
6	R13809520	4	. Hex Nut	14	NCH0000440	2	. Hex Nut
7	TRA0044002	1	. Transistor				
8	SOK5108401	1	. Kit, Transistor Mounting				

Rev C


Clutch

Page 1 of 2

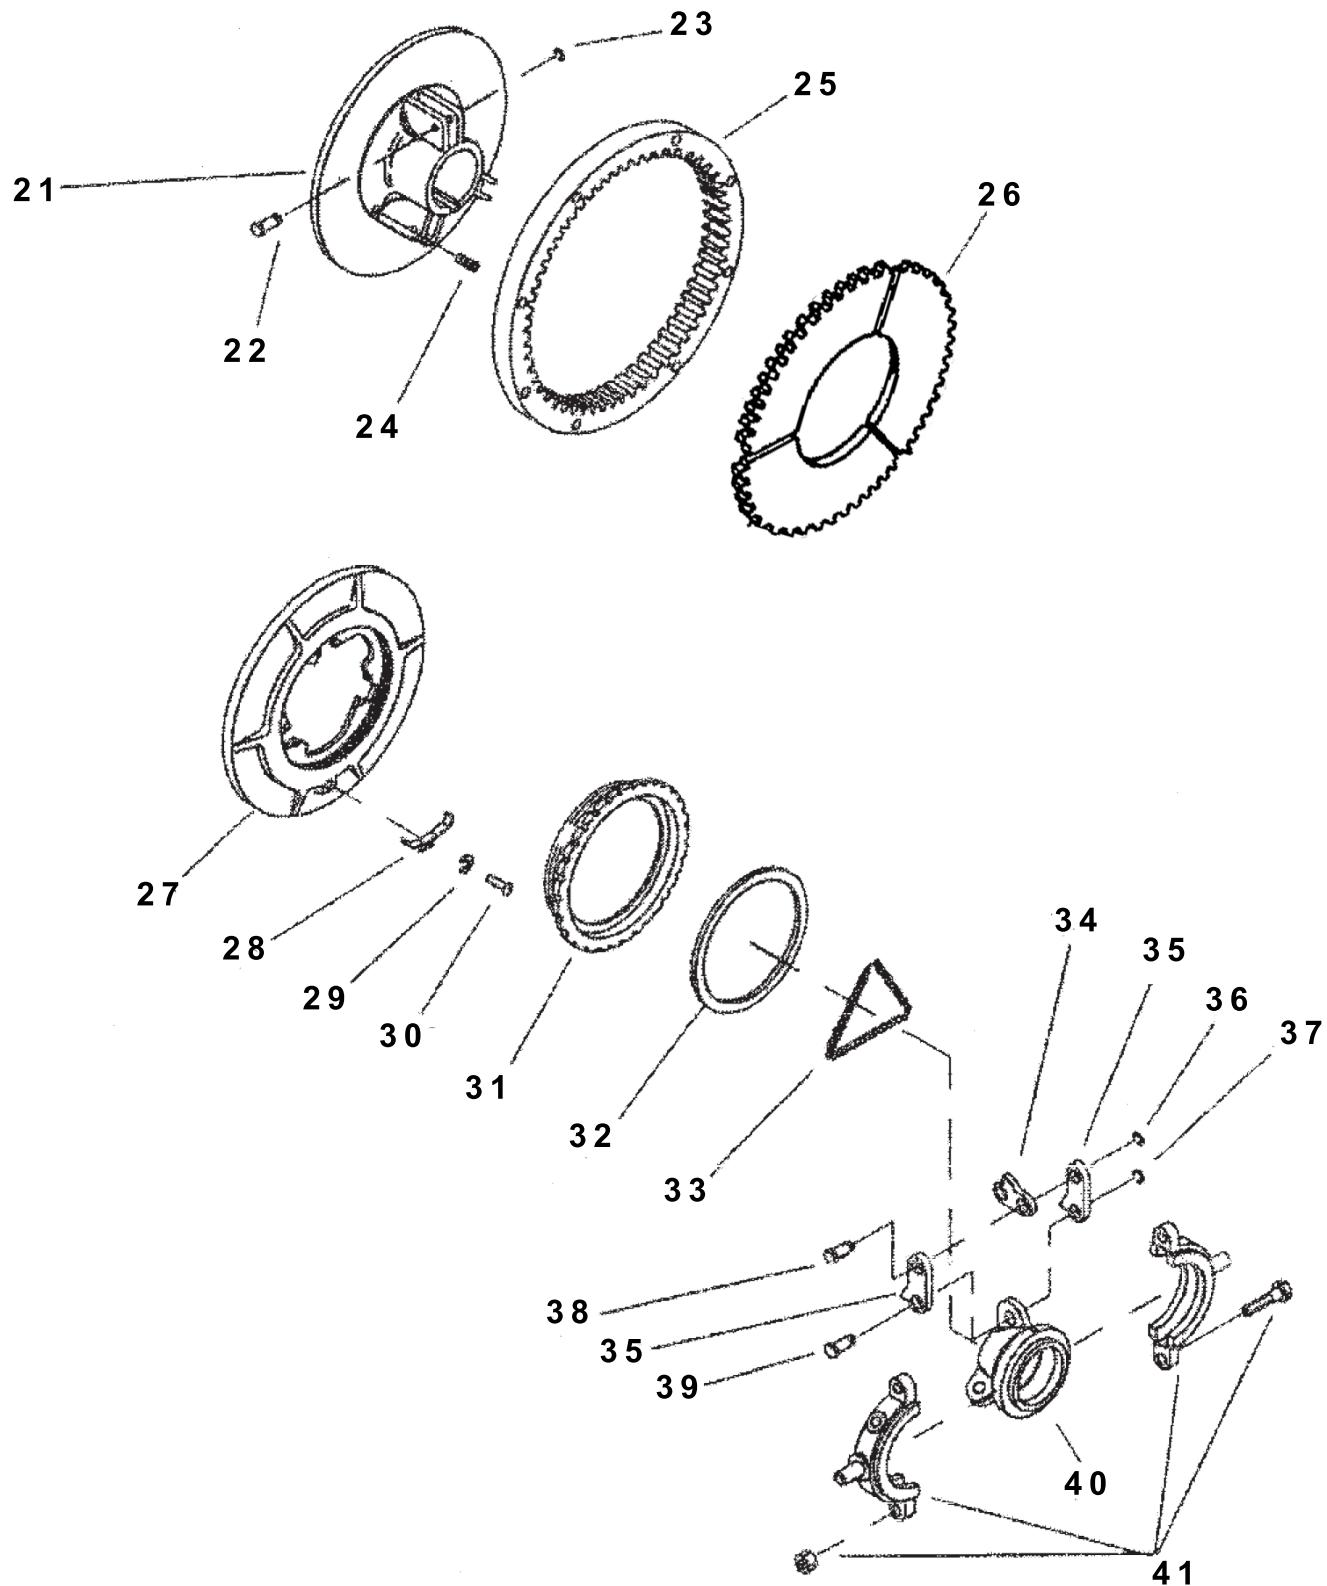

Clutch


Page 2 of 2

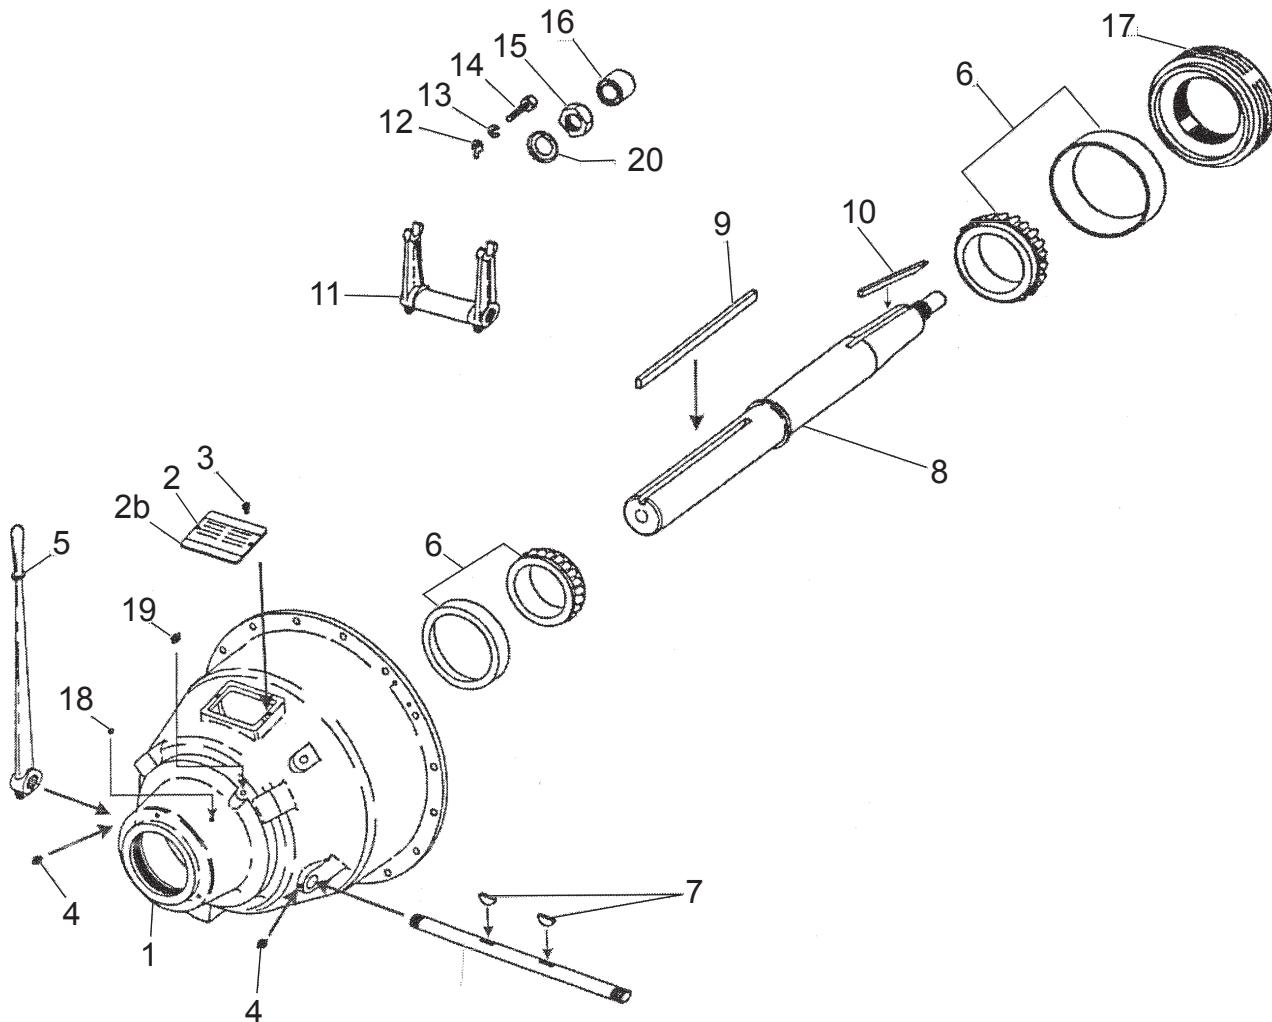

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	CLH0001084		Clutch				
1	CLH0204230	1	. Bell Housing	21	CLH0230819	1	Clutch Body
2	CLH0205358	1	. Name Plate	22	* -----	3	Clevis Pin
2b	252527	1	. Plate, Cover	23	* -----	3	Retaining Ring
3	CLH0206092	2	. Bolt	24	* -----	3	Separator Spring
4	CLH0207954	2	. Fitting, Grease	25	CLH0205851	1	Clutch Plate & Release
5	CLH0308369	1	. Lever, Shifting	26	CLH0203569	1	Facing Plate
6	CLH0307569	2	. Bearings, Main	27	CLH0216506	1	Compression Sprin
7	CLH0204536	2	. Key, Woodruff	28	* -----	1	Adjustment Lock
8	CLH0230909	1	. Drive Shaft	29	* -----	1	Washer
9	CLH0204487	1	. Output Key	30	* -----	1	Bolt
10	CLH0204485	1	. Clutch Key	31	CLH0205823	1	Adjusting Ring
11	CLH0308371	1	. Yoke Sub Assembly	32	CLH0205997	1	Wear Ring
12	CLH0205368	1	. Link, Adjusting	33	* -----	1	Lever Spring
13	CLH0207227	1	. Washer	34	* -----	3	Lever
14	CLH0203061	1	. Bolt	35	* -----	6	Link
15	CLH0204746	1	. Nut	36	* -----	3	Retaining Ring
16	CLH0207445	1	. Bearing, Pilot	37	* -----	3	Retaining Ring
17	CLH0205717	1	. Relese Sleeve, Clutch	38	* -----	3	Clevis Pin
18	CLH0269854	1	. Fitting, Grease	39	* -----	3	Clevis Pin
19	CLH0260843	1	. Fitting, Grease	40	CLH0206563	1	Release Sleeve
20	CLH0207231	1	. Washer	41	CLH0334051	1	Release Bearing

* Item available only as part of clutch kit CLH0332919

Snorkel Installation

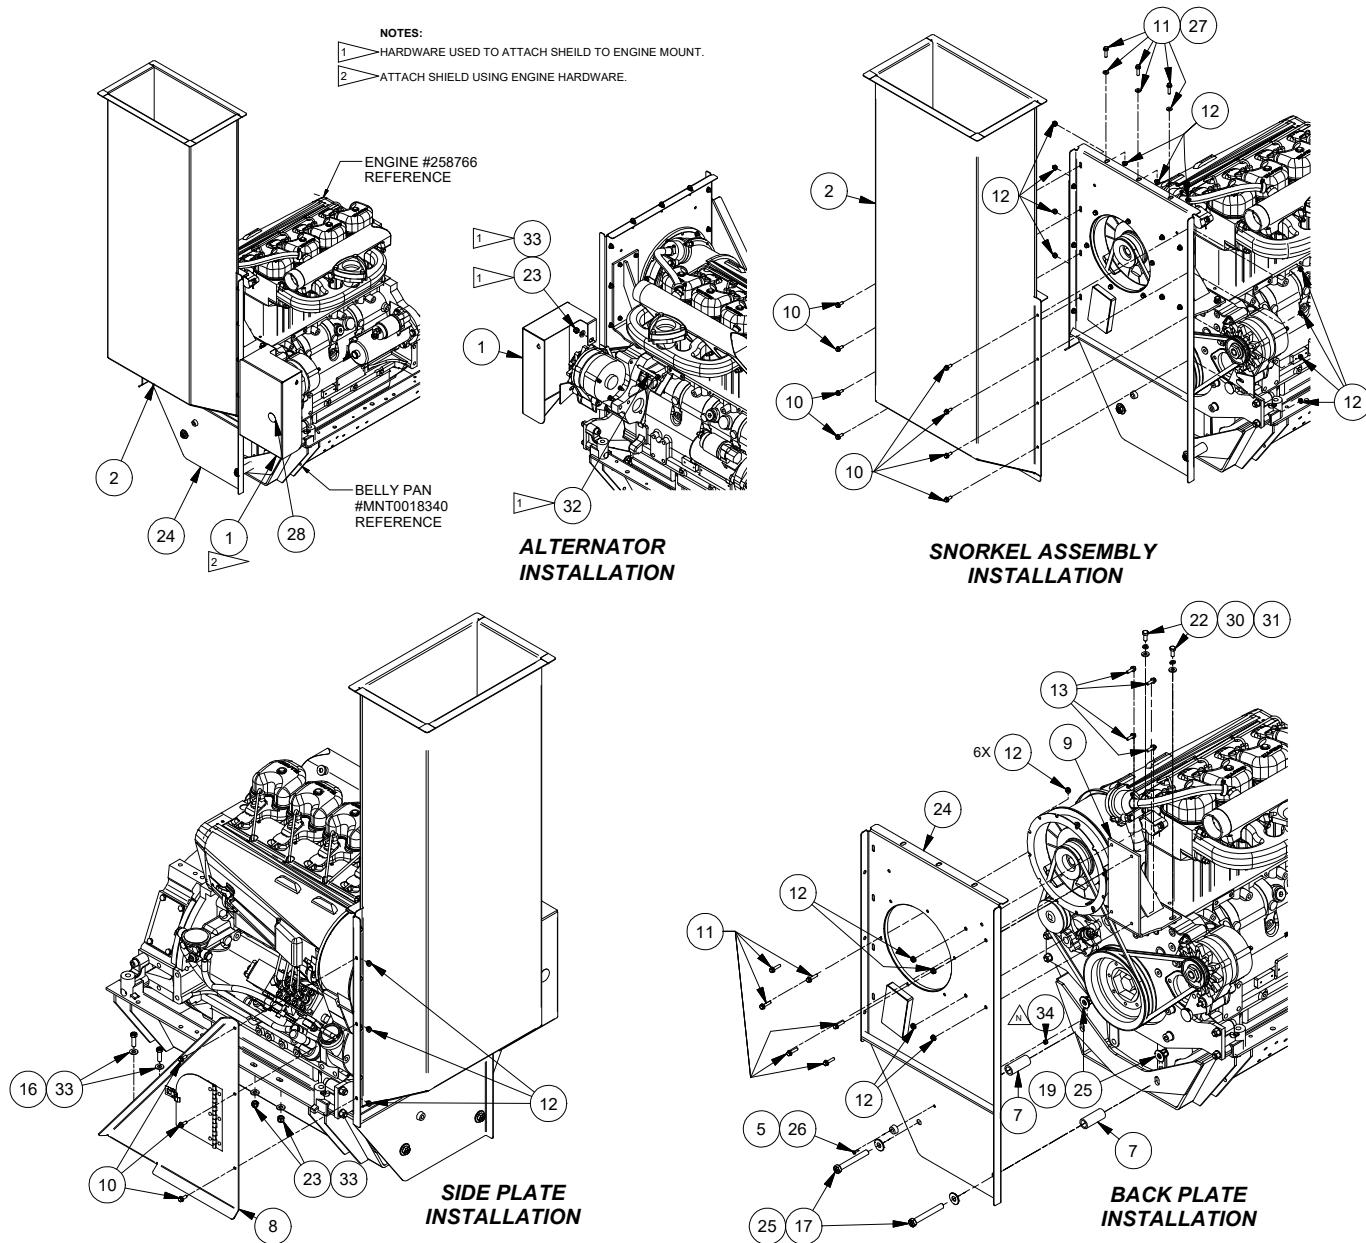


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902048		Snorkel Installation				
1	SHD0035692	1	. Shield, Fan Belt	23	237567	3	. Locknut
2	*a 902050	1	. Snorkel Assembly	24	902045	1	. Plate
5	BMP0004243	1	. Rubber Bumper	25	222615	4	. Washer
7	902146	2	. Pipe	26	230640	1	. Machine Screw
8	*b 902148	1	. Bracket Assembly	27	R13812213	3	. Washer(use 15127W)
9	902145	1	. Support	28	PLU0009292	1	. Plug
10	SMS0000300	11	. Screw	30	WCTM100080	2	. Washer
11	SMS0000305	9	. Screw	31	WLKM000080	2	. Lockwasher
12	09416918	25	. Nut, Serrated	32	221518W	1	. Capscrew
13	399741W	4	. Screw, Ser Flg	33	221767W	5	. Washer
16	221499W	2	. Capscrew	34	223799	1	. Nut, Esna
17	R13811085	2	. Capscrew				
19	223587	2	. Locknut				
22	293613W	2	. Capscrew				

*a See Separate Coverage Page 4-14

*b See Separate Coverage Page 4-15


Rev N

Snorkel Assembly with Door

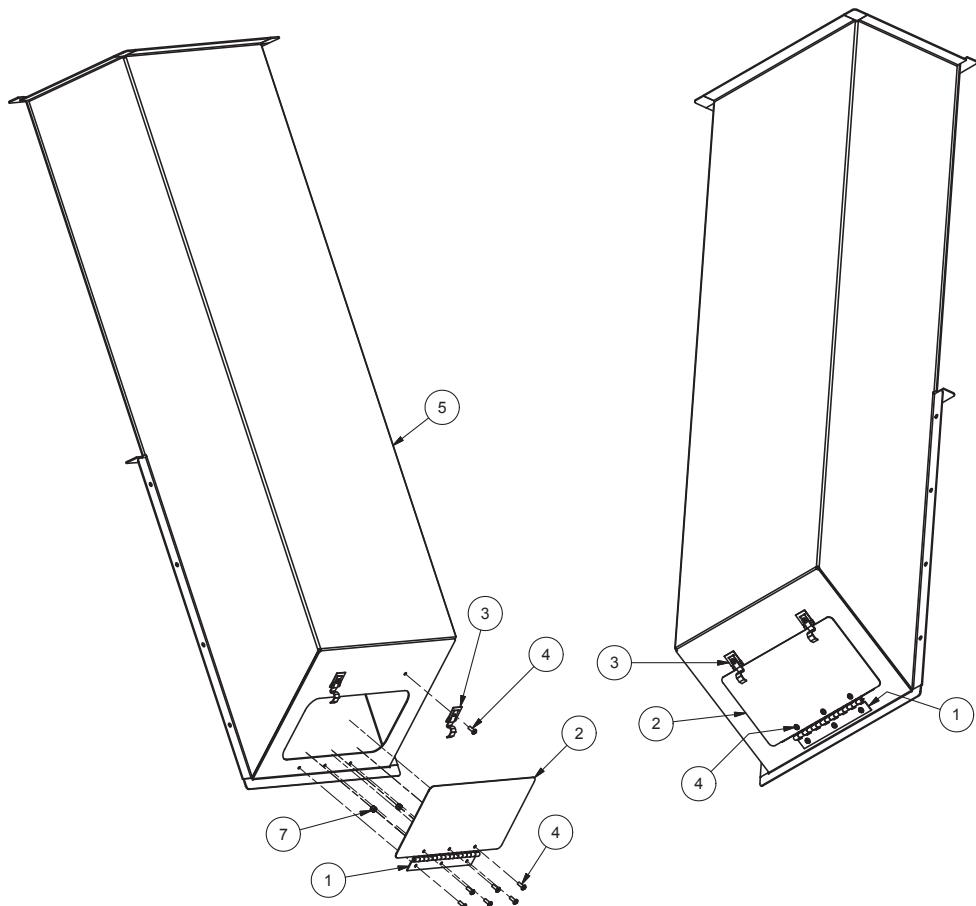

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902050		Snorkel Assembly,W/Door				
1	HNG0007094	1	. Hinge	5	902047	1	. Snorkel Weldment
2	902038	1	. Plate, Bottom	6	239729	8	. Nut
3	F000006108	2	. Catch	7	239729	8	. Nut
4	SMP1032500	8	. Pan				Rev C


Side Support Bracket Assembly

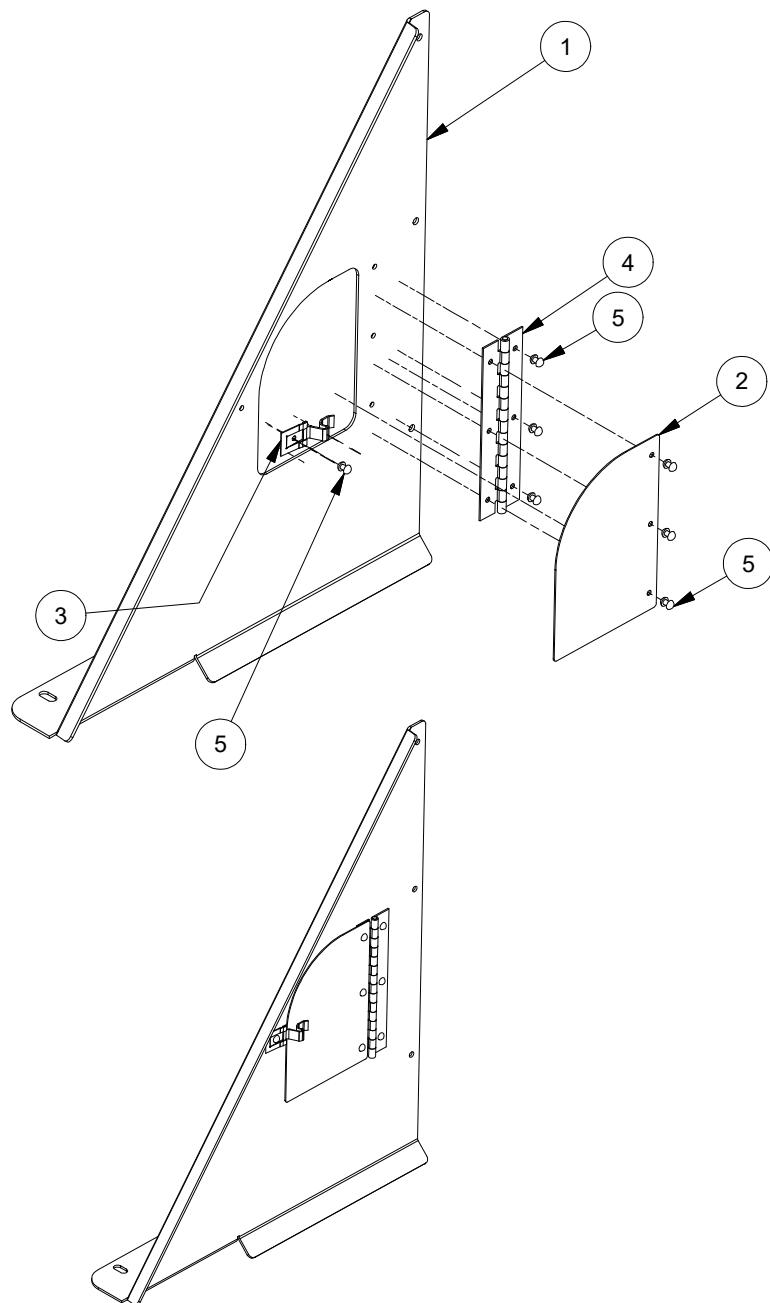

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	902148		Side Support Bracket				
1	902149	1	. Side Support Bracket	4	HNG0007094	1	. Hinge
2	902147	1	. Engine Oil Access Door	5	RIV0000604	7	. Bolt
3	F000006108	1	. Catch				Rev J

Fuel Tank Installation, 16 Gallon

Page 1 of 2

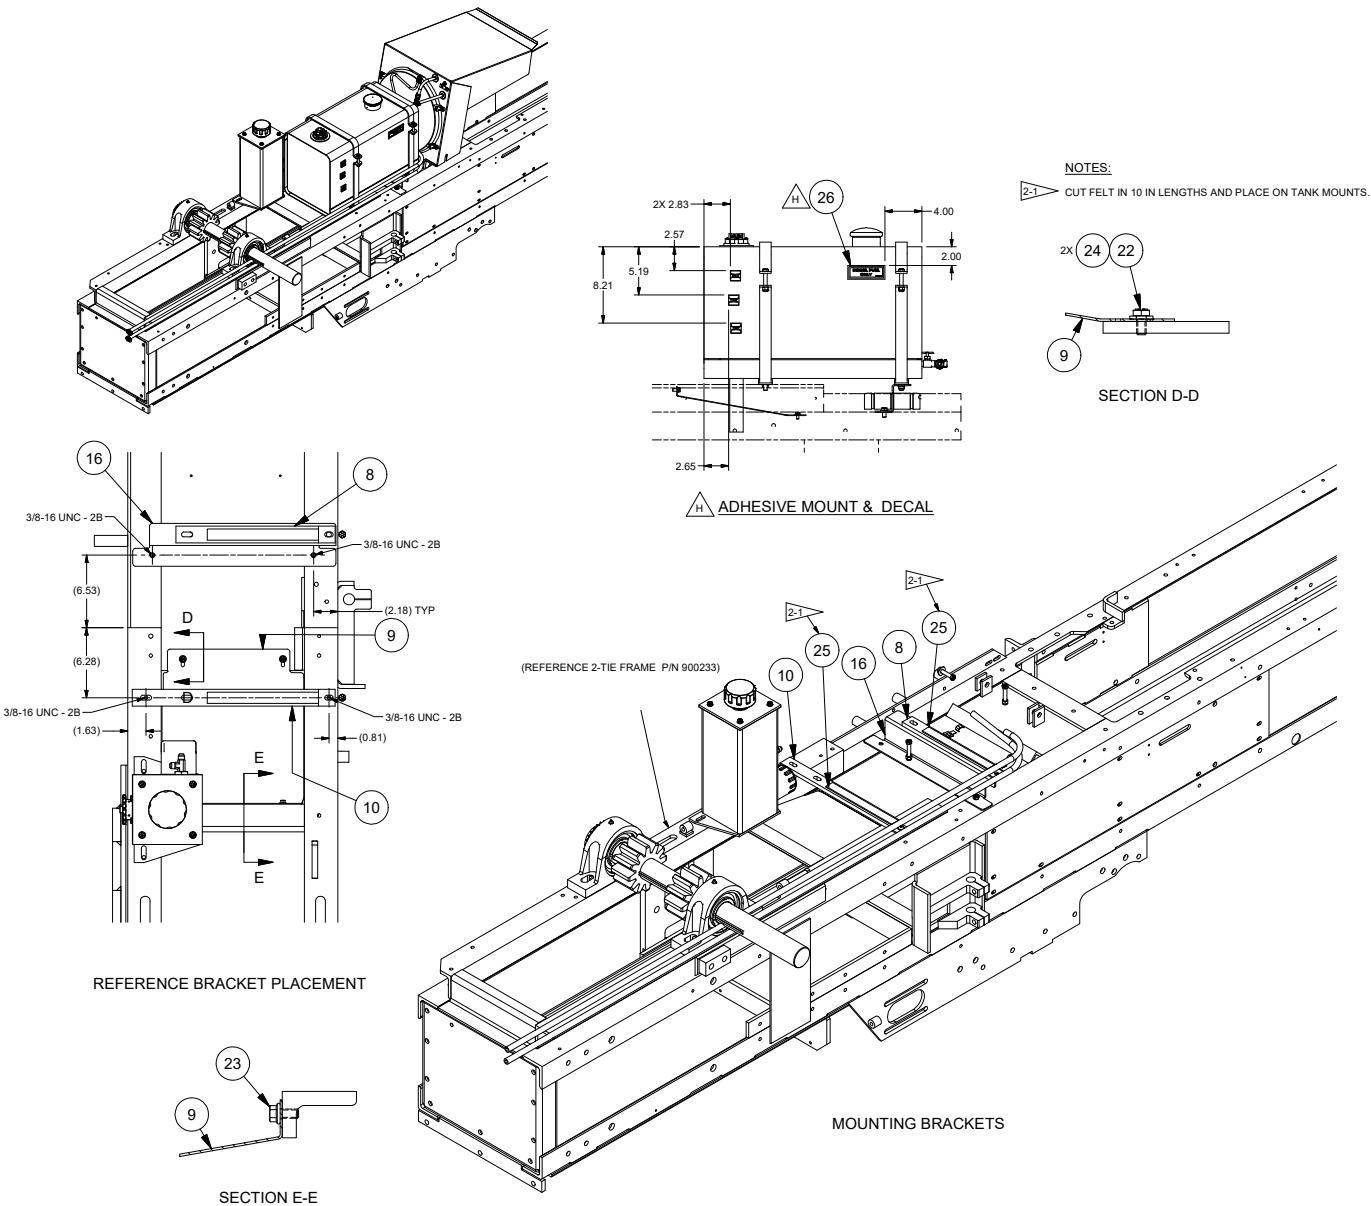


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
903061							
1	*a 903060	1	Tank Sub-Assembly,Fuel	15	221499W	1	. Capscrew
2	905470	2	. Strap Assembly, Tank	16	905237	1	. Bracket, Tank
3	905471	2	. Strap Assembly, Tank	17	18738W	2	. Capscrew
4	FT00000252	4	. Hose Clamp	18	237567	2	. Locknut
5	902165	2	. Hose, Fuel	19	R13811039	2	. Capscrew
6	220949	3	. Mount	20	162572W	1	. Capscrew
7	HSP0000006	1	. Hose Protector	21	R13811034	1	. Capscrew
8	905238	1	. Bar, Support	22	R13810989	2	. Capscrew
9	903114	1	. Plate, Shield	23	SMS0000173	2	. Screw
10	905232	1	. Bar, Support	24	R13811443	2	. Washer
11	162572W	2	. Capscrew	25	FLT0000013	2'	. Felt
12	221767W	3	. Washer	26	FD00000035	1	. Decal
13	156133W	3	. Locknut				
14	SMS0000180	2	. Screw				

*a See Separate Coverage (Page 4-18)


Rev H

Fuel Tank Installation, 16 Gallon

Page 2 of 2

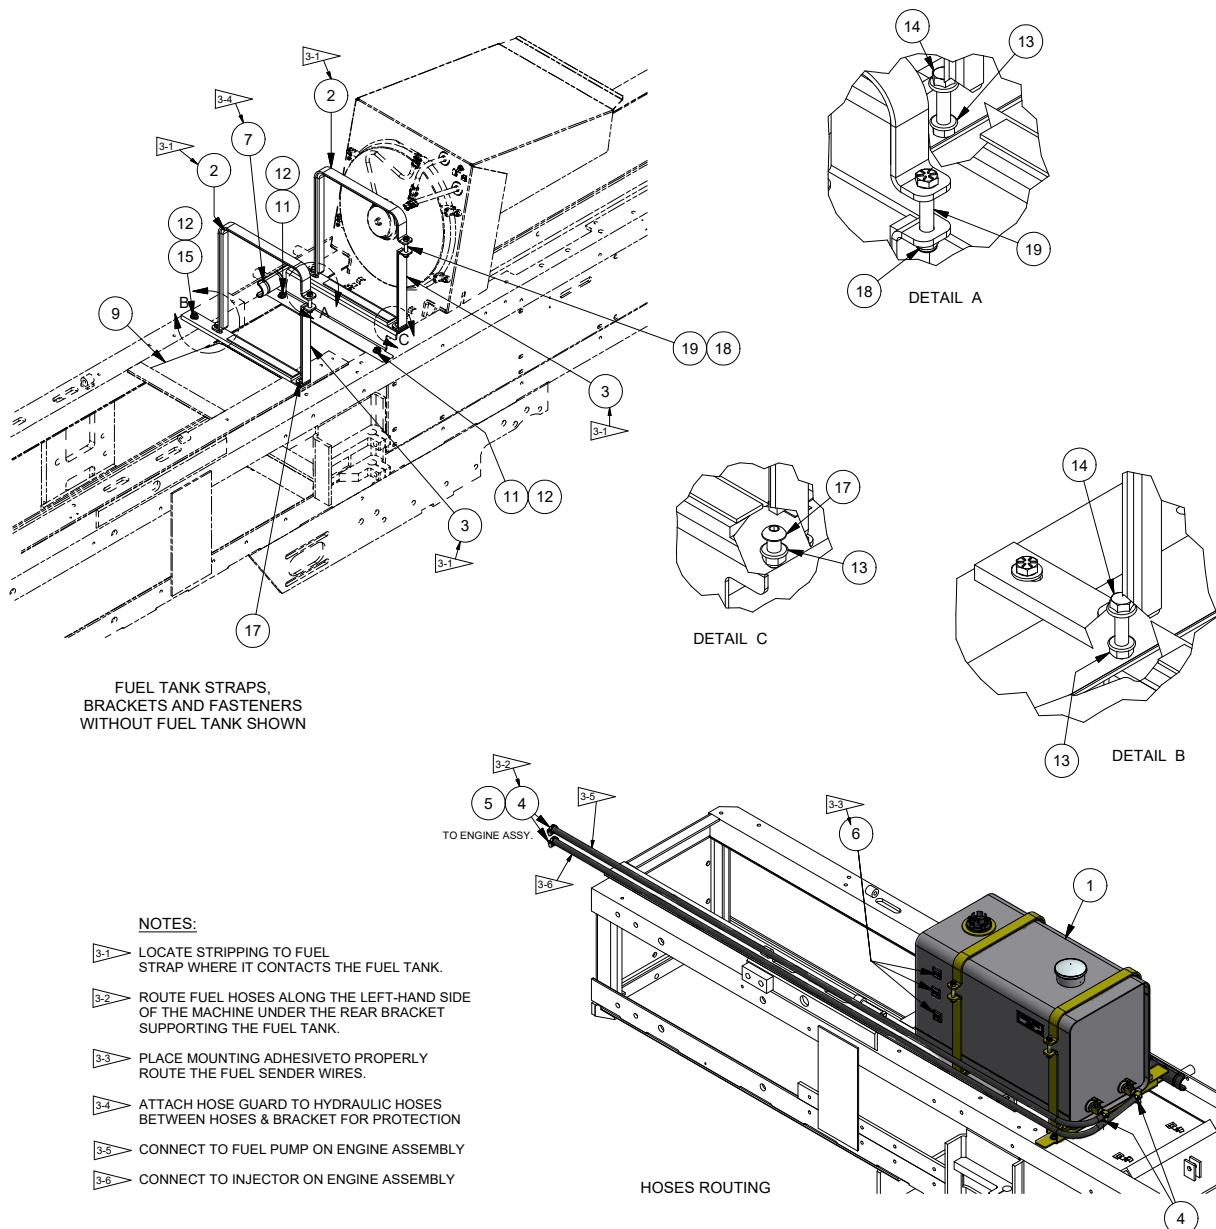

Fuel Tank Assembly, 16 Gallon

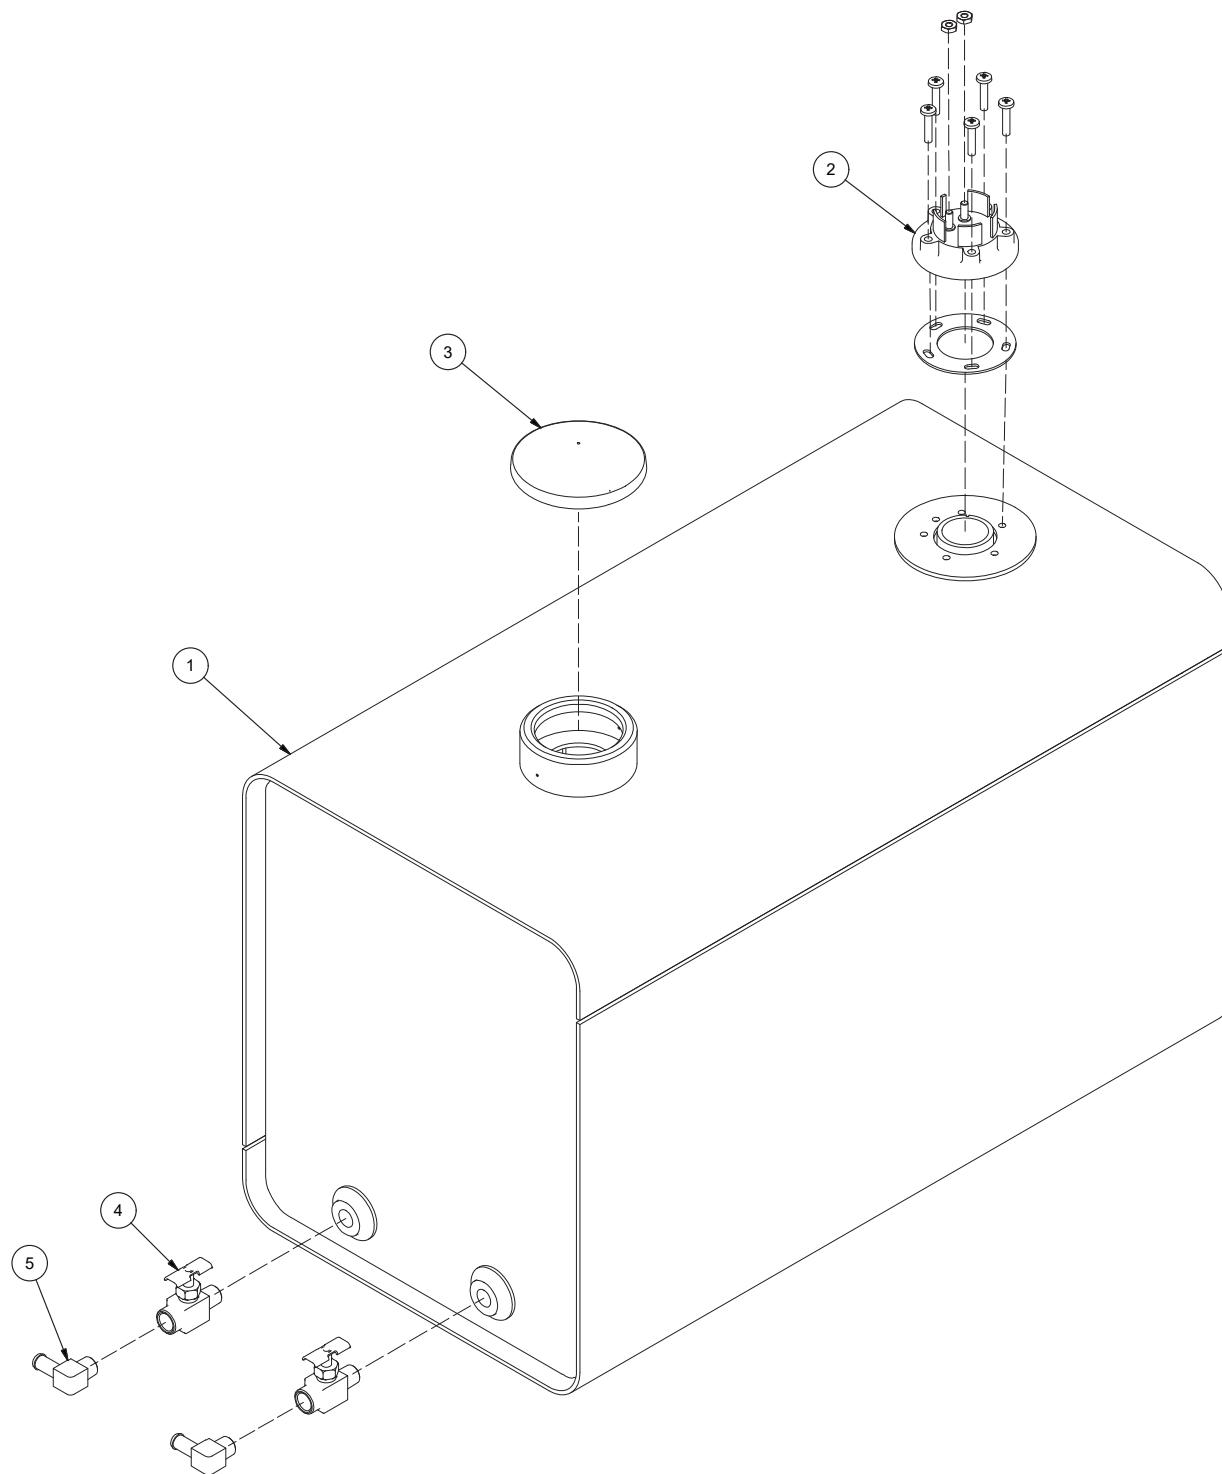

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	903060		Tank Subassembly, Fuel				
1	TNK036900E	1	. Tank, Fuel	4	F000008189	2	. Shut-Off Valve
2	SDRORA9312	1	. Fuel Lever Sender 20 Gal	5	HYD0001571	2	. Male Elbow
3	F000001689	1	. Fuel Cap Tank				

Driveline PTO Installation, 2-Tie Bullgear



Page 1 of 5

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	910116		Driveline PTO Installation				
1	910115	1	. Mounting Weldment	31	223588	4	. Nut, Esna
2	257532	1	. Gearbox	32	236805	4	. Capscrew
	908127	3	. . Seal	33	296420W	4	. Washer
3	293708W	4	. . Capscrew	34	R13802914	4	. Washer
4	296430W	4	. . Washer	35	229289	2	. Switch, Toggle
5	R13811077	1	. . Capscrew	36	GAG0001133	1	. Hour Meter
6	Y22E-08	4	. . Washer	37	909083	1	. Gauge, Tension Controlled
7	221771W	9	. . Washer	38	252619	1	. Relay
8	200454W	2	. . Capscrew	39	258409	1	. Decal, Work Lights
9	221711W	6	. . Hex Nut	40	258410	1	. Decal, Power
10	R13811080	1	. . Capscrew	41	561929	2	. Decal, On-Off
11	F000007010	2	. . Bolt, Adjusting	42	Y25G-(1024)122		. Capscrew
12	F000007000	1	. . Belt, Drive	43	220044	2	. Nut
13	910112	1	. . Plate, Instrument Pane, L	44	WIS0001000	2	. Lockwasher
14	2305631W	4	. . Screw, Ser Flg	45	180959W	1	. Capscrew
15	191534W	4	. . Nut	46	235708	1	. Jam Nut
16	Y27E-06	4	. . Washer	47	235720	2GL	. Lubricant, Gear
17	904133	1	. . Stand Weldment	48	209427	1	. Fitting
18	904136	1	. . Plate, Swivel Block	49	209700	1	. Clip, Insul
19	Y01F-0636	3	. . Cotter Pin	50	209695	1	. Clamp
20	906512	1	. . Plate, Sheave	51	R13801782	1	. Capscrew
21	904129	1	. . Hub, Sheave	52	221703W	2	. Hex Nut
22	R13811082	1	. . Capscrew	53	909396	1	. Bolt, Retaining
23	223587	3	. . Locknut	54	2305986W	4	. Set Screw
24	R13801813	4	. . Capscrew	55	302398W	2	. Locknut
25	*a 258050	1	. . Driveline	56	221569W	1	. Capscrew
26	904434	1	. . Cover Weldment, Shaft				
27	*b 904680	1	. . Clutch				
		1	. . Taper Pin				*a See Separate Coverage (4-24)
		1	. . Washer				*b Contact Manufacturer
		1	. . Nut				
28	904562	1	. . Plate, Guard				
29	904490	1	. . Plate, Mounting				
30	R13811017	4	. . Capscrew				

Rev CC

Driveline PTO Installation, 2-Tie Bullgear

Page 2 of 5

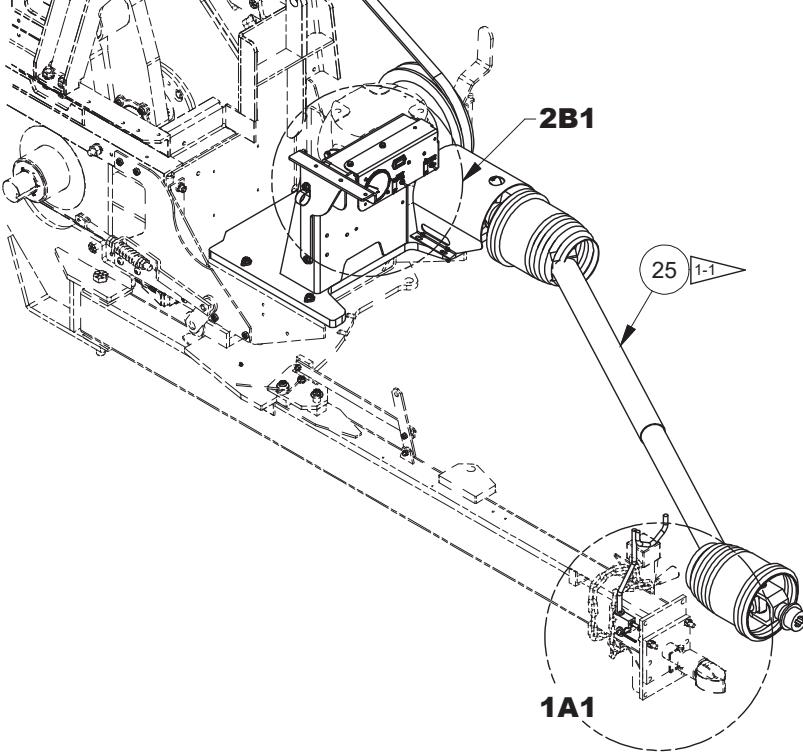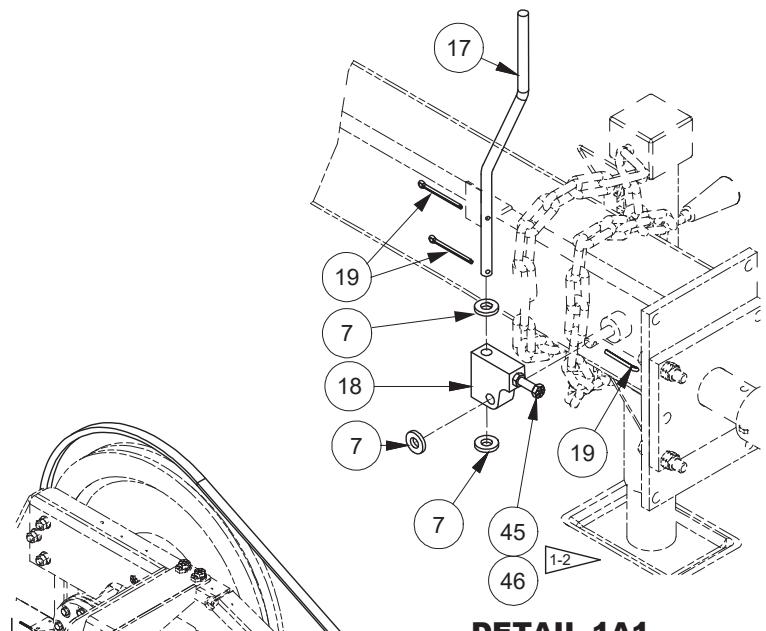


NOTES:

1-1 TIGHTEN CONNECTION BOLT FROM DRIVELINE TO GEARBOX INPUT SHAFT TO 162 FT-LBS.

1-2 ADJUST SCREW LENGTH SO SUPPORT BAR IS IN A VERTICAL POSITION WHEN DRIVELINE IS PLACED IN HOLDER. ENGAGE JAM NUT TO LOCK SCREW IN PLACE.

Driveline PTO Installation, 2-Tie Bullgear


Page 3 of 5

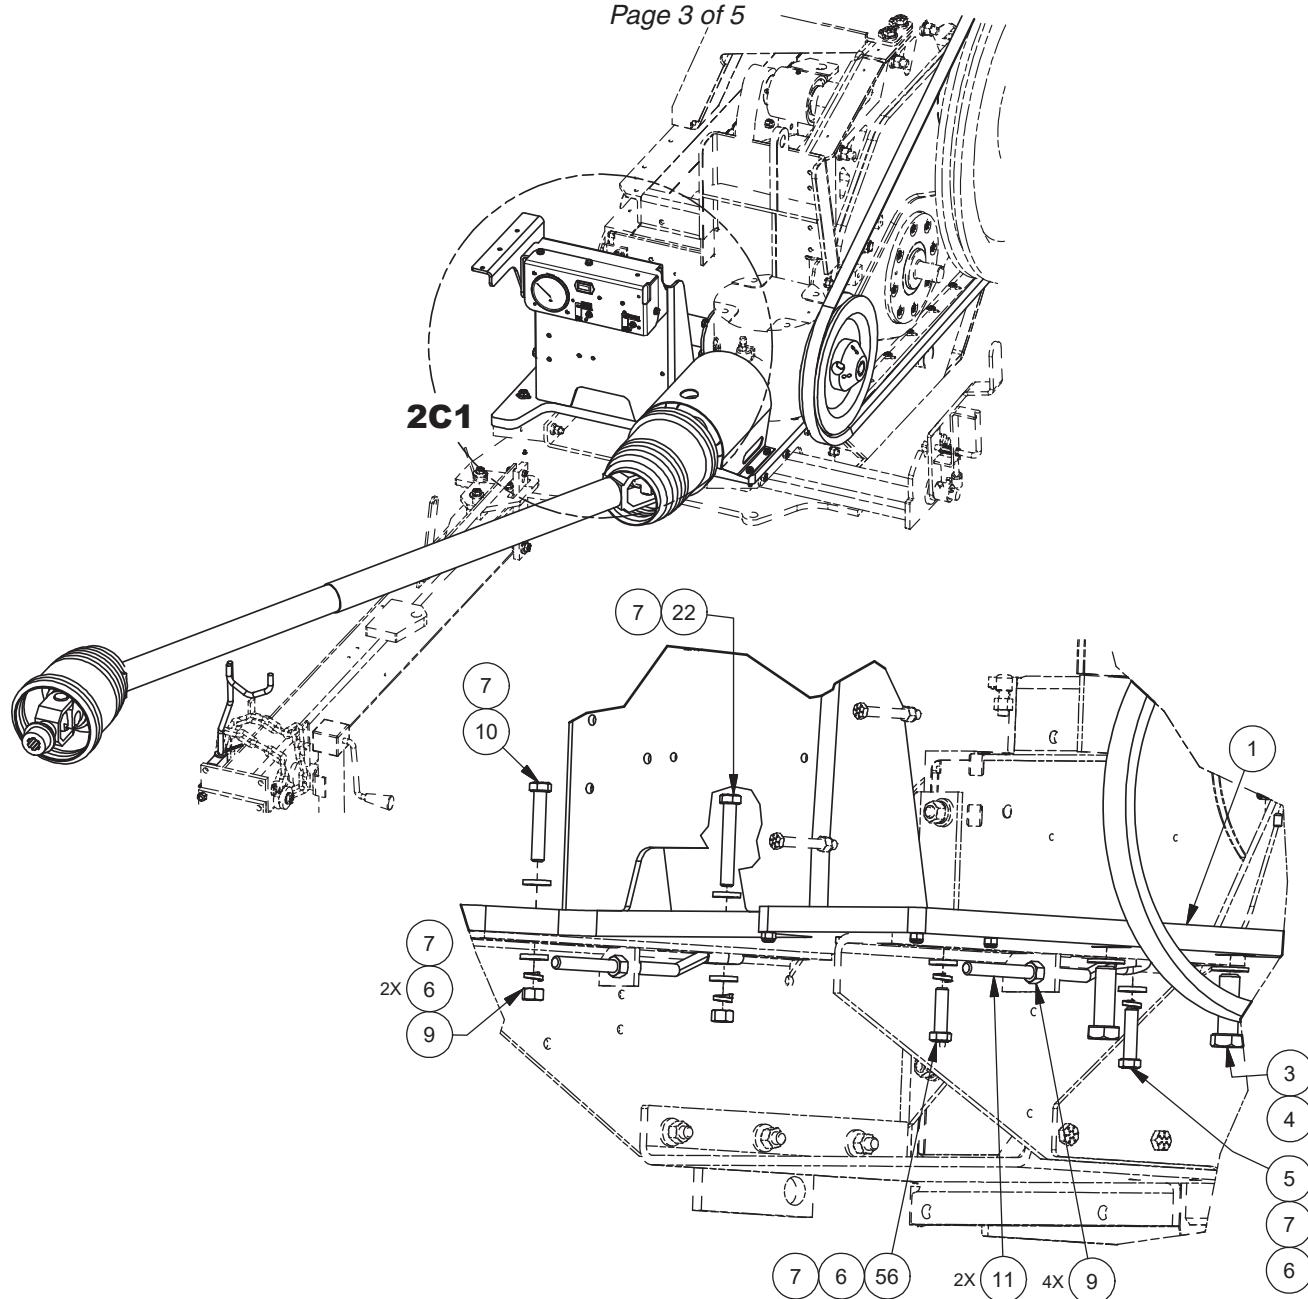

DETAIL 2C1
GEARBOX MOUNTING PLATE


Driveline PTO Installation, 2-Tie Bullgear

Page 4 of 5


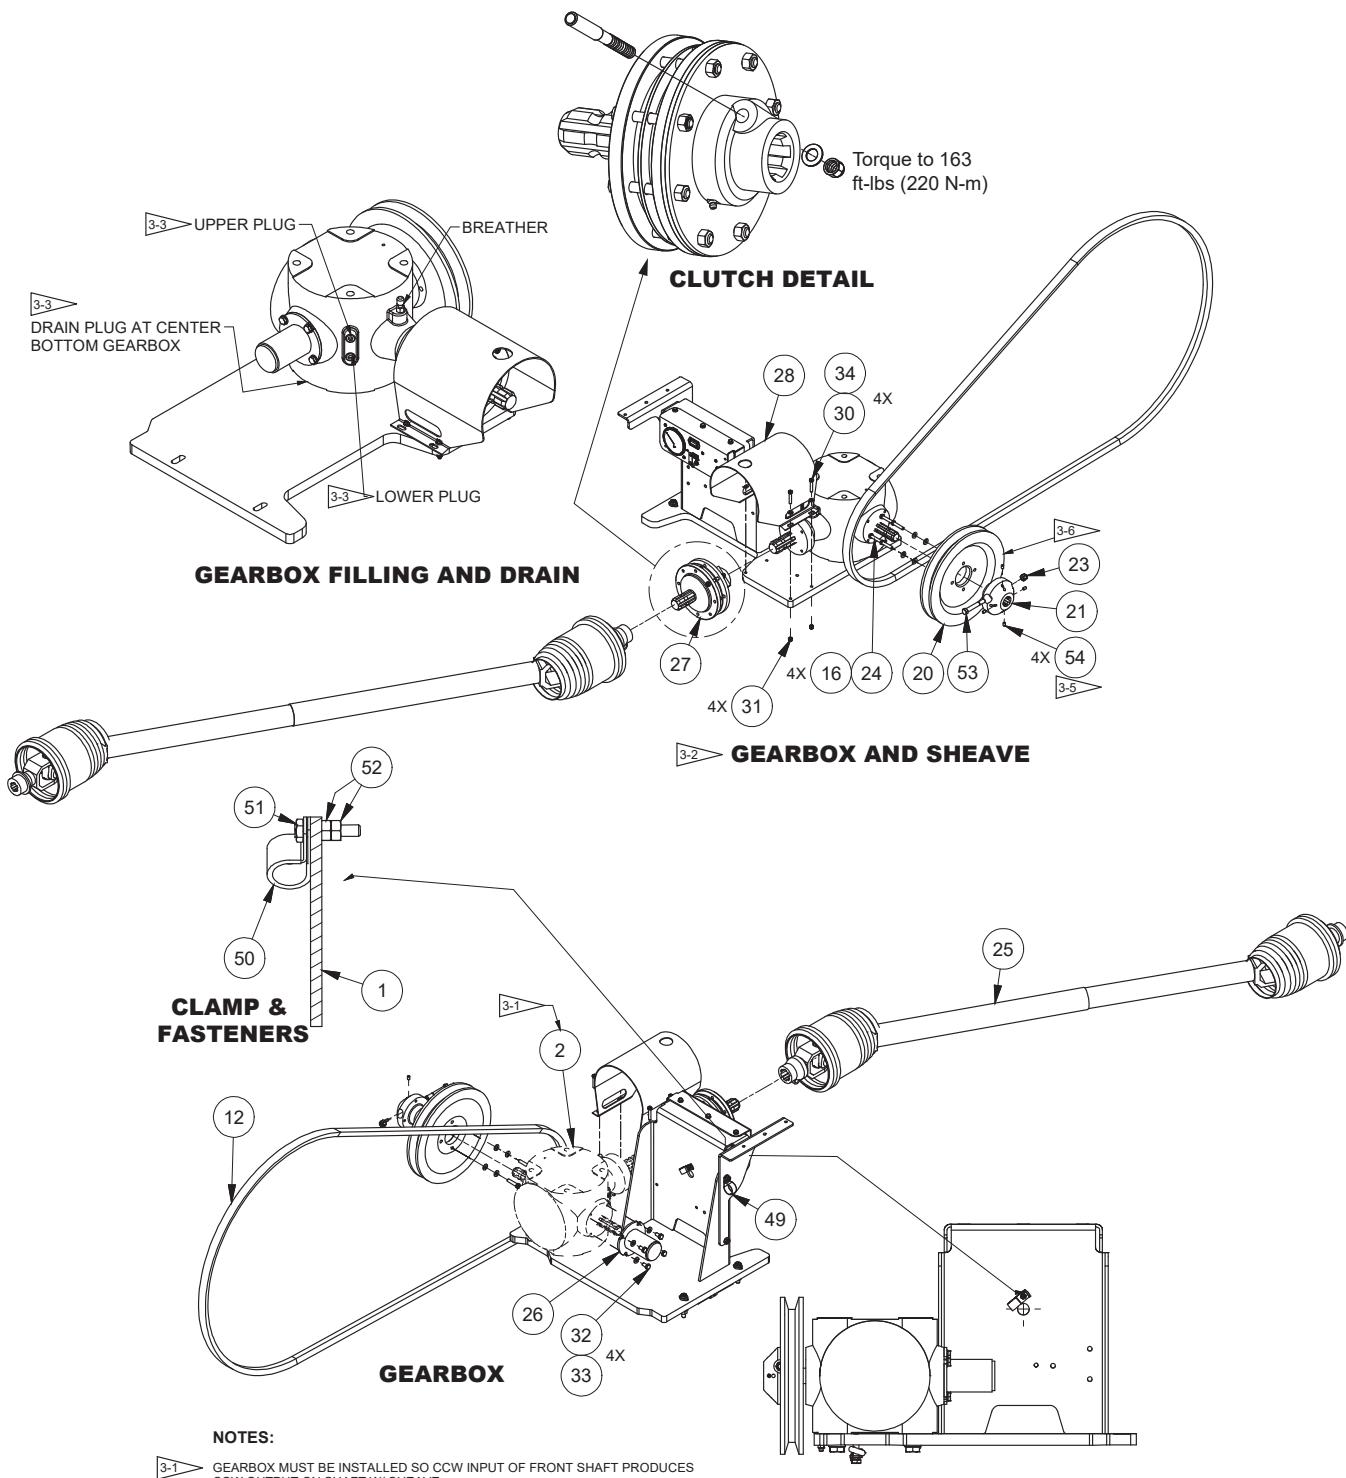


Driveline PTO Installation, 2-Tie Bullgear

Page 5 of 5

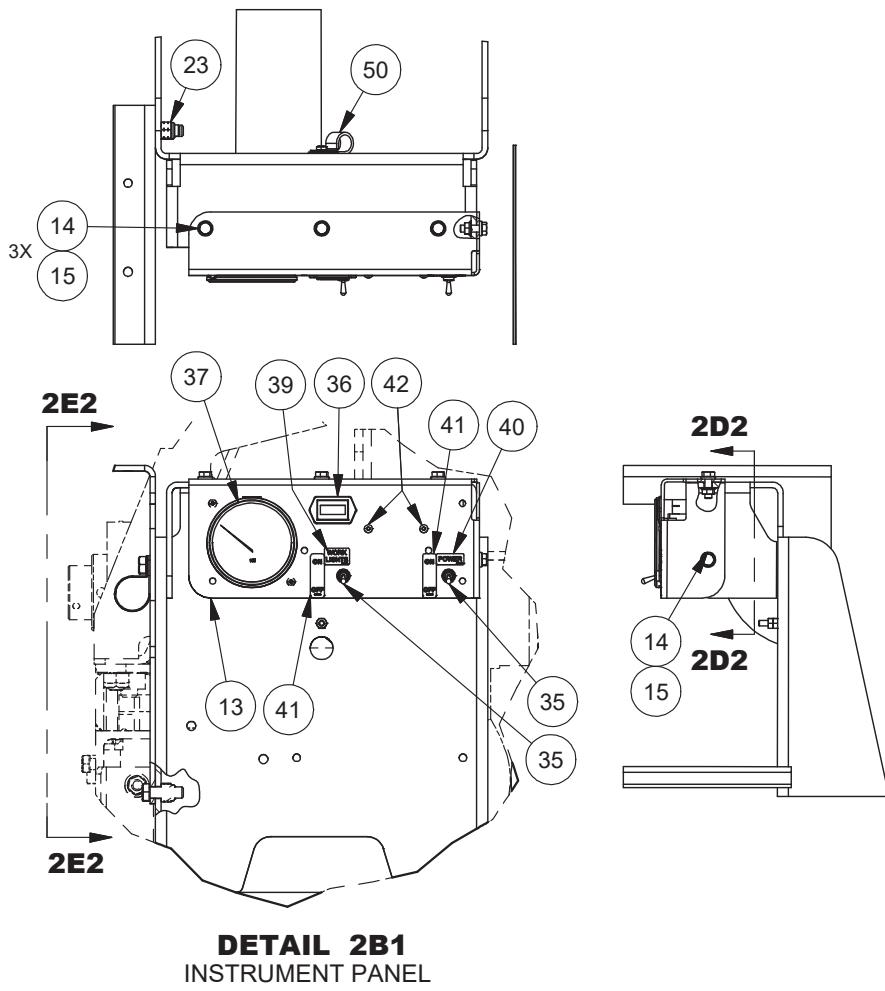


DETAIL 2B1
INSTRUMENT PANEL

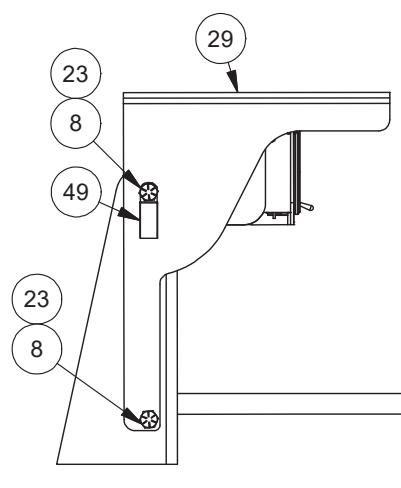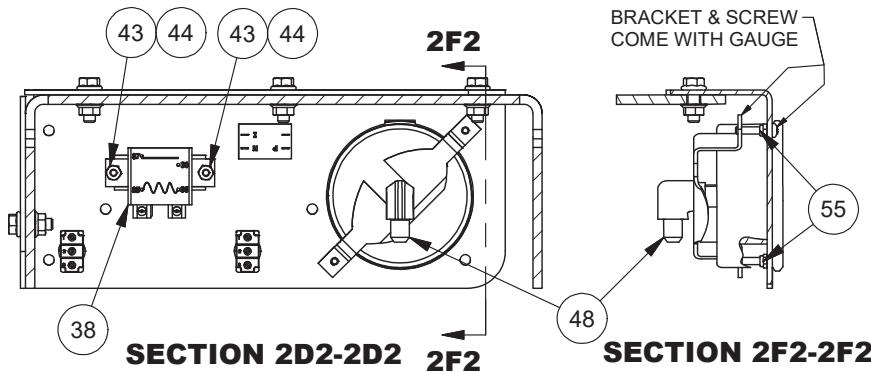

VIEW 2E2-2E2

Driveline Assembly

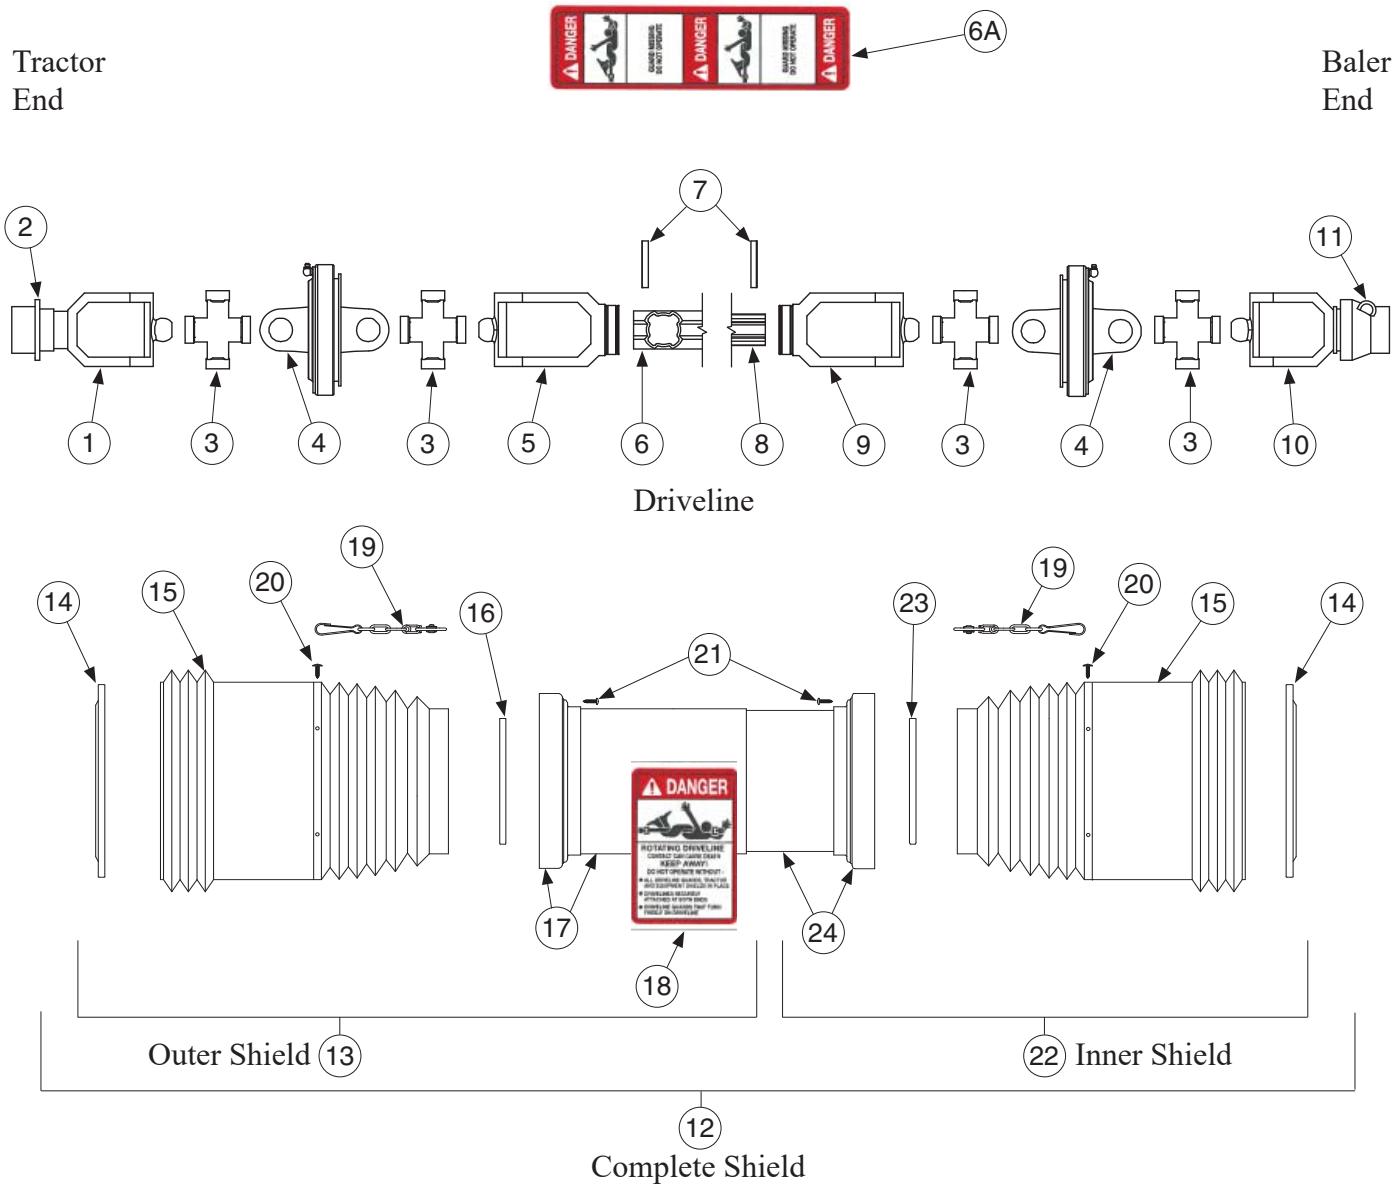




Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
258050 Driveline Assembly							
1	906277	1	. Yoke, Ball Collar	15	906290	1	... CV Shield Cone
2	906332	1	.. Kit, Ball Collar Slide & Detent	16	906291	1	... Bearing Ring, Outer Tube
3	906278	4	. Cross Journal	17	906329	1	... Shield, Outer Tube
4	906279	2	. CV Body	18	906293	1	... Outer Safety Decal
5	906280	1	. Yoke, CV Outer Tube	19	906331	1	... Chain, Shield
6	906281	1	. Cardan Tube, Outer	20	NSS	6	... Screw
6A	906282	1	. Decal, Safety, On Tube	21	NSS	3	... Screw
7	906283	2	. Roll Pin	22	906335	1	... Shield, Inner 1/2 Shaft
8	906284	1	. Cardan Tube, Inner	14	906289	1	... CV Shield Cone Bearing Ring
9	906286	1	. Yoke, CV Inner Tube	15	906290	1	... CV Shield Cone
10	906287	1	. Yoke, Taper Pin	23	906292	1	... Bearing Ring, Inner Tube
11	906233	1	.. Kit, Taper Pin, Nut & Washer	24	906330	1	... Shield, Inner Tube
12	906288	1	. Shield Kit, Complete	19	906331	1	... Chain, Shield
13	906334	1	.. Shield, Outer 1/2 Shaft	20	NSS	6	... Screw
14	906289	1	... CV Shield Cone Bearing Ring	21	NSS	3	... Screw

Section 5 Drive System

Pinion Shaft Installation	5-3
. Pinion Shaft Assembly	5-4
.. Pinion Shaft Installation Instructions.....	5-5
Bullgear/Plunger Installation, RH Drawbar, 14" 2 Tie.....	5-6
Bullgear/Plunger Installation, LH Drawbar, 14" 2 Tie	5-8
. Plunger/Connector Rod Assembly, 14" 2 Tie	5-10
.. Connector Rod Assembly, 14" 2-Tie	5-13
. Side Plate Assembly, LH, 14" Chamber	5-14
. Side Plate Assembly, RH, 14" Chamber	5-15
Bullgear/Plunger Installation, RH Drawbar, 16" 2 Tie.....	5-16
Bullgear/Plunger Installation, LH Drawbar, 16" 2 Tie	5-18
. Plunger/Connector Rod Assembly, 16" 2 Tie	5-20
.. Connector Rod Assembly, 16" 2-Tie, 2 Piece	5-23
. Side Plate Assembly, LH, 16" Chamber	5-24
. Side Plate Assembly, RH, 16" Chamber	5-25
Flywheel Installation	5-26
Flywheel Assembly	5-27
Tank Installation, Bullgear Luber.....	5-28
Tank and Pump Assembly, Bullgear Luber	5-29
Bullgear/Luber Installation, 2-Tie	5-30
. Bullgear/Luber Assembly, 2-Tie	5-31
.. Manifold Assembly, Bullgear Luber.....	5-32
Bullgear Shield/Oil Cooler Shroud Assemby	5-33
Manifold Assembly, Bullgear Luber, Hydro	5-35

This page is intentionally left blank.

Pinion Shaft Installation

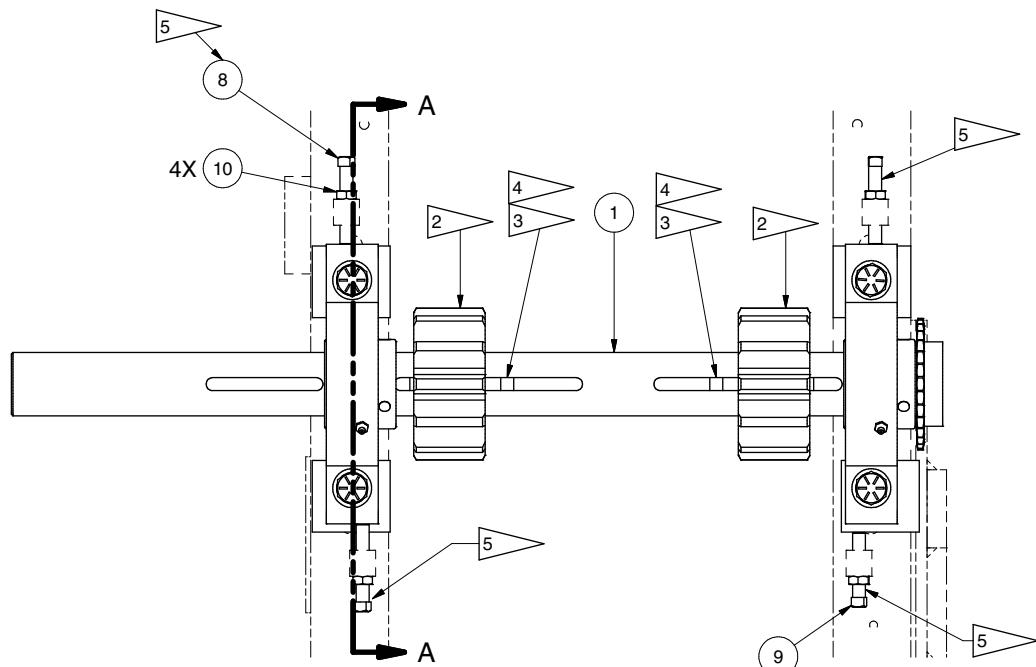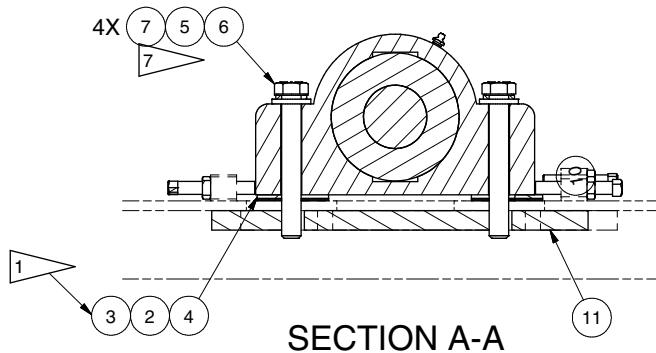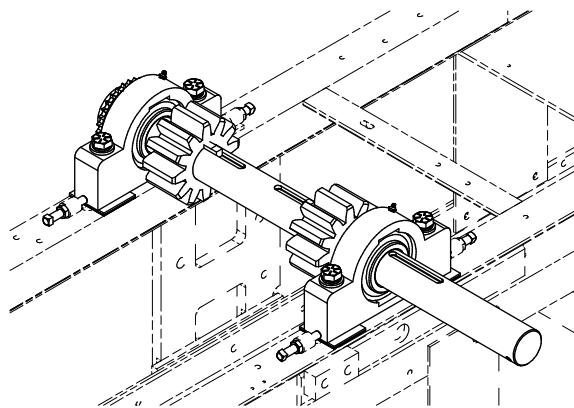

NOTES:
1 A/R USE SHIMS TO ALLOW AT LEAST 0.09" CLEARANCE FROM PINION SHAFT TO HEAD OF PLUNGER CONNECTING ROD HOUSING BOLT

SUGGESTED QTY:
 16" CHAMBER - (0) 10 GA SHIMS (SHM0800402)
 15" KITTED CHAMBER - (4) 10 GA SHIMS (SHM0800402)
 14" KITTED CHAMBER - (8) 10 GA SHIMS (SHM0800402)
 14" CHAMBER - (12) 10 GA SHIMS (SHM0800402)

2 PINION GEAR IS CENTERED TO BULLGEAR.
3 KEY DOES NOT TOUCH BEARING WHEN SET.

4 USE TOOL X-202481 FOR KEY INSTALLATION.


5 INITIAL PINION GEAR - BULLGEAR BACKLASH IS .015"-.054", CAN NOT VARY MORE THAN .015" BETWEEN GEARS (RIGHT/LEFT)

6 VIEWS SHOW INSTALLATION 906873

7 USE ANTI-SIEZE ON BOLT THREADS

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
906876							
1	* 902116	1	Pinion Shaft Installation	8	SQS5003000	3	. Set Screw
2	SHM0800400	AR	. Shaft Subassembly, Pinion	9	SQS5002500	1	. Set Screw
3	SHM0800401	AR	. Plate, Shim, 20 GA	10	234218	4	. Jam Nut
4	SHM0800402	AR	. Plate, Shim, 16 GA	11	BAR0007975	2	. Bar, Anchor
5	R13812518	4	. Lockwasher	* See Separate Coverage (Page 5-4)			
6	230682W	4	. Capscrew	Rev CE			
7	221777W	4	. Washer				


Pinion Shaft Assembly

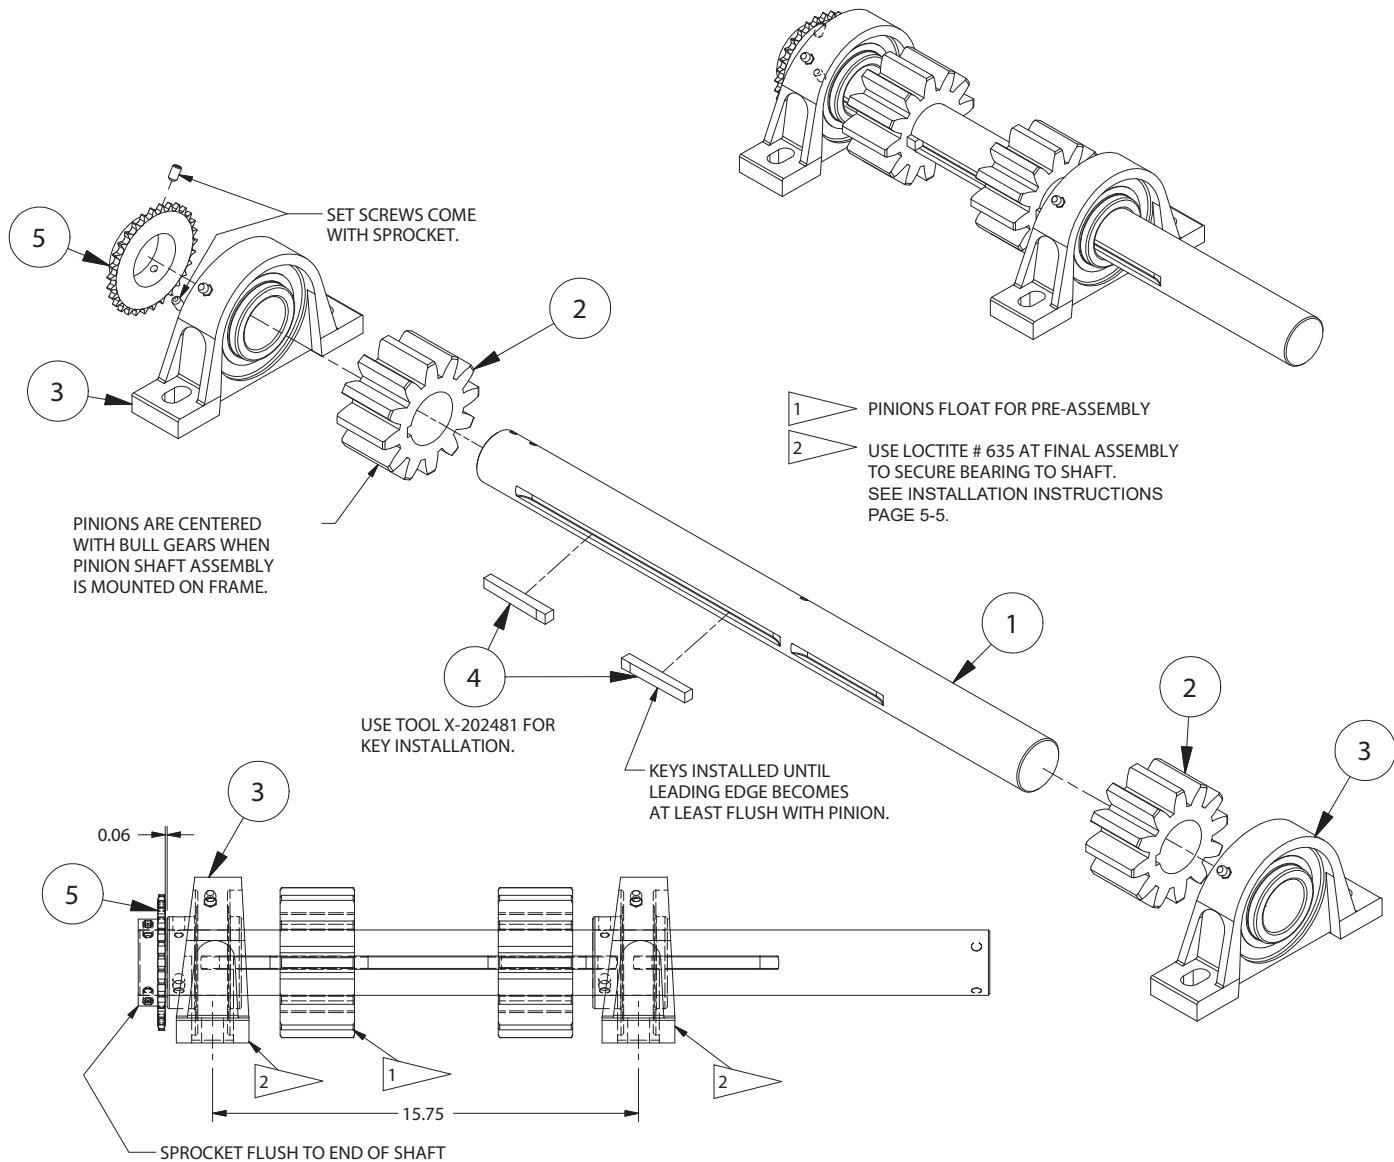


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902116		Shaft Assembly, Pinion				
1	SHF0013300	1	. Shaft, Pinion	4	F000007488	2	. Key
2	GER0007128	2	. Gear, Pinion	5	SPK0004030	1	. Sprocket
3	*a 906113	2	. Bearing Assembly				
	905927	1	.. Insert, Bearing w/Setscrews				
							*a See Separate Coverage (Page 5-5)

Rev D

Pinion Shaft Installation Instructions

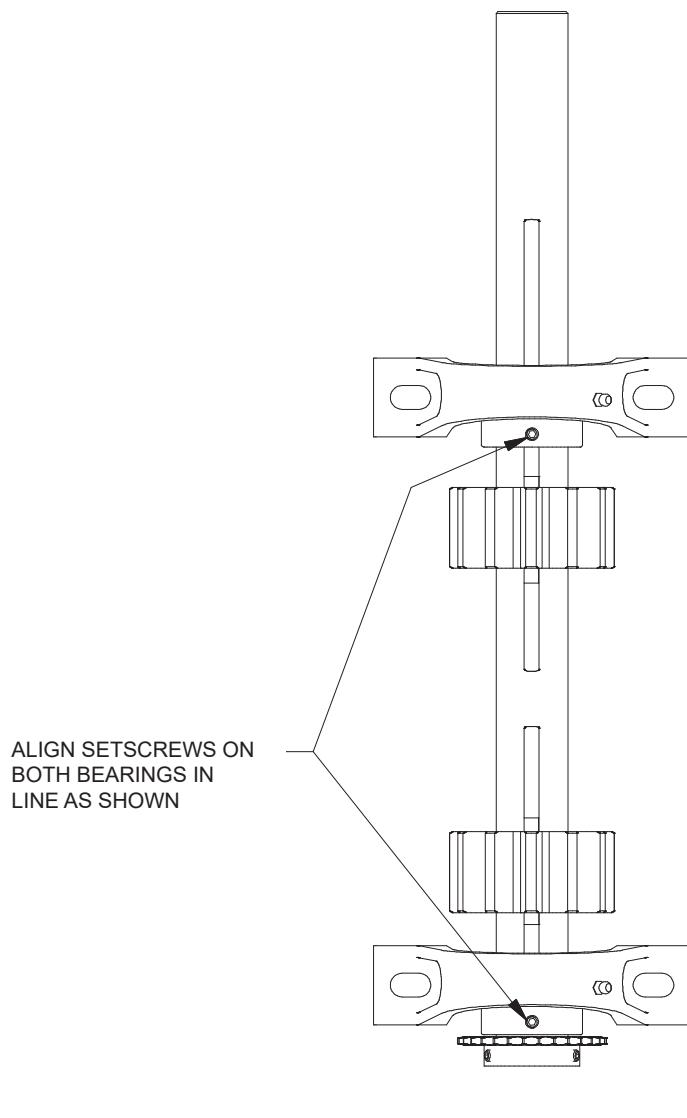

VIEW 1

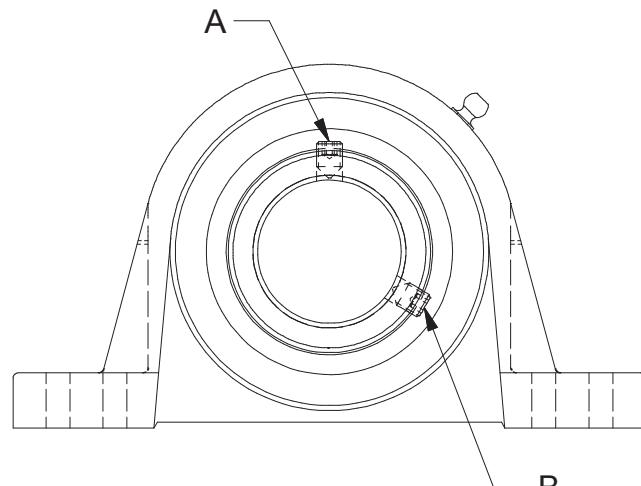


VIEW 2

TORQUING OF SETSCREWS (REFER TO VIEWS 1 & 2)

- STEP 1:
ALIGN SETSCREWS AS SHOWN IN VIEW 1.
- STEP 2:
TORQUE SETSCREW "A" TO 1/2 RECOMMENDED TORQUE OF 29-38 FT LBS.
- STEP 3:
TORQUE SETSCREW "B" TO FULL RECOMMENDED TORQUE OF 29-38 FT LBS.
- STEP 4:
TORQUE SETSCREW "A" TO FULL RECOMMENDED TORQUE OF 29-38 FT LBS.
- STEP 5:
REPEAT STEPS 2-4 ON THE SECOND BEARING.

Bullgear/Plunger Installation, RH Drawbar, 14" 2 Tie


Page 1 of 2

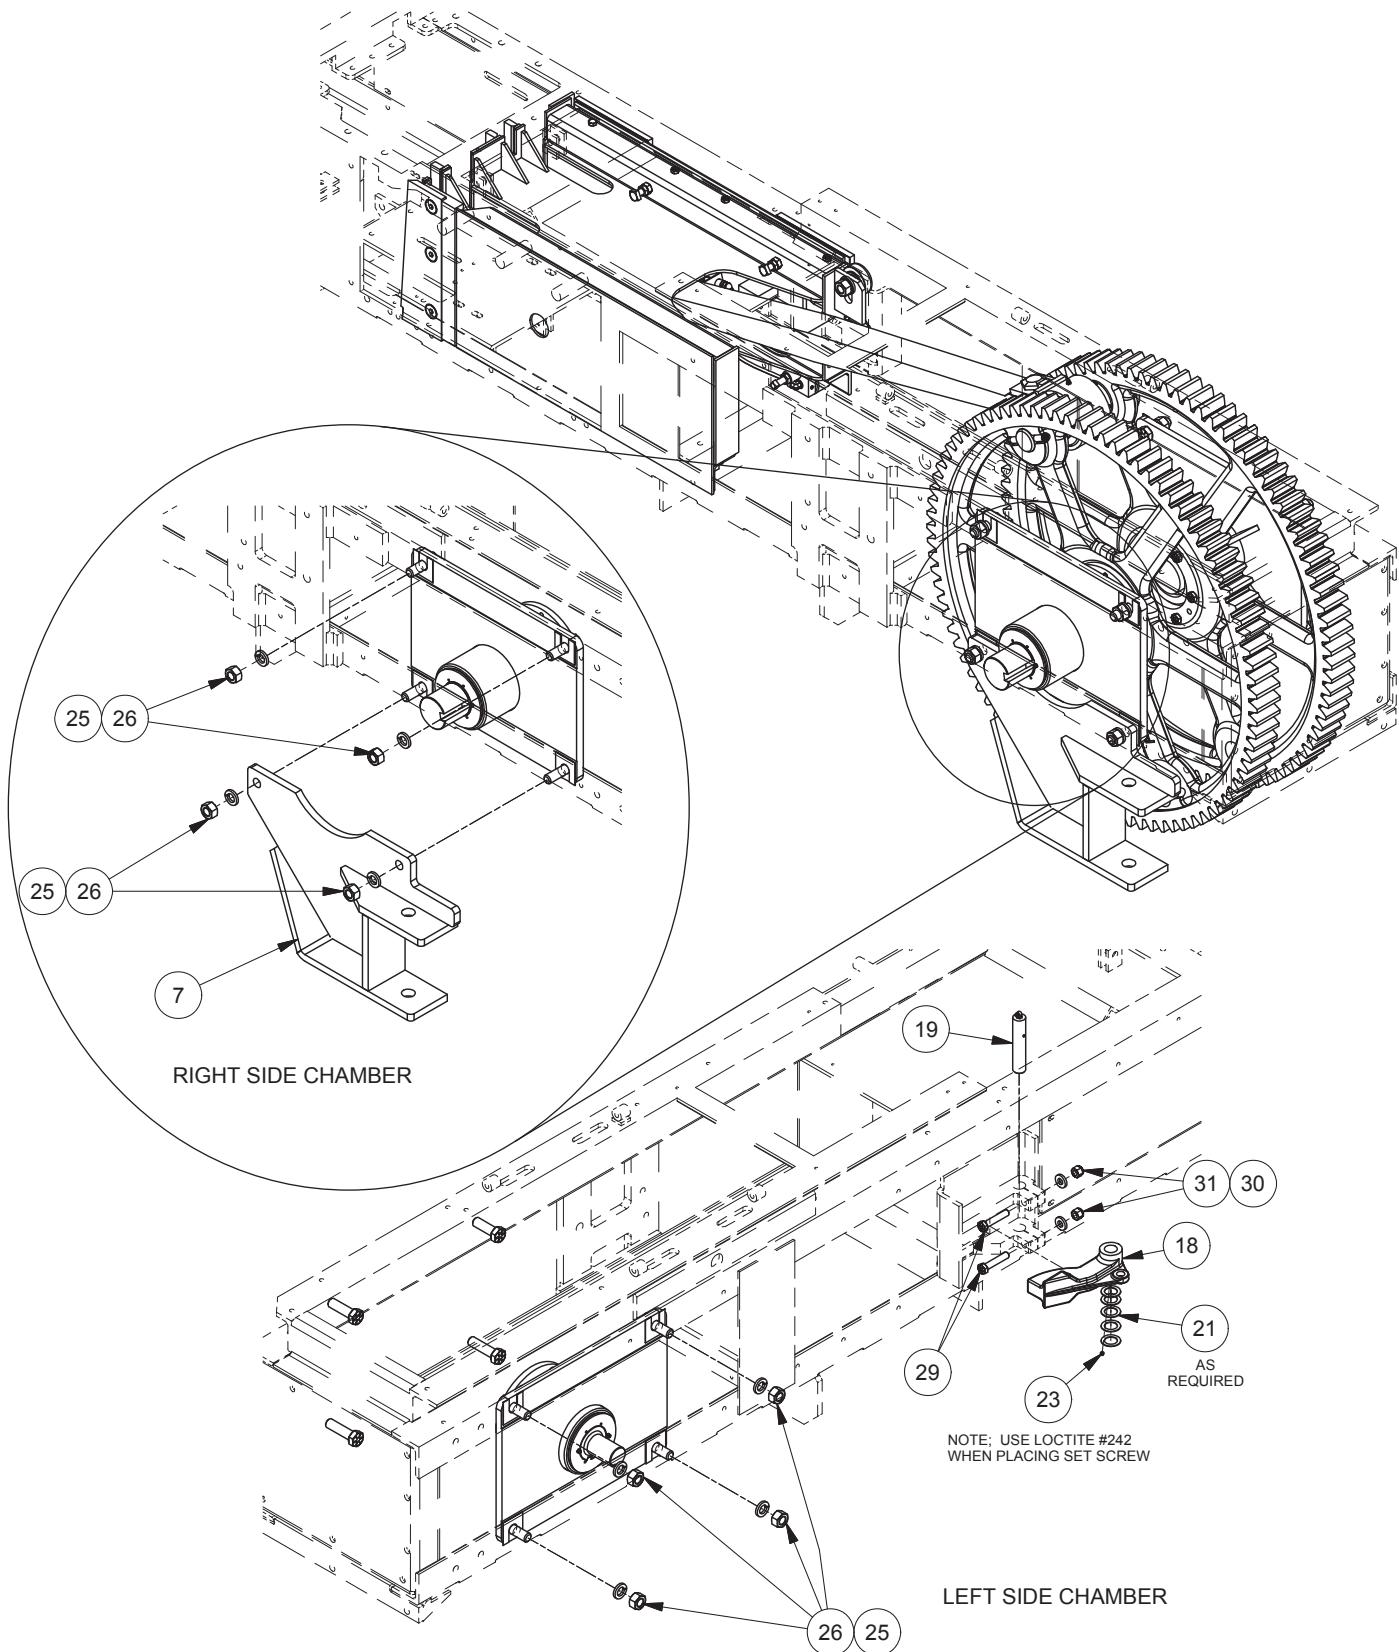

Bullgear/Plunger Installation, RH Drawbar, 14" 2 Tie

Page 2 of 2

NOTE:
TO AVOID FEED ARM INTERFERENCE, THE ROLL PIN IS THE RIGHT HAND BULLGEAR IS PLACED SO THAT WHEN THE BULLGEAR IS IN THE UP (12 O'CLOCK) POSITION IN THE CHAMBER THE KEYWAY OF THE SHAFT IN THE BULLGEAR PLATE IS FACED TO THE FRONT (3 O'CLOCK) OF THE CHAMBER.

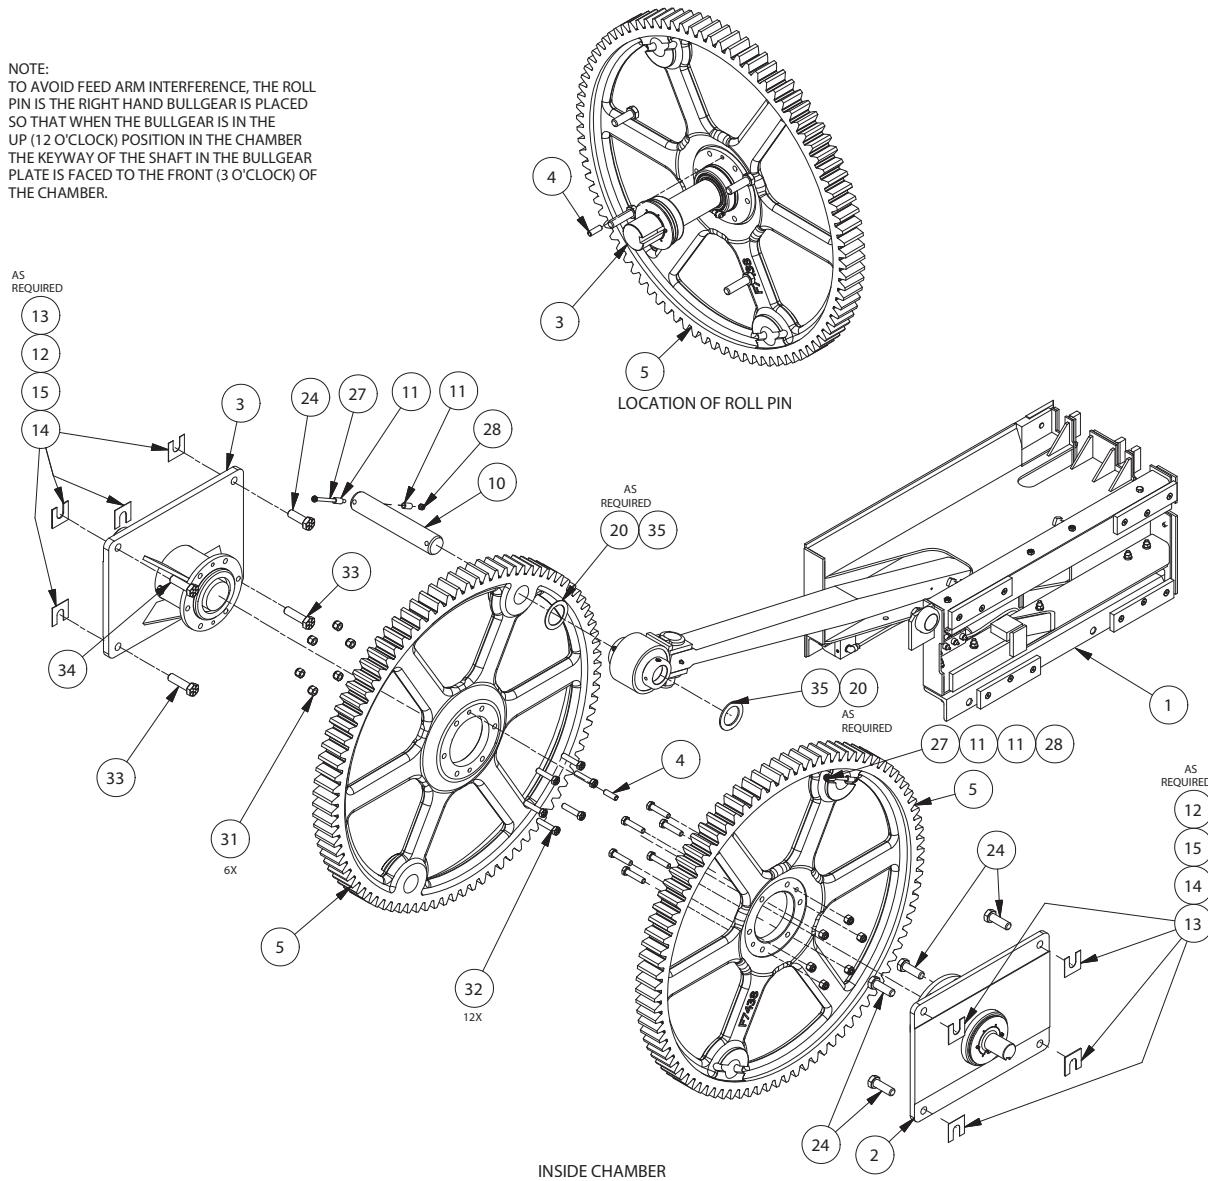


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902536			Bullgear/Plunger Installation	23	027-0933	1	. Set Screw
1 *a	PLG3654800	1	. Plunger/Conn Rod Assembly	24	Y17C-1236	5	. Capscrew
2 *b	PLT0257720	1	. Side Plate Assembly, LH	25	200608	8	. Lockwasher
3 *c	PLT0257730	1	. Side Plate Assembly, RH	26	221716W	8	. Hex Nut
4	F000007239	2	. Pin, Roll	27	R13811027	2	. Capscrew
5	F000007438	2	. Bull Gear	28	232939	2	. Nut
7	903503	1	. Bracket, Drawbar	29	221576W	2	. Capscrew
10	F000000046	1	. Pin	30	221771W	2	. Washer
11	SPC0033118	4	. Spacer	31	223587	14	. Nut
12	SHM0163090	AR	. Shim 16 GA	32	221574W	12	. Capscrew
13	SHM0163091	AR	. Shim 20 GA	33	R13806363	2	. Capscrew
14	SHM0163092	AR	. Shim 10 GA	34	221657W	1	. Capscrew
15	SHM0163093	AR	. Shim 28 GA	35	221706	AR	. Bushing
18	F000007547	1	. Dog Stop, Plunger				
19	PIN0035710	1	. Pin Assembly				
	09417892	1	. Fitting, Lube				
20	ZZ00000204	AR	. Bushing				
21	ZZ00000209	AR	. Bushing				

*a See Separate Coverage Page 5-10
 *b See Separate Coverage Page 5-14
 *c See Separate Coverage Page 5-15


Rev A

Bullgear/Plunger Installation, LH Drawbar, 14" 2 Tie

Page 1 of 2

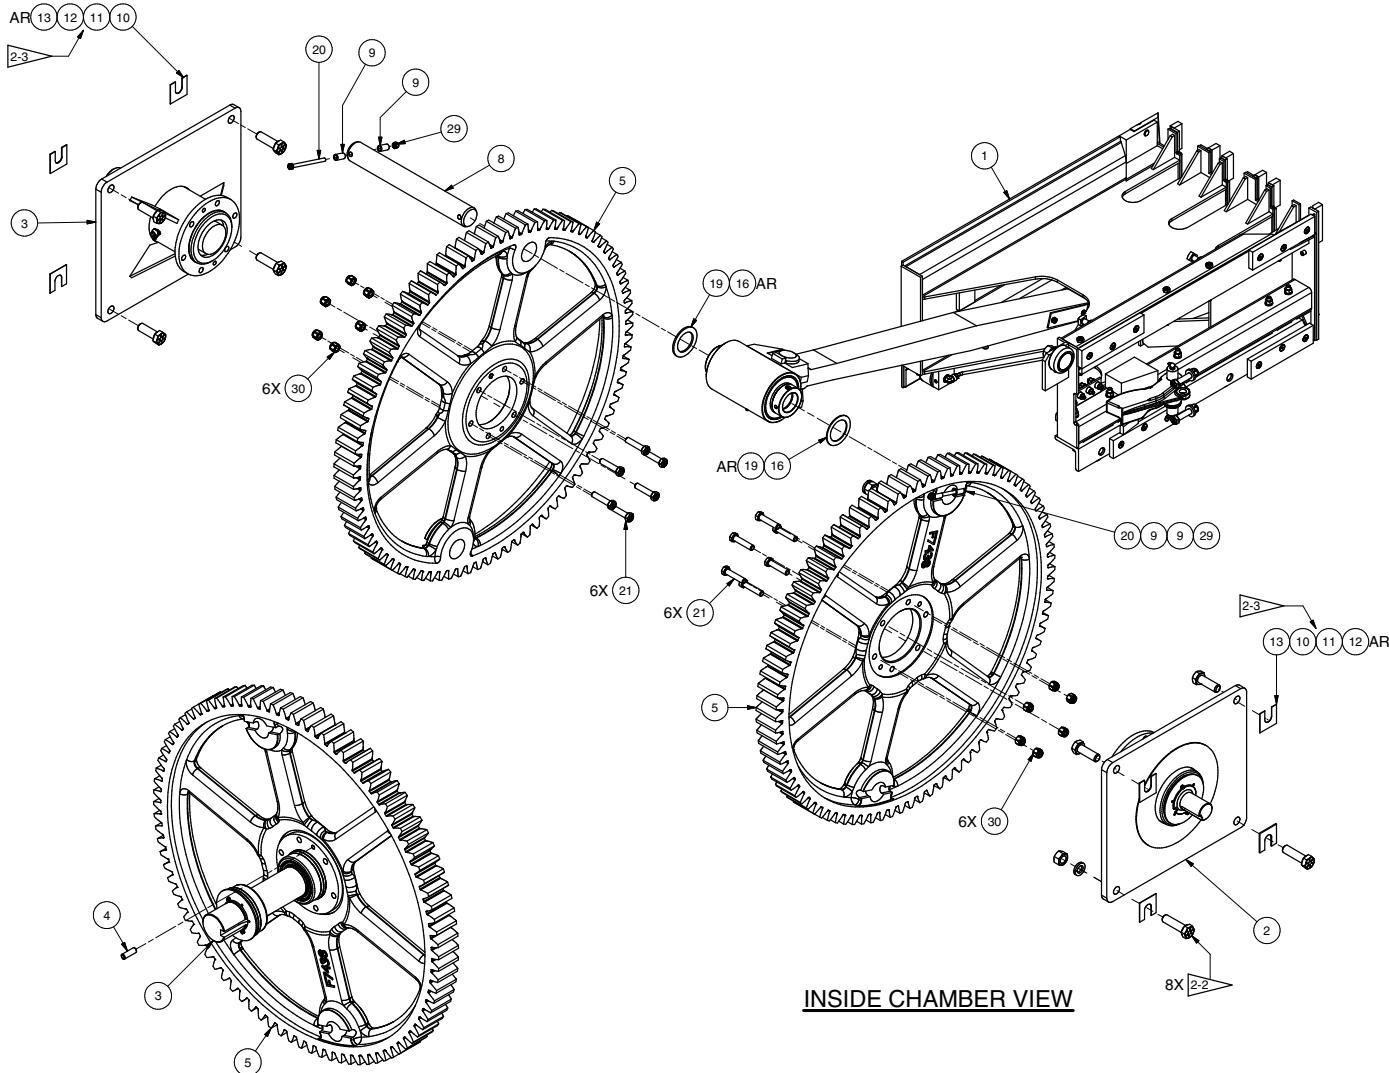

 2-1 ROLL PIN LOCATION

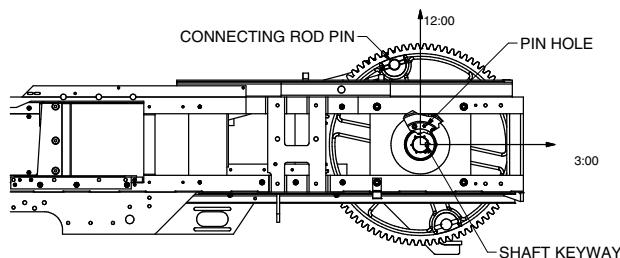

FEED FORK AND PLUNGER TIMING
ORIENTATION INFORMATION
IS FOR BULL GEAR INSTALLATION ONLY

NOTES:


- 2-1** TO AVOID FEED ARM INTERFERENCE THE ROLL PIN IN THE RIGHT-HAND BULLGEAR IS PLACED SO THAT WHEN THE CONNECTING ROD IS BETWEEN THE 11:00 TO 12:00 POSITION, THE KEYWAY OF THE SHAFT IN THE RIGHT-HAND BULLGEAR SIDE PLATE IS FACING THE FRONT OF THE BALER IN THE 3:00 POSITION AS REFERENCED WHEN LOOKING AT THE RIGHT-HAND BULLGEAR SIDE PLATE FROM THE RIGHT-HAND SIDE OF THE BALER.

2-2 TORQUE SIDE PLATE BOLTS TO 365 FT-LBS.

2-3 SHIM AS NEEDED SO THAT THE BULLGEARS (ITEM 5) CAN FREELY ROTATE A FULL 360° WITH THE CRANK PIN (ITEM 8) INSERTED.

Bullgear/Plunger Installation, LH Drawbar, 14" 2 Tie

Page 2 of 2

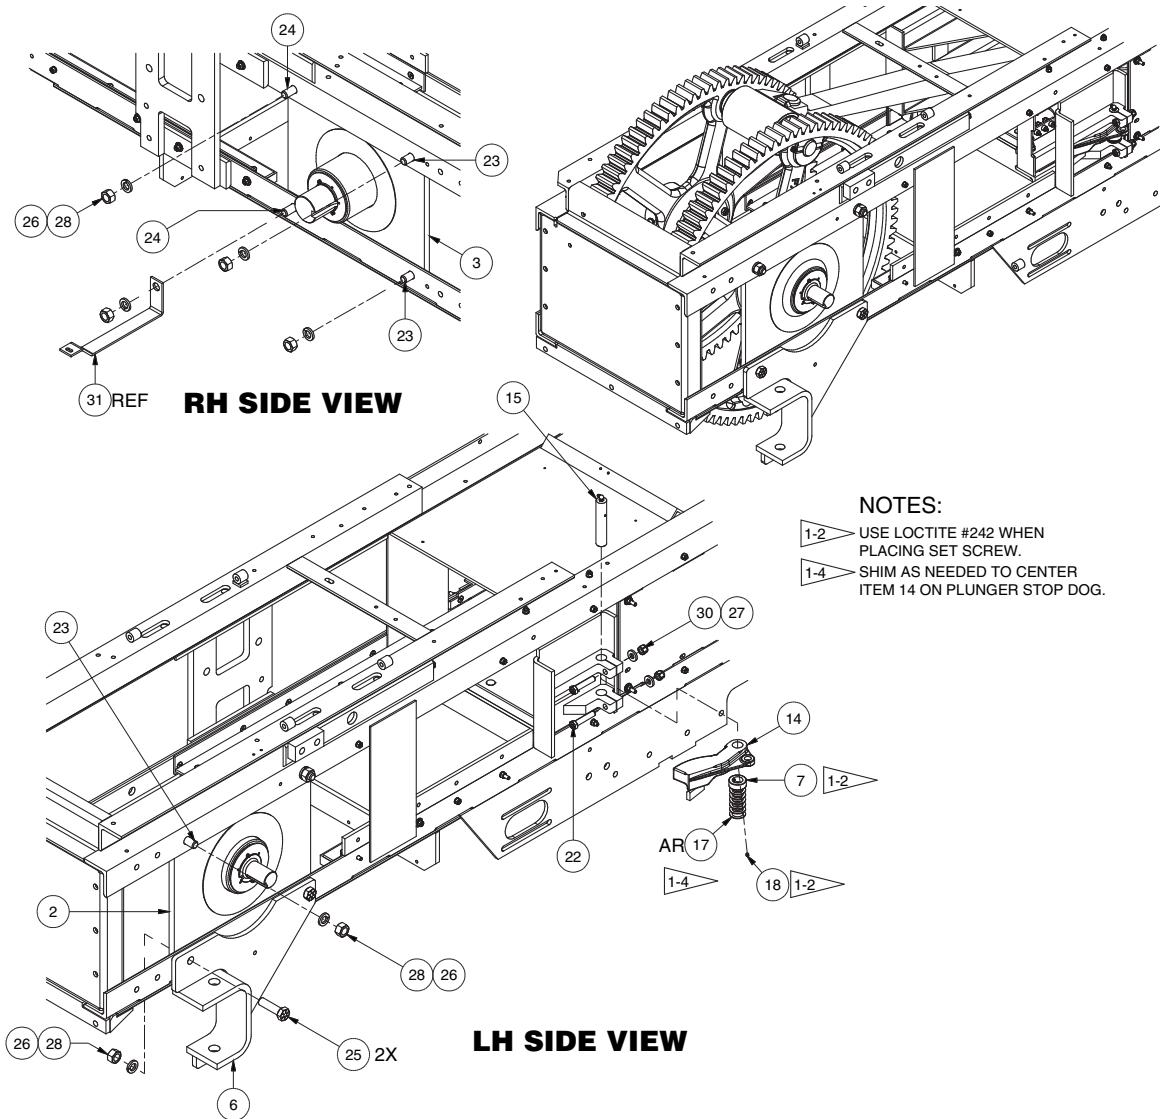


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
910101 Bullgear/Plunger Installation, LH 14" 2 - TIE							
1 *a	PLG3654800	1	. Plunger Assembly	19	221706	4	. Mach Bushing
2 *b	PLT0257720	1	. Side Plate Assembly, LH	20	R13811027	2	. Capscrew
3 *c	PLT0257730	1	. Side Plate Assembly, RH	21	221574W	12	. Capscrew
4	F000007239	1	. Pin, Roll	22	221576W	2	. Capscrew
5	F000007438	2	. Bull Gear	23	221656W	4	. Capscrew
6	BKT0016306	1	. Bracket, Drawbar	24	R13806363	2	. Capscrew
7	YEE-2	0	. Collar	25	221660W	2	. Capscrew
8	F000000046	1	. Pin, Crank	26	200608	8	. Lockwasher
9	SPC0033118	4	. Spacer	27	221771W	2	. Washer
10	SHM0163090	AR	. Shim, 16 GA	28	221717W	8	. Hex Nut
11	SHM0163091	AR	. Shim, 20 GA	29	232939	2	. Nut, Esna
12	SHM0163092	AR	. Shim, 10 GA	30	223587	14	. Locknut
13	SHM0163093	AR	. Shim, 28 GA	31	SHD0016332		. Brace
14	F000007547	1	. Stop Dog	*a See Separate Coverage (Page 5-10)			
15	PIN0035710	1	. Plunger Dog Pin Assembly	*b See Separate Coverage (Page 5-12)			
	09417892	1	. Fitting, Lube	*c See Separate Coverage (Page 5-15)			
16	ZZ00000204	AR	. Mach Bushing				
17	ZZ00000209	AR	. Mach Bushing				
18	027-0933	1	. Set Screw				

Rev -B

Plunger/Connector Rod Assembly, 14" 2 Tie

Page 1 of 3

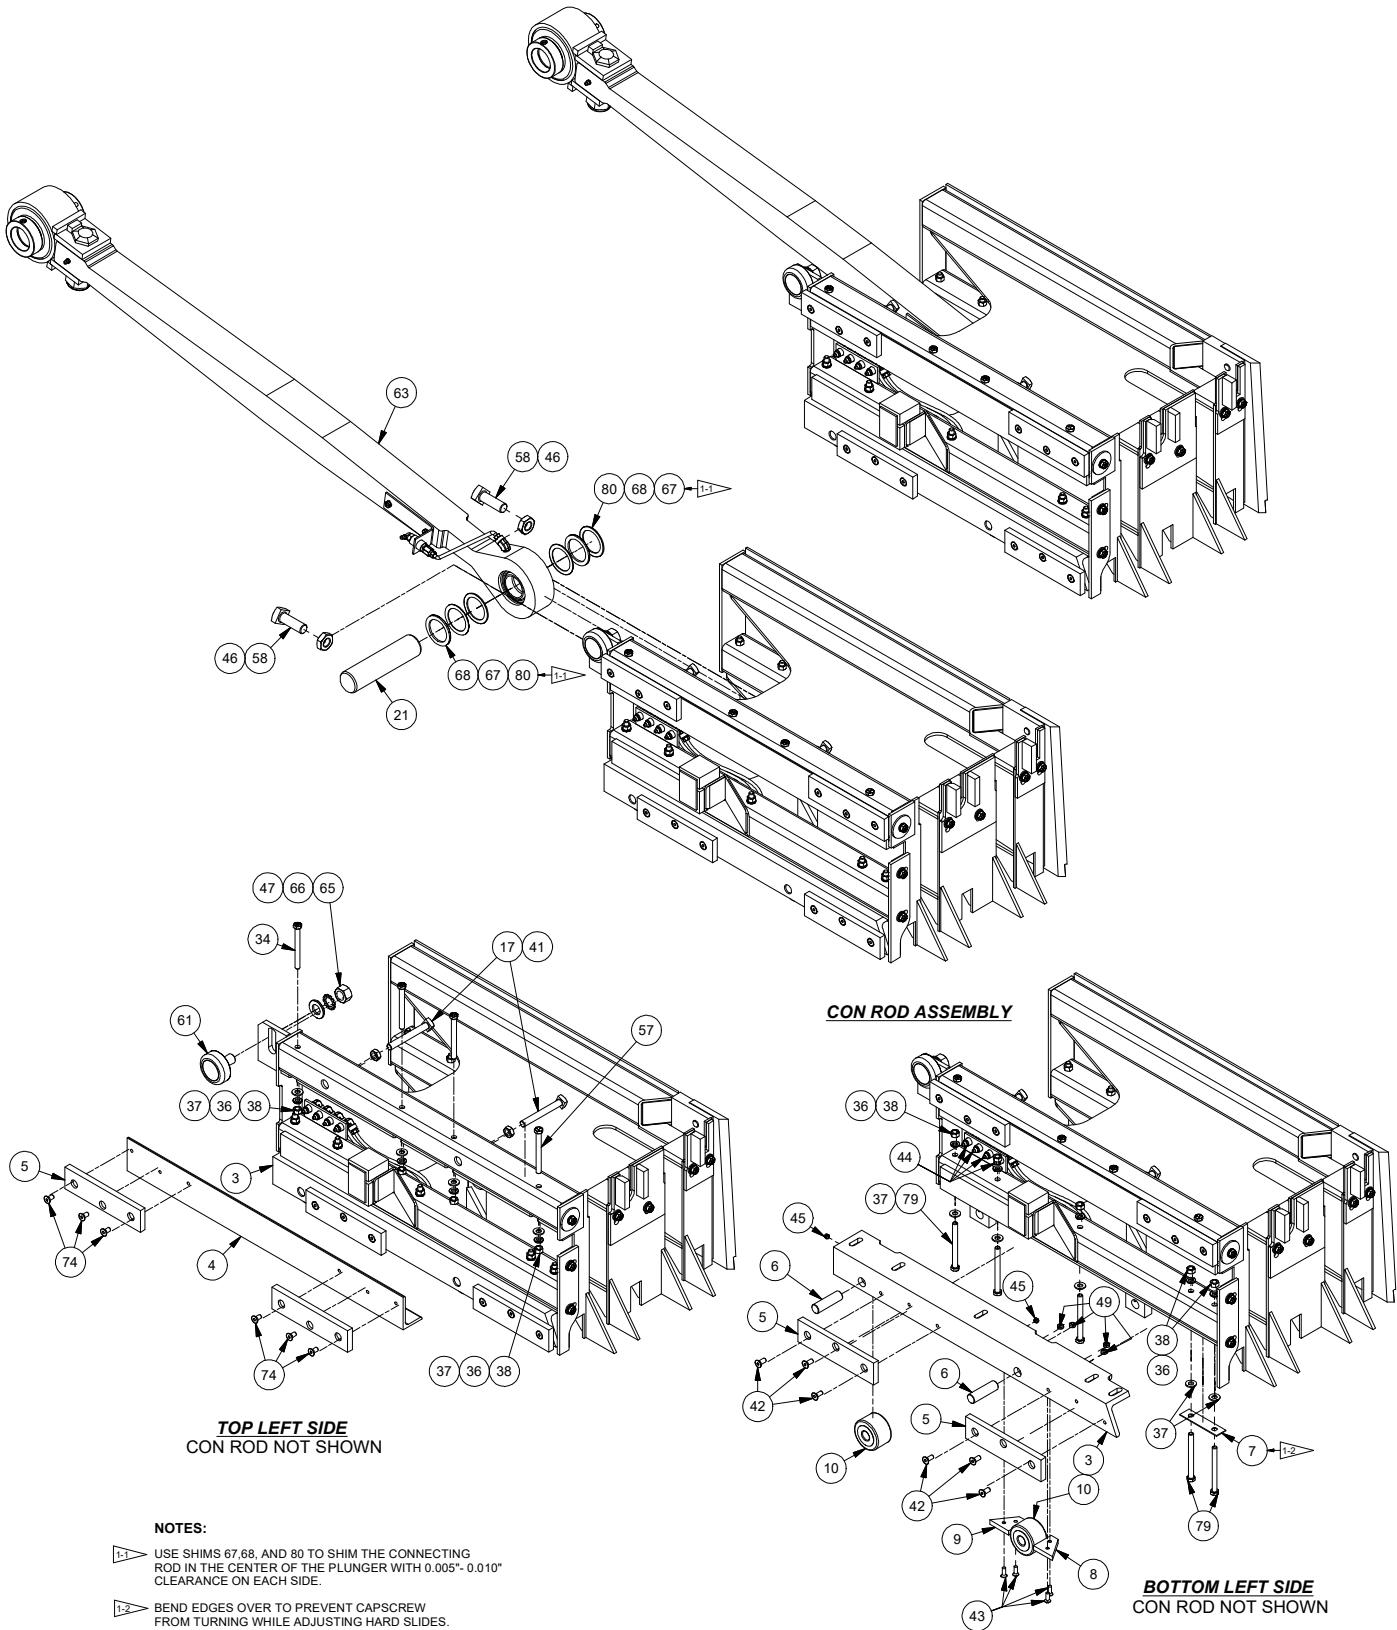

Plunger/Connector Rod Assembly, 14" 2 Tie

Page 2 of 3


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	PLG3654800		Plunger/Conn Rod Assembly				
1	SHM0034535	AR	. Shim, Knife, Plunger 16 GA	47	R13811457	1	. Washer
2	SHM0034534	AR	. Shim, Knife, Plunger .012	49	R13811463	8	. Locknut
3	903882	1	. Mounting, Left Bottom	52	F000008116	1	. R. H. Adj Pad F/Plunger Face
4	F000007766	1	. Angle, Top Right	53	F000008117	1	. Center Adj Pad F/Plunger Face
5	F000001537	4	. Bar, Slide	54	F007777-14	1	. Plate, Adj Pad
6	PIN0007831	4	. Pin, Roll	55	KNF0021901	1	. Plate, Knife
7	LOK0005857	1	. Plate, Lock	56	F000007769	1	. Bar, Adj Pad
8	F000000986	2	. Plate, Rear Wiper	57	PLG036548E	1	. Plunger
9	F000000774	2	. Plate, Front Wiper	58	SQS7502250	2	. Set Screw
10	F000000775	4	. Bearing, Roller	61	BRG0001636	1	. Top Roller Bearing
11	F000007735	6	. Grommet, Rubber	63	*a 901975	1	. Connecting Rod Assy
15	F000007839	1	. Left Bottom Plunger Rail	64	F000001441	8	. Fitting
16	F000000227	3	. Bolt	65	221717W	1	. Hex Nut
17	F000000073	2	. Screw	66	WES0007500	1	. Washer
19	PLG0007840	1	. Angle, Right Front	67	ZZ00000203	AR	. Bushing
21	F000007914	1	. Pin	68	ZZ00000200	AR	. Bushing
34	R13811046	7	. Capscrew	69	F000000246	1	. Washer
35	Y17C-0616	7	. Capscrew	74	Y09G-0510	6	. Capscrew
36	234135	20	. Lockwasher	75	904564	1	. Tube
37	R13802623	19	. Washer	76	904949	1	. Tube
38	R13809551	12	. Nut	77	904565	1	. Tube
40	SQS5002500	2	. Set Screw	78	904567	1	. Tube
41	234218	4	. Nut	79	R13811047	5	. Capscrew
42	R13807736	6	. Capscrew	80	ZZ00000202	AR	. Bushing
43	00113991	8	. Machine Screw				
44	00191758	4	. Fitting, Lube				
45	STS3125313	4	. Screw				
46	247008	2	. Jam Nut				

*a See Separate Coverage (Page 5-13)


Rev N

Plunger/ Connector Rod Assembly, 14" 2 Tie

Page 3 of 3

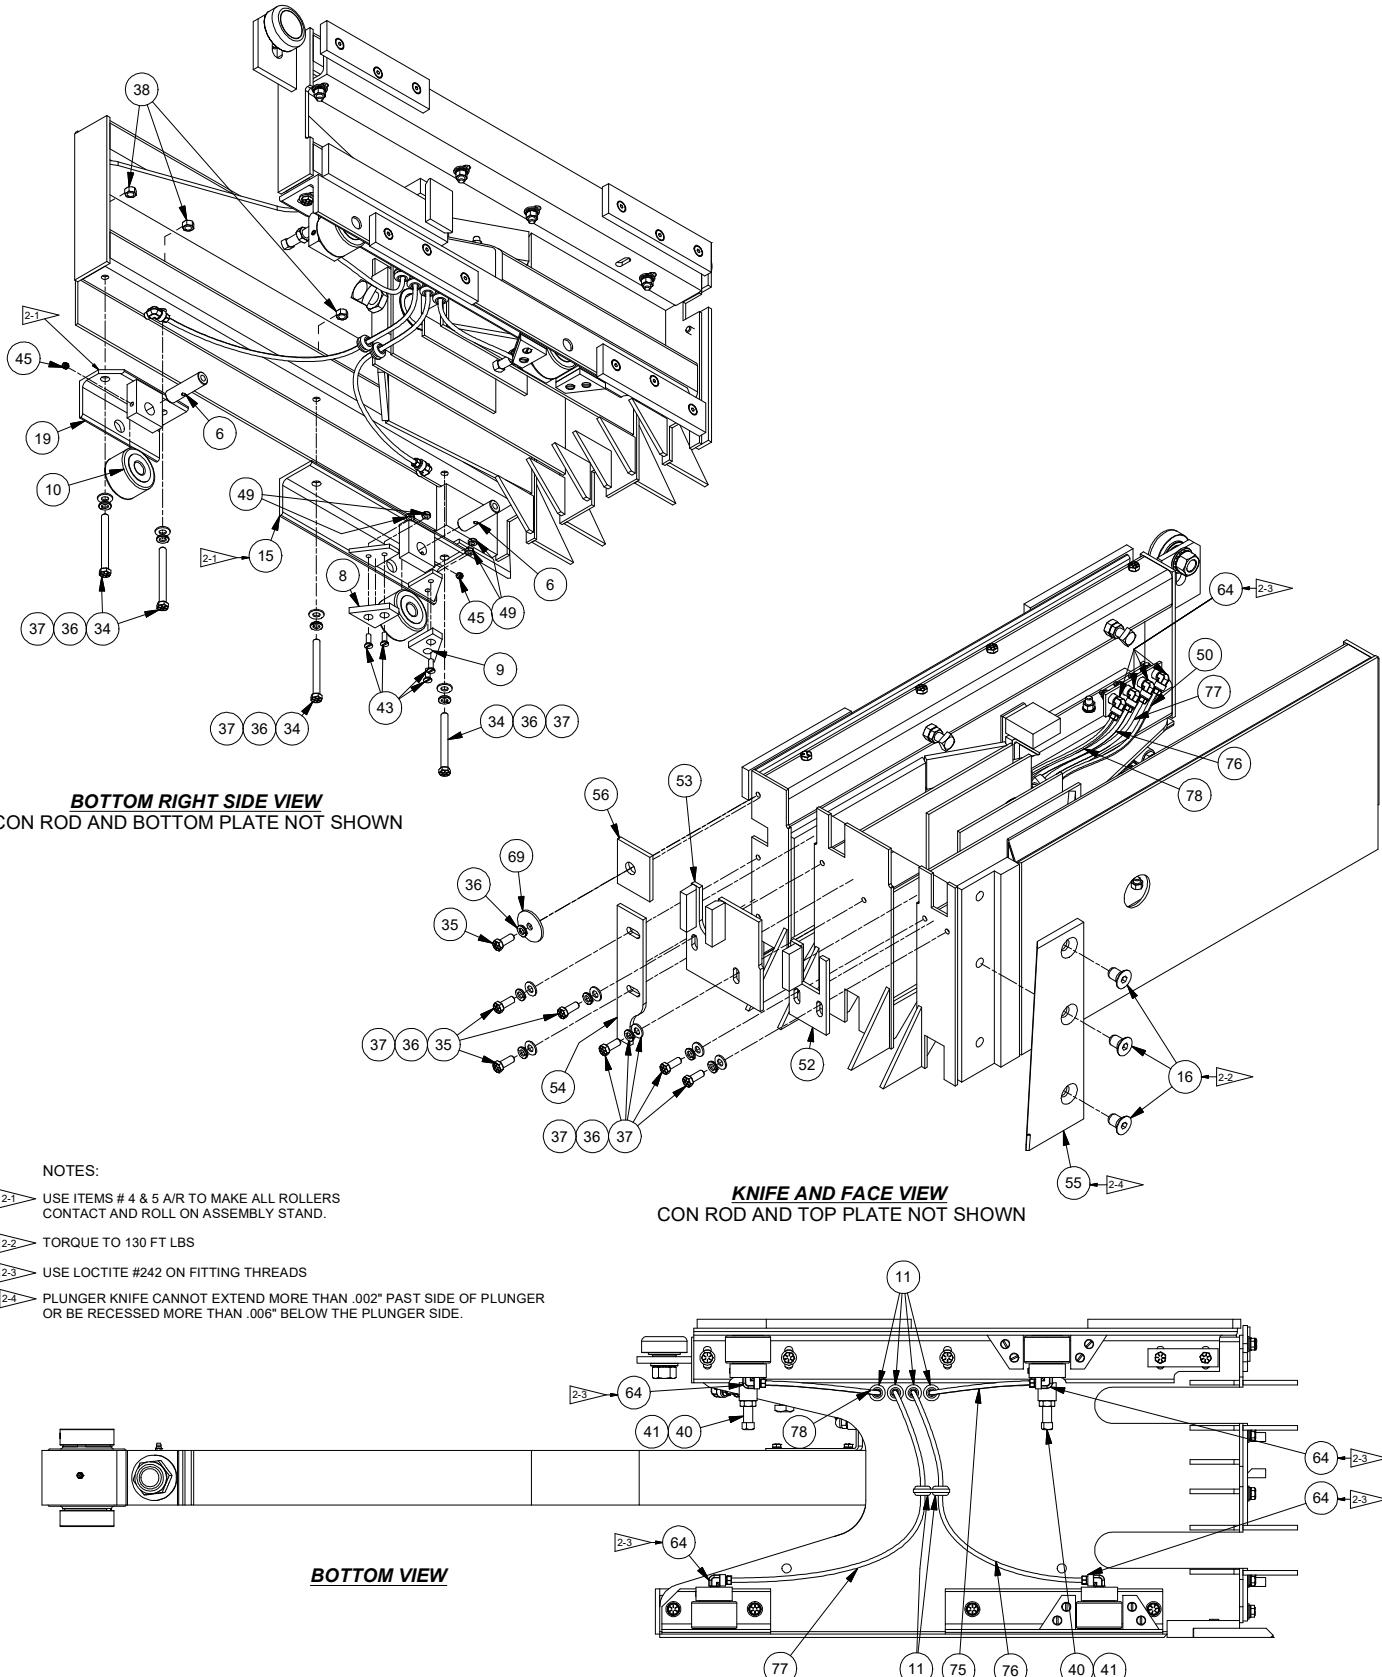


Connector Rod Assembly, 14" 2-Tie

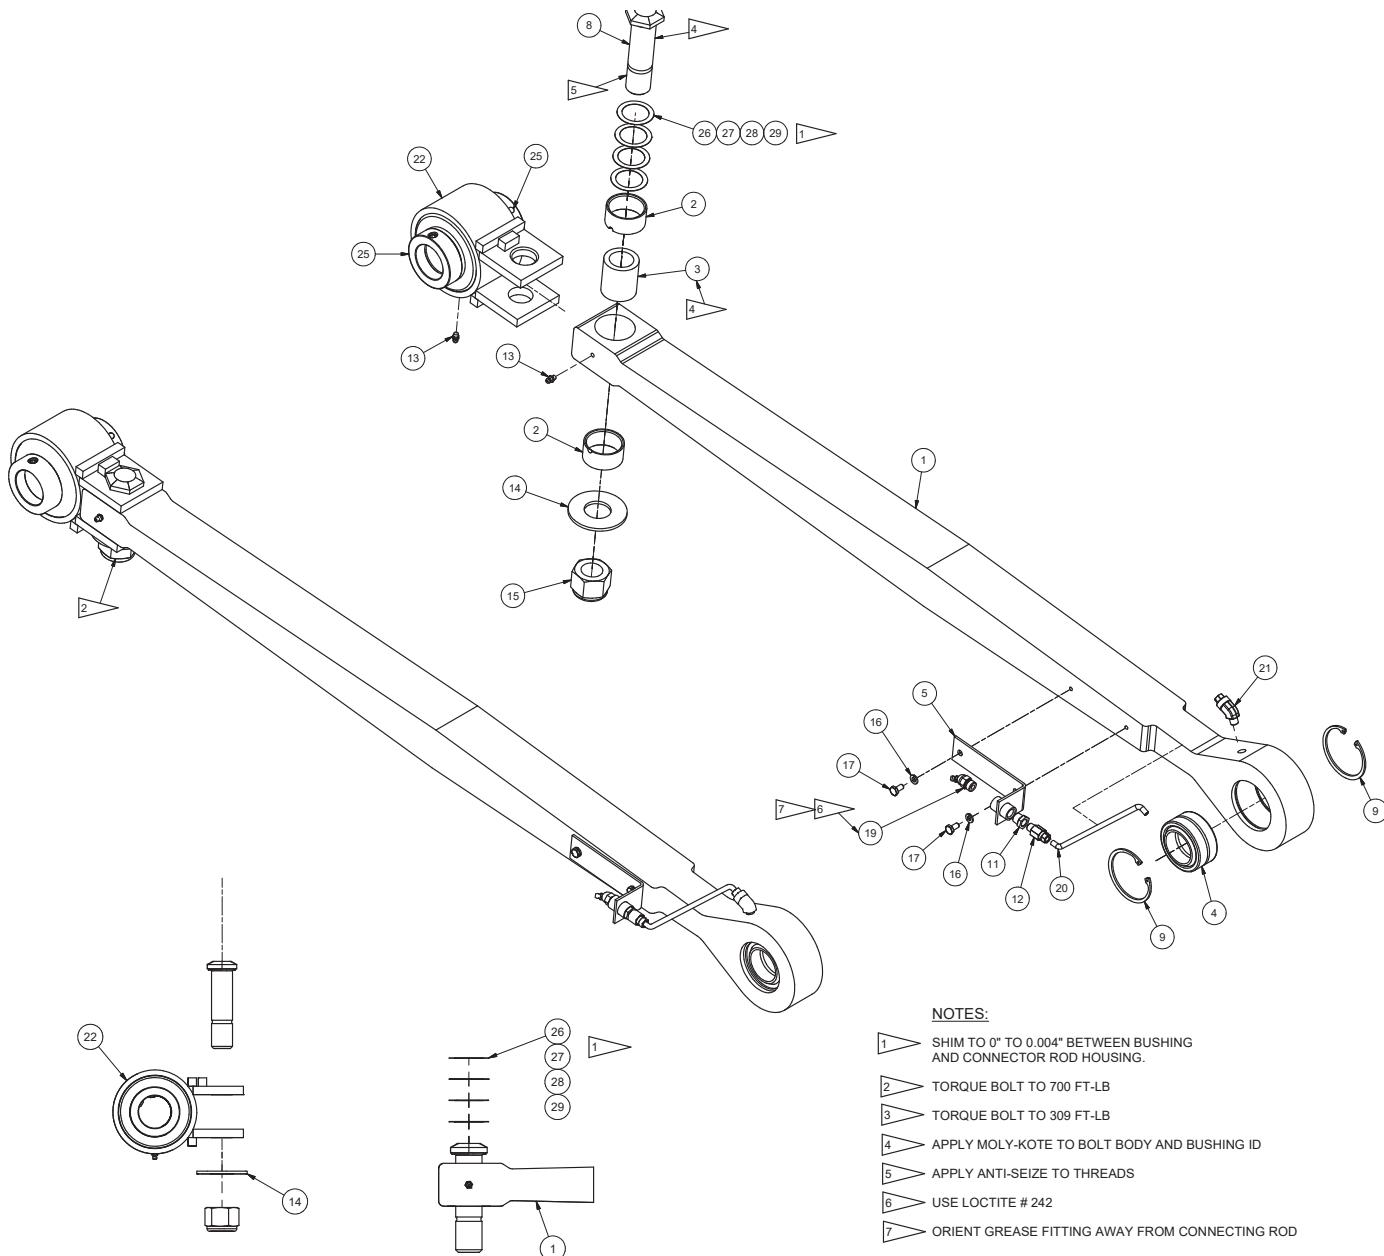

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
901975							
	Connecting Rod Assembly						
1	ROD0034342	1	. Connector Rod	16	228412	2	. Lockwasher
2	F000008077	2	. Bearing	17	133469W	2	. Capscrew
3	F000008078	1	. Connecting Rod Bushing	19	F000007651	1	. Zerk
4	R1574466	1	. Bearing	20	NYL0000250	1'	. Tube
5	F000008263	1	. Bracket	21	253694	1	. Fitting
8	PIN0008675	1	. Connecting Rod Pivot Pin	22	F000008114	1	. Connecting Rod Housing
9	F000007917	2	. Ring, Snap	25	F000008100	2	. Bearing
11	209500	1	. Fitting	26	F000007977	AR	. Spacer Washer
12	F000000778	1	. Tube Connector	27	F000007978	AR	. Spacer Washer
13	11079	2	. Fitting, Lube	28	SHM0000105	AR	. Shim .020
14	225851	1	. Hard Washer	29	SHM0000103	AR	. Shim .150
15	222465	1	. Locknut				Rev M



Side Plate Assembly, LH, 14" Chamber

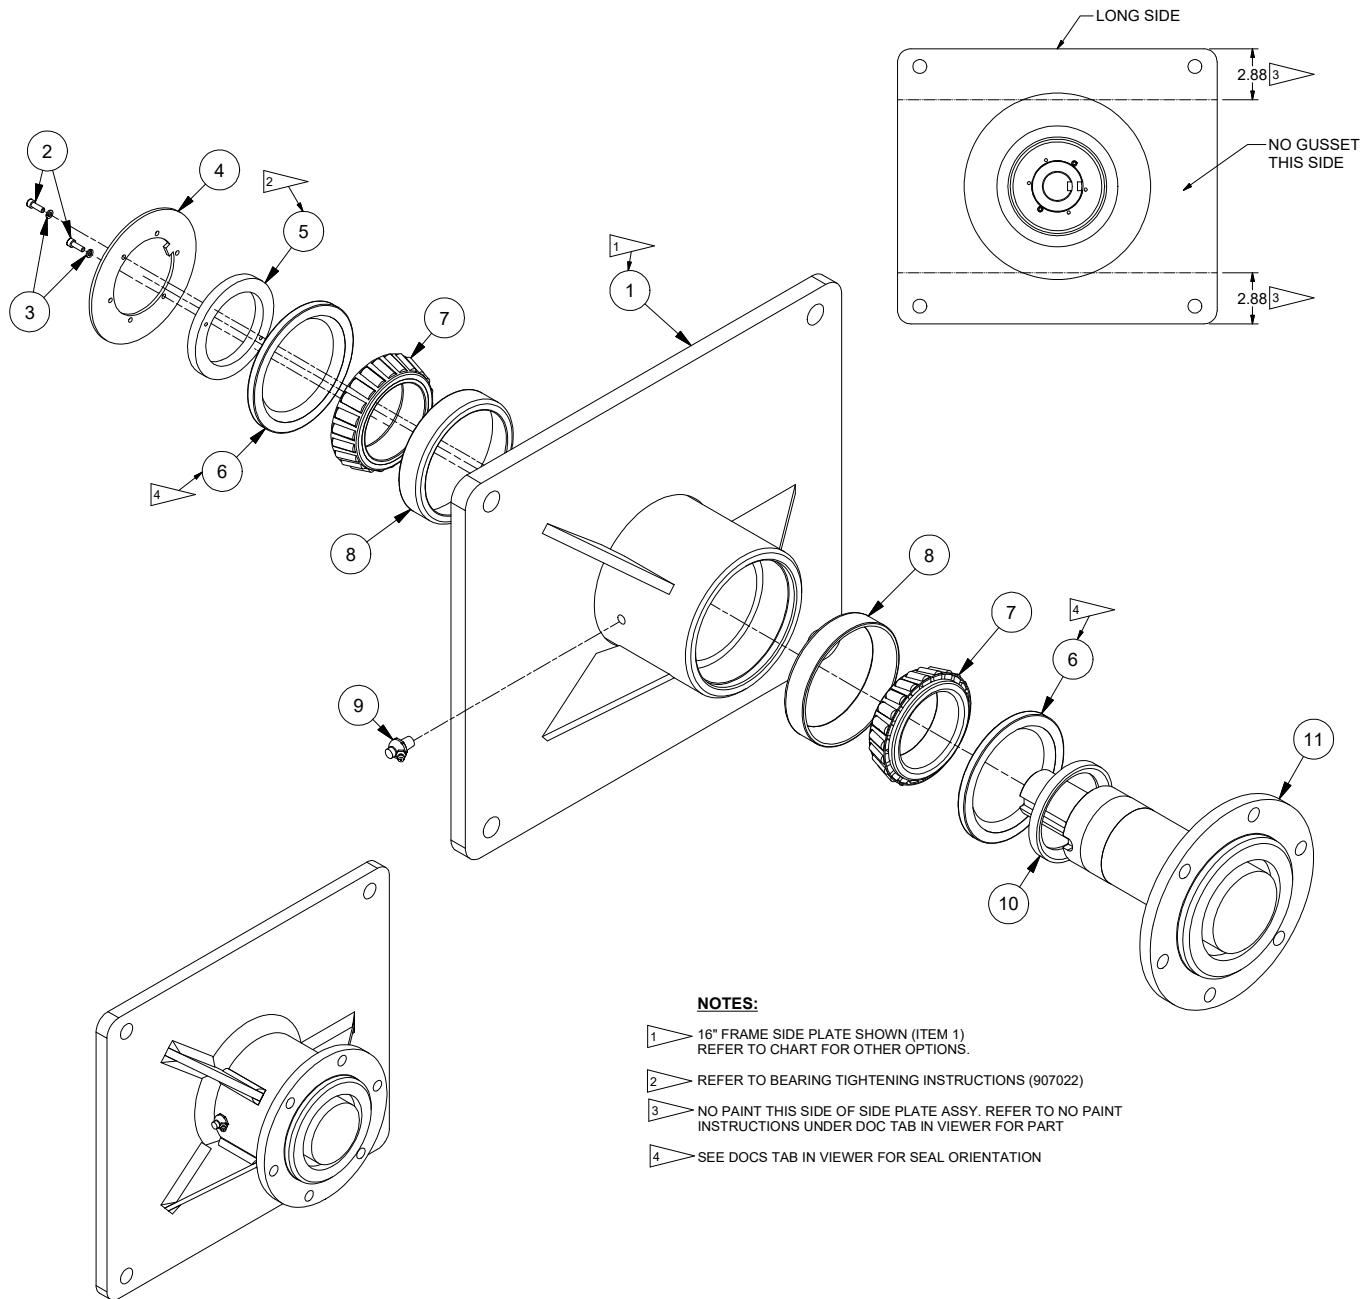

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	PLT0257720		Side Plate Assembly, LH				
1	PLT0025772	1	. Side Plate, LH	7	F000007033	2	. Bearing Cone
2	Y73G-(0832)08	2	. Capscrew	8	204631	2	. Bearing Cup
3	F000007040	2	. Lockwasher	9	F000001661	1	. Fitting
4	F000007038	1	. Lockwasher	10	F000007036	1	. Race, Seal
5	F000007037	1	. Nut, Adjusting	11	F000007032	1	. Shaft, LH Bullgear Mounting
6	F000007035	2	. Seal				

Rev BA

Side Plate Assembly, RH, 14" Chamber

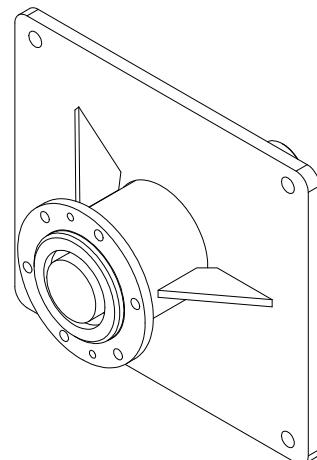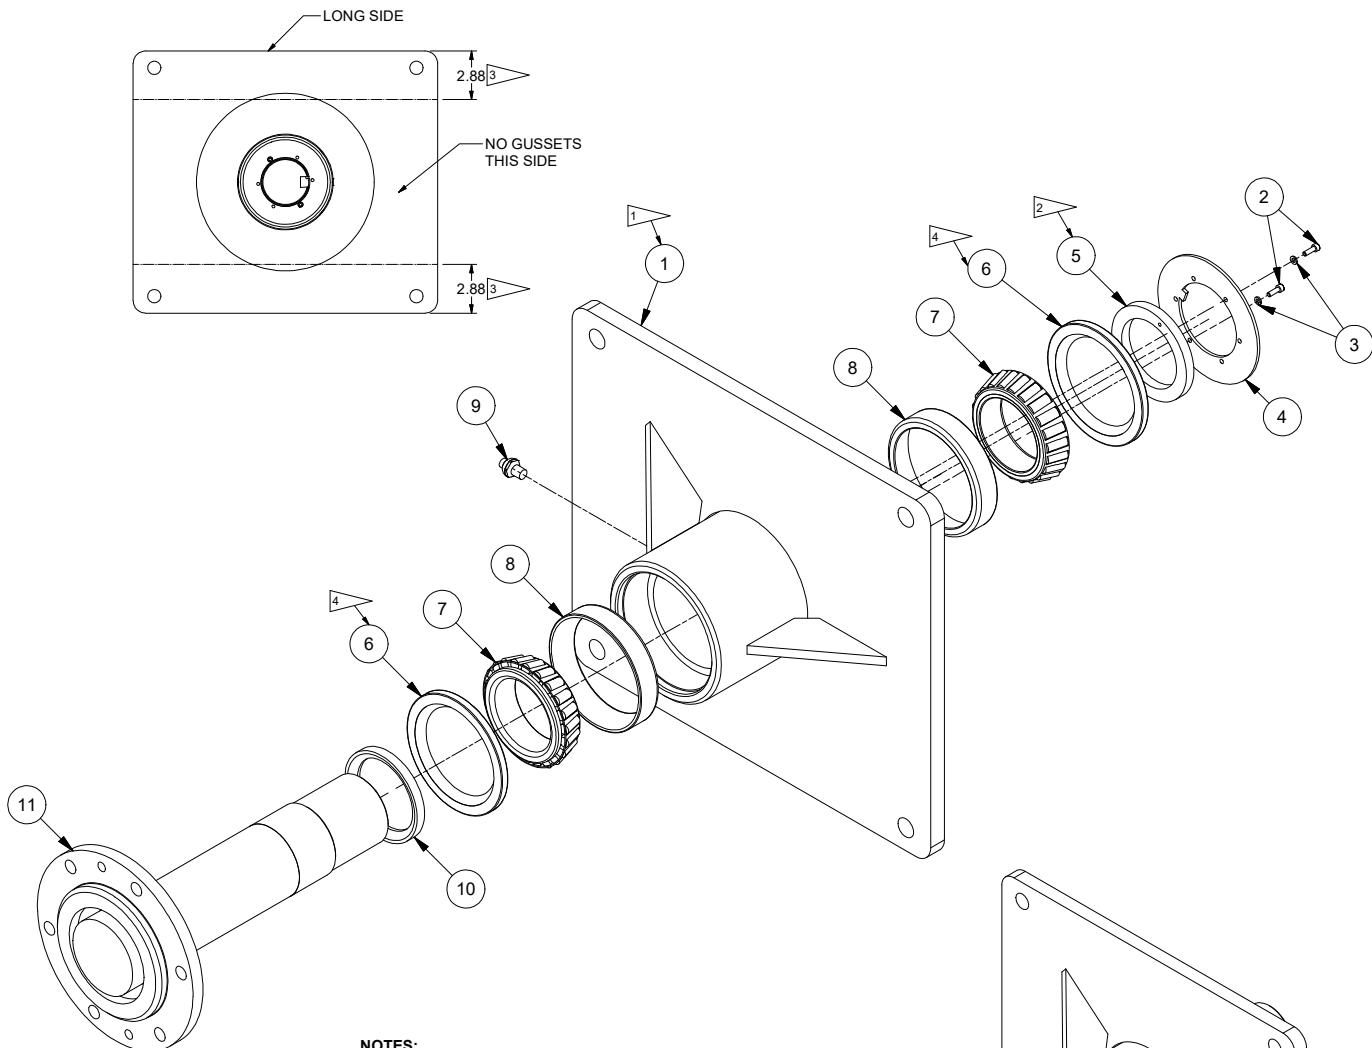


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
PLT0257730							
1	PLT0025773	1	. Plate Weldment, RH	7	F000007033	2	. Bearing Cone
2	Y73G-(0832)08	2	. Capscrew	8	204631	2	. Bearing Cup
3	F000007040	2	. Lockwasher	9	F000001661	1	. Fitting
4	F000007038	1	. Lockwasher	10	F000007036	1	. Race, Seal
5	F000007037	1	. Nut, Adjusting	11	SHF0007093	1	. Shaft, Bullgear Mounting
6	F000007035	2	. Seal				

Rev AA


Bullgear/Plunger Installation, RH Drawbar, 16" 2 Tie

Page 1 of 2

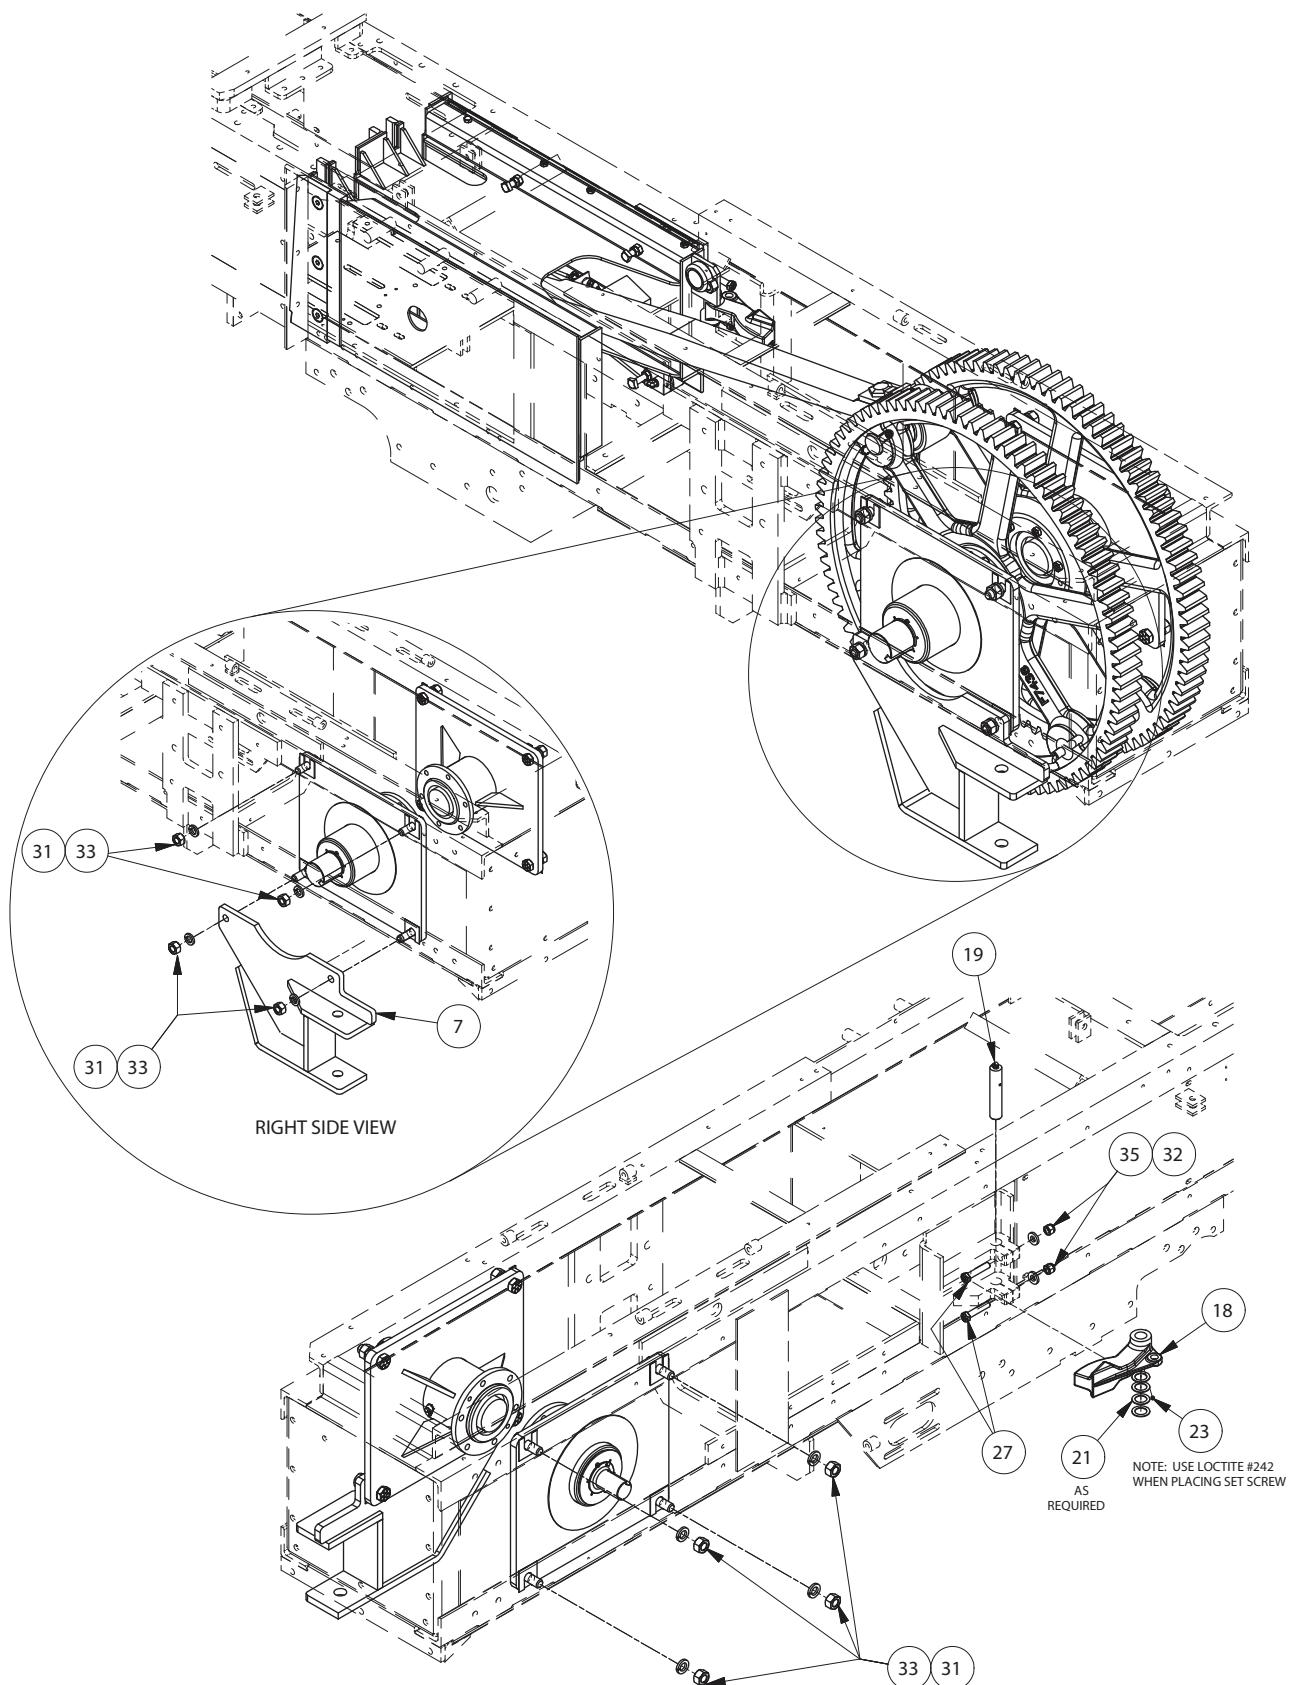

Bullgear/Plunger Installation, RH Drawbar, 16" 2 Tie

Page 2 of 2

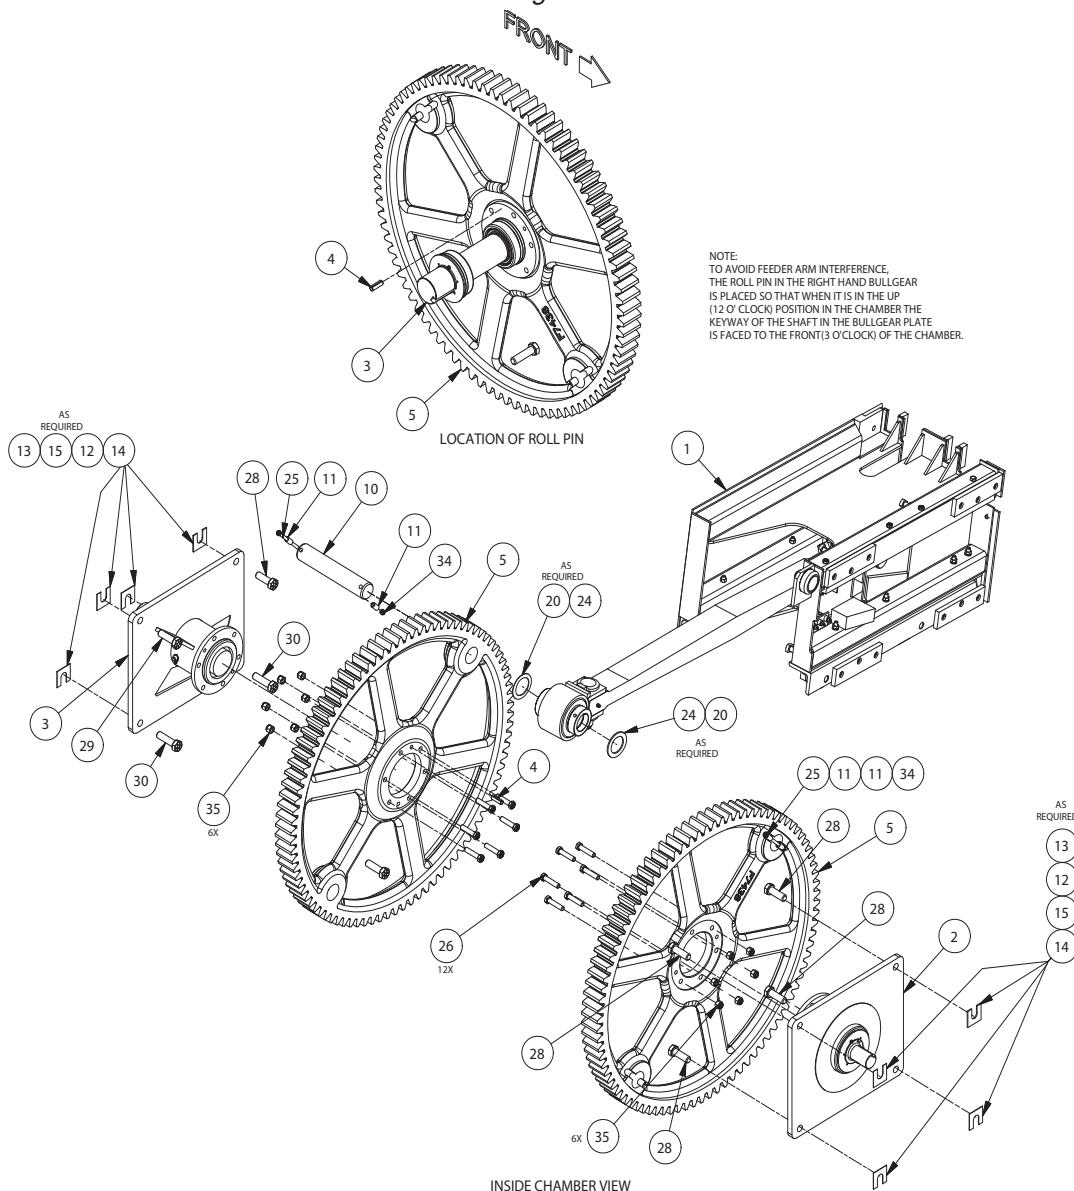

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902537		Bullgear/Plunger Installation				
1	*a PLG1305700	1	. Plunger/Conn Rod Assy	23	027-0933	1	. Set Screw
2	*b PLT0163040	1	. Side Plate Assy, LH	24	221706	AR	. Bushing
3	*c PLT0163070	1	. Side Plate Assy, RH	25	R13811027	2	. Capscrew
4	F000007239	1	. Pin, Roll	26	221574W	12	. Capscrew
5	F000007438	2	. Bull Gear	27	221576W	2	. Capscrew
7	903503	1	. Bracket, Drawbar	28	Y17C-1236	5	. Capscrew
10	F000000046	1	. Pin	29	221657W	2	. Capscrew
11	SPC0033118	4	. Spacer	30	221659W	2	. Capscrew
12	SHM0163090	AR	. Shim 16 GA	31	200608	8	. Lockwasher
13	SHM0163091	AR	. Shim 20 GA	32	221771W	2	. Washer
14	SHM0163092	AR	. Shim 10 GA	33	221716W	8	. Hex Nut
15	SHM0163093	AR	. Shim 28 GA	34	232939	2	. Nut
18	F000007547	1	. Dog Stop, Plunger	35	223587	14	. Nut
19	PIN0035710	1	. Pin Assembly				
	09417892	1	.. Fitting, Lube	*a	See Separate Coverage (Page 5-21)		
20	ZZ00000204	AR	. Bushing	*b	See Separate Coverage (Page 5-24)		
21	ZZ00000209	AR	. Bushing	*c	See Separate Coverage (Page 5-25)		


*a See Separate Coverage (Page 5-21)

*b See Separate Coverage (Page 5-24)


*c See Separate Coverage (Page 5-25)

Bullgear/Plunger Installation, LH Drawbar, 16" 2 Tie

Page 1 of 2

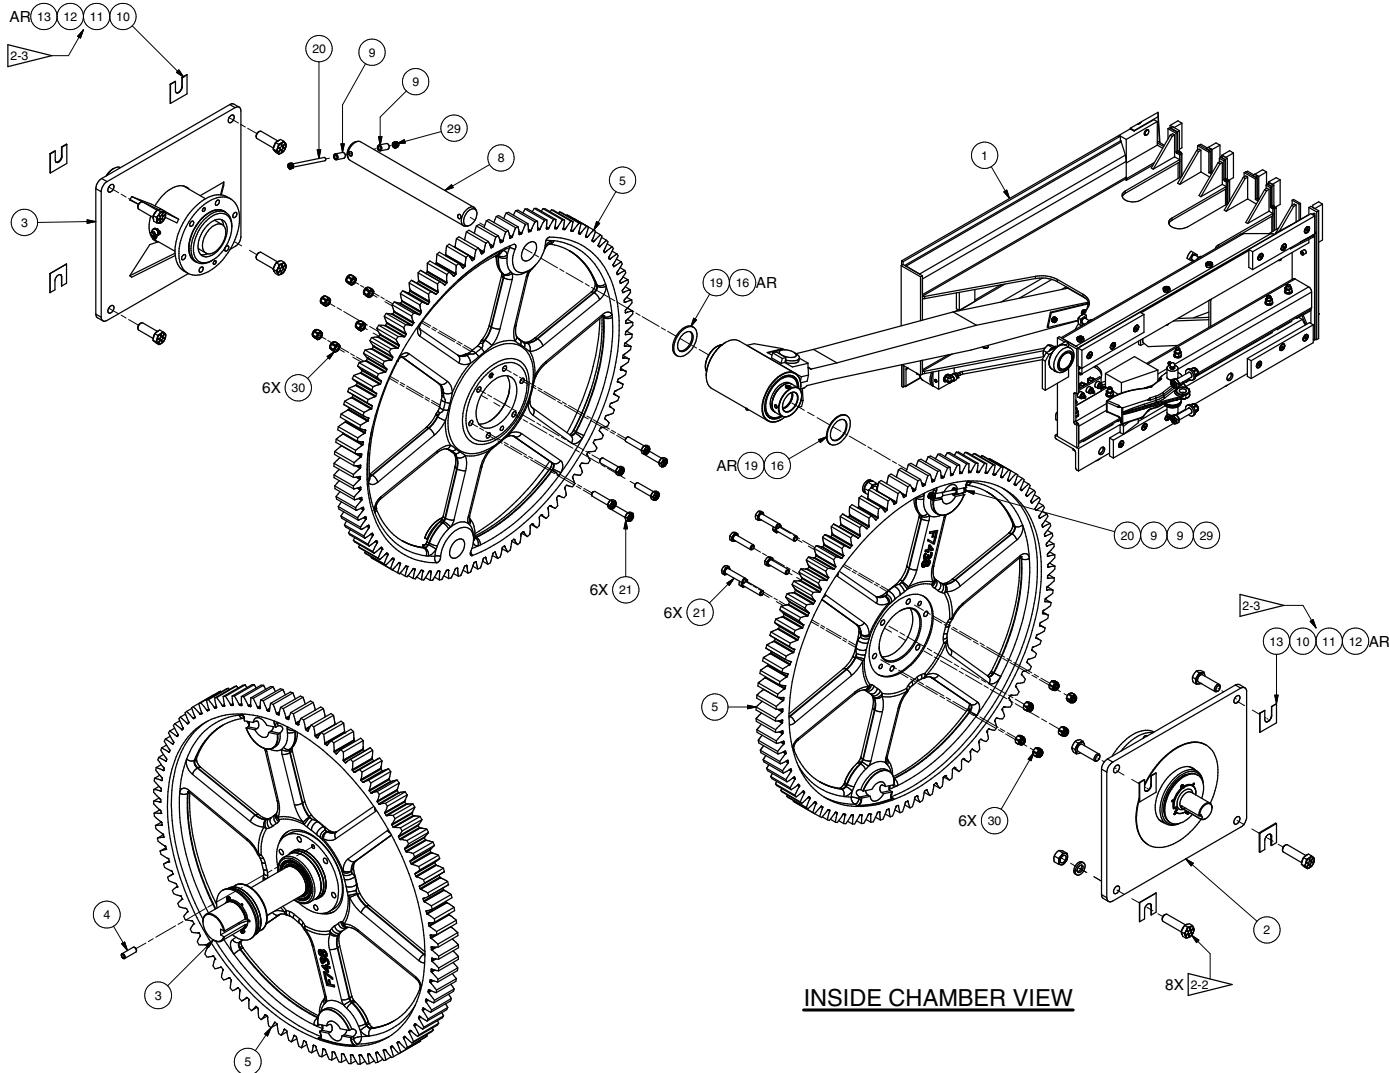

2-1 ROLL PIN LOCATION

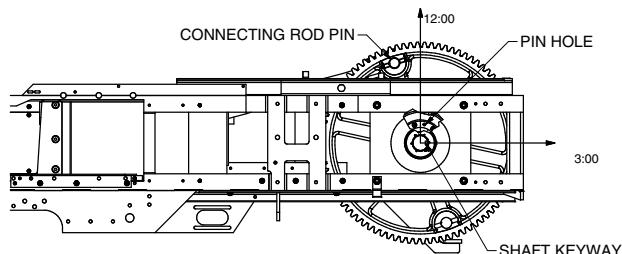


FEED FORK AND PLUNGER TIMING
ORIENTATION INFORMATION
IS FOR BULL GEAR INSTALLATION ONLY

NOTES:

- 2-1** TO AVOID FEED ARM INTERFERENCE THE ROLL PIN IN THE RIGHT-HAND BULLGEAR IS PLACED SO THAT WHEN THE CONNECTING ROD IS BETWEEN THE 11:00 TO 12:00 POSITION, THE KEYWAY OF THE SHAFT IN THE RIGHT-HAND BULLGEAR SIDE PLATE IS FACING THE FRONT OF THE BALER IN THE 3:00 POSITION AS REFERENCED WHEN LOOKING AT THE RIGHT-HAND BULLGEAR SIDE PLATE FROM THE RIGHT-HAND SIDE OF THE BALER.
- 2-2** TORQUE SIDE PLATE BOLTS TO 365 FT-LBS.
- 2-3** SHIM AS NEEDED SO THAT THE BULLGEARS (ITEM 5) CAN FREELY ROTATE A FULL 360° WITH THE CRANK PIN (ITEM 8) INSERTED.

Bullgear/Plunger Installation, LH Drawbar, 16" 2 Tie

Page 2 of 2

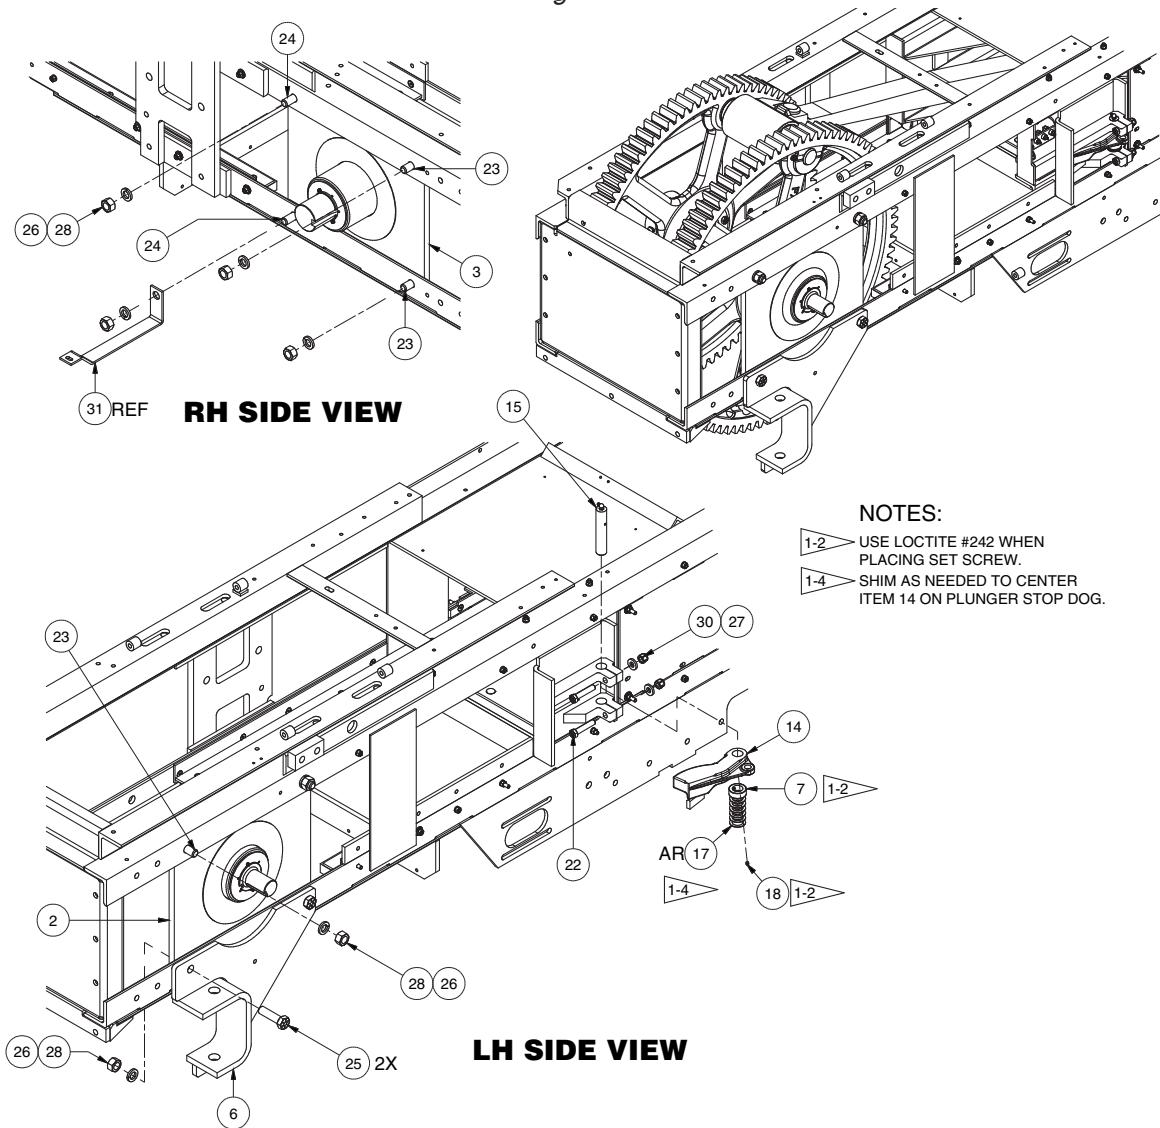


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
TBD							
1 *a	PLG1305700	1	. Plunger Assembly	19	221706	4	. Mach Bushing
2 *b	PLT0163040	1	. Side Plate Assembly, LH	20	R13811027	2	. Capscrew
3 *c	PLT0163070	1	. Side Plate Assembly, RH	21	221574W	12	. Capscrew
4	F000007239	1	. Pin, Roll	22	221576W	2	. Capscrew
5	F000007438	2	. Bull Gear	23	221656W	4	. Capscrew
6	BKT0016306	1	. Bracket, Drawbar	24	R13806363	2	. Capscrew
7	YEE-2	0	. Collar	25	221660W	2	. Capscrew
8	F00000046	1	. Pin, Crank	26	200608	8	. Lockwasher
9	SPC0033118	4	. Spacer	27	221771W	2	. Washer
10	SHM0163090	AR	. Shim, 16 GA	28	221717W	8	. Hex Nut
11	SHM0163091	AR	. Shim, 20 GA	29	232939	2	. Nut, Esna
12	SHM0163092	AR	. Shim, 10 GA	30	223587	14	. Locknut
13	SHM0163093	AR	. Shim, 28 GA	31	SHD0016332		. Brace
14	F000007547	1	. Stop Dog				
15	PIN0035710	1	. Plunger Dog Pin Assembly				
	09417892	1	. . Fitting, Lube	*a See Separate Coverage (Page 5-21)			
16	ZZ00000204	AR	. Mach Bushing	*b See Separate Coverage (Page 5-24)			
17	ZZ00000209	AR	. Mach Bushing	*c See Separate Coverage (Page 5-25)			
18	027-0933	1	. Set Screw				

Rev -B

Plunger/Connector Rod Assembly, 16" 2-Tie

Page 1 of 3

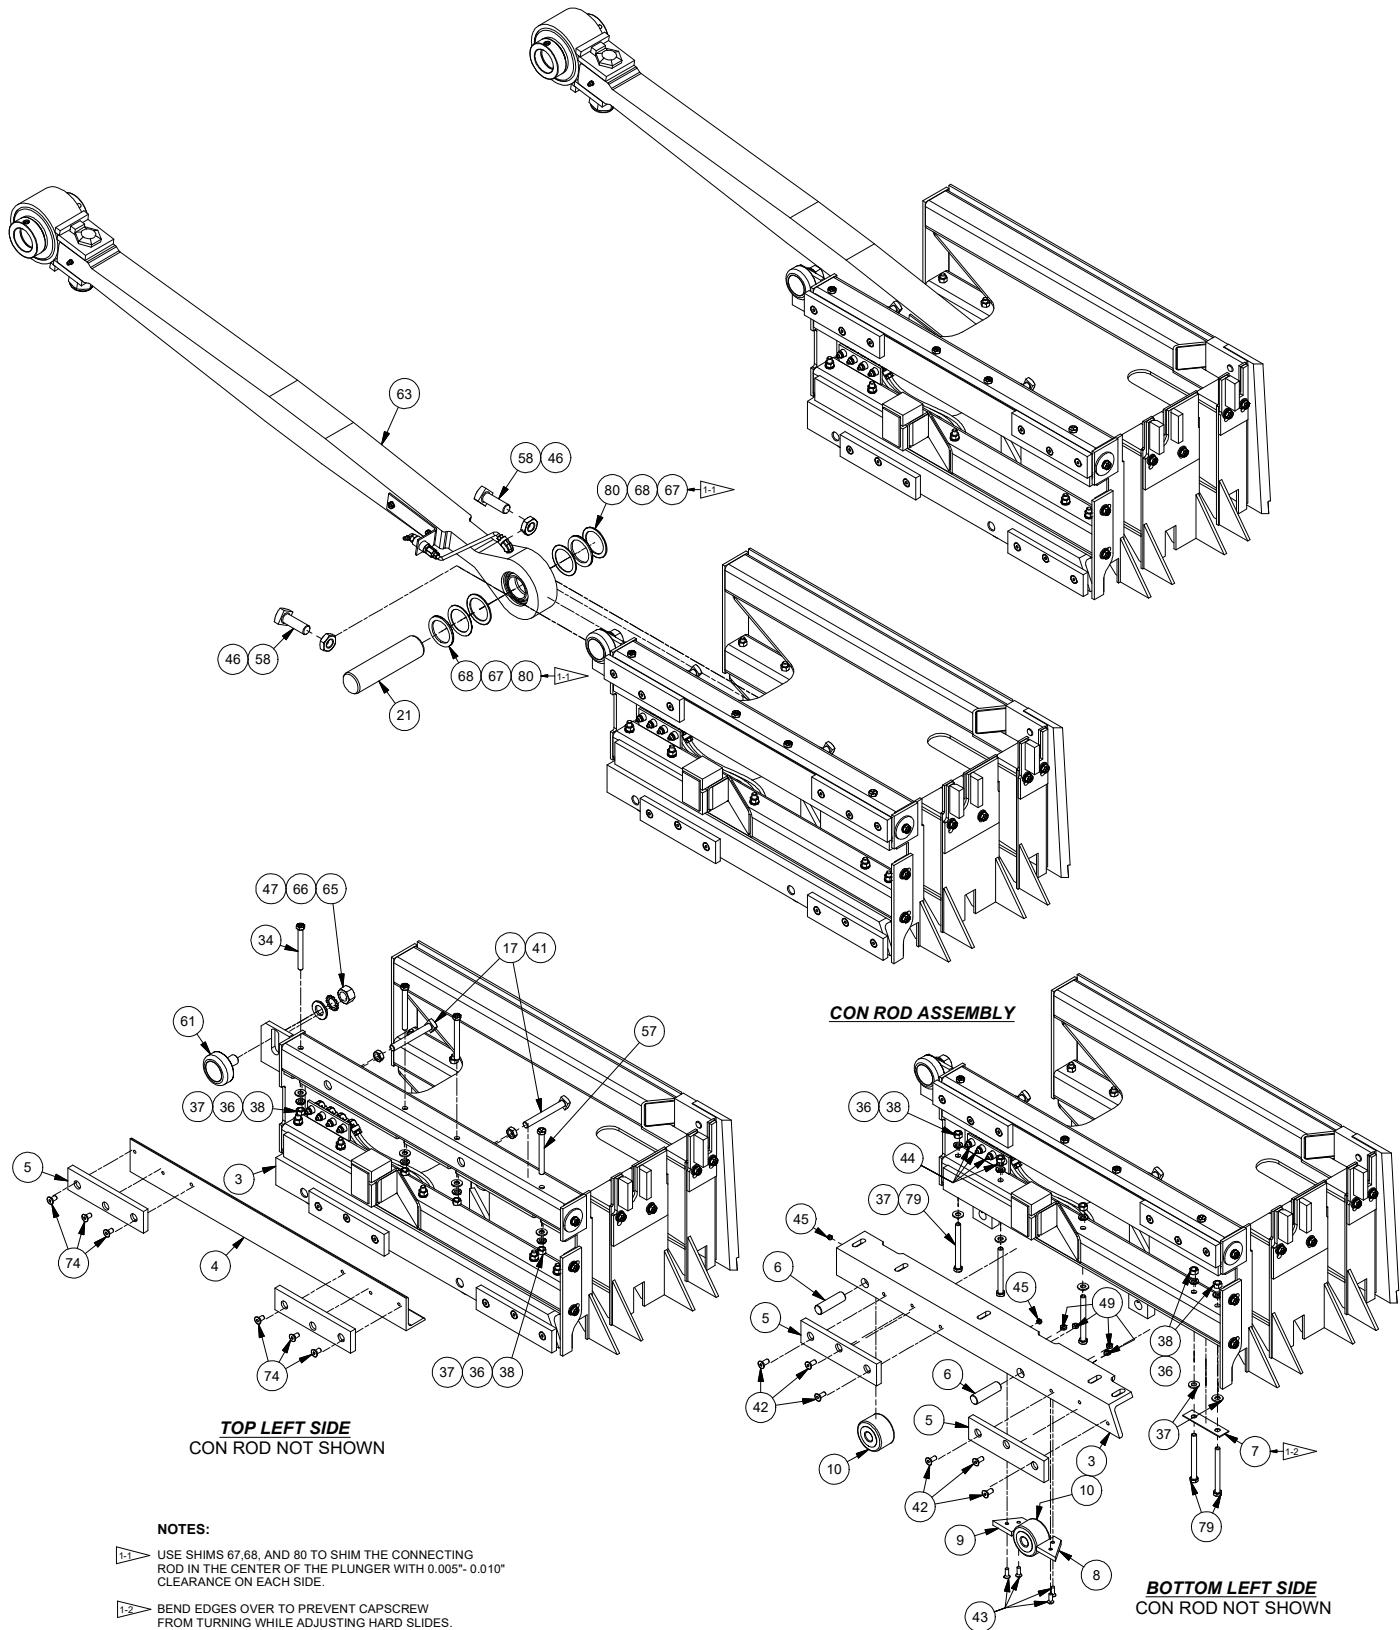

Plunger/Connector Rod Assembly, 16" 2-Tie

Page 2 of 3


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	PLG1305700		Plunger/Conn Rod Assembly				
1	SHM0034535	AR	. Shim, Knife, Plunger 16 GA	47	R13811457	1	. Washer
2	SHM0034534	AR	. Shim, Knife, Plunger .012	49	R13811463	8	. Locknut
3	903882	1	. Mounting, Left Bottom	52	F000008116	1	. R. H. Adj Pad F/Plunger Face
4	F000007766	1	. Angle, Top Right	53	F000008117	1	. Center Adj Pad F/Plunger Face
5	F000001537	4	. Bar, Slide	54	F000007777	1	. Plate, Adj Pad
6	PIN0007831	4	. Pin, Roll	55	KNF0011157	1	. Plate, Knife
7	LOK0005857	1	. Plate, Lock	56	F000007769	1	. Bar, Adj Pad
8	F000000986	2	. Plate, Rear Wiper	57	PLG0013057	1	. Plunger
9	F000000774	2	. Plate, Front Wiper	58	SQS7502250	2	. Set Screw
10	F000000775	4	. Bearing, Roller	61	BRG0001636	1	. Top Roller Bearing
11	F000007735	6	. Grommet, Rubber	63	*a 904352	1	. Connecting Rod Assy
15	F000007839	1	. Left Bottom Plunger Rail	64	F000001441	8	. Fitting
16	F000000227	3	. Bolt	65	221717W	1	. Hex Nut
17	F000000073	2	. Screw	66	WES0007500	1	. Washer
19	PLG0007840	1	. Angle, Right Front	67	ZZ00000203	AR	. Bushing
21	F000007914	1	. Pin	68	ZZ00000200	AR	. Bushing
34	R13811046	7	. Capscrew	69	F000000246	1	. Washer
35	Y17C-0616	7	. Capscrew	74	Y09G-0510	6	. Capscrew
36	234135	20	. Lockwasher	75	904564	1	. Tube
37	R13802623	19	. Washer	76	904949	1	. Tube
38	R13809551	12	. Nut	77	904565	1	. Tube
40	SQS5002500	2	. Set Screw	78	904567	1	. Tube
41	234218	4	. Nut	79	R13811047	5	. Capscrew
42	R13807736	6	. Capscrew	80	ZZ00000202	AR	. Bushing
43	00113991	8	. Machine Screw				
44	00191758	4	. Fitting, Lube				
45	STS3125313	4	. Screw				
46	247008	2	. Jam Nut				

*a See Separate Coverage (Page 5-23)


Rev AQ

Plunger/Connector Rod Assembly, 16" 2-Tie

Page 3 of 3

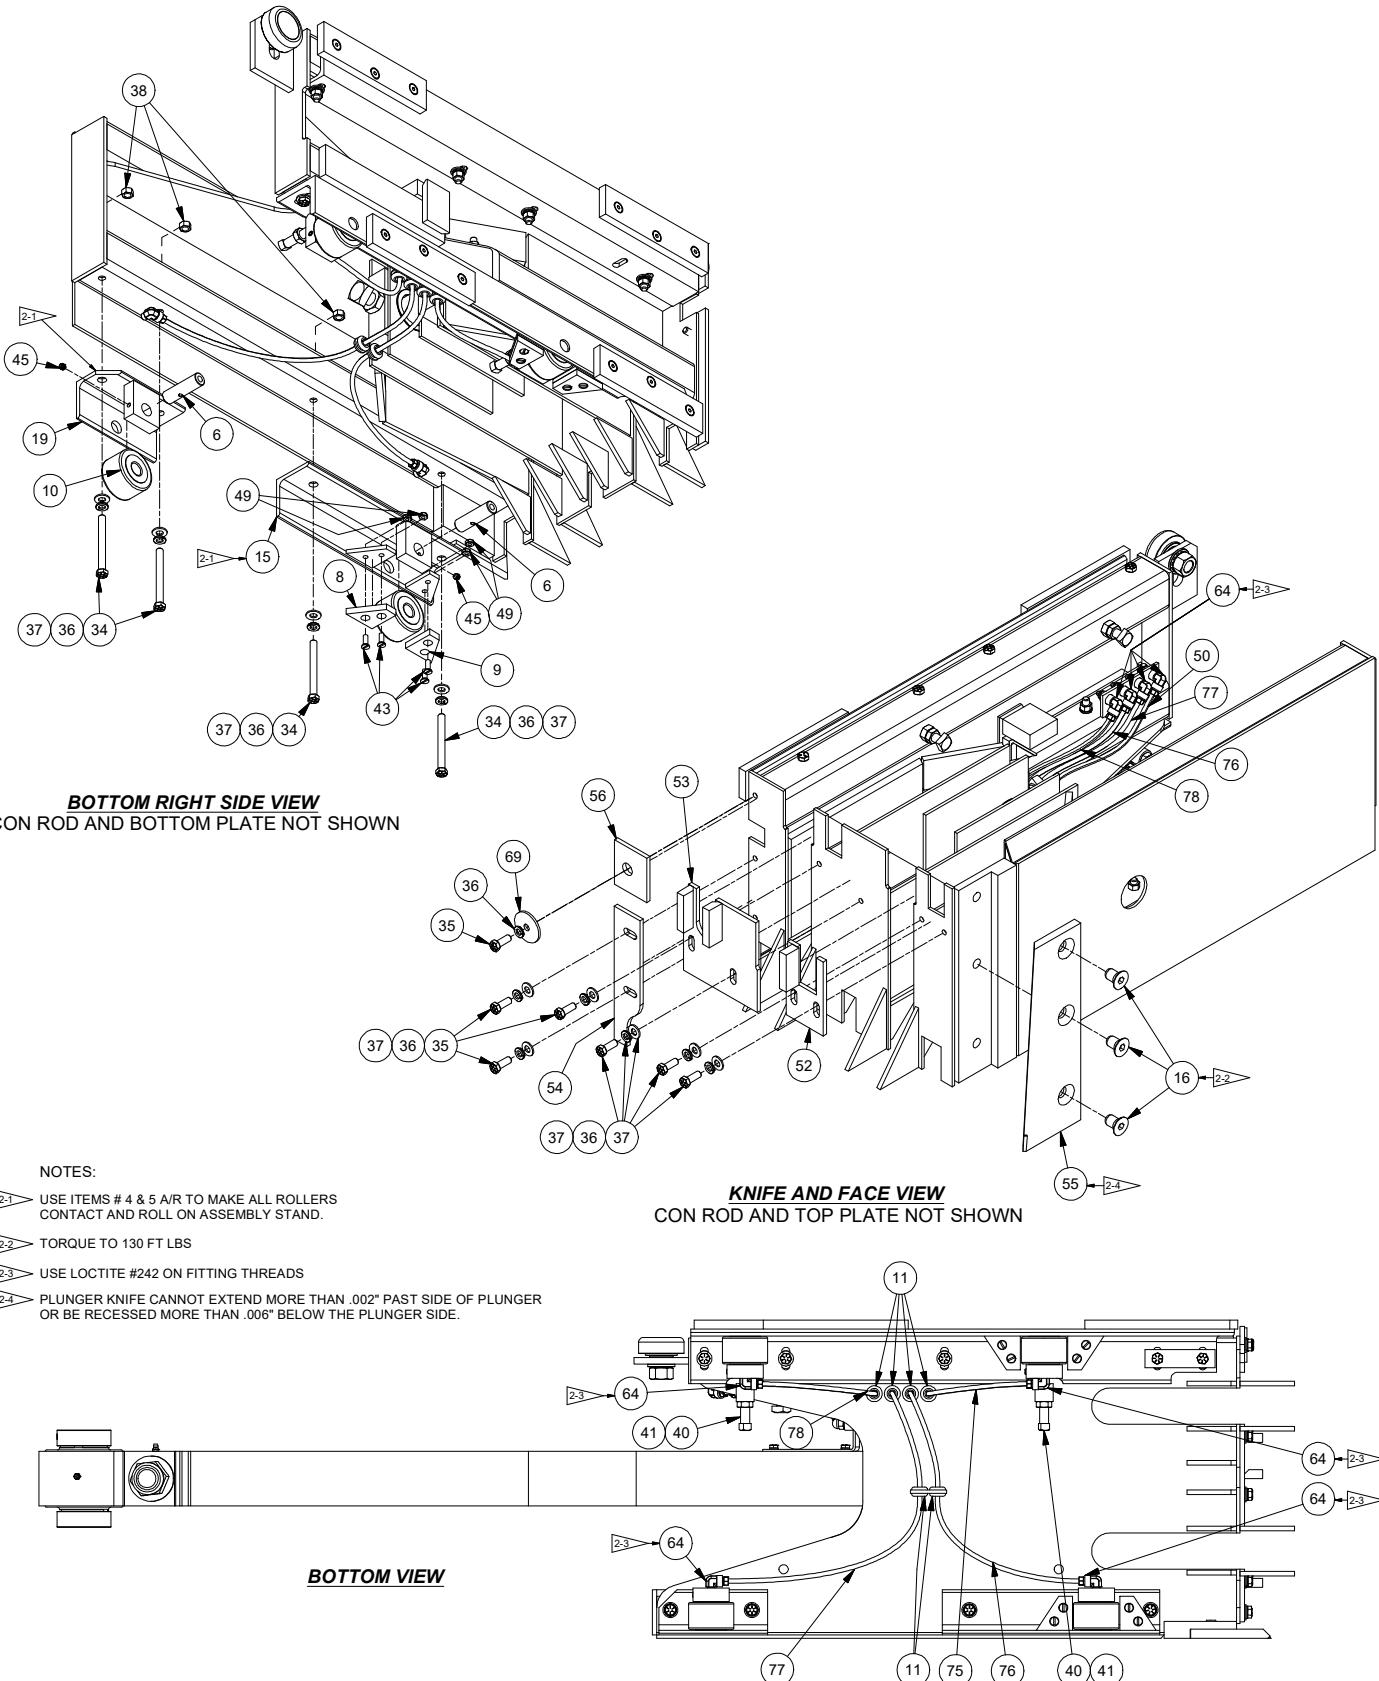


Connector Rod Assembly, 16" 2-Tie, 2 Piece

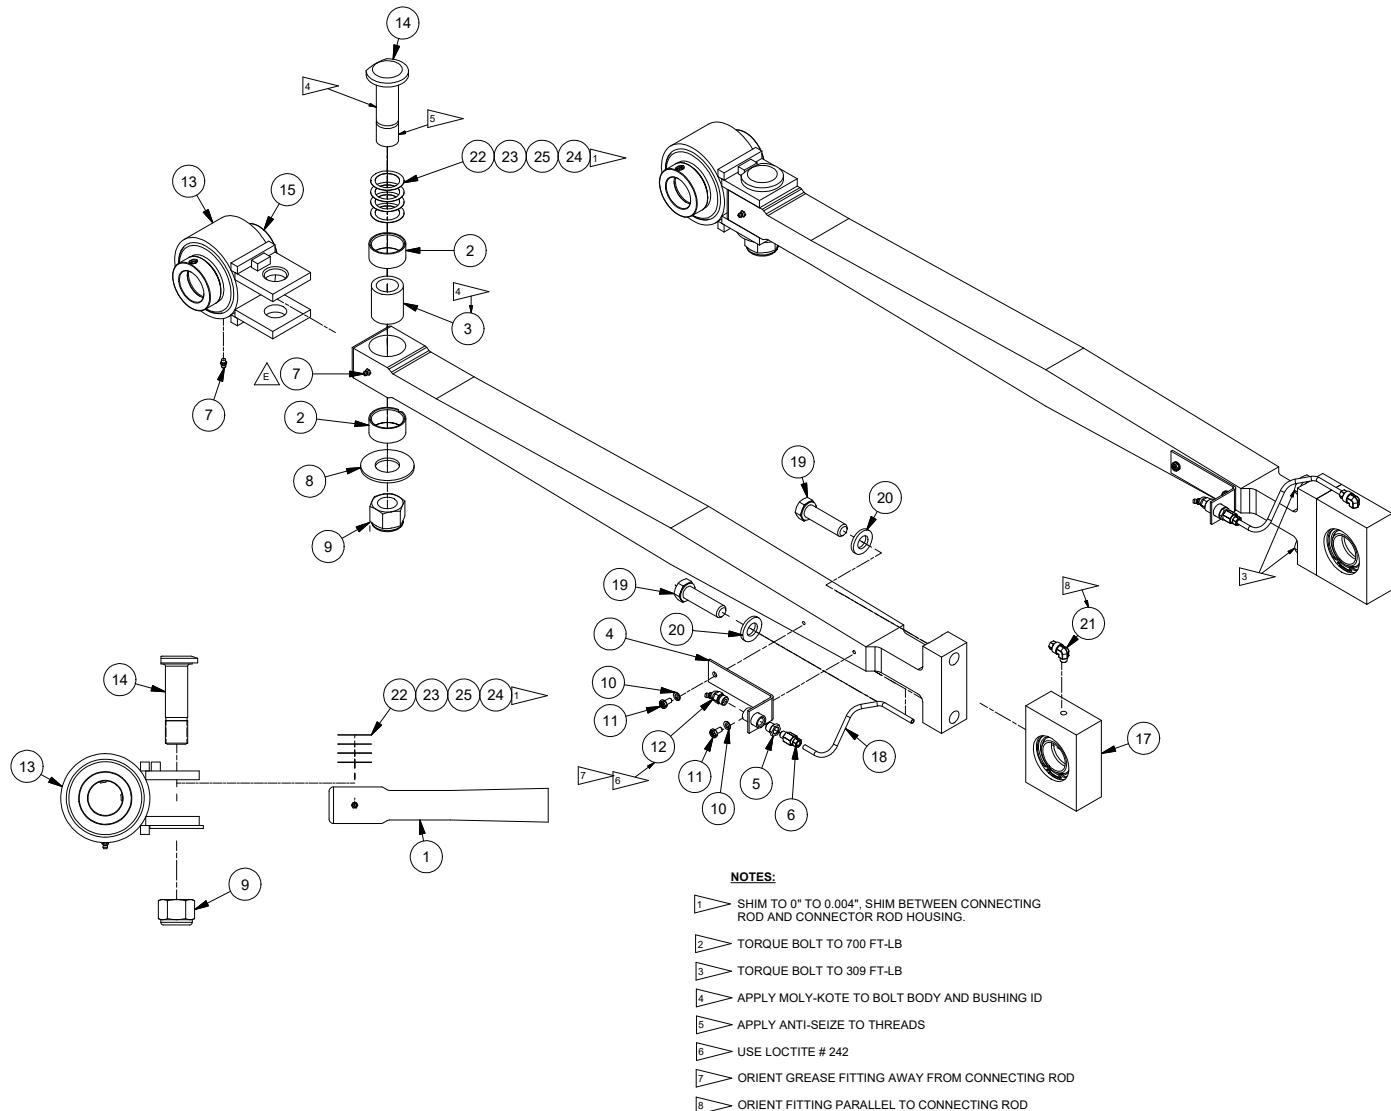

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904352			Connecting Rod Assembly				
1	903235	1	. Plate, Conn Rod	14	PIN0008670	1	. Connecting Rod Pivot Pin
2	F000008077	2	. Bearing, Inner Race	15	F000008100	2	. Bearing
3	F000008078	1	. Connecting Rod Bushing	17	HSN0238330	1	. Plunger Brg Housing W/ Bearings
4	F000008263	1	. Bracket	18	903268	1	. Tube
5	209500	2	. Fitting	19	221659W	2	. Capscrew
6	F000000778	1	. Tube Connector	20	221777W	2	. Washer
7	11079	2	. Fitting, Lube	21	F000001441	1	. Fitting
8	225851	1	. Hard Washer	22	F000007977 AR	. AR	. Washer
9	222465	1	. Locknut	23	F000007978 AR	. AR	. Washer
10	223871	2	. Lockwasher	24	SHM0000105 AR	. AR	. Shim .020
11	R13810989	2	. Capscrew	25	SHM0000103 AR	. AR	. Shim .150
12	F000007651	1	. Zerk				
13	F000008114	1	. Housing				

Rev E



Side Plate Assembly, LH, 16" Chamber

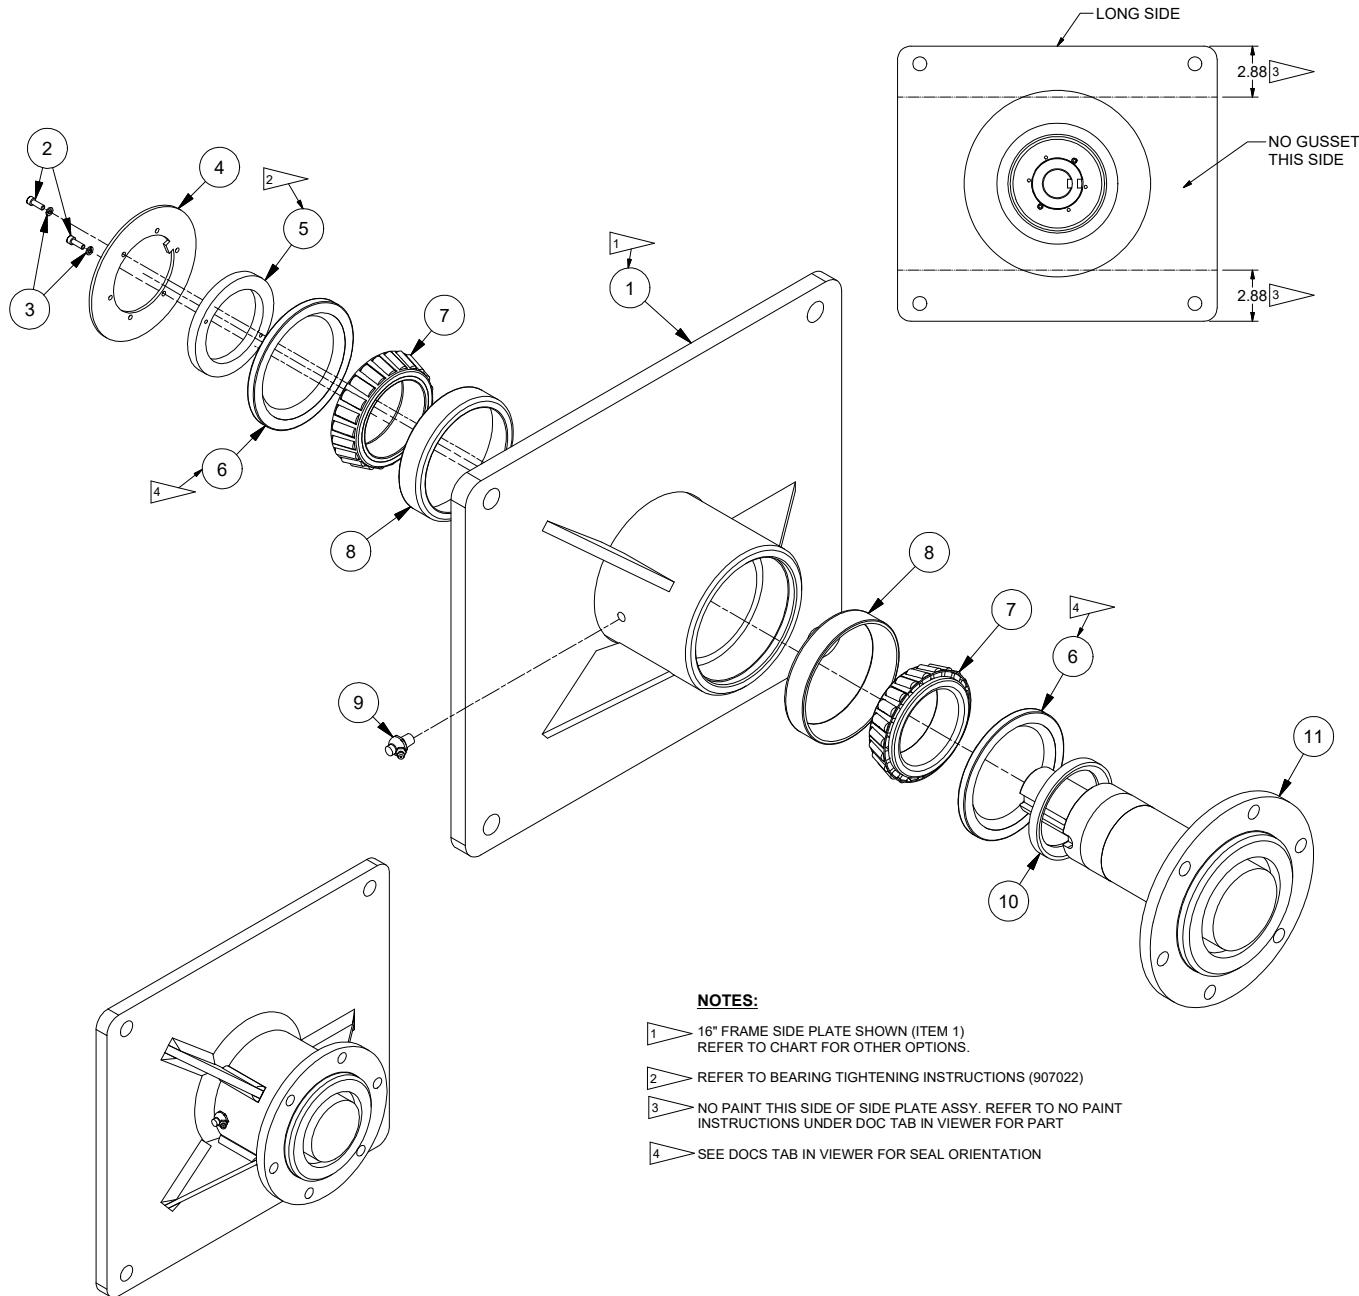

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
PLT0163040 Side Plate Assembly, LH							
1	PLT0032431	1	. Side Plate, LH	7	F000007033	2	. Bearing Cone
2	Y73G-(0832)08	2	. Capscrew	8	204631	2	. Bearing Cup
3	F000007040	2	. Lockwasher	9	F000001661	1	. Fitting
4	F000007038	1	. Lockwasher	10	F000007036	1	. Race, Seal
5	F000007037	1	. Nut, Adjusting	11	F000007032	1	. Shaft, LH Bullgear Mounting
6	F000007035	2	. Seal				

Rev BA


Side Plate Assembly, RH, 16" Chamber

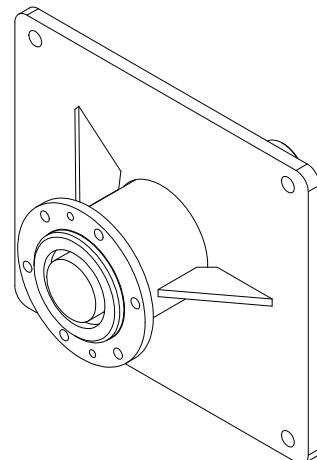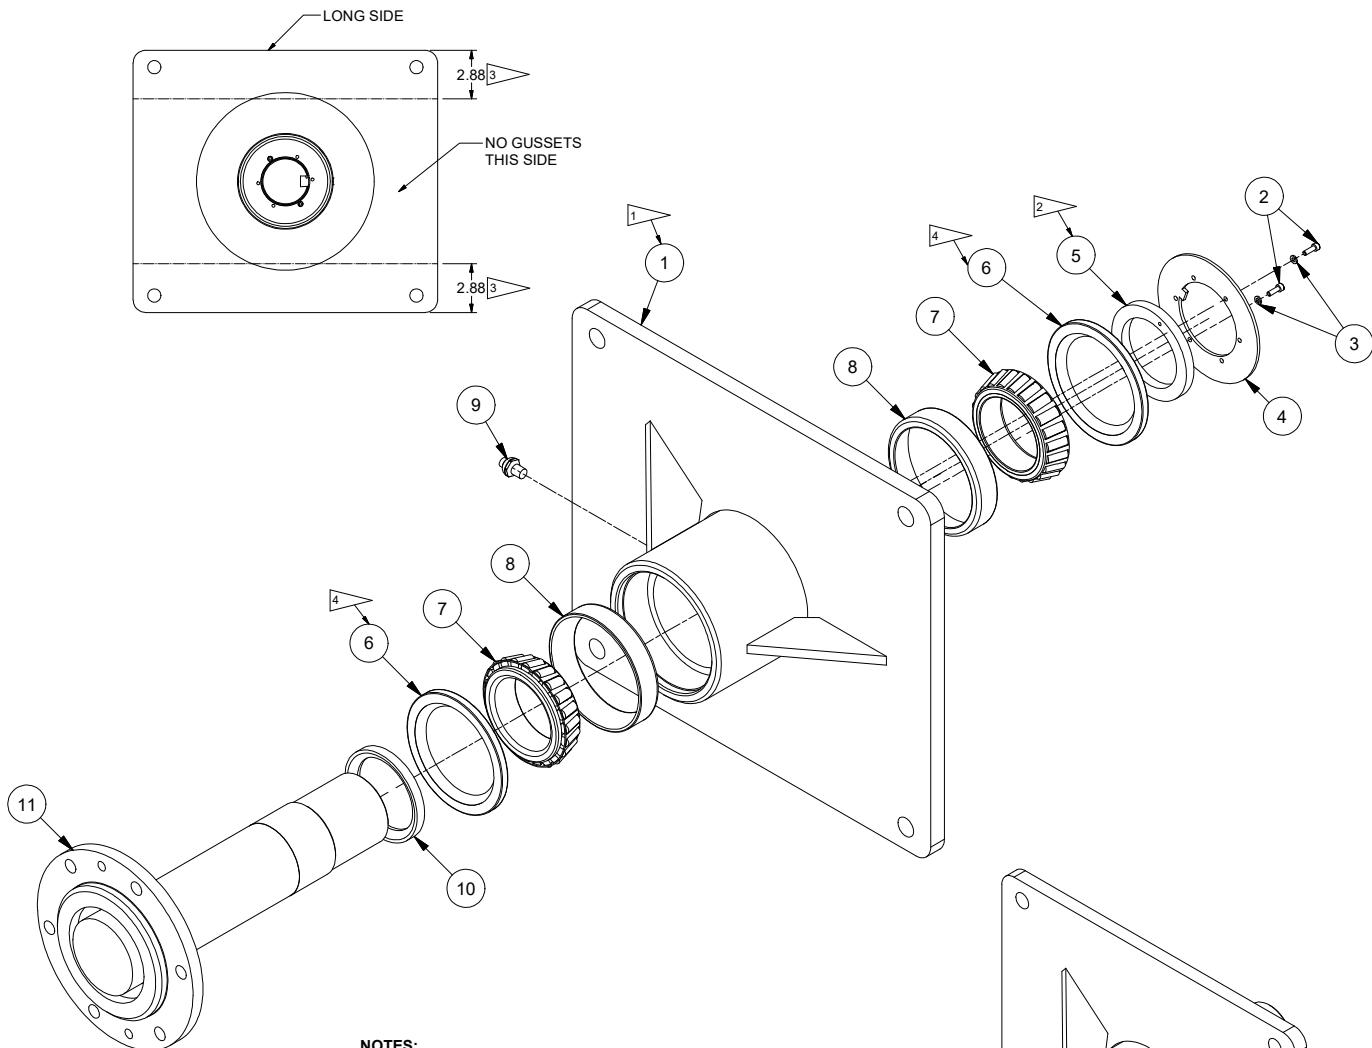

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
PLT0163070							
1	PLT0032434	1	. Plate Weldment, RH	7	F000007033	2	. Bearing Cone
2	Y73G-(0832)08	2	. Capscrew	8	204631	2	. Bearing Cup
3	F000007040	2	. Lockwasher	9	F000001661	1	. Fitting
4	F000007038	1	. Lockwasher	10	F000007036	1	. Race, Seal
5	F000007037	1	. Nut, Adjusting	11	SHF0007093	1	. Shaft, Bullgear Mounting
6	F000007035	2	. Seal				

Rev BA


Flywheel Installation

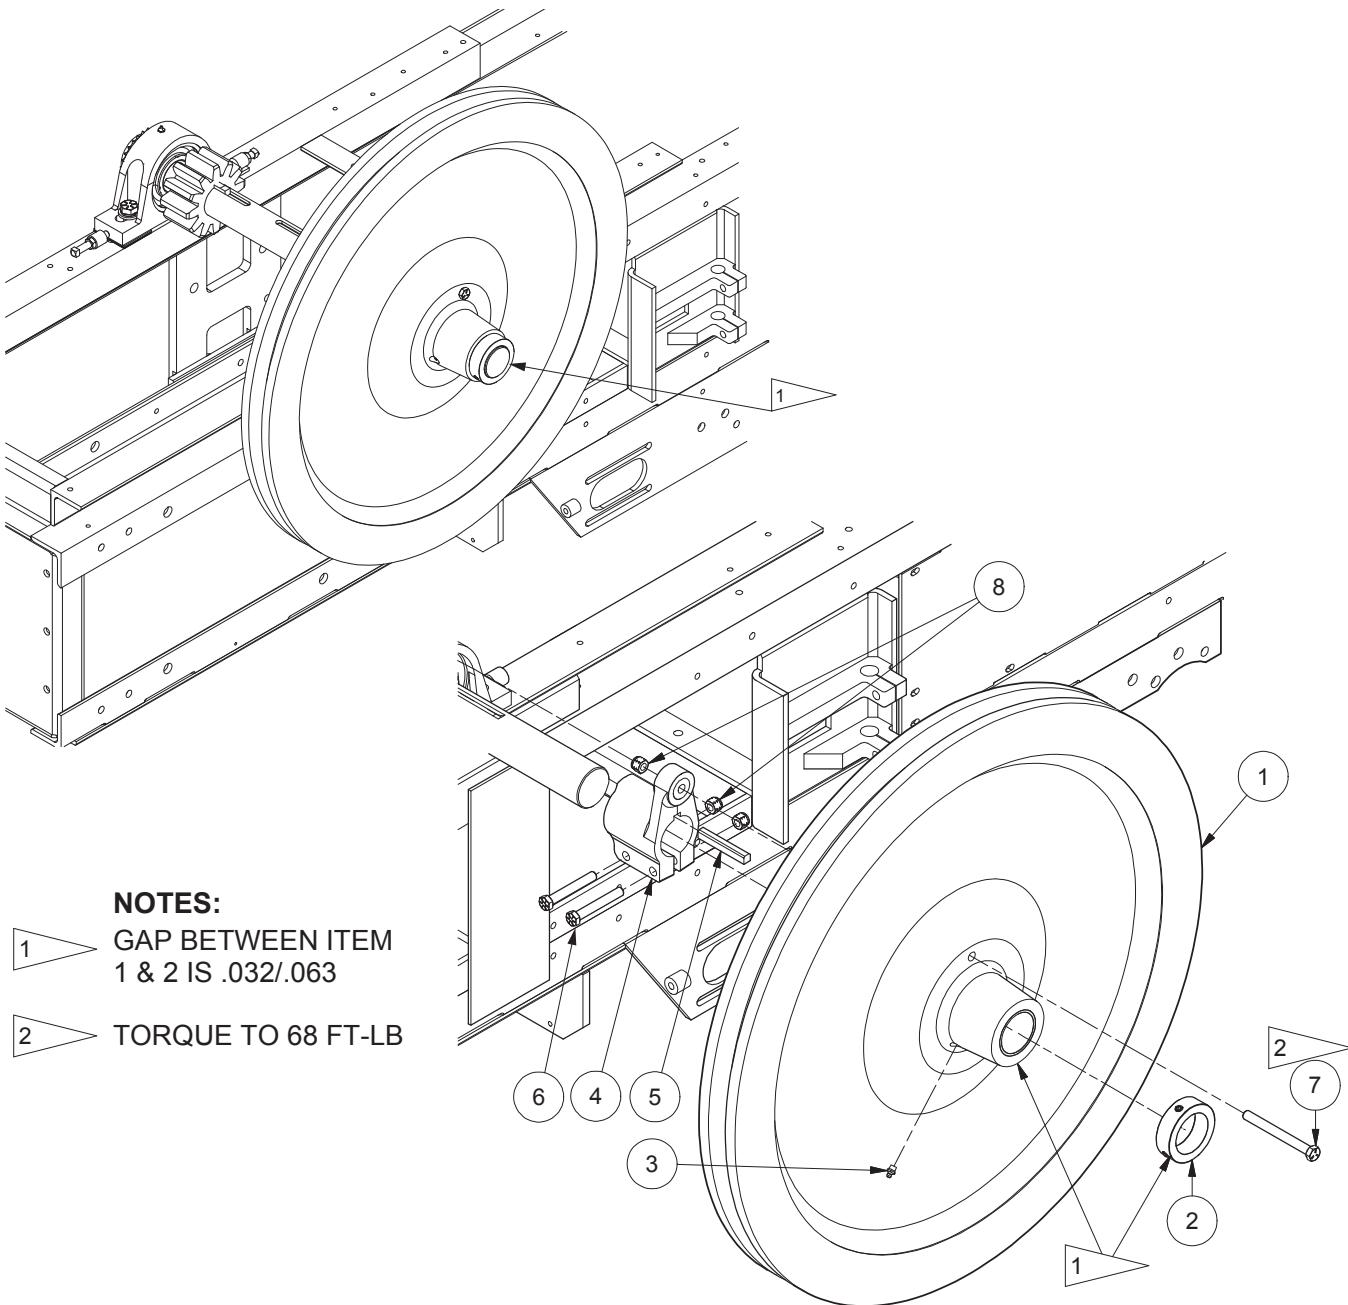

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902818							
1	*a FLW0007127	1	. Flywheel Assembly	6	R13811083	2	. Capscrew
2	ZZ00002008	1	. Collar, Shaft	7	18596W	1	. Capscrew
3	00191758	1	. Fitting, Lube	8	223587	3	. Nut
4	HUB0007157	1	. Shear Hub Assembly	*a See Separate Coverage (Page 5-27)			
	F0000001132	1	. . Bushing, Flywheel Shear Hub				
5	F000000072	1	. Key, Shear Hub				

Rev F

Flywheel Assembly

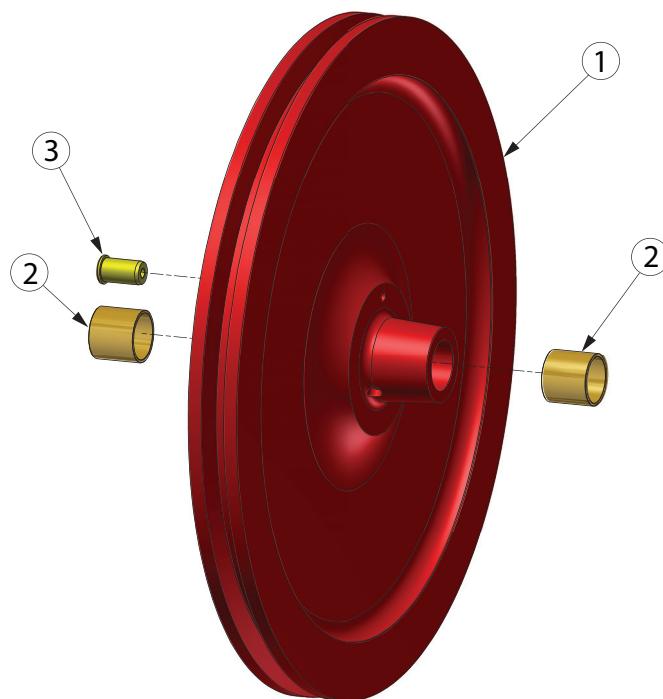


Note:

Ream both bushings
to 2.438-2.439" ID
before installing on
pinion shaft.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FLW0007127		Flywheel Assembly				
1	904970	1	. Flywheel w/ Bushings				
2	BSH0007127MP2	1	.. Flywheel Bushings (Set of 2)				
3	F000001614	1	. Flywheel Shear Bushing				

Rev F

Tank Installation, Bullgear Luber



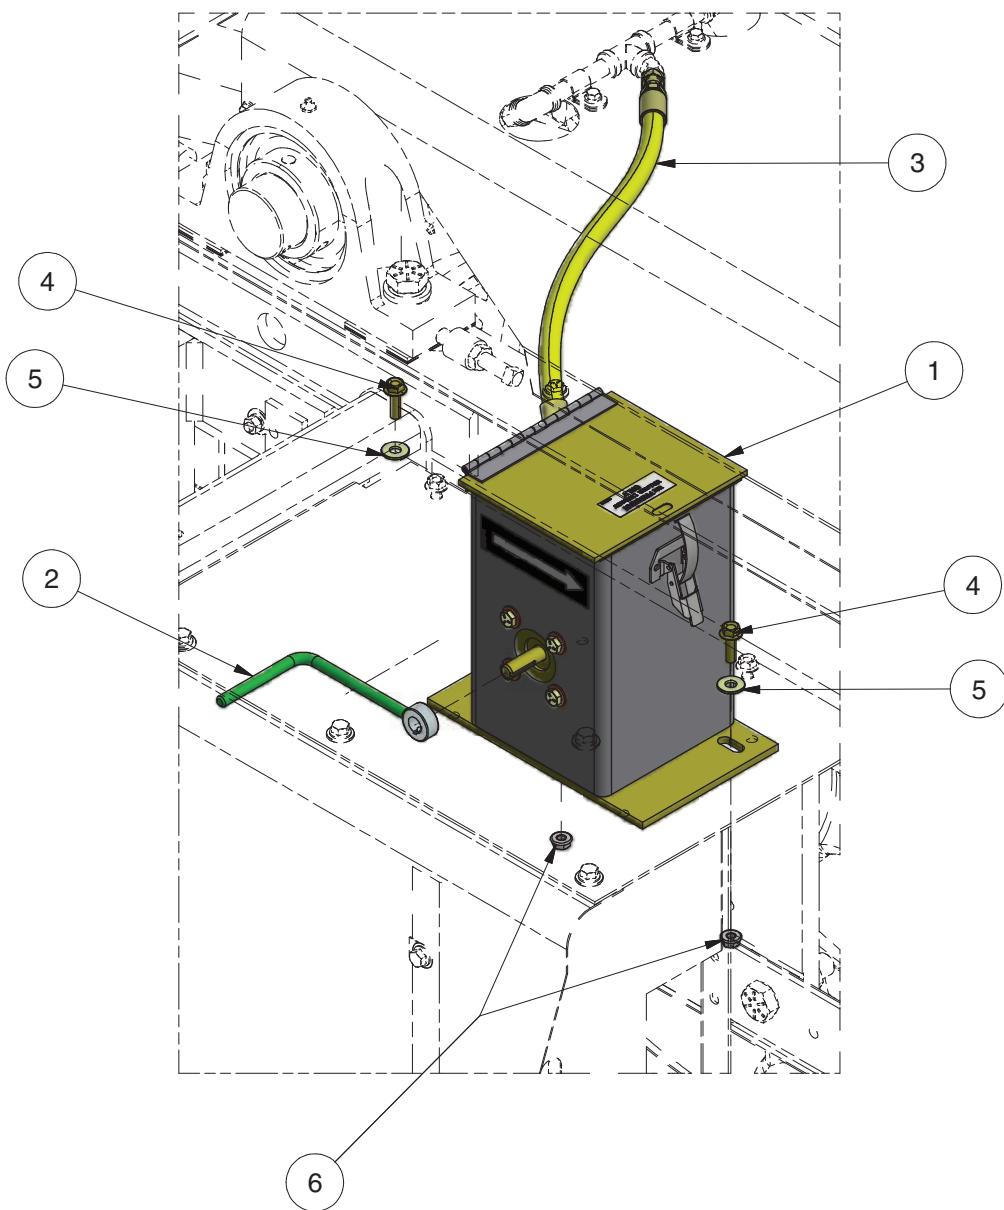


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902827							
1	*a LUB0007600	1	. Tank & Pump Assy, Luber	4	SMS0000177	2	. Screw
2	CRA0013775	1	. Handle	5	223428	2	. Washer
3	R12565833	1	. Hose Assembly	6	00273802	2	. Nut, Serrated





*a See Separate Coverage (Page 5-29)

Rev F

Tank and Pump Assembly, Luber

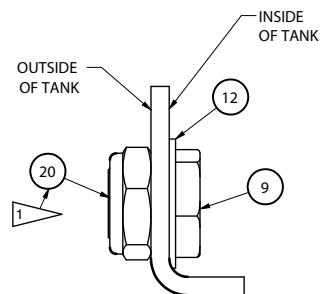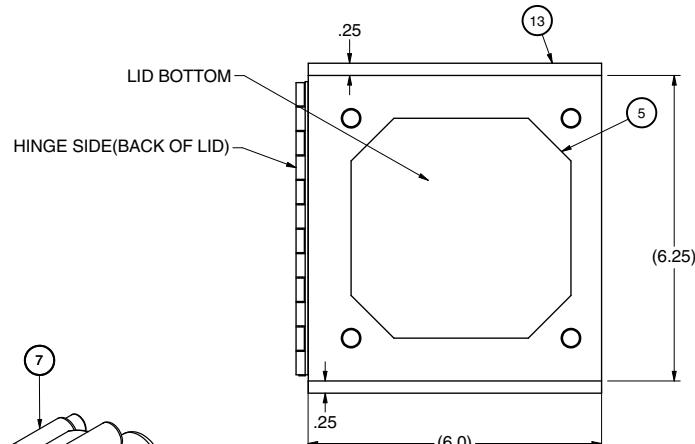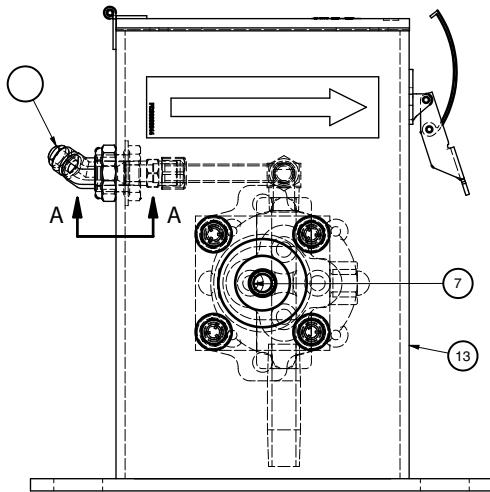


SECTION A-A

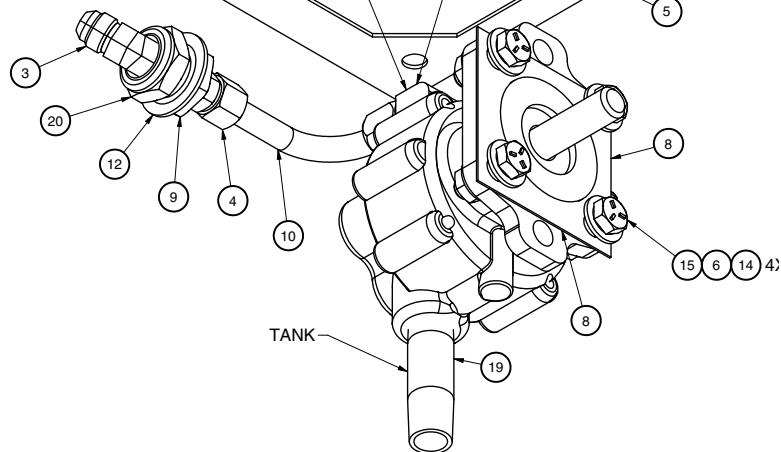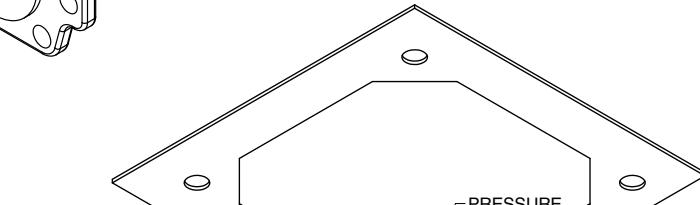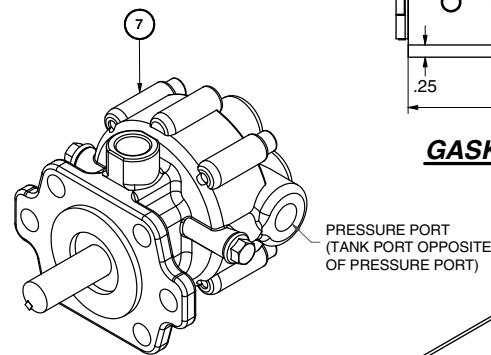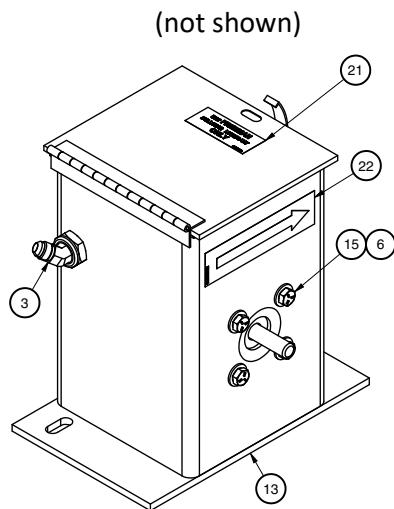

SHOWN WITHOUT 903650 AND DECALS

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	LUB0007600		Tank & Pump Assembly, Luber				
1	HYD0069033	1	. Fitting	12	FT00000553	1	. Seal, Stato
3	209794	1	. Fitting	13	903650	1	. Luber
4	HYD0068030	1	. Fitting	14	00273802	4	. Nut
5	903811	1	. Gasket	15	18497W	4	. Capscrew
6	WAS0725002	4	. Washer	19	PPE3752500	1	. Pipe Nipple
7	FT00000547	1	. Control, Pump	20	906920	1	. Jam Nut
8	FT00000548	1	. Gasket	21	FD00000020	1	. Decal, Use Freeman Bullgear...
9	FT00000549	1	. Fitting	22	FD00000044	1	. Decal, Direction Arrow
10	12434	1	. Tube				Rev K


Bullgear/Luber Installation, 2-Tie

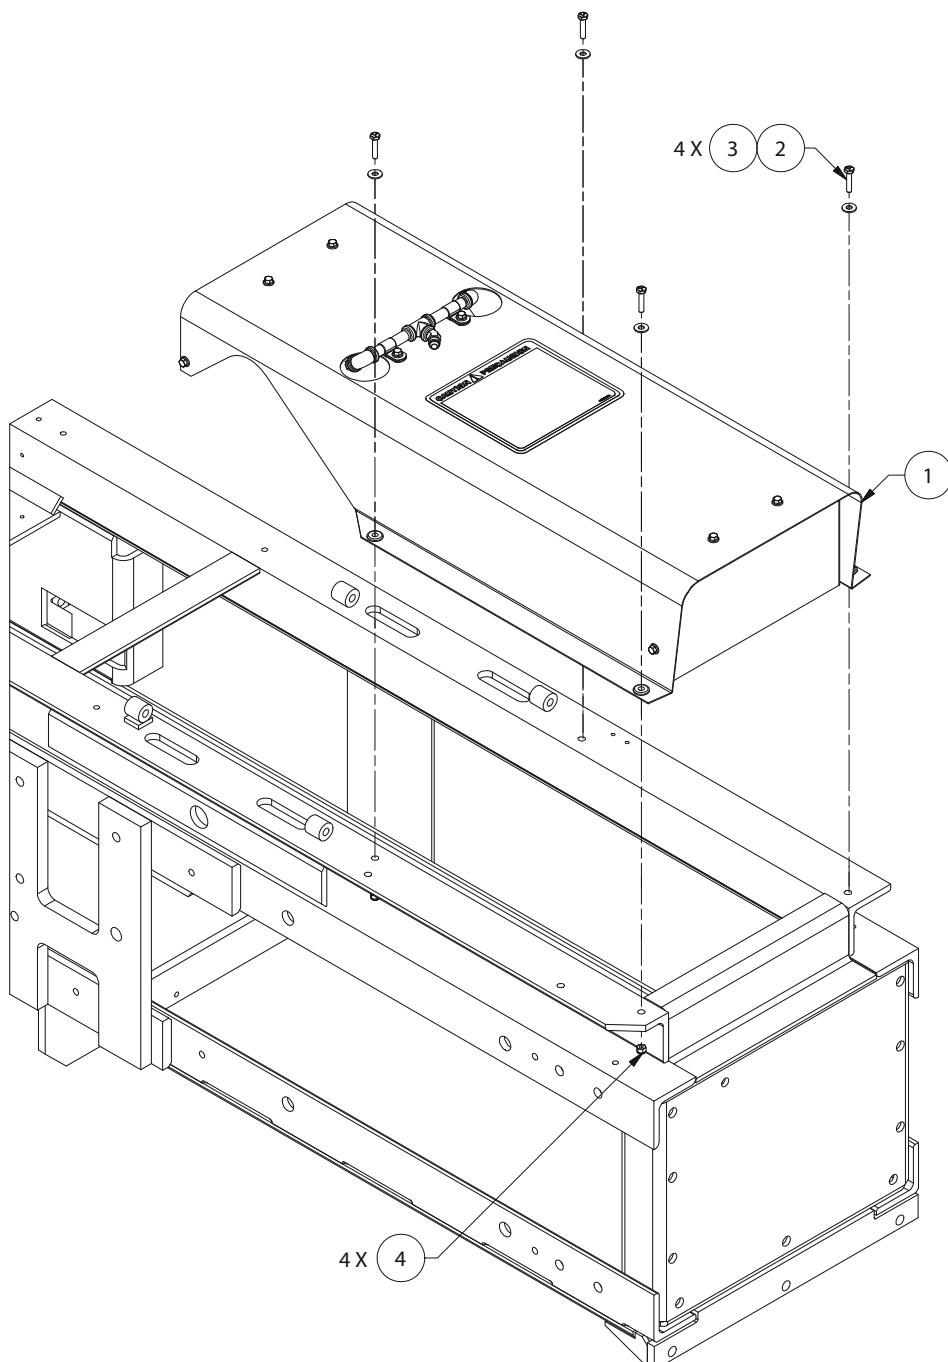

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904035			Bullgear/Luber Installation	3	R13802619	4	. Flat Washer
1 *a	902660	1	. Bullgear Luber Assy, 2 Tie	4	R13811189	4	. Locknut
2	18466W	4	. Capscrew				

*a See Separate Coverage Page 5-31

Bullgear Shield/Luber Assembly, 2 Tie

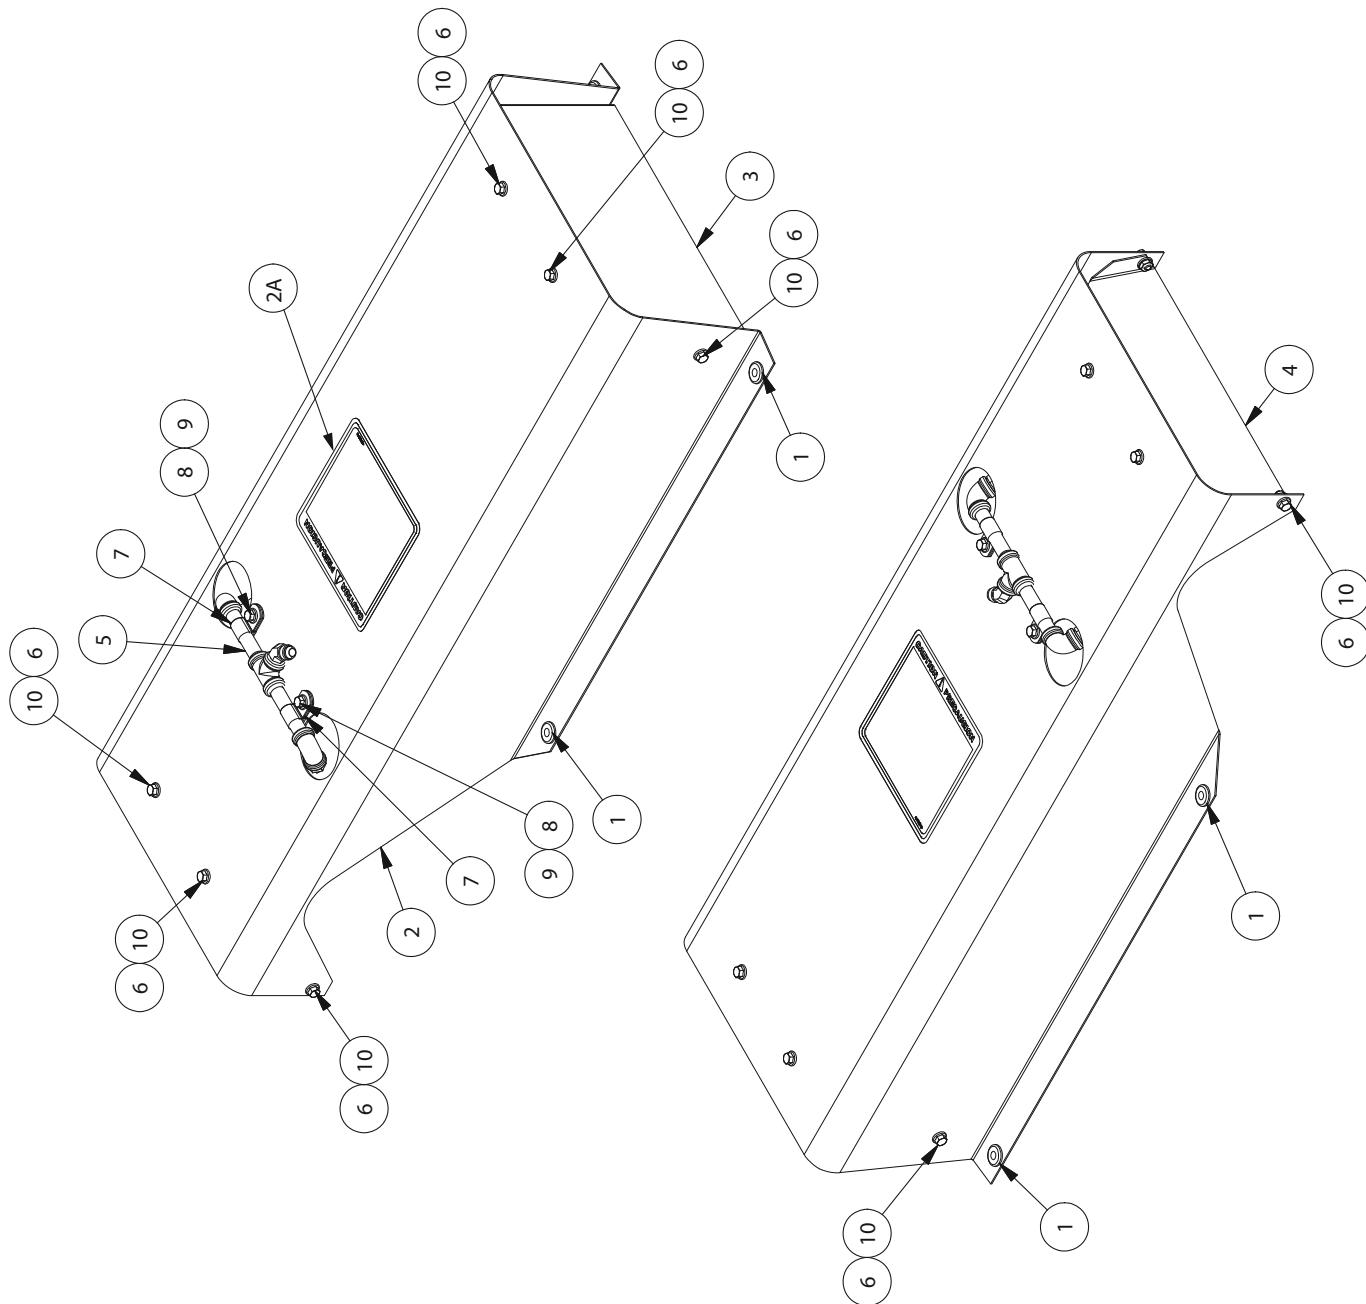


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902660		Bullgear Shield/Luber Assembly				
1	F000007550	4	. Grommet F/Bull Gear Shield	6	09416918	8	. Nut
2	903282	1	. Plate, Shield w/Decal	7	209578	2	. Clamp
2A	FD00023473	1	.. Decal; "Caution, Keep All..."	8	SMS0000305	2	. Bolt
3	SHD036871B	1	. Plate, Shield	9	R13811189	2	. Locknut
4	SHD036872B	1	. Plate, Rear	10	SMS0000173	8	. Bolt
5	*a 901571	1	. Manifold Assembly				

*a See Separate Coverage (Page 5-32)

Rev A

Manifold Assembly, Bullgear Luber

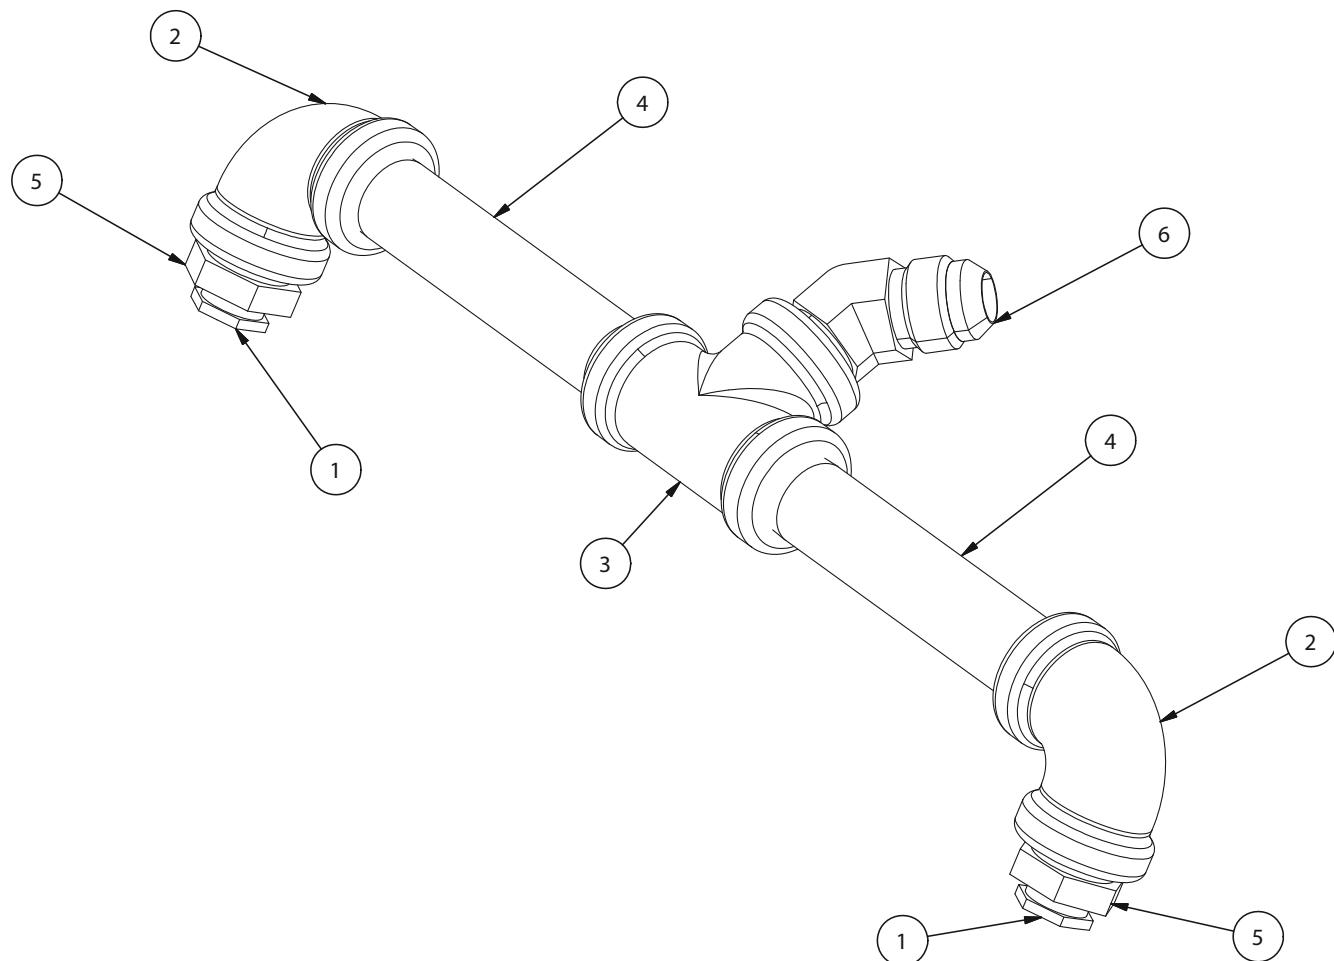


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	901571 LUB0323060	2	Manifold Assembly . Pressure Fitting-Valve	4	00121209	2	. Nipple, Pipe
2	PPE0014000	2	. Elbow, Pipe	5	209500	2	. Fitting
3	PPE0040250	1	. Tee, Pipe	6	209794	1	. Fitting

Rev C


Bullgear Shield/Oil Cooler Shroud Assembly

Page 1 of 2

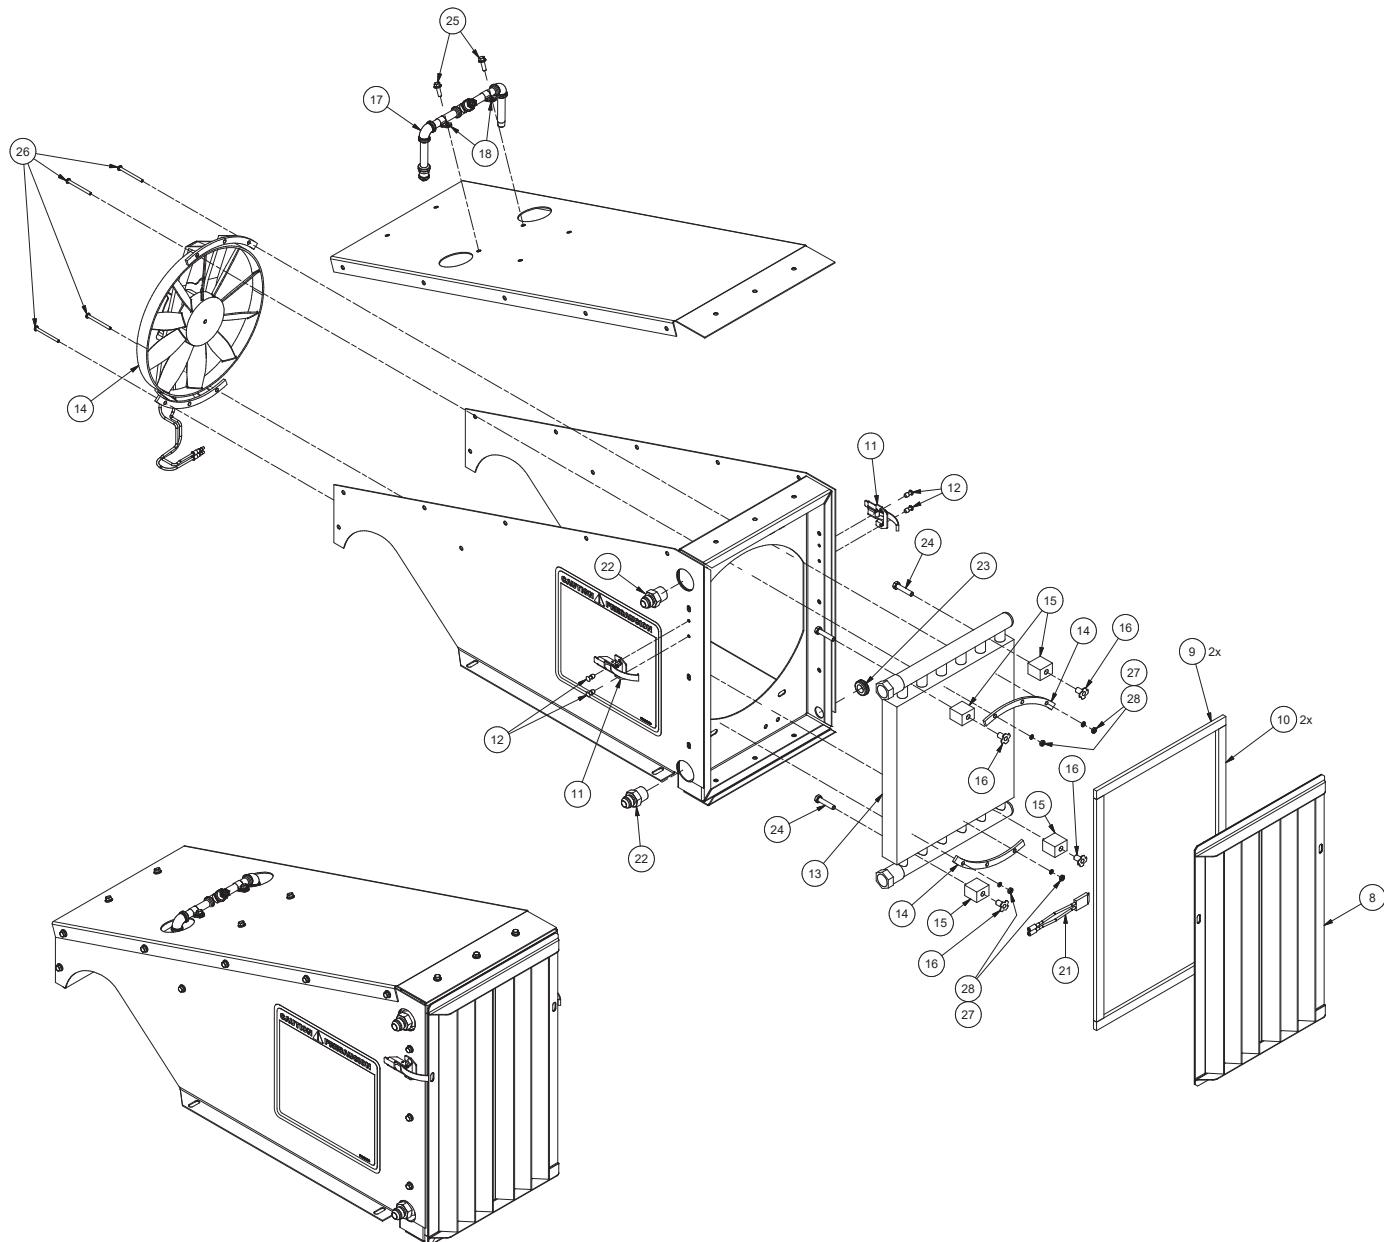

Bullgear Shield/Oil Cooler Shroud Assembly


Page 2 of 2

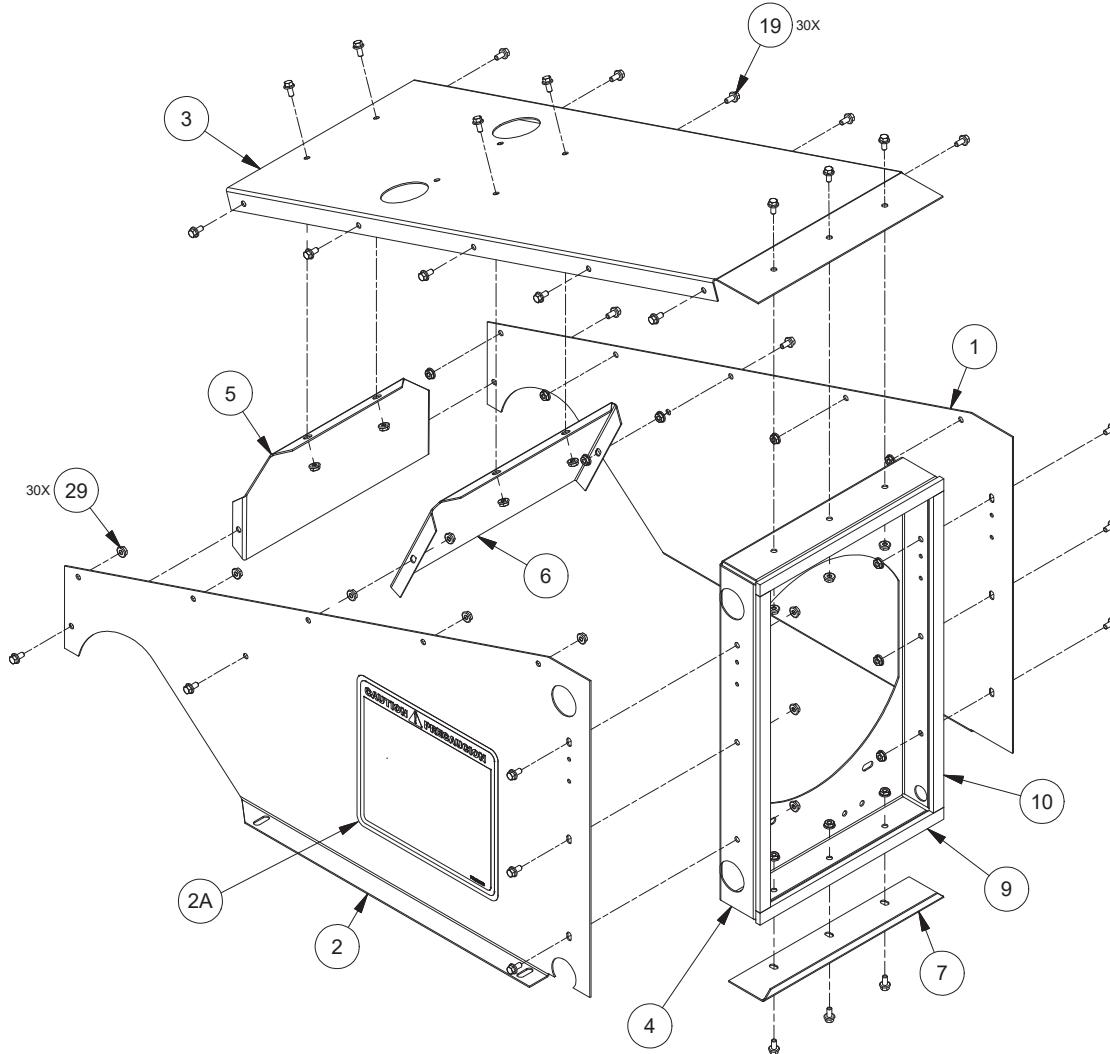

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description	
	SHR036957E		Bullgear Shield/Oil Cooler Shroud Assembly	16	CLR0002353	4	. Tee Nut-Oil Cooler Mount	
1	SHR036954D	1	. Plate, LH Shroud	17	*a 901572	1	. Manifold Assembly	
2	903280	1	. Plate, RH Shroud w/ Decal	18	209578	2	. Clamp	
2A	F000023473	1	.. Decal, Caution...	19	SMS0000173	30	. Bolt	
3	SHR036955D	1	. Top, Oil Cooler Shroud	20	R13811189	2	. Locknut	
4	SHR036950E	1	. Oil Cooler Shroud	21	903317	1	. Wire Harness	
5	SHR036956B	1	. Back,Oil Cooler Shroud	22	209891	2	. Fitting	
6	SHR036965B	1	. Baffle,Oil Cooler Shroud	23	256328	1	. Grommet	
7	GRL036966B	1	. Lower Grill Support	24	R13811016	4	. Capscrew	
8	GRL036969E	1	. Oil Cooler Grill Assembly	25	SMS0000300	2	. Bolt	
9	WEA037323A	2	. Weather Strip .31 X .38 X 13.25	26	SMR1320225	4	. Screw	
10	WEA037325A	2	. Weather Strip .31 X .38 X 19.75	27	00103338	3	. Lockwasher	
11	CLP0000130	2	. Fastener, Hook Type	28	223799	4	. Hex Nut	
12	RIV0000604	4	. Rivet	29	09416918	30	. Nut	
13	F000006263	1	. Heat Exchanger	*a See Separate Coverage (Page 5-35)				
14	901524	1	. Fan					
15	CLR0002094	4	. Mounting Block - Oil Cooler					

Rev D

Manifold Assembly, Bullgear Luber, Hydro

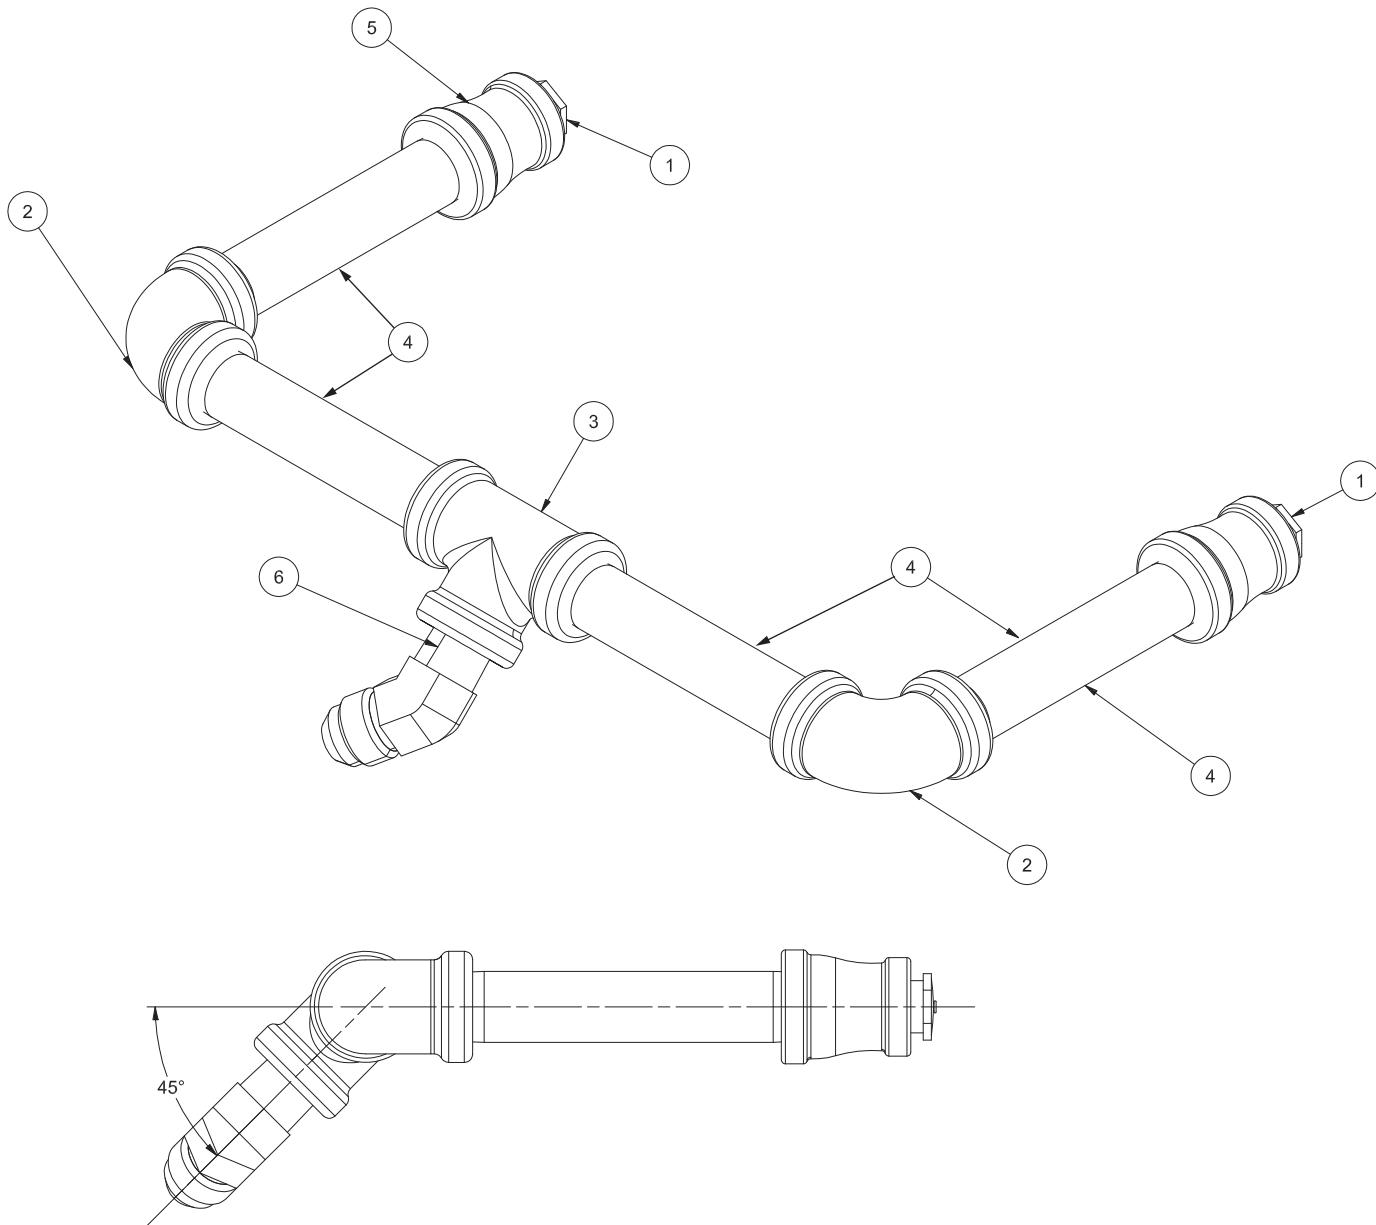

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
901572			Manifold Assembly				
1	LUB0323060	2	. 1/8" Pressure Fitting-Valve	5	PPE000001	2	. Fitting
2	PPE0014000	2	. Elbow, Pipe	6	209794	1	. Fitting
3	PPE0040250	1	. Tee, Pipe				
4	00121209	4	. Nipple, Pipe				

Rev B

This page is intentionally left blank.

Section 6


Pickup

Pickup Installation, 14" 2-Tie.....	6-3
Pickup Installation, 16" 2-Tie.....	6-6
. Pickup Clutch Assembly.....	6-9
.. Pickup Sprocket Assembly.....	6-10
. Pickup Assembly, Super Sweep.....	6-11
.. Cam Lever Assembly	6-15
(Manual) Spring, Pick Up Installation.....	6-16
. Spring Assembly, Manual Pickup Lift	6-17
Electric Pickup Lift, 14" Frame	6-18
Electric Pickup Lift, 16" Frame	6-21
. Wiring Diagram, Control Box.....	6-24
. Electric Lift Control Box Assembly	6-25
Pickup Lift, 14" W/Engine, Hydro	6-26
Pickup Lift, 16" W/Engine, Hydro	6-29
. Spring Assembly, Electric/Hyd Pickup Lift.....	6-32

This page is intentionally left blank.

Pickup Installation, 14" 2-Tie


Page 1 of 3

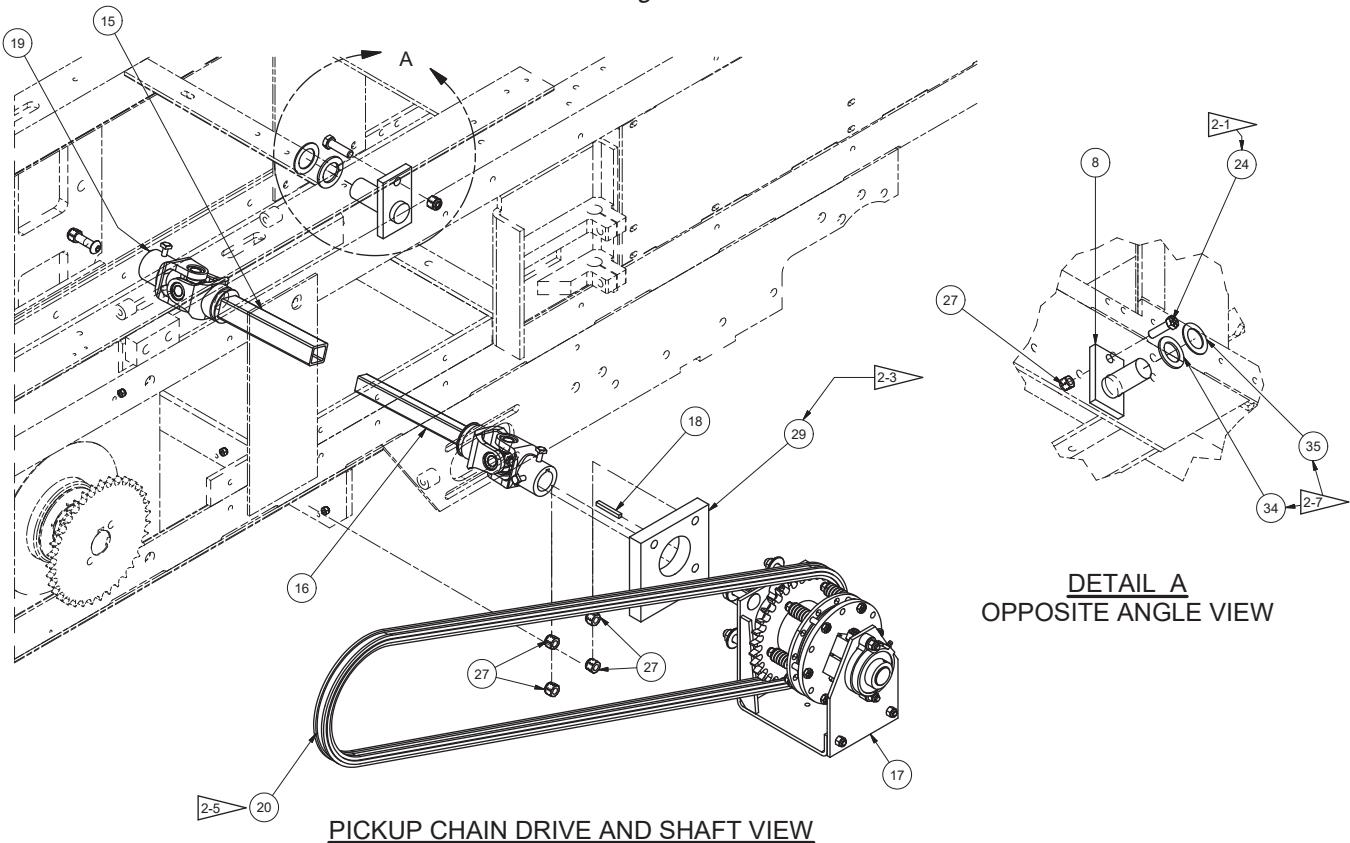

DETAIL A
OPPOSITE ANGLE VIEW

PICKUP CHAIN DRIVE AND SHAFT VIEW


- NOTES:**
- 2-1 ONLY COMPONENT ON OUTSIDE OF FRAME.
 - 2-3 ONLY USED FOR GEARBOX BALERS.
 - 2-5 1/2" DEFLECTION ON CHAIN FOR CORRECT TIGHTNESS.
 - 2-6 APPLY ANTI-SEIZE TO THREADS OF SPRING BOLT (ITEM 6).
 - 2-7 USED TO ENSURE PICKUP LIFT CHAIN CLEARS BALER FRAME, SPACERS ARE PLACED ON OUTSIDE OF BALER FRAME.
 - 2-8 SHIM AS NEEDED TO INSURE 0" - 0.06" MAX. LATERAL MOVEMENT OF PICKUP ASSEMBLY.

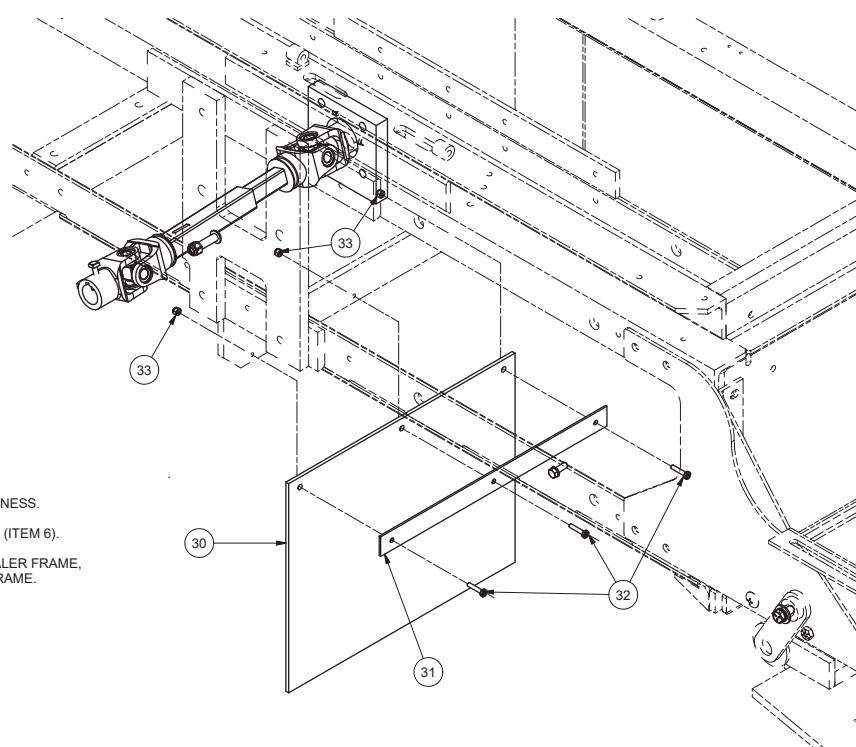

DRIVE SHAFT SHIELD VIEW

Pickup Installation, 14" 2-Tie

Page 2 of 3

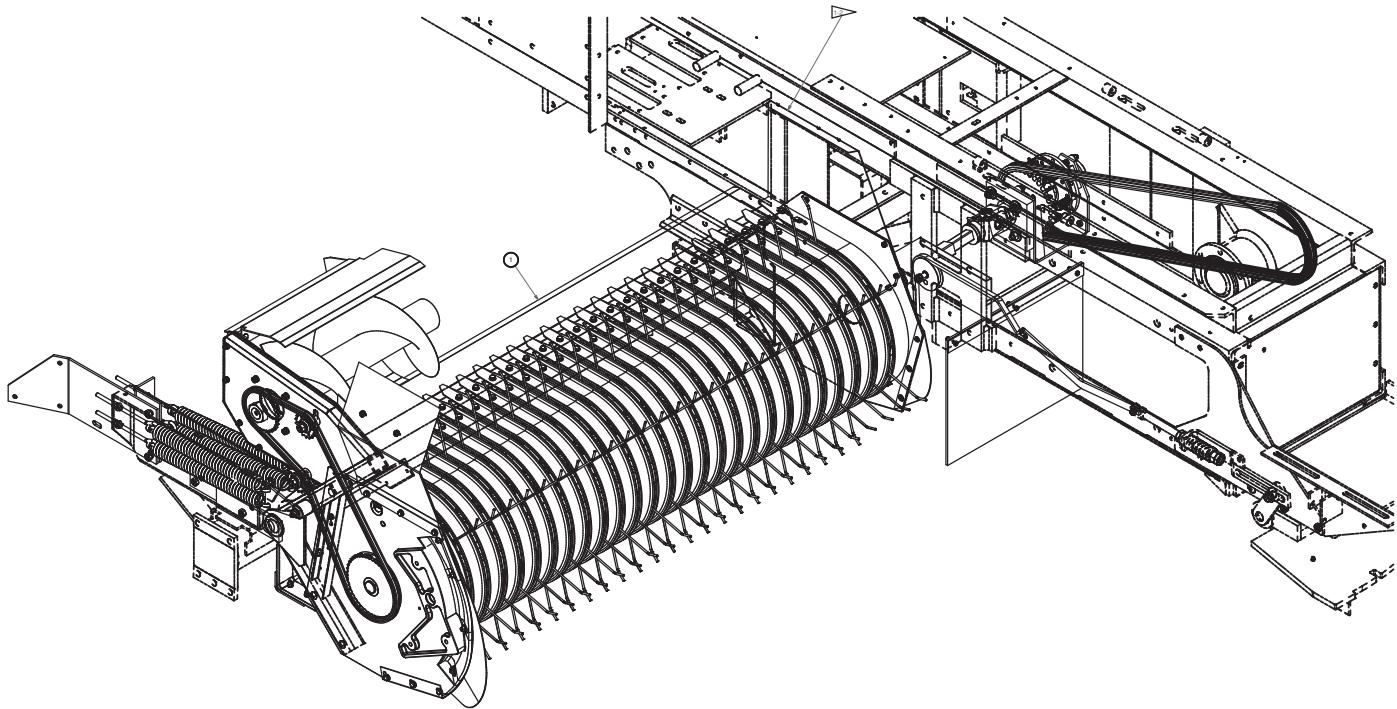NOTES:

1-2 TOP OF SHIELD PARALLEL TO TOP OF BALER FRAME WHEN PICKUP ASSEMBLY IS FULLY RAISED.

1-3 ITEM 36 IS NOT SHOWN, REFER TO 909077 FOR INSTALLATION INSTRUCTIONS OF PICKUP LIFT HEIGHT.


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902966 Pickup Installation, 14" Bullgear 2 Tie							
1 a*	PCYSPEC370	1	. Pickup, Super Sweep	20	906513	1	. Chain, Pickup Drive
2	BKT0022481	1	. Bracket, RH	21	F000006410	2	. Spacer
3	F000007154	4	. Spring, Extension	22	200454W	2	. Capscrew
4	903818	1	. Plate, Link	23	221574W	1	. Capscrew
5	MNT0011400	1	. Mounting Plate	24	221569W	2	. Capscrew
6	F000000096	4	. Eyebolt	25	221767W	6	. Washer
7	MNT0022379	1	. Mounting, RH	26	221707W	8	. Hex Nut
8	HGR0022222	1	. Hanger, LH	27	223587	10	. Locknut
9	SHD0014244	1	. Plate, Shield	30	908329	1	. Flap, Neoprene
10	IDL0016315	1	. Idler, Chain	31	908328	1	. Bar, Retainer
11	LNK0000523	2	. Link, Connecting	32	R13801782	3	. Capscrew
12	CHN0016368	1	. Chain, Pickup Lift	33	15113W	3	. Nut, Esna
13	Y25G-0832	1	. Capscrew	34	R616841	2	. Mach Bushing
14	F000007607	1	. Bearing, Inner Race	35	F000004160	1	. Mach Bushing
15	900019	1	. Drive Shaft, Female	36	909077	1	. Shim Pack, Pickup Height
16	900020	1	. Shaft, Drive				
17 b*	SAL0000007	1	. Pickup Clutch Assembly				
18	48688	1	. Key				
19	ZZ00000445	1	. Key				

*a See Separate Coverage(Page 6-12)
 *b See Separate Coverage (Page 6-9)

Rev HG



Pickup Installation, 14" 2-Tie

Page 3 of 3

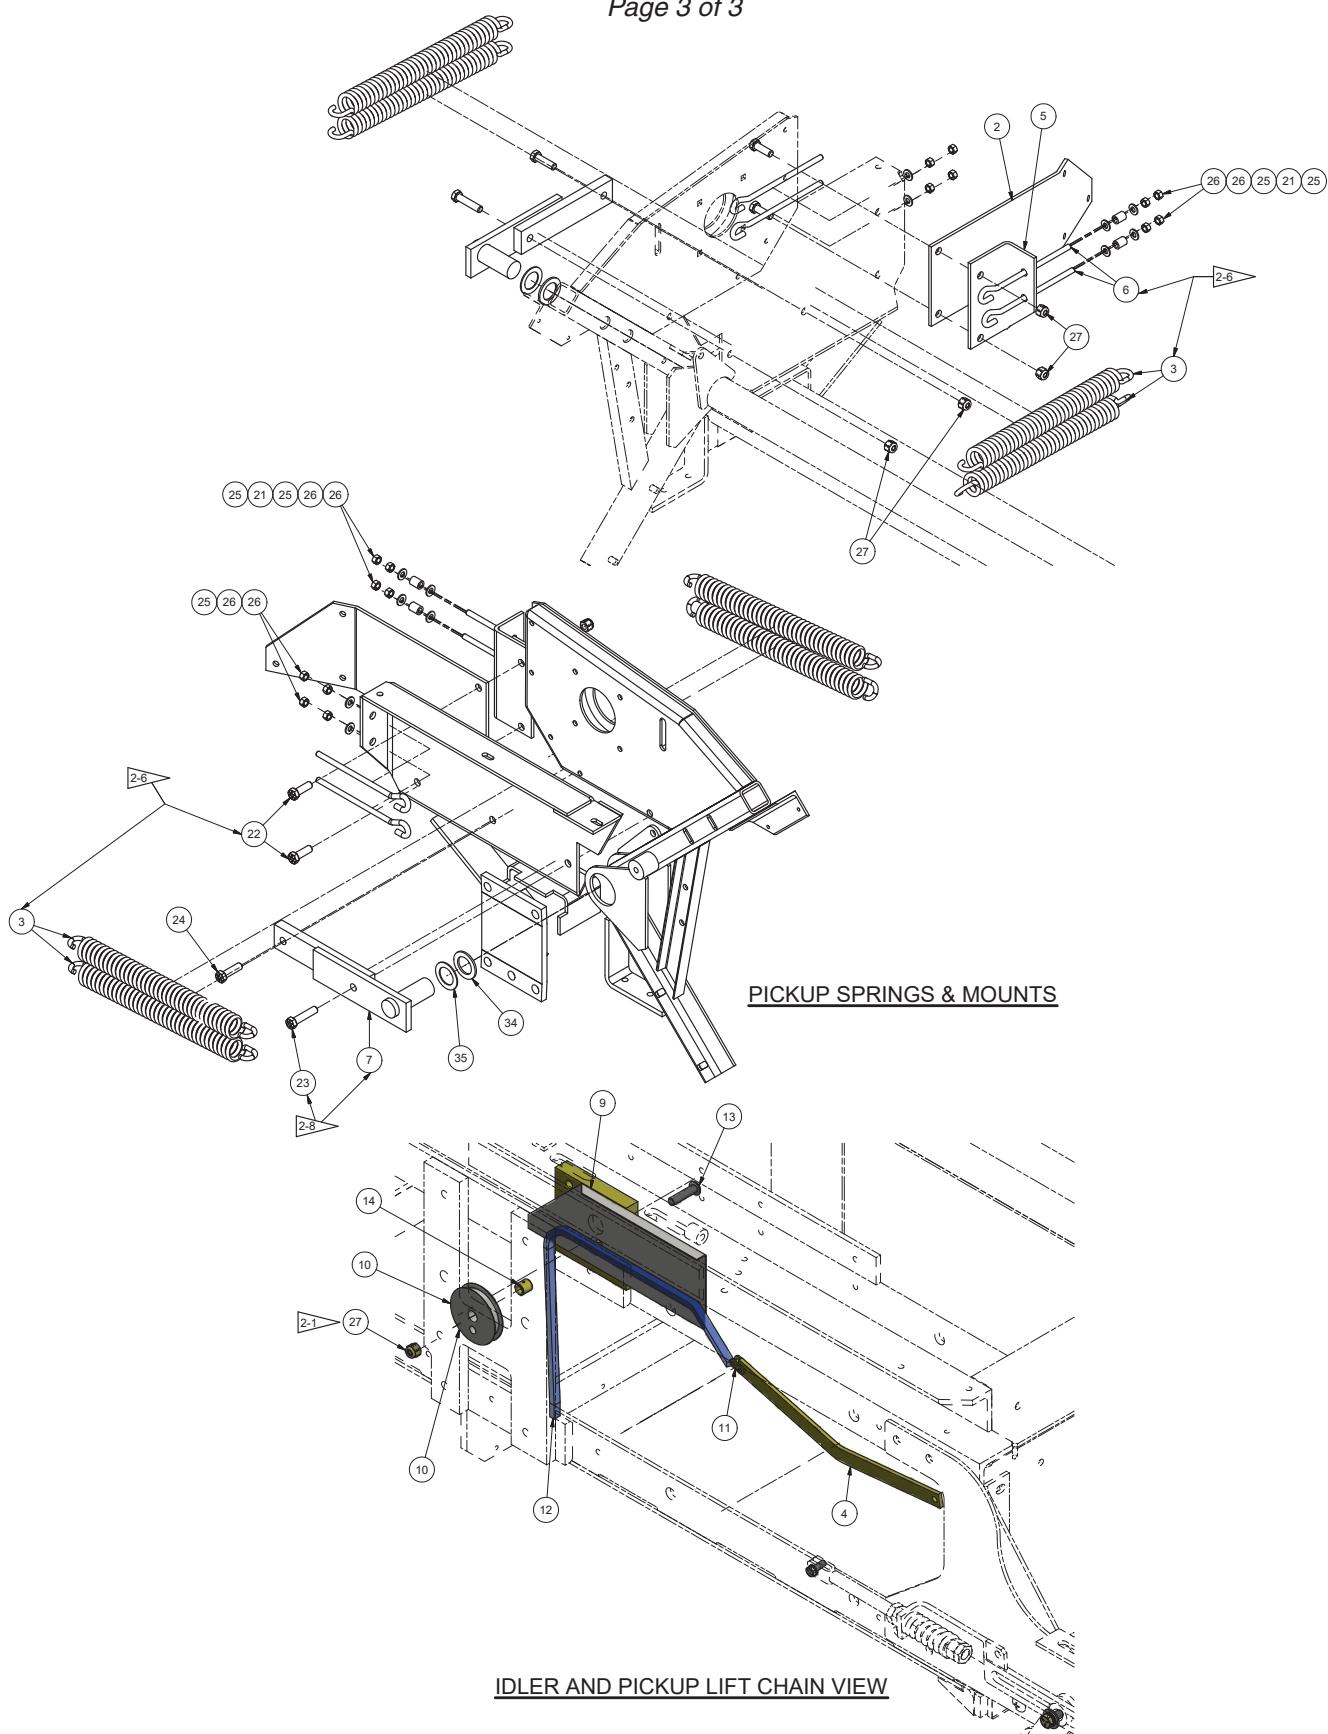

Pickup Installation, 16" 2-Tie


Page 1 of 3

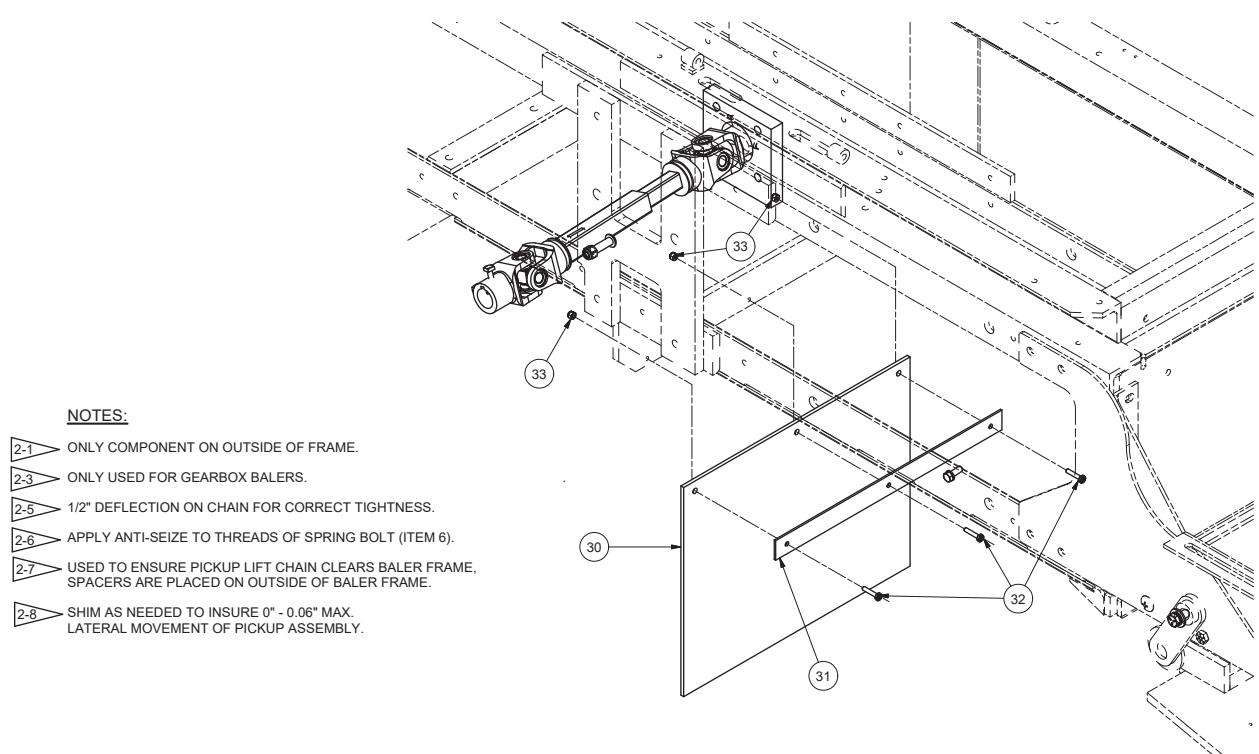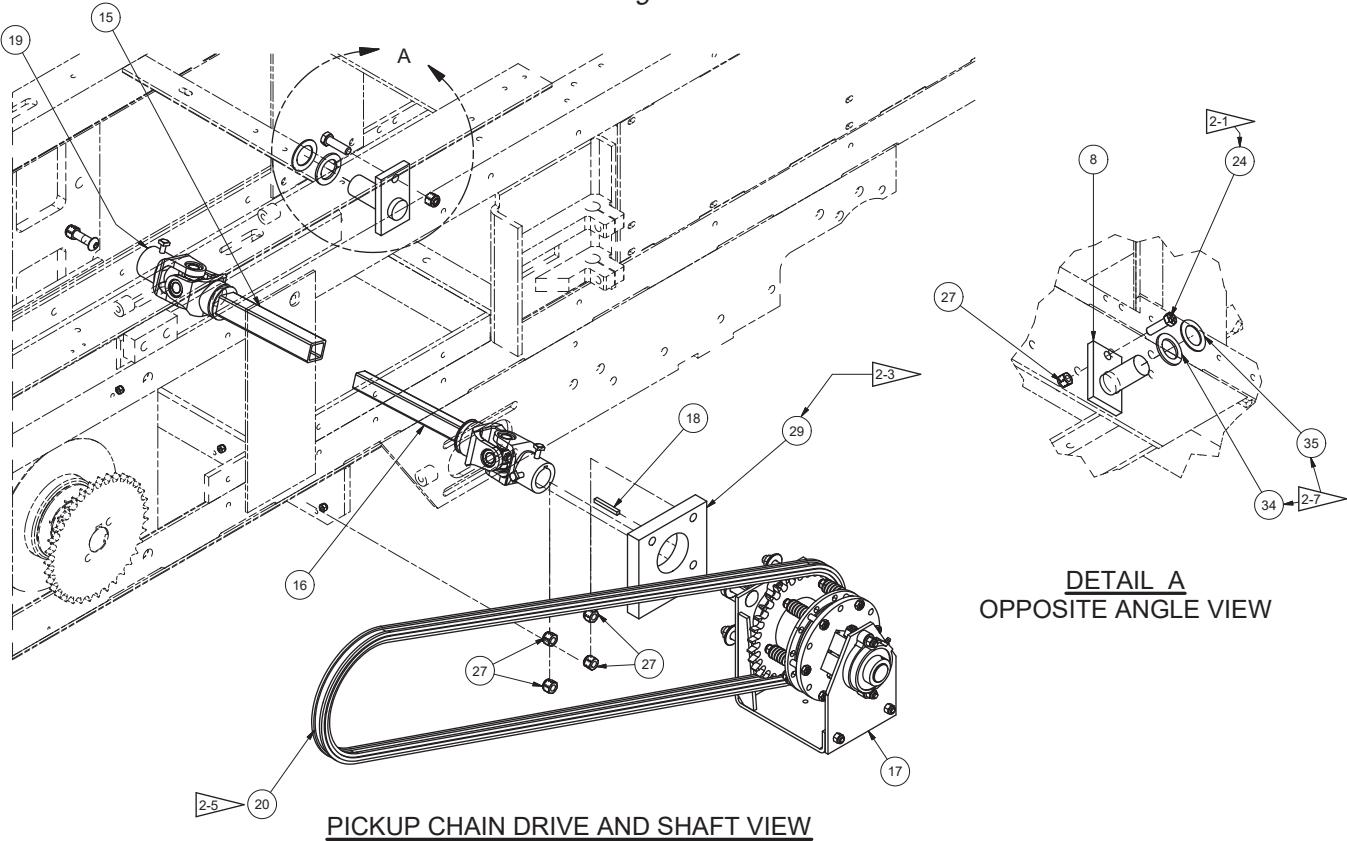

DRIVE SHAFT SHIELD VIEW

Pickup Installation, 16" 2-Tie

Page 2 of 3

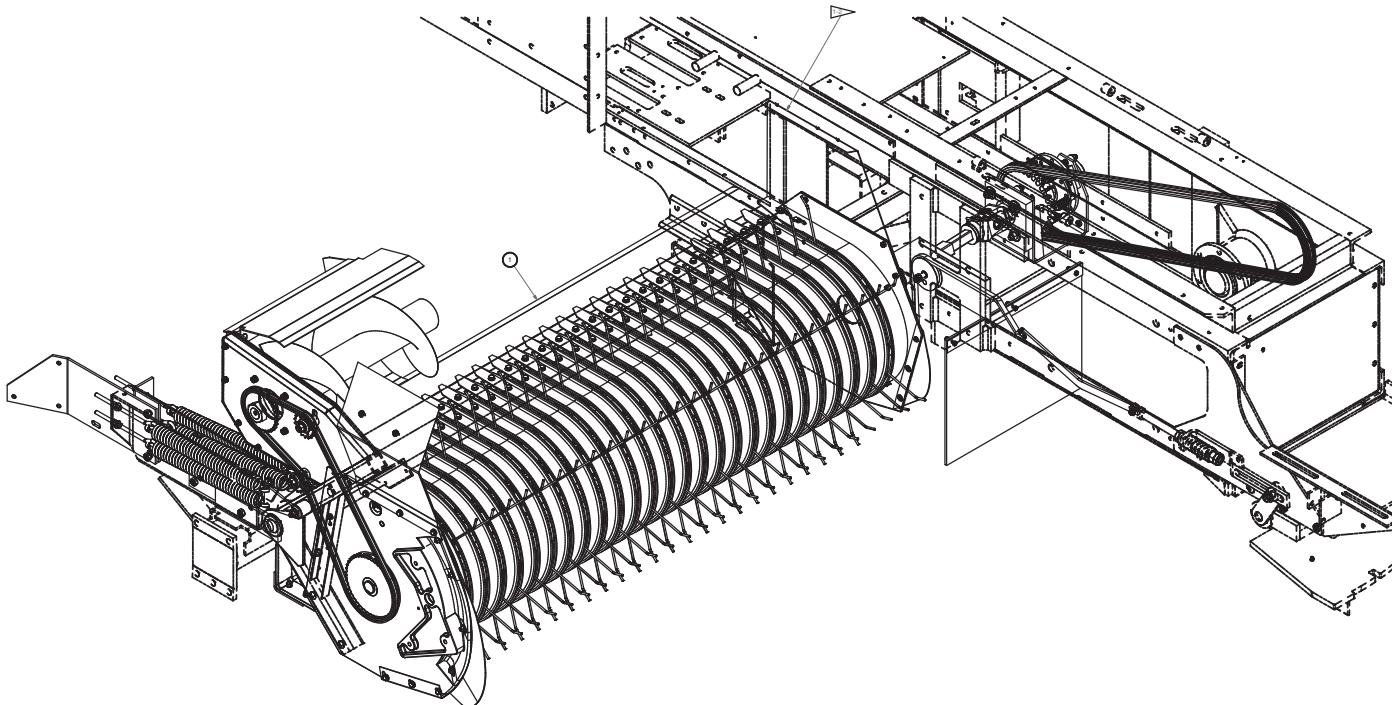

NOTES:

1-2 TOP OF SHIELD PARALLEL TO TOP OF BALER FRAME WHEN PICKUP ASSEMBLY IS FULLY RAISED.

1-3 ITEM 36 IS NOT SHOWN, REFER TO 909077 FOR INSTALLATION INSTRUCTIONS OF PICKUP LIFT HEIGHT.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902114							
	Pickup Installation, 16" Bullgear 2 Tie						
1 a*	PCYSPEC370	1	. Pickup, Super Sweep	20	CHN0060139	1	. Chain, Pickup Drive
2	BKT0022481	1	. Bracket, RH	21	F000006410	2	. Spacer
3	F000007154	4	. Spring, Extension	22	200454W	2	. Capscrew
4	903818	1	. Plate, Link	23	221574W	1	. Capscrew
5	MNT0011400	1	. Mounting Plate	24	221569W	2	. Capscrew
6	F000000096	4	. Eyebolt	25	221767W	6	. Washer
7	MNT0022379	1	. Mounting, RH	26	221707W	8	. Hex Nut
8	HGR0022222	1	. Hanger, LH	27	223587	10	. Locknut
9	SHD0014244	1	. Plate, Shield	30	908329	1	. Flap, Neoprene
10	IDL0016315	1	. Idler, Chain	31	908328	1	. Bar, Retainer
11	LNK0000523	2	. Link, Connecting	32	R13801782	3	. Capscrew
12	CHN0016368	1	. Chain, Pickup Lift	33	15113W	3	. Nut, Esna
13	Y25G-0832	1	. Capscrew	34	R616841	2	. Mach Bushing
14	F000007607	1	. Bearing, Inner Race	35	F000004160	1	. Mach Bushing
15	900019	1	. Drive Shaft, Female	36	909077	1	. Shim Pack, Pickup Height
16	900020	1	. Shaft, Drive				
17 b*	SAL0000007	1	. Pickup Clutch Assembly				
18	48688	1	. Key				
19	ZZ00000445	1	. Key				


Rev LG

*a See Separate Coverage (Page 6-12)


*b See Separate Coverage (Page 6-9)

Pickup Installation, 16" 2-Tie

Page 3 of 3

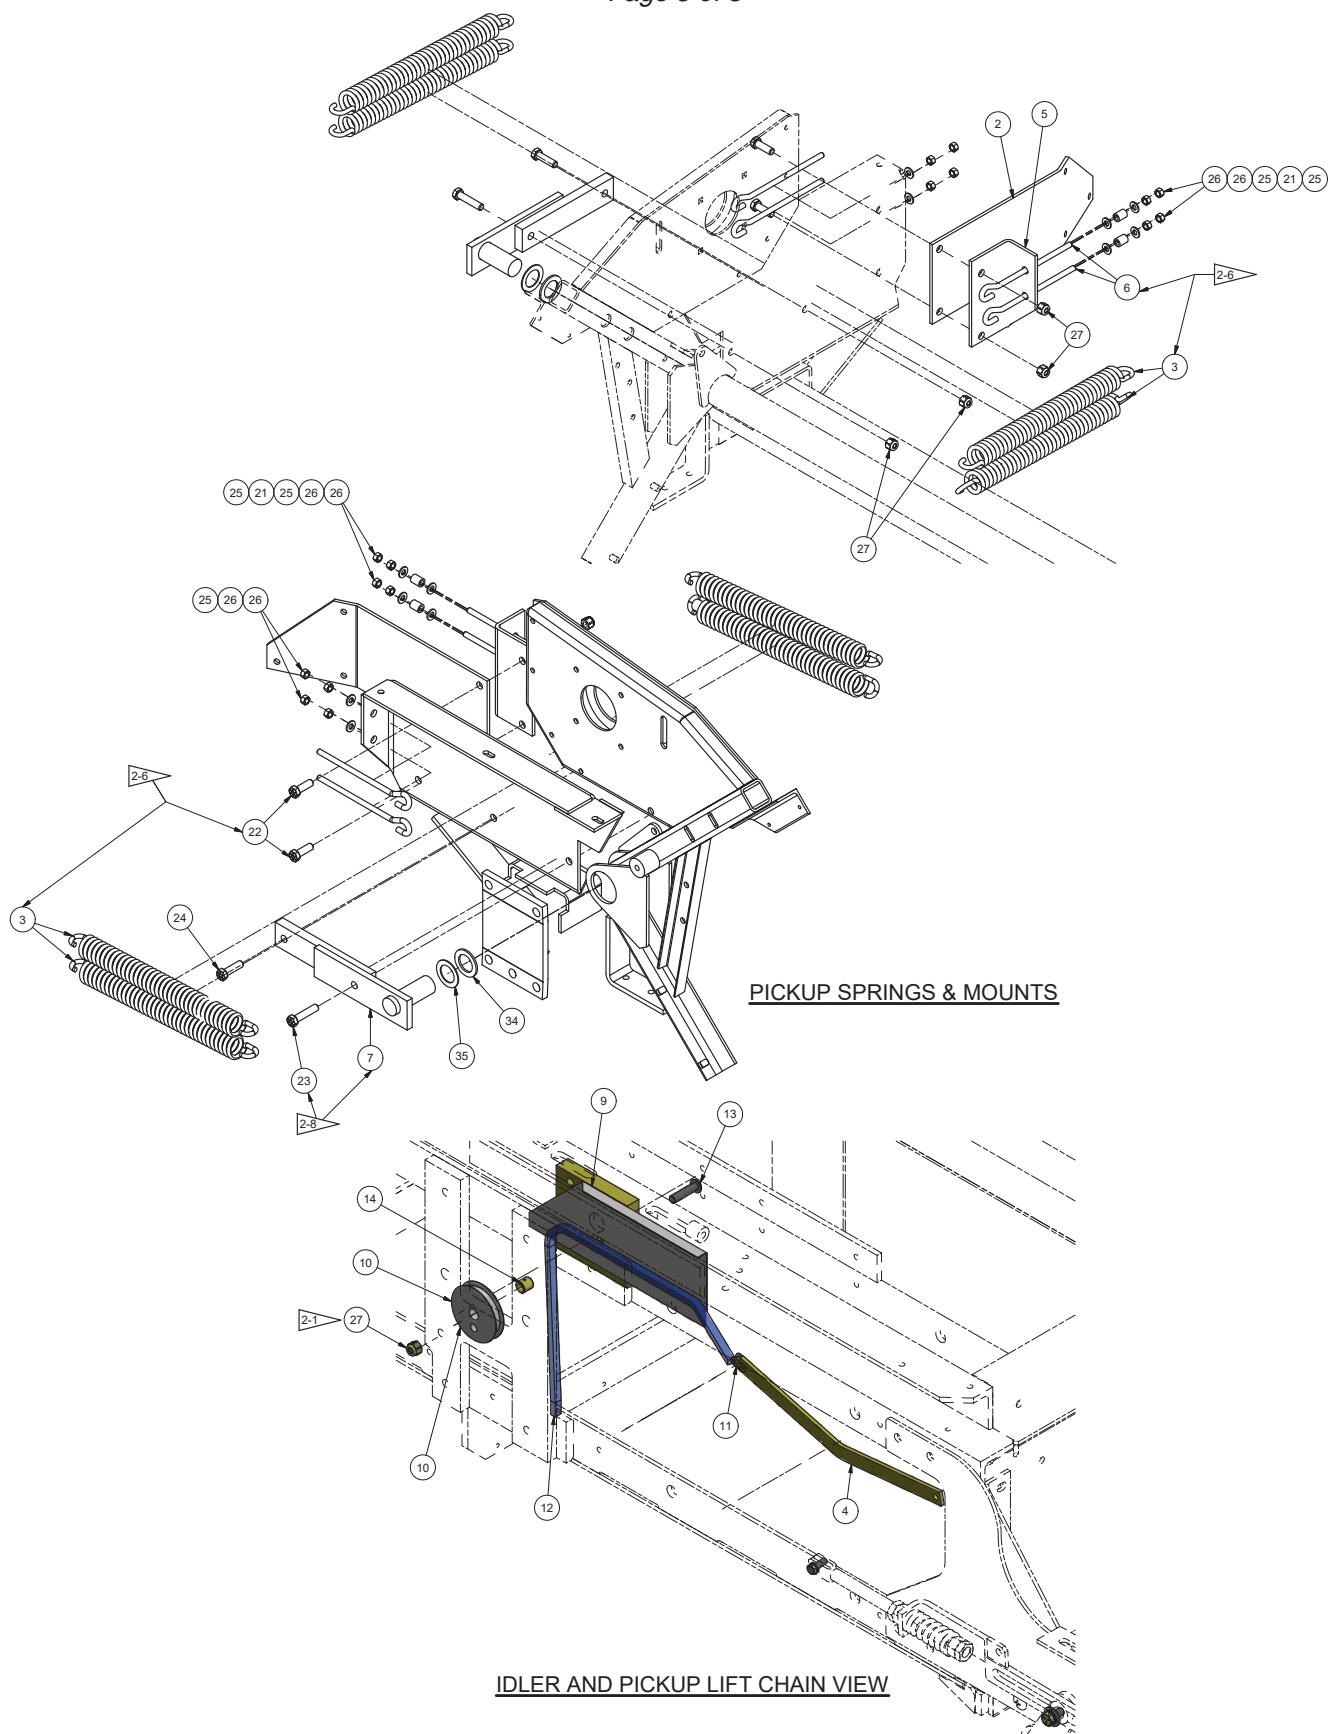

Pickup Clutch Assembly



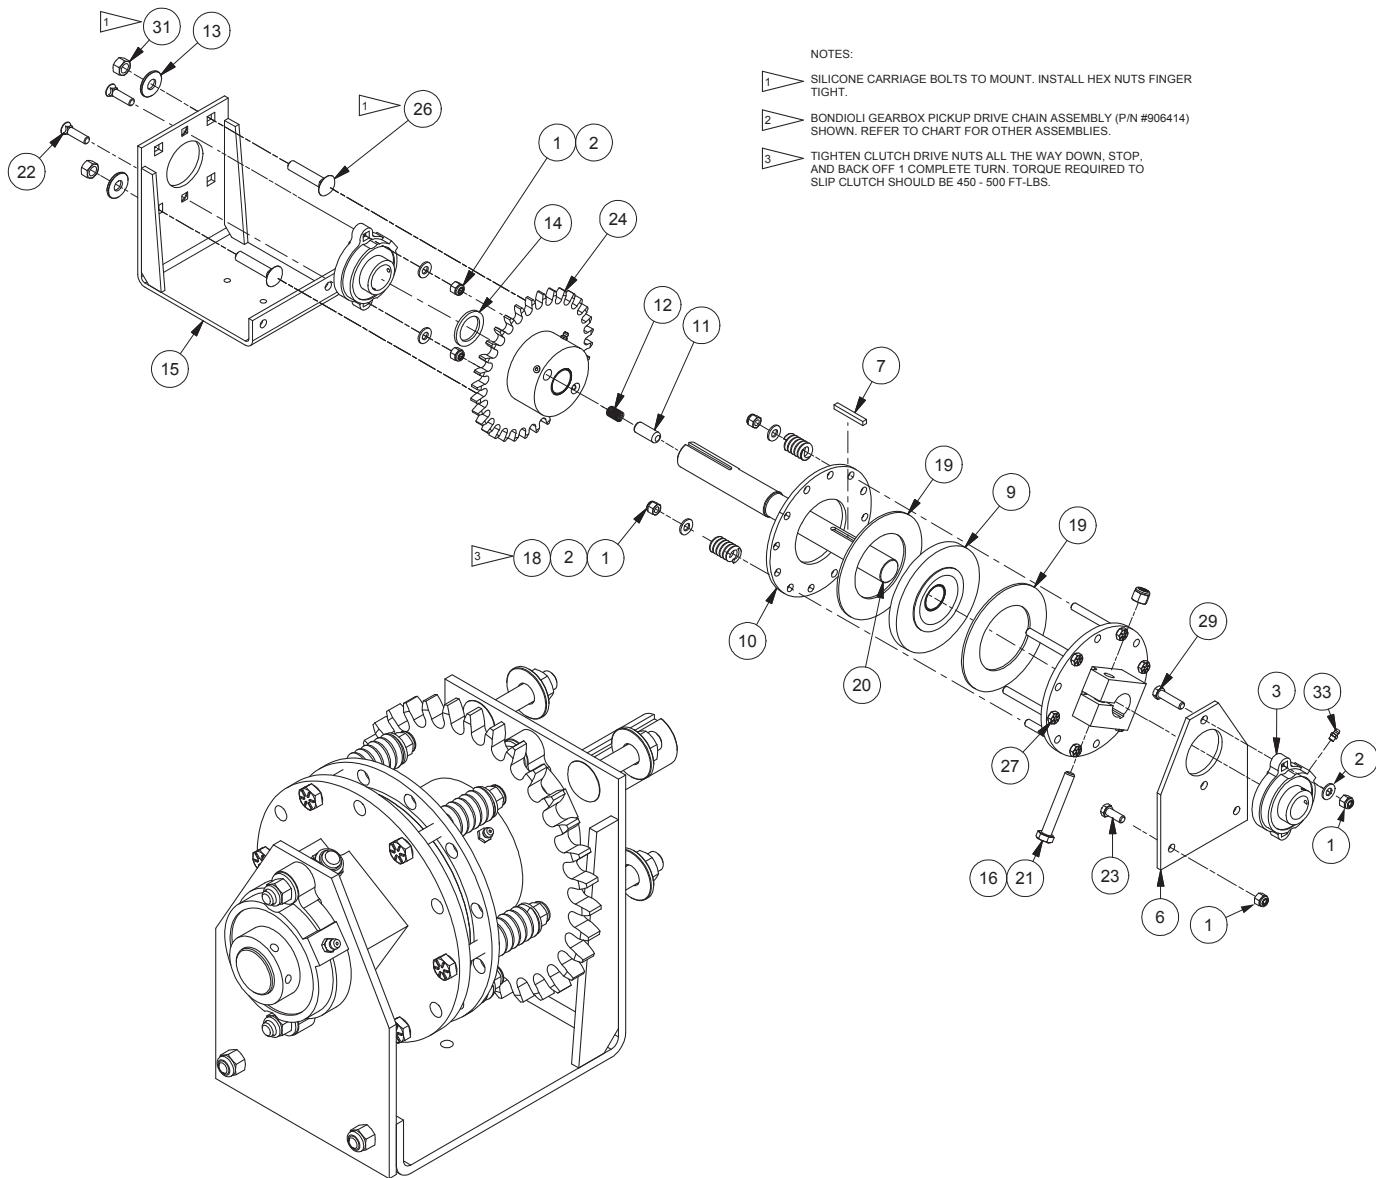


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description		
SAL0000007			Pickup Clutch Assy						
1	R13811191	12	. Locknut	17	906516	1	. Bearing		
2	221767W	10	. Hard Washer	18	F000001797	6	. Spring, Clutch Plate		
3	BRG0000202	1	. Bearing	19	F000001793	2	. Disc, Friction		
6	F000008091	1	. Bearing Mount Plate-Pickup Drive	20	SHF0021219	1	. Driveshaft		
7	48688	1	. Key	21	R13811082	1	. Capscrew		
8	CLH0017773	1	. Adapter Weldment	22	PWB3751500	2	. Bolt, Plow		
9	CLH0021222	1	. Assy, Clutch Plate	23	Y17C-0616	2	. Capscrew		
	BRG0020016	1	. . Bushing	24	*a SPK0021220	1	. Sprocket, Pickup Drive		
10	CLH0017849	1	. Plate, Disc	26	CRB5000125	4	. Bolt, Carriage		
11	F000001791	2	. Pin, Clutch	27	221518W	6	. Capscrew		
12	F000001790	2	. Spring, Compression	29	Y17C-0624	2	. Capscrew		
13	239519	4	. Flat Washer	31	221711W	4	. Hex Nut		
14	ZZ00000228	1	. Mach Bushing	33	11079	1	. Fitting, Lube		
15	F000008090	1	. Bracket						
16	223587	1	. Nut, Esna						

*a See Separate Coverage (Page 6-10)

Rev SD

Pickup Sprocket Assembly

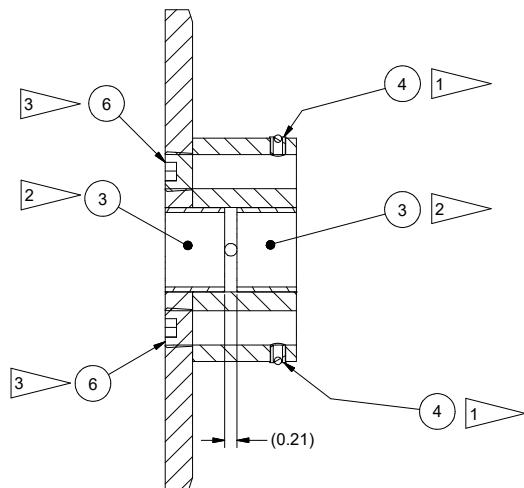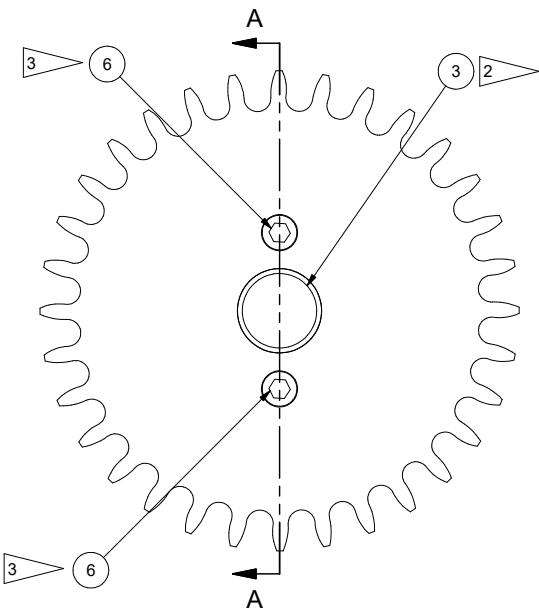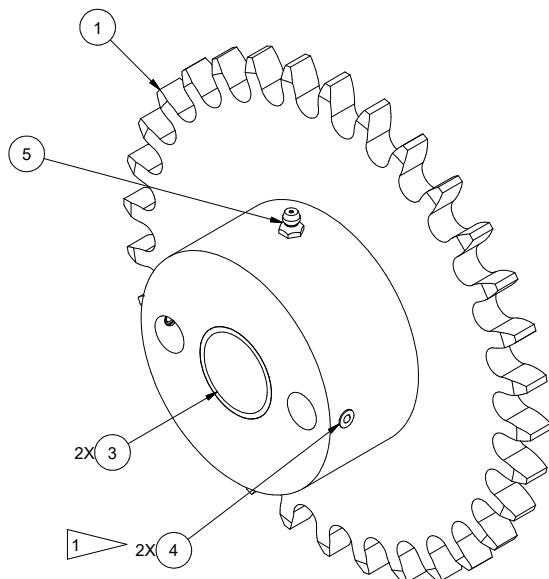
**NOTES:**

- [1] -DO NOT ALLOW INNER FACE OF BAIL OILERS TO PENETRATE INTO CAVITIES
- [2] -INSTALL BEARINGS TO BE FLUSH WITH OUTSIDE FACES.
BEARING I.D. AFTER INSTALLATION: 1.2550/1.2512
- [3] -INSTALL PLUG TO BE FLUSH WITH FACE OF SPROCKET
(ITEM #1) TO NO MORE THAN 0.13" PROTRUDING FROM FACE.


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	SPK0021220		Sprocket Assembly				
1	253185	1	. Sprocket	5	11079	1	. Fitting, Lube
3	BRG0020016	2	. Bushing	6	R13801762	2	. Fitting
4	VLV0000521	2	. Ball Valve				Rev E

Pickup Assembly, Super Sweep

Page 1 of 4

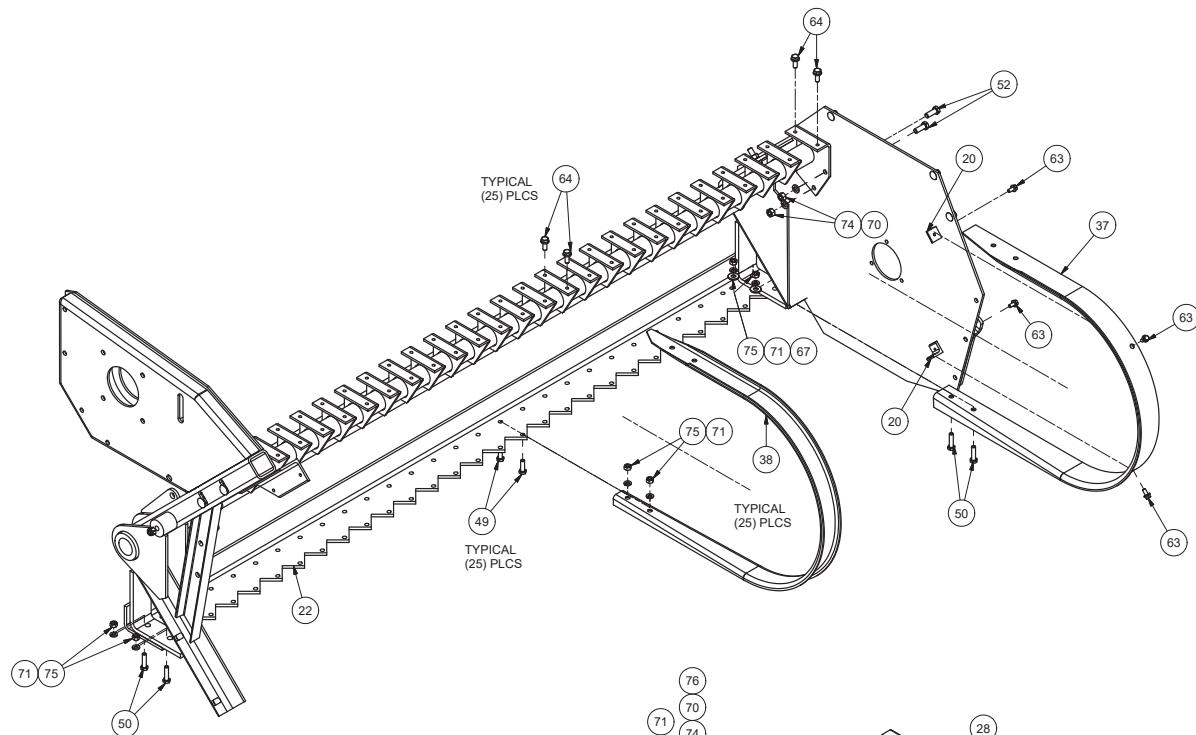

LOWER AND UPPER STRIPPER MOUNT
CENTER AND INSIDE STRIPPERS

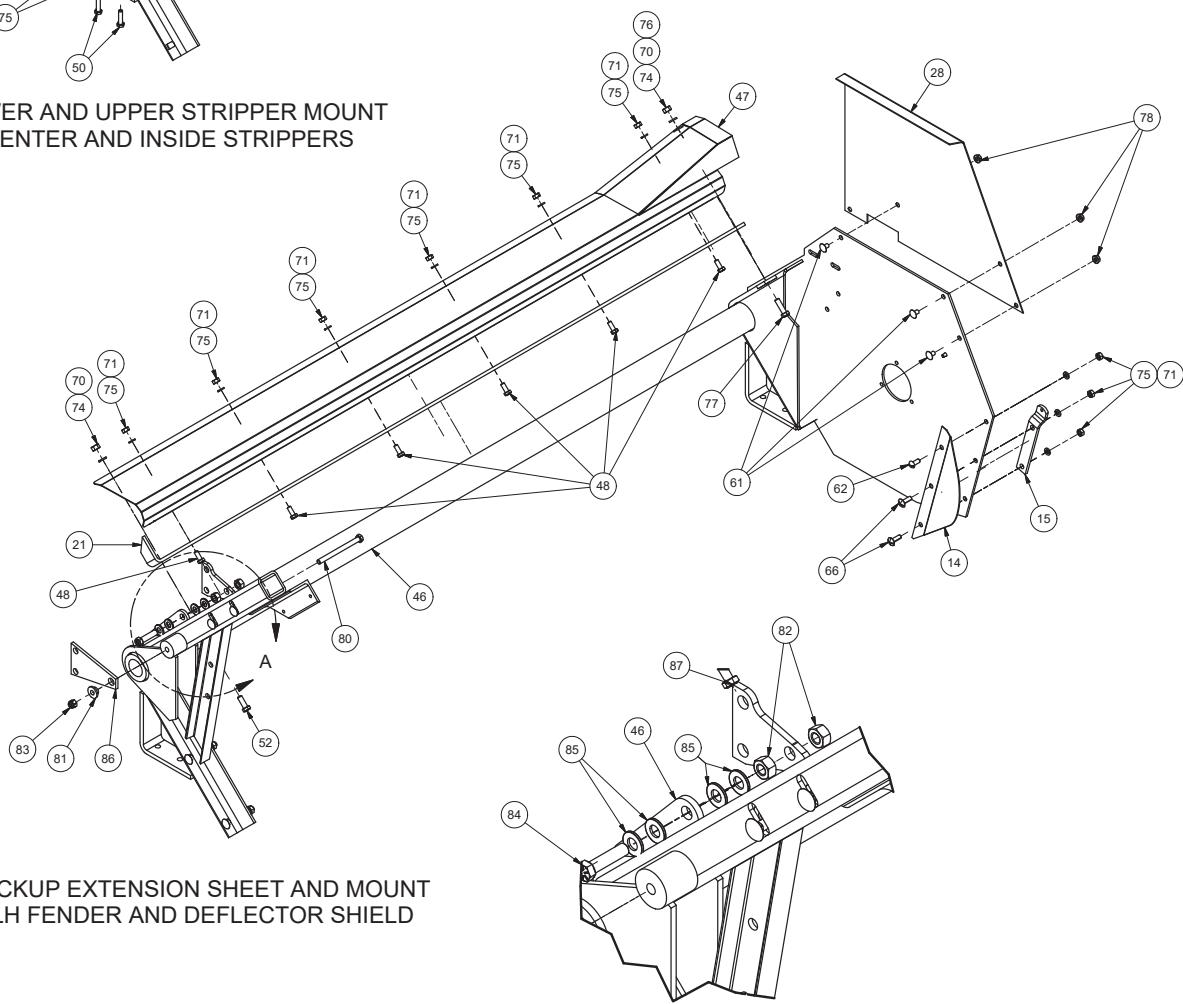


PICKUP EXTENSION SHEET AND MOUNT
LH FENDER AND DEFLECTOR SHIELD

DETAIL A

Pickup Assembly, Super Sweep

Page 2 of 4

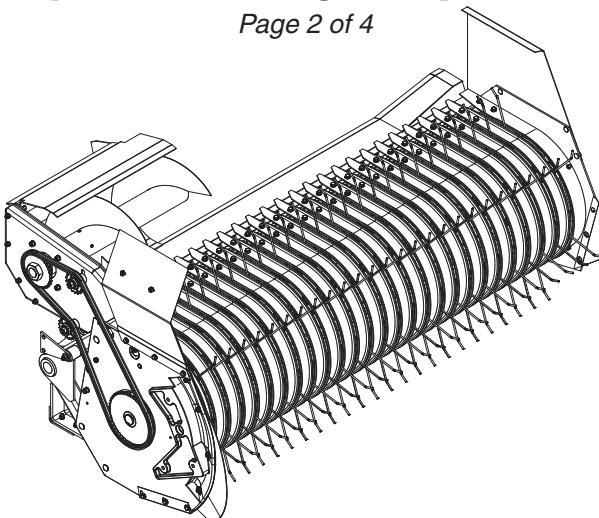


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description	
	PCYSPEC370		Pickup, Super Sweep,					
1	AUG0020830	1	. Auger Scraper	46	901578	1	. Pickup Frame	
2	AUG0020974	1	. Auger Assembly	47	SHD0020829	1	. Shield, Pickup Extension	
3	AUG0022358	1	. Auger Trough	48	R13801791	30	. Capscrew	
4	BAR0033189	6	. Angle	49	R13811014	52	. Capscrew	
5	BRG0006219	12	. Bearing Assembly	50	R13811015	4	. Capscrew	
6	BRG0067000	2	. Bearing	51	221475W	96	. Capscrew	
7	BSH0001610	1	. Bushing	52	Y17C-0616	3	. Capscrew	
8	a*	CAM0033355	6	. Lever Assembly, Cam	53	R13811039	3	. Capscrew
9	CHN0040125	1	. Chain - Supersweep Pickup	54	R13811085	1	. Capscrew	
10	DEF0022860	1	. Plate, Deflector	55	CRB3130225	4	. Bolt, Carriage	
11	F000000101	60	. Guide	56	CRB3750100	4	. Bolt, Carriage	
12	F0000004073	3	. Link, Offset	57	CRB3750013	1	. Bolt	
13	F000004160	1	. Mach Bushing	58	CRB3750225	4	. Bolt, Carriage	
14	F000007151	1	. Fender, Inside Flare LH	59	CRB3750300	2	. Bolt, Carriage	
15	905117	1	. Bracket, Pickup Lift	60	CRB5000400	1	. Bolt, Carriage	
16	F000008011	2	. Bearing Cup	61	SMT0002000	5	. Machine Screw	
17	F000008380	2	. Bearing & Collar	62	246125	1	. Capscrew	
18	F000008383	4	. Flangette	63	SMS0000173	6	. Screw, Ser Flg	
19	HSN0027996	1	. Housing, Auger Bearing	64	SMS0000198	62	. Screw, Ser Flg	
20	MNT0011313	2	. Mount, Stripper Angle	65	SMS0000122	2	. Capscrew	
21	MNT0023007	1	. Bar, Mounting	66	SMT0000202	6	. Screw, Machine	
22	MNT0033556	1	. Lower Stripper Mount	67	18515W	28	. Washer	
23	MNT0033557	1	. Stripper Mount Supersweep	68	222615	4	. Washer	
24	PCY0020861	1	. RH Fender	69	234665	2	. Lockwasher	
25	PCY0033352	78	. Spacer	70	R13812514	24	. Lockwasher	
26	R616841	3	. Mach Bushing	71	R13812513	113	. Lockwasher	
27	SHD0006253	1	. Fender Flare, RH	72	219924	1	. Nut, Esna	
28	SHD0011309	1	. Plate, LH Deflector	73	221711W	2	. Hex Nut	
29	SHD0020832	1	. Plate, RH Deflector	74	R13809551	18	. Hex Nut	
30	SHF0018480	1	. Shaft	75	R13811512	95	. Hex Nut	
31	SHF0033356	6	. Pivot Shaft	76	221767W	1	. Washer	
32	SPC0017669	2	. Spacer	77	221499W	1	. Capscrew	
33	SPK0002318	2	. Sprocket, Idler	78	00273802	7	. Nut, Serrated	
34	SPK0040030	1	. Sprocket	79	NFX0000313	96	. Locknut	
35	SPK0040045	1	. Sprocket	80	R13801824	1	. Capscrew	
36	STR0033500	1	. Plate, Stripper	81	F000000440	1	. Ferrule	
37	STR0033501	1	. Stripper, Inside-Supersweep	82	R13806770	2	. Hex Nut	
38	STR0033502	25	. Stripper, Center	83	237567	1	. Locknut	
39	162572W	6	. Capscrew	84	R13801834	1	. Capscrew	
40	TTH0033171	78	. Pickup Tooth	85	222677	4	. Washer	
41	WAS0011459	24	. Washer	86	PLT0022382	1	. Plate, Lift Spring	
42	WAS0015783	5	. Bushing, Machine	87	F000007156	1	. Spring Plate	
43	ZZ00000418	1	. Key					
44	ZZ00000428	1	. Key					
45	900928	1	. Cam, Pickup					


a* See Separate Coverage (Page 6-15)

Rev MB

Pickup Assembly, Super Sweep

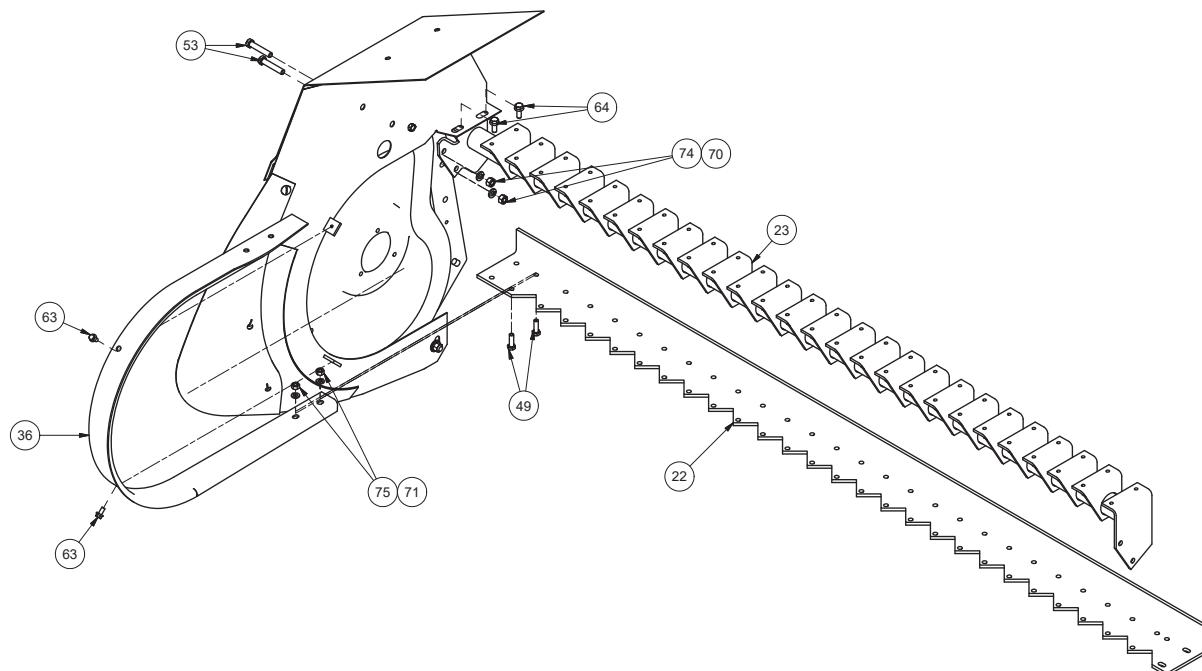Page 3 of 4


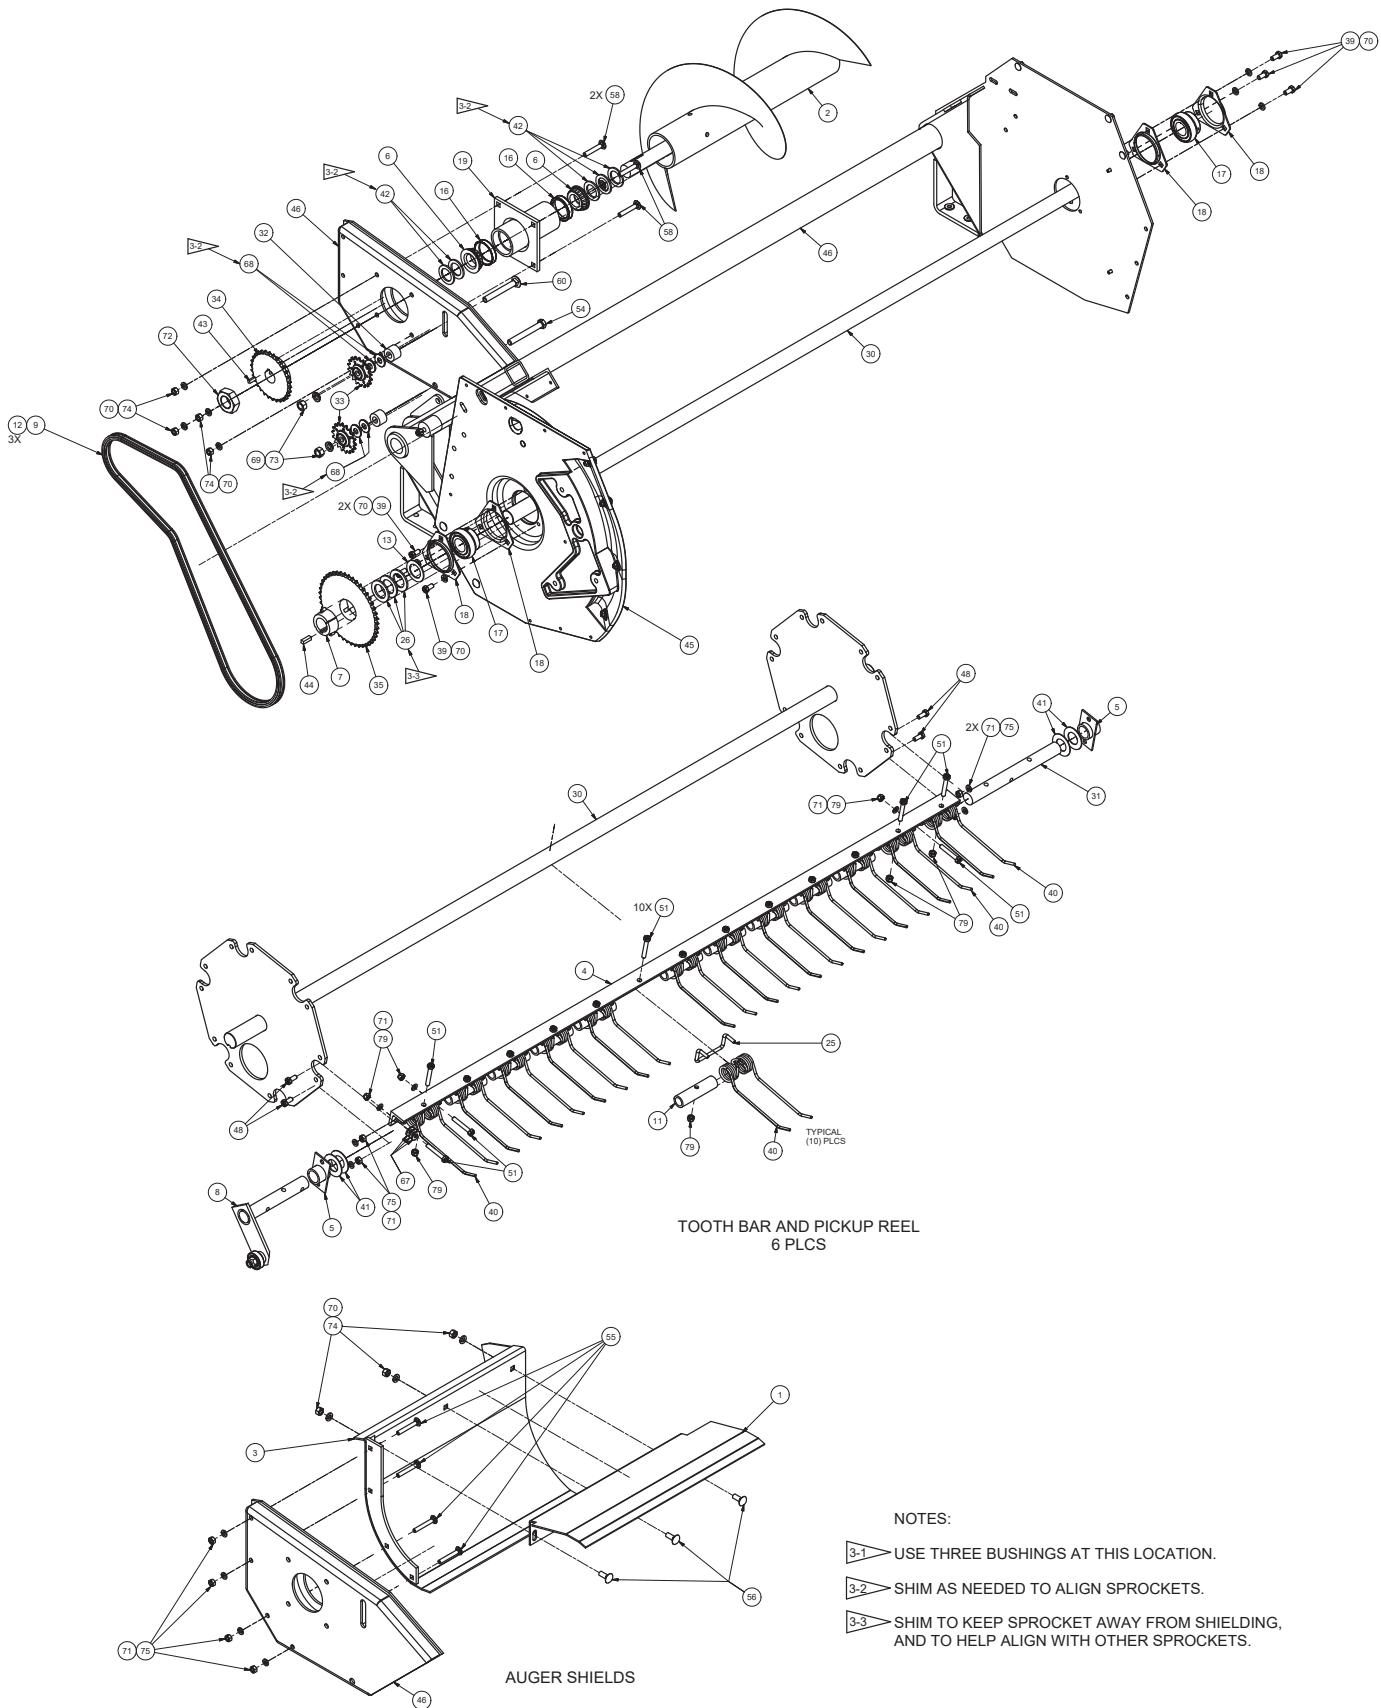
OUTSIDE STRIPPER AND UPPER PICKUP MOUNT

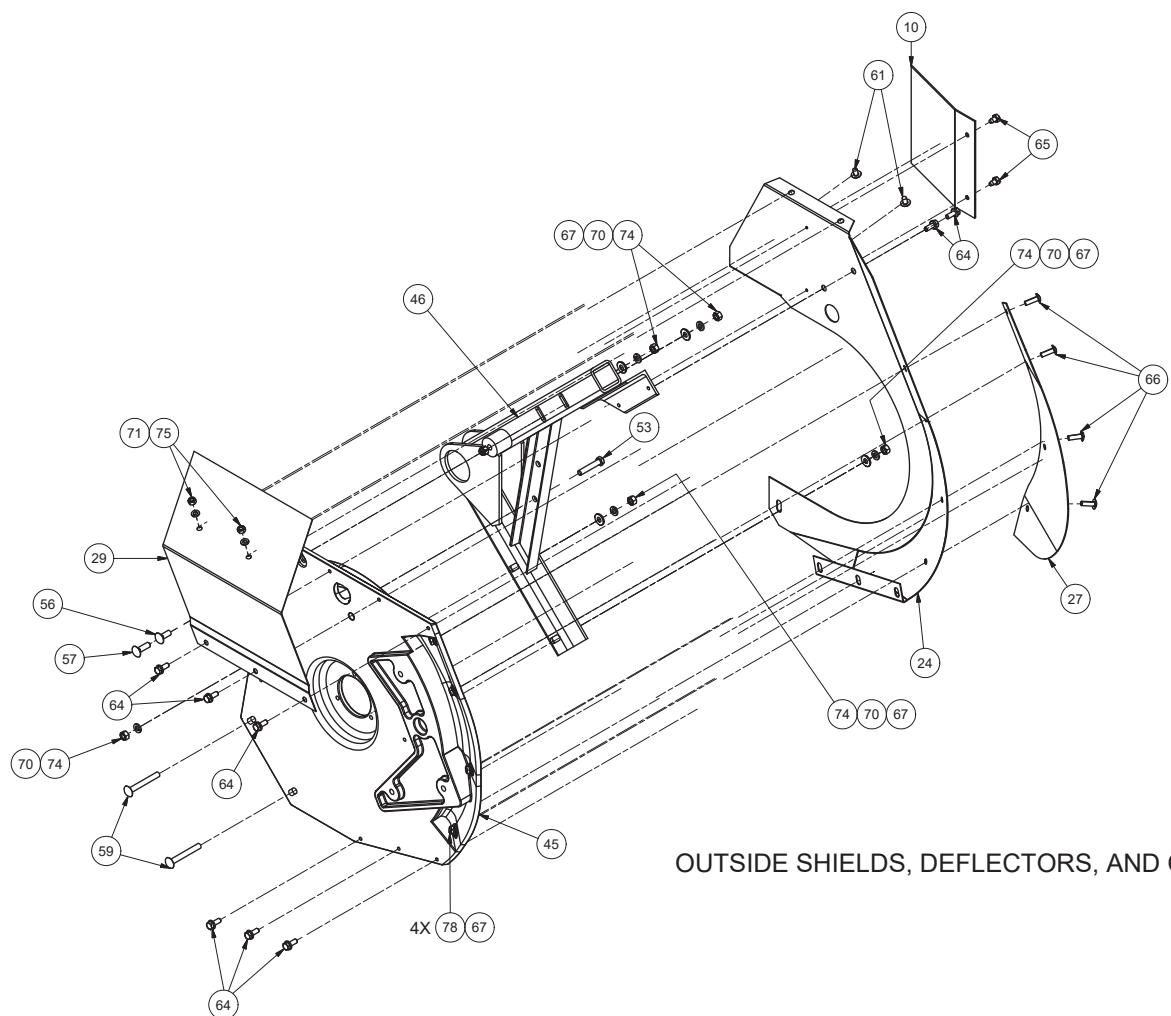


OUTSIDE SHIELDS, DEFLECTORS, AND CAST PIECE

Pickup Assembly, Super Sweep

Page 4 of 4




Cam Lever Assembly

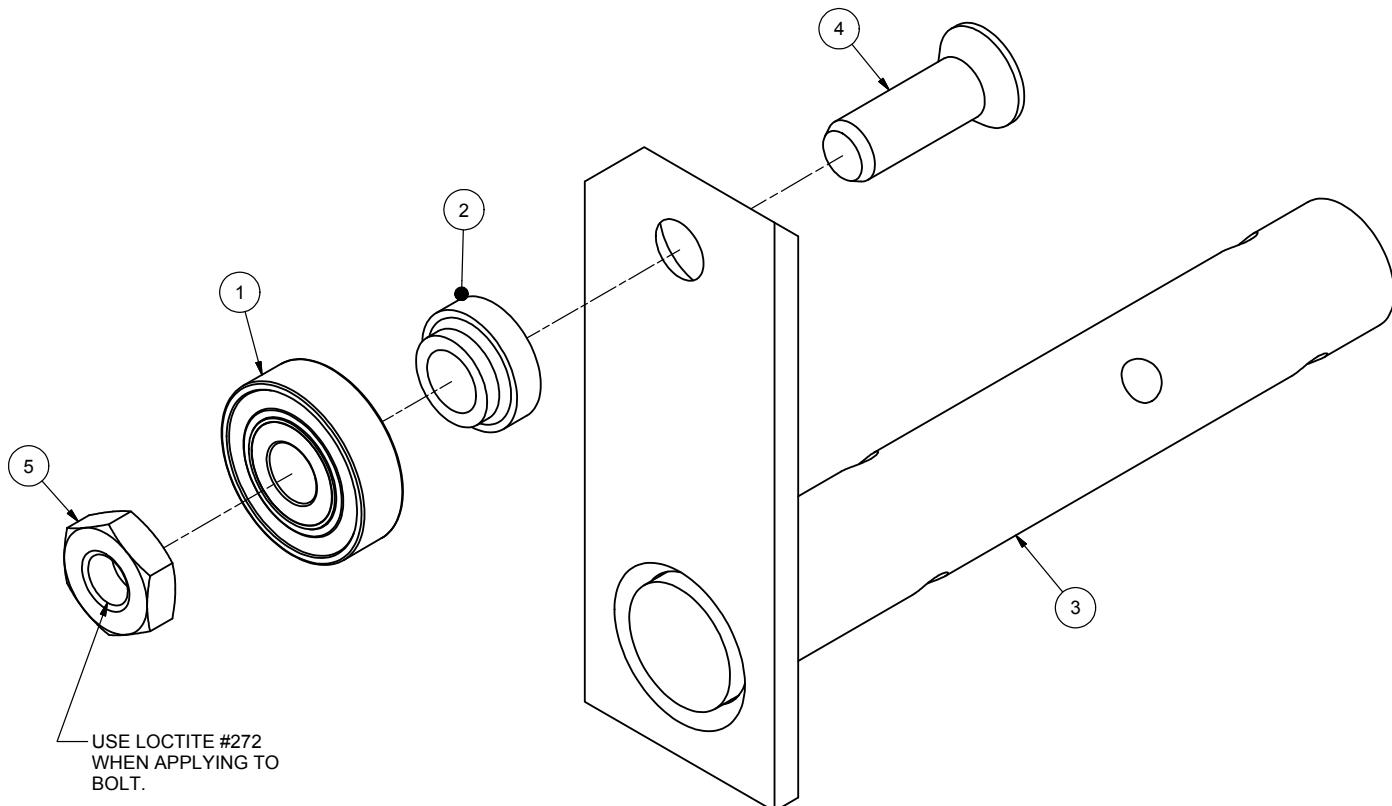

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	CAM0033355	1	Lever Assembly, Cam	4	222477	1	. Capscrew
2	BRG0002029	1	. Bearing	5	NCX0005000	1	. Nut, Flexlock
3	BSH0006231	1	. Bushing				
	LEV0033355	1	. Lever				

Rev C



(Manual) Spring, Pick Up Installation

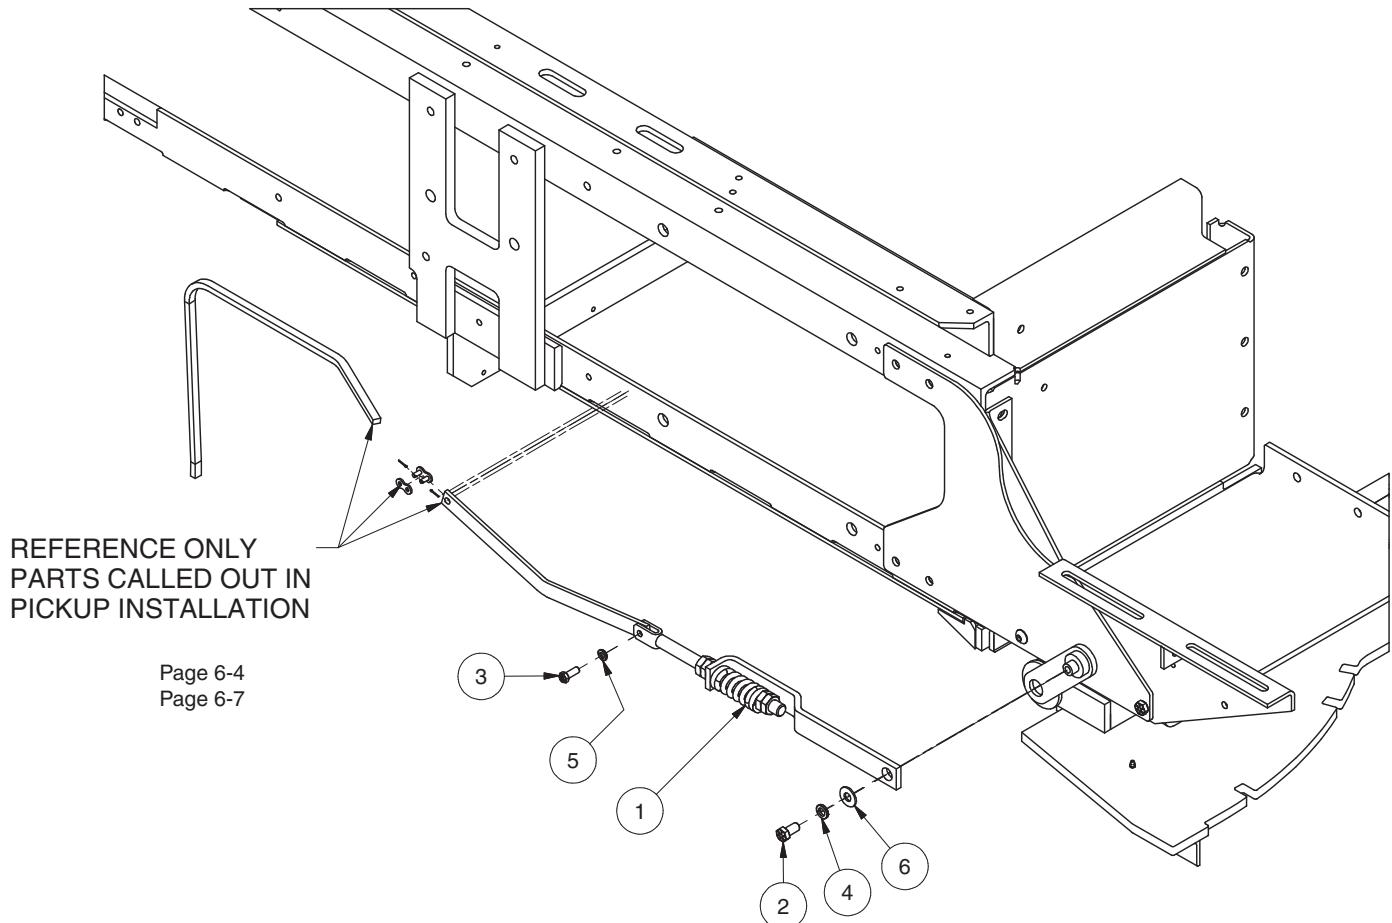

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	904646		Spring Installation, Pickup				
1	*a 902778	1	. Spring Assembly	5	234135	1	. Lockwasher
2	221560W	1	. Capscrew	6	223634	1	. Flat Washer
3	Y17C-0616	1	. Capscrew				
4	234665	1	. Lockwasher				
							*a See Separate Coverage (Page 6-17)

Rev C

Spring Assembly, Manual Pickup Lift

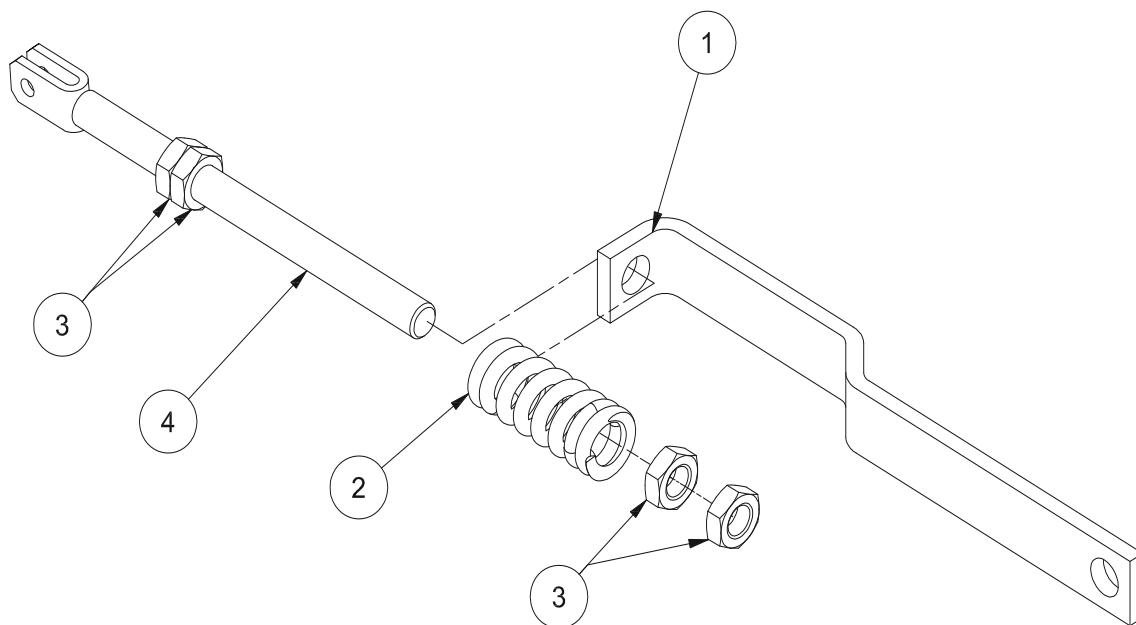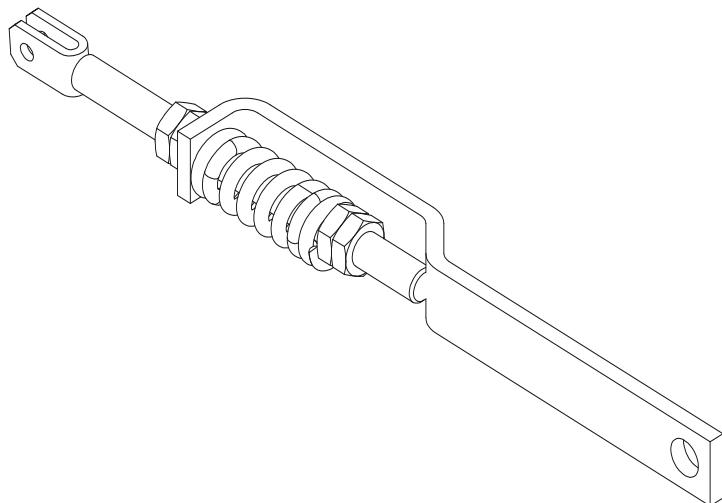


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902778			Spring Assembly				
1	BKT0016324	1	. Bracket	4	ROD0016321	1	. Rod, Adjust
2	F000007566	1	. Cushion Spring F/Lift Cable				
3	238381	4	. Jam Nut				

Rev C

Electric Pickup Lift, 14" Frame

Page 1 of 3

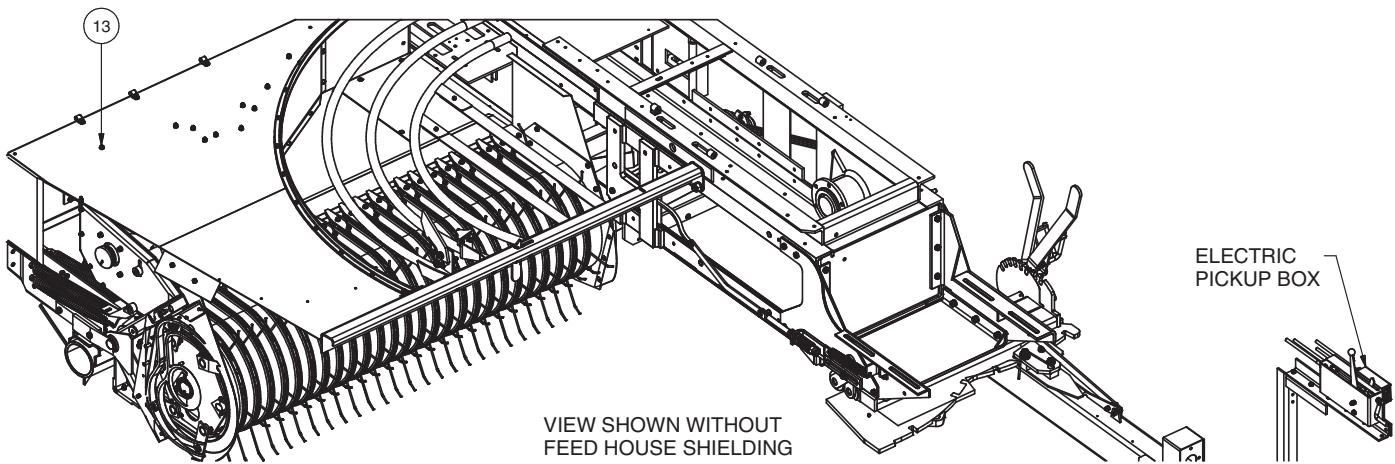



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0901973		Electric Pickup Lift				
*a	DOC0025950		. Wiring Diagram	12	SMS000018410		. Screw, Ser Flg
1	PLF0021082	1	. Bracket	13	00273802	12	. Nut, Serrated
2	ACT7102001	1	. Actuator	14	223587	2	. Locknut
3 *b	BOX0000100	1	. Control Box	15	209578	5	. Clamp
4	ELC0008296	1	. Cable, Electric Lift	16	ANC0009635	1	. Plate, Anchor
5	ELC0008297	1	. Cable	17	F000001517	1	. Spring, Trip
6	F000006804	2	. Clamp, Exhaust	18	SMS0000177	2	. Screw, Ser Flg
7 *c	902853	1	. Spring Assembly	19	256328	1	. Grommet
8	PLF0008206	1	. Bracket, Lift Arm				
9	PLF0820700	1	. Plate, LH Lift Arm				
10	PLF0820701	1	. Plate, RH Lift Arm				
11	221576W	2	. Capscrew				

*a See Separate Coverage (Page 6-24)
*b See Separate Coverage (Page 6-25)
*c See Separate Coverage (Page 6-32)

Rev DD


Electric Pickup Lift, 14" Frame

Page 2 of 3

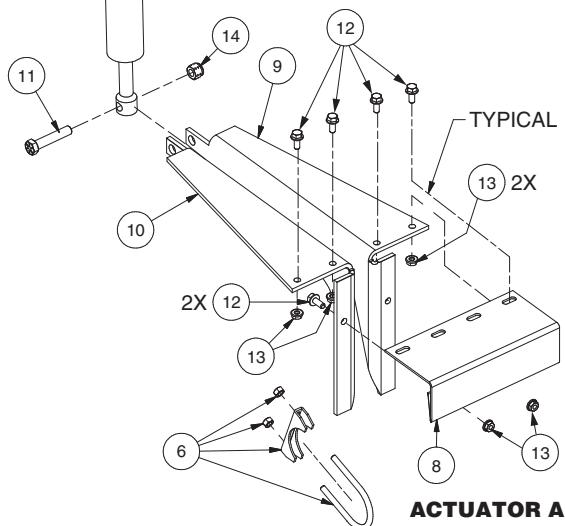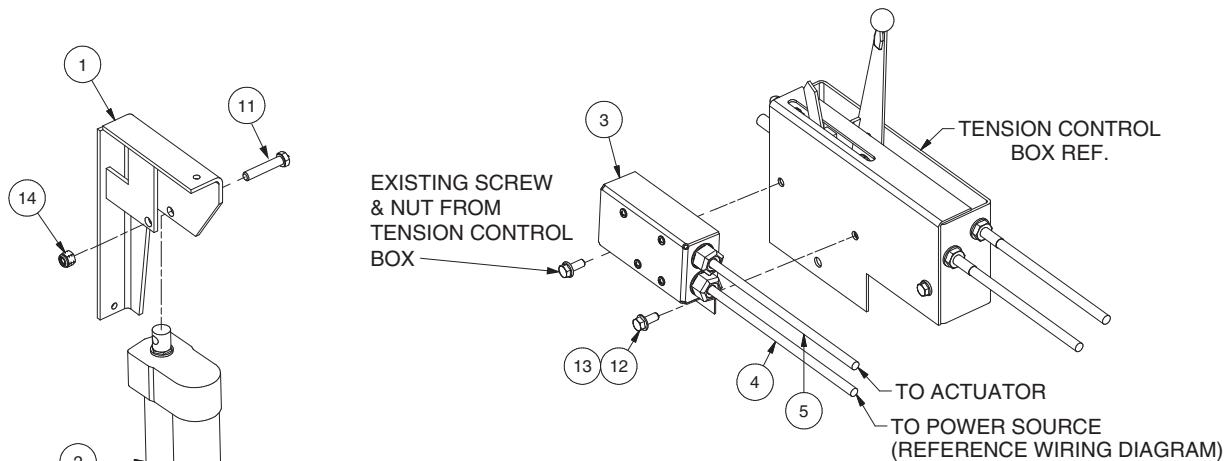

ELECTRICAL PICKUP BOX

- NOTES:**
- 1-1 (5) CLAMPS TO MOUNT TO TOP OF FEED HOUSE.
- 1-2 HARDWARE IS REUSED FROM EXISTING MANUAL PICKUP LIFT ASSEMBLY.
- 1-3 ASSEMBLY PHOTOS ARE AVAILABLE FOR REFERENCE.
DRAWING SHOWS FOP0000148.

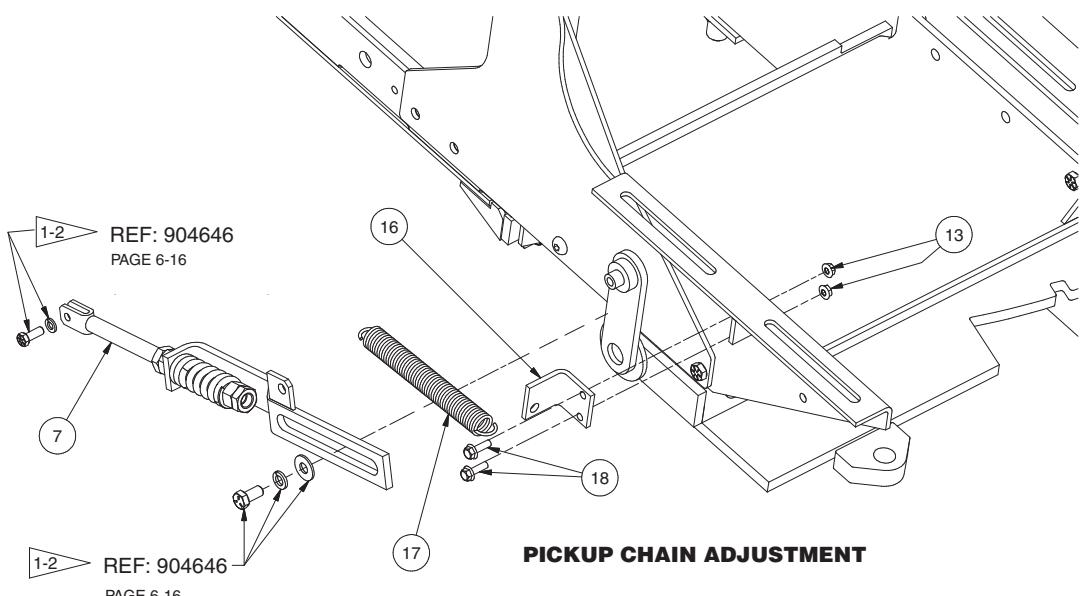


Electric Pickup Lift, 14" Frame

Page 3 of 3


NOTES:

- 2-1 FEED HOUSE TOP SHIELD NOT SHOWN FOR CLARITY.
- 2-2 ELECTRIC PICKUP CABLE ROUTING (NOTES 2-2 TO 2-5)
- 2-3 CABLE GOES ALONG LEFT SIDE OF BALER.
- 2-4 CROSSES OVER TO RIGHT SIDE OF BALER BEHIND FUEL TANK.
- 2-5 FOLLOWS TOP EDGE OF FEED HOUSE, USE CLAMPS TO SECURE.
- 2-6 GOES THROUGH GROMMETED HOLE INTO FEED HOUSE.

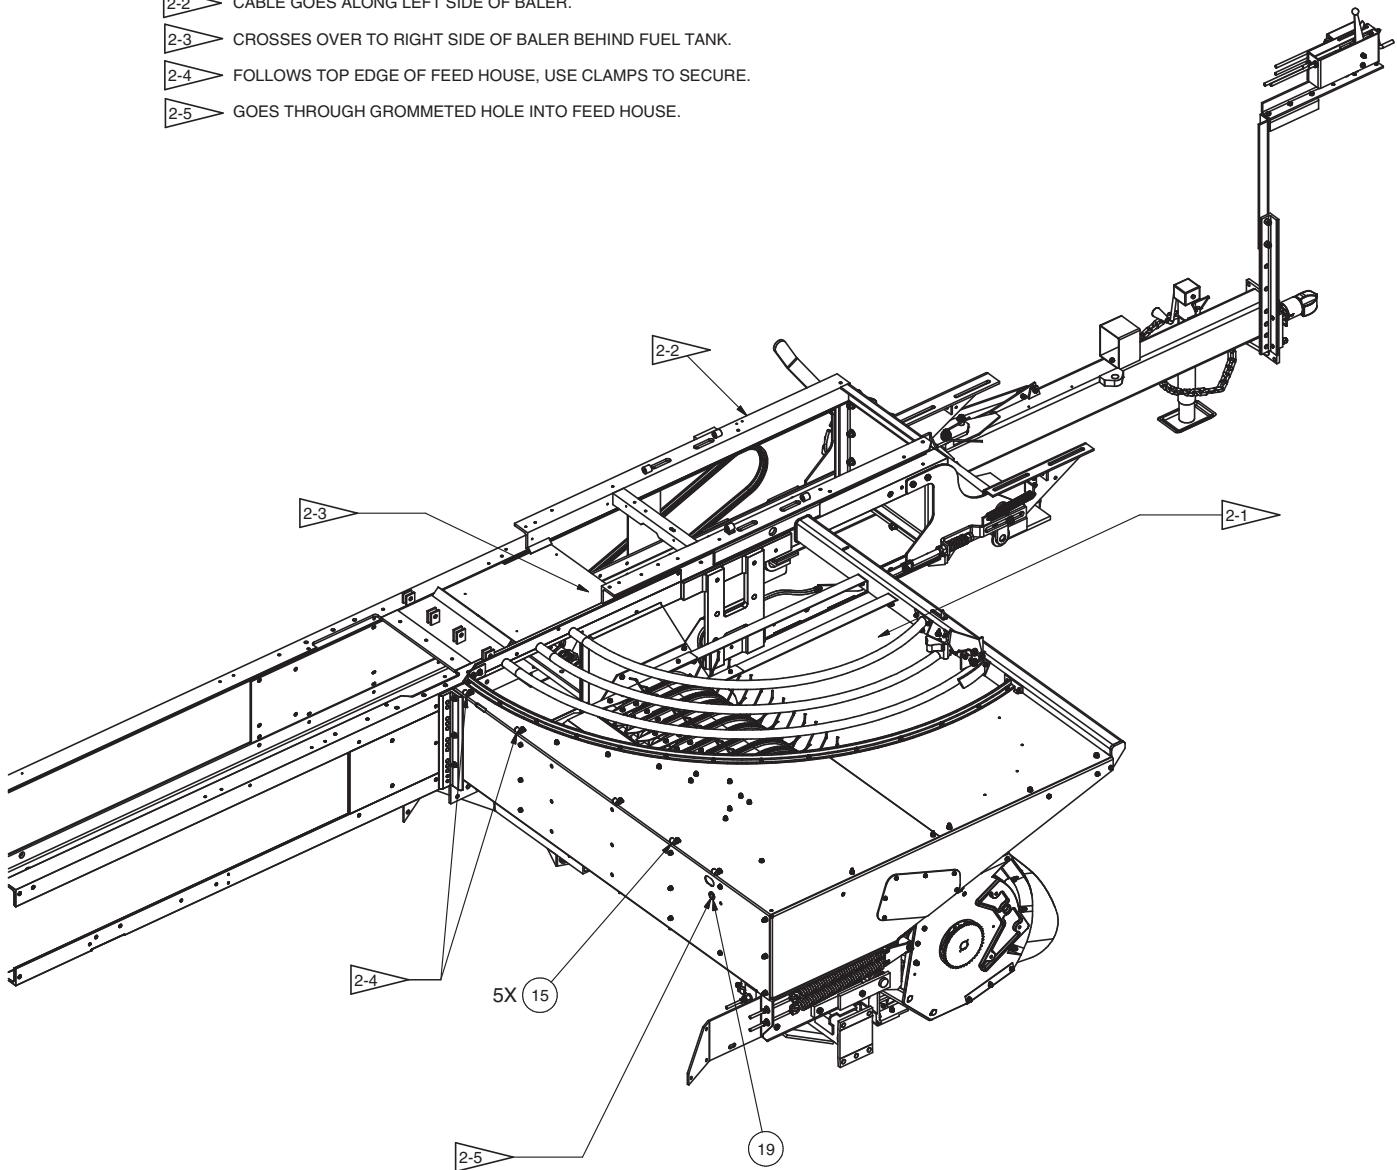

Electric Pickup Lift, 16" Frame

Page 1 of 3

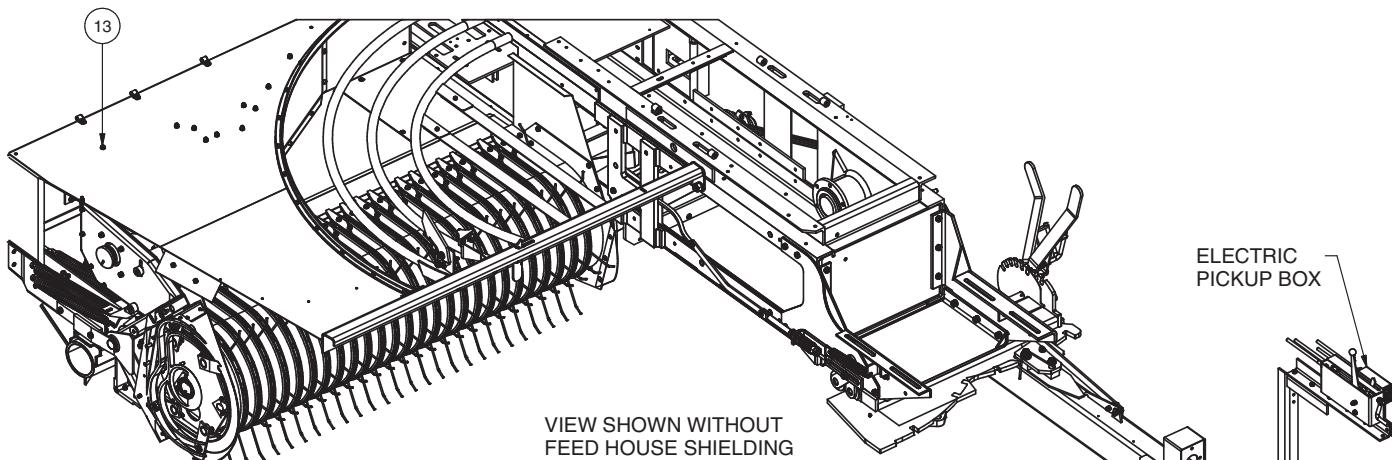

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000148		Electric Pickup Lift				
*a	DOC0025950		. Wiring Diagram	12	SMS000018410		. Screw, Ser Flg
1	PLF0018168	1	. Bracket	13	00273802	12	. Nut, Serrated
2	ACT7102001	1	. Actuator	14	223587	2	. Locknut
3 *b	BOX0000100	1	. Control Box	15	209578	5	. Clamp
4	ELC0008296	1	. Cable, Electric Lift	16	ANC0009635	1	. Plate, Anchor
5	ELC0008297	1	. Cable	17	F000001517	1	. Spring, Trip
6	F000006804	2	. Clamp, Exhaust	18	SMS0000177	2	. Screw, Ser Flg
7 *c	902853	1	. Spring Assembly	19	256328	1	. Grommet
8	PLF0008206	1	. Bracket, Lift Arm				
9	PLF0820700	1	. Plate, LH Lift Arm				
10	PLF0820701	1	. Plate, RH Lift Arm				
11	221576W	2	. Capscrew				

*a See Separate Coverage (Page 6-24)


*b See Separate Coverage (Page 6-25)

*c See Separate Coverage (Page 6-32)


Rev JD

Electric Pickup Lift, 16" Frame


Page 2 of 3

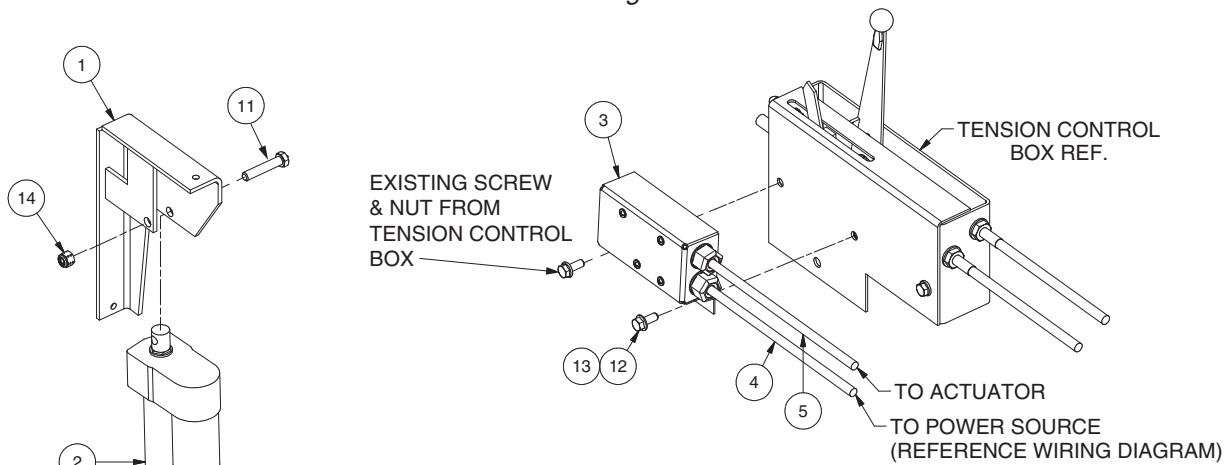

ELECTRICAL PICKUP BOX

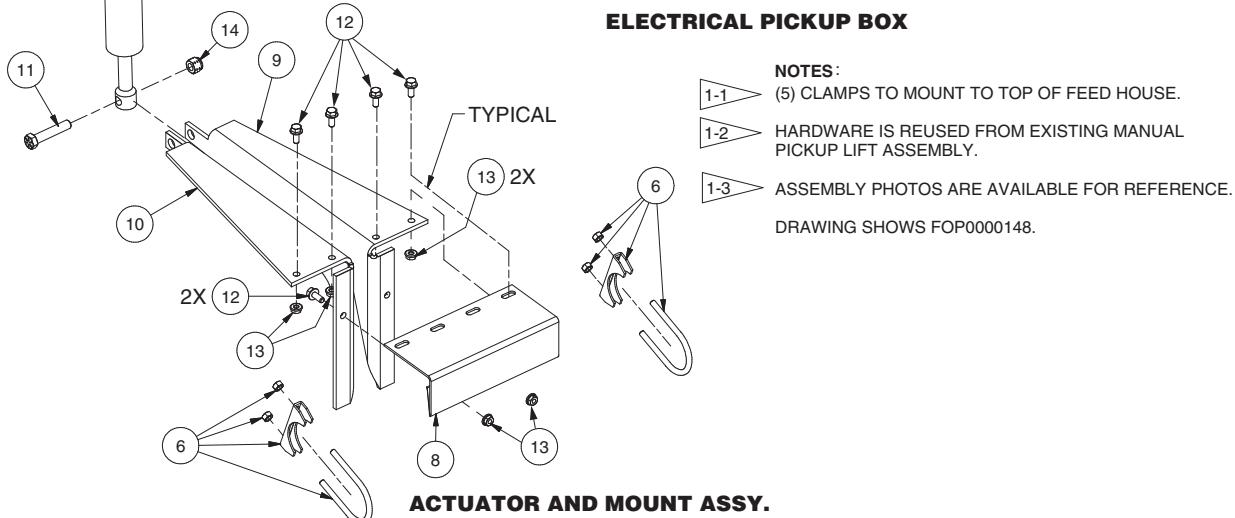

ACTUATOR AND MOUNT ASSY.

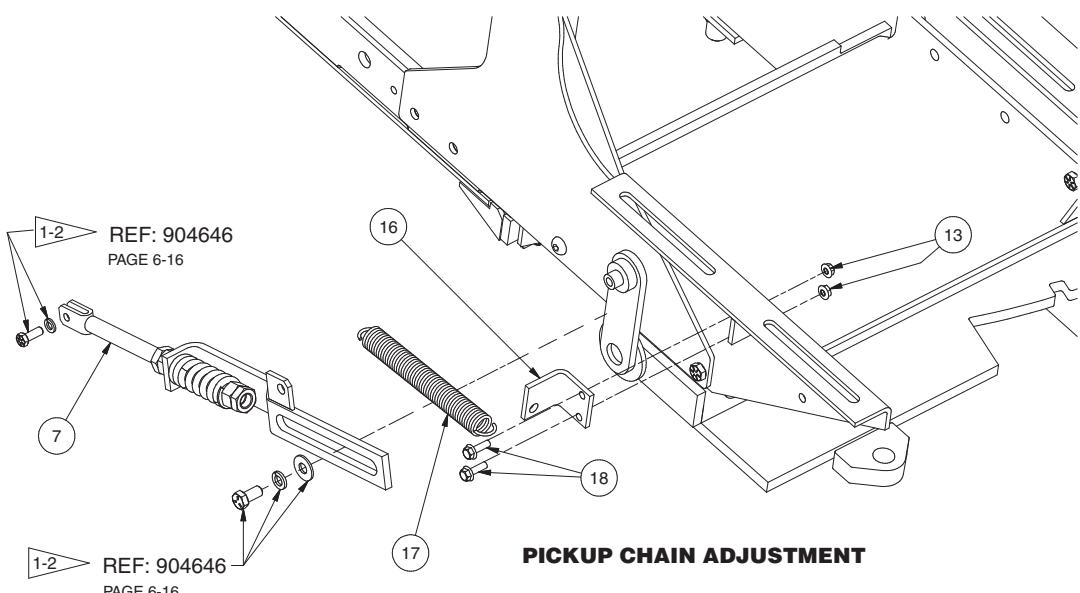


PICKUP CHAIN ADJUSTMENT

Electric Pickup Lift, 16" Frame


Page 3 of 3

NOTES:


- 2-1 > FEED HOUSE TOP SHIELD NOT SHOWN FOR CLARITY.
- 2-2 > ELECTRIC PICKUP CABLE ROUTING (NOTES 2-2 TO 2-5)
- 2-3 > CABLE GOES ALONG LEFT SIDE OF BALER.
- 2-4 > CROSSES OVER TO RIGHT SIDE OF BALER BEHIND FUEL TANK.
- 2-5 > FOLLOWS TOP EDGE OF FEED HOUSE, USE CLAMPS TO SECURE.
- 2-6 > GOES THROUGH GROMMETED HOLE INTO FEED HOUSE.

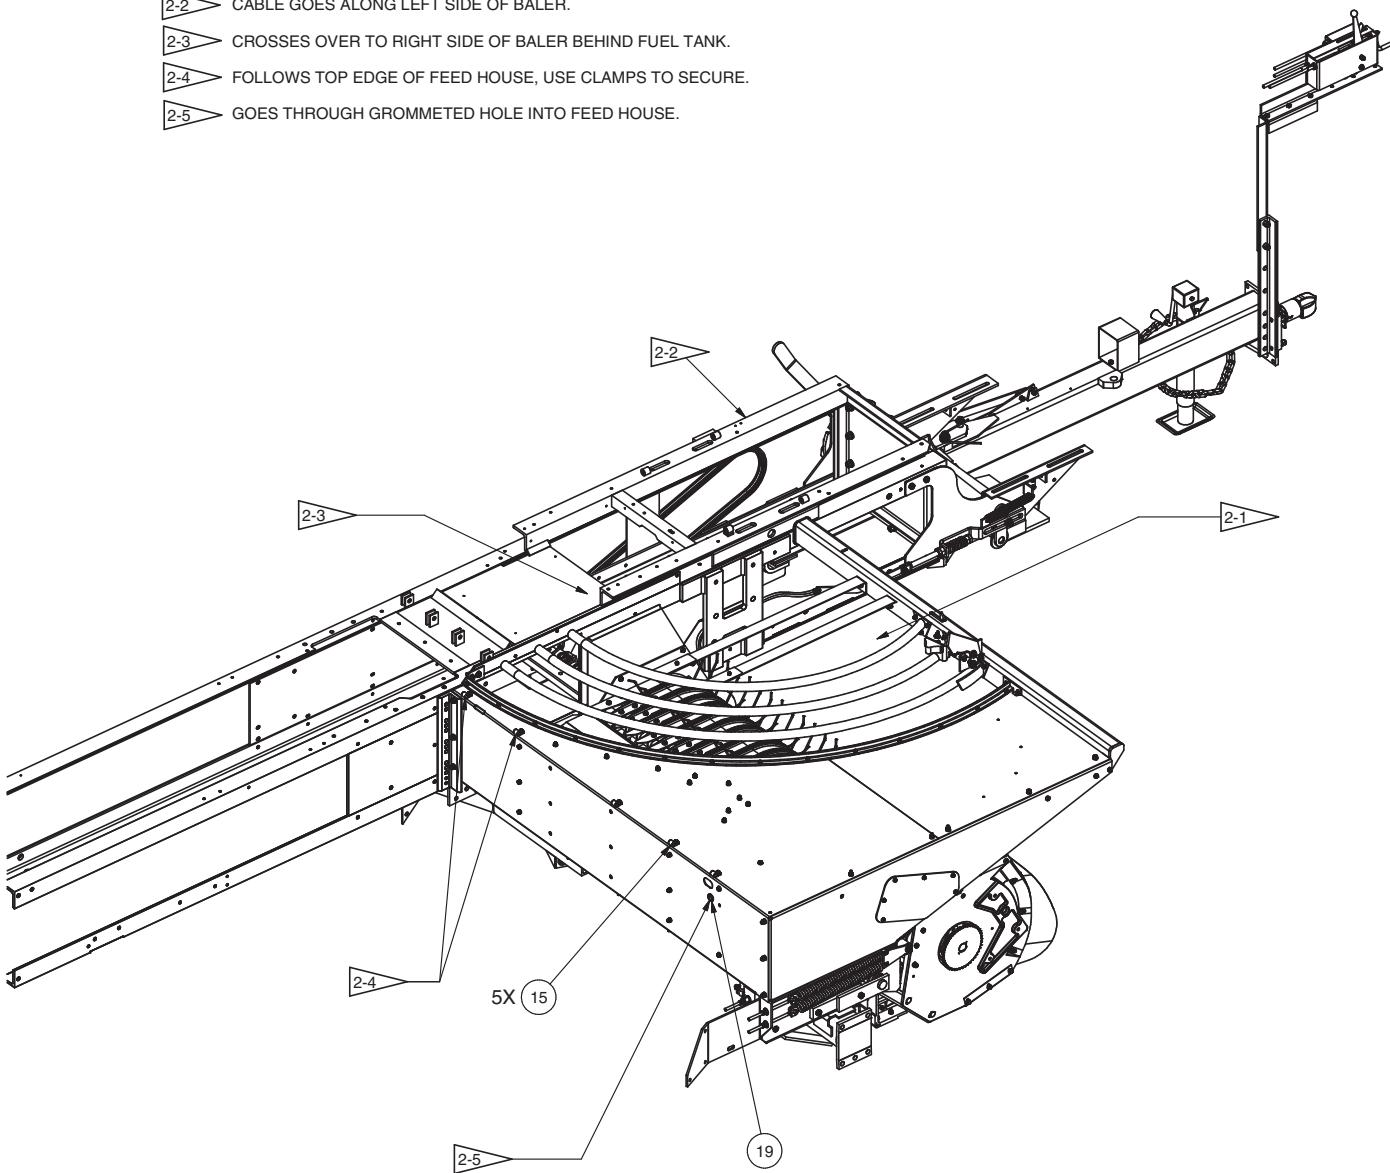

Wiring Diagram, Control Box

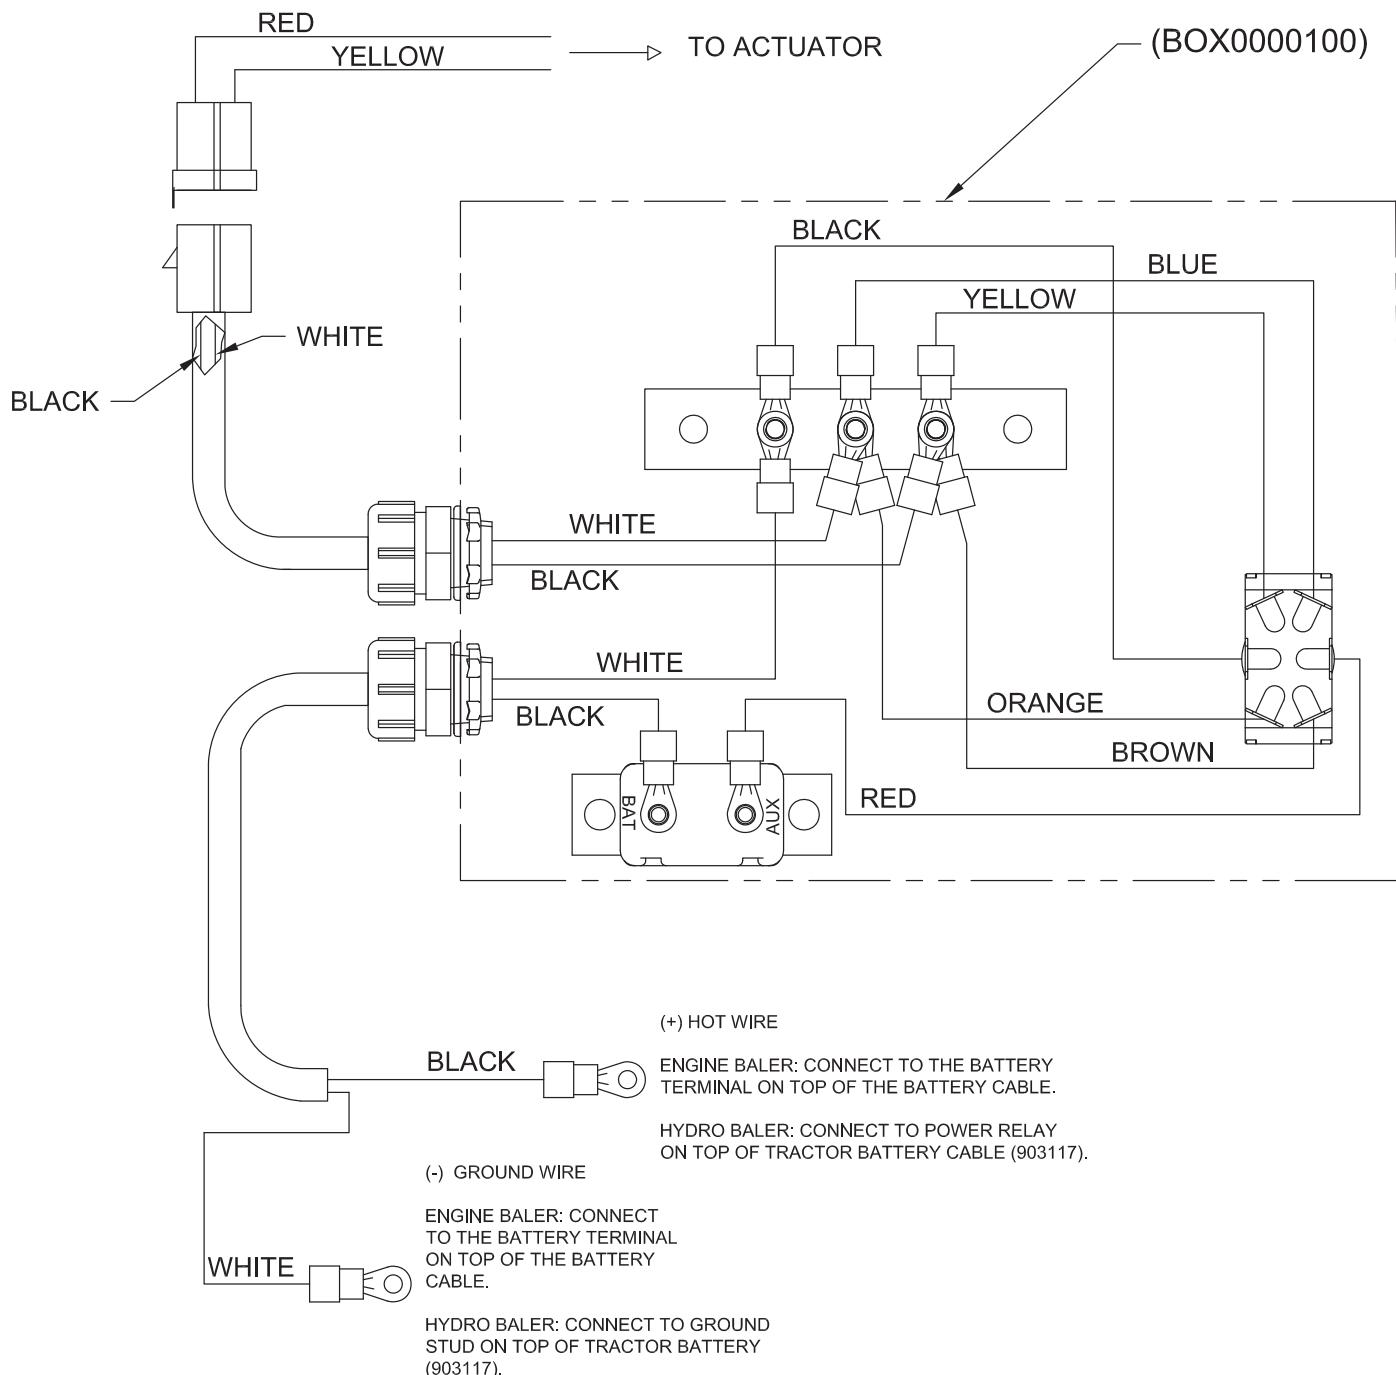


Electric Lift Control Box Assembly

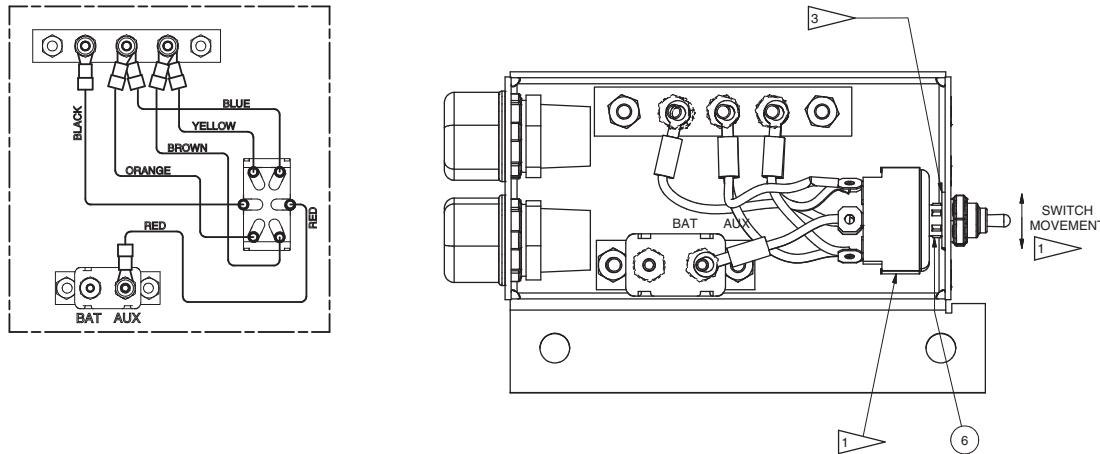

NOTES:

-  1 SWITCH CAN BE MOUNTED IN EITHER DIRECTION,
BUT MUST HAVE DIRECTION OF MOVEMENT SHOWN.
 -  3 THREADED RING SUPPLIED WITH SWITCH GOES ON SWITCH
AFTER HEX NUT (ITEM #19) IS INSTALLED ON SWITCH.
THEN SWITCH IS PLACED IN BOX.


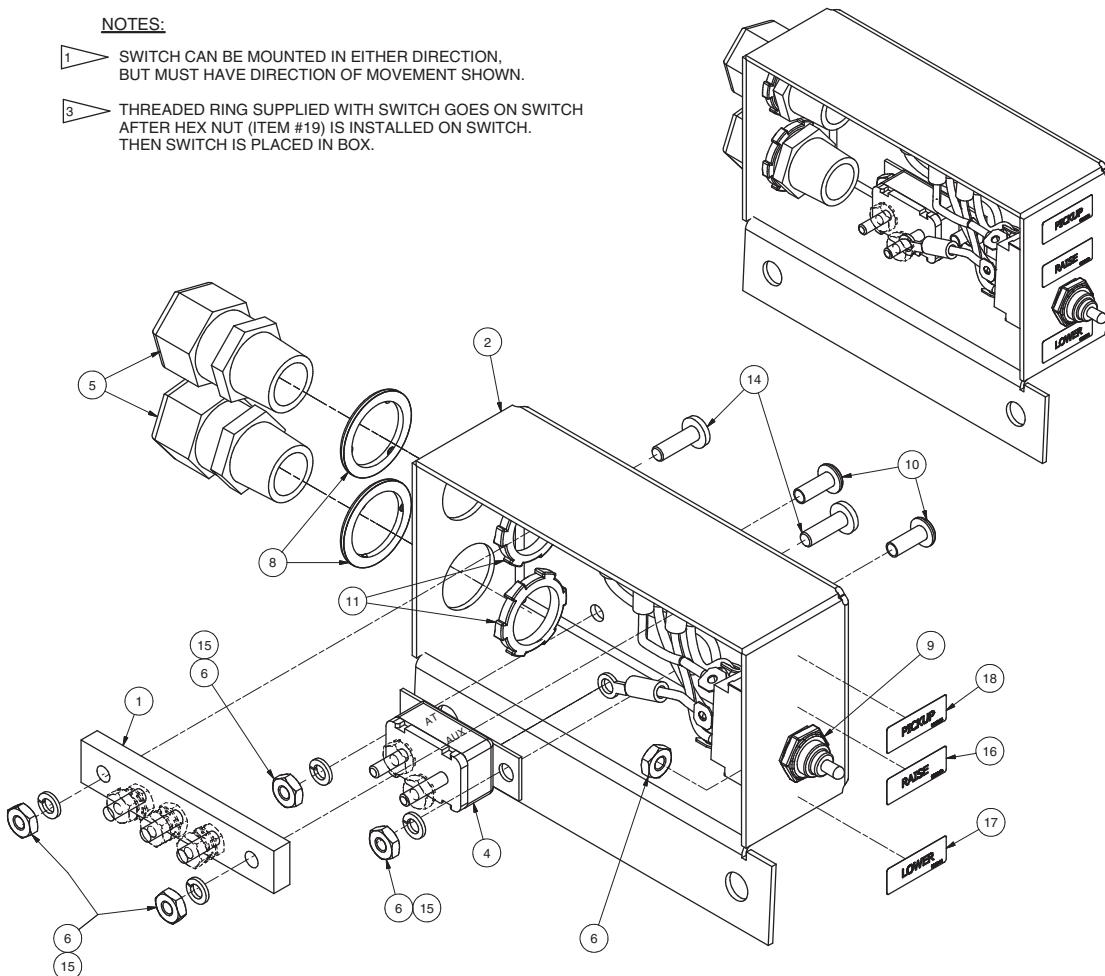


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	BOX0000100		Control Box Assembly, Elec Lift				
1	03-159	1	. Block, Terminal	10	230640	2	. Machine Screw
2	BOX0008202	1	. Control Box	11	NMS0000150	2	. Conduit Locknut
4	085-0222	1	. Circuit Breaker, 40A	14	00109451	2	. Screw, Machine
5	227374	2	. Connector, Cord	15	18423W	4	. Washer
6	220044	5	. Hex Nut	16	905043	1	. Decal, Raise
8	RNG0005262	2	. Ring, Seal	17	905044	1	. Decal, Lower
9	903731	1	. Switch Assembly, Elec Lift	18	905045	1	. Decal, Pickup


Rev H

Pickup Lift, 14" W/Engine, Hydro


Page 1 of 3

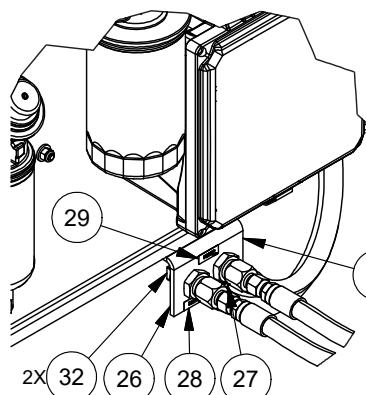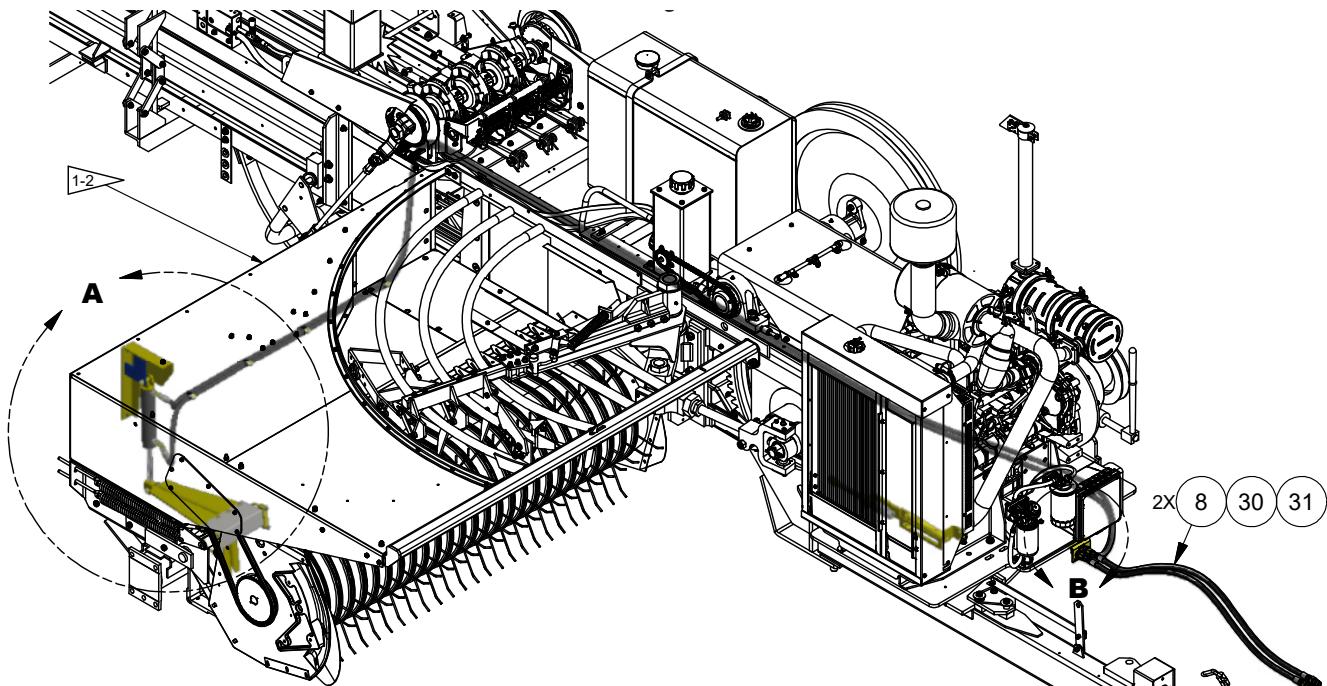

DETAIL B
T4f ENGINE CONFIGURATIONS

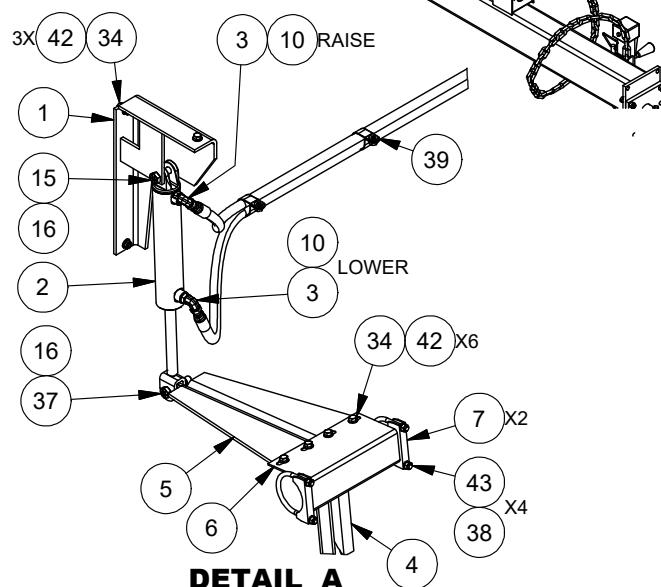

DETAIL A

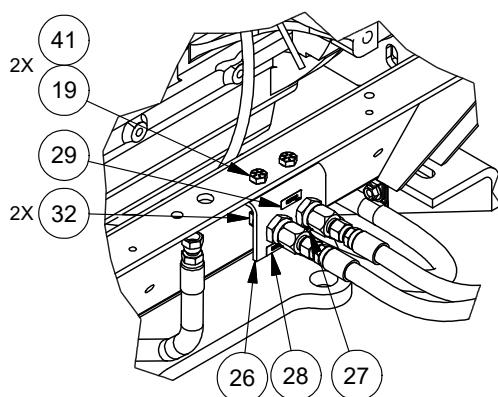

DETAIL B
T4i ENGINE CONFIGURATIONS

NOTES:

- 1-1. FOP0910436 IS SHOWN, REFER TO CHART ABOVE FOR MORE CONFIGURATIONS.
- 1-2. HOSE ROUTED ON THE REAR BOTTOM EDGE OF FEEDER HOUSE

Pickup Lift, 14" W/Engine, Hydro

Page 2 of 3

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0905106		Hydraulic PU Lift Inst				
1	900059	1	. Bracket	29	905045	1	. Decal, Pickup
2	*a Y12.337	1	. Cylinder	30	CPL0080104	2	. Coupler, Quick
	Y056831	1	. Seal Kit	31	226904	2	. Fitting
3	209409	2	. Fitting	32	209596	2	. Fitting
4	PLF0820700	1	. Plate, LH Lift Arm	33	BRG0000128	1	. Bearing
5	PLF0820701	1	. Plate, RH Lift Arm	34	SMS0000184	9	. Screw
6	PLF0008206	1	. Bracket, Lift Arm	35	SMS0000177	1	. Screw
7	F000006804	2	. Clamp, Exhaust	36	R13810993	2	. Capscrew
8	HOS0034365	2	. Hose Assembly	37	221574W	1	. Capscrew
10	257423	2	. Hose Assembly	38	R13812513	4	. Lockwasher
11	F000001517	1	. Spring, Trip	39	223428	4	. Washer
12	*b 902853	1	. Spring Assembly	40	264150W	2	. Nut
13	ANC0009635	1	. Plate, Anchor	41	156133W	2	. Locknut
15	R13809381	1	. Capscrew	42	191534W	14	. Nut
16	223587	2	. Nut, Lock	43	221705W	4	. Hex Nut
19	Y17C-0616	2	. Capscrew				
24	R2528352	4	. Clip, Insulated				
25	209588	2	. Clip, Insulated				
26	905228	1	. Bracket				
27	905043	1	. Decal, Raise				
28	905044	1	. Decal, Lower				


Rev BB

*a Cylinder F000006724 uses service kit 910375

*b See Separate Coverage (Page 6-32)



Pickup Lift, 14" W/Engine, Hydro

Page 3 of 3

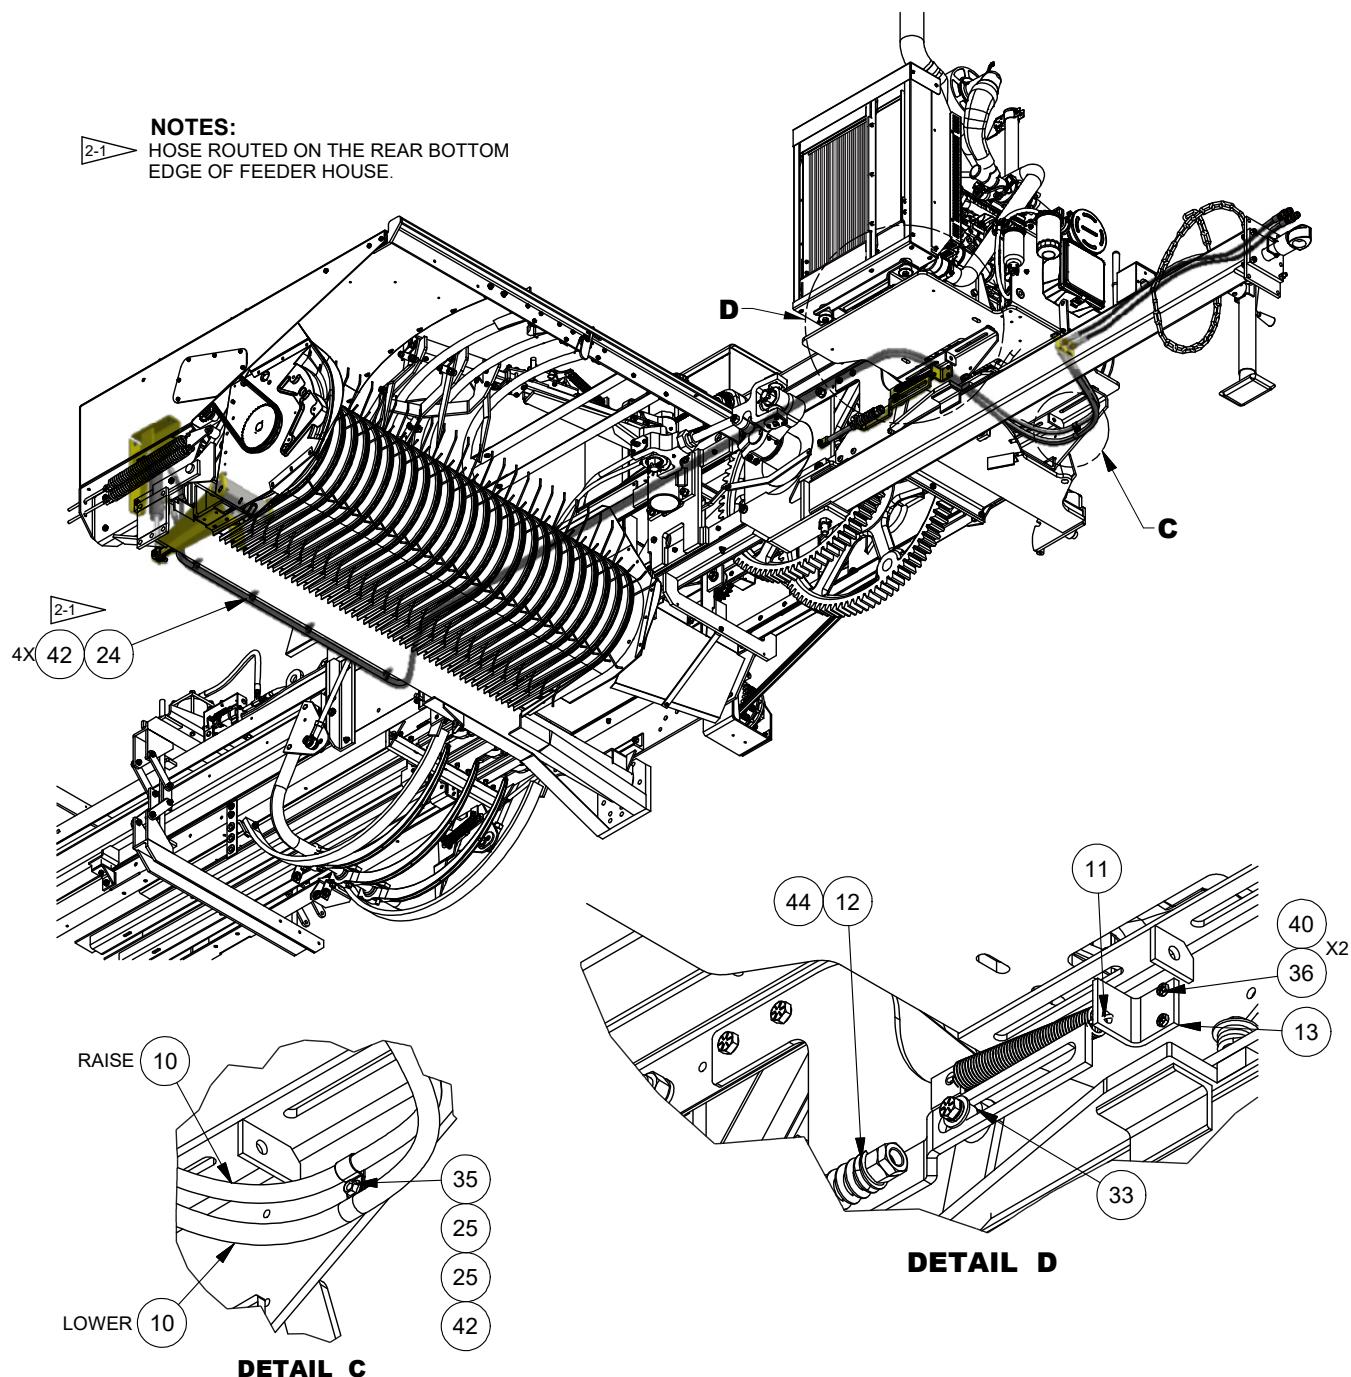


Pickup Lift, 16" W/Engine, Hydro


Page 1 of 3

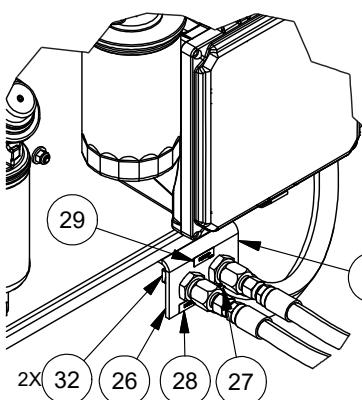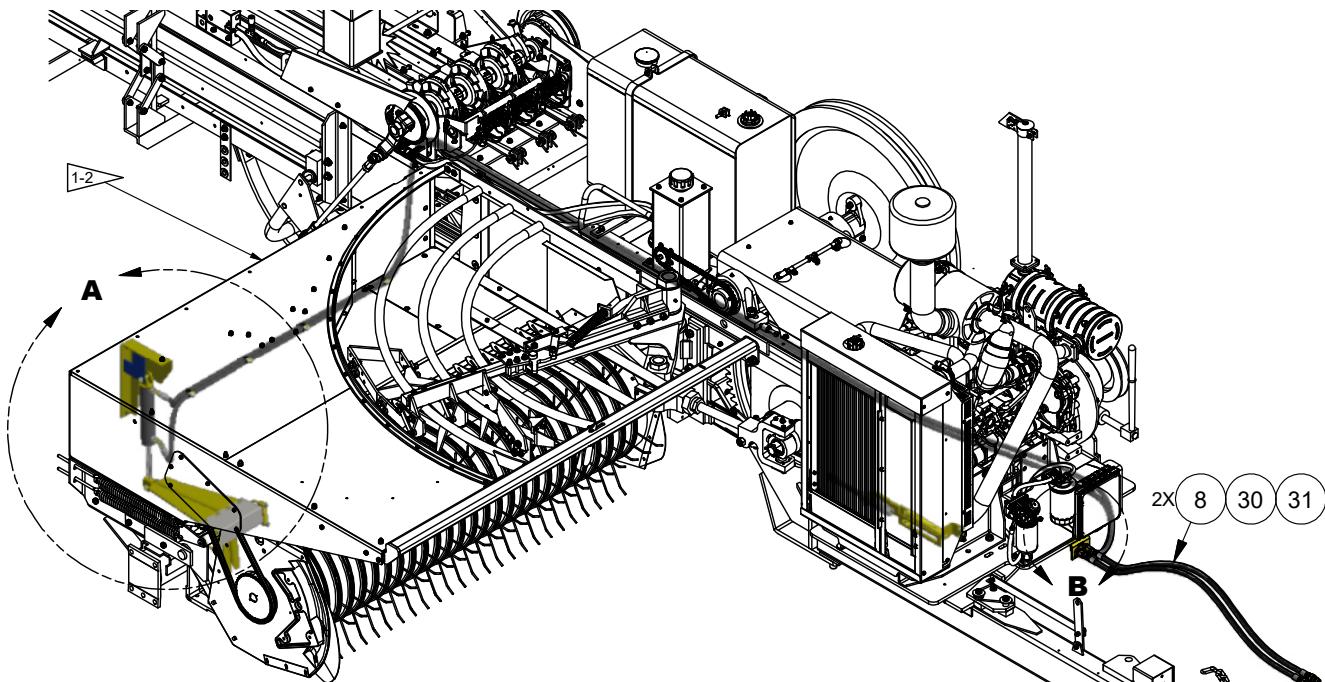

DETAIL B
T4f ENGINE CONFIGURATIONS

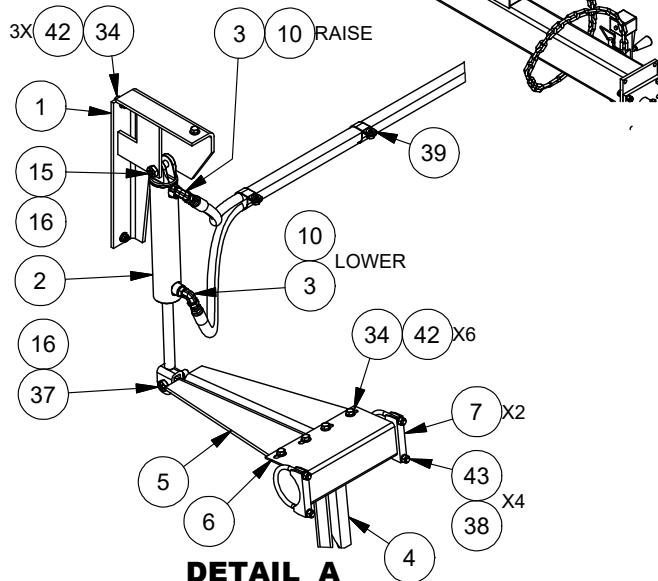

DETAIL A

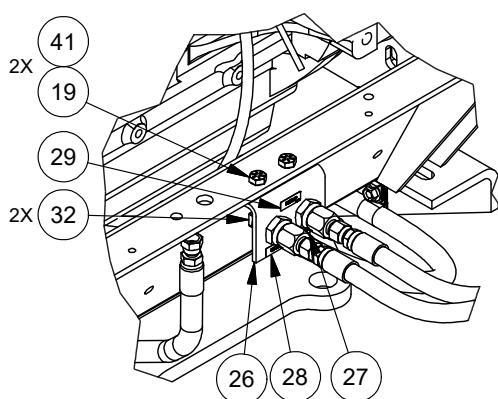

DETAIL B
T4i ENGINE CONFIGURATIONS

NOTES:

1-1. FOP0910436 IS SHOWN, REFER TO CHART ABOVE FOR MORE CONFIGURATIONS.

1-2. HOSE ROUTED ON THE REAR BOTTOM EDGE OF FEEDER HOUSE

Pickup Lift, 16" W/Engine, Hydro

Page 2 of 3

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
FOP0908654 Hydraulic PU Lift Inst							
1	PLF0018168	1	. Bracket	29	905045	1	. Decal, Pickup
2	*a Y12.337	1	. Cylinder	30	CPL0080104	2	. Coupler, Quick
	Y056831	1	. . Seal Kit	31	226904	2	. Fitting
3	209409	2	. Fitting	32	209596	2	. Fitting
4	PLF0820700	1	. Plate, LH Lift Arm	33	BRG0000128	1	. Bearing
5	PLF0820701	1	. Plate, RH Lift Arm	34	SMS0000184	9	. Screw
6	PLF0008206	1	. Bracket, Lift Arm	35	SMS0000177	1	. Screw
7	F000006804	2	. Clamp, Exhaust	36	R13810993	2	. Capscrew
8	HOS0034365	2	. Hose Assembly	37	221574W	1	. Capscrew
10	257423	2	. Hose Assembly	38	R13812513	4	. Lockwasher
11	F000001517	1	. Spring, Trip	39	223428	4	. Washer
12	*b 902853	1	. Spring Assembly	40	264150W	2	. Nut
13	ANC0009635	1	. Plate, Anchor	41	156133W	2	. Locknut
15	R13809381	1	. Capscrew	42	191534W	14	. Nut
16	223587	2	. Nut, Lock	43	221705W	4	. Hex Nut
19	Y17C-0616	2	. Capscrew				
24	R2528352	4	. Clip, Insulated				
25	209588	2	. Clip, Insulated				
26	905228	1	. Bracket				
27	905043	1	. Decal, Raise				
28	905044	1	. Decal, Lower				


Rev AB

*a Cylinder F000006724 uses service kit 910375


*b See Separate Coverage (Page 6-32)

Pickup Lift, 16" W/Engine, Hydro

Page 3 of 3

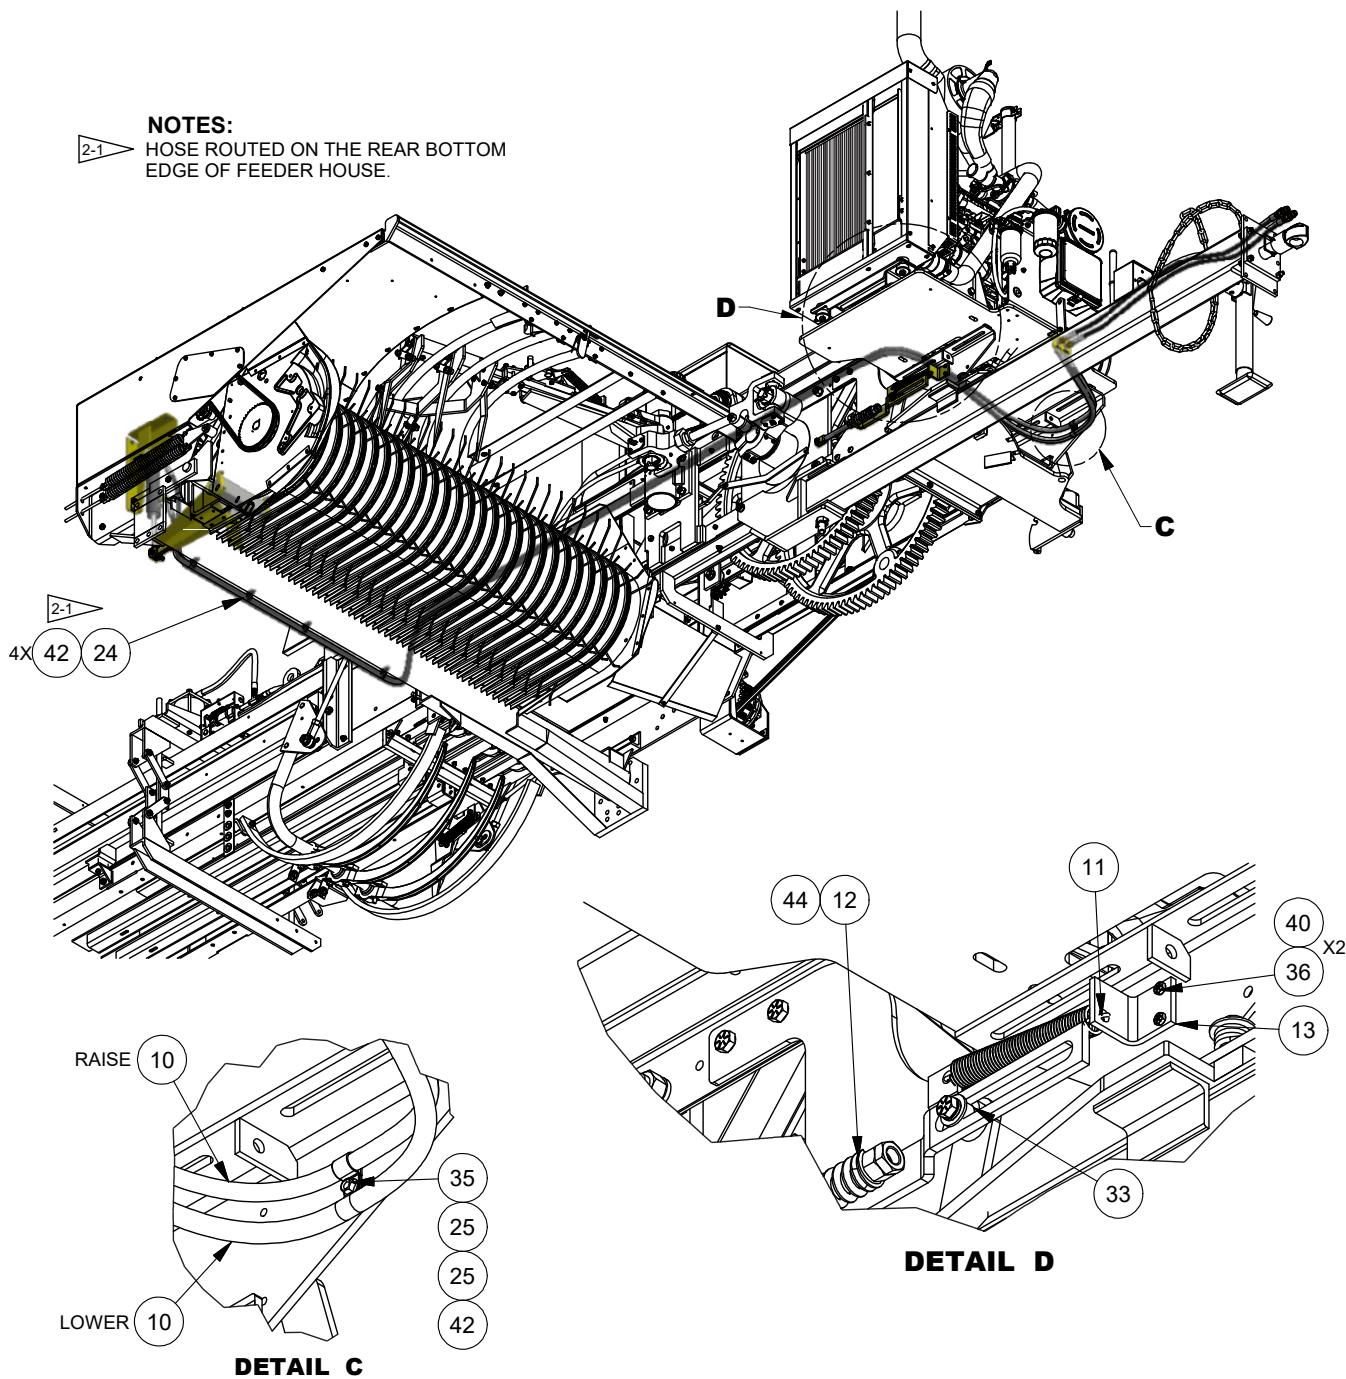

Spring Assembly (Electric/Hyd Pickup Lift)

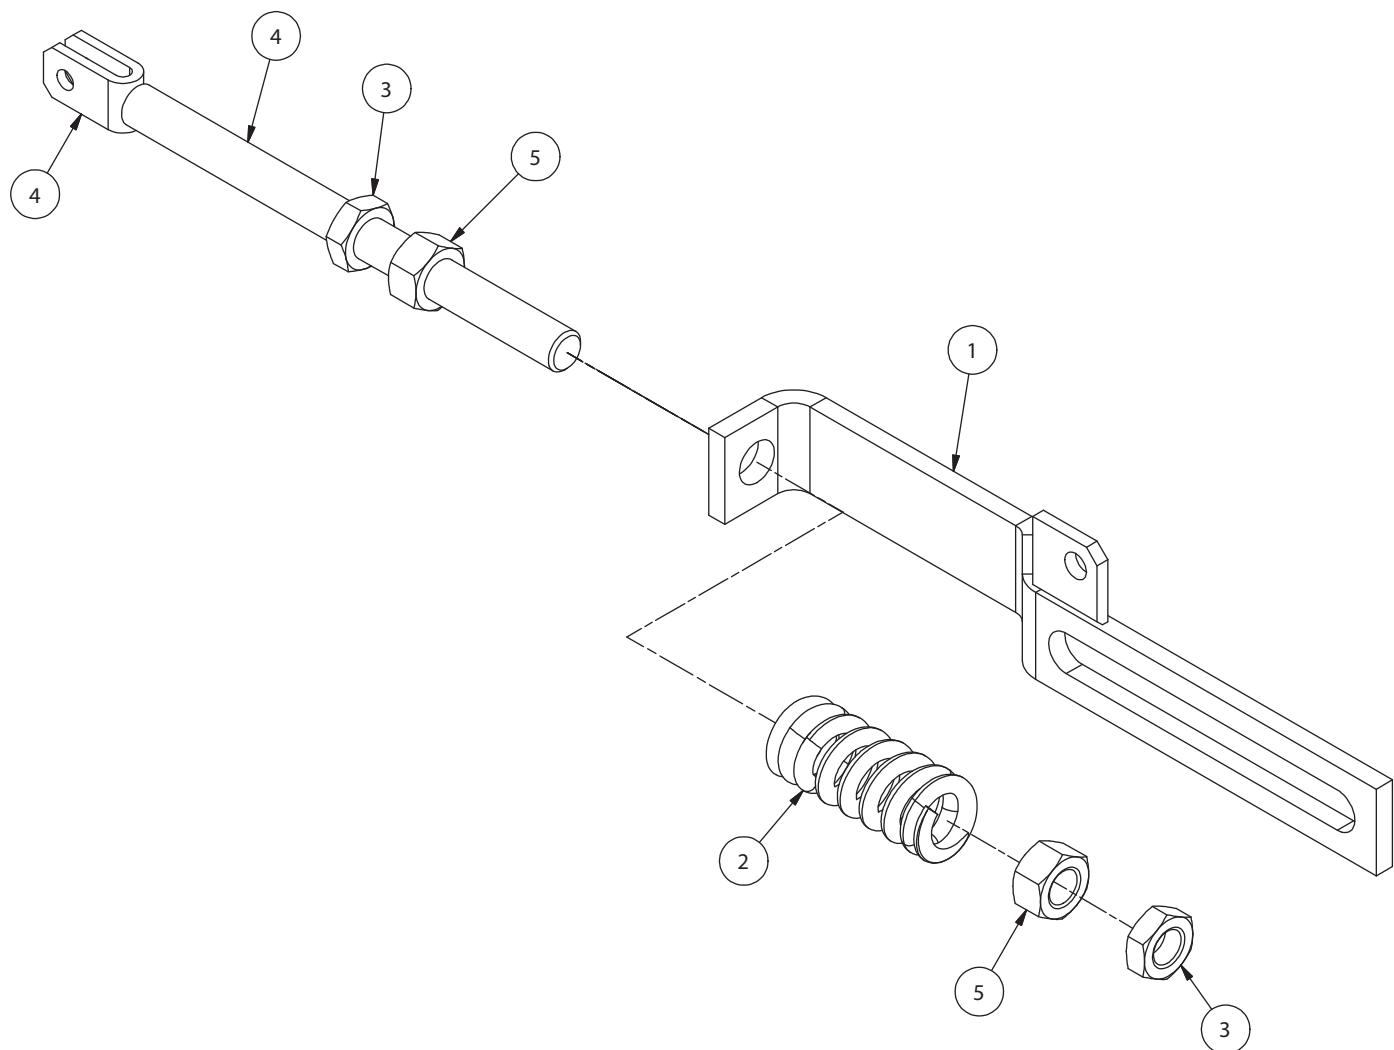

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	902853	1	Spring Assembly	4	ROD0016321	1	. Rod, Adjust
2	BKT0008288	1	. Bracket	5	00220081	2	. Hex Nut
3	F000007566	1	. Cushion Spring F/Lift Cable				
	238381	2	. Jam Nut				

Rev A

Section 7


Feeder & Feed Fork

Feed Arm Drive/Fork Installation, 14" 2-Tie	7-3
. Feedfork Assembly, 14" 2-Tie.....	7-5
Feed Arm Drive/Fork Installation, 16" 2-Tie	7-7
. Feedfork Assembly, 16" 2-Tie.....	7-9
. Connecting Rod Assembly.....	7-11
. Pivot Shaft Assembly, Feed Arm.....	7-12
Feed House Installation, 14" Chamber	7-16
. Feeder House Assembly, 14" Chamber	7-21
Feed House Installation, 16" Chamber	7-22
. Feeder House Assembly, 16" Chamber	7-27


This page is intentionally left blank.

Feed Arm Drive/Fork Installation, 14" 2-Tie

Page 1 of 2

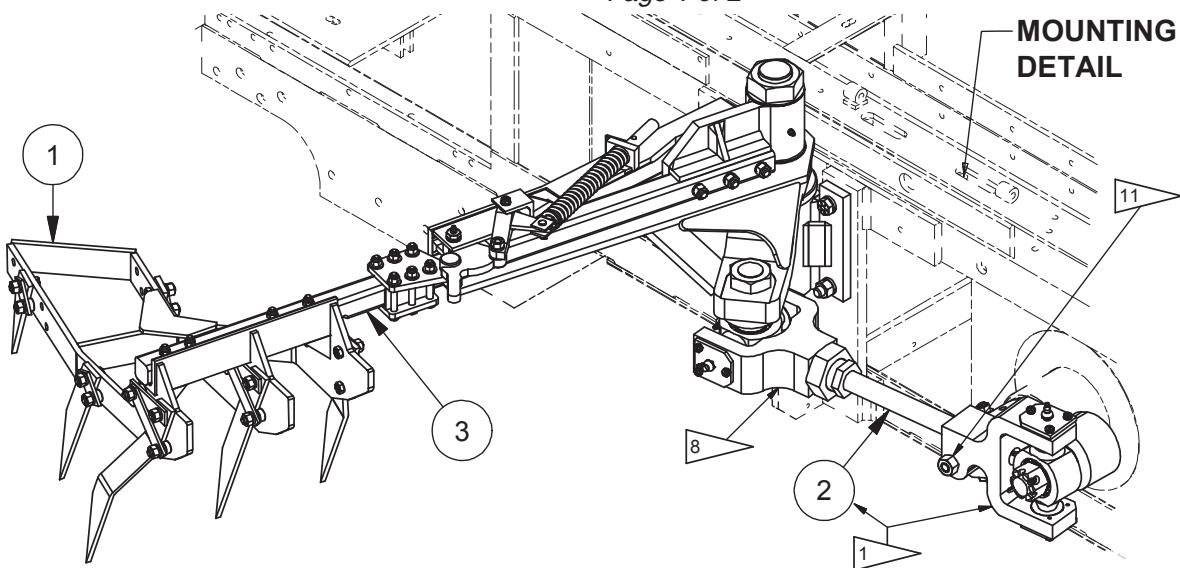
NOTES: (NOT AN ASSEMBLY SEQUENCE)

- WITH YOKE AT MINIMUM POSITION, ADJUST TO POSITION FEED FOR PARALLEL TO FRAME THEN TIGHTEN HEX NUT TO 205 FT-LBS.
- TIGHTEN NUT TO 115 - 120 FT-LBS.
- TIGHTEN FASTENERS TO 170 - 180 FT-LBS.
- TIGHTEN FASTENERS TO 41 FT-LBS.
- TIGHTEN ITEM 8 BEFORE TORQUING ITEM 22.
- POINT LUBRICATION FITTING DOWN.
- POINT LUBRICATION FITTING FRONT OF BALER.
- LOCATE LUBRICATION FITTING ON BOTTOM OF ARM.
- 16" BALER (KITTED 15" & 14") 3-TIE ASSEMBLY, P/N 902102 SHOWN, REFER TO CHART FOR OTHER ASSEMBLIES.
- INSTALLATION PHOTOS ARE AVAILABLE (SEE 906410)
- HEAD OF BOLT MUST FACE BALER FRAME

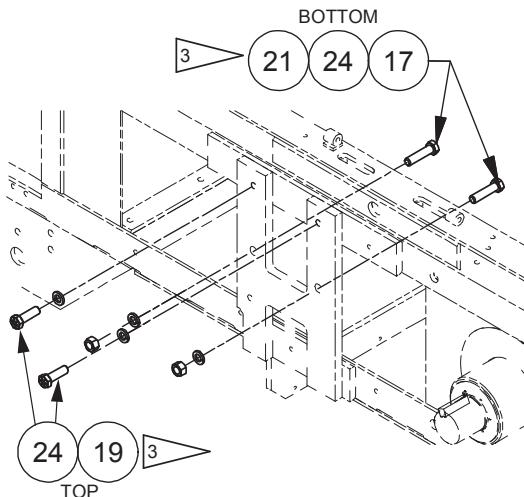


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902118		Feed Arm Drive/Fork Installation				
1	*a F007984-14	1	. Feedfork Assembly	17	221630W	2	. Capscrew
2	*b ARM0000027	1	. Rod, Connecting	19	Y17C-1032	2	. Capscrew
3	*c FAF2410800	1	. Pivot Shaft Assembly	20	R13802054	2	. Capscrew
6	PIN0024065	1	. Crank Pin	21	229952	2	. Hex Nut
7	CRA0024058	1	. Plate, Crank Arm	22	NHF0005000	2	. Hex Nut
8	STS5000500	3	. Set Screw	23	224118	4	. Nut, Esna
9	STS5000250	2	. Set Screw	24	00103325	4	. Washer, Lock
10	ZZ00000456	1	. Key	25	221771W	2	. Hard Washer
11	NMS0024111	1	. Nut	26	ZZ00000228	1	. Mach Bushing
12	BRG0048500	3	. Bearing Assembly				
14	229933	1	. Nut, Slotted				
15	COT0001006	2	. Cotter Pin				
16	Y18C-0640	4	. Capscrew				

- *a See Separate Coverage Page 7-5
 *b See Separate Coverage Page 7-11
 *c See Separate Coverage Page 7-13


Feed Arm Drive/Fork Installation, 14" 2-Tie

Page 2 of 2

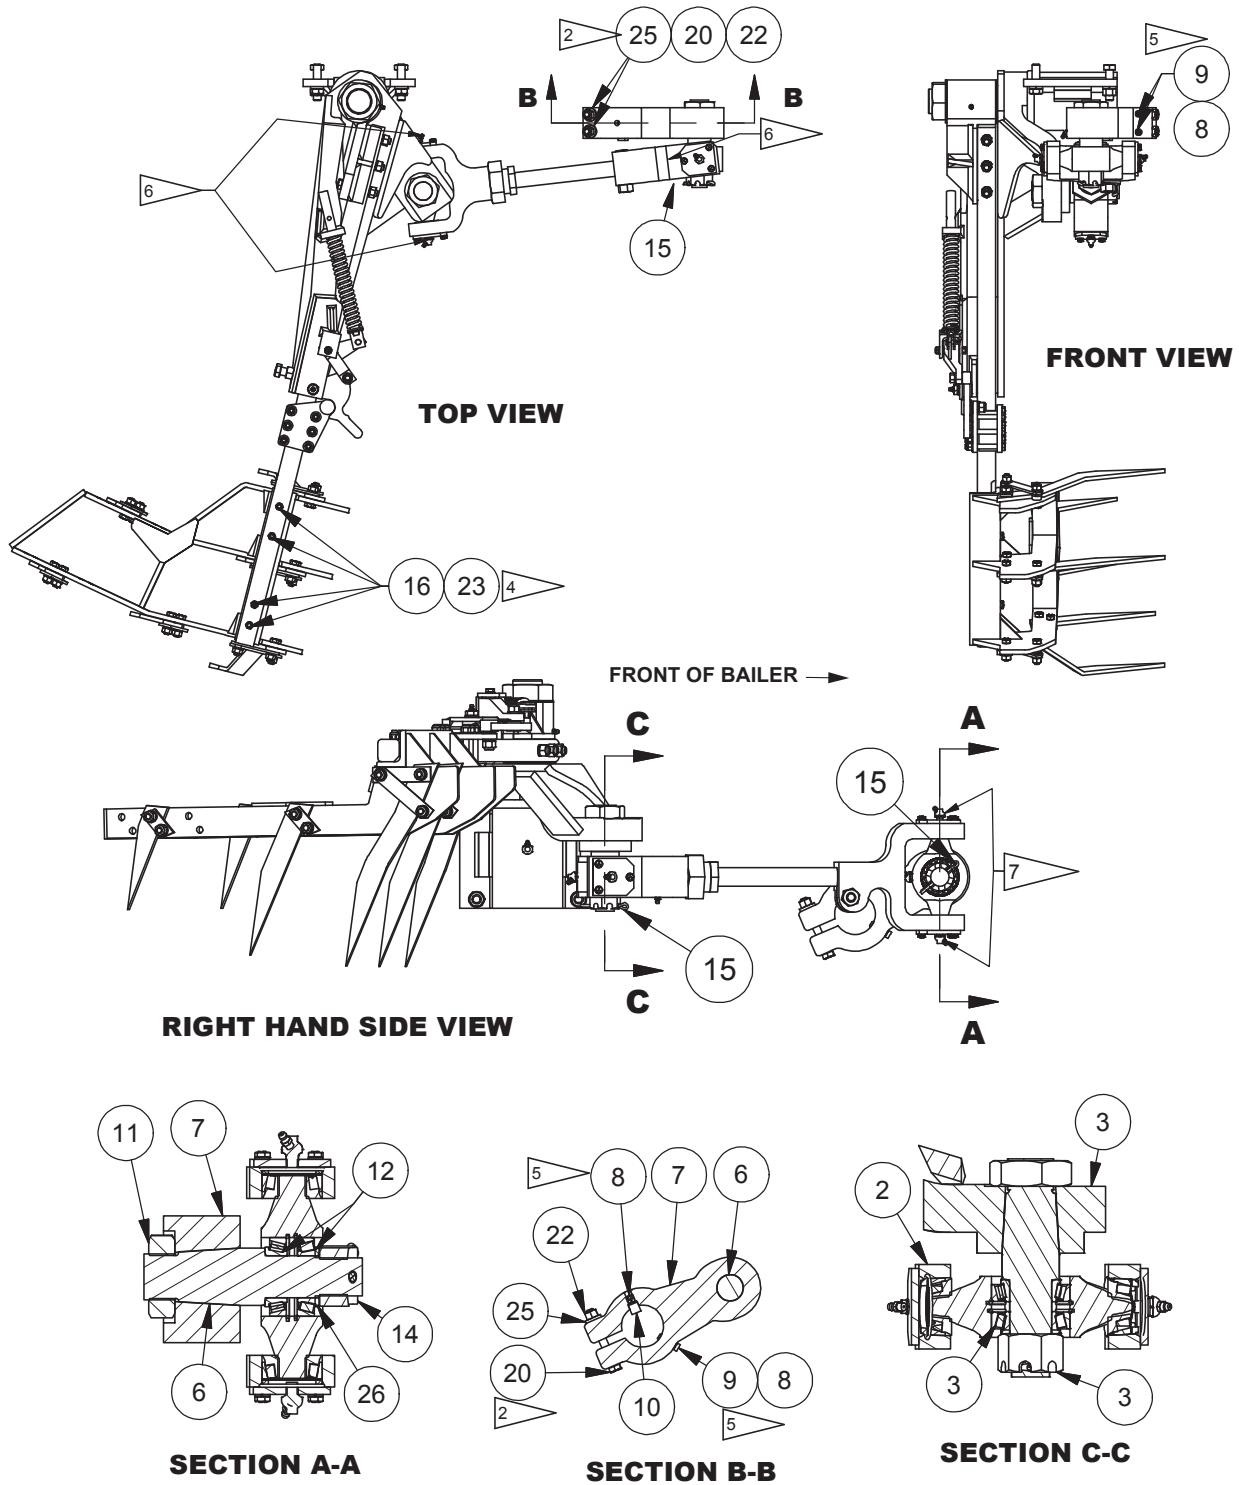

Feedfork Assembly, 14" 2-Tie

Page 1 of 2

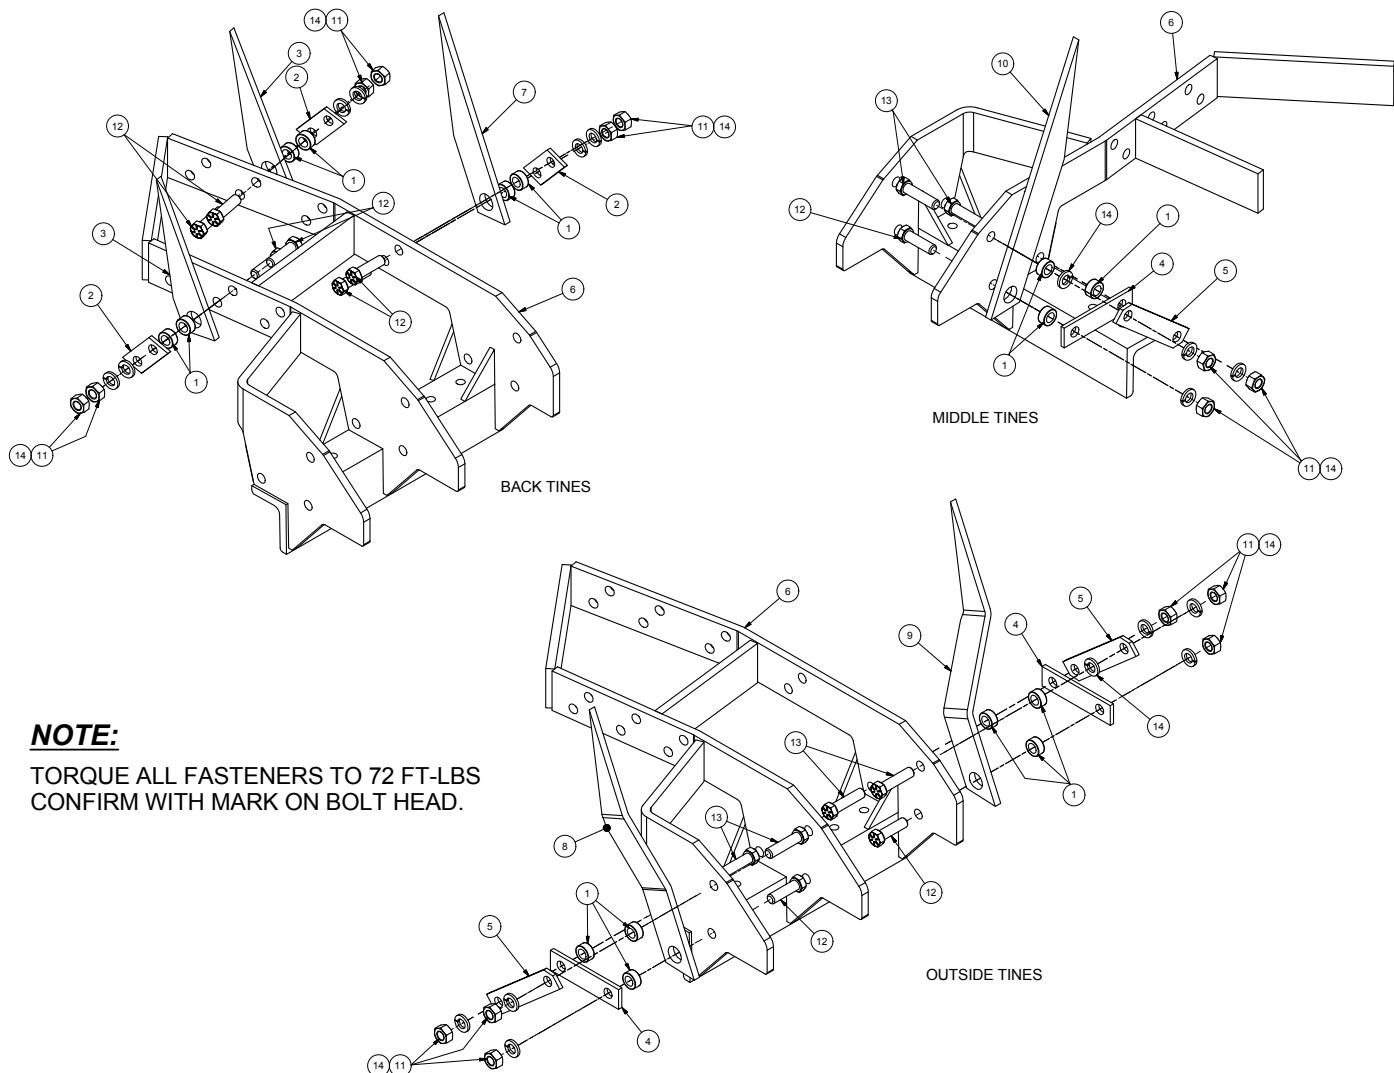


NOTE:

TORQUE ALL FASTENERS TO 72 FT-LBS
CONFIRM WITH MARK ON BOLT HEAD.


Feedfork Assembly, 14" 2-Tie

Page 2 of 2

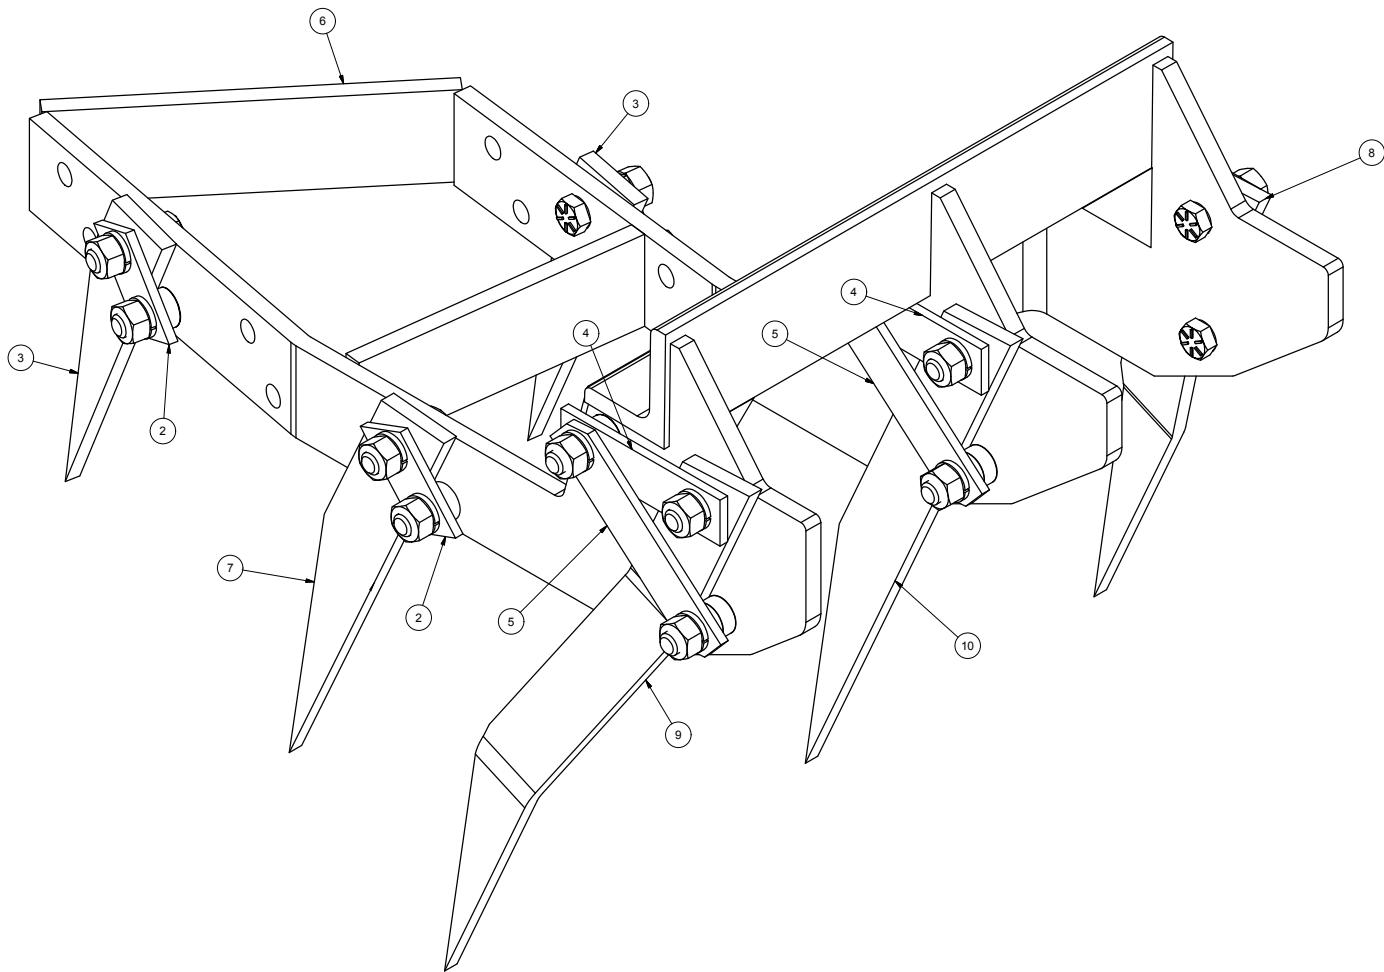


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	F007984-14		Feedfork Assembly				
1	F000001193	15	. Bushing	9	F007968-14	1	. Bar, Center
2	F000001195	3	. Plate, Clip	10	F007969-14	1	. Bar, Inside
3	F000001603	2	. Plate, Leading Tine	11	221710W	15	. Hex Nut
4	F000007970	3	. Strap, Inside	12	R13810879	9	. Capscrew
5	F000007971	3	. Bar, Strap	13	R13802037	6	. Capscrew
6	F000008232	1	. Frame 2 Tie, Feed Fork	14	200603	18	. Lockwasher
7	F001189-14	1	. Bar, Tine				
8	F007967-14	1	. Plate, Trailing Tine				
					Rev C		

Feed Arm Drive/Fork Installation, 16" 2-Tie

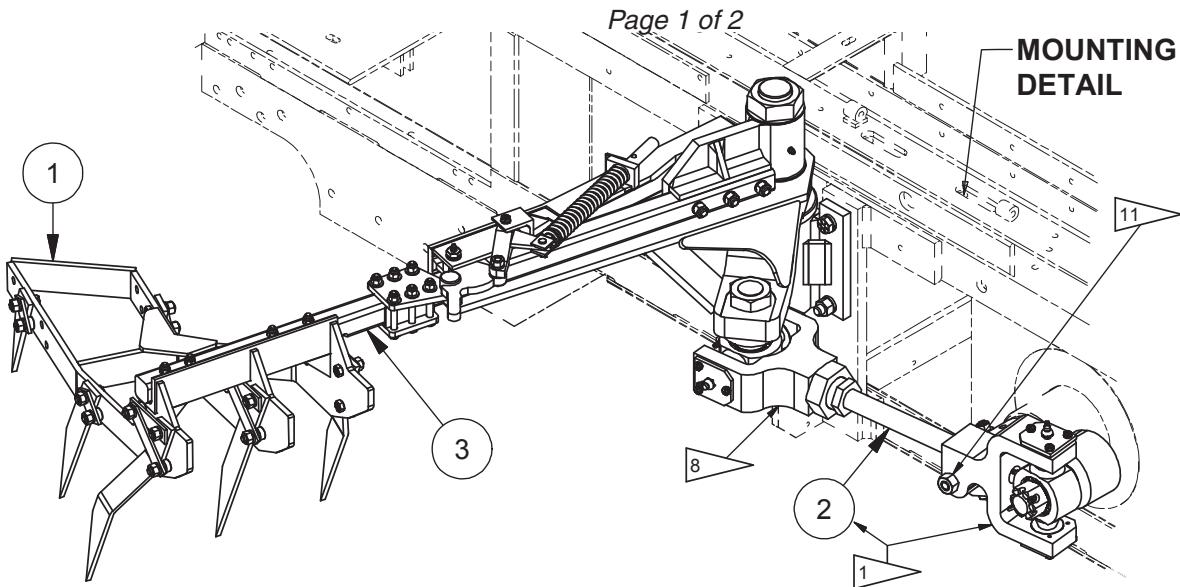
NOTES: (NOT AN ASSEMBLY SEQUENCE)

- 1 - WITH YOKE AT MINIMUM POSITION, ADJUST TO POSITION FEED FOR PARALLEL TO FRAME THEN TIGHTEN HEX NUT TO 205 FT-LBS.
- 2 - TIGHTEN NUT TO 115 - 120 FT-LBS.
- 3 - TIGHTEN FASTENERS TO 170 - 180 FT-LBS.
- 4 - TIGHTEN FASTENERS TO 41 FT-LBS.
- 5 - TIGHTEN ITEM 8 BEFORE TORQUING ITEM 22.
- 6 - POINT LUBRICATION FITTING DOWN.
- 7 - POINT LUBRICATION FITTING FRONT OF BALER.
- 8 - LOCATE LUBRICATION FITTING ON BOTTOM OF ARM.
- 9 - 16" BALER (KITTED 15" & 14") 3-TIE ASSEMBLY, P/N 902102 SHOWN, REFER TO CHART FOR OTHER ASSEMBLIES.
- 10 - INSTALLATION PHOTOS ARE AVAILABLE (SEE 906410)
- 11 - HEAD OF BOLT MUST FACE BALER FRAME

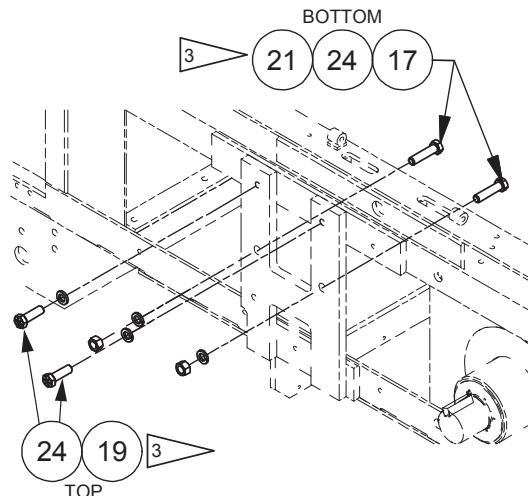


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902117		Feed Arm Drive/Fork Installation				
1 *a	F000007984	1	. Feedfork Assembly	17	221630W	2	. Capscrew
2 *b	ARM0000027	1	. Rod, Connecting	19	Y17C-1032	2	. Capscrew
3 *c	FAF2410800	1	. Pivot Shaft Assembly	20	R13802054	2	. Capscrew
6	PIN0024065	1	. Crank Pin	21	229952	2	. Hex Nut
7	CRA0024058	1	. Plate, Crank Arm	22	NHF0005000	2	. Hex Nut
8	STS5000500	3	. Set Screw	23	224118	4	. Nut, Esna
9	STS5000250	2	. Set Screw	24	00103325	4	. Washer, Lock
10	ZZ00000456	1	. Key	25	221771W	2	. Hard Washer
11	NMS0024111	1	. Nut	26	ZZ00000228	1	. Mach Bushing
12	BRG0048500	3	. Bearing Assembly				
14	229933	1	. Nut, Slotted				
15	COT0001006	2	. Cotter Pin				
16	Y18C-0640	4	. Capscrew				

*a See Separate Coverage Page 7-10
 *b See Separate Coverage Page 7-11
 *c See Separate Coverage Page 7-13

Rev DF


Feed Arm Drive/Fork Installation, 16" 2-Tie

Page 2 of 2

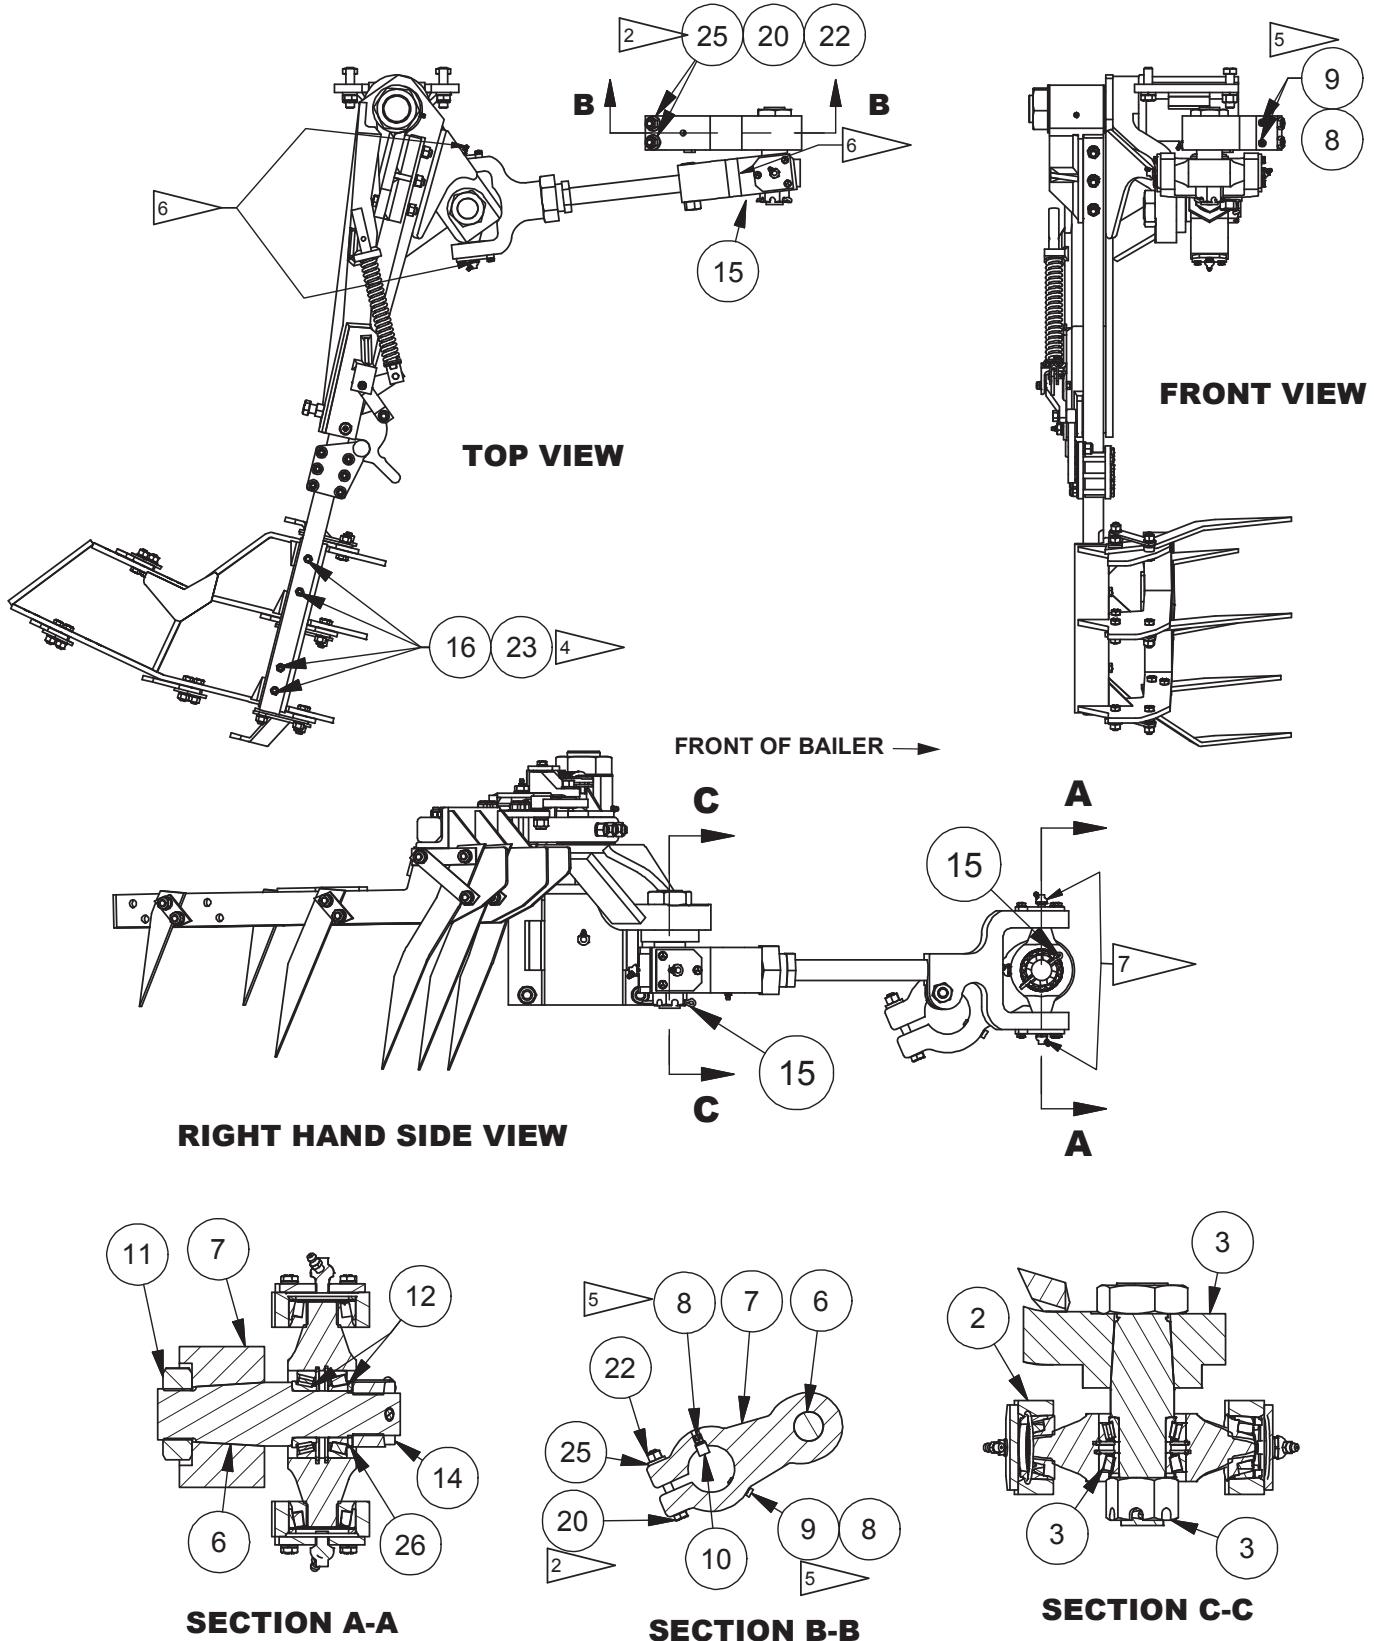


Feedfork Assembly, 16" 2-Tie

Page 1 of 2

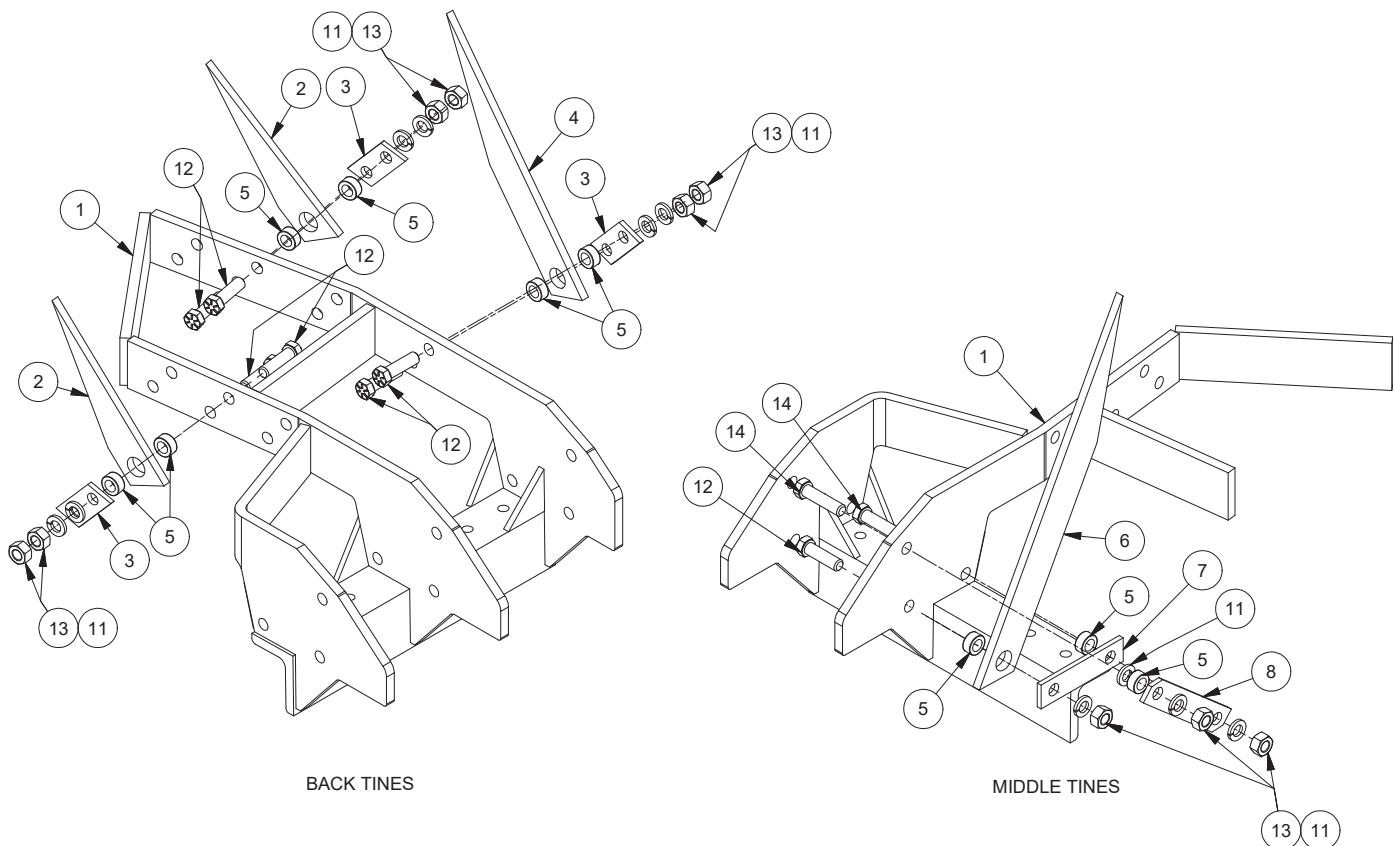


NOTE:

TORQUE ALL FASTENERS TO 72 FT-LBS
CONFIRM WITH MARK ON BOLT HEAD.

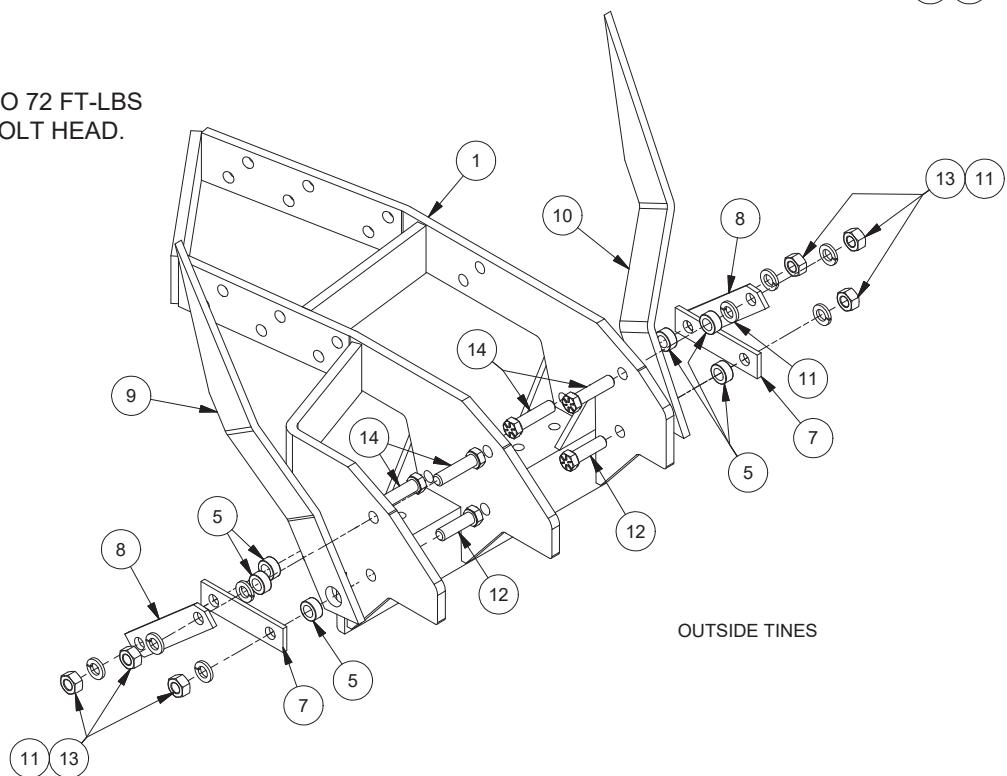

Feedfork Assembly, 16" 2-Tie


Page 2 of 2

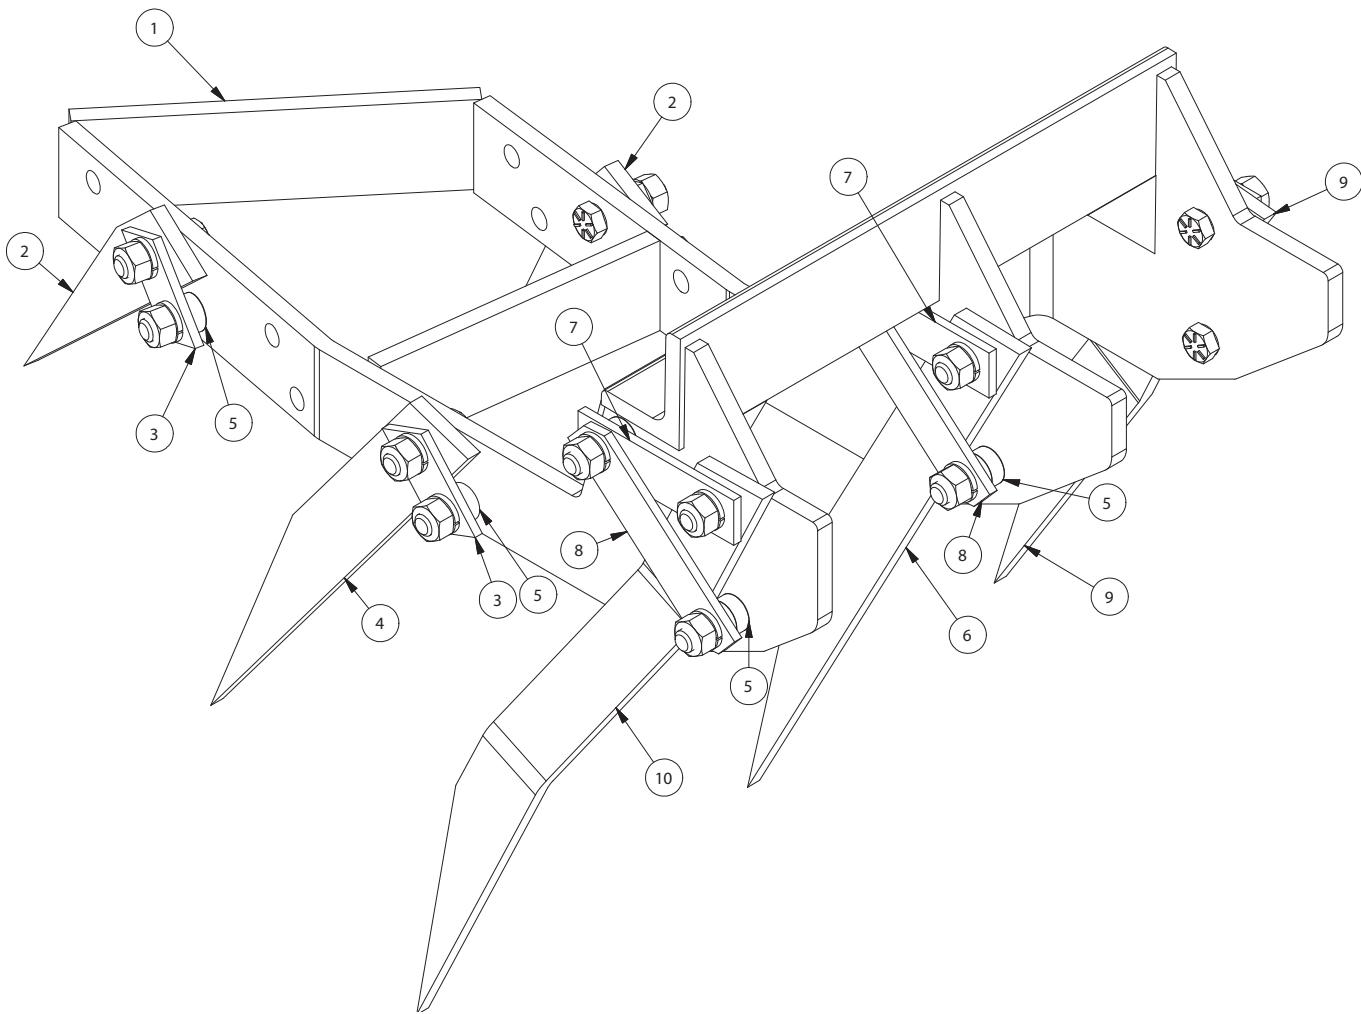

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	F000007984		Feedfork Assembly				
1	F000008232	1	. Frame 2 Tie, Feed Fork	9	F000007967	1	. Plate, Trailing Tine
2	F000001603	2	. Plate, Leading Tine	10	F000007969	1	. Plate, Tine
3	F000001195	3	. Plate, Clip	11	200603	18	. Lockwasher
4	F000001189	1	. Plate, Leading Tine	12	R13810879	9	. Capscrew
5	F000001193	15	. Bushing	13	221710W	15	. Hex Nut
6	F000007968	1	. Plate, Center Tine	14	R13802037	6	. Capscrew
7	F000007970	3	. Strap, Inside				
8	F000007971	3	. Bar, Strap				

Rev C

Connecting Rod Assembly


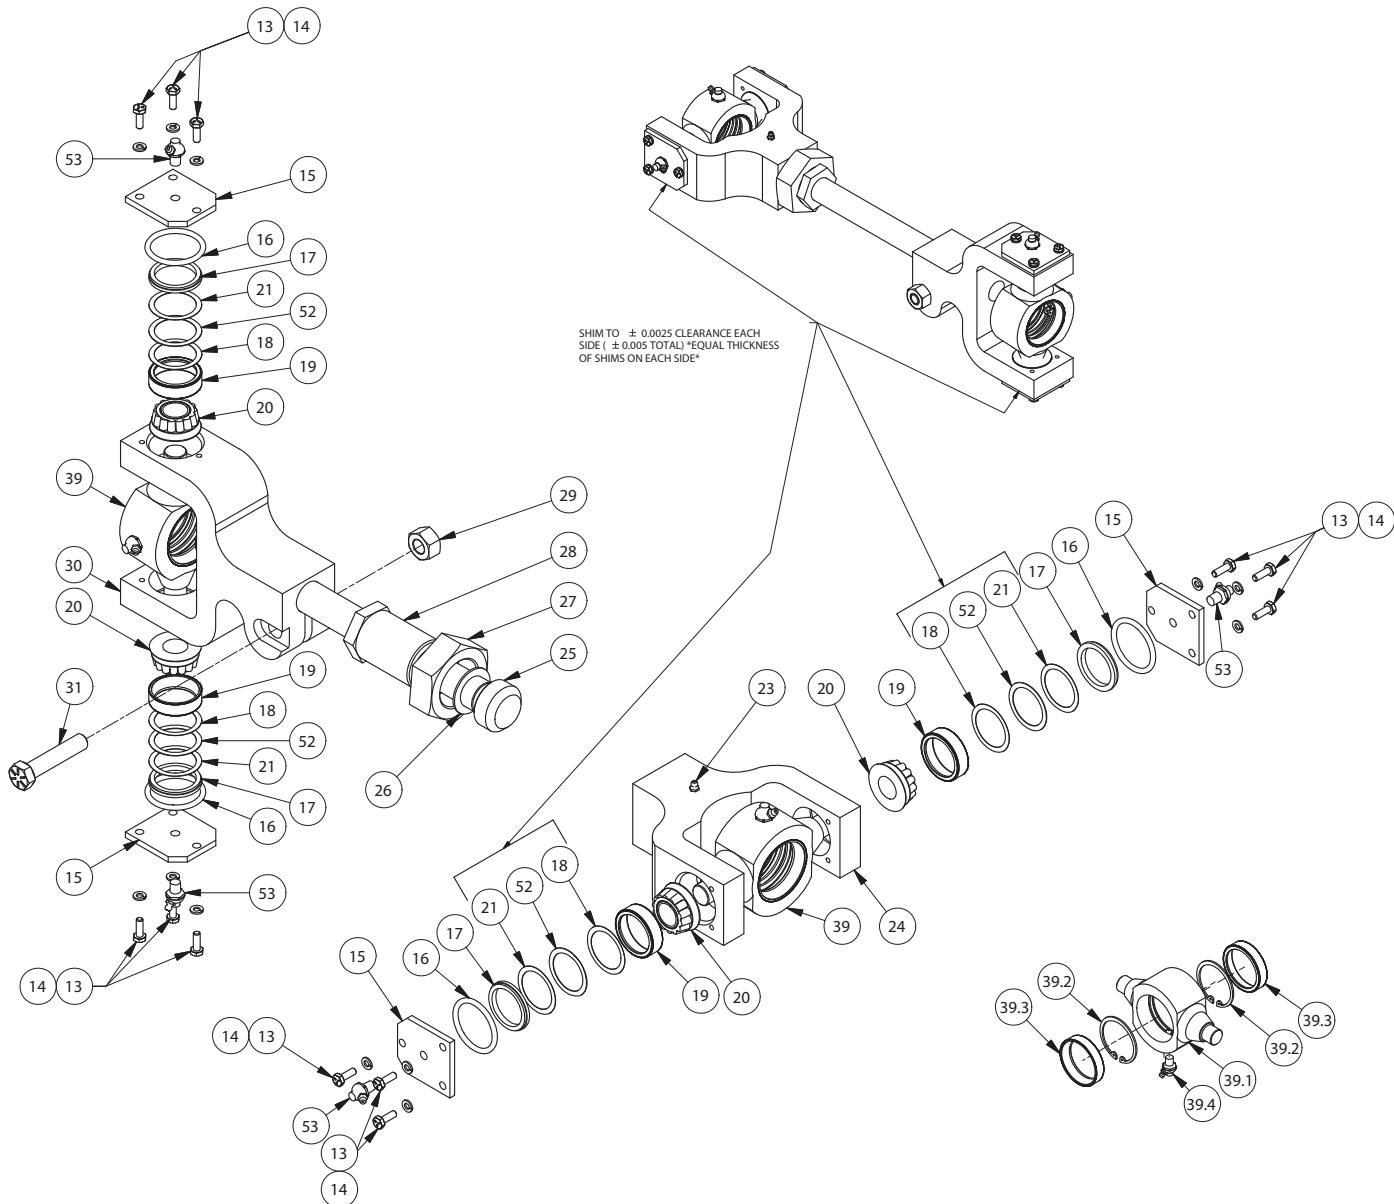


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
ARM0000027			Connecting Rod Assembly				
13	18460W	12	. Capscrew	27	F000008140	1	. Jam Nut
14	223871	12	. Lockwasher	28	F000008259	1	. Nut, Swivel
15	CVR0024052	4	. Plate,Cap	29	NFH0625000	1	. Hex Nut
16	203513	4	. O-Ring	30	YOK0024056	1	. Yoke, Bearing Block
17	SPC0024066	4	. Spacer	31	R13806355	1	. Capscrew
18	SHM2406702 AR		. Shim, .005"	39	BLK0240630	2	. Bearing Block Assembly
19	BRG0012610	4	. Bearing Cup	39.1	BLK0024063	1	.. Bearing Block
20	BRG0012600	4	. Bearing Assembly	39.2	Y435241.047	2	.. Ring Retaining
21	SHM2406701 AR		. Shim, .007"	39.3	BRG0048510	2	.. Bearing Cup
23	11079	1	. Fitting, Lube	39.4	F000001661	1	.. Fitting
24	YOK0024055	1	. Yoke, Swivel	52	SHM2406700 AR		. Shim, Bearing
25	F000008258	1	. Rod, Connecting	53	F000001661	4	. Fitting
26	ZZ00000207	1	. Bushing				



Rev F

Pivot Shaft Assembly, Feed Arm

Page 1 of 4

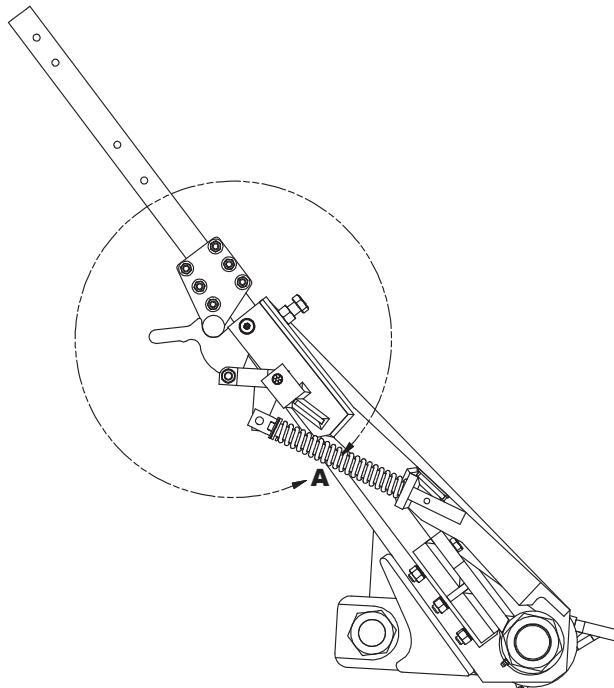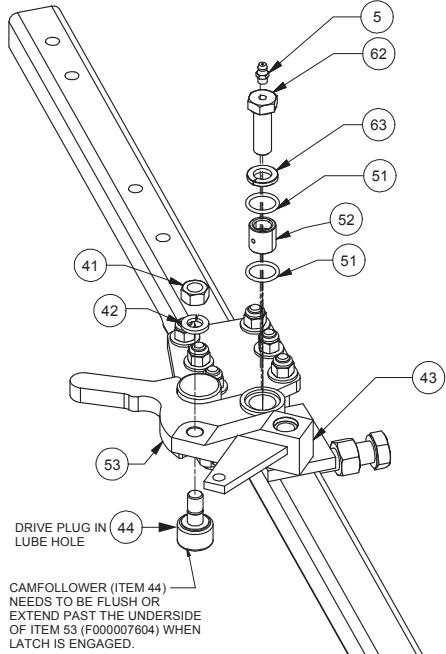

ASSEMBLY NOTES

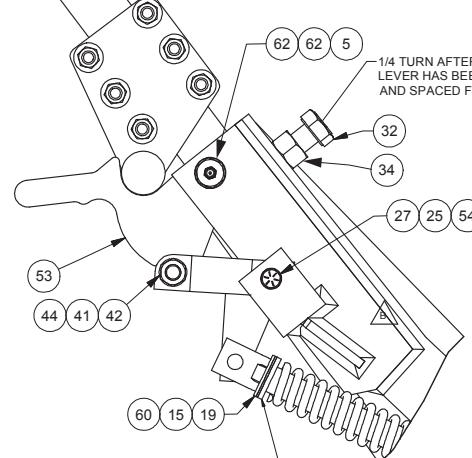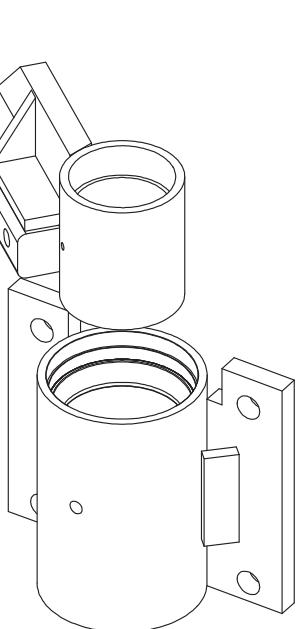

DETAIL A

ADD AND ADJUST WASHERS AS
REQUIRED FOR 120-130 LBS TORQUE
ON SPRING ARM LEVER.

Pivot Shaft Assembly, Feed Arm

Page 2 of 4

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FAF2410800		Pivot Shaft Assembly				
1	F000008187	AR	. Plate, Washer	43	F000007606	1	. Trip Arm Assembly
2	Y10G-(1032)06	2	. Capscrew		F000001556	1	.. Bushing
4	F000008132	1	. Lockwasher	44	F00000822	1	. Follower, Cam
5	11079	2	. Fitting, Lube	48	F000008262	1	. Sleeve
6	R13806350	3	. Capscrew	50	F000008315	1	. Washer
8	F000008131	2	. Nut, Bearing	51	F000007610	2	. Quad-Ring
9	F000008135	1	. Seal	52	F000007607	1	. Bearing, Inner Race
10	F000008134	2	. Bearing Cone	53	F000007604	1	. Latch Hook
13	F000001661	1	. Fitting	54	241691	1	. Capscrew
14	*a 221712W	4	. Hex Nut	59	F000008296	1	. Spring, Trip Arm
15	ZZ00000201	AR	. Bushing	60	226272	AR	. Bushing
16	F000008129	1	. Plate, Housing Cap	61	ROD0013590	1	. Spring Rod
17	F000008130	1	. Ring, Retaining	62	F000007605	1	. Hinge Pin, Latch Hook
18	F000008126	1	. Shaft, Pivot	63	*a R13812516	6	. Lockwasher
19	ZZ00000206	AR	. Bushing	64	229933	1	. Nut, Slotted
20	60653W	2	. O-Ring	65	BRG0048500	1	. Bearing Assembly
21	F000008136	1	. Plate, Dust Cap	66	NMS0024111	1	. Nut
22	FAF0024108	1	. Feed Arm	67	PIN0024065	1	. Pin, Feed Arm Crank
23	R13802619	1	. Flat Washer	69	*a 221767W	6	. Washer
24	F000008139	1	. Tube, Sleeve	70	*a 237567	6	. Nut, Esna
25	R13803725	1	. Hex Nut	71	*a 903597	1	. Angle
26	F000008127	1	. Housing Assembly	72	*a 903596	1	. Plate, Bottom
27	201566	1	. Lockwasher	73	*a 903595	1	. Plate, Top
28	F000008334	AR	. Plate, Washer	74	*a R13811043	6	. Capscrew
29	F000008140	1	. Jam Nut	75	*a F000004050	1	. Follower, Cam
30	F000001561	1	. Clevis Pin	76	903850	1	. Bearing Housing Assembly
31	00103384	1	. Cotter Pin		F000008133	2	.. Bearing Cup
32	Y17C-1028	1	. Capscrew	77	ZZ00000228	1	. Bushing
33	F000007529	1	. Bar	78	907010	3	. Washer, Wedge Lock
34	229952	1	. Hex Nut				
41	221710W	1	. Hex Nut				
42	200603	1	. Lockwasher				

*a Included in Kit 903598 (Latch Roller Assembly)


Rev T

NOTES:

- [1-1] - TIGHTEN ITEM #29 USING 3" SOCKET (X-202464) TO 1100 LB-FT
- [1-2] - SHIM FOR ITEM #24 SO ITEM #22 WILL NOT CONTACT THE SIDE OF ITEM # 26.
- [1-3] - THIS SIDE OF ITEM # 76 SHOULD BE FACING ITEM #67.
- [1-4] - THIS NUT NEEDS TO BE TIGHTENED AFTER BOTH BEARING AND CUP (ITEMS 10 & 76-BEARING CUPS ARE ALREADY INSTALLED)ARE LOADED. TIGHTEN TO 220 - 230 LB-FT WITH SOCKET # X-202464 THEN BACK NUT OUT AND TIGHTEN AGAIN. *BEND LOCK WASHER TAB DOWN TO LOCK NUT IN POSITION* LOCK FIRST NUT IN POSITION USING THE SECOND NUT
- [1-5] - DO NOT TIGHTEN PAST THREADS.
- [1-6] - SET SPRING TENSION TO 120 - 130 LB-FT BEFORE LATCH TRIPS
- [1-7] - TORQUE TO 1000 LB-FT
- [1-8] - TORQUE TO 120 LB-FT
- [1-9] - TORQUE TO 35 LB-FT
- [1-10] - USE LOCTITE 242 (P/N: 226201)



Pivot Shaft Assembly, Feed Arm

Page 3 of 4

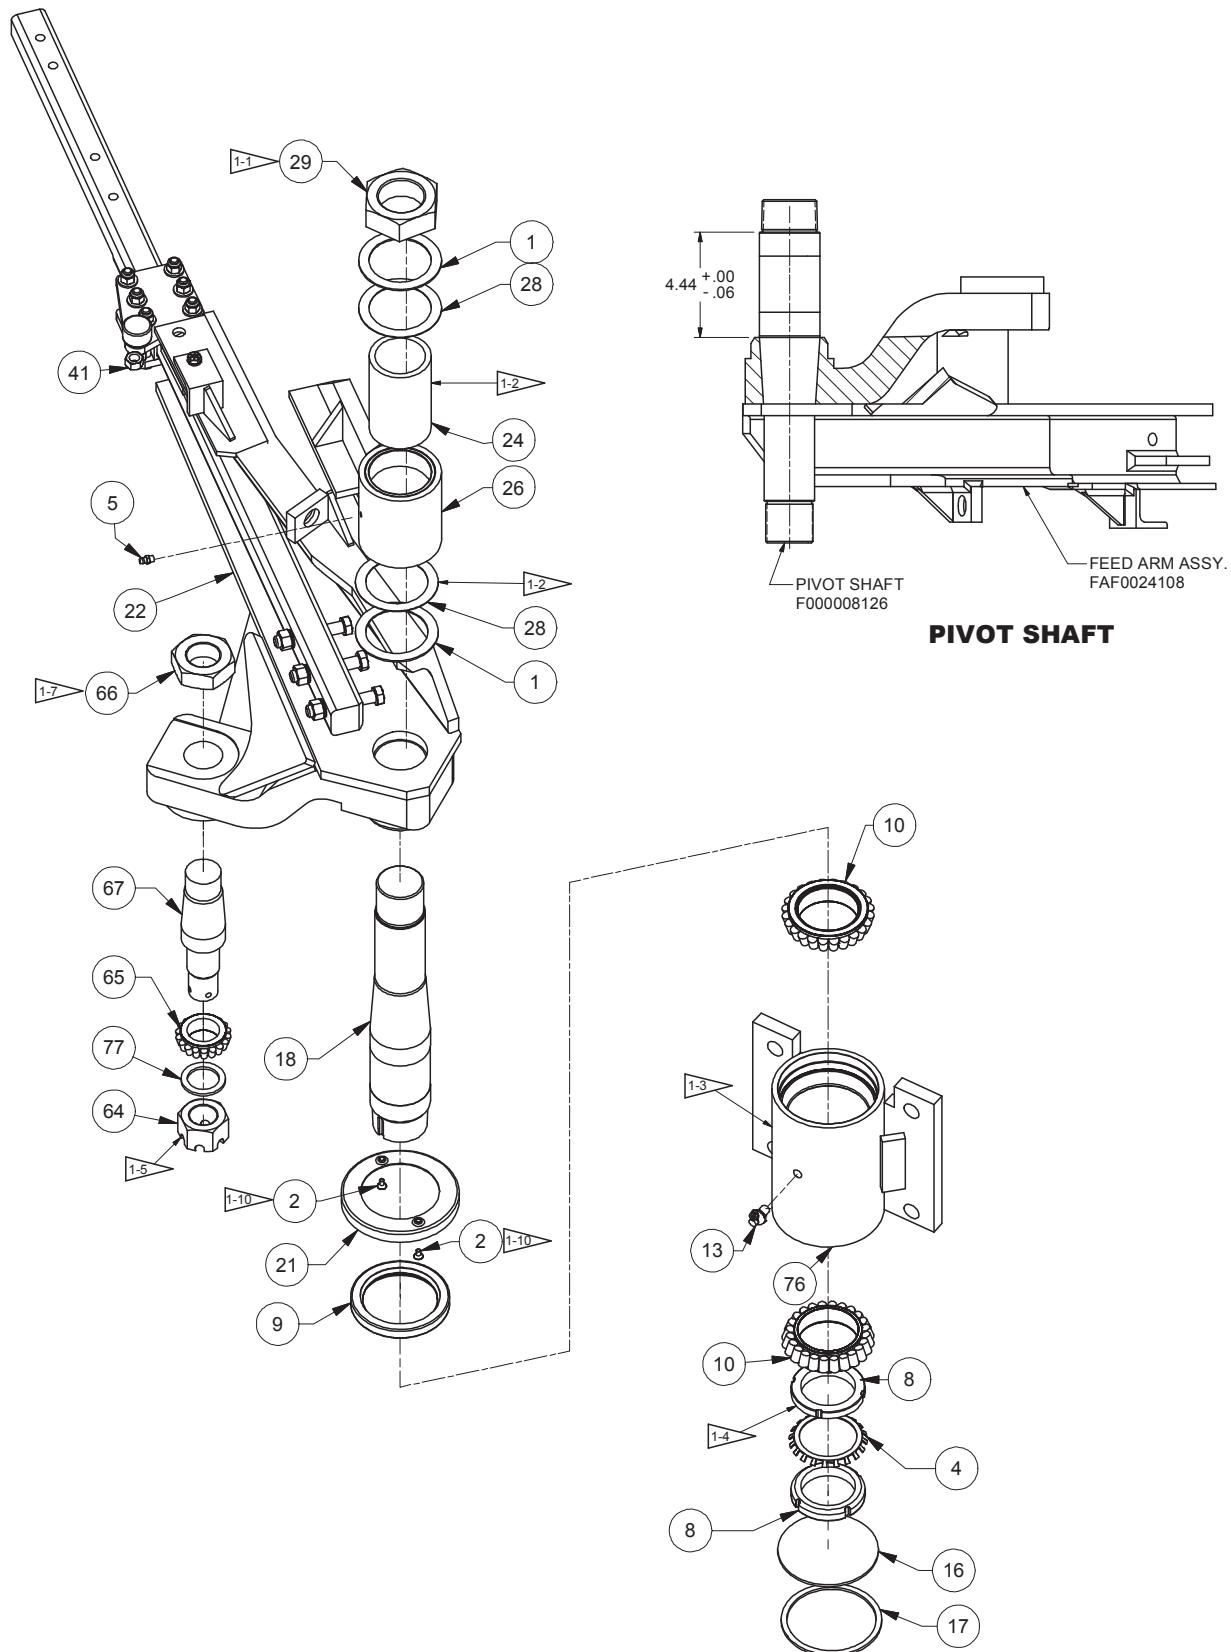



Pivot Shaft Assembly, Feed Arm

Page 4 of 4

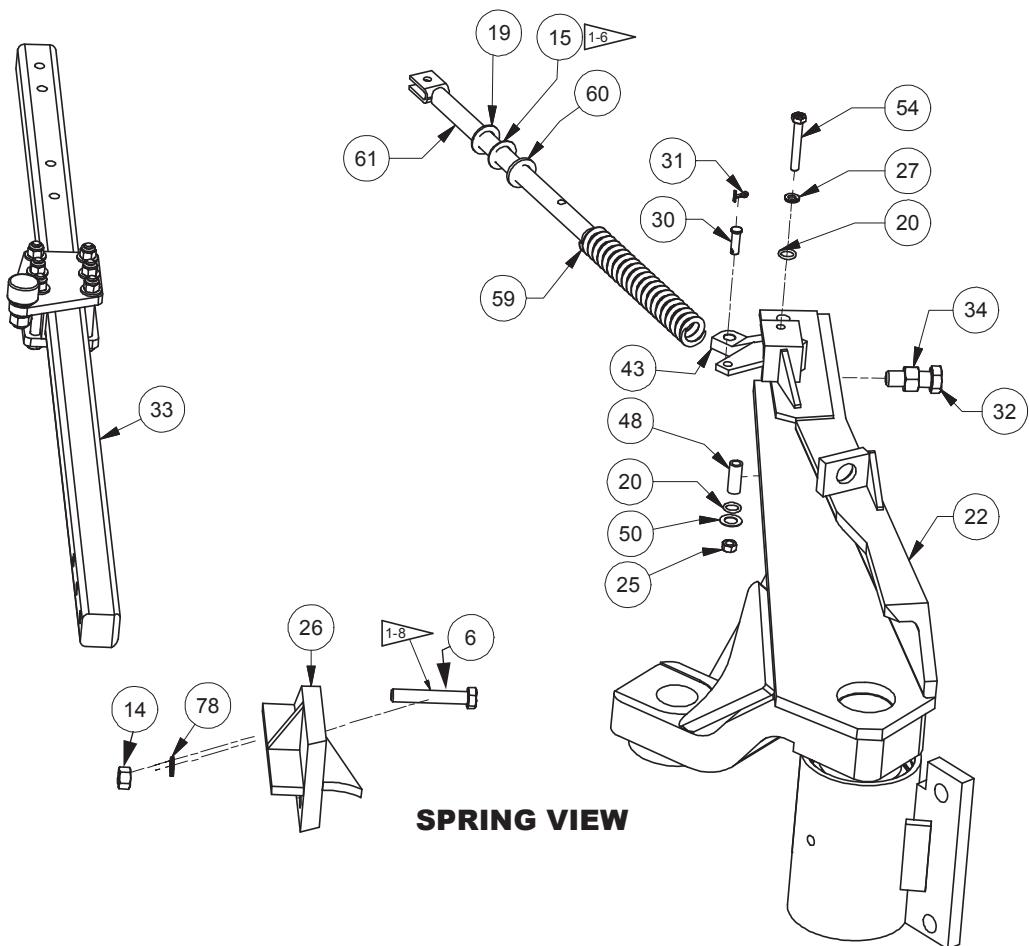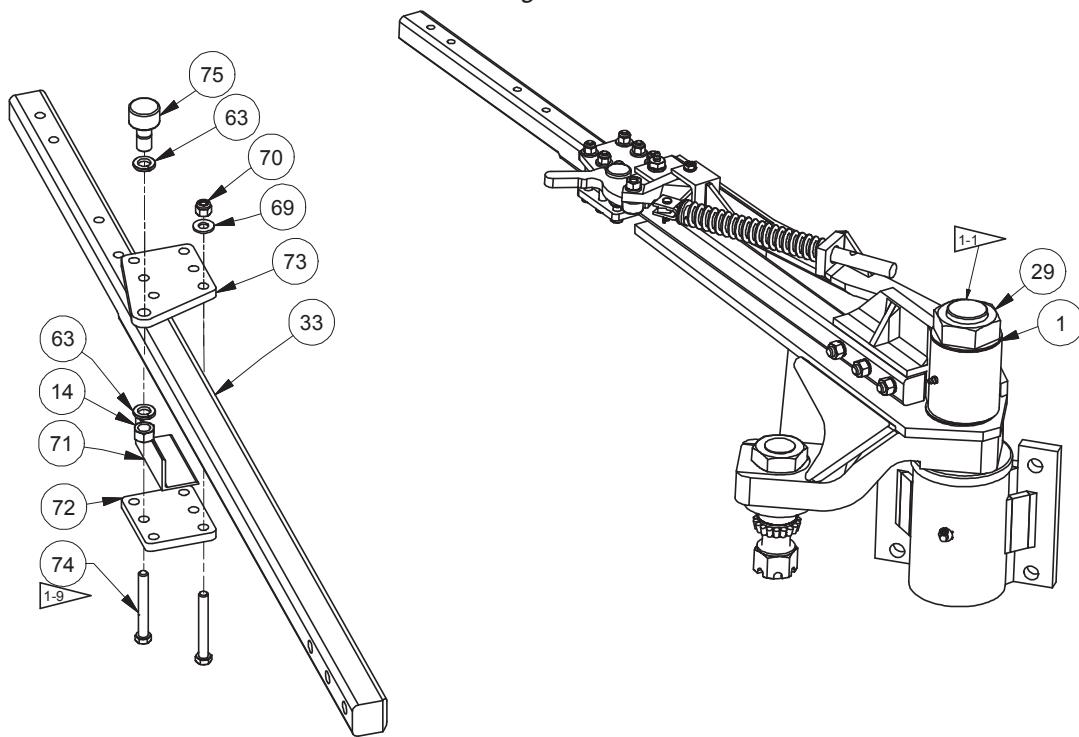


Feed House Installation, 14" Chamber

Page 1 of 5

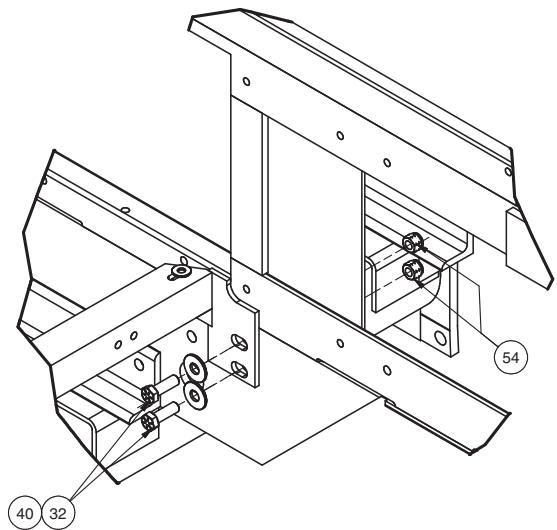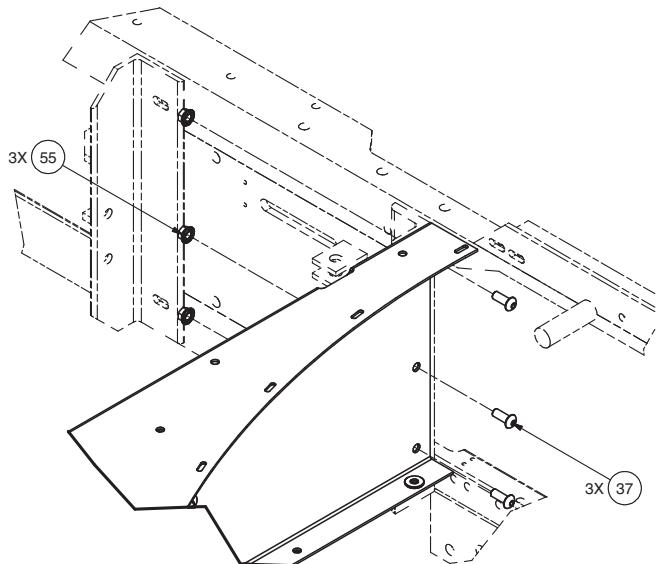

DETAIL C


DETAIL B

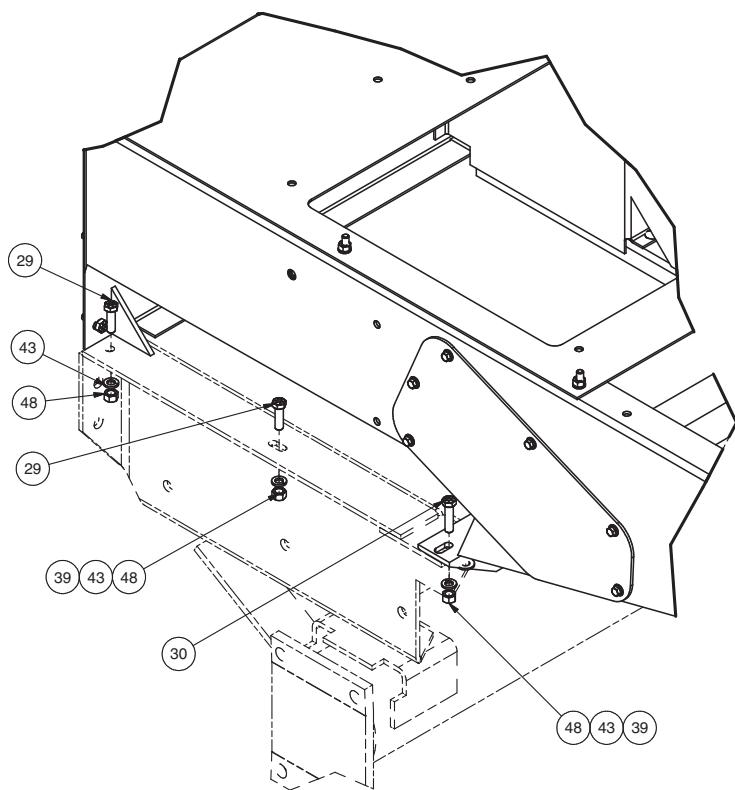

DETAIL A

Feed House Installation, 14" Chamber

Page 2 of 5

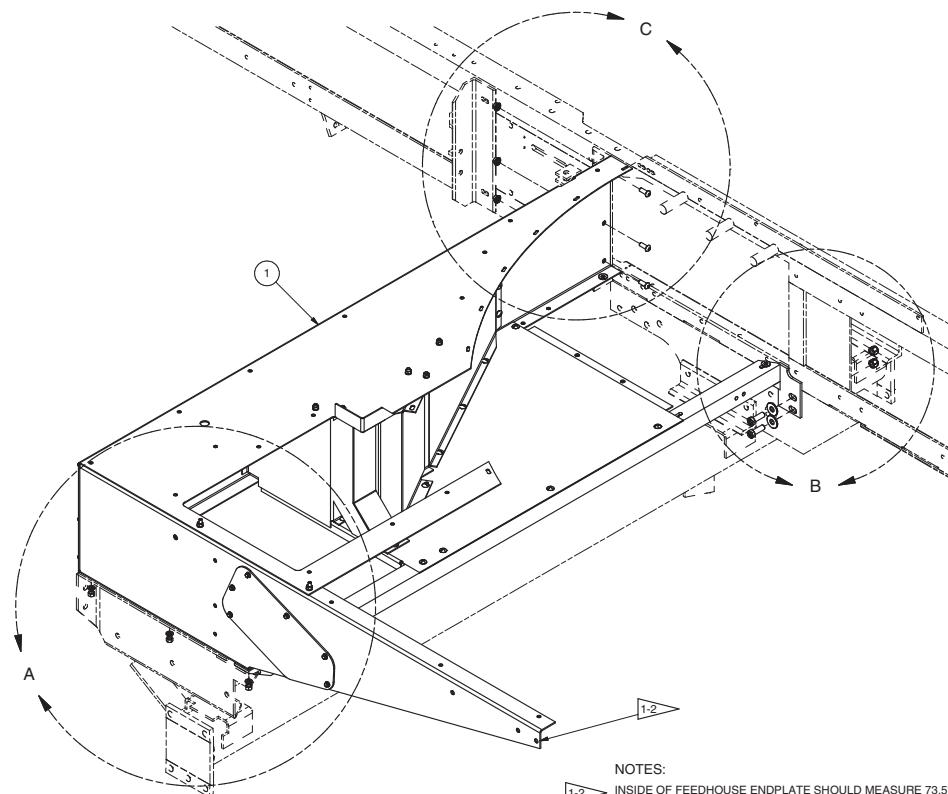






Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
901963							
1	a*	1	Feed House Installation, 14" Chamber	31	134328W	1	. Capscrew
2	FH00014370	1	. Assembly, Feed House	32	200454W	2	. Capscrew
3	SPC036500B	1	. Plate, Support	33	180189W	1	. Capscrew
4	GRD035979D	1	. Guard Angle Assembly	34	SMTS001001	14	. Machine Screw
5	F000007145	1	. Feed House Bottom Wear Plate	35	SMT0000202	7	. Screw
6	CVR0020465	1	. Cover	36		2	. Screw
7	GRD036018E	1	. Pipe Assembly	37	18738W	3	. Capscrew
8	GRD036019E	1	. Pipe Assembly	38	223428	19	. Washer
9	GRD036020E	1	. Guard Assembly	39	221767W	6	. Washer
10	F000007160	1	. Holddown, Hay (Inside)	40	239519	2	. Washer
11	F000007159	1	. Holddown, Center Hay	41	R13812512	14	. Lockwasher
12	SUP0018768	1	. Weldment, Support	42	R13812513	17	. Lockwasher
13	Y02F-1632	2	. Pin, Roll	43	R13812514	8	. Lockwasher
14	F000007276	1	. Ferrule	44	200603	1	. Lockwasher
15	F000001563	1	. Catch, Torque Shaft	45	R13812518	1	. Lockwasher
16	F000000281	1	. Spring	46	221703W	14	. Hex Nut
17	F000008264	1	. Bumper, Rubber	47	221705W	15	. Hex Nut
18	SHD0007096	1	. Latch, Hood	48	221707W	8	. Hex Nut
19	SPG0007095	1	. Spring, Hood Latch	49	R13806770	1	. Hex Nut
20	05-130	1	. Spacer	50	221716W	1	. Hex Nut
21	SPC0031363	1	. Plate, Spacer	51	224118	1	. Locknut
22	R13811014	12	. Capscrew	52	223588	18	. Nut, Esna
23	R13811015	2	. Capscrew	53	237567	1	. Locknut
24	221474W	1	. Capscrew	54	223587	2	. Locknut
25	R13811021	2	. Capscrew	55	156133W	3	. Locknut
26	162572W	1	. Capscrew	56	SMT0000201	9	. Screw, Machine
27	Y17C-0616	3	. Capscrew	57	R13801813	2	. Capscrew
28	221499W	2	. Capscrew				
29	Y17C-0624	1	. Capscrew				

*a See Separate Coverage (Page 7-21)

Rev DB

Feed House Installation, 14" Chamber


Page 3 of 5

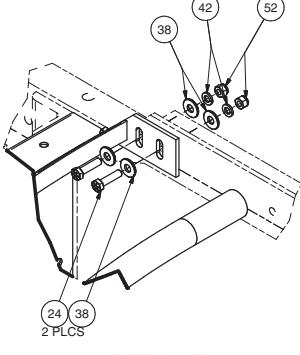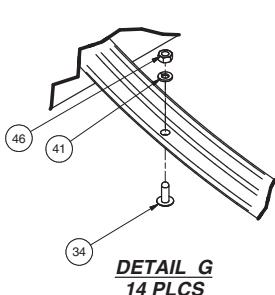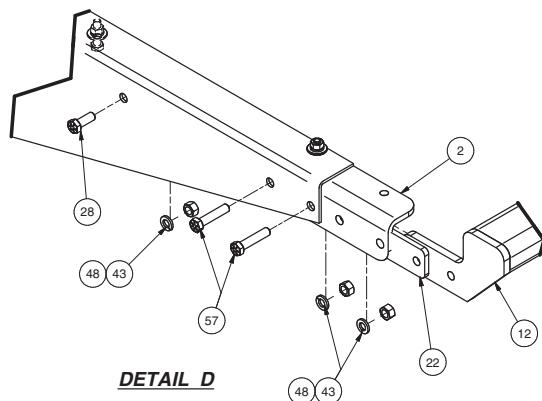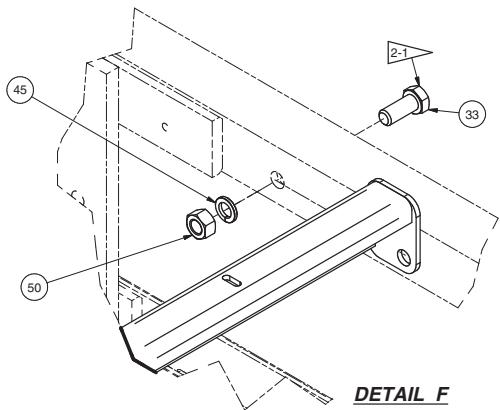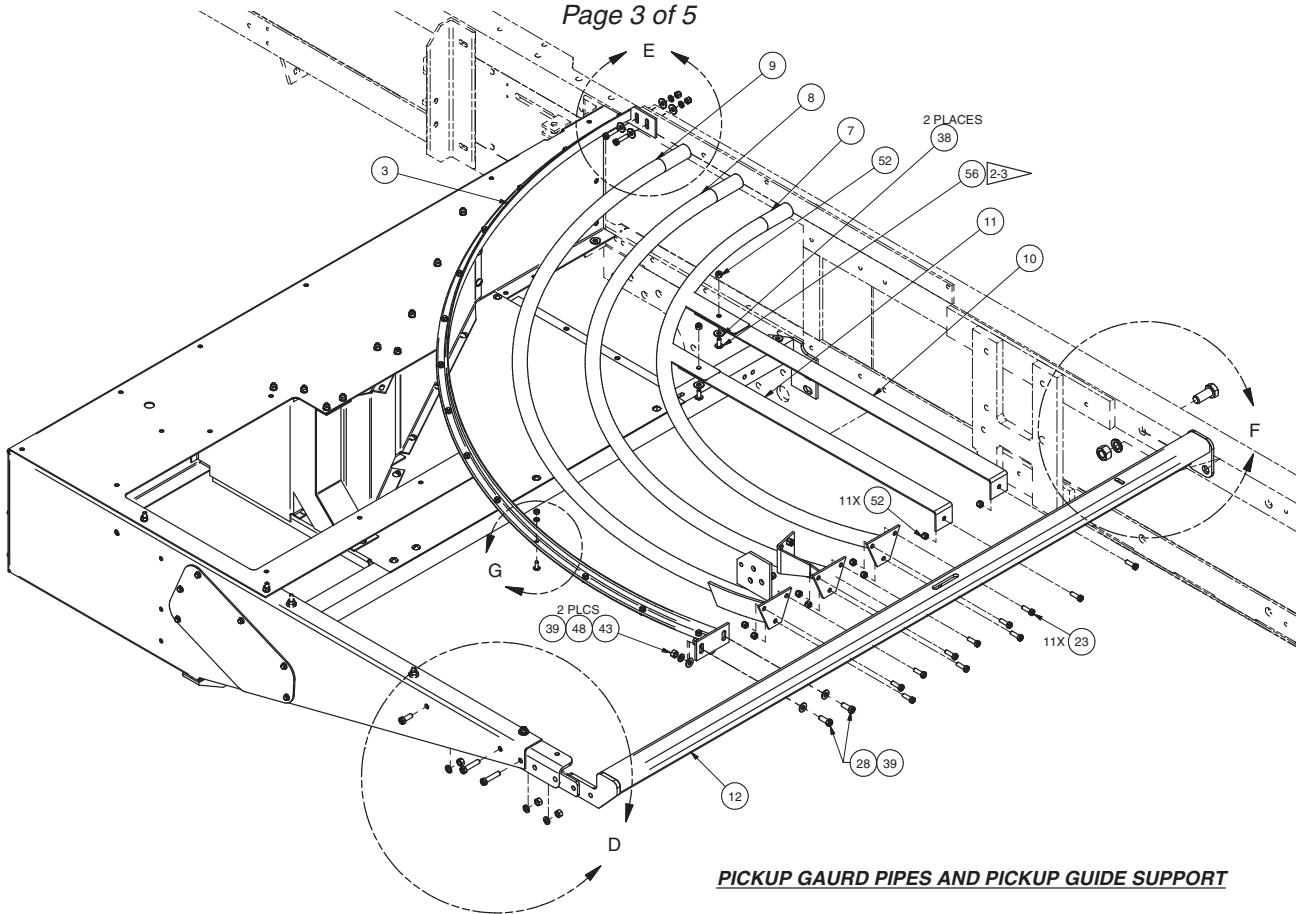


- NOTES:
- 2-1 REUSE FASTENERS ALREADY PROVIDED ON BULL GEAR INSTALLATION.
- 2-2 FASTENERS PROVIDED IN SHIELD INSTALLATION.
- 2-3 FLAT WASHER LOCATED UNDER BOLT HEAD
- 2-4 73.5" LENGTH FROM INSIDE OF FEED HOUSE TO FRAME
- 2-5 EDGE OF PLATE (CVR0020465) MUST LINE UP WITH MATING SHIELD
- 2-6 SPRING FOR FEEDARM LATCH (F000000281) GOES ON TOP OF LATCH (F000001563).

Feed House Installation, 14" Chamber


Page 4 of 5

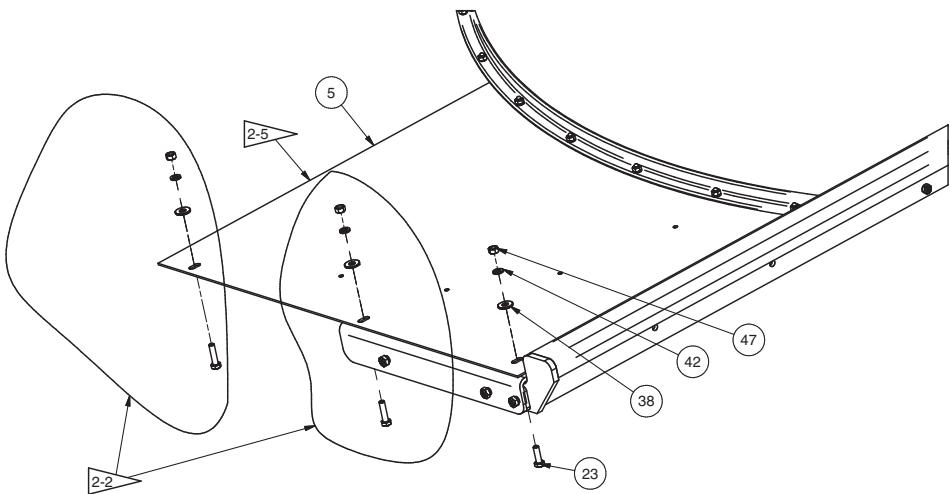

TOP PLATE INSTALLATION

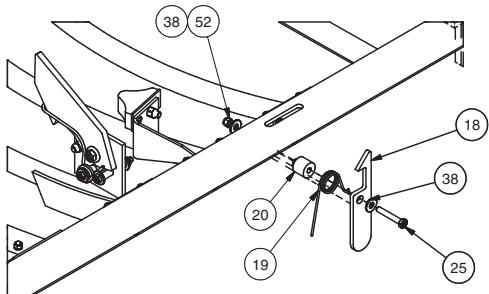


HOOD LATCH

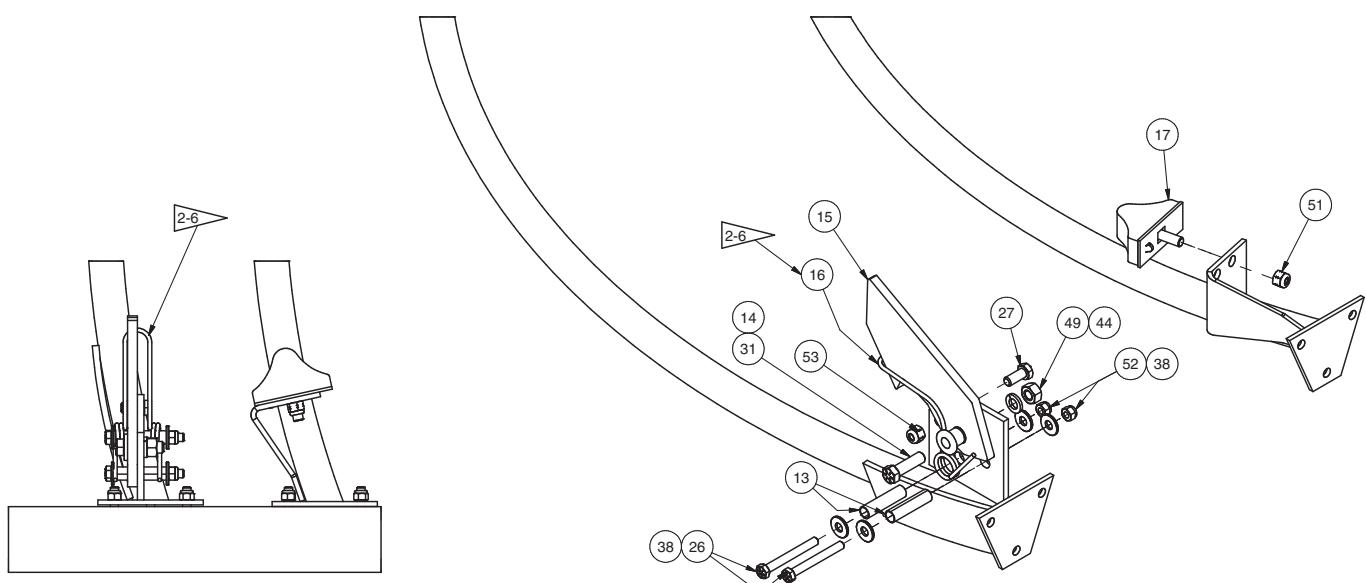


FASTENERS FOR LATCH, SPRING, AND STOP

Feed House Installation, 14" Chamber

Page 5 of 5

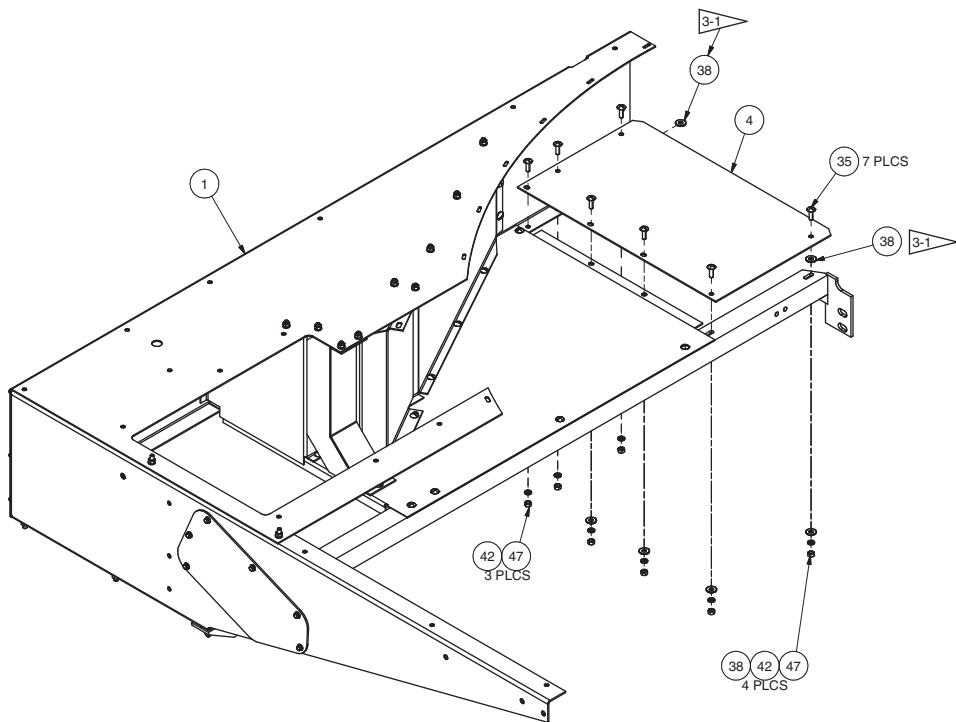


WEAR PLATE INSTALL

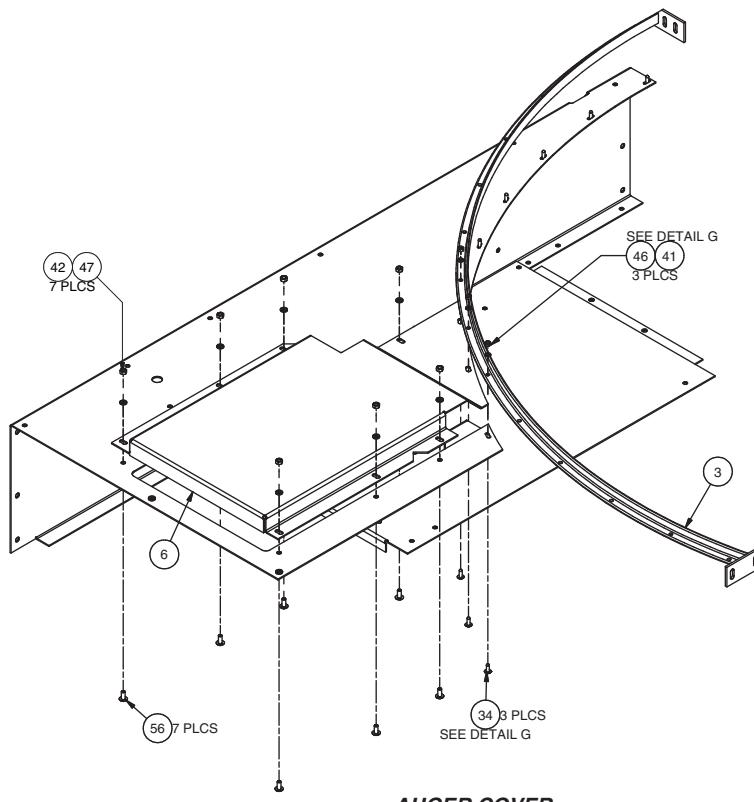

AUGER COVER

Feeder House Assembly, 14" Chamber

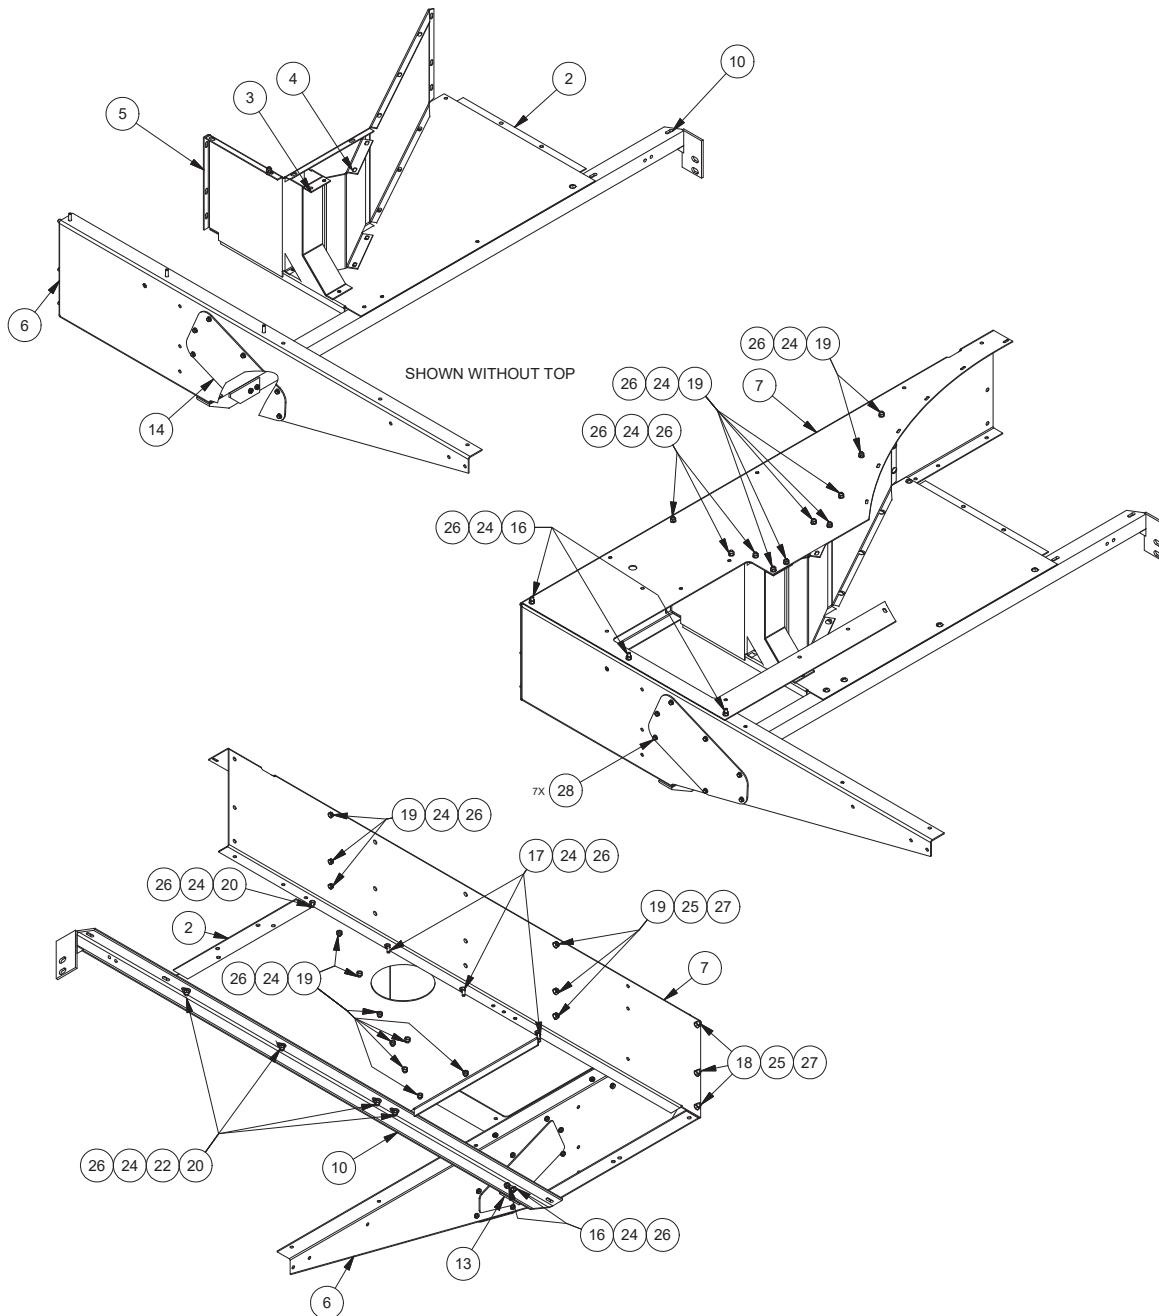


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
FH00014370			Feeder House Assembly				
2	FH00020198	1	. Plate Weldment, Bottom	19	SMT0000201	23	. Screw
3	FH00020989	1	. Extension Weldment	20	SMTS020002	5	. Screw
4	FH00021019	1	. Plate, Ext	22	223428	4	. Washer
5	FH00021410	1	. Plate, Back	24	R13812513	35	. Lockwasher
6	FH00022427	1	. Plate Weldment, End	25	R13812514	3	. Lockwasher
7	FH00024402	1	. Plate, Feeder House	26	R13811512	35	. Hex Nut
10	SUP0023008	1	. Support	27	221707W	3	. Hex Nut
14	902681	1	. Cover	28	SMS0000300	6	. Screw
16	R13811014	4	. Capscrew				
17	R13811015	3	. Capscrew				
18	Y17C-0616	3	. Capscrew				


Rev E

Feed House Installation, 16" Chamber


Page 1 of 5

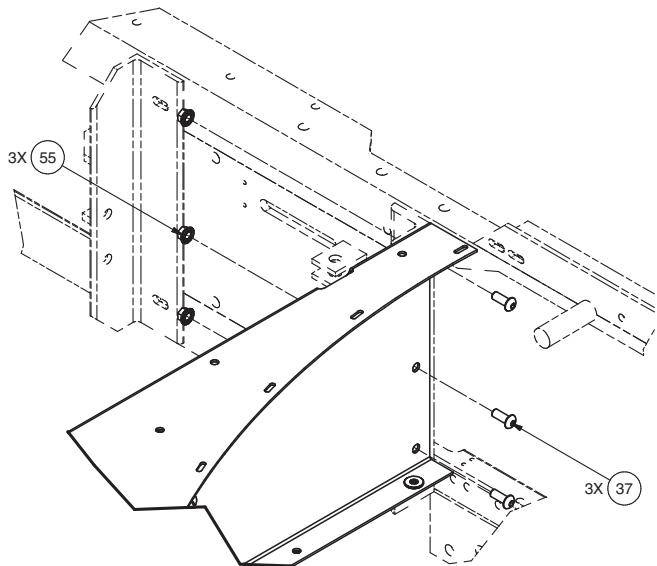

DETAIL C

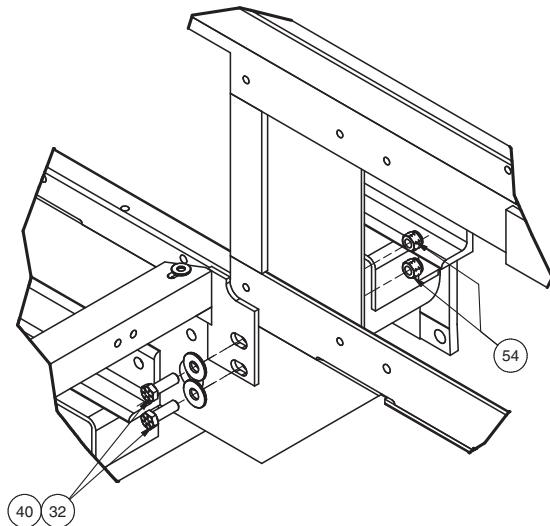


DETAIL B

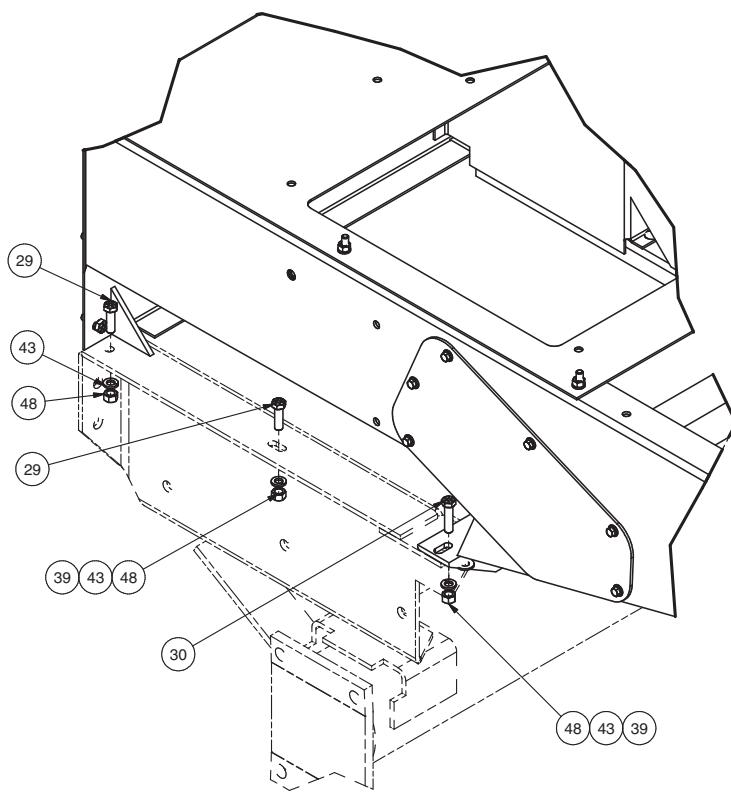

DETAIL A

Feed House Installation, 16" Chamber

Page 2 of 5

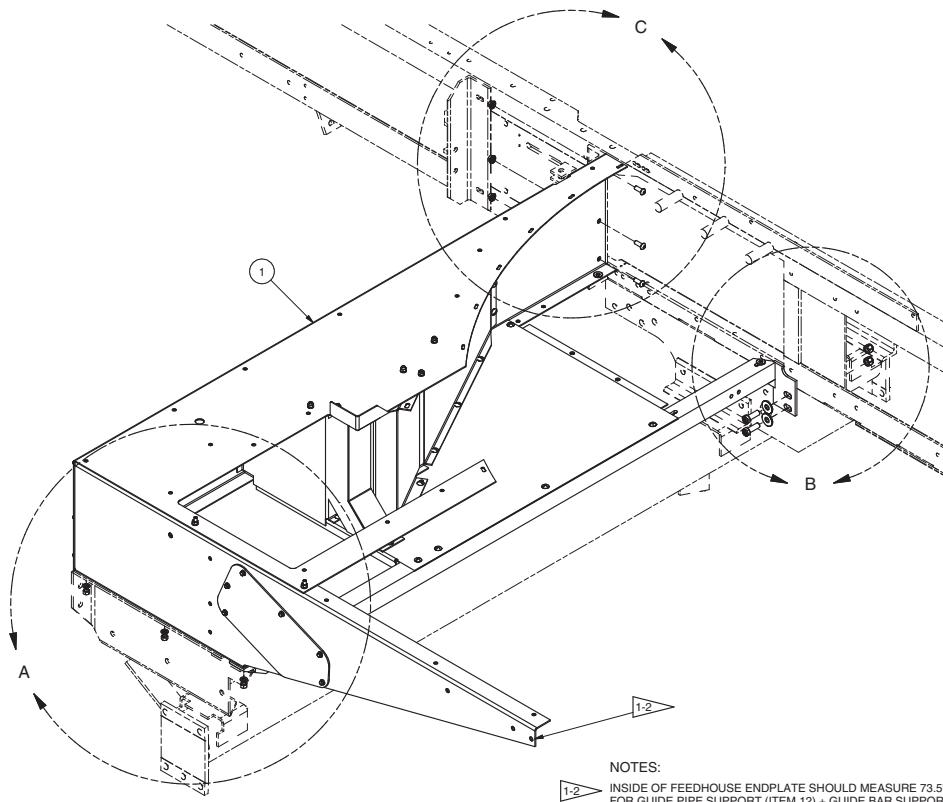


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	901970		Feed House Installation, 16" Chamber				
1 a*	FH00016370	1	. Assembly, Feed House	31	134328W	1	. Capscrew
2	SPC036500B	1	. Plate, Support	32	200454W	2	. Capscrew
3	GRD035979D	1	. Guard Angle Assembly	33	180189W	1	. Capscrew
4	F000007145	1	. Feed House Bottom Wear Plate	34	SMTS001001	14	. Machine Screw
5	CVR0020465	1	. Cover	35	SMT0000202	7	. Screw
7	GRD036018E	1	. Pipe Assembly	36		2	. Screw
8	GRD036019E	1	. Pipe Assembly	37	18738W	3	. Capscrew
9	GRD036020E	1	. Guard Assembly	38	223428	19	. Washer
10	F000007160	1	. Holddown, Hay (Inside)	39	221767W	6	. Washer
11	F000007159	1	. Holddown, Center Hay	40	239519	2	. Washer
12	SUP0018768	1	. Weldment, Support	41	R13812512	14	. Lockwasher
13	Y02F-1632	2	. Pin, Roll	42	R13812513	10	. Lockwasher
14	F000007276	1	. Ferrule	43	R13812514	8	. Lockwasher
15	F000001563	1	. Catch, Torque Shaft	44	200603	1	. Lockwasher
16	F000000281	1	. Spring	45	R13812518	1	. Lockwasher
17	F000008264	1	. Bumper, Rubber	46	221703W	14	. Hex Nut
18	SHD0007096	1	. Latch, Hood	47	221705W	8	. Hex Nut
19	SPG0007095	1	. Spring, Hood Latch	48	221707W	8	. Hex Nut
20	05-130	1	. Spacer	49	R13806770	1	. Hex Nut
22	SPC0031363	1	. Plate, Spacer	50	221716W	1	. Hex Nut
23	R13811014	12	. Capscrew	51	224118	1	. Locknut
24	R13811015	2	. Capscrew	52	223588	18	. Nut, Esna
25	221474W	1	. Capscrew	53	237567	1	. Locknut
26	R13811021	2	. Capscrew	54	223587	2	. Locknut
27	162572W	1	. Capscrew	55	156133W	3	. Locknut
28	Y17C-0616	3	. Capscrew	56	SMT0000201	2	. Screw, Machine
29	221499W	2	. Capscrew	57	R13801813	2	. Capscrew
30	Y17C-0624	1	. Capscrew				

Rev FB


*a See Separate Coverage (Page 7-27)

Feed House Installation, 16" Chamber


Page 3 of 5

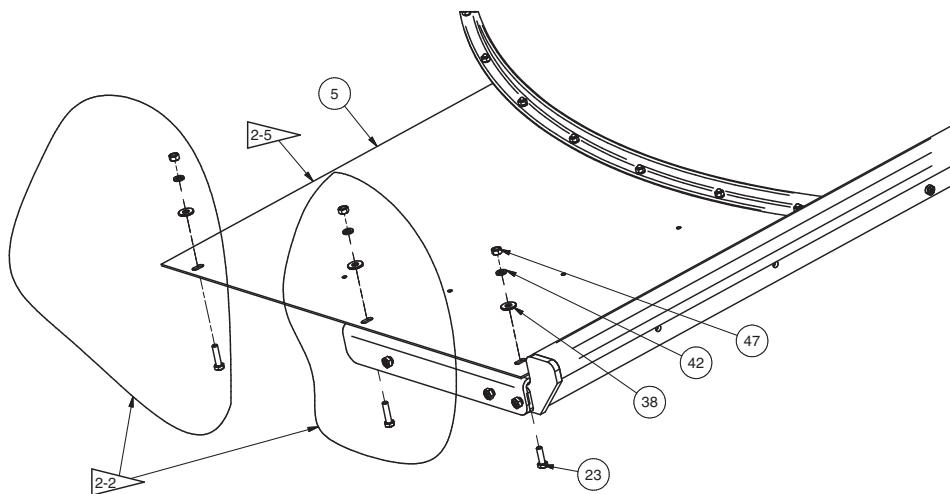

TOP PLATE INSTALLATION

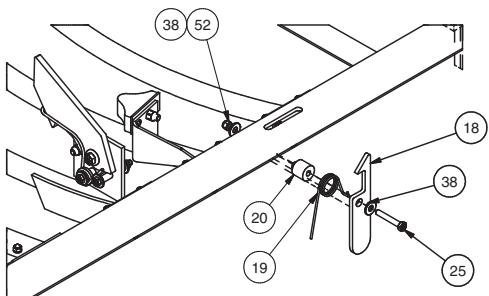



HOOD LATCH

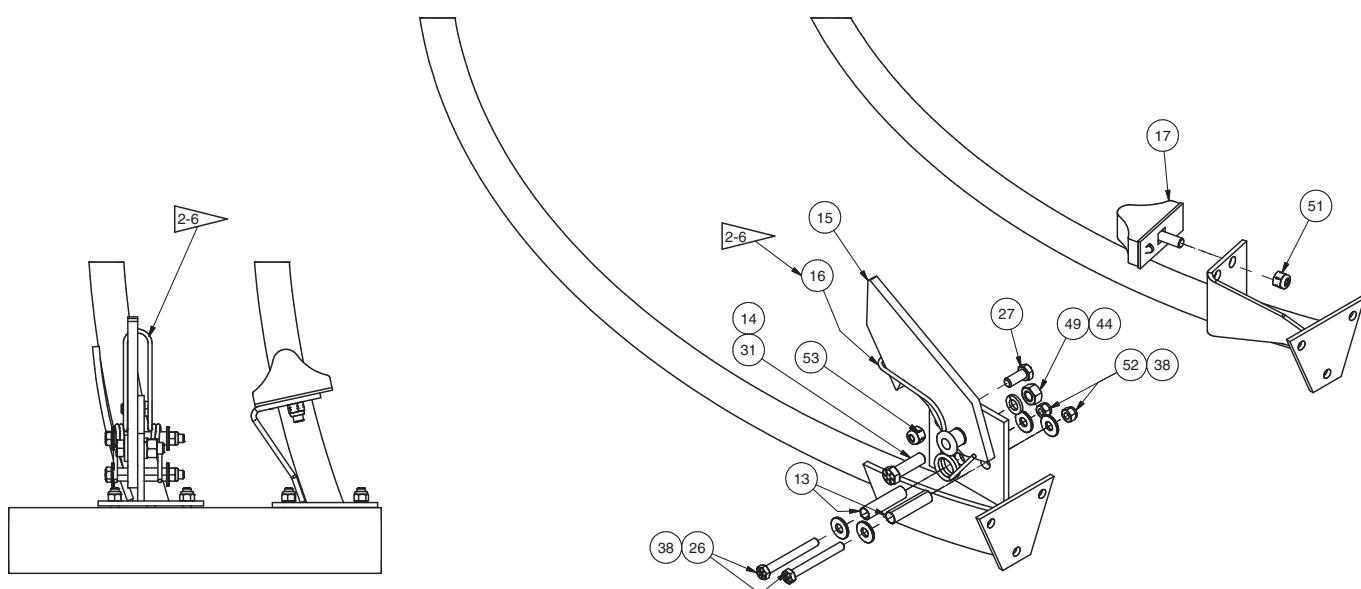


FASTENERS FOR LATCH, SPRING, AND STOP

Feed House Installation, 16" Chamber


Page 4 of 5

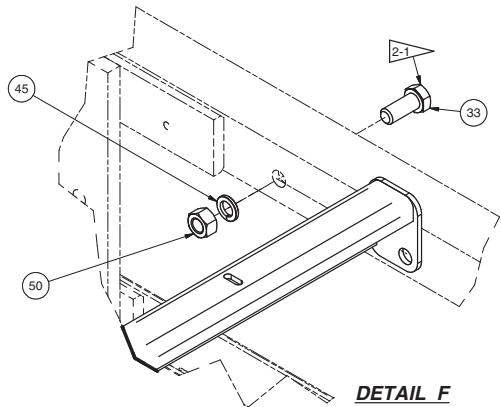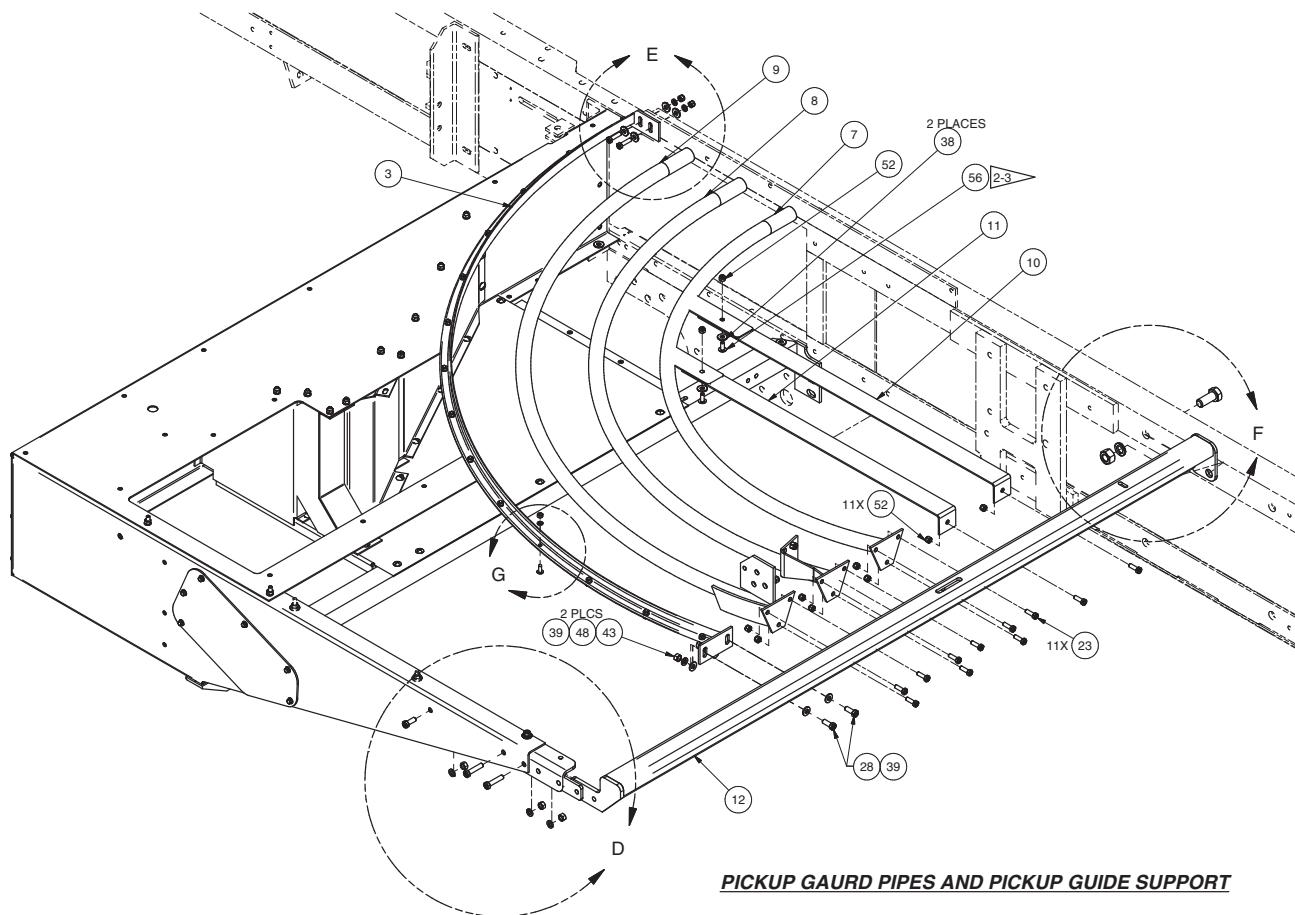


DETAIL F

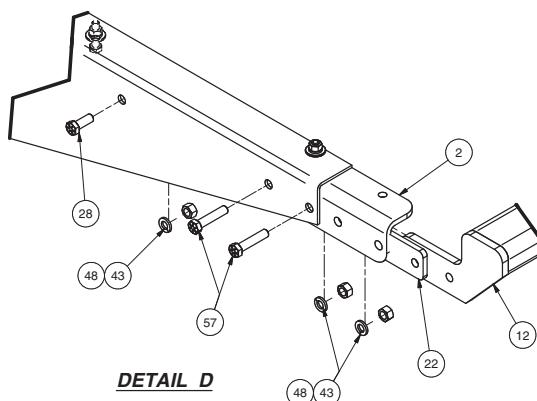

DETAIL D

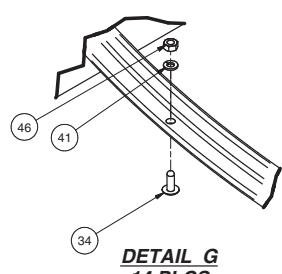

DETAIL G
14 PLCS

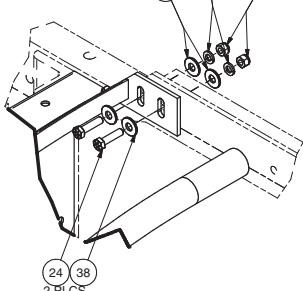


DETAIL E
Allied Systems
COMPANY

- NOTES:
- 2-1 REUSE FASTENERS ALREADY PROVIDED ON BULL GEAR INSTALLATION.
 - 2-2 FASTENERS PROVIDED IN SHIELD INSTALLATION.
 - 2-3 FLAT WASHER LOCATED UNDER BOLT HEAD
 - 2-4 73.5" LENGTH FROM INSIDE OF FEED HOUSE TO FRAME
 - 2-5 EDGE OF PLATE (CVR0020465) MUST LINE UP WITH MATING SHIELD
 - 2-6 SPRING FOR FEEDARM LATCH (F000000281) GOES ON TOP OF LATCH (F000001563).

Feed House Installation, 16" Chamber

Page 5 of 5

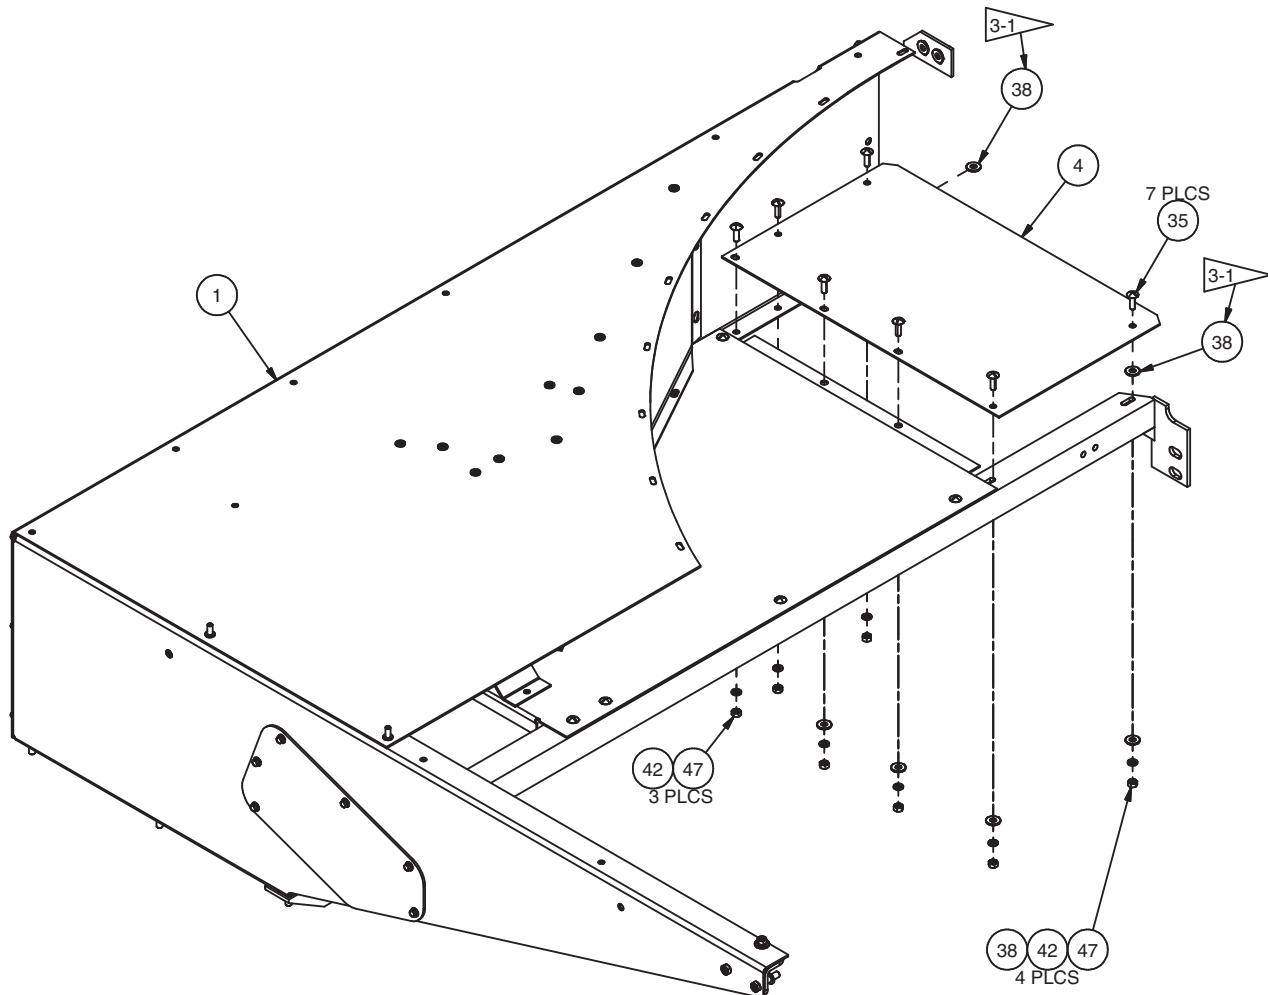


901970 WEAR PLATE INSTALL 16" 3-TIE





WASHER ADD BETWEEN BOTTOM WEAR PLATE
AND FEED HOUSE TO INSURE WEAR PLATE IS
ABOVE KNIFE, (AS REQUIRED)


Feeder House Assembly, 16" Chamber

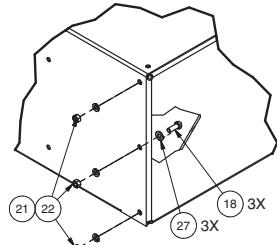


END PLATE

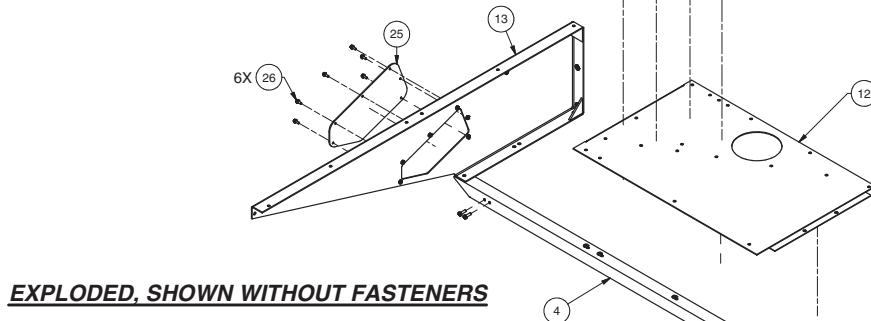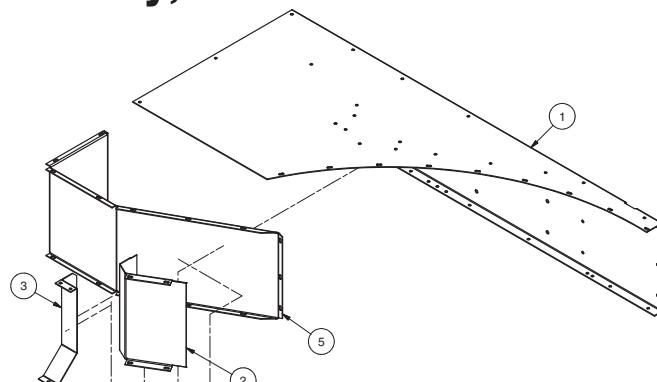

EXPLODED, SHOWN WITHOUT FASTENERS

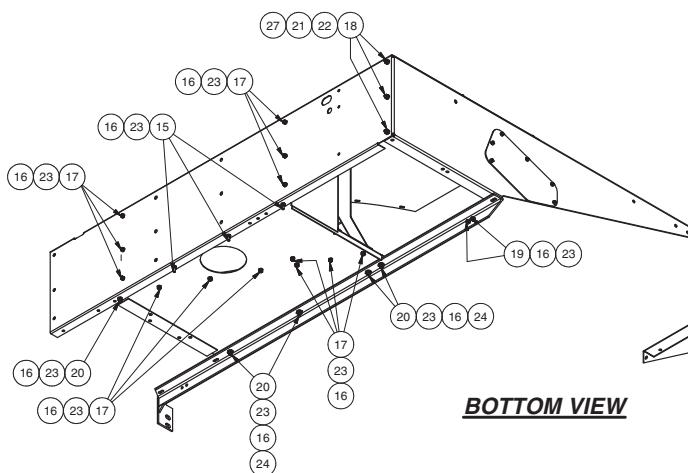

BOTTOM VIEW

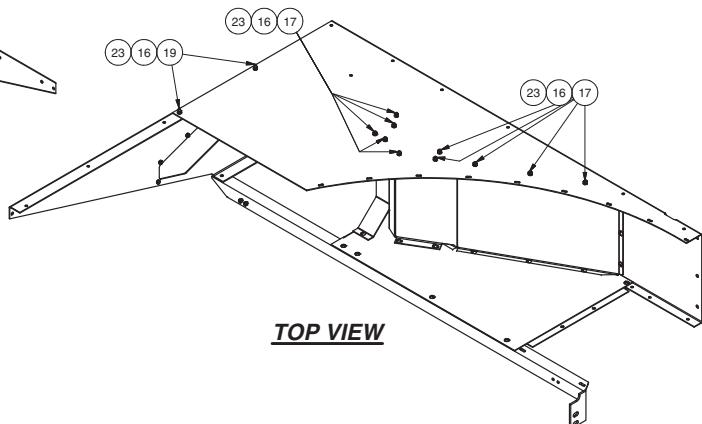

TOP VIEW

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
FH00016370			Feeder House Assembly				
1	FH00020212	1	. Plate, Housing	18	Y17C-0616	3	. Capscrew
2	FH00020905	1	. Plate, Ext	19	R13811014	4	. Capscrew
3	FH00020987	1	. Trough Ext, Auger	20	SMTS020002	5	. Machine Screw
4	SUP0023008	1	. Feeder House Support	21	R13812514	3	. Lockwasher
5	FH00020867	1	. Plate, Back	22	R13809551	3	. Hex Nut
12	FH00020198	1	. Plate, Bottom	23	R13811512	35	. Hex Nut
13	FH00004907	1	. Plate, Feeder House	24	223428	4	. Washer
15	R13811015	3	. Capscrew	25	902681	1	. Cover
16	R13812513	35	. Lockwasher	26	SMS0000300	6	. Screw, Ser Flg
17	SMT0000201	23	. Screw, Machine	27	221767W	3	. Flat Washer

Rev L

This page is intentionally left blank.

Section 8


Knotter

Knotter Installation, Conventional 2 Tie	8-3
. Tank/Pump Assembly, Conventional Knotter.....	8-6
. Knotter Assembly, Conventional 2 Tie.....	8-7
.. Housing Assembly, Knotter Clutch.....	8-13
.. Disc and Bearing Assembly	8-14
.. Knotter Head Assembly, Conventional.....	8-15
. Meter Wheel Assembly, 2 Tie	8-17
. Trip Mount Assembly.....	8-18
 Knotter Installation, Tailless 2 Tie.....	8-19
. Knotter Assembly, Tailless 2 Tie	8-23
.. Knotter Head Assembly, Tailless	8-28
. Trip Mount Assembly, Tailless 2 Tie	8-31
 Knotter Drive Installation.....	8-32
Knotter Fan Installation.....	8-34
. Knotter Fan Assembly	8-35
 Top Plate Installation, Conventional 2 Tie	8-36
Top Plate Installation, Tailless 2 Tie	8-37
 Twine Box Installation, 6 Compartment	8-38
. Twine Box Assembly, 6 Compartment.....	8-40
Twine Box Installation, 9 Compartment	8-42
. Twine Box Assembly, 9 Compartment.....	8-44
Twine Box Installation, 12 Compartment	8-46
. Twine Box Assembly, 12 Compartment.....	8-48
. Twine Tension Frame Assembly	8-50
Twine Box Divider, 12 Compartment	8-51

This page is intentionally left blank.


Knotter Installation, Conventional, 2 Tie

Page 1 of 3

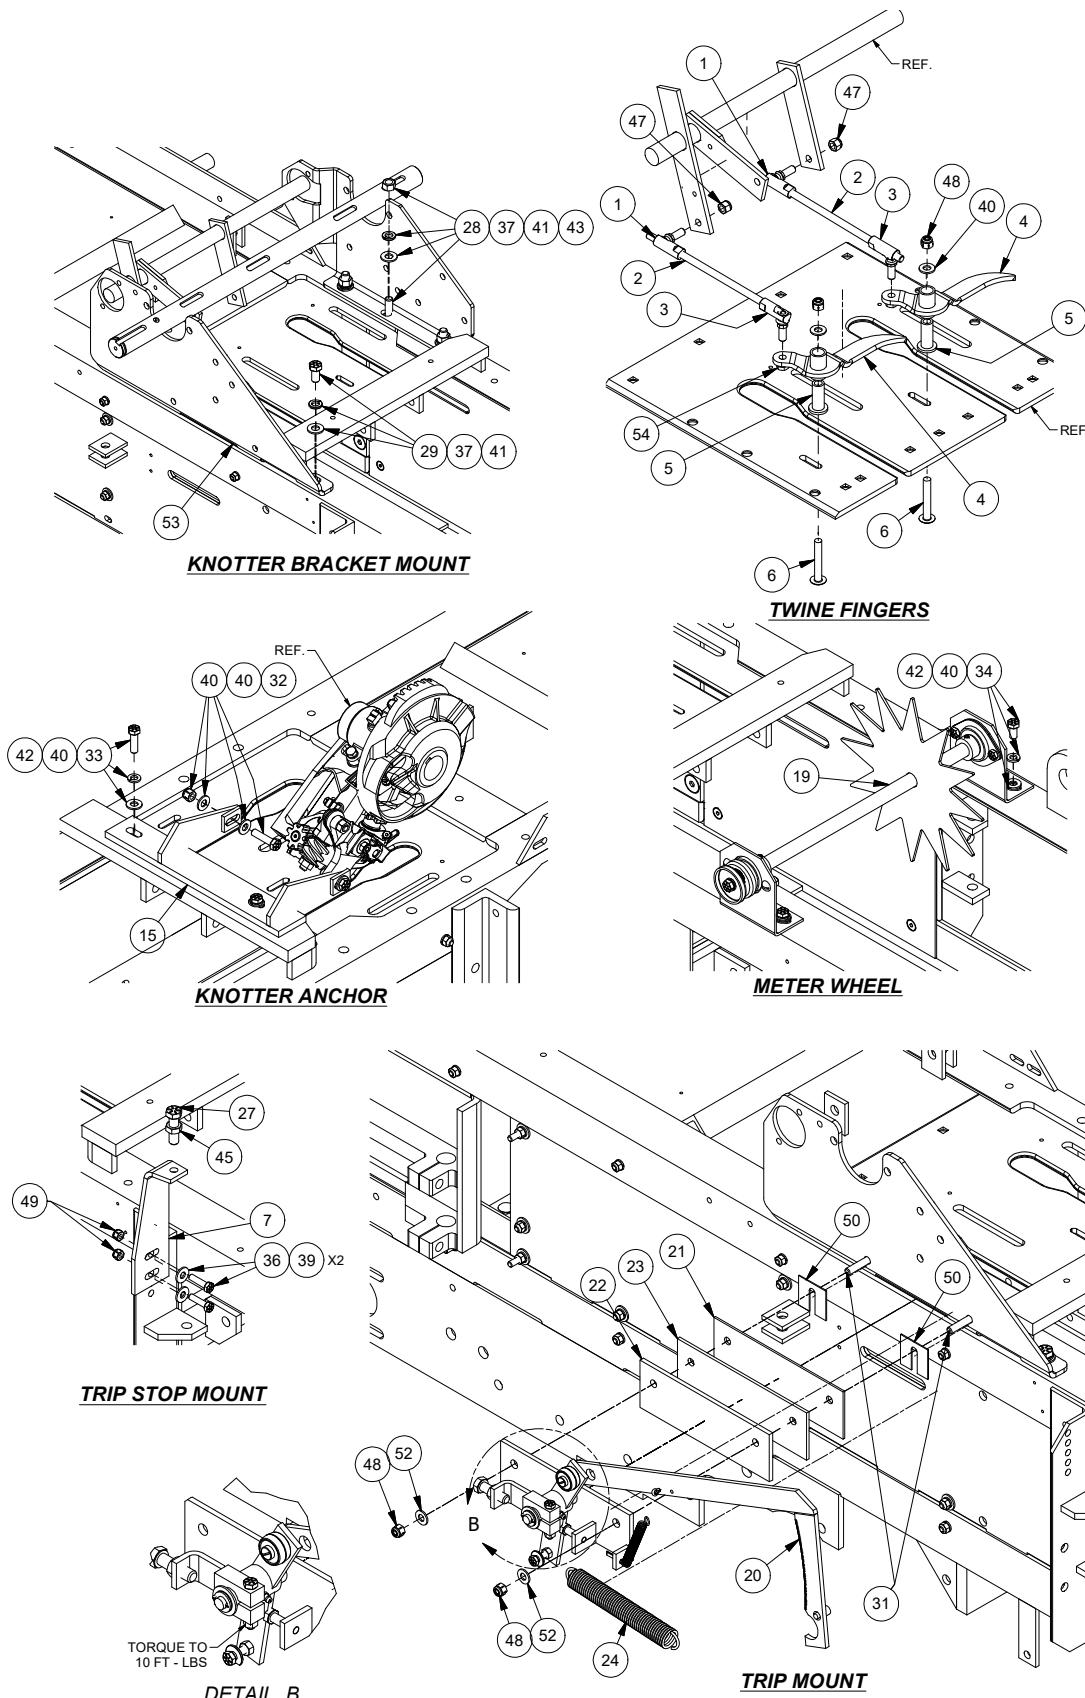

Knotter Installation, Conventional, 2 Tie

Page 2 of 3

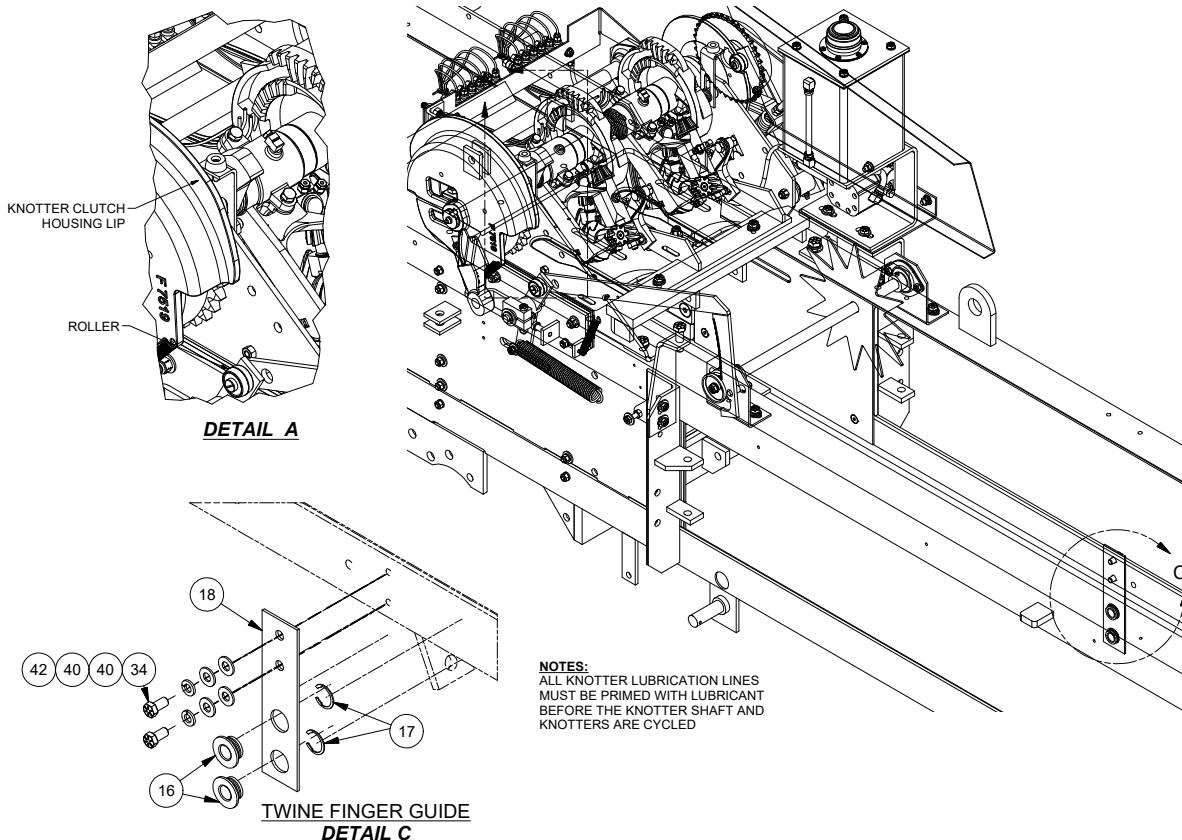

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902596		Knotter Installation, Conventional				
1	F000001294	2	. Ball Joint, RH	32	Y17C-0624	2	. Capscrew
2	F000008391	2	. Rod, Drive	33	221499W	4	. Capscrew
3	F000001295	2	. Ball Joint, LH	34	162572W	6	. Capscrew
4	F000007885	2	. Twine Finger - 2 Tie	35	R13811016	1	. Capscrew
5	F000000181	2	. Bushing, Twine Finger	36	R13811015	2	. Capscrew
6	F000001672	2	. Carriage Bolt	37	15135W	10	. Washer
7	F000001632	1	. Trip Bar	39	223428	13	. Washer
8	F000008205	1	. Bracket	40	221767W	22	. Washer
9	F000008206	1	. Mounting Bracket	41	R13812516	8	. Lockwasher
10 *a	F000008210	1	. Auto Luber Tank & Pump Assy	42	R13812514	10	. Lockwasher
11	FT00000165	1	. Assembly, Chain	43	221711W	5	. Hex Nut
12	F000008201	1	. Sprocket	44	221705W	2	. Hex Nut
13	MNT037222A	1	. Mounting Plate	45	234218	1	. Jam Nut
14 *b	SAL2700002	1	. Assembly, Conv Knotter	46	156133W	2	. Locknut
15	F000008388	1	. Anchor Weldment, Knotter HD	47	R13811183	2	. Use 224118
16	F000000856	2	. Bushing	48	237567	6	. Locknut
17	F000000857	2	. Ring, Snap	49	232939	4	. Nut, Esna
18	F000000524	1	. Holder F/Twine Guide Bushing	50	SHM0034535	2	. Shim, Plunger Roller
19 *c	901140	1	. Kit, Meter Wheel	51	Y09G-0532	2	. Capscrew
20 *d	SAL0000005	1	. Assembly, Trip Mount	52	Y27E-06	2	. Washer
21	SHM0001250	1	. Shim, Knotter Trip	53	SHM037779B	2	. Shim, Knotter Mount
22	SHM0000250	1	. Shim, Knotter Trip	54	NFL0003750	2	. Nut, LH Jam
23	SHM0001875	1	. Shim				
24	F000001517	1	. Spring, Trip				
25	NYL0000250	3'	. Tubing, Nylatflow				
26	AO00000255	3'	. Loom, Split				
27	221569W	1	. Capscrew				
28	Y09G-0832	5	. Capscrew				
29	221560W	3	. Capscrew				
31	R13801813	2	. Capscrew				

*a See Separate Coverage (Page 8-6)

*b See Separate Coverage (Page 8-7)


*c See Separate Coverage (Page 8-17)

*d See Separate Coverage (Page 8-18)


Rev B

Knotter Installation, Conventional, 2 Tie

Page 3 of 3

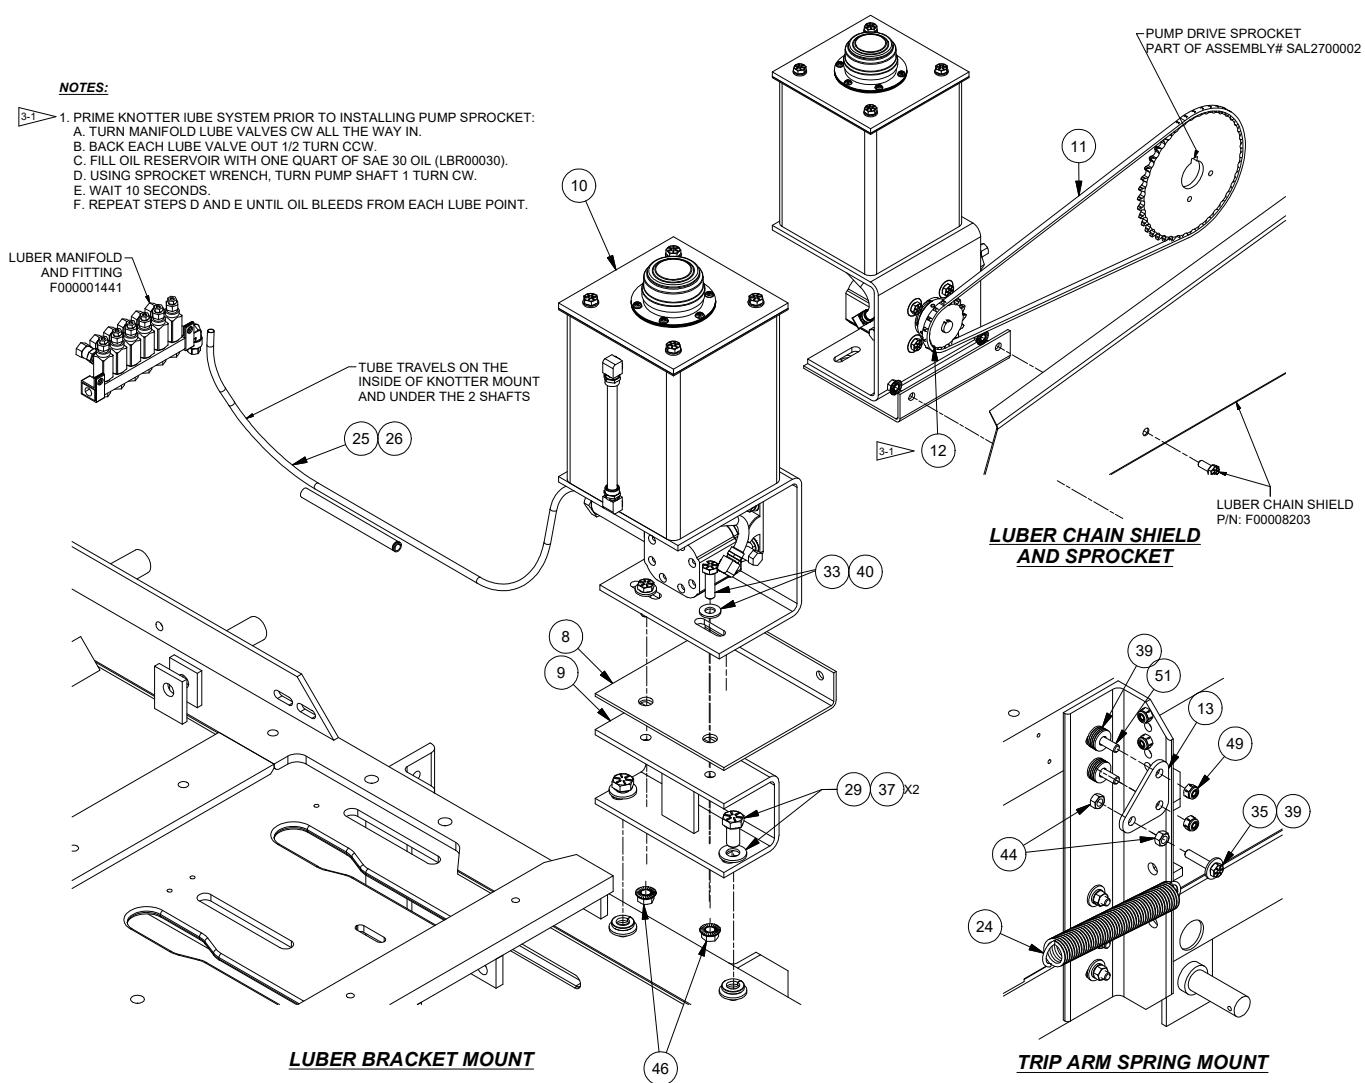


Tank/Pump Assembly, Conventional Knotter

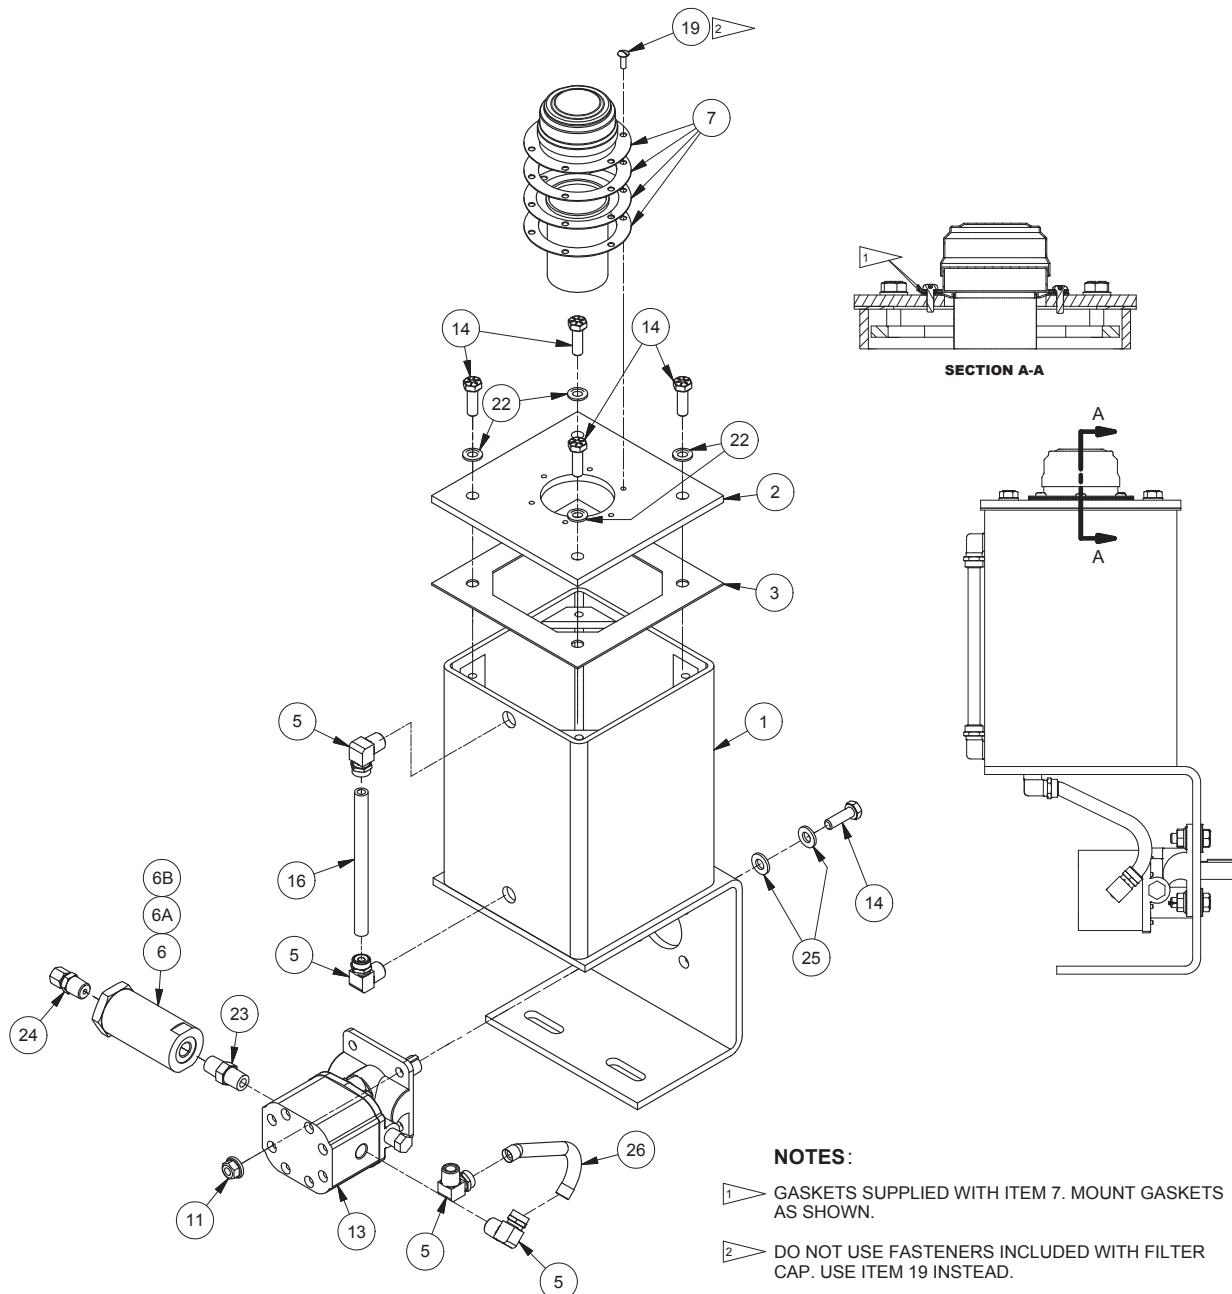

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	F000008210		Tank/Pump Assembly				
1	F000008196	1	. Tank, Auto Lubber	14	R13811014	8	. Capscrew
2	F000008197	1	. Tank Cover	16	F00008199	1'	. Tube, Sight
3	F000008198	1	. Gasket	19	230640	6	. Machine Screw
5	F000008209	4	. Fitting	22	214479	4	. Seal
6	FIL0009052	1	. Filter	23	221280	1	. Fitting
6A	259014	1	.. Spring Kit	24	F000008221	1	. Connector
6B	259013	1	.. Element and Seal Kit		IMP26106	1	.. Nut & Sleeve
7	FIL0010003	1	. Cap, Filter		IMP26006	1	... Sleeve
11	00273802	4	. Nut	25	223428	4	. Flat Washer
13	PMP0000003	1	. Pump	26	906907	1	. Tube

Knotter Assembly, Conventional 2 Tie

Page 1 of 6

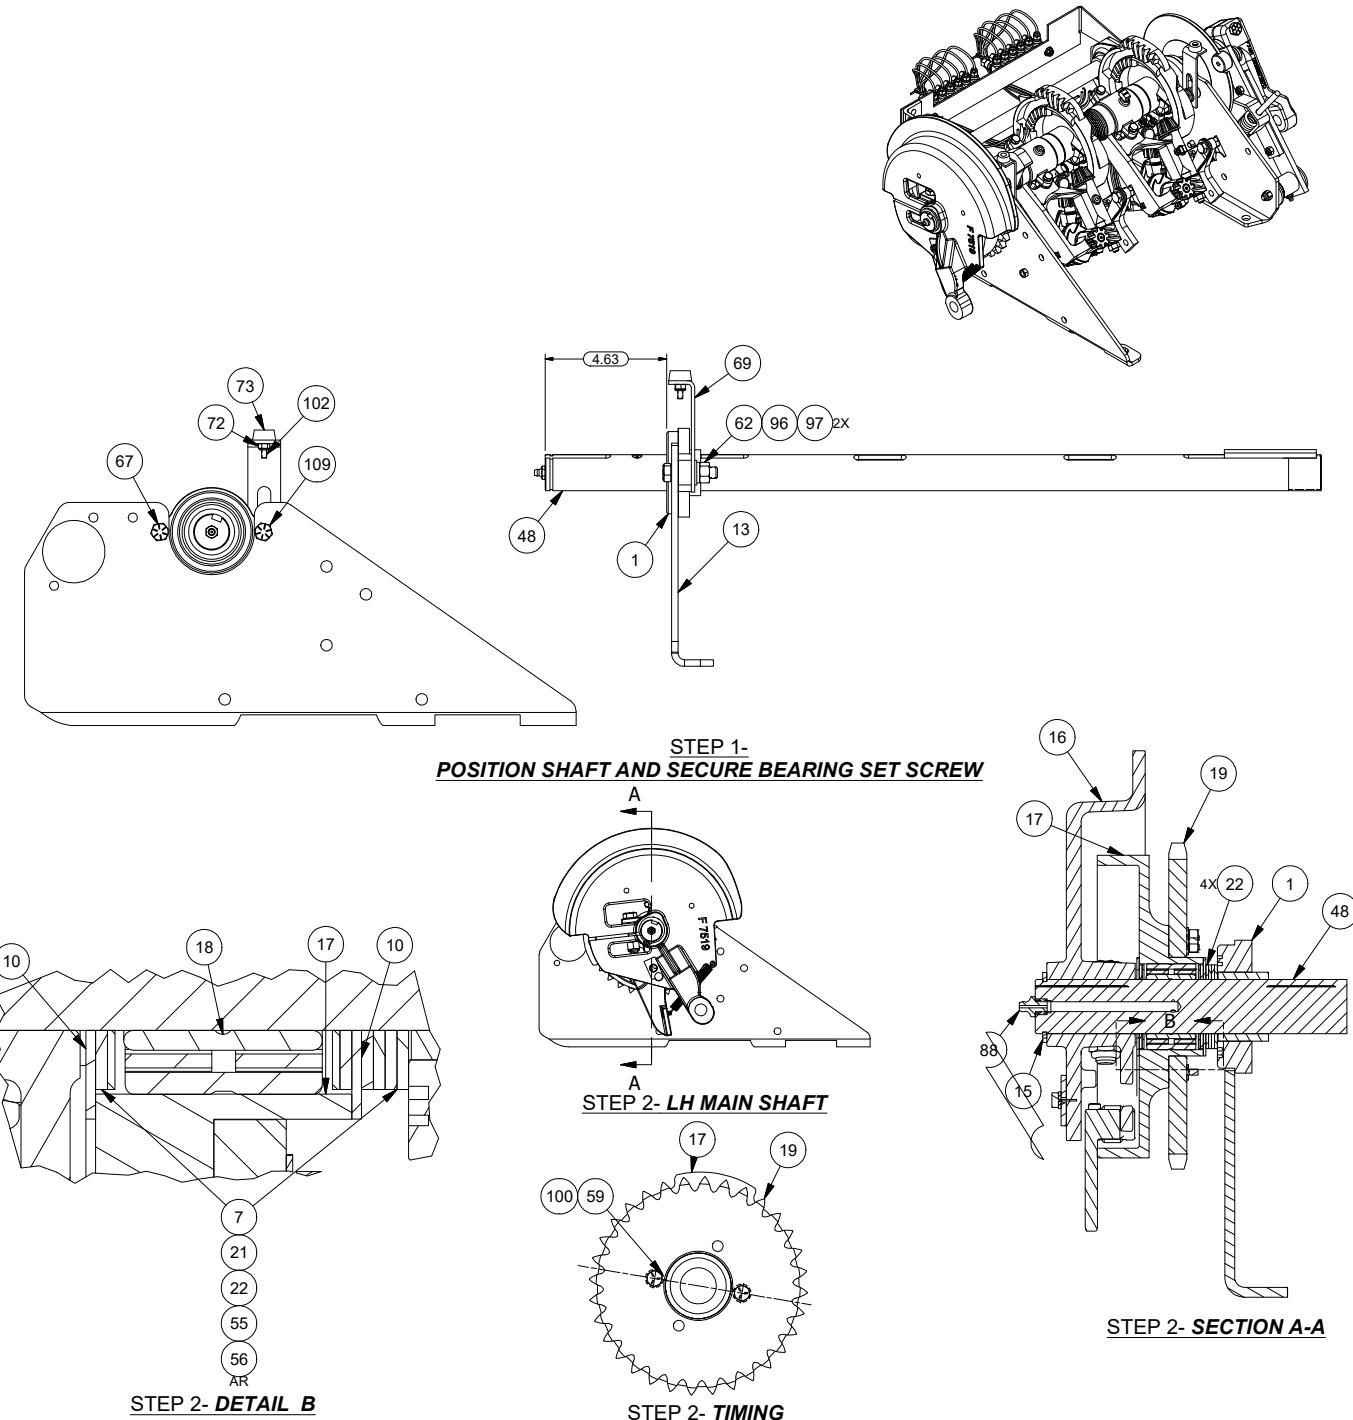

NOTES:

- 2-1. SECURE ITEM 1 TO ITEM 13, MEASURE 4.63" FROM SHAFT END TO BEARING BASE AND TIGHTEN SET SCREW ON ITEM 1 TO 165 IN-LBS.
- 2-2. TIMING FOR ITEM 19: GRADE 5 SHEAR BOLTS SHOULD BE USED IN HOLES THAT ALIGN WITH THE TEETH OF ITEM 19.
- 2-3. USE AN EQUIVALENT AMOUNT OF SHIMS TO CENTER ITEM 18 ON THE RACE OF ITEM 17. THE GAP BETWEEN ITEM 10 AND ITEM 17 SHOULD BE .025". THE HOLE OF ITEM 18 SHOULD ALIGN CLOSELY WITH THE LUBE HOLE ON THE SHAFT (ITEM 48).
- 2-4. SHIM AS REQUIRED (MAY NOT BE NEEDED) BETWEEN ITEMS 16 & 17 TO POSITION THE ROLLER OF ITEM 16 INTO ITEM 17 AS FAR IN AS POSSIBLE BUT STILL ALLOWING FREE MOVEMENT.
- 2-5. SHIM AS REQUIRED (MAY NOT BE NEEDED) TO FILL ANY SPACING BETWEEN ITEM 16 AND SNAP RING (ITEM 15).
- 2-6. USE LOCTITE #635 TO SECURE BUSHING (ITEM 18) TO SHAFT (ITEM 48). DO NOT GET LOCTITE IN LUBER HOLE ON SHAFT.

Knotter Assembly, Conventional 2 Tie

Page 2 of 6

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
SAL2700002		Knotter Assembly, Conv. 2-Tie					
1	F000007063	2	. Bearing	56	SHM0000105	2	. Shim
2	F000000099	3	. Set Collar	57	18515W	7	. Washer
3	CAM0007180	1	. Cam	58	221771W	6	. Washer
4	F000004104	3	. Key	59	236655	2	. Lockwasher
5	F000007904	3	. Key	61	F000008288	8	. Fitting
6	F000008054	1	. Key	62	221710W	4	. Hex Nut
7	R616841	11	. Mach Bushing	63	18508W	3	. Capscrew
8	GER0006068	2	. Gear, Modular Cam	64	221767W	2	. Washer
9	BKT0032984	1	. Bracket,Auto Luber	65	R13801850	1	. Capscrew
10	F000004136	2	. Washer	66	910363	2	. Bearing, Cam Follower
11	F000001441	1	. Fittingbow	67	R13810879	4	. Capscrew
12	F000007461	1	. Needle Yoke Drive Arm	68	223572	1	. Fitting
13	F000008369	1	. Plate, LH Mounting	69	STO0022419	2	. Bar, Stop
14	F000008368	1	. Plate, RH Mounting	70	221703W	4	. Hex Nut
15	304526W	1	. Ring, Snap- Ext	71	221708W	4	. Hex Nut
16	*a F000007519	1	. Housing Assembly	72	223799	2	. Nut, Esna
17	*b 900249	1	. Disc & Bearing Assembly	73	BMP0004243	2	. Rubber Bumper F/Hood
18	F000004135	1	. Inner Race	74	910370	1	. Twine Finger Drive Shaft
19	F000000755	1	. Sprocket, Knotter Clutch	75	LUB0833116	2	. Manifold
21	F000004161	6	. Mach Bushing	76	R13811443	2	. Washer
22	F000004160	10	. Mach Bushing	78	*c KNT006006A	2	. Head Assembly
23	NEJ0013750	1	. Hce-549 Nut 1-3/8 Unf	79	15113W	1	. Locknut
24	F000007528	1	. Weldment, Disc Brake	82	221705W	6	. Hex Nut
25	F000007450	1	. Brake Plate W/Lining	83	R13812513	5	. Lockwasher
26	F000007451	2	. Brake Plate Stud	84	R13806234	2	. Capscrew
27	F000007453	2	. Spring, Brake Plate	86	ZZ00000419	1	. Key
28	F000007449	1	. Plate & Lining (Msds Reqd)	87	R13811082	1	. Capscrew
29	F000000246	1	. Washer	88	00191758	1	. Fitting, Lube
30	F000007587	2	. Seal	89	221518W	1	. Capscrew
31	LEV0025133	1	. Lever Assembly	90	237567	1	. Locknut
	F000007586	1	. . Bushing	91	R13801813	1	. Capscrew
32	910372	1	. Weldment, Upper Saddle Lever	95	R13802914	3	. Washer
33	F000007585	1	. Sleeve, Lever	96	R13811432	4	. Washer
34	F000007448	1	. Eyebolt	97	15157W	4	. Lockwasher
35	F000007559	1	. Spring, Saddle Lever	100	16805W	2	. Capscrew
37	F000000802	1	. Washer	101	221711W	1	. Hex Nut
38	223587	2	. Locknut	102	Y74G-(1032)12	2	. Capscrew
39	R13811015	2	. Capscrew	104	242601	2	. Cable Tie (Black)
40	R13811190	2	. Locknut	105	221763W	1	. Washer
41	F000008287	4	. Fitting	106	235708	1	. Jam Nut
43	F000008202	1	. Sprocket	107	R13810989	2	. Capscrew
44	F000006003	2	. Bearing & Set Collar	108	264150W	4	. Nut
45	F000006004	4	. Flanette	109	R13802037	2	. Capscrew
46	F000007959	1	. Bracket	112	NEJ0005000	2	. Nut, Esna Jam
47	221707W	5	. Hex Nut	113	191534W	1	. Nut
48	908339	1	. Shaft, Knotter	114	Y02F-0816	1	. Roll Pin
49	HTB0030006	1	. Capscrew				
50	18466W	2	. Capscrew				
51	F000001517	1	. Spring, Trip				
52	209511	1	. Fitting				
54	18497W	3	. Capscrew				
55	SHM0000103	2	. Shim				

*a See Separate Coverage (Page 8-13)


*b See Separate Coverage (Page 8-14)

*c See Separate Coverage (Page 8-15)

Rev V


Knotter Assembly, Conventional 2 Tie

Page 3 of 6

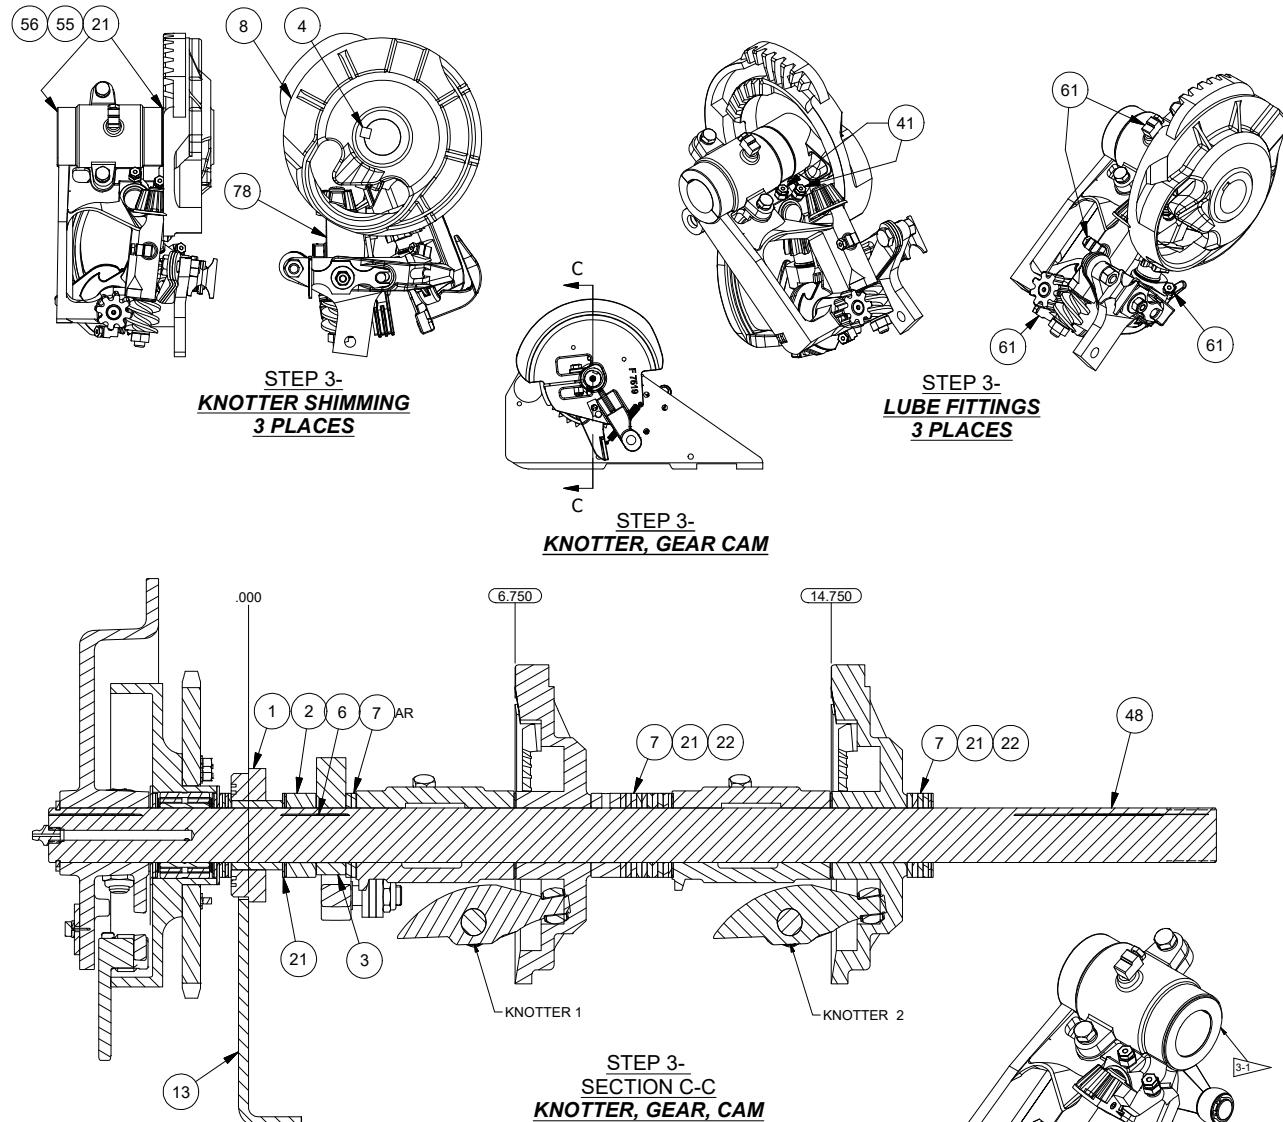

NOTES:


- 3-1. REMOVE PAINT FROM LOCATIONS ON KNOTTER THAT CONTACT SHIMS AND KNOTTER CAM/GEAR.
- 3-2. BREAK OFF SPECIFIED LOCATION OF KNOTTER SPRING ON KNOTTERS 1 & 2 DUE TO AN INTERFERENCE ISSUE.
- 3-3. SHIM AS REQUIRED SO THAT THERE IS .000" TO .005" CLEARANCE BETWEEN THE FLATS OF THE PINIONS ON ITEM 75 AND THE FLAT OF ITEM 8. USE FIXTURE TO CHECK SPACING BETWEEN MODULAR CAM GEAR (ITEM 8) WITH KNOTTER HEAD ASSEMBLY (ITEM 78). REFERENCE ASSEMBLY INSTRUCTIONS.
- 3-4. REFER TO PHOTO SHEET FOR LUBE FITTING ORIENTATION AND NUMBERING.

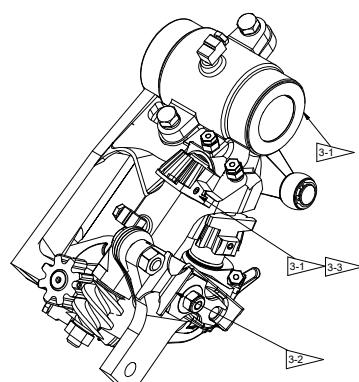

STEP 3-KNOTTER PREP

Knotter Assembly, Conventional 2 Tie

Page 4 of 6

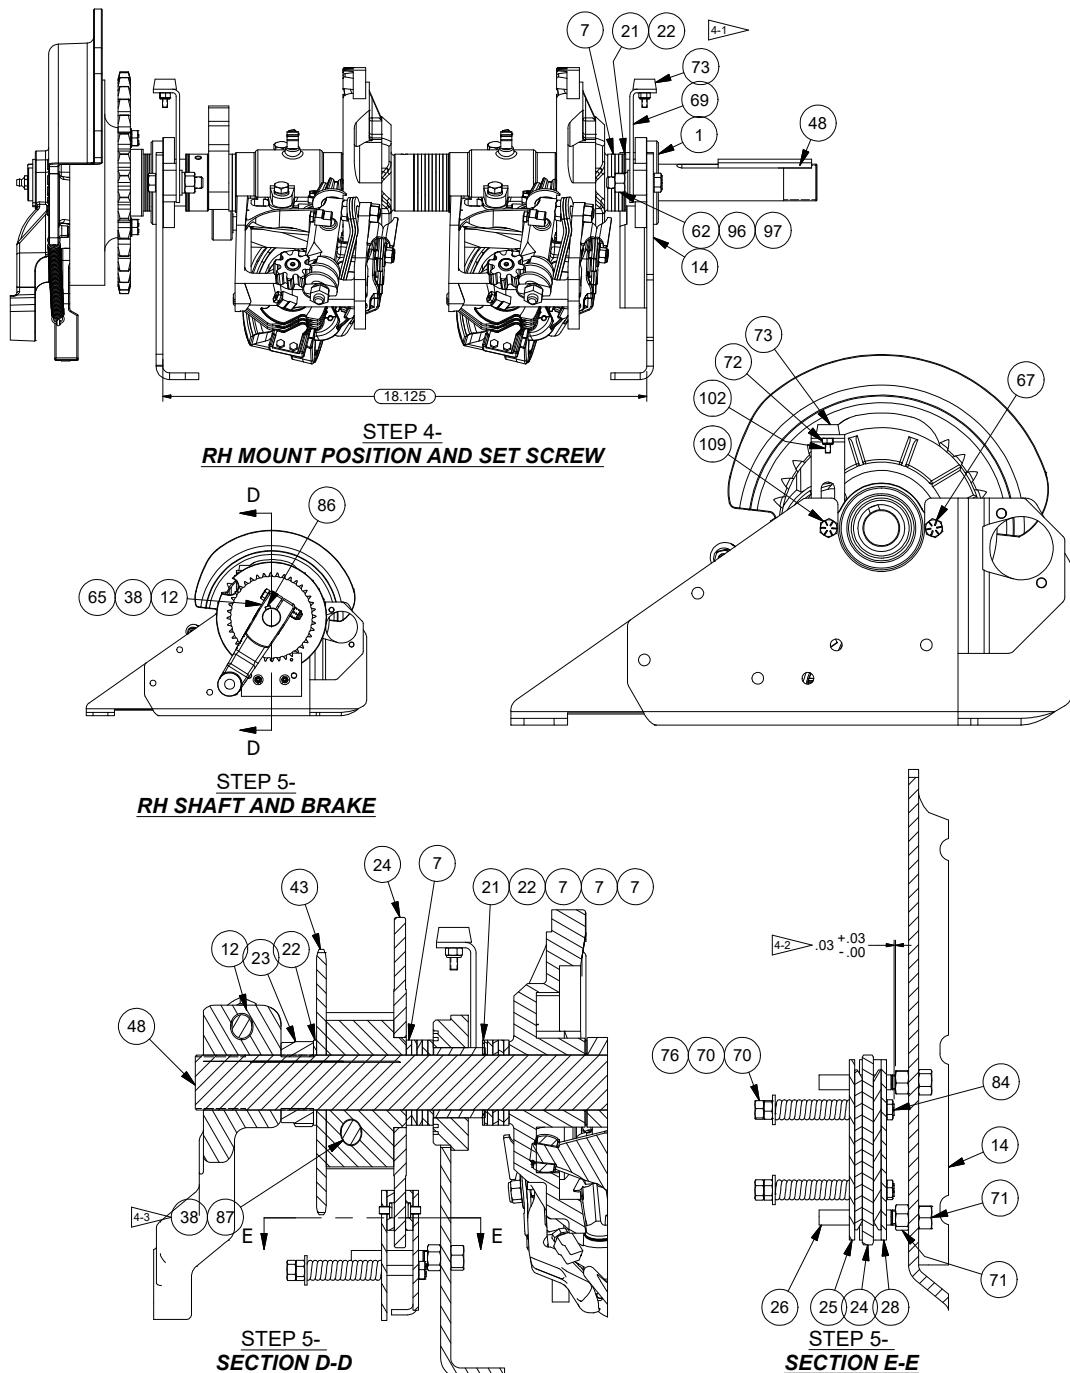

NOTES:


4-1. SHIM AS REQUIRED TO MEET 18.125" WIDTH REQUIREMENT OF ITEM 13 & ITEM 14. TIGHTEN SET SCREW ON ITEM 1 TO 165 IN-LBS ONCE WIDTH REQUIREMENT IS MET.

4-2. SHIM AS REQUIRED SO THAT THE INNER BREAK PAD (ITEM 28) CLEARS THE NUTS (ITEMS 84) BY .03" TO .06".

4-3. USE ANTI-SEIZE BETWEEN NUT (ITEM 23) AND THE SHAFT THREADS (ITEM 48).

Knotter Assembly, Conventional 2 Tie

Page 5 of 6

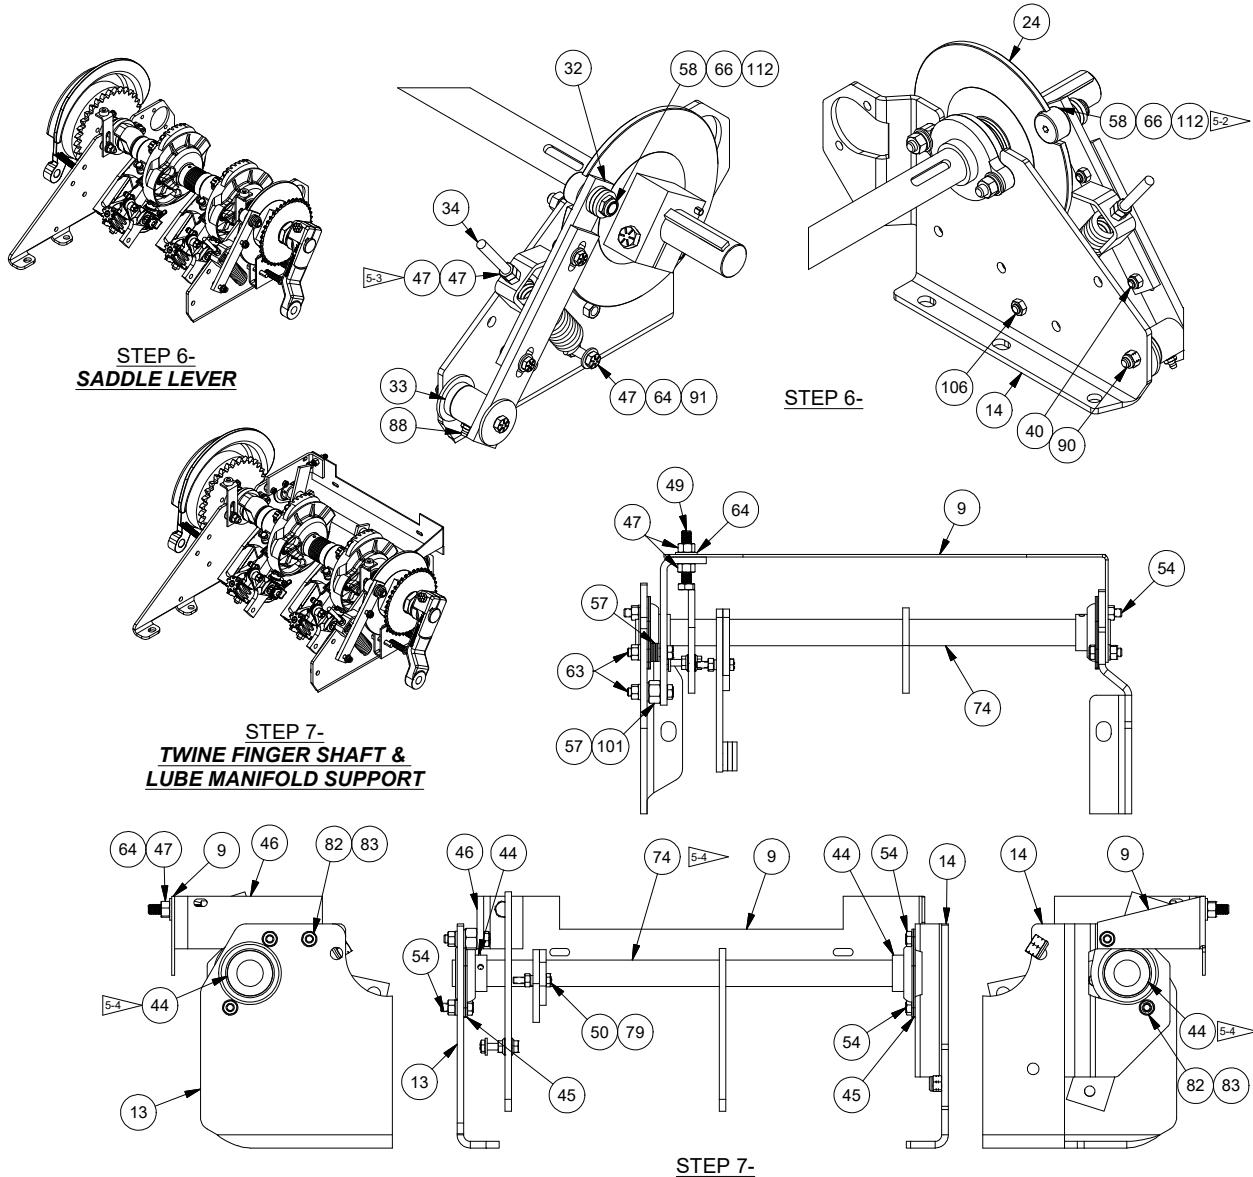


NOTES:

- 5-1. USE ITEM 33 TO PRESS SEALS (ITEM 30, QTY 2) INTO SADDLE LEVER (ITEM 31) ON BOTH SIDES OF INTERNAL BUSHING.
- 5-2. USE WASHER (ITEM 58) AS REQUIRED TO CENTER ROLLER (ITEM 66) INTO BRAKE DISC (ITEM 24).
- 5-3. TIGHTEN NUTS (ITEM 47) 8 FULL TURNS IN PAST SPRING FREE LENGTH (ITEM 35 UNLOADED).
- 5-4. CENTER TWINE FINGER SHAFT (ITEM 74) IN BEARINGS (ITEM 44, QTY 2) BEFORE TIGHTENING THE SET SCREWS ON BEARINGS TO 87 IN-LBS. BAR ON ITEM 74 SHOULD MAKE SOLID CONTACT WITH ADJUSTMENT BOLT (ITEM 49).

Knotter Assembly, Conventional 2 Tie


Page 6 of 6

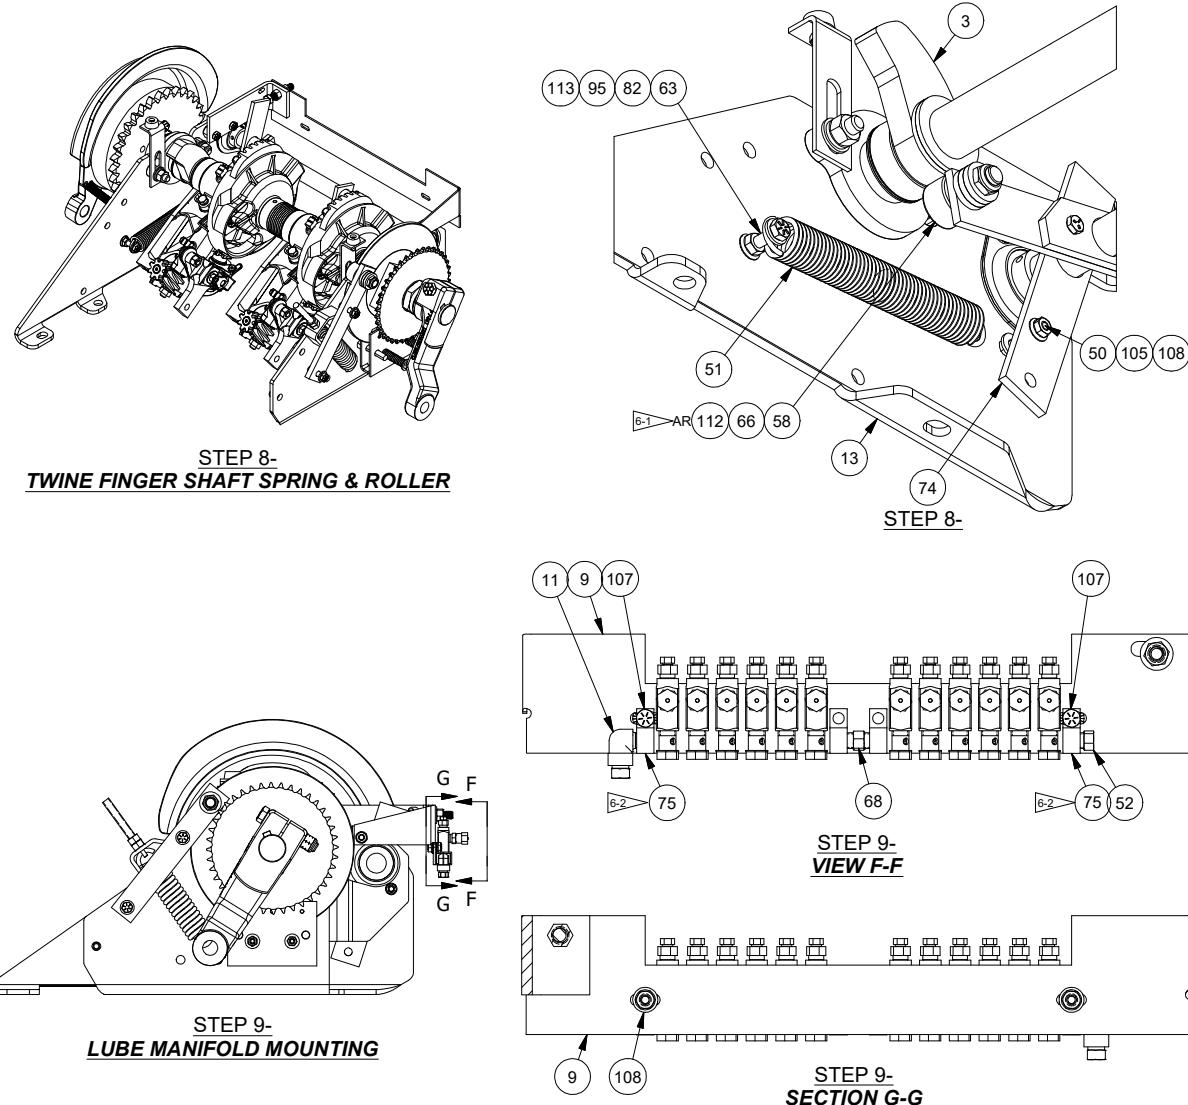

NOTES:

- 6-1. USE WASHER (ITEM 58) AS REQUIRED TO CENTER ROLLER (ITEM 66) ON CAM (ITEM 3)
- 6-2. REFER TO PHOTO SHEET FOR LUBER LINE (ITEM 53) ROUTING AND ZIP TIE (ITEMS 104 & 111) PLACEMENT. THESE ITEMS ARE NOT SHOWN ON THIS PRINT.


Housing Assembly, Knotter Clutch

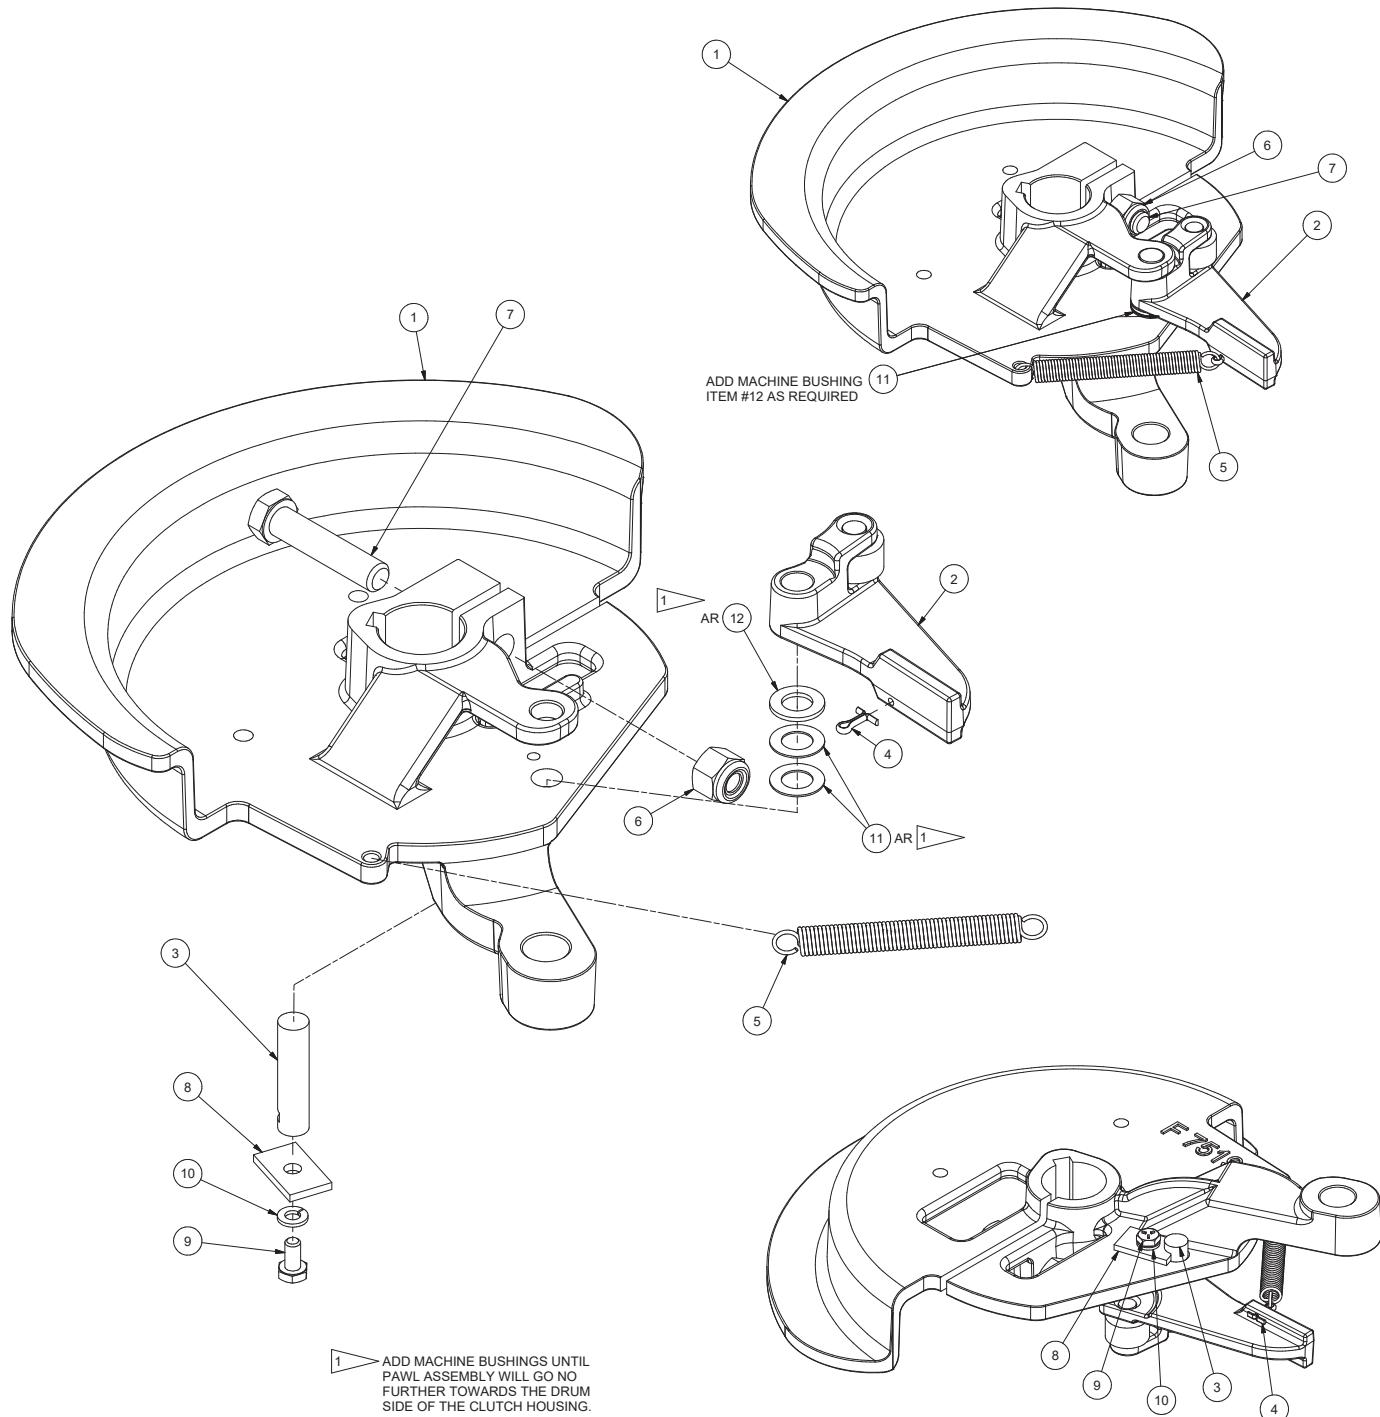

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
F000007519			Clutch Housing Assembly				
1	CLH035959D	1	. Housing, Knotter Clutch	8	KPR0020740	1	. Plate, Keeper
2	CLH0020799	1	. Pawl, Knotter Clutch	9	133469W	1	. Capscrew
3	PIN0020739	1	. Pin	10	R13812512	1	. Lockwasher
4	00103384	1	. Cotter Pin	11	F000008315	2	. Washer
5	F000004115	1	. Spring, Ext	12	ZZ00000210	1	. Mach Bushing
6	223587	1	. Nut, ESNA				
7	221574W	1	. Capscrew				

Rev C

Disc & Bearing Assembly

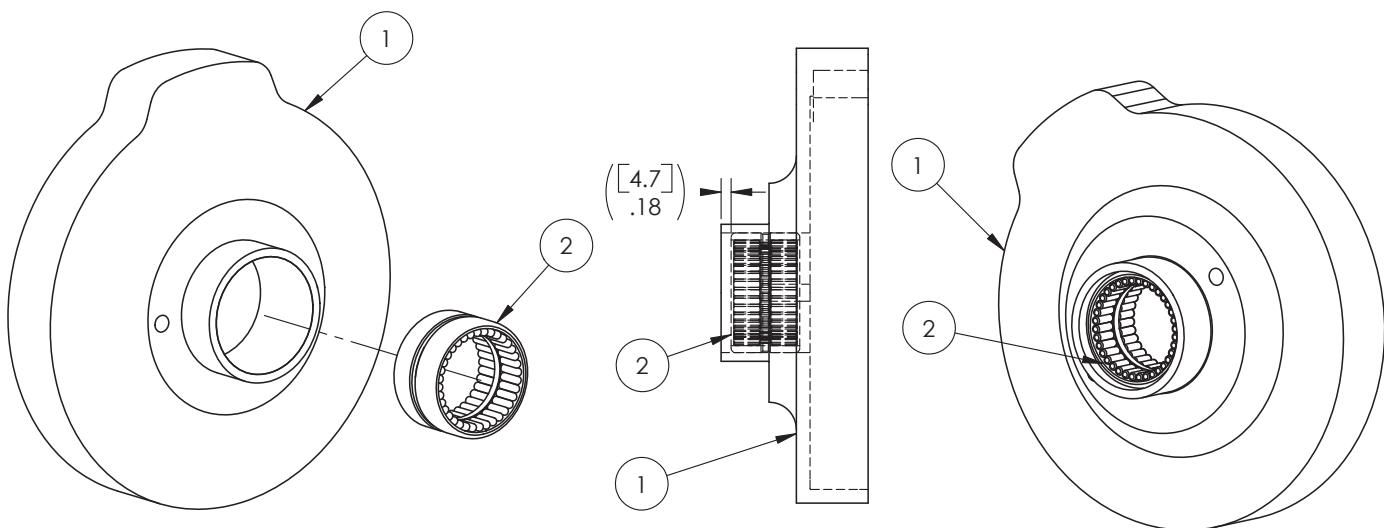

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	900249		Disc & Bearing Assembly				
1	*a -----		. Clutch Disc				
2	F000004134	1	. Bearing				


Rev -

*a Not Sold Separately

Knotter Head Assembly, Conventional



Page 1 of 2

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	KNT006006A		Head Assembly	18	RS00006003	1	. Bushing
1	KNT0060060	1	. Frame, Knotter	19	RS03451926	0	. Pin
2	Y09C-M0825	2	. Capscrew	20	F000007868	1	. Twine Holder - Plated
3	WLKM000080	2	. Lockwasher	21	F000008051	1	. Cam, Knotter Hook (Plated)
4	RS00006015	1	. Bill Hook	22	F000007948	1	. Screw, Knot Hook Cam Adjusting
5	RS00006002	1	. Bushing	23	F000007947	2	. Spring, Hook Cam Adjust (Plated)
6	253270	1	. Pinion, Bill Hook (Plated)	24	F000008052	3	. Spring
7	253271	1	. Pin	25	F000007870	2	. Cleaner, Twine Disc- Plated
8	F000007876	1	. Shaft, Worm	26	223428	1	. Washer
9	257609	1	. Washer	27	F000007949	1	. Nut, Esna
10	RS05227344	2	. Pin, Spiral	28	Y09C-M1030	1	. Capscrew
11	GER0007873	1	. Pinion (Plated)	29	NCHM010150	1	. Nut
12	F000008050	1	. Arm, Knife (Plated)	30	F000000659	2	. Washer
13	RS00602201	1	. Bushing	31	F000008068	3	. Spacer
14	F000007860	2	. Washer				
15	F000007976	1	. Snap Ring				
16	F000007871	1	. Pinion, Worm (Plated)				
17	RS00006085	1	. Retainer, Twine Disc				

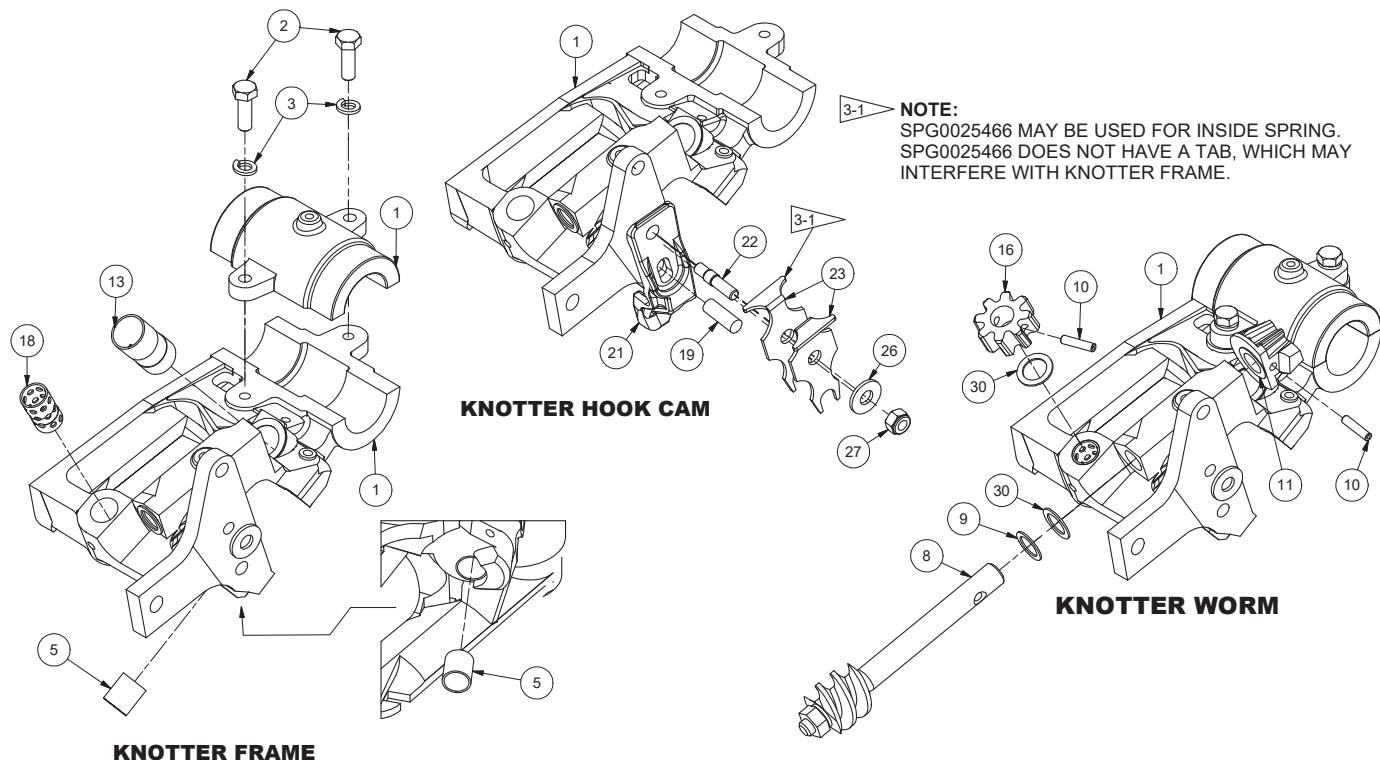


Knotter Head Assembly, Conventional


Page 2 of 2

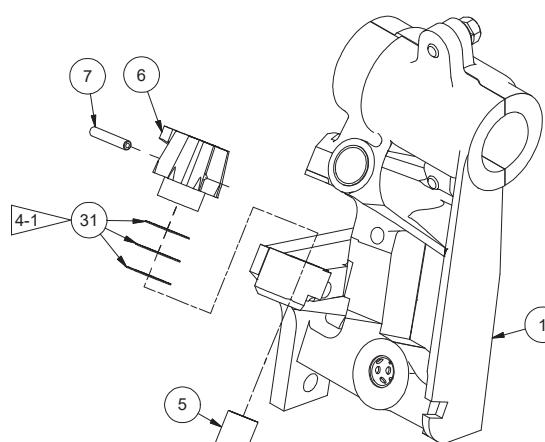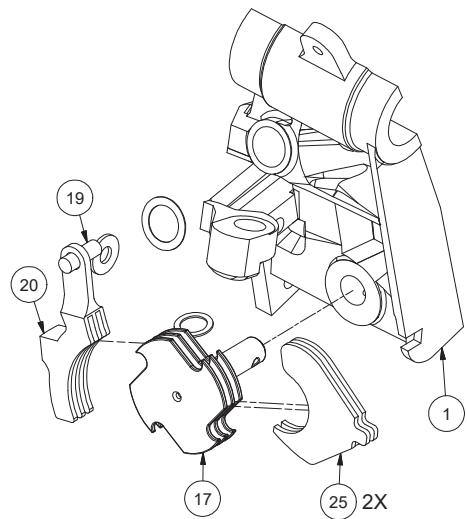


TWINE HOLDER

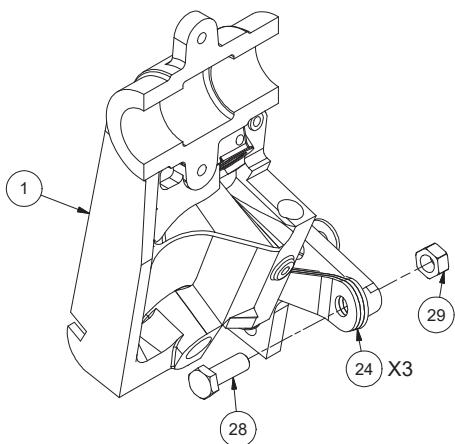


NOTE:
BILL HOOK PIN SPACER
(F000008068) IS USED TO
REMOVE MOVEMENT OF
THE BILL HOOK.

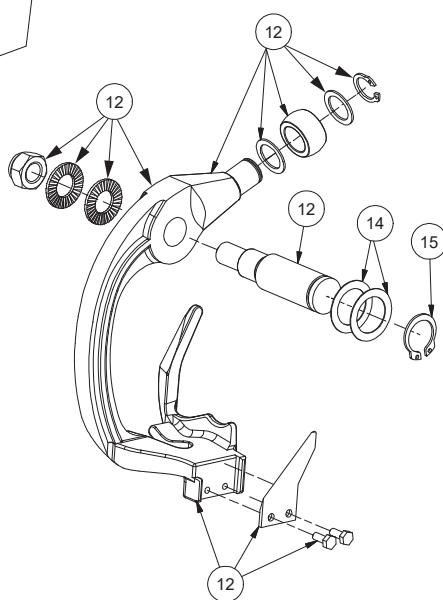

KNIFE ARM COMPLETE

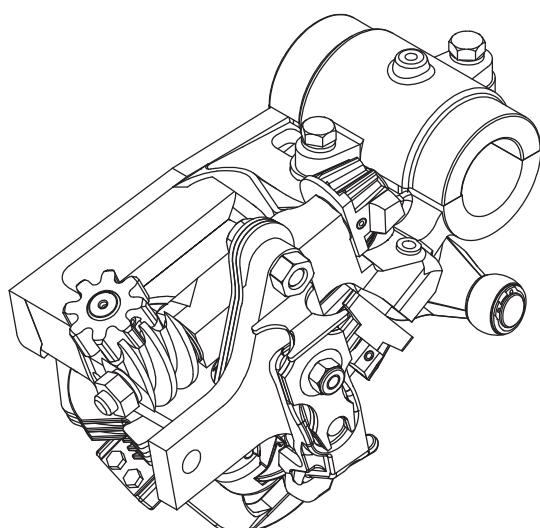


Meter Wheel Assembly, 2 Tie

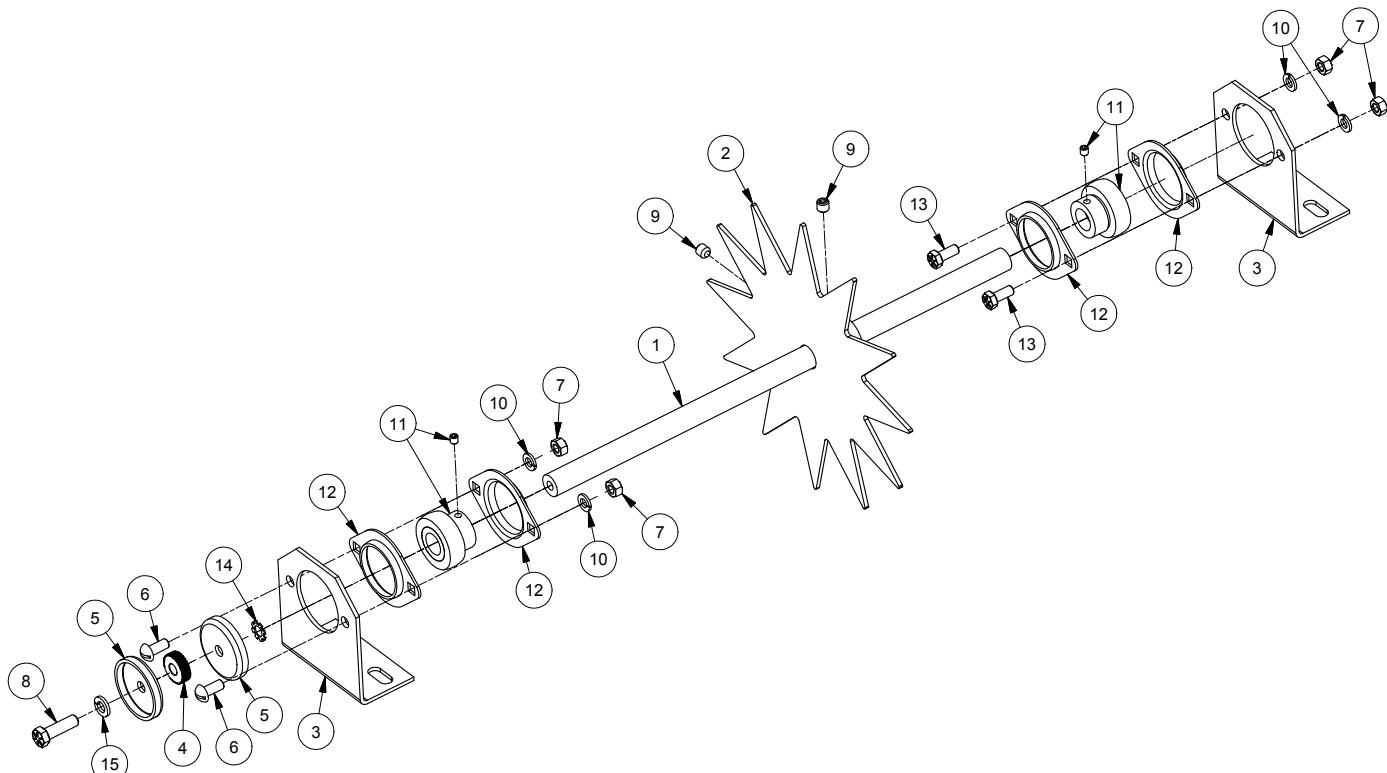

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
901140 Meter Wheel Assembly							
1	F000008034	1	. Shaft	9	STS3750375	2	. Socket Set Screw
2	F000001531	1	. Meter Wheel	10	R13812513	4	. Lockwasher
3	F000001617	2	. Meter Wheel Shaft Bracket	11	F000001619	2	. Shaft-Bearing & Collar
4	F000001687	1	. Disc, Friction	12	F000001889	4	. Flangette Bearing
5	F000008023	2	. Guide Washer	13	R13801791	2	. Capscrew
6	246125	2	. Capscrew	14	WES0000375	1	. Washer
7	R13811512	4	. Hex Nut	15	R13812514	1	. Lockwasher
8	221499W	1	. Capscrew				

Rev A

Trip Mount Assembly

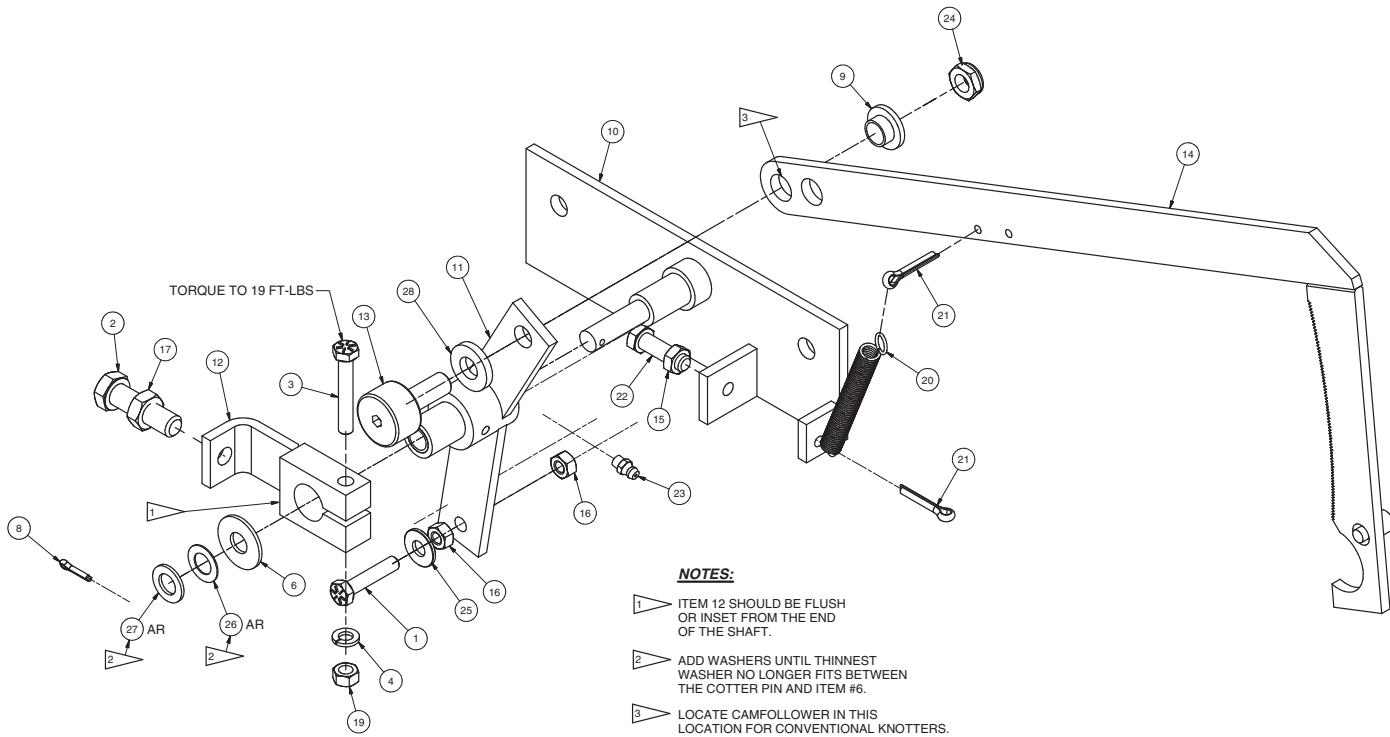


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
SAL0000005 Trip Mount Assembly							
1	R13811016	1	. Capscrew	17	234218	1	. Jam Nut
2	221569W	1	. Capscrew	19	R13803725	1	. Hex Nut
3	221475W	1	. Capscrew	20	F000000278	1	. Spring, Knotter Trip Arm
4	R13812513	1	. Lockwasher	21	COT0000801	2	. Cotter Pin
6	15177W	1	. Washer	22	221499W	1	. Capscrew
8	15223W	1	. Cotter Pin	23	11079	1	. Fitting, Lube
9	910368	1	. Ferrule	24	NEJ0005000	1	. Nut, Esna Jam
10	F000001513	1	. Knotter Trip Mount	25	223428	1	. Washer
11	910366	1	. Reset Lever	26	F000008315	1	. Washer
12	F000001515	1	. Lever	27	ZZ00000210	1	. Mach Bushing
13	910363	1	. Bearing, Cam Follower	28	221771W	1	. Washer
14	KNT0032132	1	. Bar Assembly, Trip Meter				
15	00124829	1	. Jam Nut				

Rev S


Knotter Installation, Tailless 2 Tie

Page 1 of 4

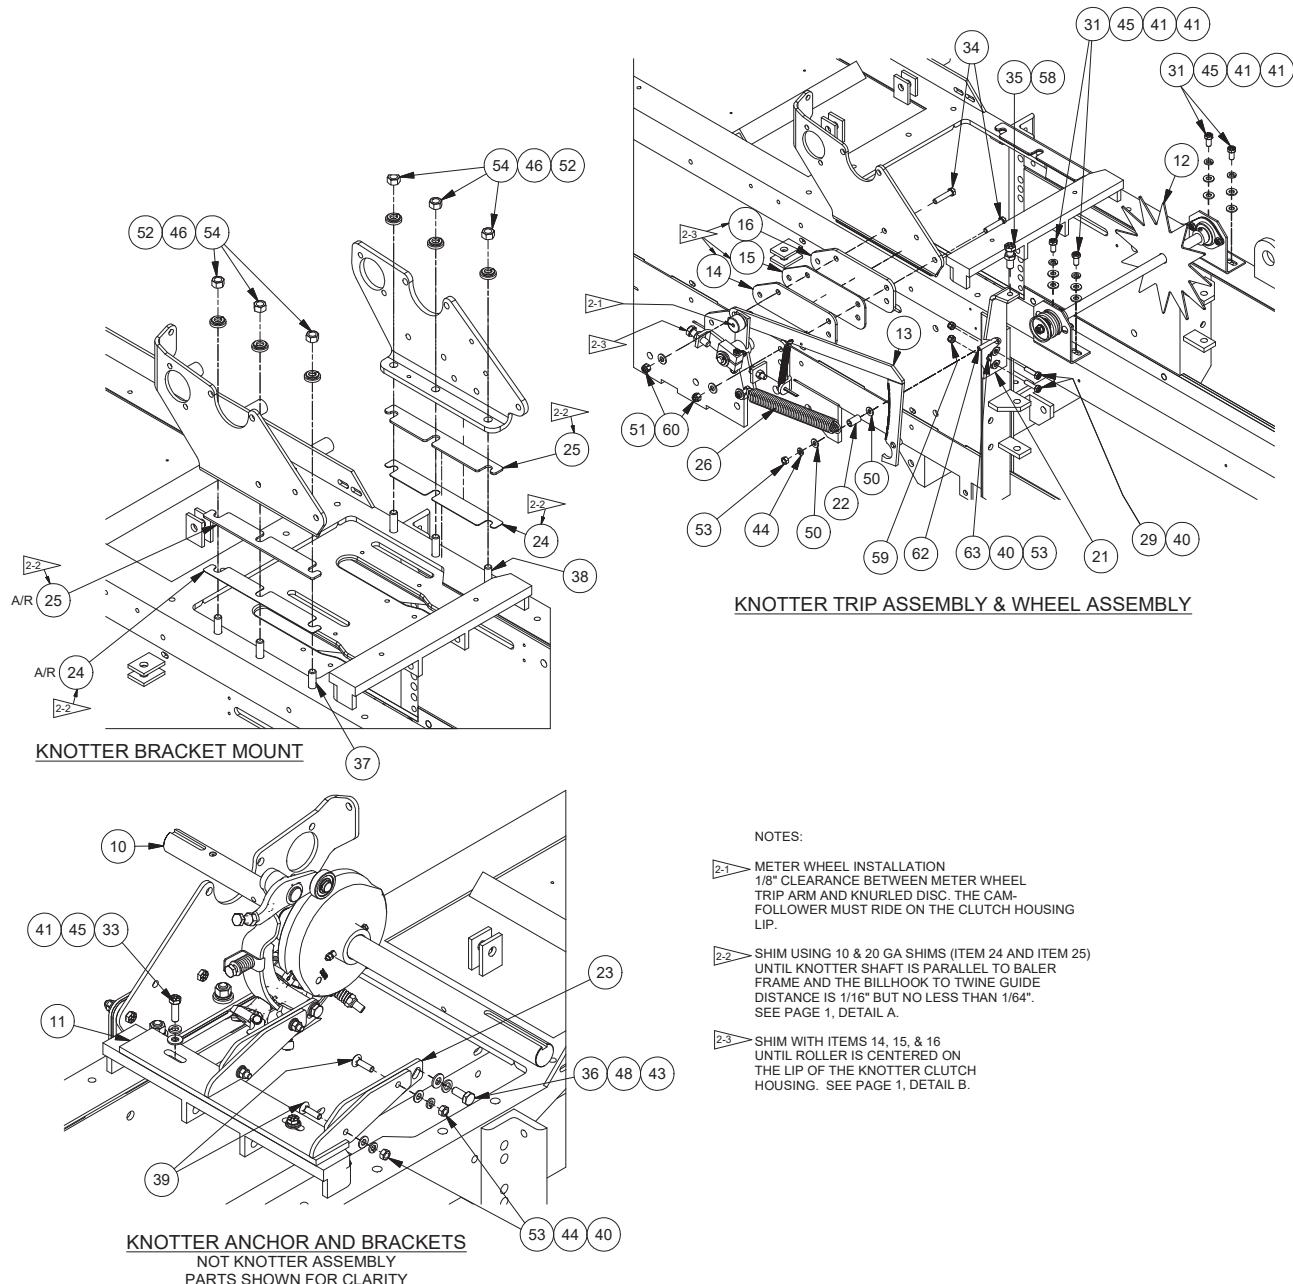

Knotter Installation, Tailless 2 Tie

Page 2 of 4

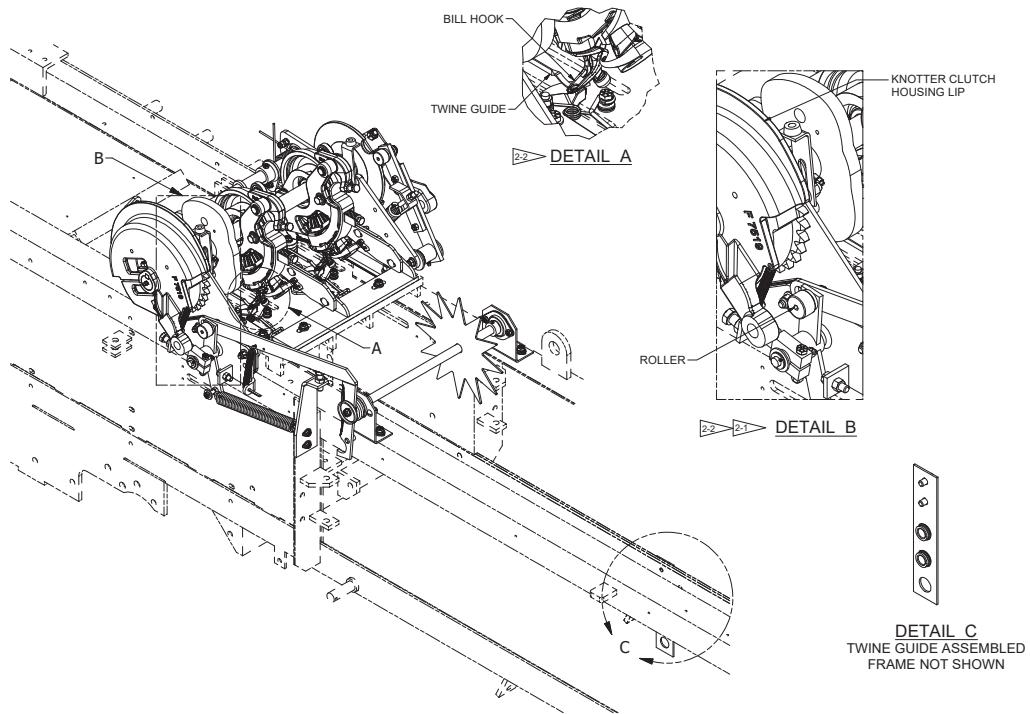


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
910407							
1	904802	2	. Drive Rod, Twine Finger	35	221569W	1	. Capscrew
2	BRG0001300	2	. Bearing, Rod End	36	Y09C-M1025	2	. Capscrew
3	BRG0001301	2	. Bearing, Rod End	37	Y09G-0832	3	. Capscrew
4	906848	2	. Twine Finger Weldment	38	Y09G-0836	3	. Capscrew
5	WAS037715A	4	. Washer	39	233972	4	. Bolt, Carriage
6	WLG0000003	2	. Spring, Stop	40	18515W	17	. Washer
7	WLG0000001	2	. Plate, Guide	41	221767W	22	. Washer
8	WLG0000002	2	. Spring, Knotter Stop	42	WCTM100080	4	. Washer
9	WLG0000005	2	. Spring	43	296420W	2	. Washer
10	*a 910405	1	. Tailless Knotter Assembly	44	R13812513	17	. Lockwasher
11	900256	1	. Anchor Weldment	45	R13812514	10	. Lockwasher
12	*b 901140	1	. Meter Wheel Assembly	46	R13812516	6	. Lockwasher
13	*c SAL00000580	1	. Trip Mount Assembly	47	92681W	2	. Washe
14	SHM037349B	2	. Shim	48	292682W	2	. Washer
15	SHM037350B	2	. Shim	49	Y22E-05	10	. Lockwasher
16	SHM037348B	2	. Shim	50	R13802914	2	. Washer
17	906846	2	. Bushing	51	Y27E-06	2	. Washer
18	F000000856	2	. Bushing	52	221771W	6	. Washer
19	F000000857	2	. Ring, Snap	53	221705W	8	. Hex Nut
20	F000000525	1	. Holder	54	221712W	6	. Hex Nut
21	F000001632	1	. Trip Bar	55	R13803725	2	. Hex Nut
22	SPC0033118	1	. Spacer	56	NCHM008125	2	. Hex Nut
23	BKT0033732	2	. Bracket	57	NFL0003125	2	. Jam Nut
24	SHM037779B	6	. Shim	58	234218	1	. Jam Nut
25	906854	2	. Plate, Shim	59	232939	2	. Nut, Esna
26	F000001517	1	. Spring, Trip	60	237567	2	. Locknut
27	R13810838	2	. Capscrew	61	WAS3751500	4	. Washer
28	R13811013	2	. Capscrew	62	Y09G-0540	1	. Capscrew
29	R13811015	2	. Capscrew	63	Y09G-0524	1	. Capscrew
30	R13811016	3	. Capscrew	64	R13811017	1	. Capscrew
31	162572W	6	. Capscrew	*a See Separate Coverage (Page 8-23)			
32	Y17C-0616	4	. Capscrew	*b See Separate Coverage (Page 8-17)			
33	221499W	2	. Capscrew	*c See Separate Coverage (Page 8-31)			
34	R13801813	2	. Capscrew	Rev -			

Knotter Installation, Tailless 2 Tie


Page 3 of 4

NOTES:

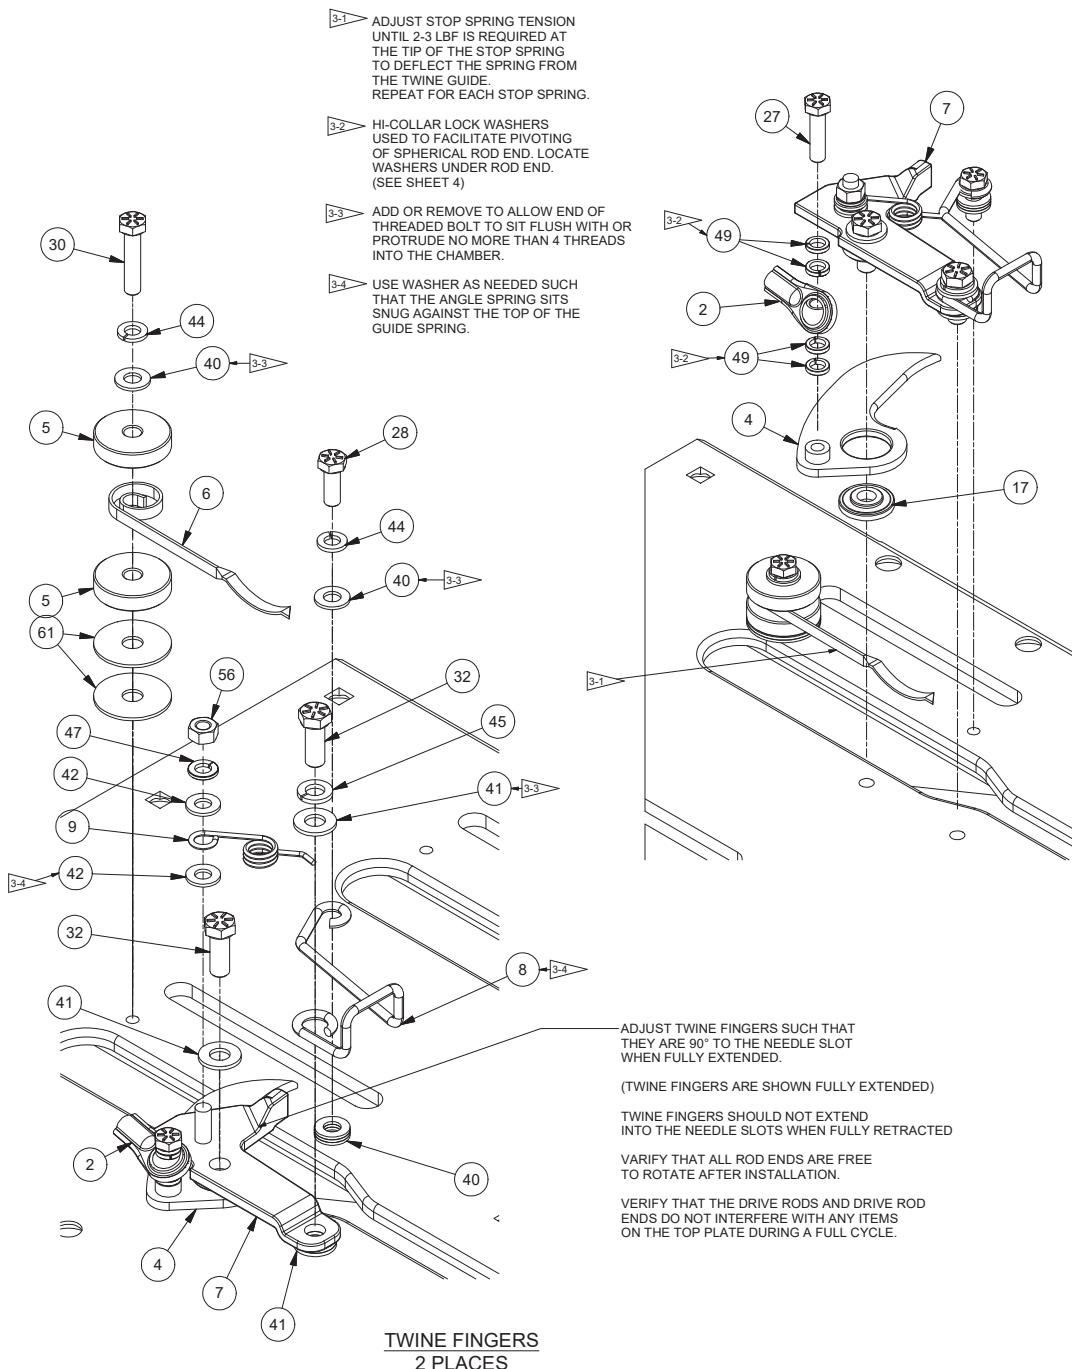


Knotter Installation, Tailless 2 Tie

Page 4 of 4

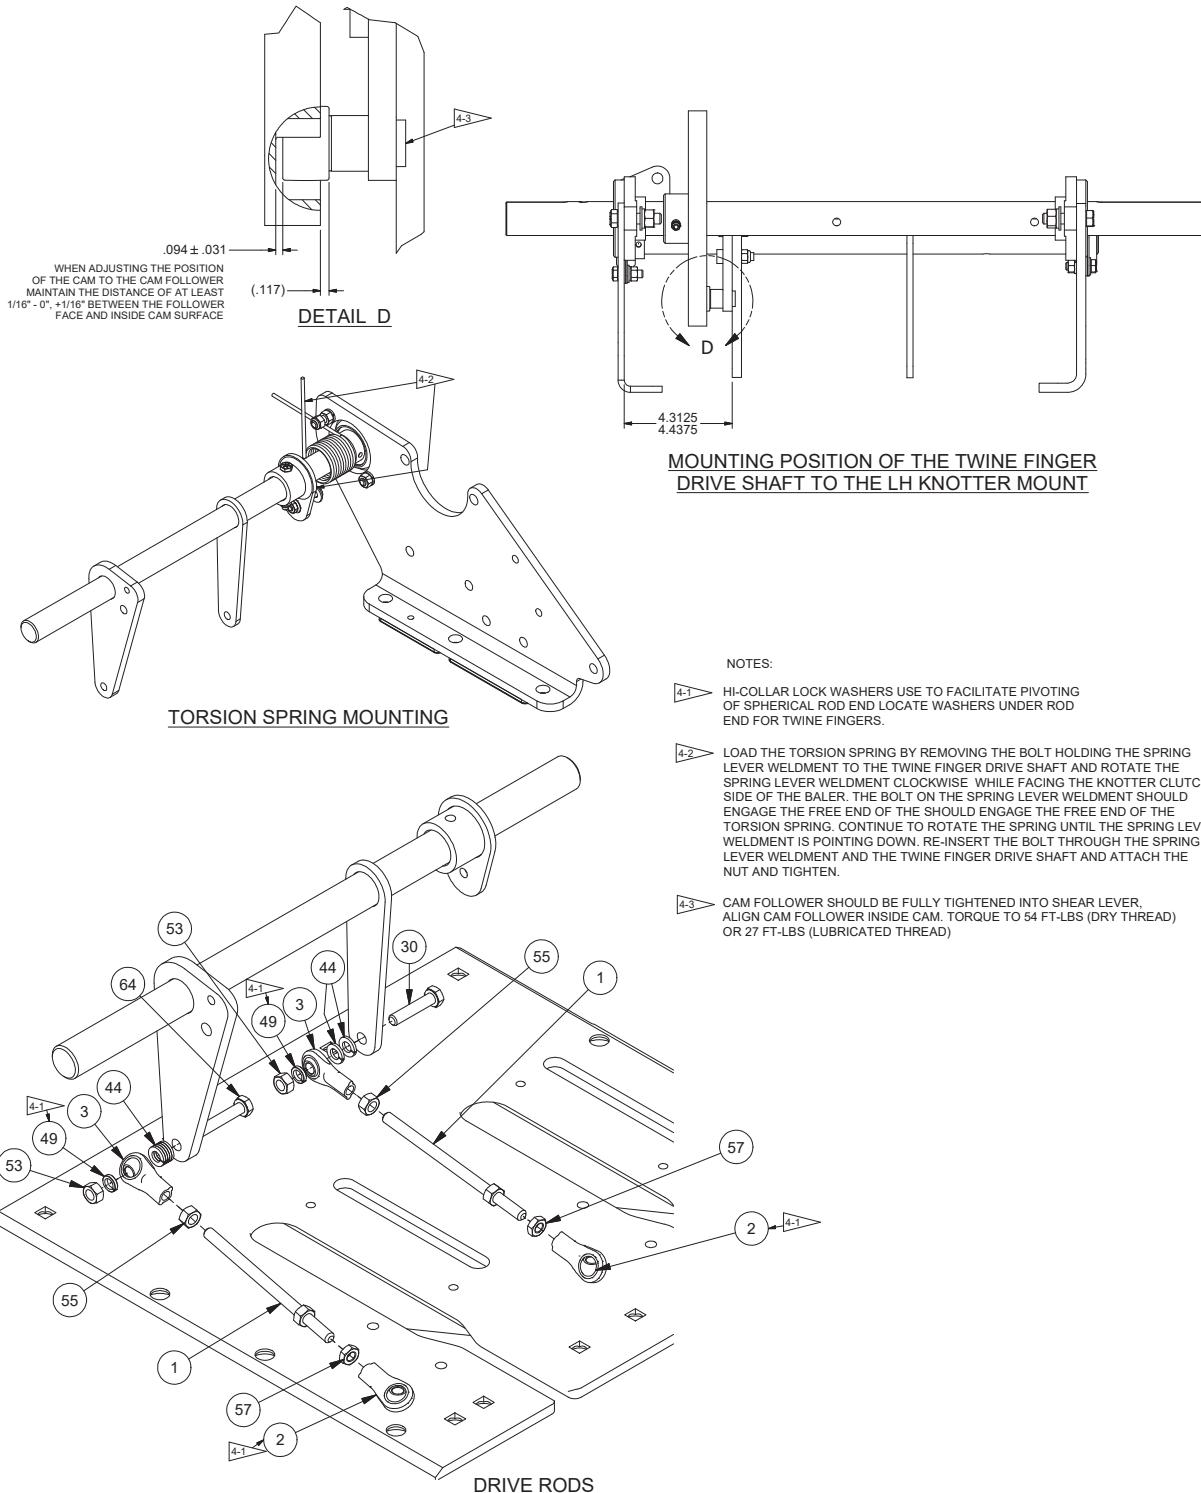


Knotter Assembly, Tailless 2 Tie


Page 1 of 5

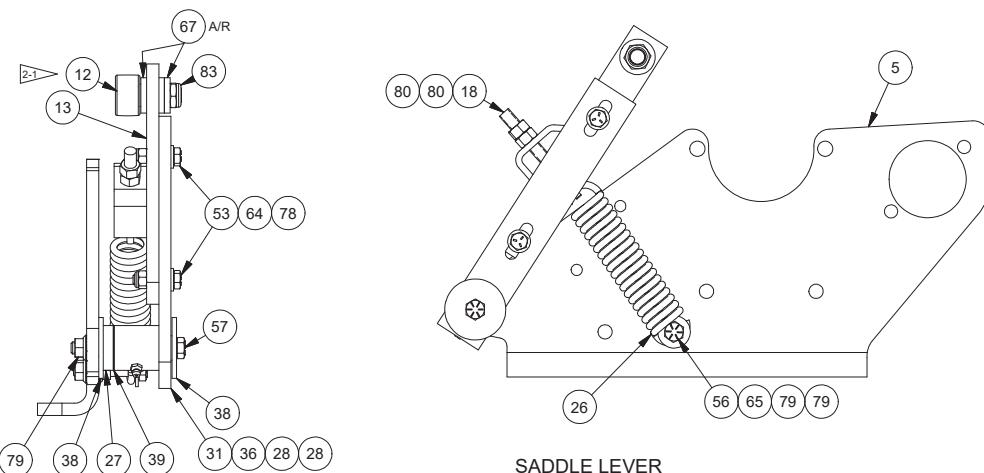


SADDLE LEVER

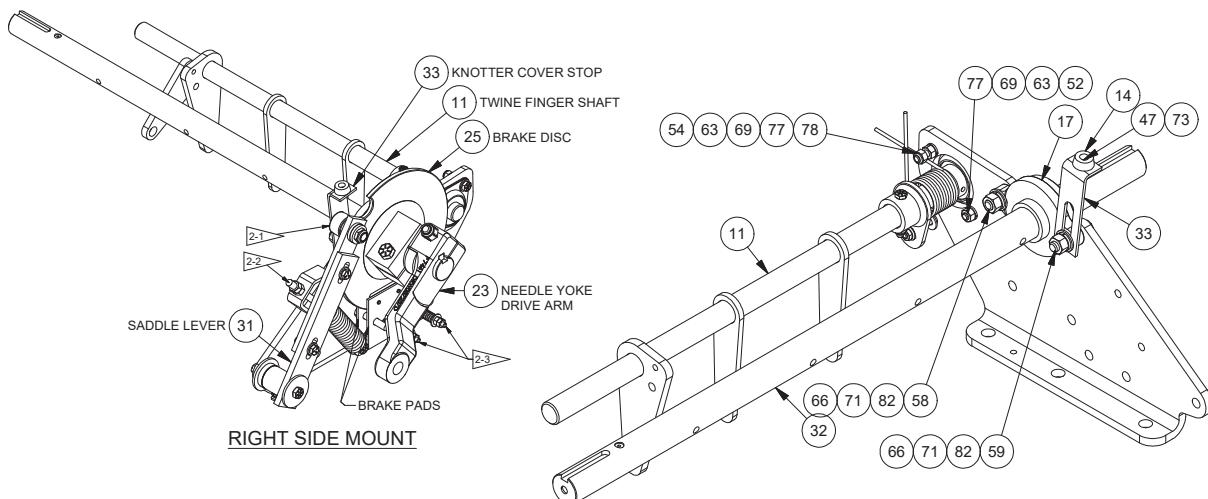

RIGHT SIDE MOUNT

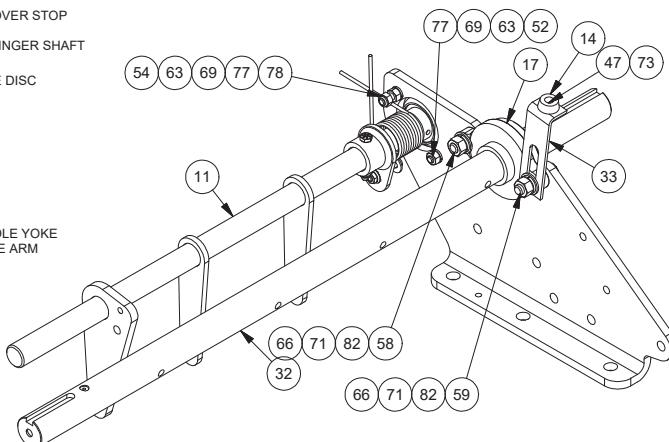

RIGHT MOUNT SHAFT BEARINGS

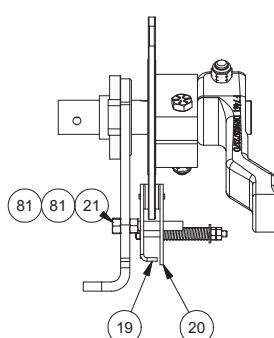


NOTES:

2-1 CENTER ROLLER ON BRAKE DISC.

2-2 SLACK IS TAKEN UP, THEN SPRING IS TIGHTENED 1/2" (8 TURNS).


2-3 TIGHTEN NUT TO FULLY COLLAPSE SPRING COILS THEN BACK OUT 3/4 FULL TURN

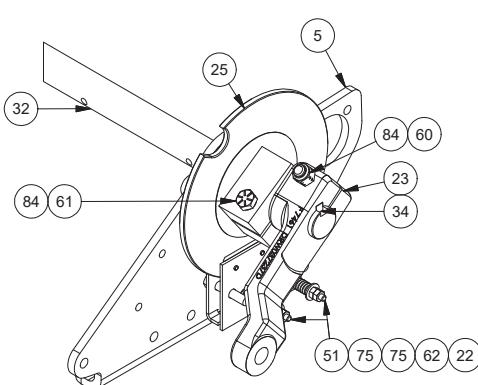

BRAKE AND NEEDLE YOKE ARM

Knotter Assembly, Tailless 2 Tie

Page 2 of 5

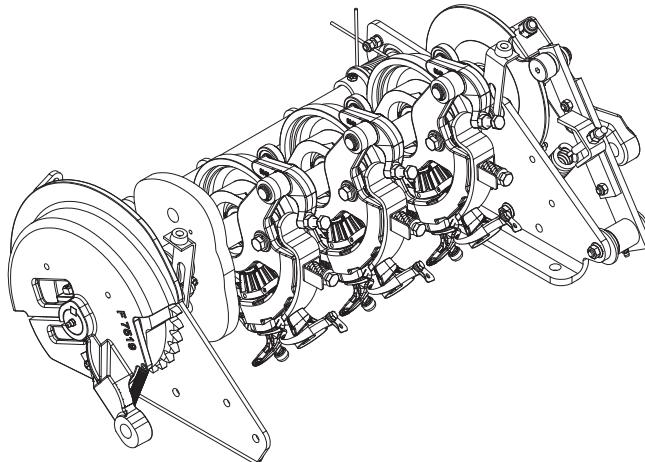

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	910405		Knotter Assembly, 2-TIE, Tailless				
1	*a 255675	2	. Knotter	45	256550	1	. Bolt, Shoulder
2	256559	1	. Spring	46	WLG0001064	3	. Bolt
3	257265	1	. Cam Follower	47	Y25G-(1024)08	2	. Capscrew
4	*b 900249	1	. Disc & Bearing Assembly	48	18466W	1	. Capscrew
5	903197	1	. Plate, Rh Mounting	49	R13801783	1	. Capscrew
6	903198	1	. Plate, Lh Mounting	50	R13810997	1	. Capscrew
7	903516	1	. Lever	51	234867	2	. Capscrew
8	903531	1	. Lever	52	R13811014	3	. Capscrew
9	904018	1	. Tube Spacer	53	18498W	2	. Capscrew
10	904189	1	. Weldment, Cam - Enclosed	54	R13811016	1	. Capscrew
11	904895	1	. Shaft, Drive	55	Y17C-0616	2	. Capscrew
12	910363	1	. Bearing, Cam Follower	56	R13811039	1	. Capscrew
13	910372	1	. Weldment, Upper Saddle Lever	57	221518W	1	. Capscrew
14	BMP0004243	2	. Rubber Bumper F/Hood	58	134328W	2	. Capscrew
15	F000000755	1	. Sprocket, Knotter Clutch	59	R13801834	2	. Capscrew
16	F000004135	1	. Inner Race	60	R13801850	1	. Capscrew
17	F000007063	2	. Bearing	61	R13811082	1	. Capscrew
18	F000007448	1	. Eyebolt	62	R13811443	3	. Washer
19	F000007449	1	. Plate & Lining	63	18515W	4	. Washer
20	F000007450	1	. Brake Plate W/Lining	64	R13802914	2	. Washer
21	F000007451	2	. Brake Plate Stud	65	15176W	1	. Washer
22	F000007453	2	. Spring, Brake Plate	66	R13811432	4	. Washer
23	F000007461	1	. Needle Yoke Drive Arm	67	221771W	6	. Washer
24	*c F000007519	1	. Housing Assembly	68	R13812482	3	. Lockwasher
25	F000007528	1	. Weldment, Disc Brake	69	R13812513	4	. Lockwasher
26	F000007559	1	. Spring, Saddle Lever	70	236655	2	. Lockwasher
27	F000007585	1	. Sleeve, Lever	71	15157W	4	. Lockwasher
28	F000007587	2	. Seal	72	WLG0001065	3	. Hex Nut
29	F000007904	1	. Key	73	224191	2	. Nut, Esna
30	F000008095	2	. Kit, Bearing	74	264150W	2	. Nut
31	LEV0025133	1	. Lever Assembly	75	221703W	4	. Hex Nut
	F000007586	1	. Bushing	76	15113W	2	. Locknut
32	900237	1	. Shaft	77	221705W	4	. Hex Nut
33	ST00022419	2	. Bar, Stop	78	R13811190	4	. Locknut
34	ZZ00000419	1	. Key	79	156133W	3	. Locknut
35	11079	1	. Fitting, Lube	80	221707W	2	. Hex Nut
36	F000004089	1	. Fitting	81	221708W	4	. Hex Nut
37	WLG0001063	3	. Pin, Expanding	82	R13806770	4	. Hex Nut
38	F000000246	2	. Washer	83	NEJ0005000	1	. Nut, Esna Jam
39	F000000802	1	. Washer	84	223587	2	. Locknut
40	F000004136	2	. Washer				
41	F000004160	8	. Mach Bushing				
42	F000004161	3	. Mach Bushing				
43	F000007977	6	. Washer, Spacer				
44	F000007978	2	. Washer, Spacer				


*a See Separate Coverage (Page 8-28)

*b See Separate Coverage (Page 8-14)


*c See Separate Coverage (Page 8-13)

Knotter Assembly, Tailless 2 Tie


Page 3 of 5

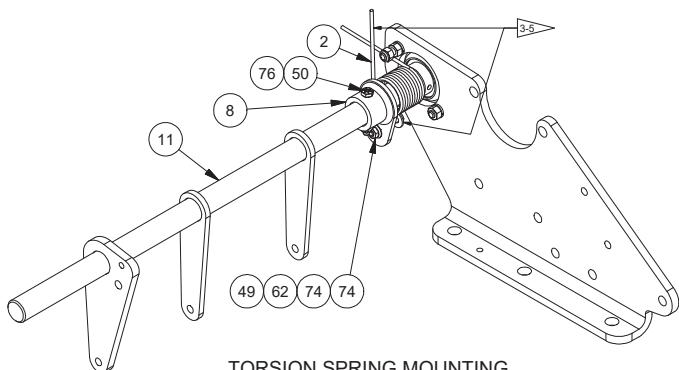


TORSION SPRING MOUNTING

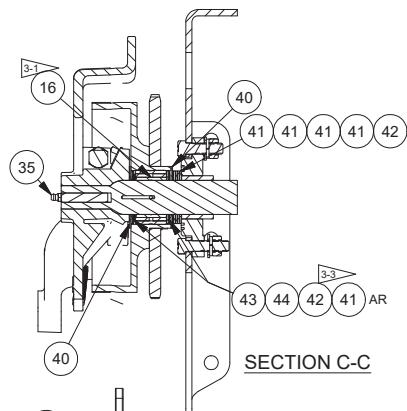


SECTION C-C

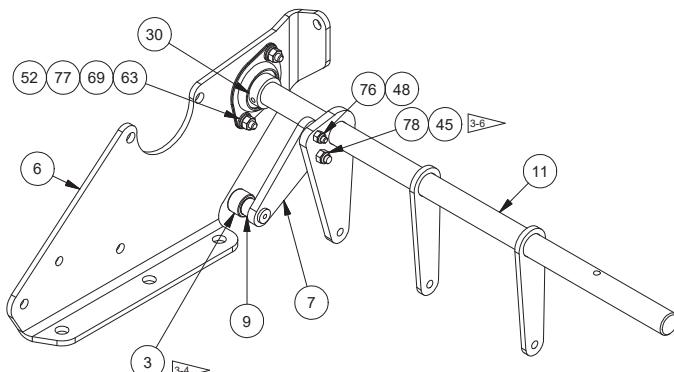

LEFT SIDE TWINE SHAFT

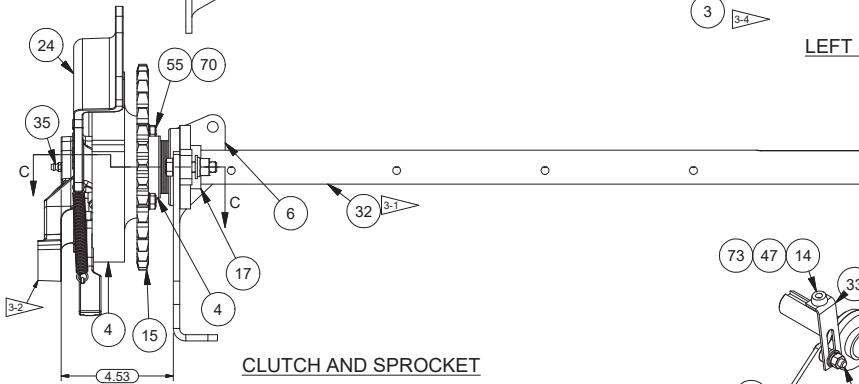

CLUTCH AND SPROCKET

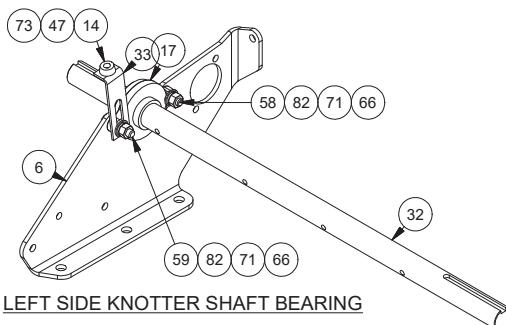


LEFT SIDE KNOTTER SHAFT BEARING

NOTES:


- 3-1 USE LOCTITE TO SECURE BUSHING TO SHAFT. SEE LOCTITE PROCEDURE ON PAGE 5.
 - 3-2 VERIFY THAT THE CLUTCH PAWL CASTING PART NUMBER DOES NOT HIT THE CLUTCH DISC.
 - 3-3 ADD SPACER AS REQUIRED SO THERE IS A CLEARANCE OF 0.005" BETWEEN THE GREASE WASHER TO GREASE WASHER ITEM #40 ON BOTH SIDES OF CLUTCH.
 - 3-4 ALIGN CAM FOLLOWER INSIDE CAM. TORQUE TO 54 FT-LBS (DRY THREAD) OR 27 FT-LBS (LUBRICATED THREAD)
 - 3-5 LOAD THE TORSION SPRING BY REMOVING THE BOLT HOLDING THE SPRING LEVER WELDMENT TO THE TWINE FINGER DRIVE SHAFT AND ROTATE THE SPRING LEVER WELDMENT COUNTER CLOCKWISE WHILE FACING THE KNOTTER CLUTCH SIDE OF THE BALANCE BOLT ON THE SPRING LEVER WELDMENT SHOULD BE GUARDED. END OF THE TORSION SPRING IS COUPLED WITH A ROTATING SPRING UNIT, WHILE THE SPRING UNIT IS POINTING DOWN, RE-INSERT THE BOLT THROUGH THE SPRING LEVER WELDMENT AND THE TWINE FINGER DRIVE SHAFT AND ATTACH THE NUT AND TIGHTEN.
 - 3-6 TORQUE BOLT TO 35 FT-LBS.

Knotter Assembly, Tailless 2 Tie




Page 4 of 5

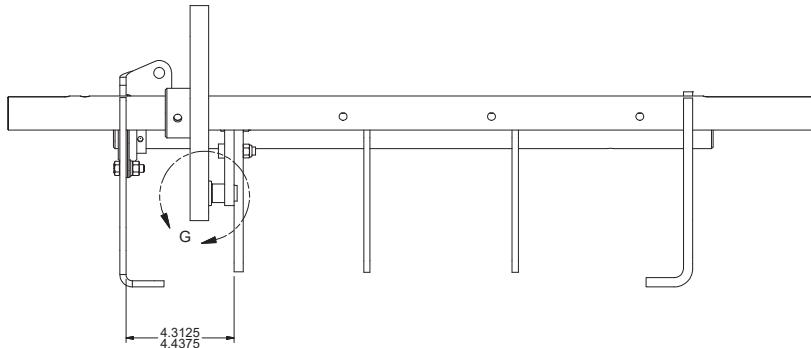

MOUNTING POSITION OF THE TWINE FINGER DRIVE SHAFT TO THE LH KNOTTER MOUNT

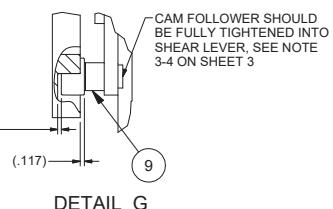

DETAIL G

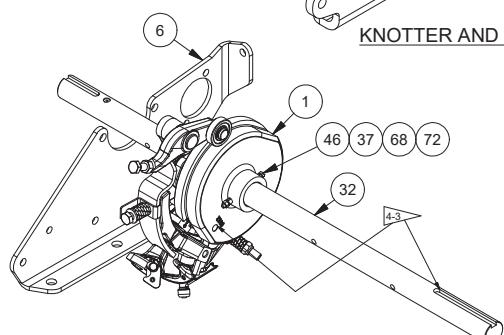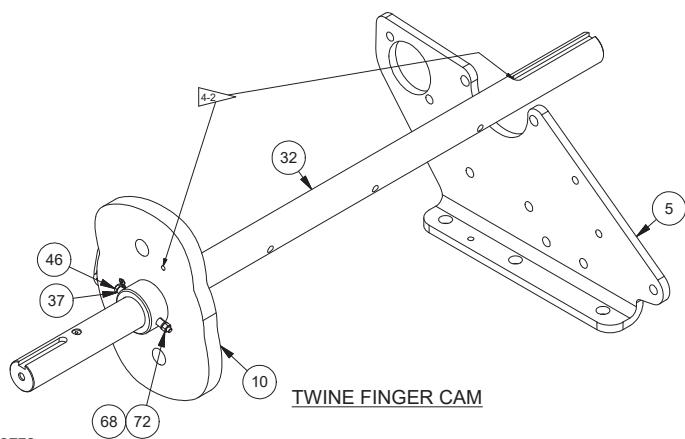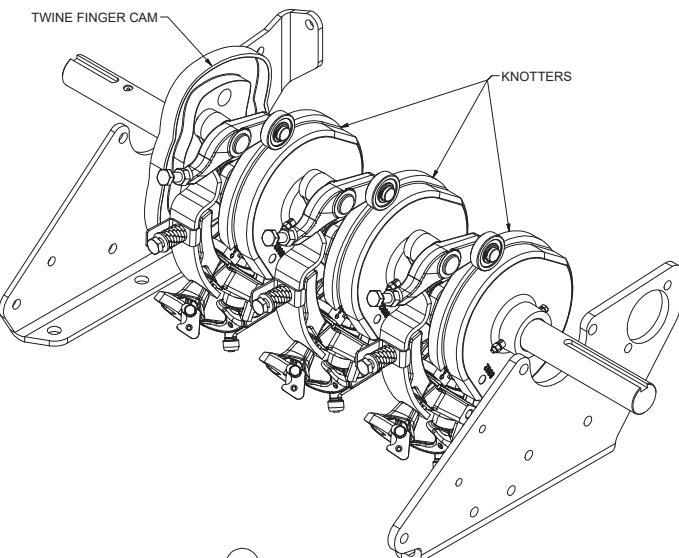

TAILLESS KNOTTER
FOR 3-TIE: TYP. (3) PLACES
FOR 2-TIE: TYP. (2) PLACES

NOTES:


4-1. ADD ANTI-SEIZE TO THE INSIDE SURFACE OF THE MOUNTING COLLAR.

4-2. ORIENT AS SHOWN WITH HOLE IN THE SAME DIRECTION AS THE KEYWAY.


4-3. ORIENT KNOTTER ON SHAFT AS SHOWN.

Knotter Assembly, Tailless 2 Tie

Page 5 of 5

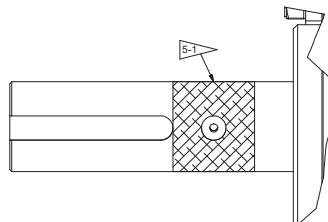

DETAIL A

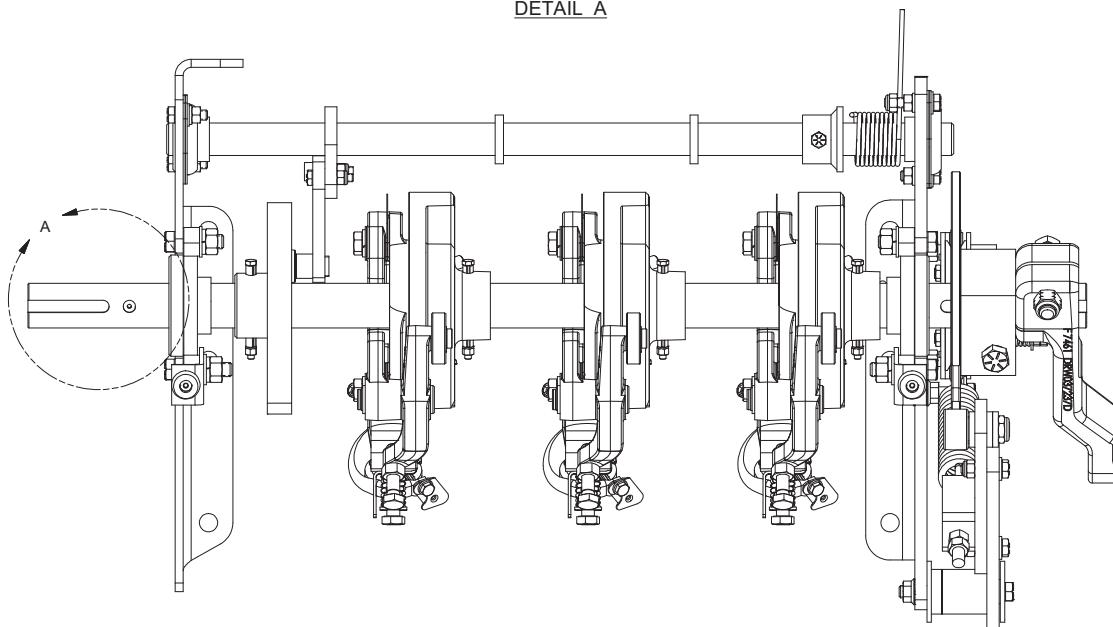


NOTES:

5-1. LOCTITE PROCEDURE

- REMOVE CLUTCH HOUSING, OUTSIDE SHIMS, & INNER RACE.
- CLEAN AND PREP SURFACE FOR LOCTITE APPLICATION. SEE DETAIL A FOR APPROXIMATE APPLICATION LOCATION.
- APPLY LOCTITE 635 TO KNOTTER SHAFT AS SHOWN IN DETAIL A. LOCTITE SHOULD BE APPLIED IN AN EVEN FILM AROUND THE SHAFT.
- DO NOT ALLOW LOCTITE TO ENTER INNER RACE LUBRICATION GROOVE AND LUBRICATION HOLE, OR RUN OUTSIDE THE FINAL POSITION OF THE INNER RACE.
- VERIFY THAT THE INNER RACE LUBRICATION GROOVE SITS OVER THE LUBRICATION HOLE.
- CAREFULLY REASSEMBLE INNER RACE ALLOWING LOCTITE TO COVER INSIDE OF THE RACE. REASSEMBLE CLUTCH AND CLUTCH HOUSING.


Tailless Knotter

Page 1 of 3

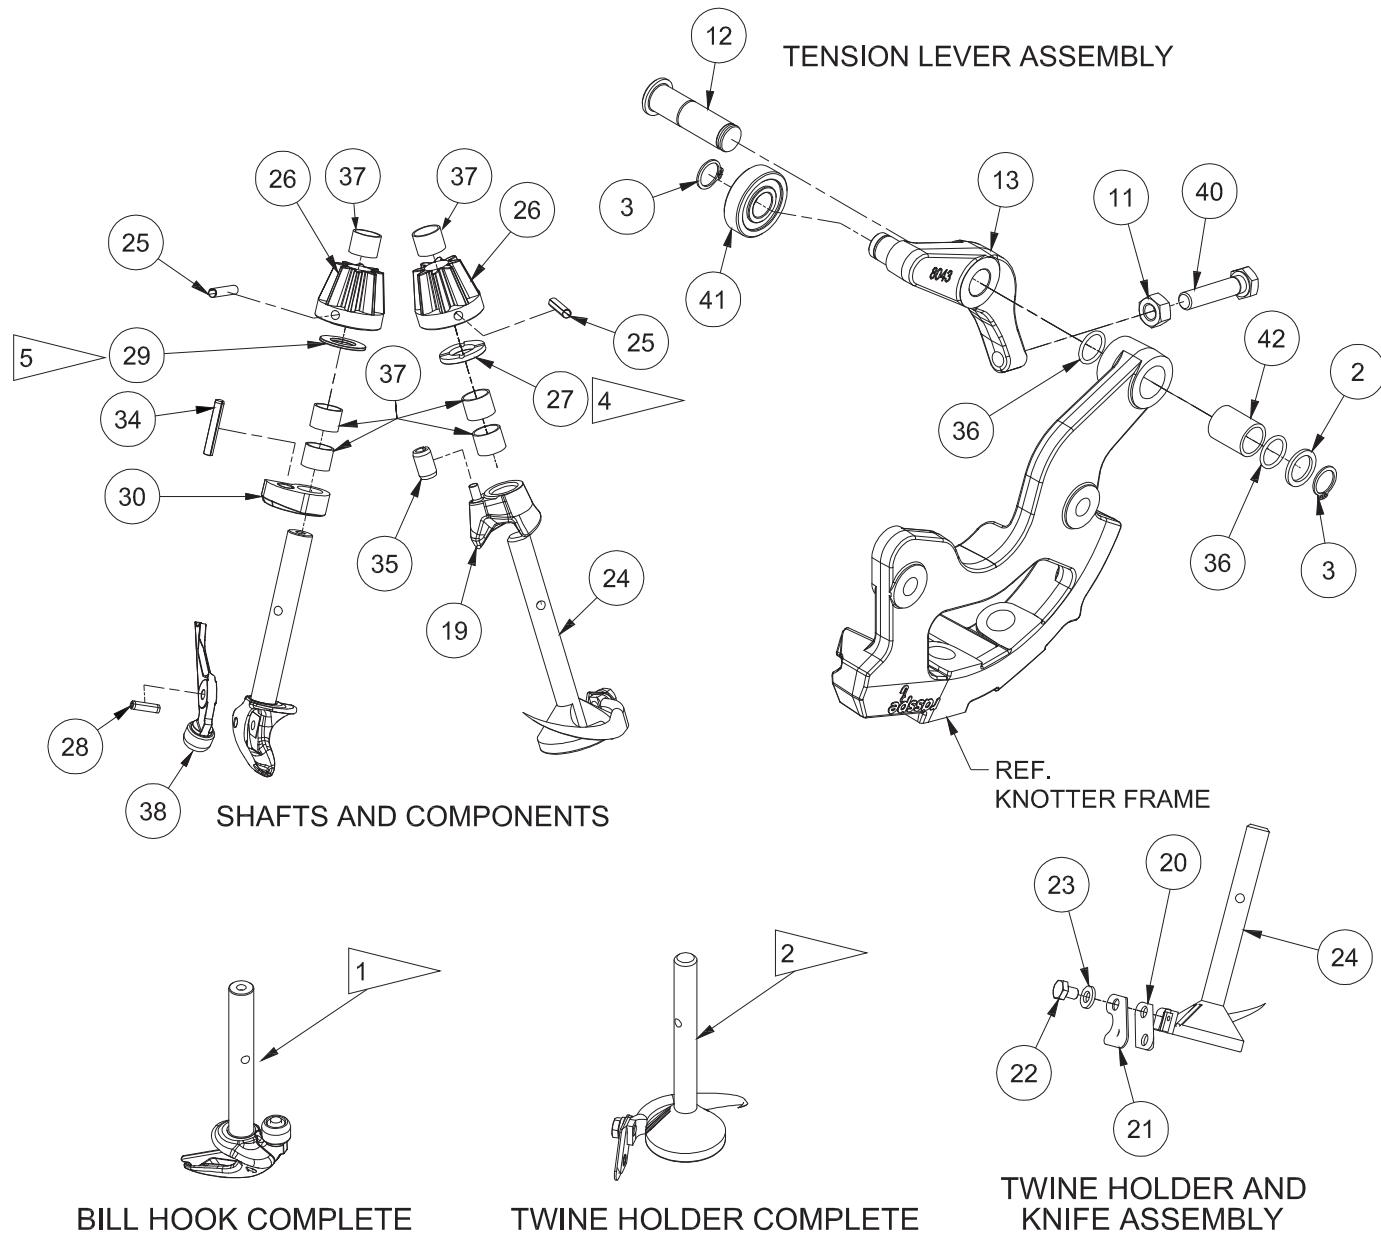

Tailless Knotter

Page 2 of 3

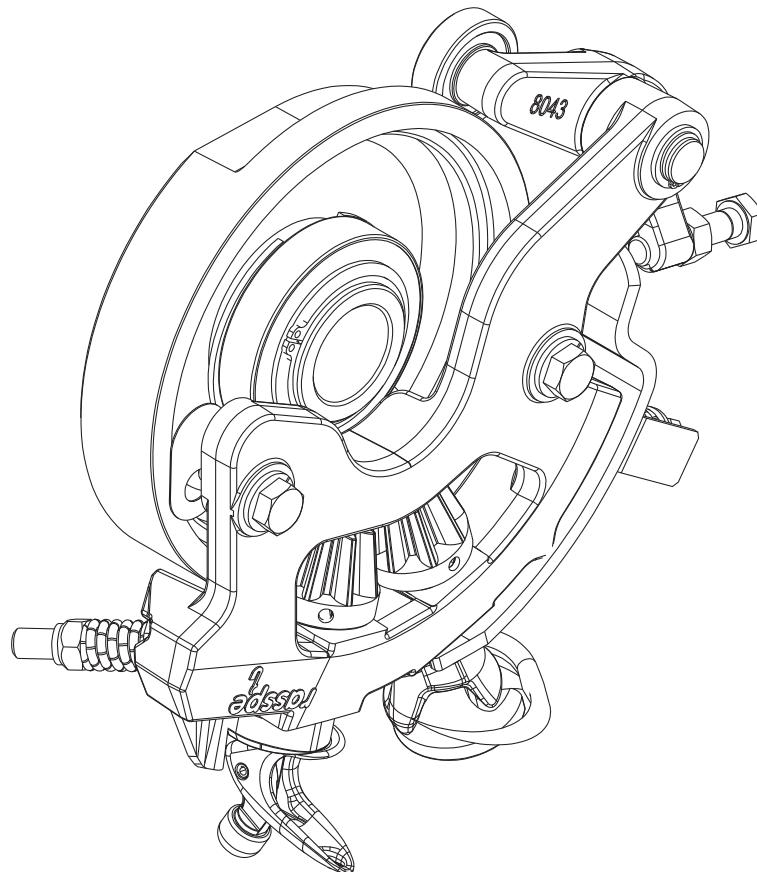


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	255675		Knotter				
1	255311	2	. Shim	23	296417W	1	. Washer
2	255822	1	. Washer, Knotter Frame	24	255827	1	. Twine Holder
3	255841	2	. Ring, Snap	25	254811	2	. Roll Pin
4	255823	2	. Bolt	26	255849	2	. Gear, Pinion
5	255838	1	. Shim	27	255848	1	. Washer, Thrust
6	255839	1	. Ring, Snap	28	255864	1	. Roll Pin, Bill Hook Trigger
7	255836	1	. Ring, Snap	29	255850	1	. Washer, Thrust
8	255835	1	. Bearing	30	255845	1	. Cam, Bill Hook Trigger
9	255834	1	. Flange, Bearing	31	255846	1	. Spring, Trigger Pressure
10	255837	1	. Cam Gear	32	255858	1	. Plate, Trigger Pressure
11	292655W	1	. Nut	33	255852	1	. Bolt, Press Spring
12	255843	1	. Pin, Tension Lever	34	255853	1	. Pin, Cam Locating
13	255844	1	. Lever, Tension	35	255854	1	. Pin, Twine Clamp Locating
14	255859	1	. Bolt, Press	36	255826	2	. O-Ring
15	296420W	1	. Washer	37	255856	6	. Bushing
16	255851	1	. Spring, Tying Pressure	38	255865	1	. Trigger, Bill Hook
17	255829	1	. Bracket, Tying Bolt Adj	39	255825	2	. Washer, Split Ring
18	255840	1	. Spring, Leaf	40	255828	1	. Bolt, Clamp
19	255847	1	. Clamp, Twine Holder	41	255842	1	. Roller, Tension Lever
20	255861	1	. Knife, Twine Holder	42	255855	1	. Bushing, Tension Lever Frame
21	255860	1	. Cover				
22	255862	1	. Bolt, Knife				

Rev C

Tailless Knotter

Page 3 of 3

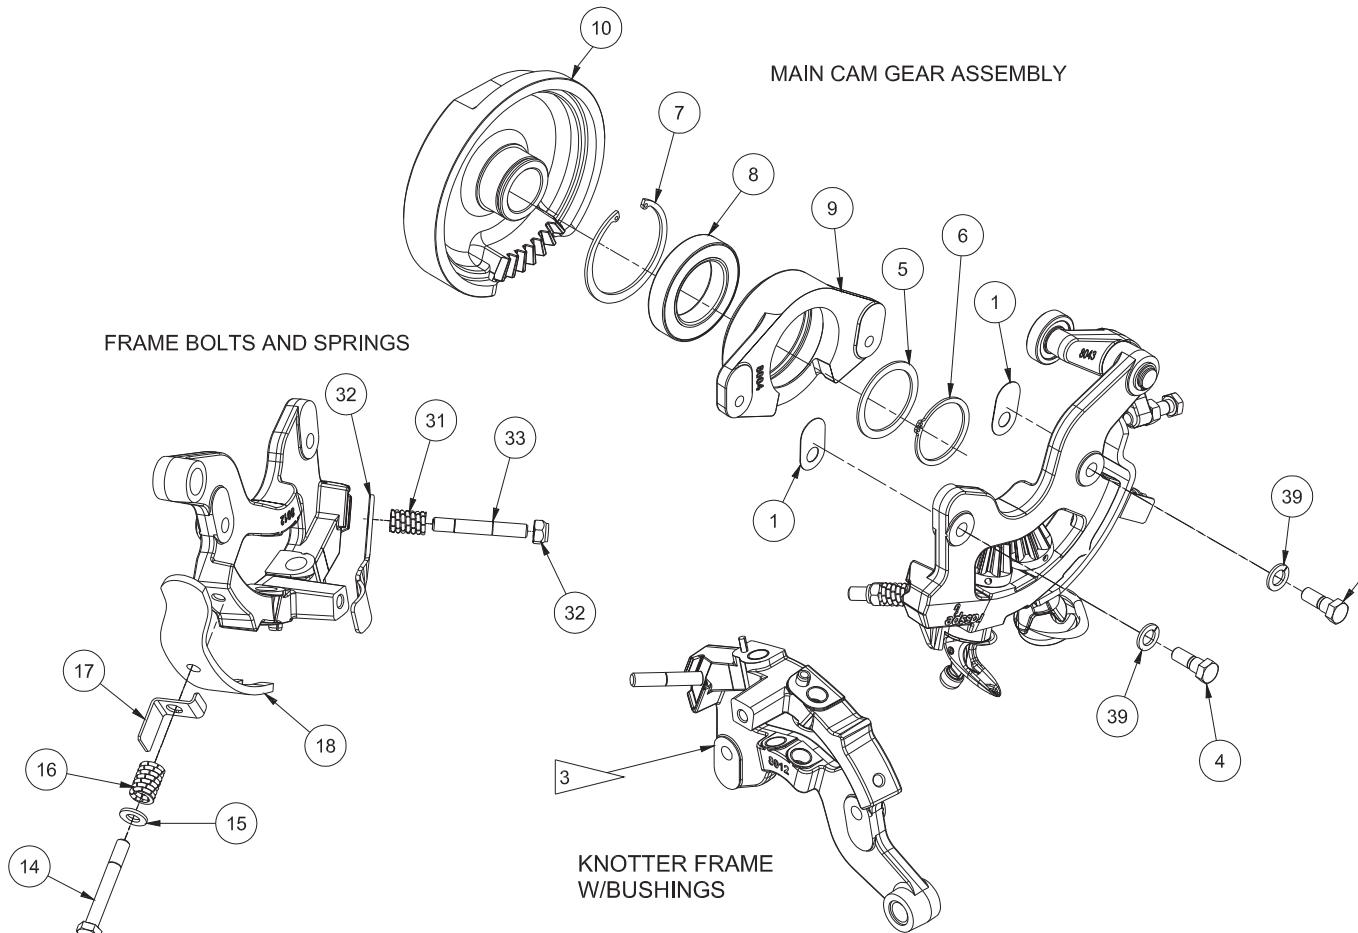


NOTES:

THESE ITEMS ARE CONFIGURED AS SERVICE ITEMS
AND MUST BE ORDERED SEPARATELY FROM A COMPLETE
KNOTTER ASSEMBLY:

- 1 ▶ BILL HOOK ASSEMBLY COMPLETE: 255866
- 2 ▶ TWINE HOLDER COMPLETE: 255863
- 3 ▶ KNOTTER FRAME WITH BUSHINGS: 255857
- 4 ▶ ORIENTATION OF THRUST WASHER ON
THE TWINE HOLDER IS WITH GROOVES TOWARDS
PINION GEAR
- 5 ▶ ORIENTATION OF THRUST WASHER ON THE
BILL HOOK IS WITH THE LUBRICATING MATERIAL
TOWARDS THE PINION GEAR


Trip Mount Assembly, Tailless 2-Tie

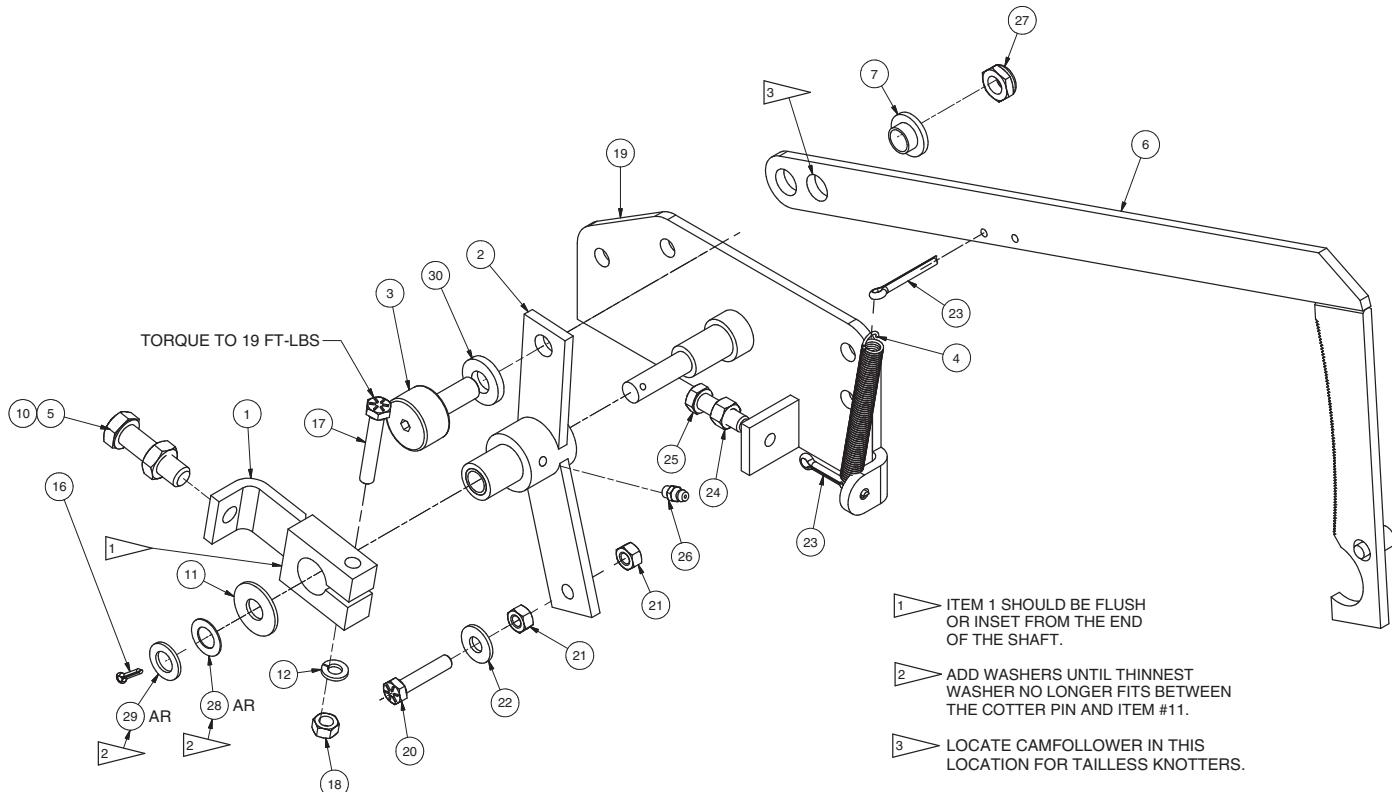

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
SAL0000580 Trip Mount Assembly							
1	F000001515	1	. Lever	19	MNT037346D	1	. Mount
2	910366	1	. Reset Lever	20	R13811016	1	. Capscrew
3	910363	1	. Bearing, Cam Follower	21	R13811512	2	. Hex Nut
4	F000000278	1	. Spring, Knotter Trip Arm	22	223428	1	. Washer
5	221569W	1	. Capscrew	23	00103409	2	. Cotter Pin
6	KNT0032132	1	. Bar Assembly, Trip Meter	24	221707W	1	. Hex Nut
7	910368	1	. Ferrule	25	221499W	1	. Capscrew
10	234218	1	. Jam Nut	26	11079	1	. Fitting, Lube
11	15177W	1	. Washer	27	NEJ0005000	1	. Nut, Esna Jam
12	R13812513	1	. Lockwasher	28	F000008315	AR	. Washer
16	15223W	1	. Cotter Pin	29	ZZ00000210	AR	. Mach Bushing
17	221475W	1	. Capscrew	30	221771W	1	. Washer
18	R13803725	1	. Hex Nut				Rev M

Knotter Drive Installation

Page 1 of 2

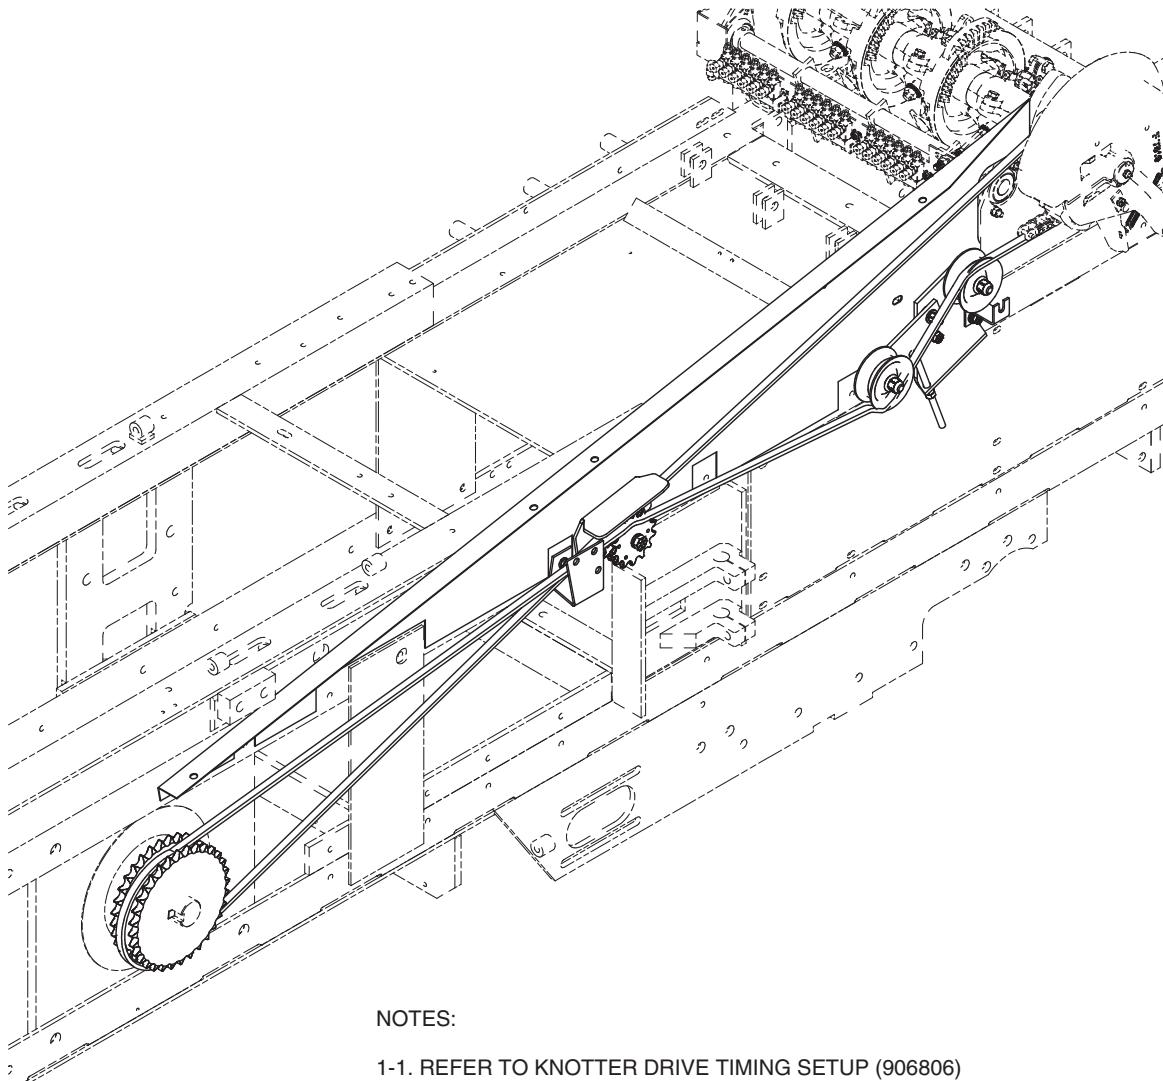

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902105							
1	253836	1	. Sprocket	21	221707W	2	. Hex Nut
3	F000008153	1	. Chain Shield Center Bracket	22	237567	1	. Locknut
4	F000008377	1	. Shield	23	223587	2	. Locknut
5	F000007055	1	. Chain, Knottter Drive	24	R13812514	3	. Lockwasher
8	F000008112	1	. Plate, Hold Down	26	221771W	11	. Washer
9	F000008086	1	. Bracket, Chain Idler	27	ZZ00000459	1	. Key
10	F000008083	1	. Bracket, Chain Tightener	28	00103384	1	. Cotter Pin
11	F000008154	1	. Chain Shield Rear Bracket	29	00273802	1	. Nut, Serrated
12	F000008084	1	. Rod, Chain Tightener	30	221767W	3	. Washer
14	F000000440	1	. Ferrule	31	R13811080	1	. Capscrew
15	F000007397	2	. Sprocket	32	Y09G-0528	1	. Capscrew
16	R13811031	1	. Capscrew	33	Y17C-0616	1	. Capscrew
17	162572W	1	. Capscrew	34	234665	1	. Lockwasher
18	Y17C-0624	1	. Capscrew	35	15176W	1	. Washer
19	221576W	1	. Capscrew	36	F000000883	2	. Pulley, Idler
20	R13801850	1	. Capscrew				


Rev S

Knotter Drive Installation

Page 2 of 2

NOTES:


- 2-1 IDLER SPROCKET ALIGNED TO FOLLOW PATH OF CHAIN. CHAIN SHOULD NOT RUB KNOTTER SHAFT SPROCKET WHEN OPERATING.
- 2-2 TWO FLAT WASHERS REQUIRED TO PREVENT BOLT FROM PUSHING ON THE CHAMBER LINER.
- 2-3 WASHER IS LOCATED ON BACKSIDE OF ITEM 10, AND HELD BY COTTER PIN (ITEM 28).
- 2-4 APPLY ANTI-SEIZE TO THREADS (ITEM 12).

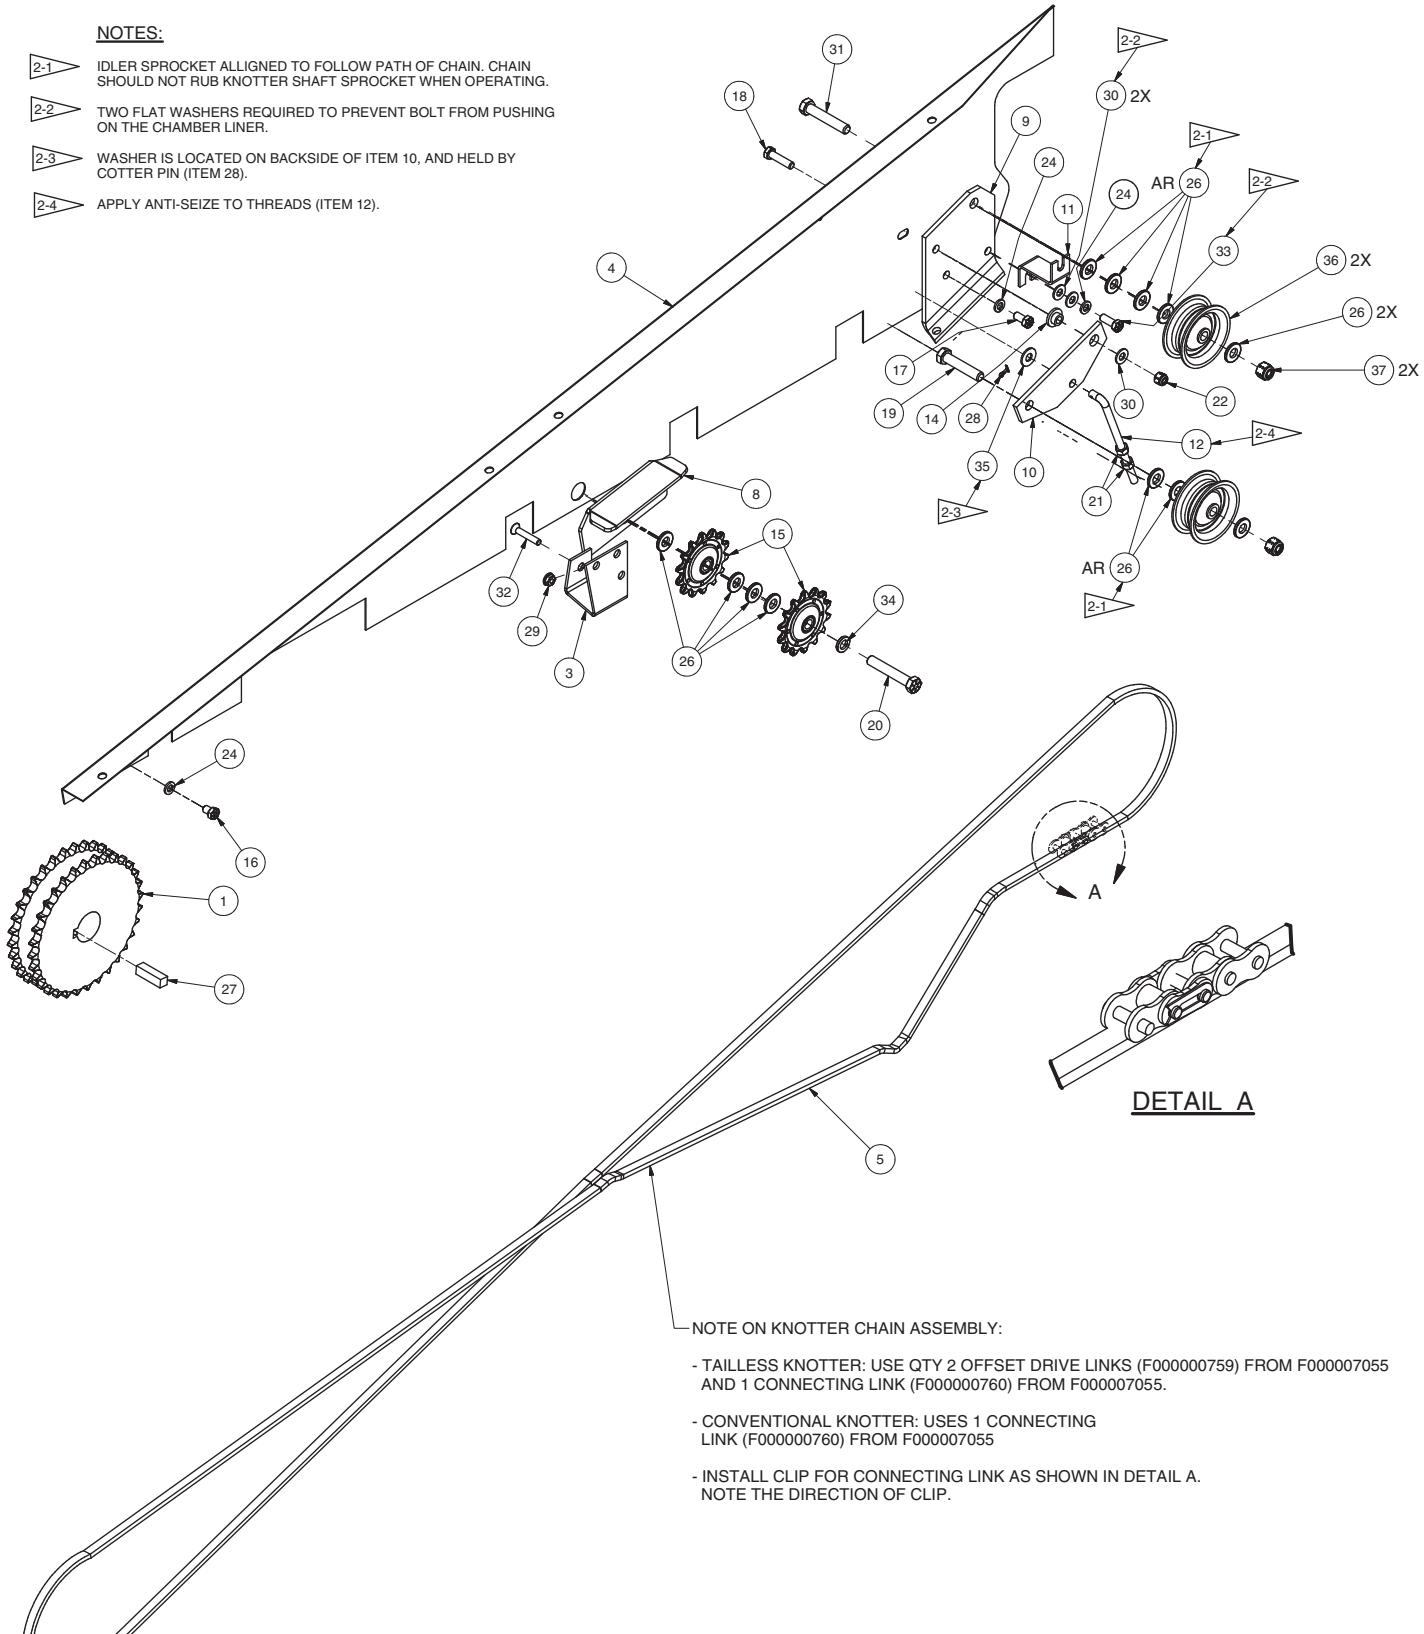

NOTE ON KNOTTER CHAIN ASSEMBLY:

- TAILLESS KNOTTER: USE QTY 2 OFFSET DRIVE LINKS (F000000759) FROM F000007055 AND 1 CONNECTING LINK (F000000760) FROM F000007055.
- CONVENTIONAL KNOTTER: USES 1 CONNECTING LINK (F000000760) FROM F000007055
- INSTALL CLIP FOR CONNECTING LINK AS SHOWN IN DETAIL A. NOTE THE DIRECTION OF CLIP.

Knotter Fan Installation, 2 Tie

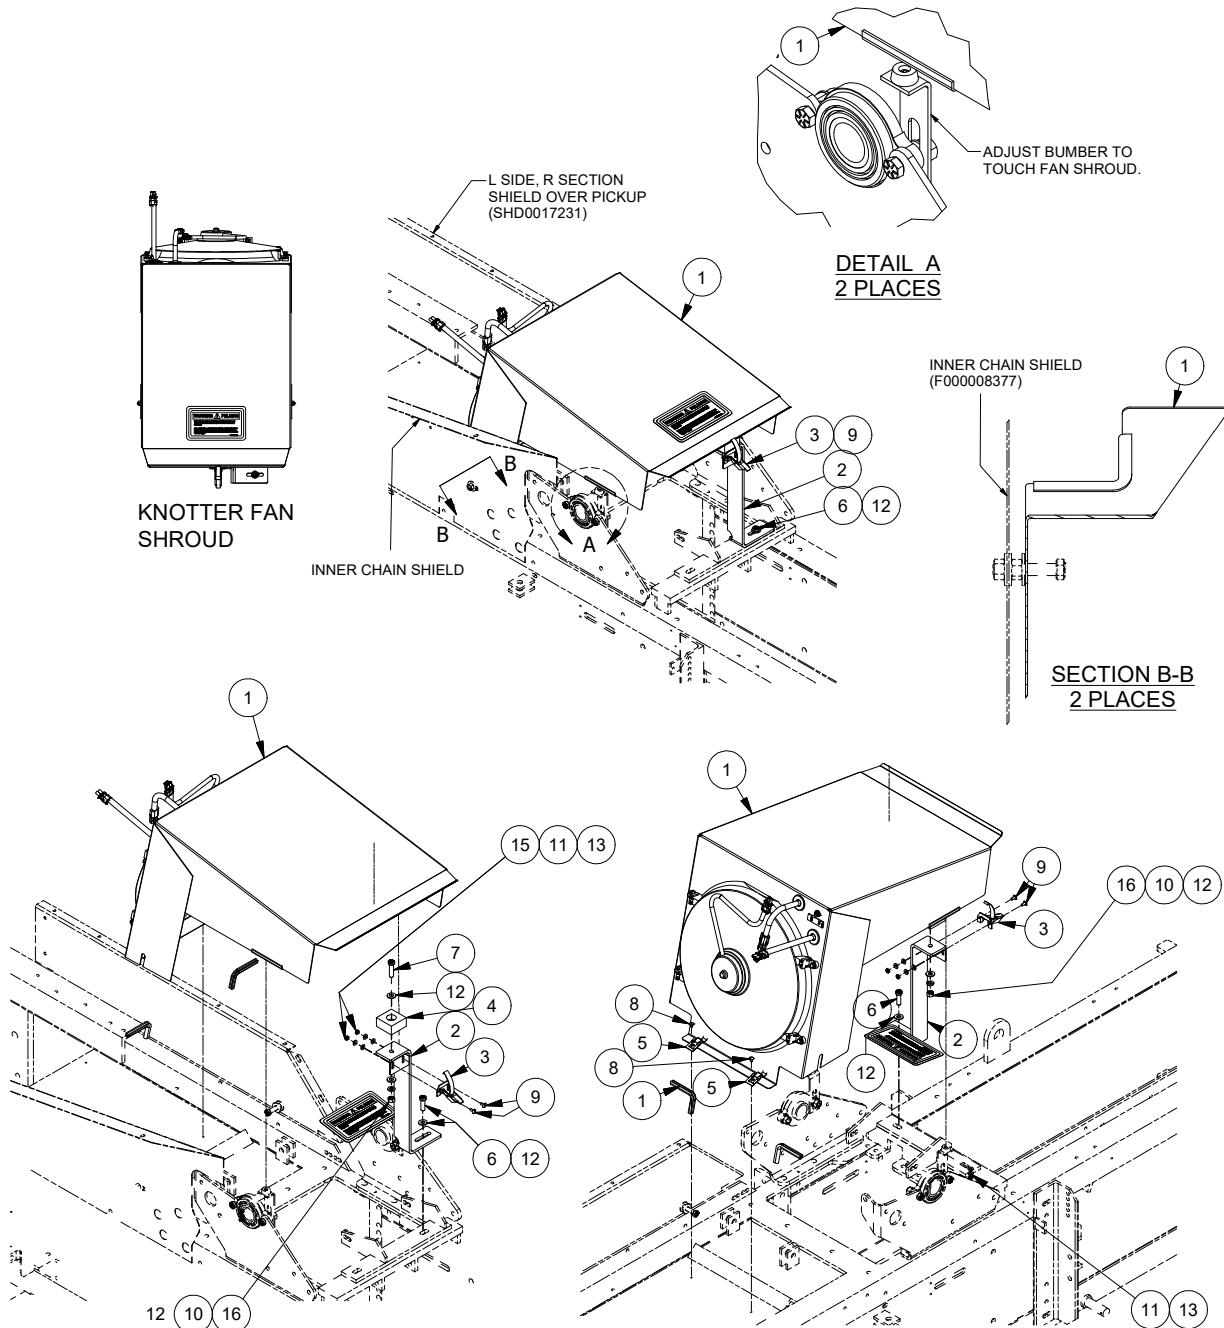


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902817							
1	*a 903594	1	. Fan Assembly,Knotter	9	230640	2	. Machine Screw
2	SUP0024161	1	. Support	10	R13812514	1	. Lockwasher
3	CLP0000130	2	. Fastener, Hook Type	11	18423W	4	. Lockwasher
4	PAD0018804	1	. Tens Rail Support Pad	12	221767W	3	. Flat Washer
5	F000006108	2	. Catch	13	R13122	2	. Flat Washer
6	221499W	1	. Capscrew	15	R13812544	2	. Hex Nut
7	Y17C-0624	1	. Capscrew	*a See Separate Coverage (Page 8-35)			
8	238595	2	. Machine Screw				


*a See Separate Coverage (Page 8-35)

Rev G

Knotter Fan Assembly

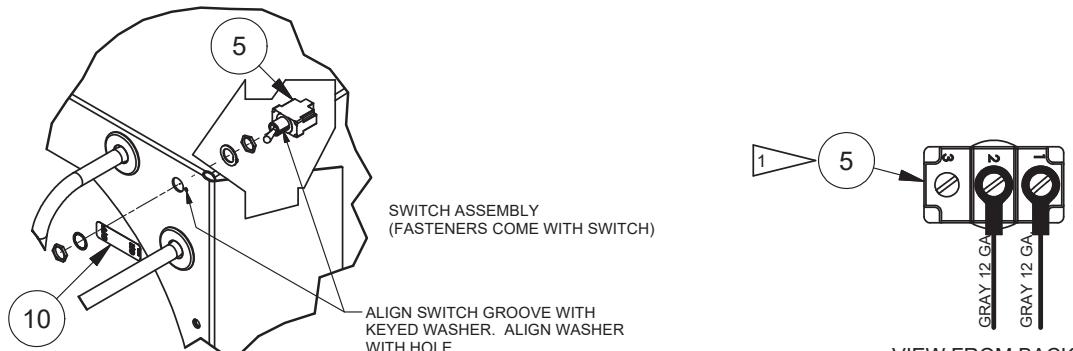


DETAIL A

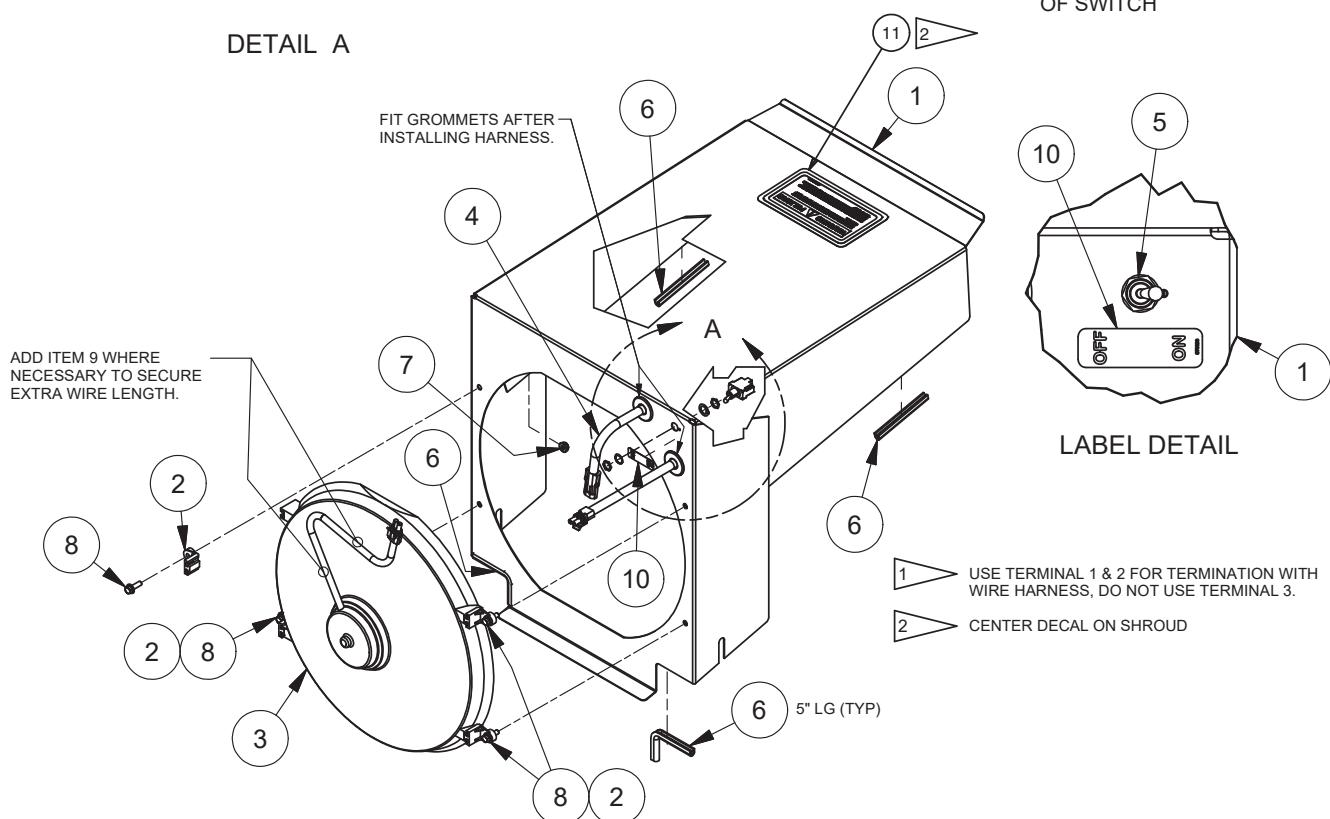

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	903594		Knotter Fan Assembly				
1	903112	1	. Plate, Shroud	7	235620	4	. Nut, Esna
2	MNT0050025	4	. Knotter Fan Shroud Mount	8	SMS0000305	4	. Bolt
3	256678	1	. Shroud, Fan	9	CBT0000148	2	. Nylon Cable Tie-Black
4	903592	1	. Wire Harness	10	576690	1	. Decal
5	229289	1	. Toggle Switch	11	FD00023583	1	. Warning Decal
6	MLD7500317	2'	. Trim, Edge				

Rev C


Top Plate Installation, Conventional 2 Tie

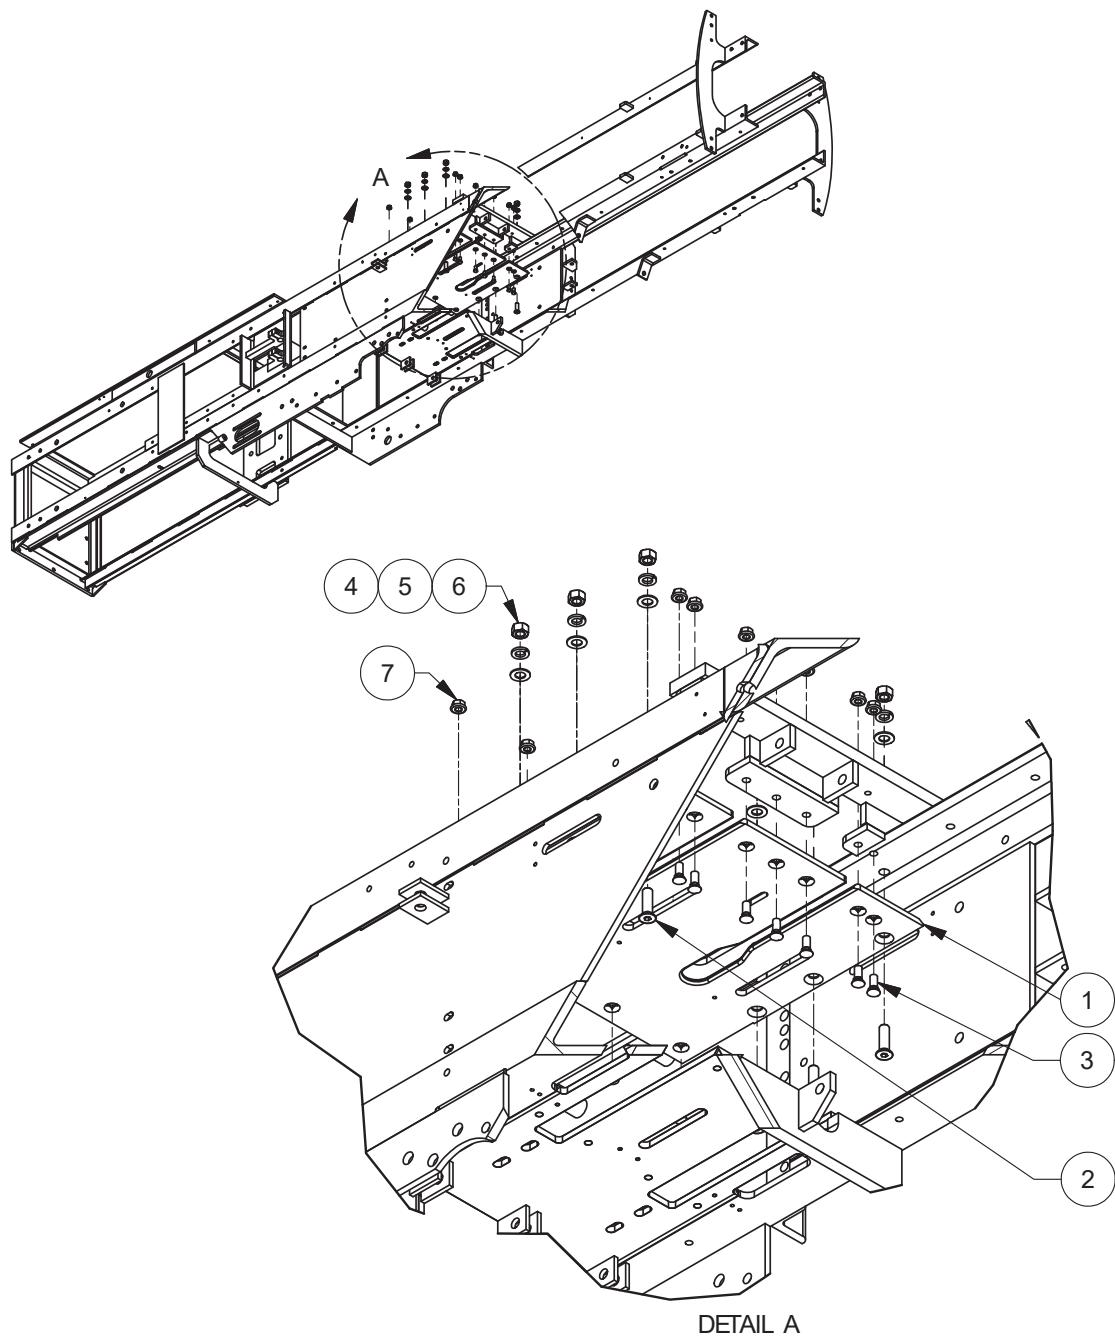

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	904038		Top Plate Installation				
1	902848	1	. Plate, Top	5	234665	6	. Lockwasher
2	Y09G-0828	6	. Capscrew	6	221711W	6	. Hex Nut
3	PWB3751250	11	. Bolt	7	09411507	11	. Nut
4	223634	6	. Flat Washer				

Rev A

Top Plate Installation, Tailless 2 Tie

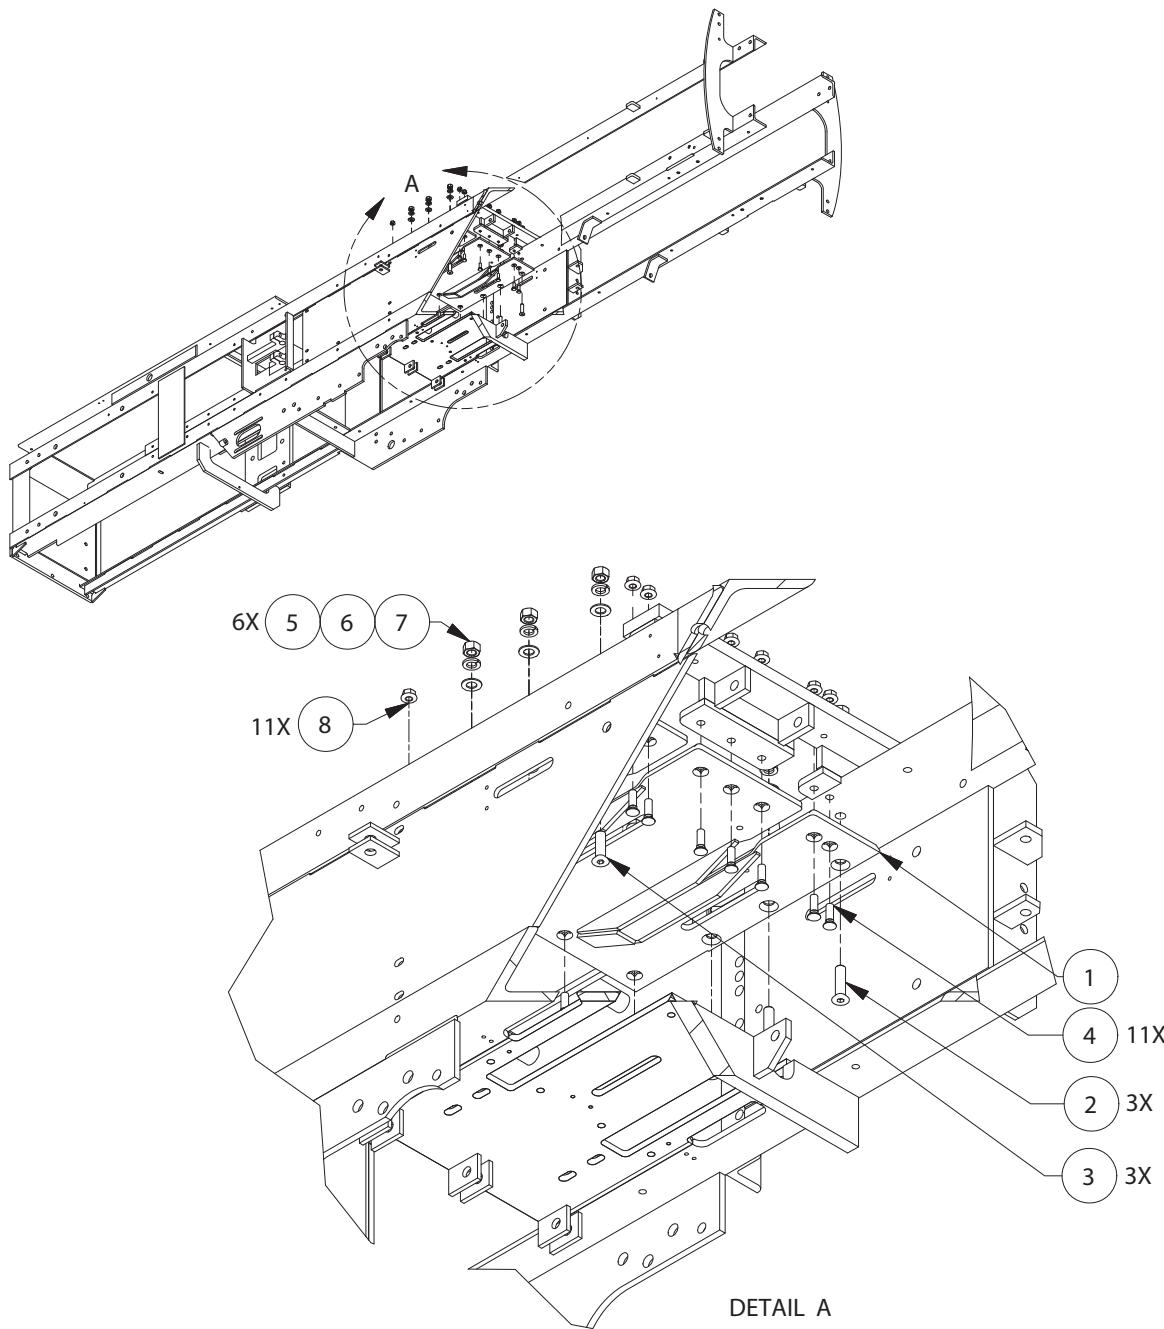


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904039			Top Plate Installation				
1	902852	1	. Plate, Top	6	234665	6	. Lockwasher
2	Y09G-0832	3	. Capscrew	7	221711W	6	. Hex Nut
3	Y09G-0828	3	. Capscrew	8	09411507	11	. Nut
4	PWB3751250	11	. Bolt				
5	223634	6	. Flat Washer				

Rev A

Twine Box Installation, 6 Compartment

Page 1 of 2

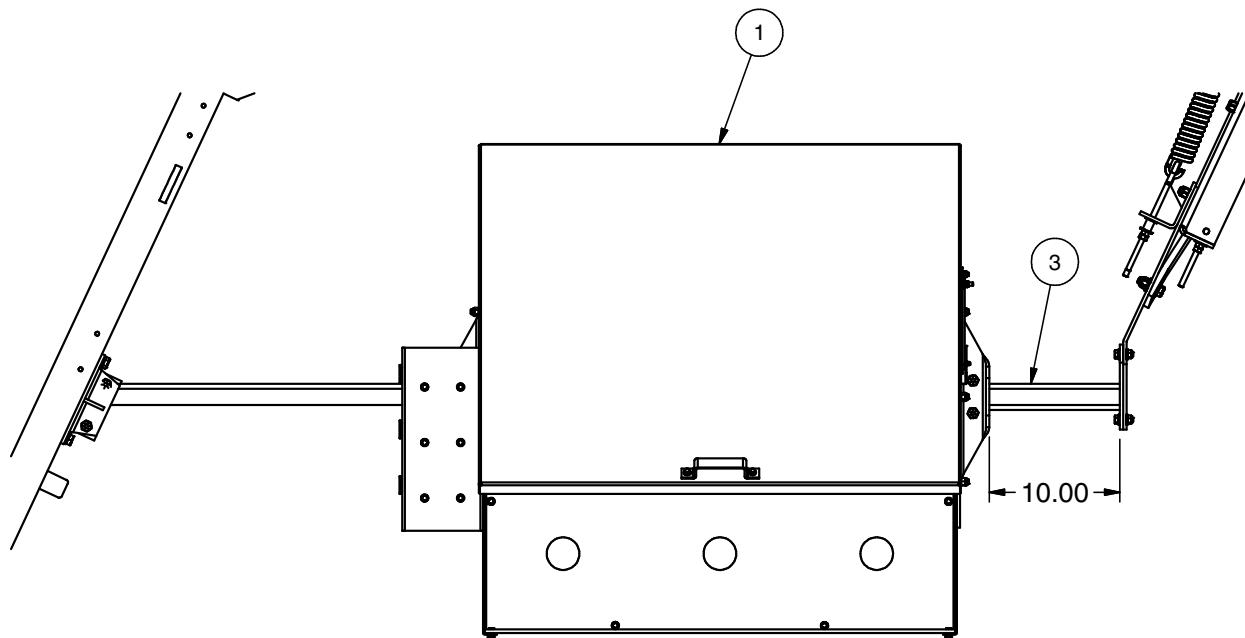

TWINE BOX LOCATION



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	903055		Twine Box Installation, 6 Compartment	9	174413W	3	. Screw, Ser Flg
1	*a 903054	1	. Twine Box Sub-Assy, 6 Compartment	10	R13801840	2	. Capscrew
2	CLP0017241	2	. Plate, Bracket	11	221569W	1	. Capscrew
3	TBX0020849	1	. Base Tube	12	15135W	2	. Washer
4	R13801857	6	. Capscrew	13	R13812516	2	. Lockwasher
5	223587	7	. Locknut	14	09411507	3	. Nut
6	F000007555	1	. Bracket				
7	F000007556	1	. Plate				
8	F000007705	1	. Brace				

* a See Separate Coverage (Page 8-40)

Rev DA


Twine Box Installation, 6 Compartment

Page 2 of 2

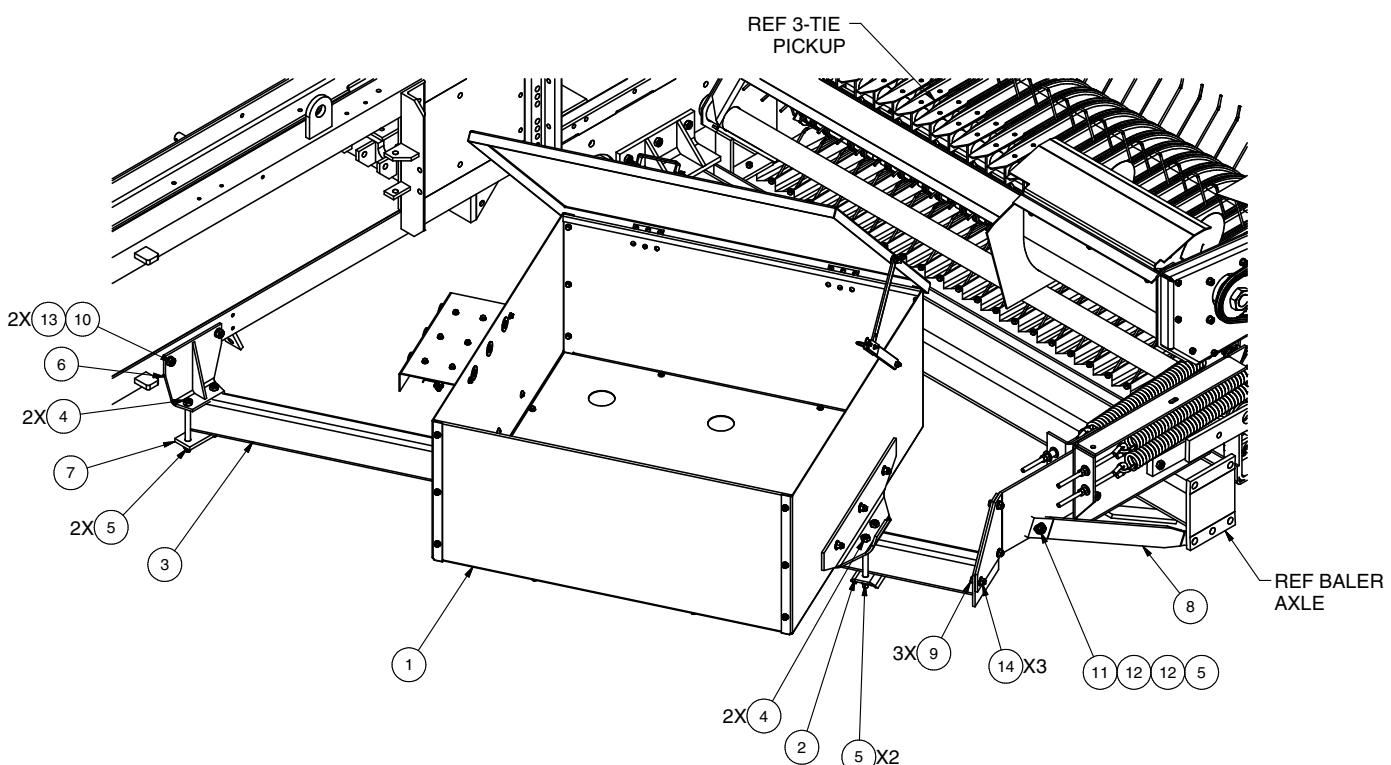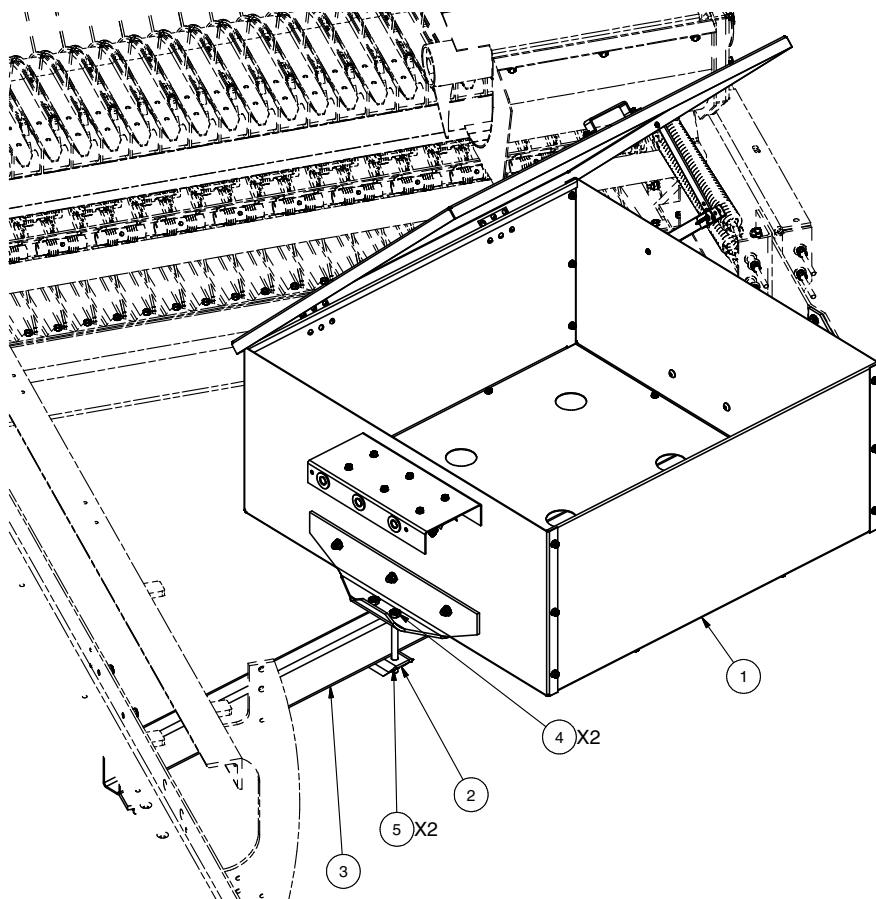

Twine Box Assembly, 6 Compartment

Page 1 of 2

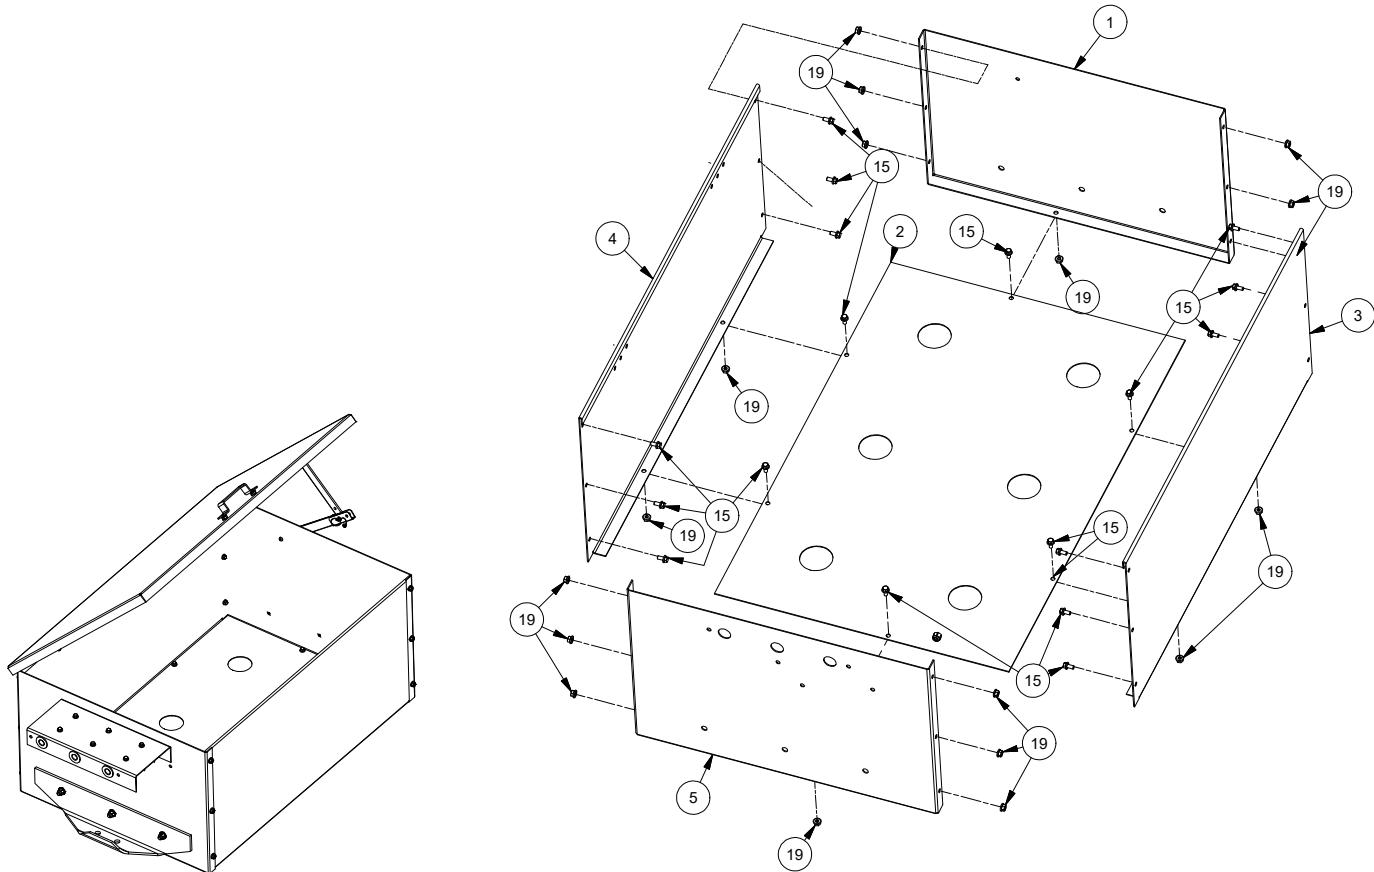


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
903054							
01	BOX0017261	1	. End Plate	14	18738W	6	. Capscrew
02	BOX0017262	1	. Plate, Btm	15	SMS000017320		. Screw, Ser Flg
03	BOX0017247	1	. Plate, Twine Box Front	16	258503	2	. Capscrew
04	BOX0017248	1	. Plate	17	027-1007	12	. Screw, Machine
05	BOX0017260	1	. Plate, LH	18	R13811443	5	. Washer
06	BOX0017259	1	. Plate, Box Lid	19	09416918	34	. Nut, Serrated
07	*a 902891	1	. Tensioner	20	237567	6	. Locknut
08	909501	2	. Hinge	21	235620	2	. Use 15113W
09	HAN0017239	1	. Handle F/Twine Box	22	399741W	2	. Screw, Ser Flg
10	257830	1	. Lid, Twine Box Support	23	221767W	6	. Washer
11	F000000856	3	. Bushing				
12	F000000857	3	. Ring, Snap				
13	BKT0017240	2	. Bracket				

*a See Separate Coverage (Page 8-50)

Rev E

Twine Box Assembly, 6 Compartment


Page 2 of 2

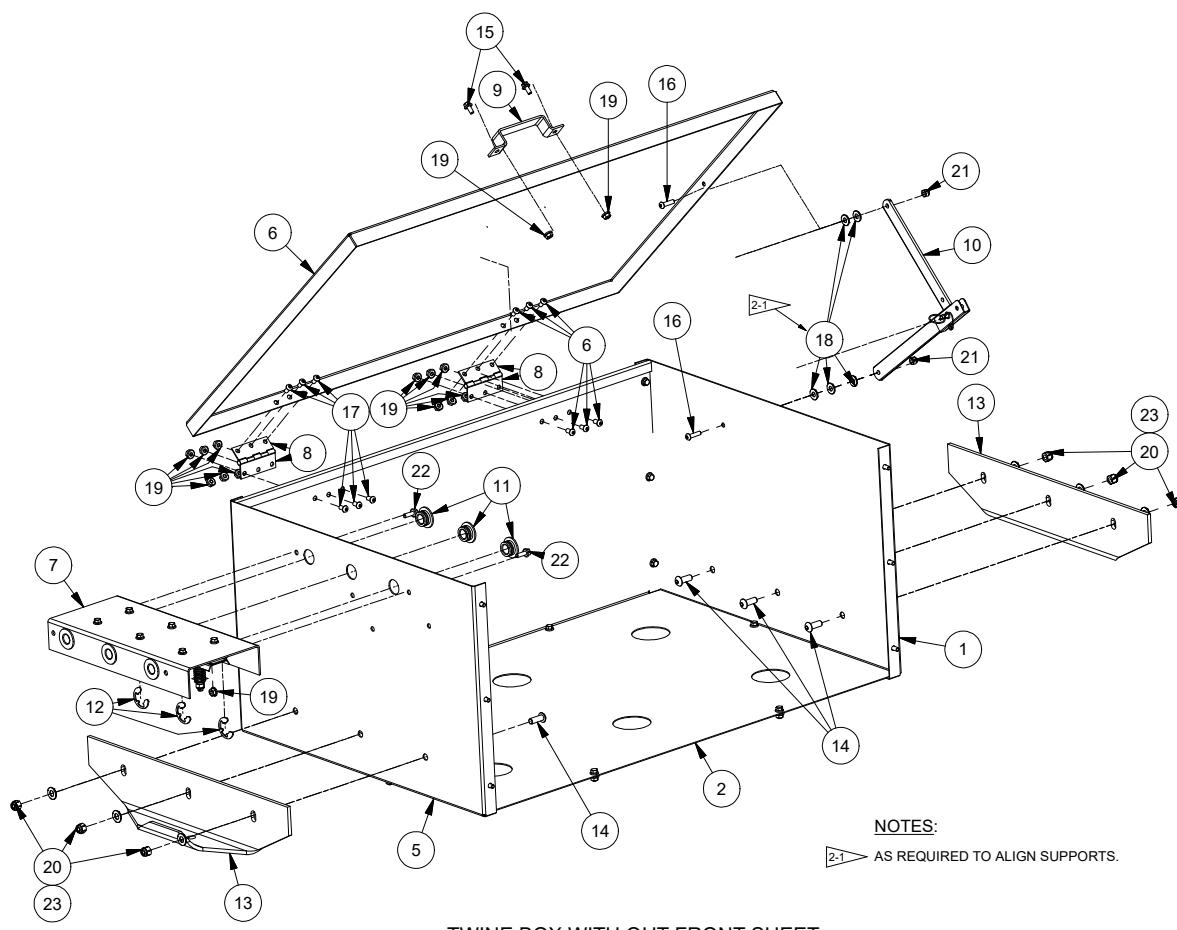

TWINE BOX WITH OUT FRONT SHEET

Twine Box Assembly, 9 Compartment

Page 1 of 2

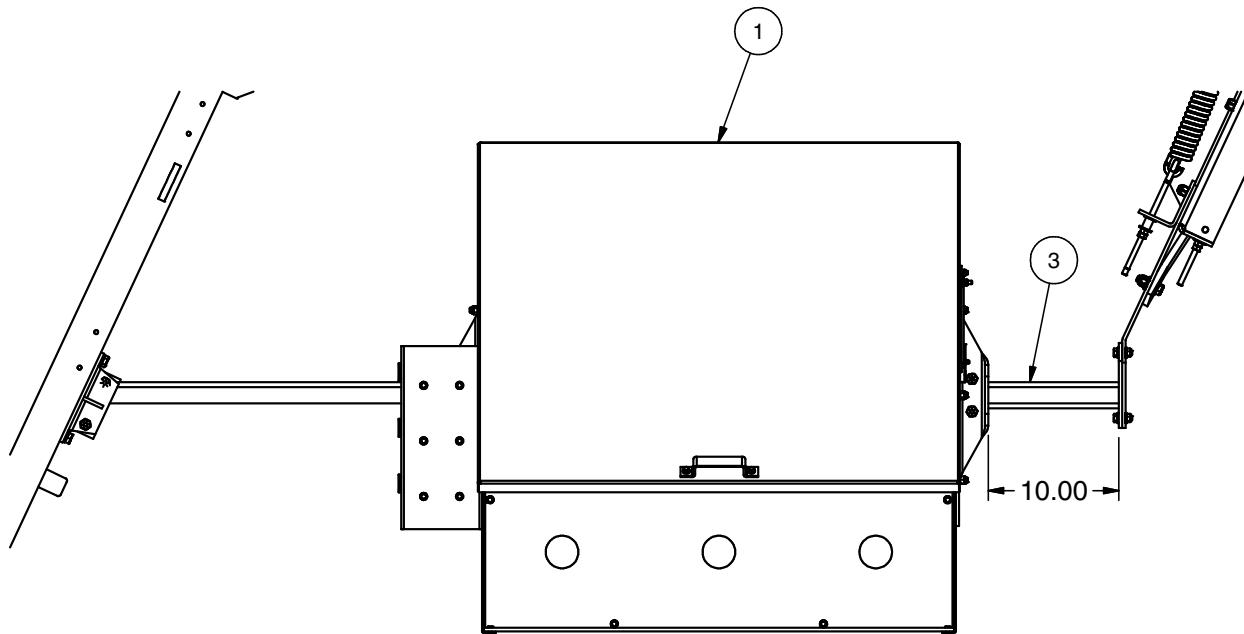

TWINE BOX LOCATION



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902169							
	Twine Box Installation, 9 Compartment			9	174413W	3	. Screw, Ser Flg
1	*a 902168	1	. Twine Box Sub-Assy, 9 Compartment	10	R13801840	2	. Capscrew
2	CLP0017241	2	. Plate, Bracket	11	221569W	1	. Capscrew
3	TBX0020849	1	. Base Tube	12	15135W	2	. Washer
4	R13801857	6	. Capscrew	13	R13812516	2	. Lockwasher
5	223587	7	. Locknut	14	09411507	3	. Nut
6	F000007555	1	. Bracket				
7	F000007556	1	. Plate				
8	F000007705	1	. Brace				

* a See Separate Coverage (Page 8-44)

Rev GA


Twine Box Installation, 9 Compartment

Page 2 of 2

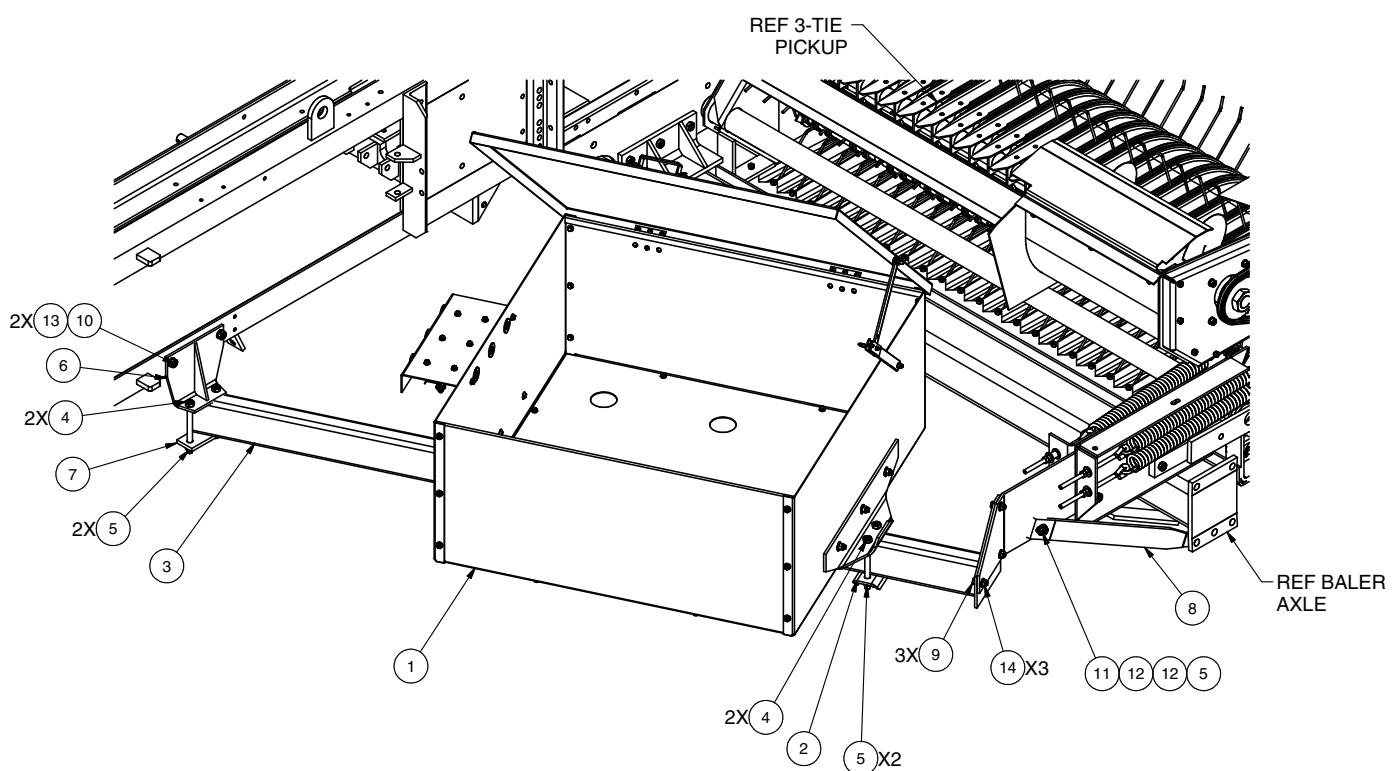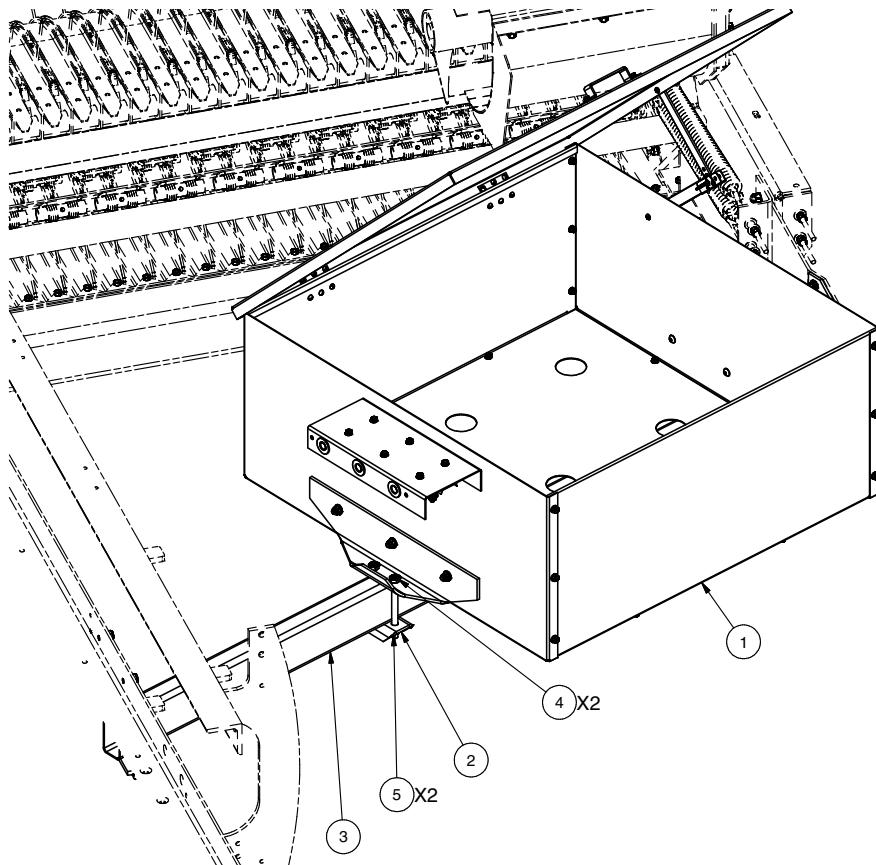

Twine Box Assembly, 9 Compartment

Page 1 of 2

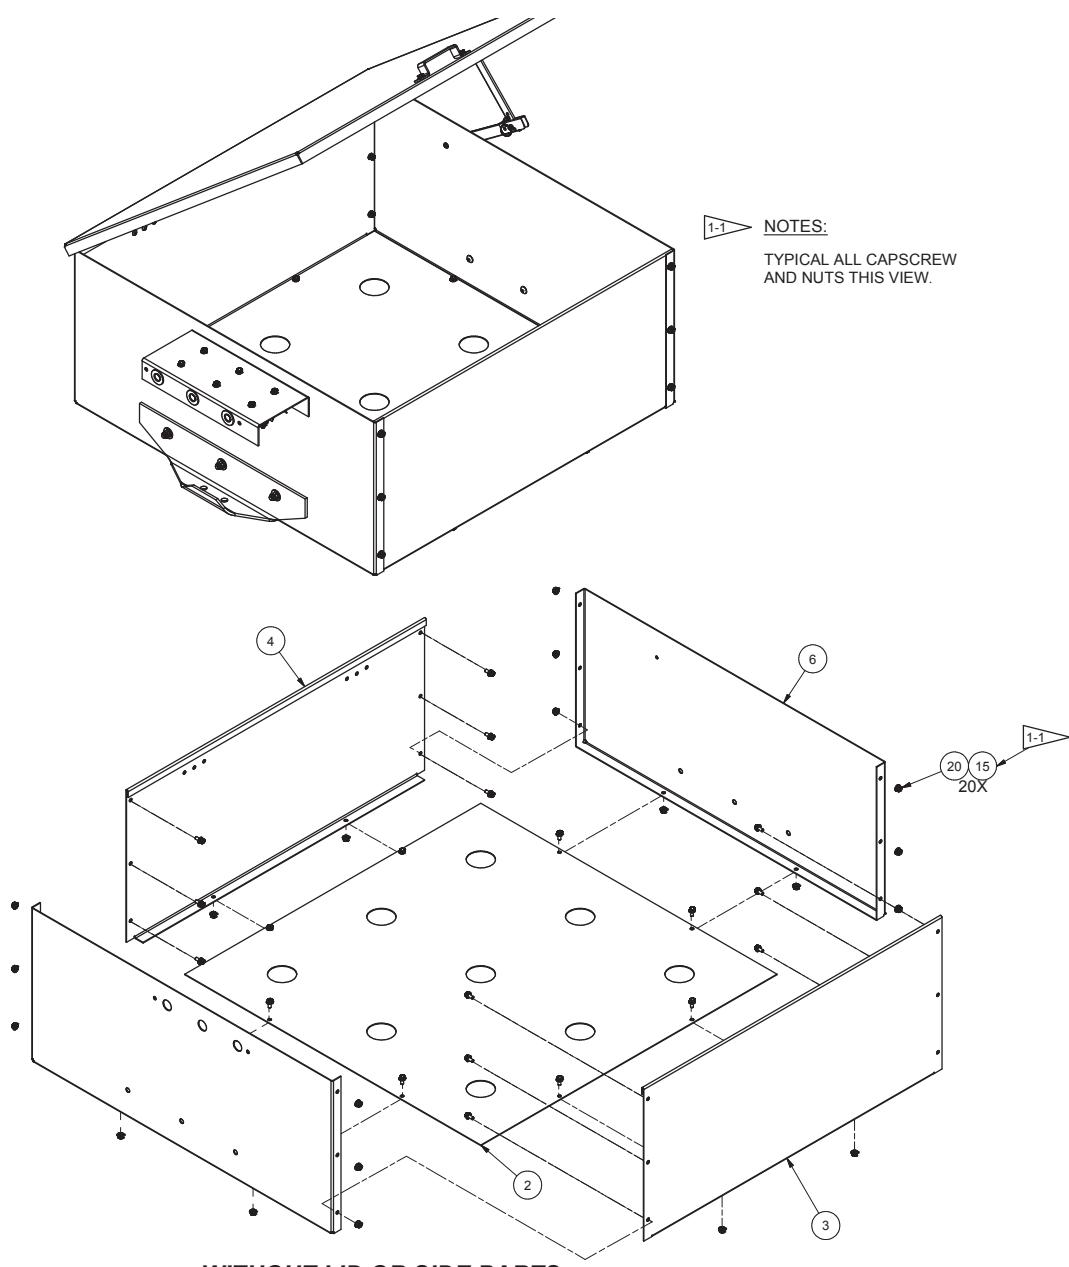

WITHOUT LID OR SIDE PARTS


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902168		Twine Box Sub-Assy, 9 Comp				
1	BOX0017243	1	. Lid	15	SMS000017322		. Screw, Ser Flg
2	BOX0017246	1	. Plate, Twine Box Bottom	16	18738W	6	. Capscrew
3	BOX0017247	1	. Plate, Twine Box Front	17	027-1007	12	. Screw, Machine
4	BOX0017248	1	. Plate	18	258503	2	. Capscrew
5	BOX0017244	1	. Twine Box End	19	R13811443	5	. Washer
6	BOX0017245	1	. RH Twine Box -9 & 12 Comp	20	09416918	36	. Nut, Serrated
7	* 902891	1	. Frame Sub-Assembly	21	15113W	2	. Nut, Esna
9	HAN0017239	1	. Handle F/Twine Box	22	237567	6	. Locknut
10	HNG0000810	2	. Hinge, Twine Box (Pair)	23	399741W	2	. Screw, Ser Flg
11	257830	1	. Lid, Twine Box Support	24	221767W	6	. Washer
12	BKT0017240	2	. Bracket				
13	F000000856	3	. Bushing				
14	F000000857	3	. Ring, Snap				
							* See Separate Coverage (Page 8-50) Rev FK

* See Separate Coverage (Page 8-50)

Rey FK


Twine Box Assembly, 9 Compartment

Page 2 of 2

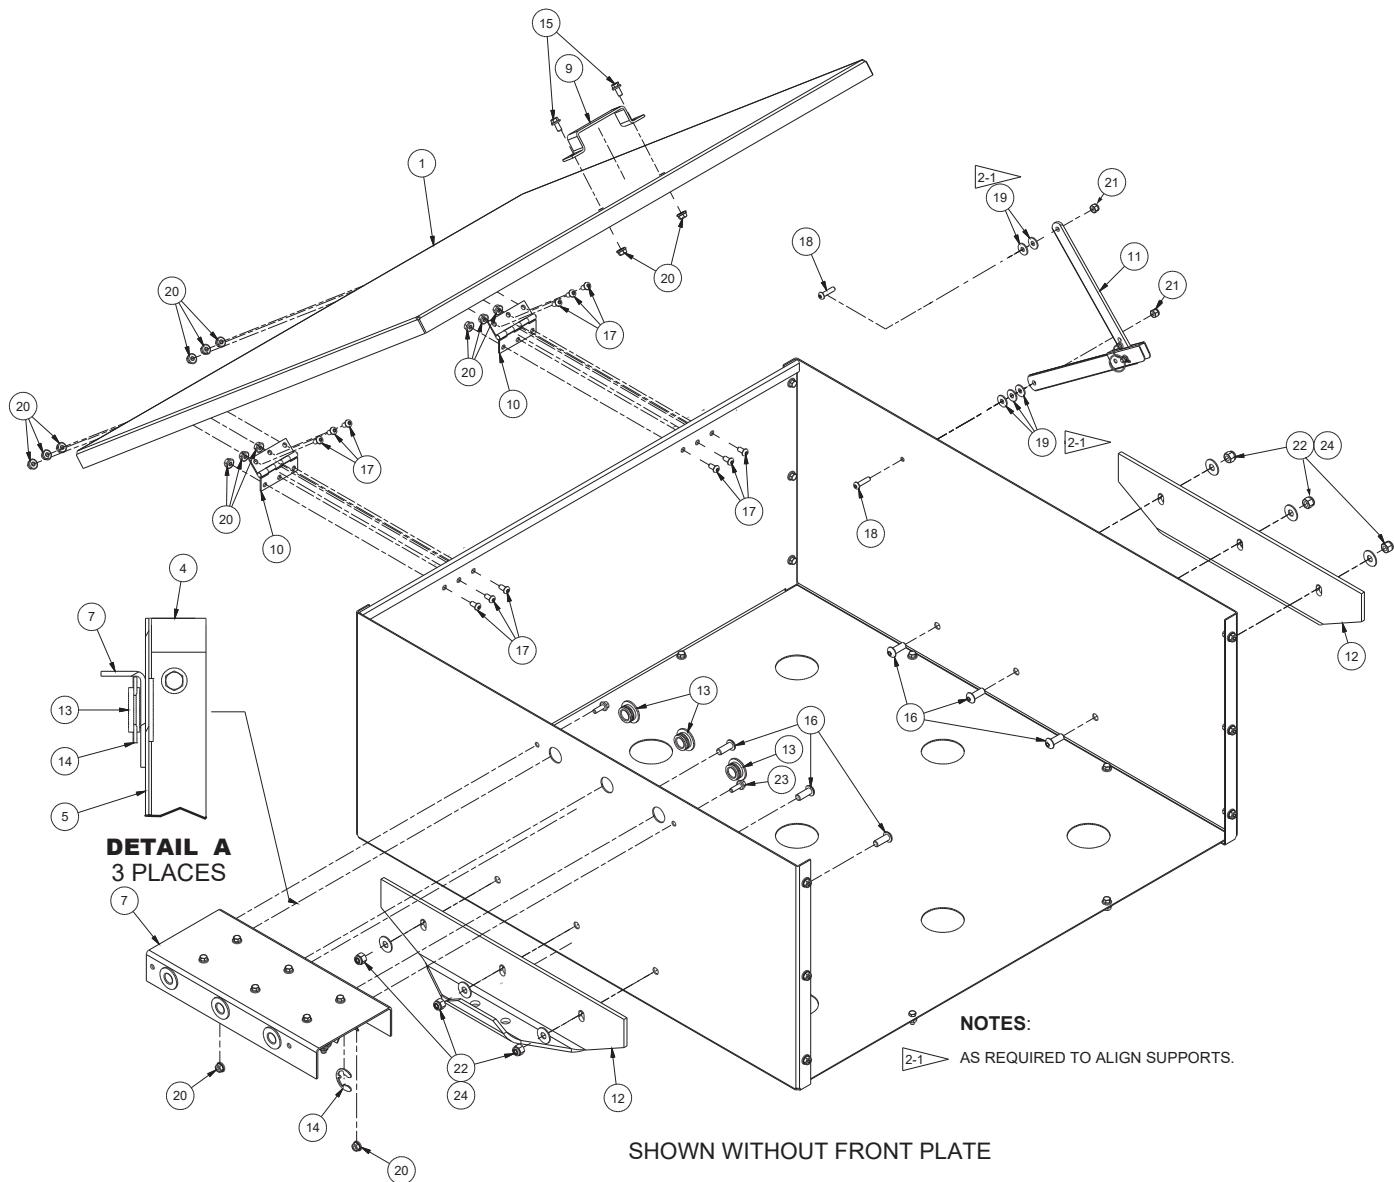

Twine Box Installation, 12 Compartment

Page 1 of 2

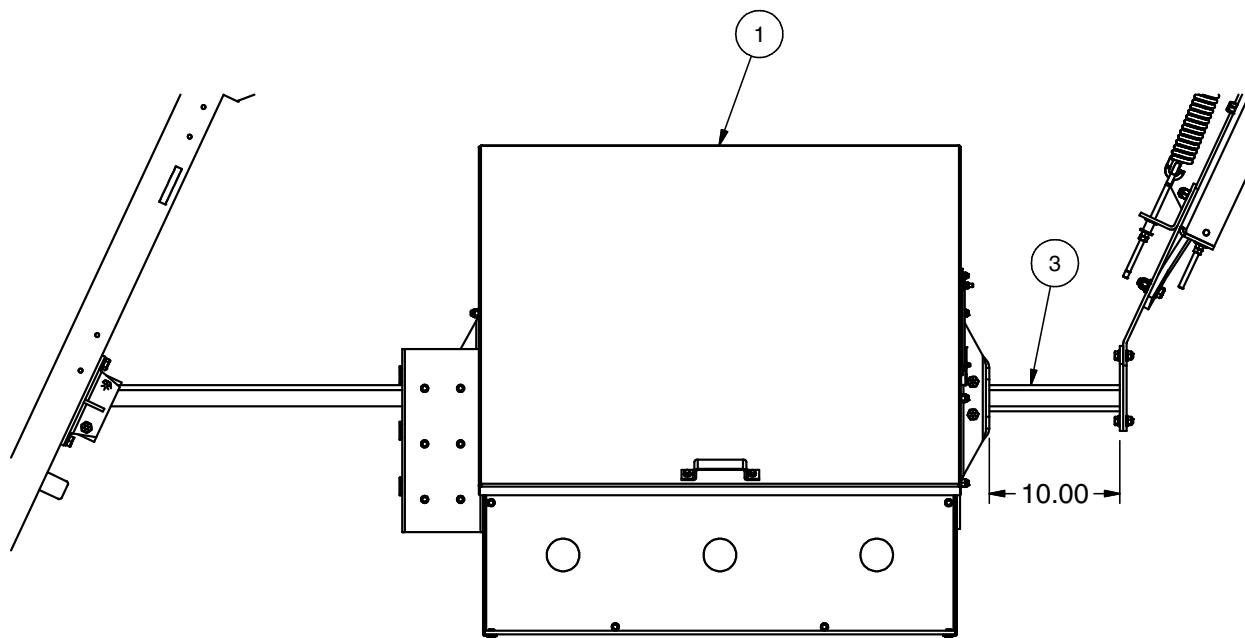

TWINE BOX LOCATION



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902166		Twine Box Installation, 12 Compartment	9	174413W	3	. Screw, Ser Flg
1	*a 902167	1	. Twine Box Sub-Assy, 12 Compartment	10	R13801840	2	. Capscrew
2	CLP0017241	2	. Plate, Bracket	11	221569W	1	. Capscrew
3	TBX0020849	1	. Base Tube	12	15135W	2	. Washer
4	R13801857	6	. Capscrew	13	R13812516	2	. Lockwasher
5	223587	7	. Locknut	14	09411507	3	. Nut
6	F000007555	1	. Bracket				
7	F000007556	1	. Plate				
8	F000007705	1	. Brace				

*a See Separate Coverage (Page 8-48)

Rev HA


Twine Box Installation, 12 Compartment

Page 2 of 2

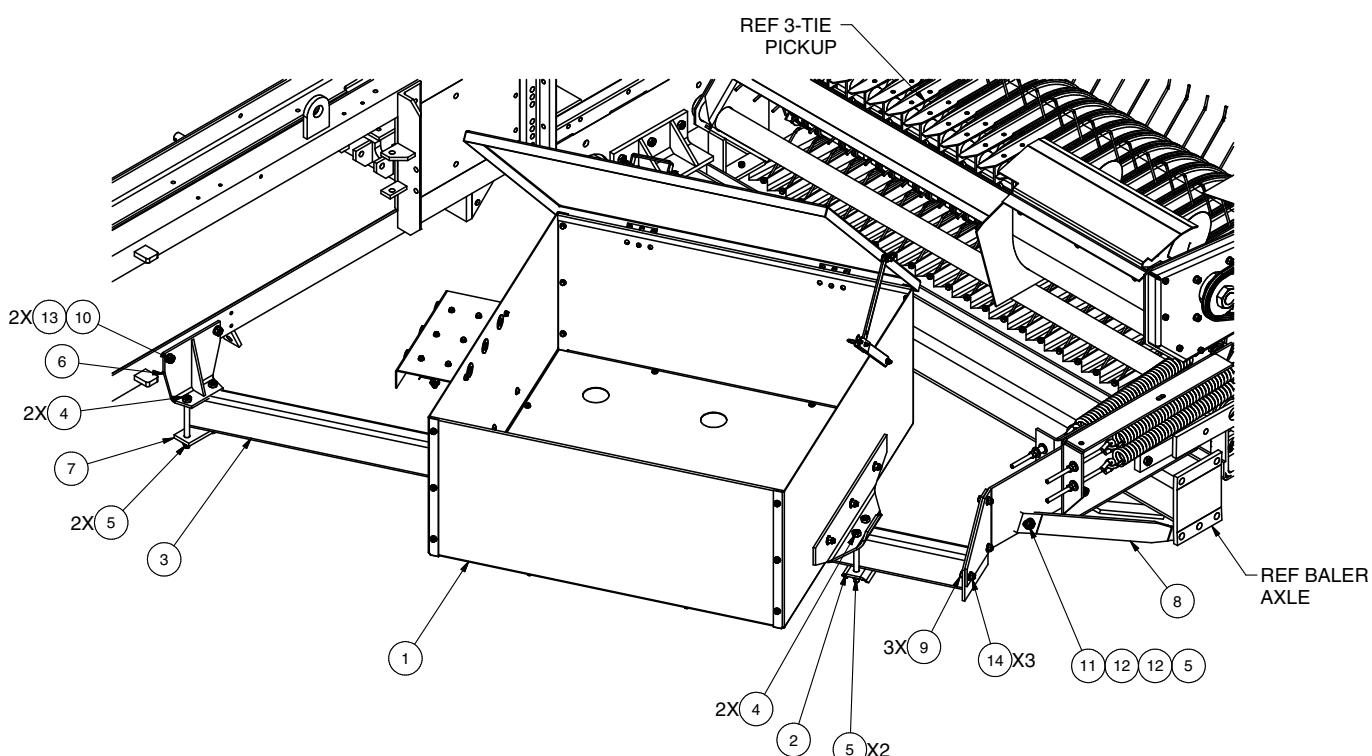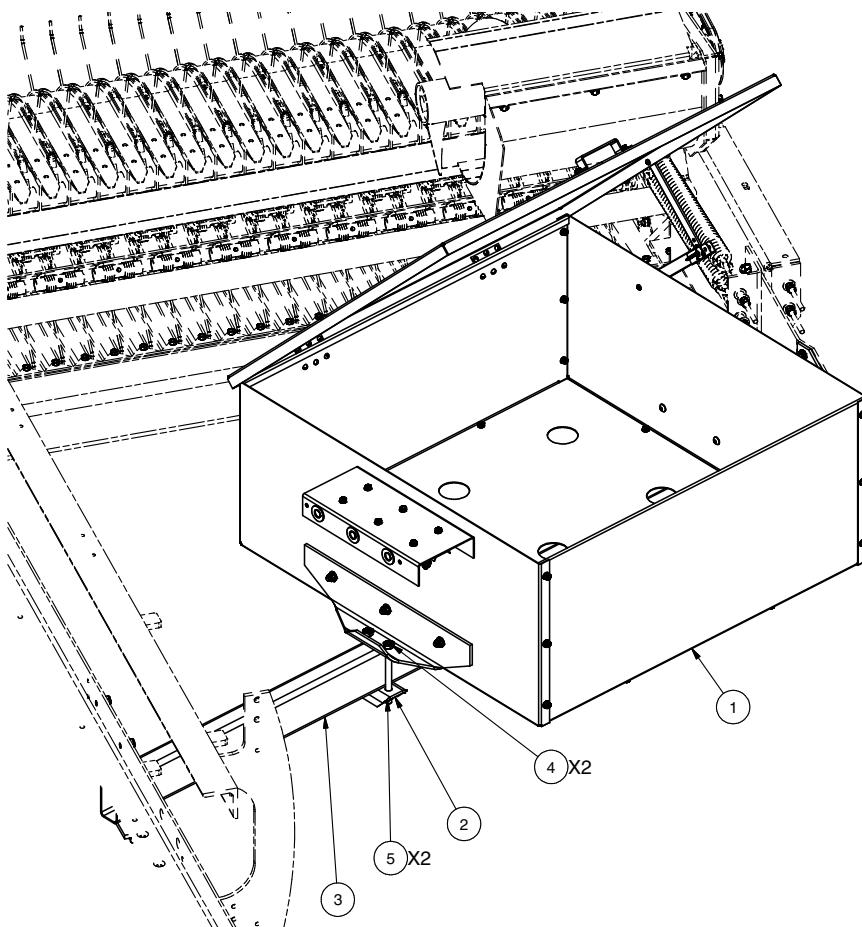

Twine Box Assembly, 12 Compartment

Page 1 of 2

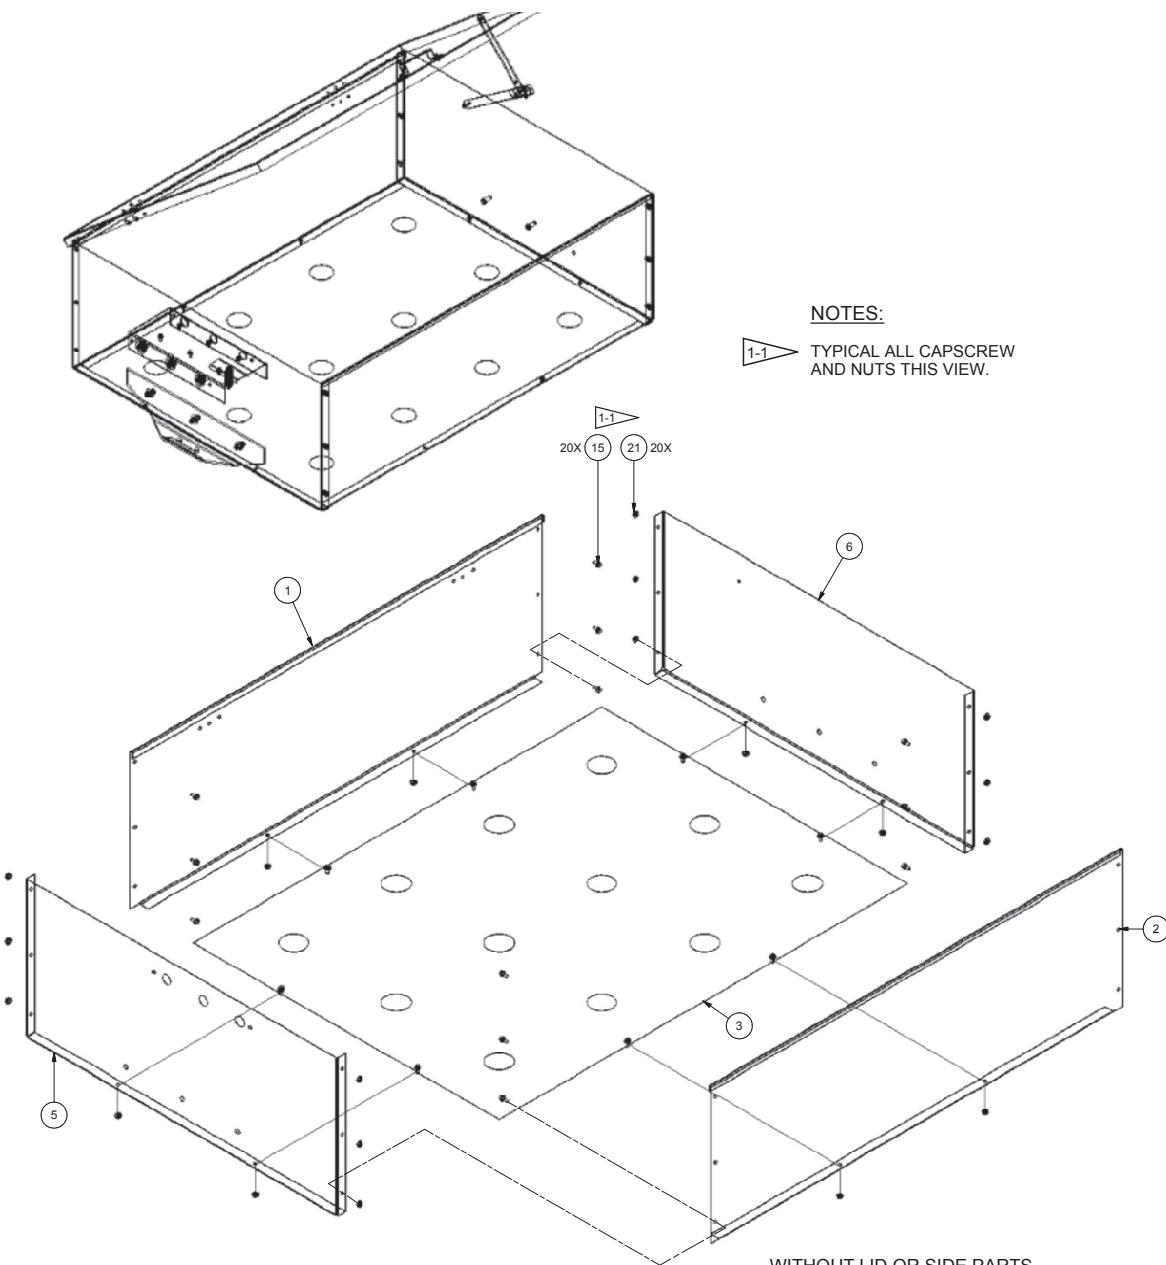


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902167		Twine Box Sub-Assy, 12 Comp				
1	BOX0017256	1	. Plate, Box Side	15	SMS000017322		. Screw, Ser Flg
2	BOX0017257	1	. Plate, Box Front	16	18738W	6	. Capscrew
3	BOX0018358	1	. Plate, Box Bottom	19	027-1007	12	. Screw, Machine
4	BOX0018359	1	. Lid, Box	20	R13811443	5	. Washer
5	BOX0017244	1	. Twine Box End	21	09416918	36	. Nut, Serrated
6	BOX0017245	1	. RH Twine Box -9 & 12 Comp	22	237567	6	. Locknut
7	*a 902891	1	. Frame Sub-Assembly	23	15113W	2	. Nut, Esna
9	HAN0017239	1	. Handle F/Twine Box	24	221767W	6	. Washer
10	HNG0000810	2	. Hinge, Twine Box (Pair)	25	399741W	2	. Screw, Ser Flg
11	257830	1	. Lid, Twine Box Support	27	258503	2	. Capscrew
12	BKT0017240	2	. Bracket				
13	F000000856	3	. Bushing				
14	F000000857	3	. Ring, Snap				

*a See Separate Coverage (Page 8-50)


Rev KQ

Twine Box Assembly, 12 Compartment

Page 2 of 2

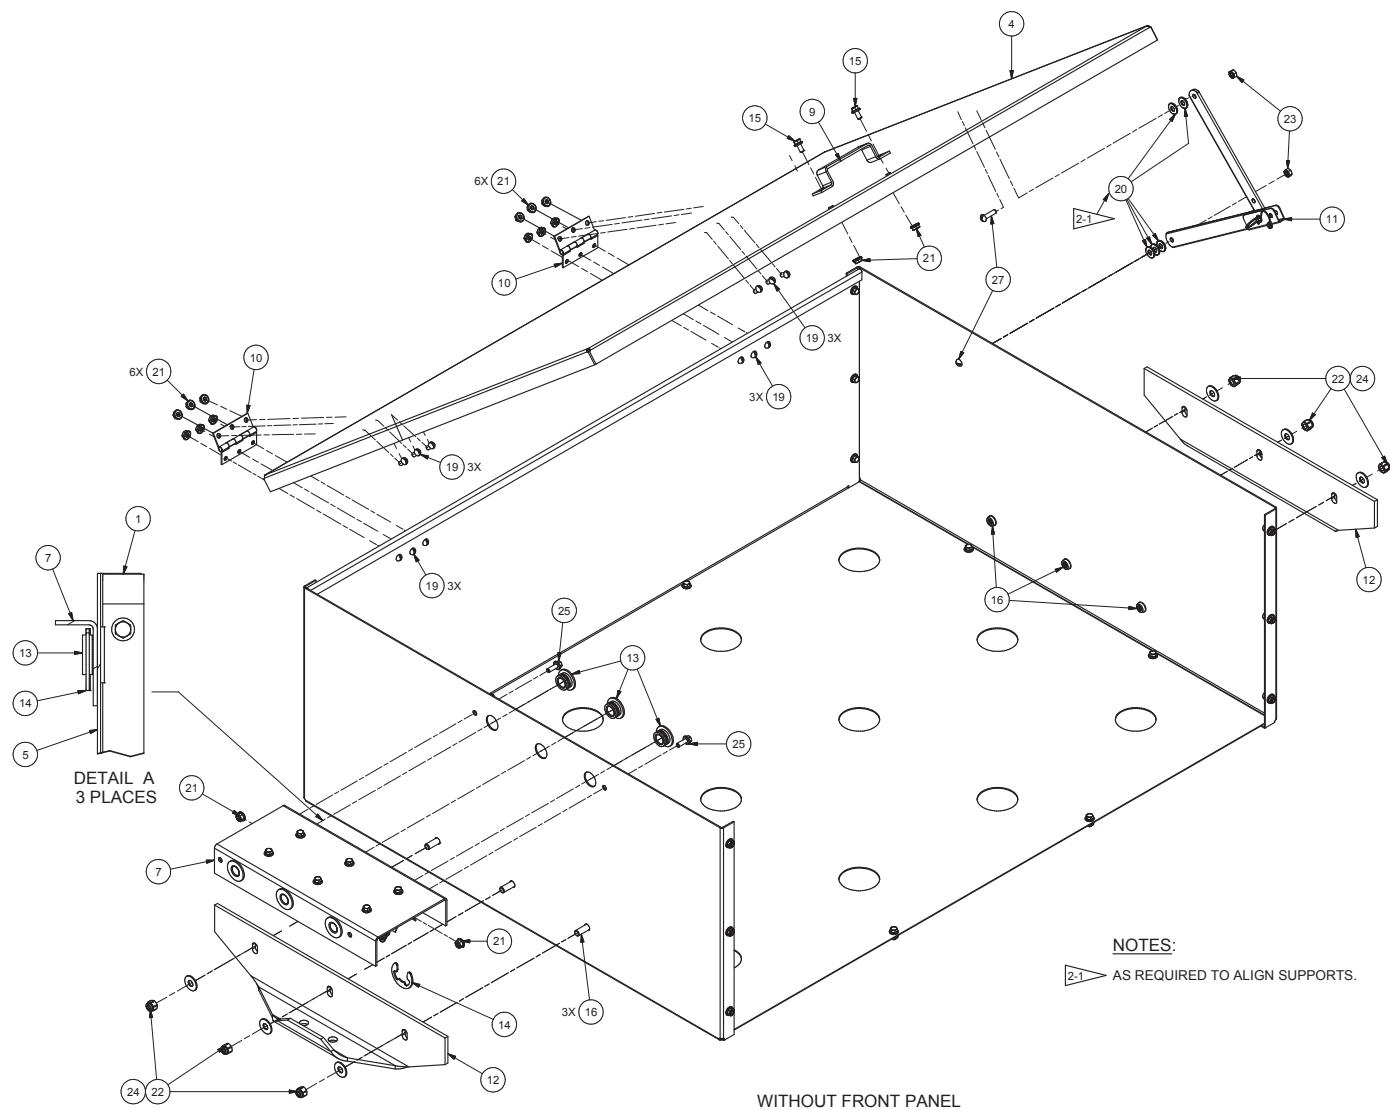

Twine Tension Frame Assembly

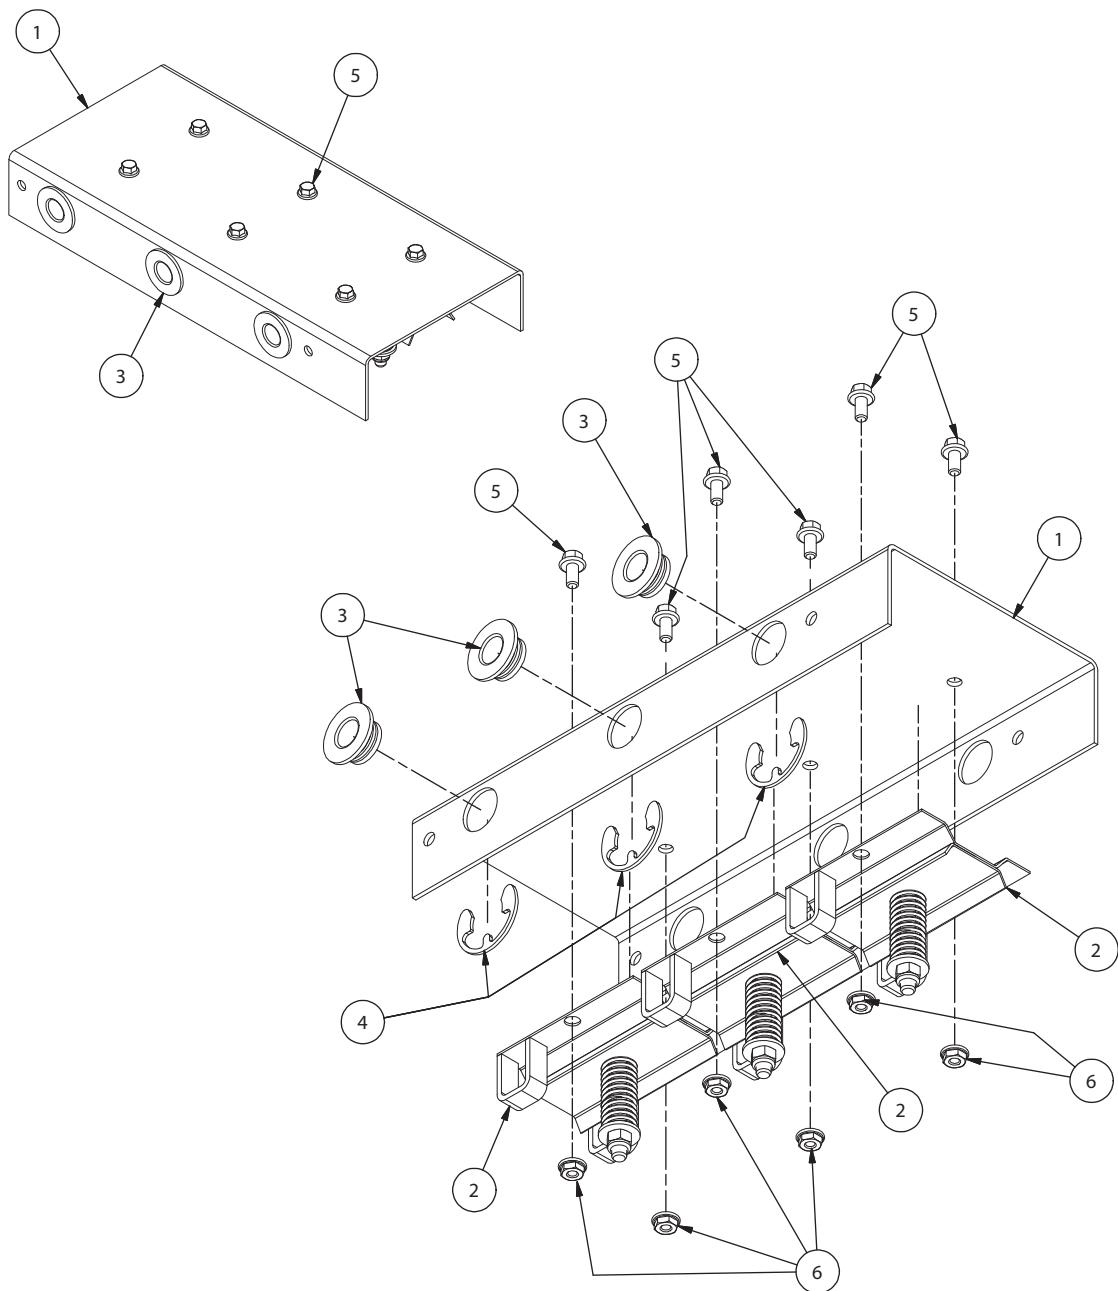


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902891		Frame Sub Assembly				
1	BKT0017242	1	. Bracket	5	SMS0000173	6	. Bolt
2	F000007891	3	. Tension Assembly, Twine	6	09416918	6	. Nut
3	F000000856	3	. Twine & Wire Guide Bushing				
4	F000000857	3	. Snap Ring				

Rev B

Twine Box Divider, 12 Compartment

NOTES:

- 1 - CUT TRIM TO 4 INCH LENGTHS AND INSTALL IN MIDDLE OF DIVIDER ENDS.
- 2 - ASSEMBLE PARTS INSIDE TWINE BOX.
INSTALL LONG DIVIDERS FIRST WITH SLOTS UP.

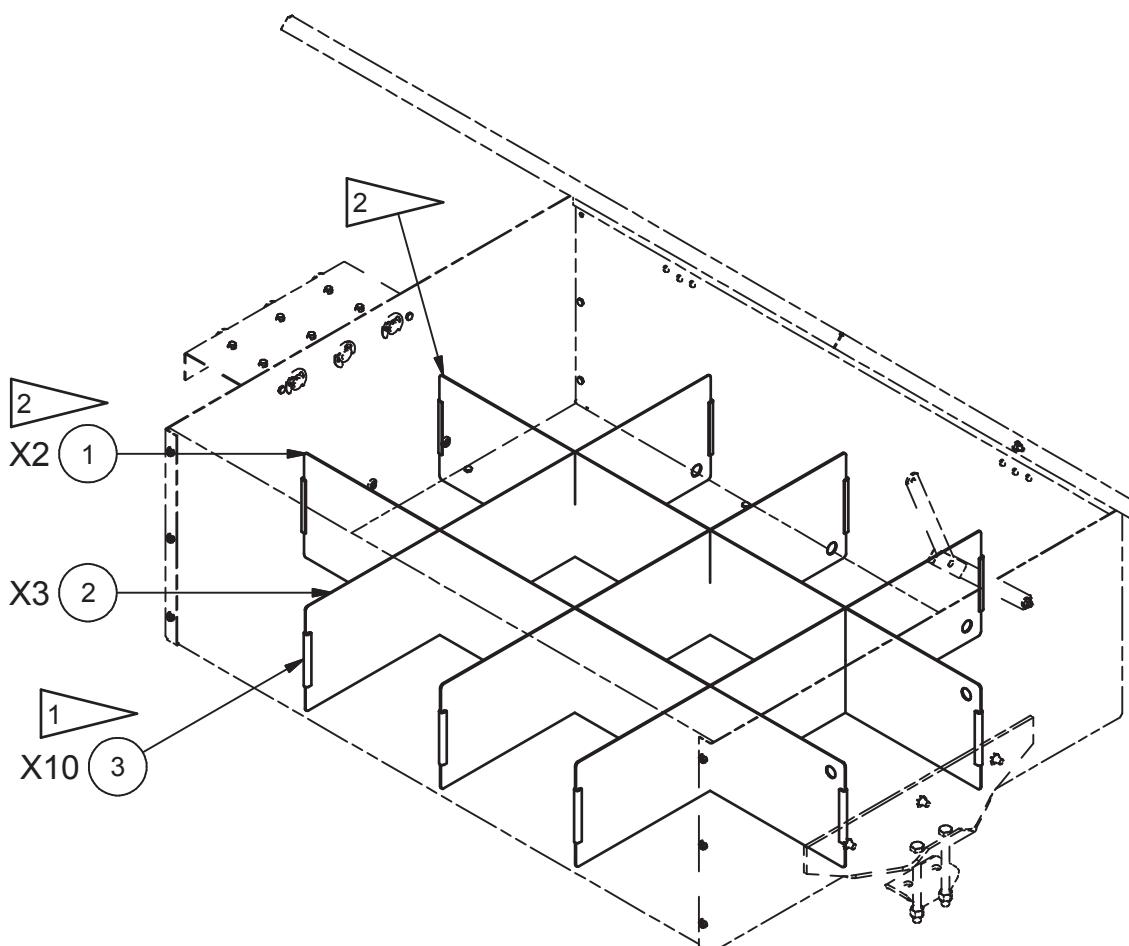

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	FOP0000261 DRW036084D	2	Twine Box Divider Assy, 12 Comp . Divider Sheet, Lower	3	MLD7500317	4'	. Trim Molding, Black
2	DRW036085D	3	. Divider Sheet, Upper				

Rev AA

This page is intentionally left blank.

Section 9


Needle Yoke and Needles

Needles and Yoke Installation, Conventional, 14"	9-3
Needles and Yoke Installation, Conventional, 16"	9-7
Needles and Yoke Installation, Tailless, 14"	9-11
Needles and Yoke Installation, Tailless, 16"	9-14

This page is intentionally left blank.


Needles and Yoke Installation, Conventional, 14"

Page 1 of 4

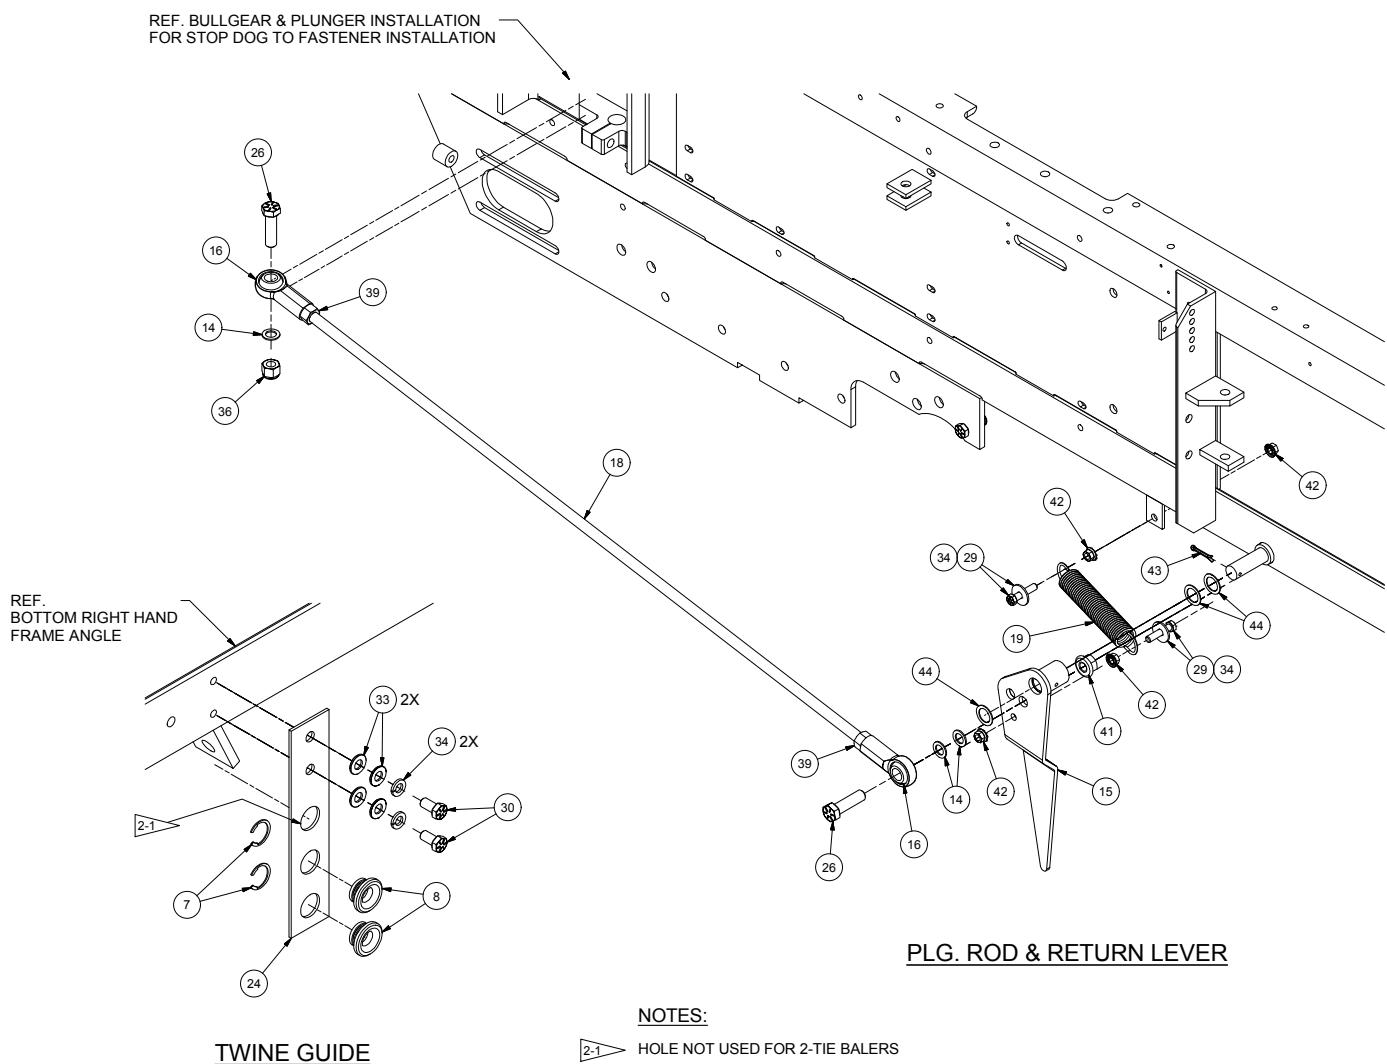

Needles and Yoke Conventional Installation, 14"

Page 2 of 4

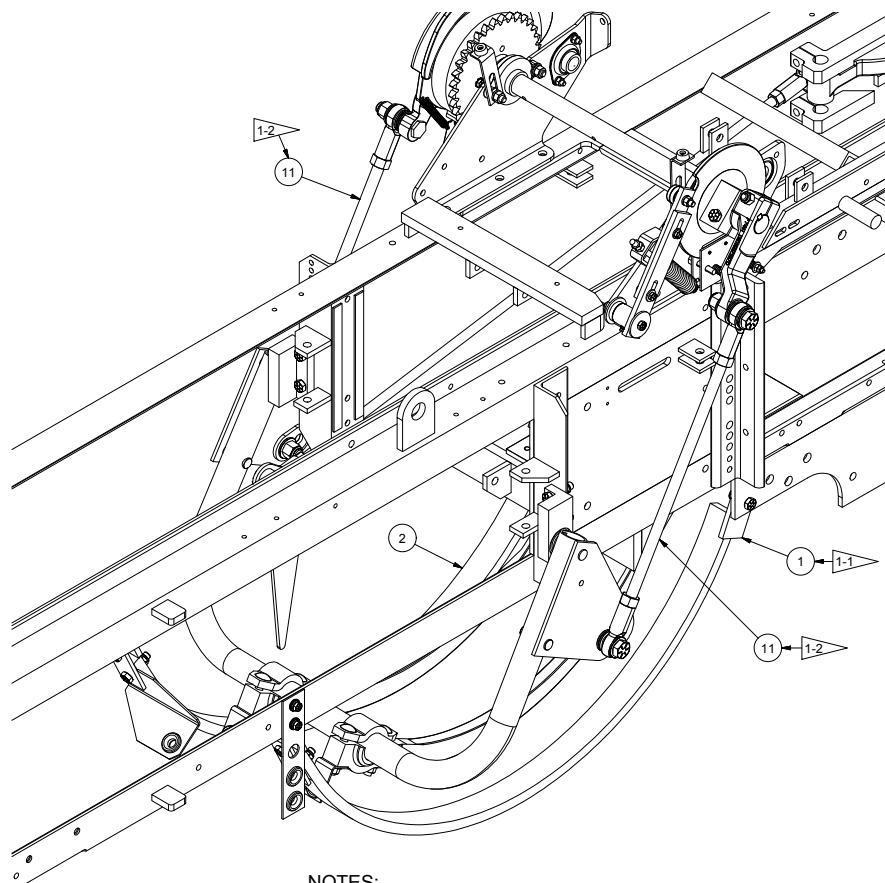

NOTES:

1-1 → INSTALL ON INSIDE OF FRAME (BOTH SIDES OF BALER)


1-2 → ROTATE CLOCKWISE TO RAISE NEEDLES. BOTTOM
OF NEEDLE EYE SHOULD BE 4.50" PAST TWINE
DISC AT TOP OF TRAVEL.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
903414							
	Needles And Yoke Installation						
1	F000007568	1	.Guard Weldment, Rh Needle	25	232854	2	.Capscrew
2	F000007569	1	.Needle Guard, LH	26	Y17C-1036	2	.Capscrew
3	SFC036488A	1	.Capscrew	27	200454W	4	.Capscrew
4	CRB5003250	4	.Bolt, Carriage	28	R13811077	6	.Capscrew
5	F000001611	2	.Needle, Twine - Curved	29	R13801813	2	.Capscrew
6	F000007973	2	.Holder, Needle Twine Guide	30	162572W	2	.Capscrew
7	F000000857	5	.Ring, Snap	31	R13811457	16	.Flat Washer
8	F000000856	5	.Bushing	32	221771W	10	.Washer, Hard
9	R13810974	1	.Capscrew	33	221767W	6	.Washer, Flat
10	F000001549	2	.Rod End	34	R13812514	2	.Lockwasher
11	F000007554	2	.Rod, Needle Yoke Drive	35	234836	4	.Nut, Esna
12	NFL0007500	2	.Nut, LH Hex	36	237552	1	.Nut, Esna
13	F000001550	2	.Rod End	37	223587	10	.Nut, Esna
14	ZZ00000211	3	.Mach Bushing	38	221717W	2	.Hex Nut
15	LEV0015639	1	.Lever Weldment	39	199594W	2	.Hex Nut
16	ROD0000001	2	.Rod End	40	221711W	4	.Hex Nut
17	904347	1	.Needle Yoke Weldment	41	00273801	1	.Locknut
18	ROD035984B	1	.Rod	42	09411507	4	.Nut
19	SPG0020662	1	.Spring, Plunger Latch	43	00103409	1	.Cotter Pin
20	904343	1	.Bearing Assembly ,LH	44	ZZ00000208	3	.Mach Bushing
21	904344	1	.Bearing Assembly ,RH	45	903413	2	.Bar
22	226272	8	.Bushing		NA Not Applicable		
23	GUD0031463	1	.Bracket				
24	F000000525	1	.Holder F/Twine Guide Bushing				


Rev C-

Needles and Yoke Installation, Conventional, 14"


Page 3 of 4

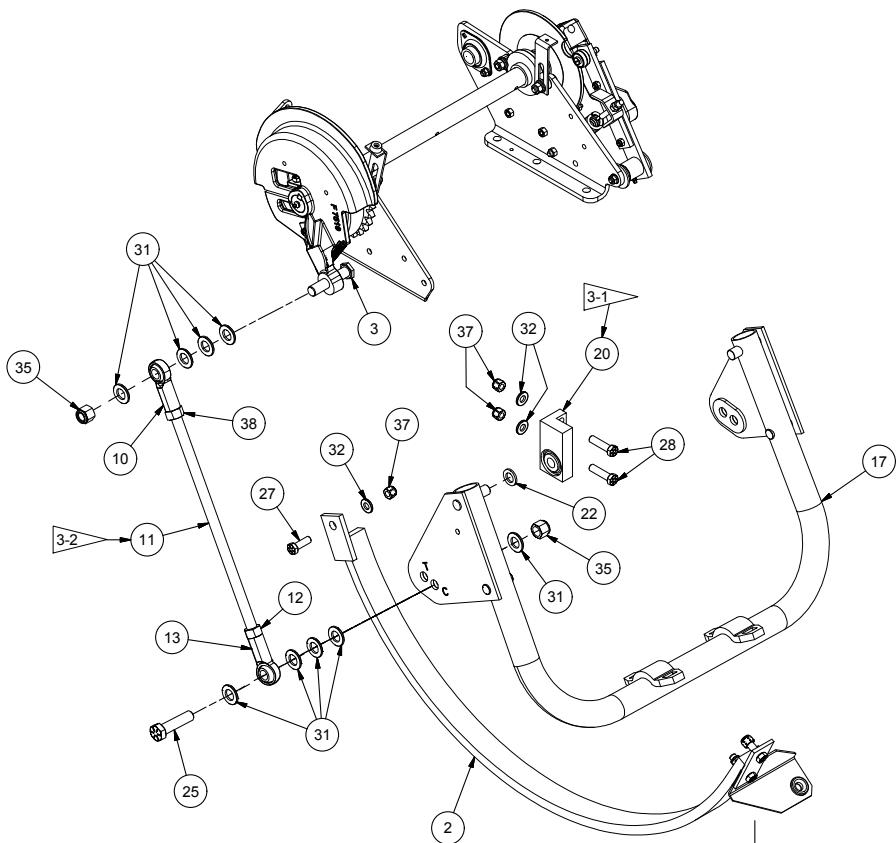

YOKE BRG, GUARD & DRIVE ROD
LEFT HAND

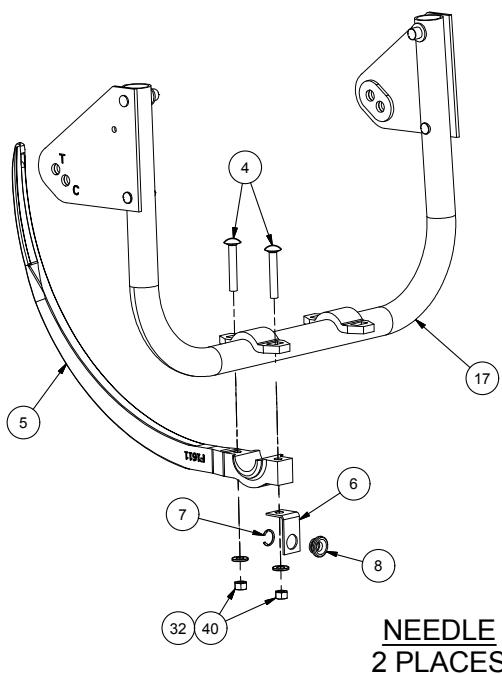

NEEDLE
2 PLACES

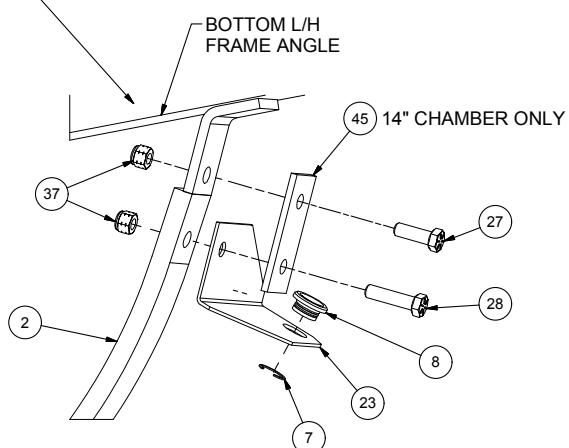



GUARD MOUNT, LH

NOTES:

- 3-1 USE FIXTURE X-202369 FOR INSTALLATION OF P/N: 904347
- 3-2 DRIVE ROD SHOULD NOT HAVE MORE THAN 5° OF MIS-ALIGNMENT BETWEEN SPHERICAL ROD ENDS

Needles and Yoke Installation, Conventional, 14"

Page 4 of 4

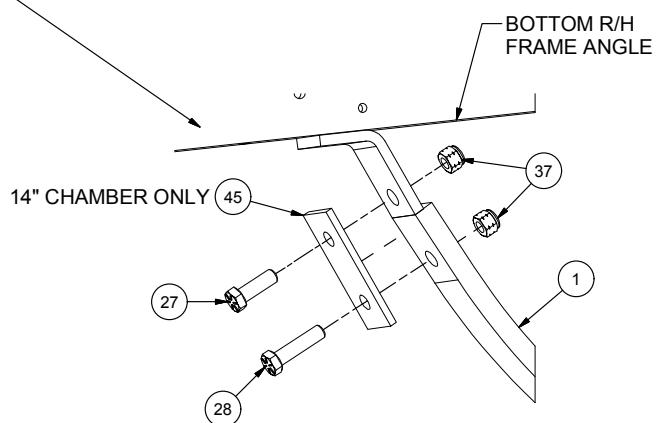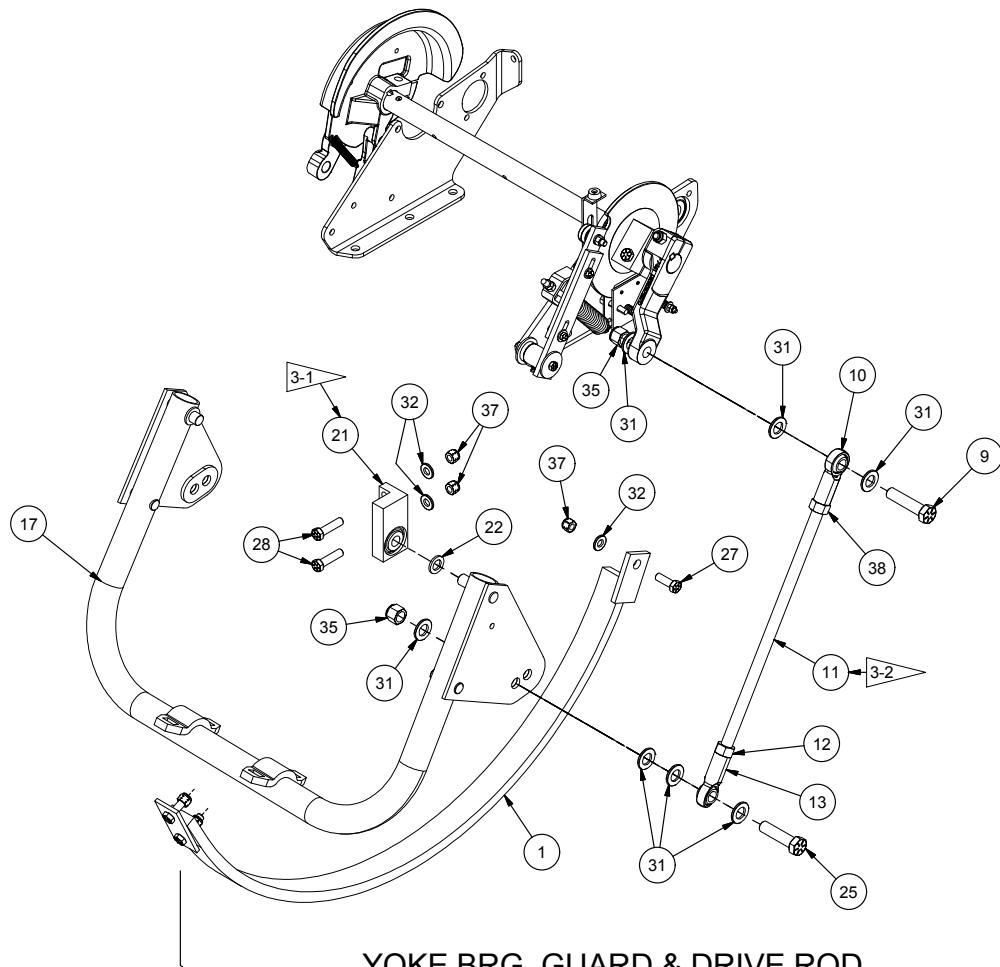


GUARD MOUNT, RH

NOTES:

- 3-1 USE FIXTURE X-202369 FOR INSTALLATION OF P/N: 904347
- 3-2 DRIVE ROD SHOULD NOT HAVE MORE THAN 5° OF MIS-ALIGNMENT BETWEEN SPHERICAL ROD ENDS


Needles and Yoke Installation, Conventional, 16"

Page 1 of 4

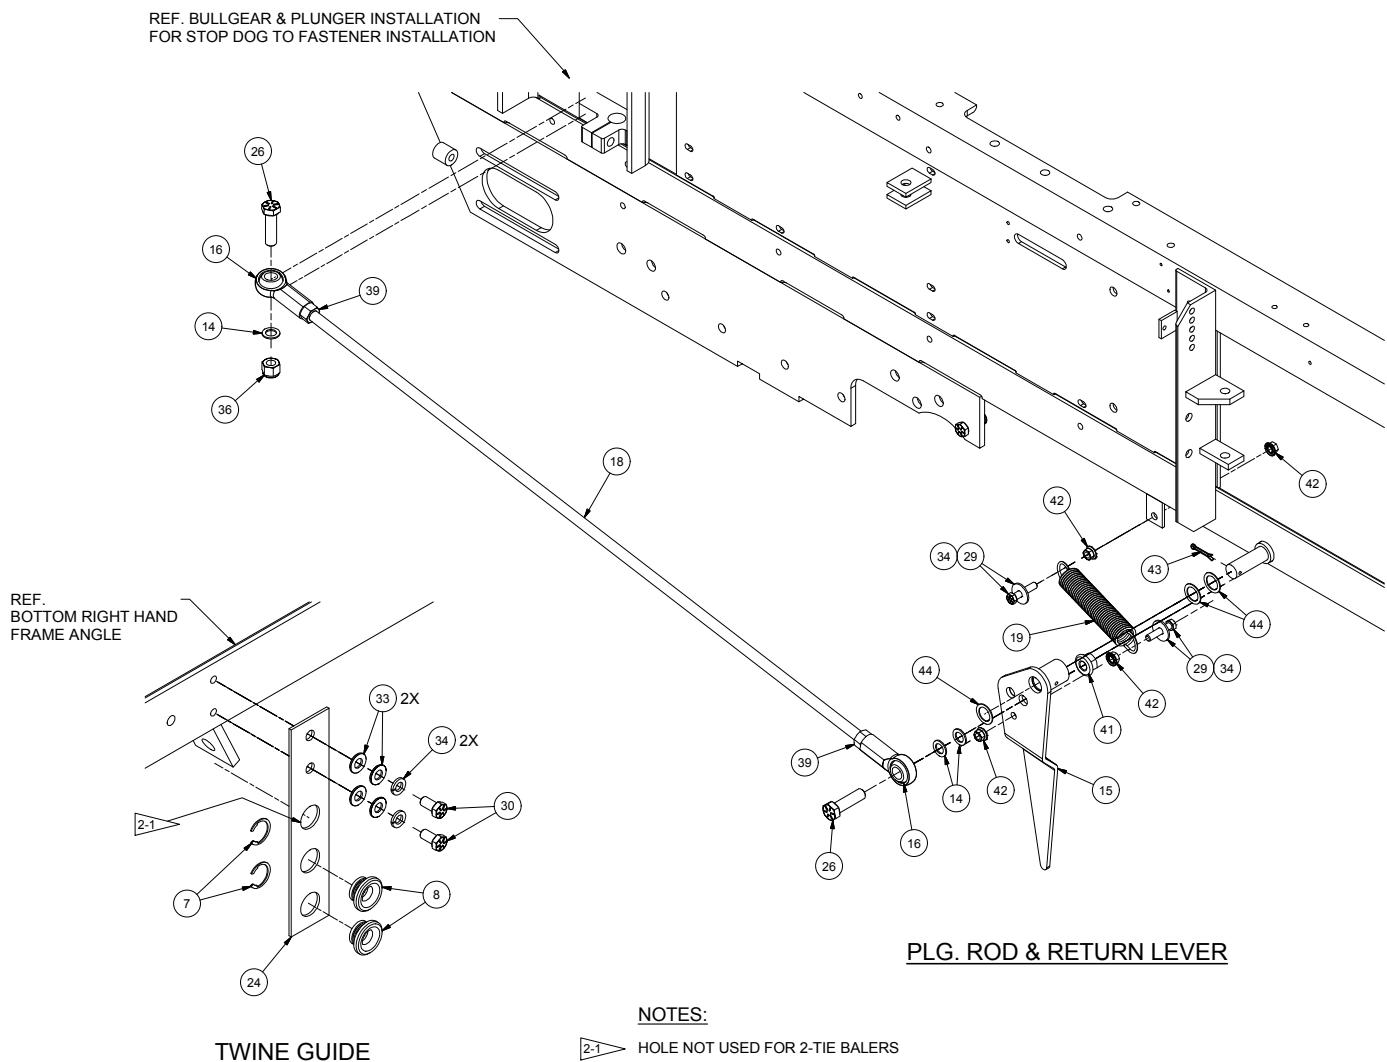

Needles and Yoke Installation, Conventional, 16"

Page 2 of 4

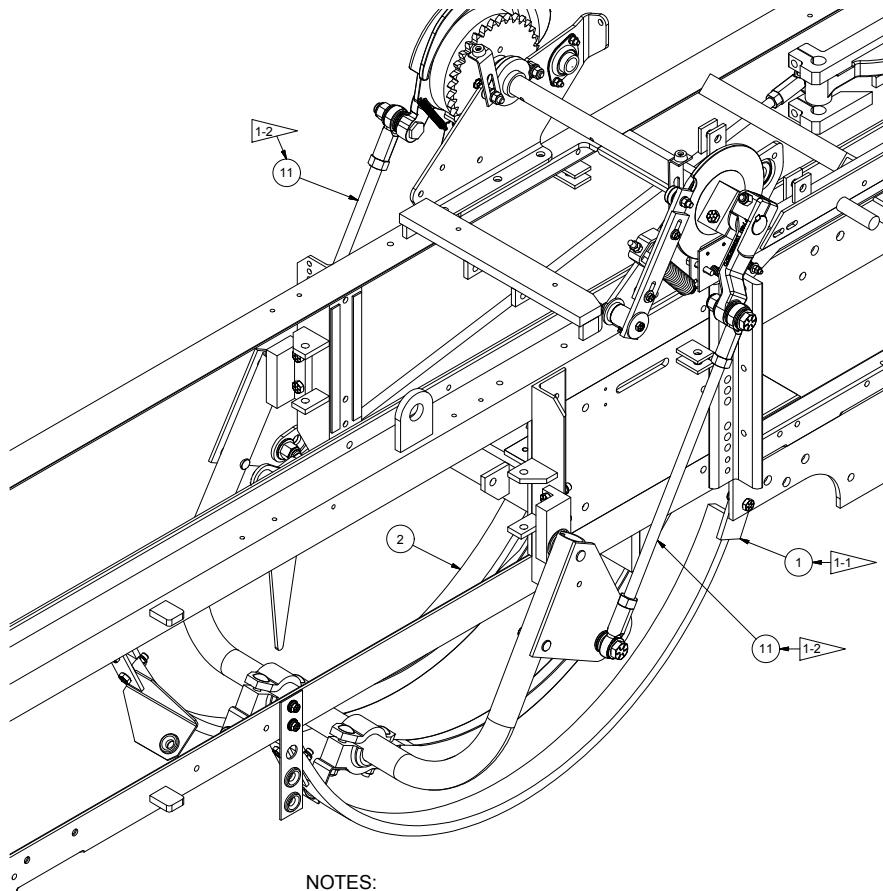

NOTES:

1-1 ➤ INSTALL ON INSIDE OF FRAME (BOTH SIDES OF BALER)


1-2 ➤ ROTATE CLOCKWISE TO RAISE NEEDLES. BOTTOM OF NEEDLE EYE SHOULD BE 4.50" PAST TWINE DISC AT TOP OF TRAVEL.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902592							
	Needles And Yoke Installation						
1	F000007568	1	. Guard Weldment, Rh Needle	25	232854	2	. Capscrew
2	F000007569	1	. Needle Guard, LH	26	Y17C-1036	2	. Capscrew
3	SFC036488A	1	. Capscrew	27	200454W	2	. Capscrew
4	CRB5003250	4	. Bolt, Carriage	28	R13811077	6	. Capscrew
5	F0000001611	2	. Needle, Twine - Curved	29	R13801813	2	. Capscrew
6	F000007973	2	. Holder, Needle Twine Guide	30	162572W	2	. Capscrew
7	F000000857	5	. Ring, Snap	31	R13811457	16	. Flat Washer
8	F000000856	5	. Bushing	32	221771W	10	. Washer, Hard
9	R13810974	1	. Capscrew	33	221767W	6	. Washer, Flat
10	F000001549	2	. Rod End	34	R13812514	2	. Lockwasher
11	F000007554	2	. Rod, Needle Yoke Drive	35	234836	4	. Nut, Esna
12	NFL0007500	2	. Nut, LH Hex	36	237552	1	. Nut, Esna
13	F000001550	2	. Rod End	37	223587	8	. Nut, Esna
14	ZZ00000211	3	. Mach Bushing	38	221717W	2	. Hex Nut
15	LEV0015639	1	. Lever Weldment	39	199594W	2	. Hex Nut
16	ROD0000001	2	. Rod End	40	221711W	4	. Hex Nut
17	904347	1	. Needle Yoke Weldment	41	00273801	1	. Locknut
18	ROD035984B	1	. Rod	42	09411507	4	. Nut
19	SPG0020662	1	. Spring, Plunger Latch	43	00103409	1	. Cotter Pin
20	904343	1	. Bearing Assembly ,LH	44	ZZ00000208	3	. Mach Bushing
21	904344	1	. Bearing Assembly ,RH	45	NA	0	. Bar
22	226272	8	. Bushing				
23	GUD0031463	1	. Bracket	NA	Not Applicable		
24	F000000525	1	. Holder F/Twine Guide Bushing				


Rev G-

Needles and Yoke Installation, Conventional, 16"


Page 3 of 4

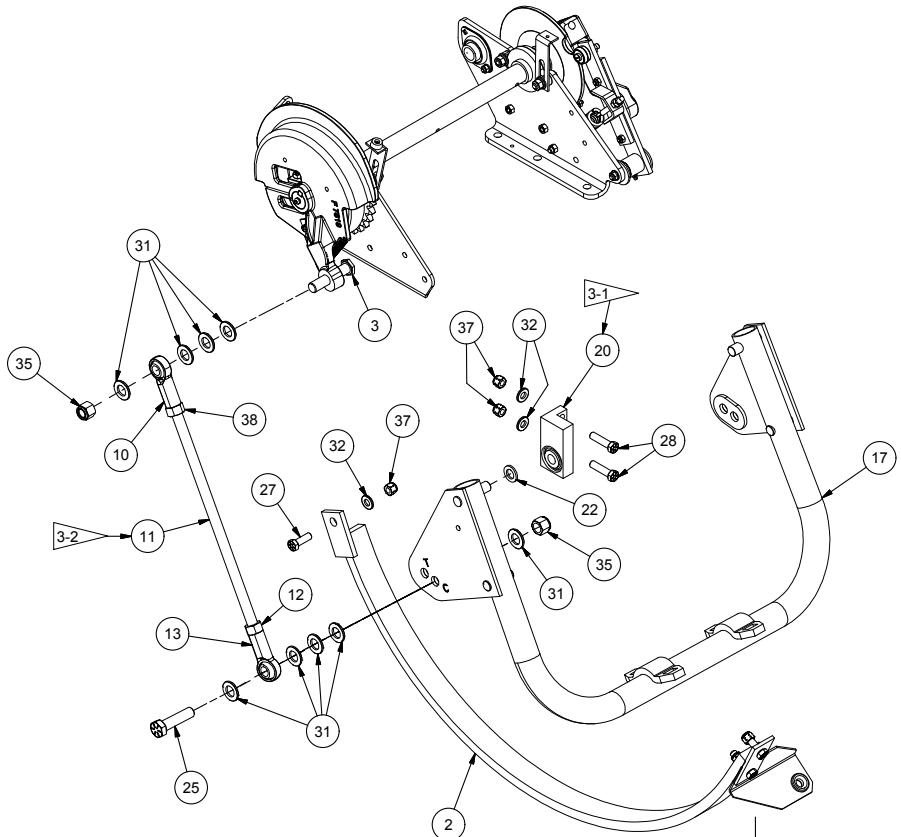

YOKE BRG, GUARD & DRIVE ROD
LEFT HAND

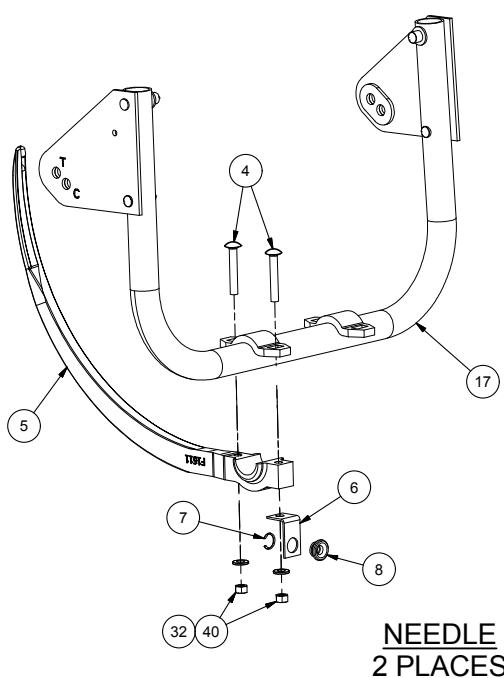

NEEDLE 2 PLACES

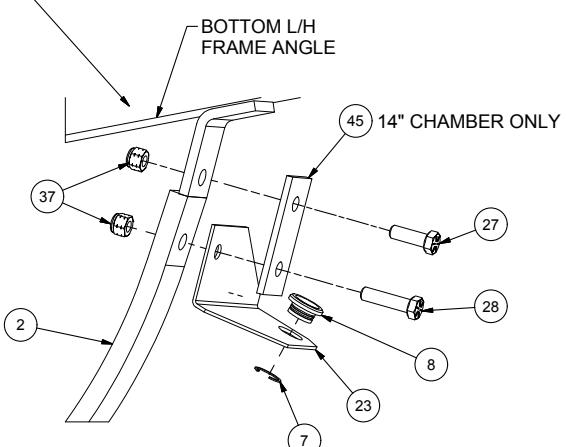

GUARD MOUNT, LH


NOTES:

 USE FIXTURE X-202369 FOR INSTALLATION OF P/N: 904347


 3-2 DRIVE ROD SHOULD NOT HAVE MORE THAN 5° OF MIS-ALIGNMENT BETWEEN SPHERICAL ROD ENDS

Needles and Yoke Installation, Conventional, 16"

Page 4 of 4

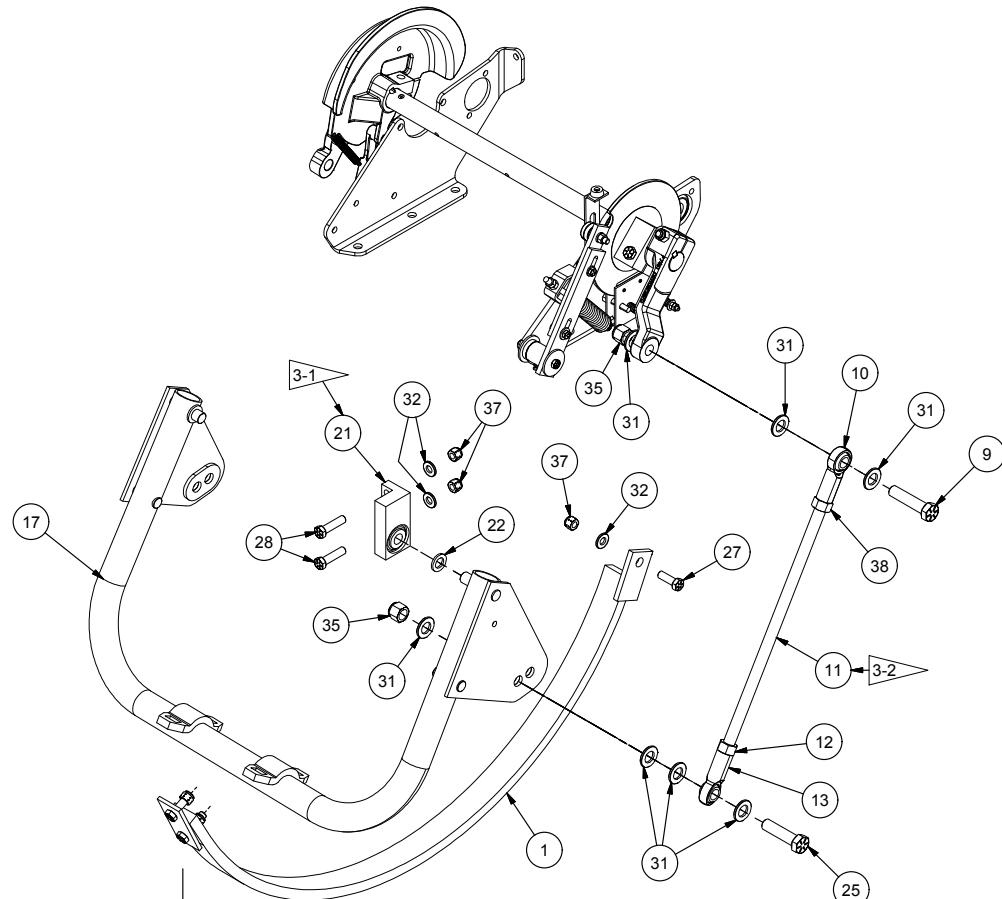

YOKE BRG, GUARD & DRIVE ROD
RIGHT HAND

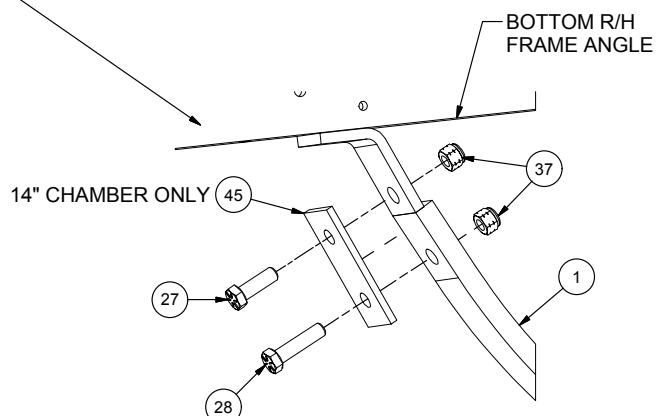

GUARD MOUNT, RH


NOTES:

3-1 USE FIXTURE X-202369 FOR INSTALLATION OF P/N: 904347

3-2 DRIVE ROD SHOULD NOT HAVE MORE THAN
5° OF MIS-ALIGNMENT BETWEEN SPHERICAL ROD ENDS

Needles and Yoke Installation, Tailless, 14"

Page 1 of 3

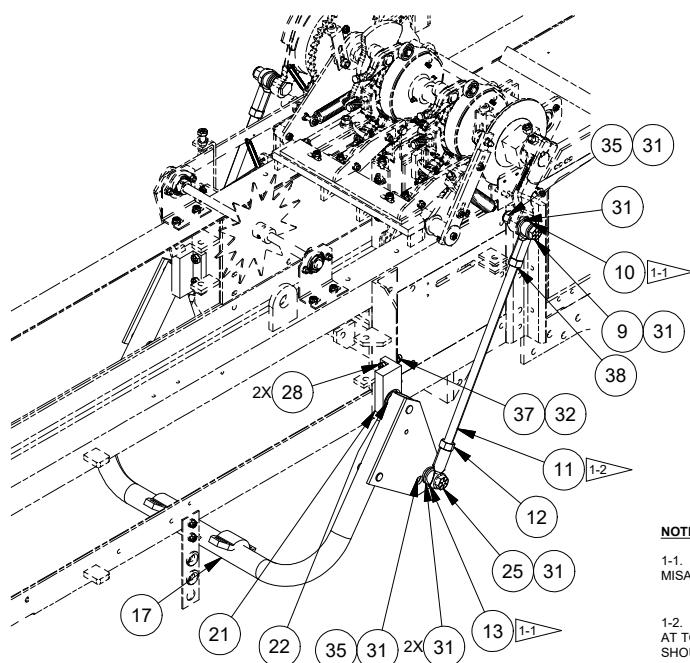


NOTES:

1-1. DRIVE ROD SHOULD NOT HAVE MORE THAN 5° MISALIGNMENT BETWEEN SPHERICAL ROD ENDS.

1-2. ROTATE DRIVE ROD CLOCKWISE TO RAISE NEEDLES. AT TOP DEAD CENTER, CENTER OF ROLLER SHOULD BE 5.75 TO 6.25 FROM SURFACE OF KNOTTER SHAFT.

1-3. NEEDLES HAVE SLIGHT PRELOAD AGAINST KNOTTER FRAME. BOTTOM OF NEEDLE ROLLER SHOULD BE .13 TO .25 ABOVE TWINE HOOK.

NEEDLE DRIVE INSTALLATION

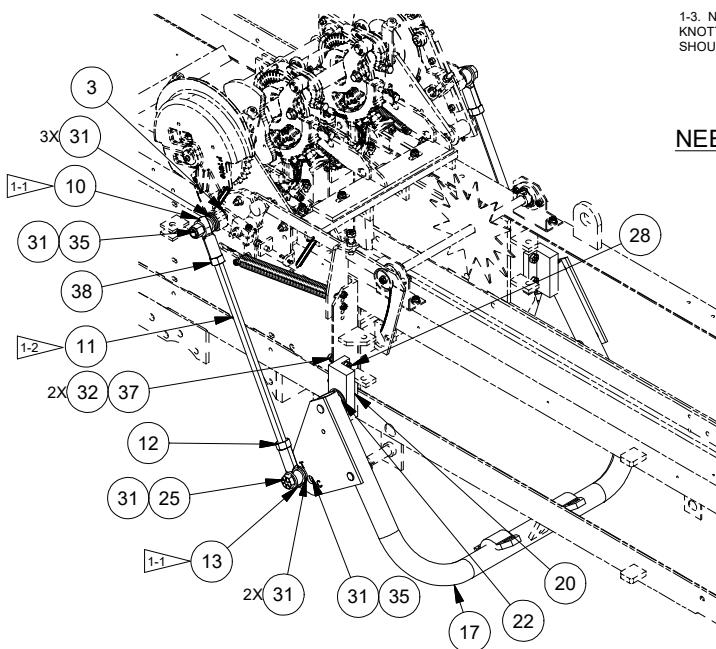

Needles and Yoke Installation, Tailless, 14"


Page 2 of 3

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904013 Needles And Yoke Installation							
1	F000007568	1	. Needle Guard, RH Needle	26	Y17C-1036	2	. Capscrew
2	F000007569	1	. Needle Guard, LH	27	200454W	4	. Capscrew
3	SFC036488A	1	. Capscrew	28	R13811077	6	. Capscrew
4	CRB5003250	4	. Bolt	29	R13801813	2	. Capscrew
5	902580	2	. Needle, Tailless Cast	31	221777W	15	. Washer
	254784	1	.. Pulley Bearing, Sealed	32	221771W	10	. Washer
	Y09G-0414	1	.. Capscrew	33	221767W	4	. Washer
6	F000007973	2	. Plate, Holder	35	223615	4	. Locknut
7	F000000857	2	. Snap Ring	36	Y17D-10	1	. Locknut
8	F000000856	2	. Bushing	37	223587	10	. Locknut
9	R13810974	1	. Capscrew	38	221717W	2	. Hex Nut
10	F000001549	2	. Rod End	39	199594W	2	. Hex Nut
11	ROD0035670	2	. Rod	40	221711W	4	. Hex Nut
12	NFL0007500	2	. Nut	41	00273801	1	. Locknut
13	F000001550	2	. Rod End	42	09411507	4	. Nut
14	ZZ00000211	3	. Bushing	43	00103409	1	. Cotter Pin
15	LEV0015639	1	. Lever	44	ZZ00000208	3	. Mach Bushing
16	ROD0000001	2	. Rod End	45	903413	2	. Bar
17	904347	1	. Needle Yoke	46	902776	0	. Mounting Plate
18	ROD035984B	1	. Rod	47	221499W	2	. Capscrew
19	SPG0020662	1	. Spring, Ext	48	WLG0000006	2	. Spring, Knotter Twine Puller
20	904343	1	. Bearing Assembly ,LH	49	237567	2	. Locknut
21	904344	1	. Bearing Assembly	50	11079	1	. Fitting, Lube
22	226272	2	. Bushing				
25	232854	2	. Capscrew				

Rev C


Needles and Yoke Installation, Tailless, 14"

Page 3 of 3

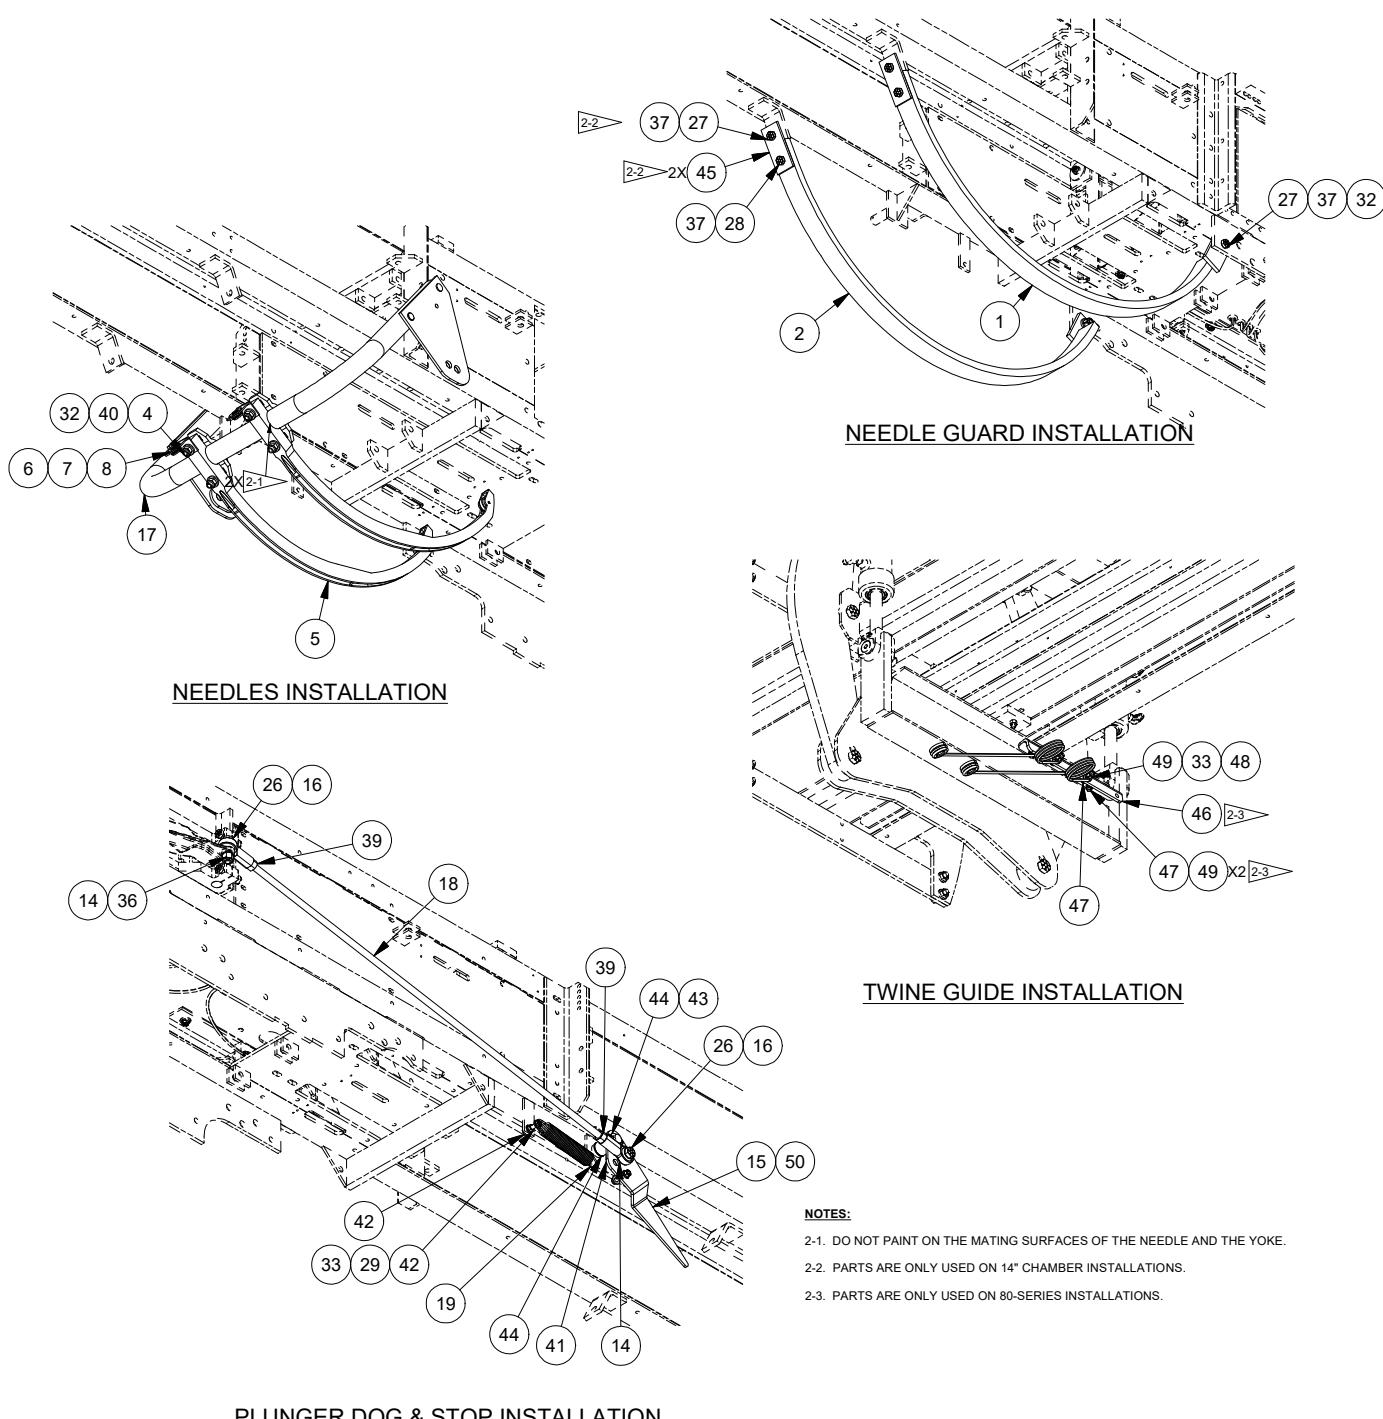

Needles and Yoke Installation, Tailless, 16"

Page 1 of 3

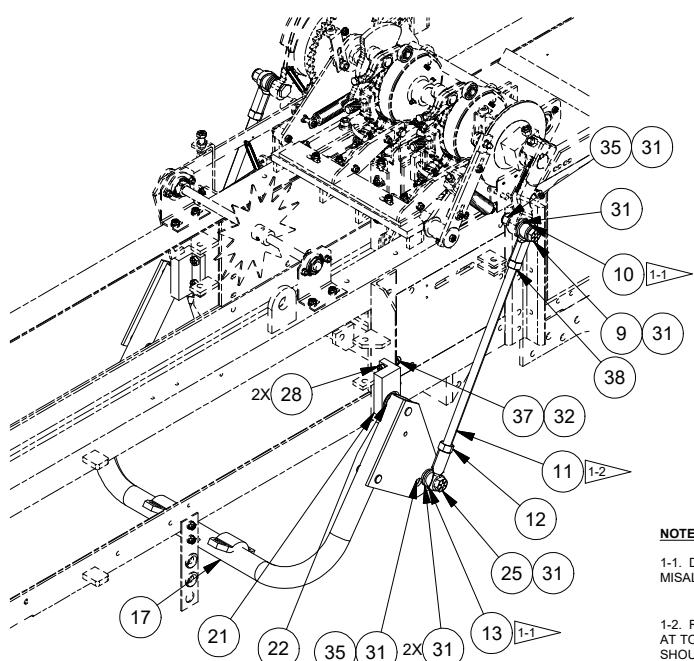


NOTES:

1-1. DRIVE ROD SHOULD NOT HAVE MORE THAN 5° MISALIGNMENT BETWEEN SPHERICAL ROD ENDS.

1-2. ROTATE DRIVE ROD CLOCKWISE TO RAISE NEEDLES.
AT TOP DEAD CENTER, CENTER OF ROLLER
SHOULD BE 5.75 TO 6.25 FROM SURFACE OF KNOTTER SHAFT.

1-3. NEEDLES HAVE SLIGHT PRELOAD AGAINST
KNOTTER FRAME. BOTTOM OF NEEDLE ROLLER
SHOULD BE .13 TO .25 ABOVE TWINE HOOK.

NEEDLE DRIVE INSTALLATION

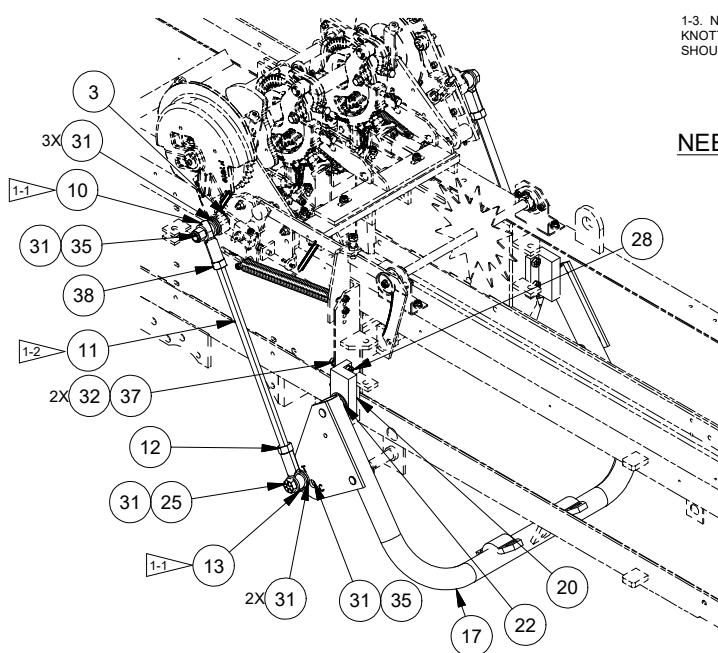

Needles and Yoke Installation, Tailless, 16"


Page 2 of 3

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902915		Needles And Yoke Installation				
1	F000007568	1	. Needle Guard, RH Needle	26	Y17C-1036	2	. Capscrew
2	F000007569	1	. Needle Guard, LH	27	200454W	2	. Capscrew
3	SFC036488A	1	. Capscrew	28	R13811077	6	. Capscrew
4	CRB5003250	4	. Bolt	29	R13801813	2	. Capscrew
5	902580	2	. Needle, Tailless Cast	31	221777W	15	. Washer
	254784	1	. . Pulley Bearing, Sealed	32	221771W	10	. Washer
	Y09G-0414	1	. . Capscrew	33	221767W	4	. Washer
6	F000007973	2	. Plate, Holder	35	223615	4	. Locknut
7	F000000857	2	. Snap Ring	36	Y17D-10	1	. Locknut
8	F000000856	2	. Bushing	37	223587	8	. Locknut
9	R13810974	1	. Capscrew	38	221717W	2	. Hex Nut
10	F000001549	2	. Rod End	39	199594W	2	. Hex Nut
11	ROD0035670	2	. Rod	40	221711W	4	. Hex Nut
12	NFL0007500	2	. Nut	41	00273801	1	. Locknut
13	F000001550	2	. Rod End	42	09411507	4	. Nut
14	ZZ00000211	3	. Bushing	43	00103409	1	. Cotter Pin
15	LEV0015639	1	. Lever	44	ZZ00000208	3	. Mach Bushing
16	ROD0000001	2	. Rod End	45	903413	0	. Bar
17	904347	1	. Needle Yoke	46	902776	0	. Mounting Plate
18	ROD035984B	1	. Rod	47	221499W	2	. Capscrew
19	SPG0020662	1	. Spring, Ext	48	WLG0000006	2	. Spring, Knotter Twine Puller
20	904343	1	. Bearing Assembly ,LH	49	237567	2	. Locknut
21	904344	1	. Bearing Assembly	50	11079	1	. Fitting, Lube
22	226272	2	. Bushing				
25	232854	2	. Capscrew				

Rev G

Needles and Yoke Installation, Tailless, 16"

Page 3 of 3

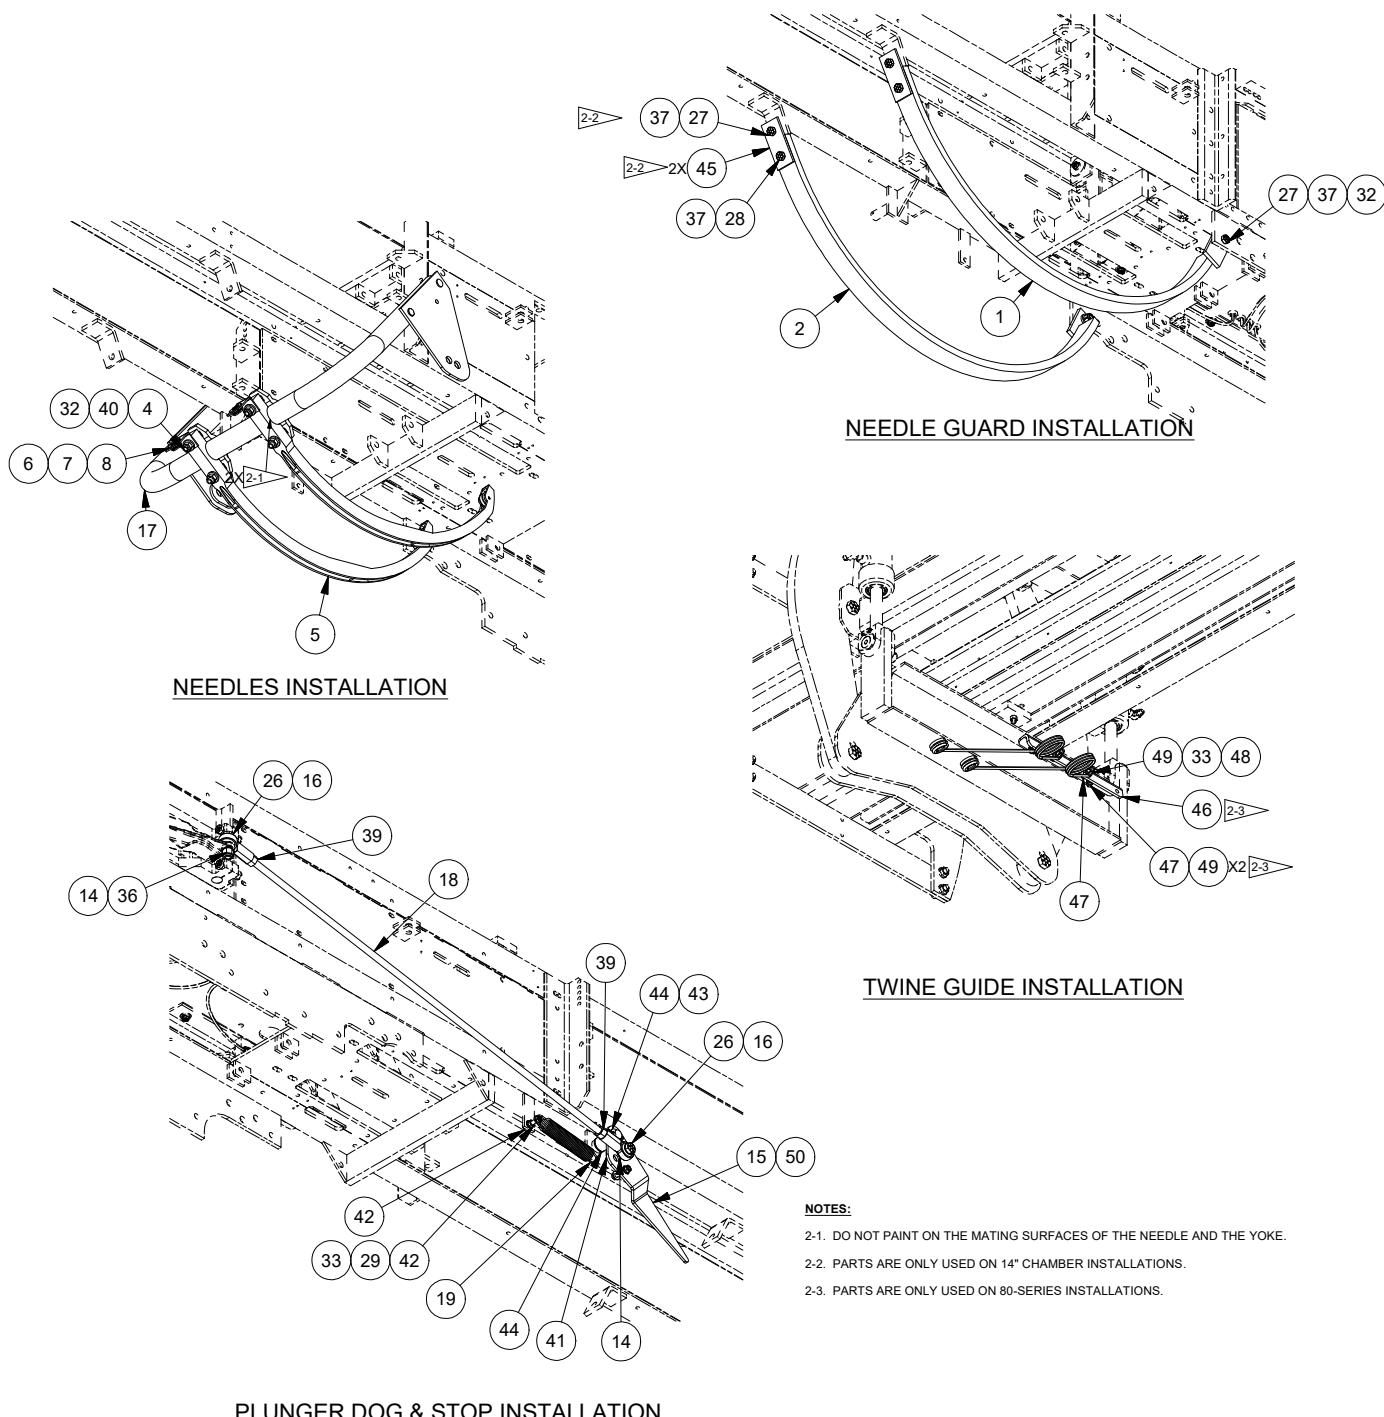

Section 10

Hydraulic System

Tensioning Hoses Installation.....See Section 2, Tension/Rear Mounts Installation.

This page is intentionally left blank.


Section 11

Electrical System

Electrical Installation, Engine.....	11-3
. Electrical Schematic, Engine	11-4
. Highway Lights & Sensor Harness Wiring Diagram.....	11-5
Light Installation Sidefeeds.....	11-7
. Light Assembly, LH.....	11-8
. Light Assembly, RH.....	11-9
. Work Light Sub-Assembly, RH	11-10
. Work Light Sub-Assembly, Front.....	11-11

This page is intentionally left blank.

Electrical Installation, Engine

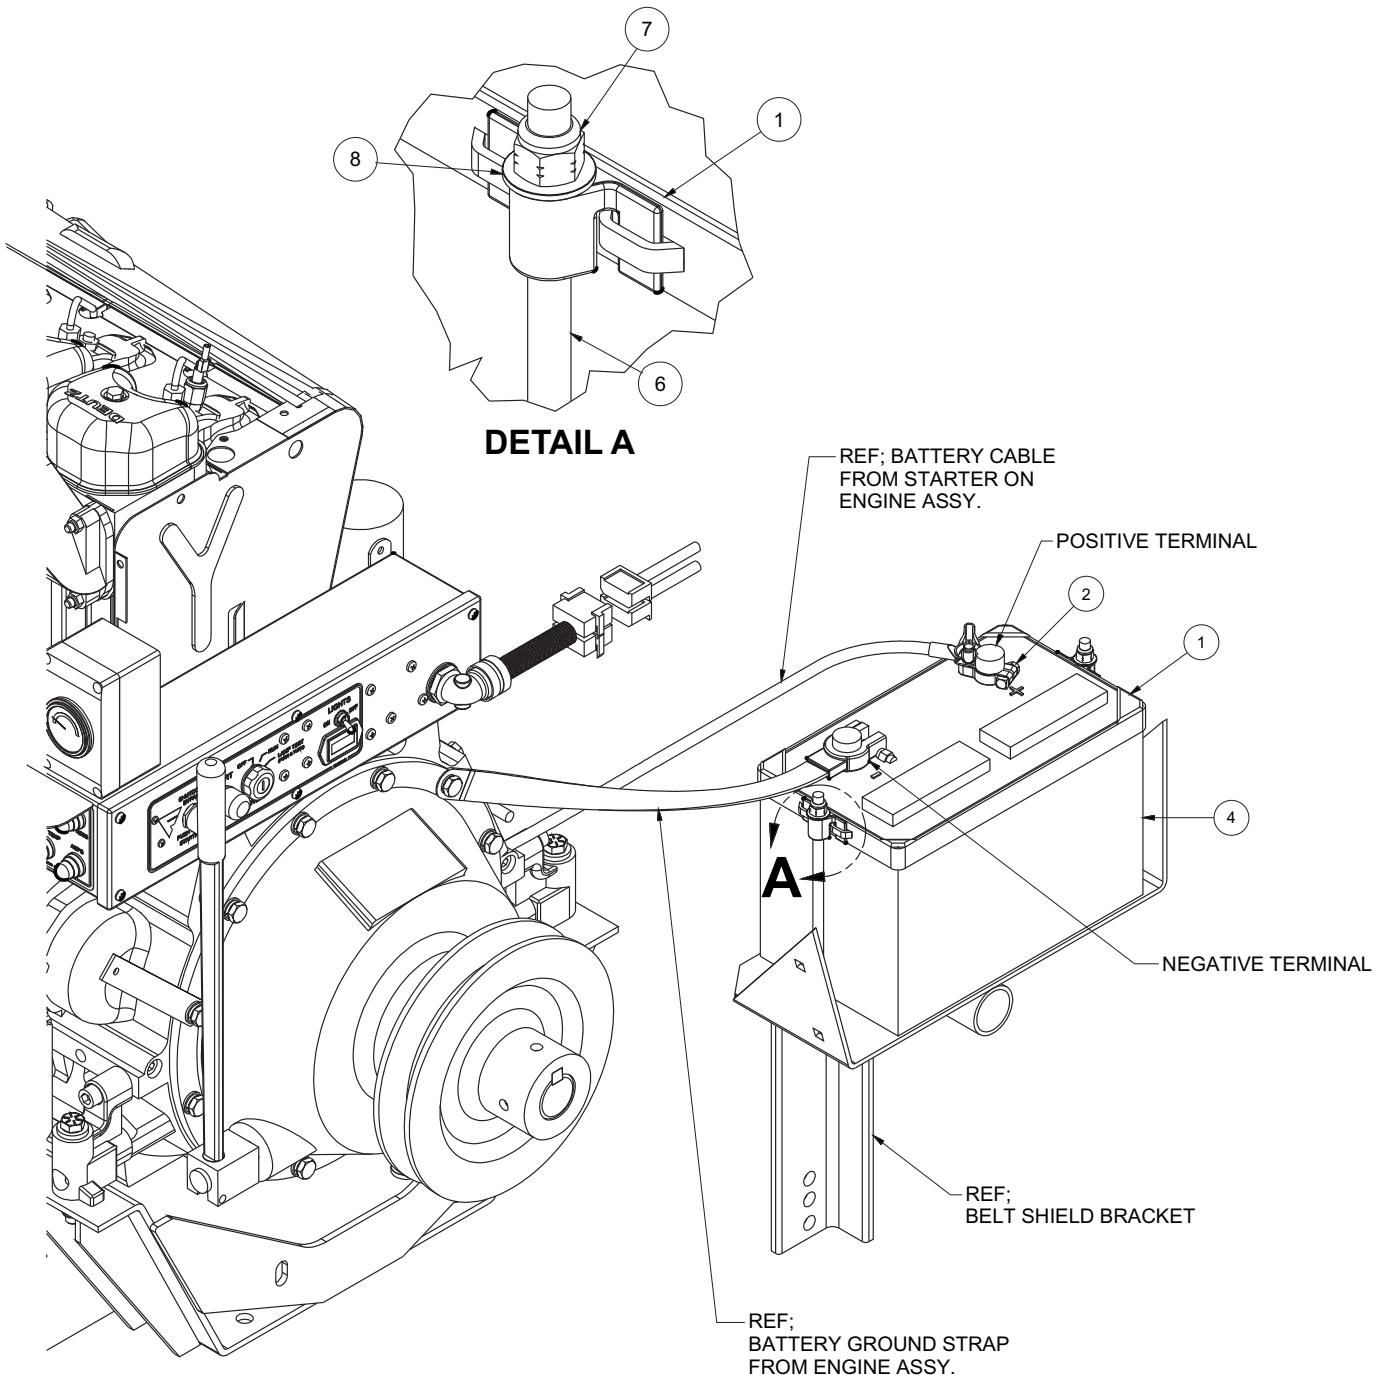


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902856		Electrical Installation	6	CRB3750009	2	. Bolt, Carriage
*a	904511		Electrical Schematic	7	237567	2	. Nut, ESNA
1	CIP6651501	1	. Battery Hold Down	8	223427	2	. Washer
2	BAT0000038	1	. Terminal, Positive				
4	BAT0277000	1	. Battery-12V 700 Hd-Group 27				


*a Not Shown- See Separate Coverage (Page 11-4)

Rev A

Electrical Schematic, Engine

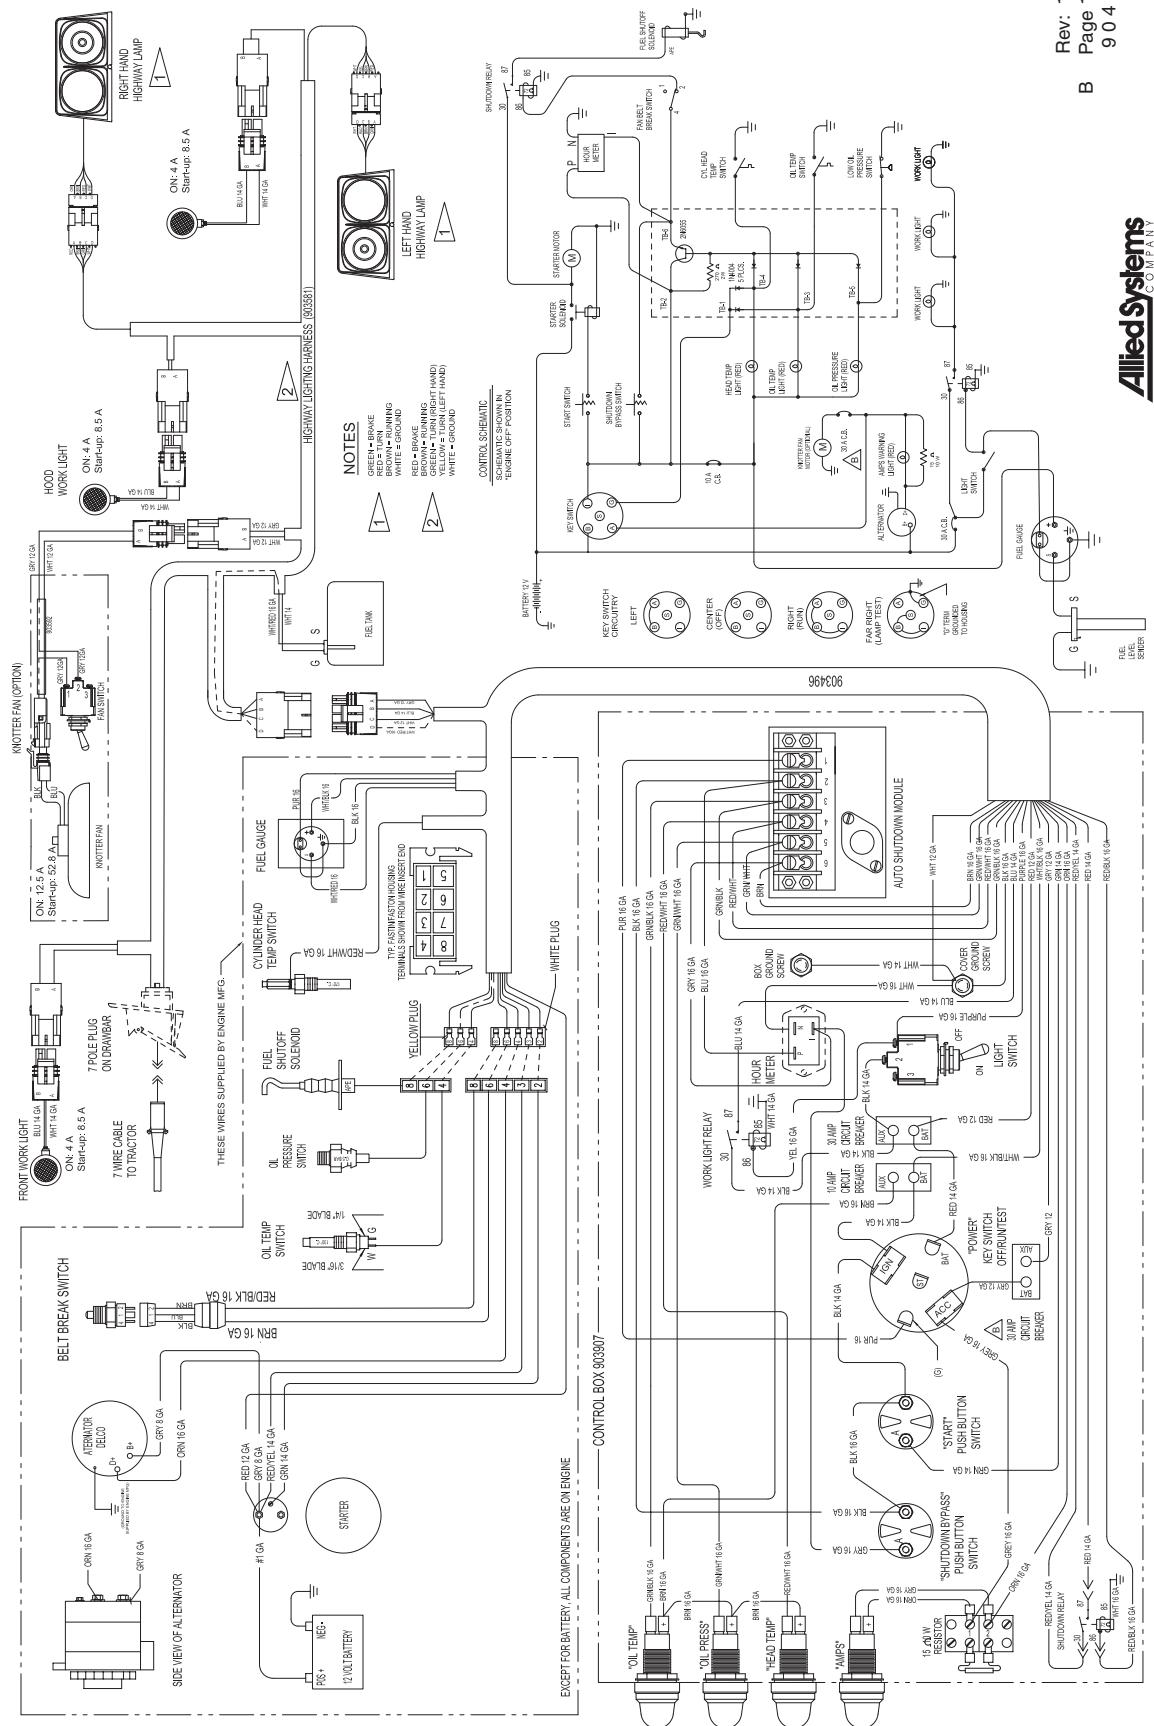



Highway Lights & Sensor Harness Wiring Diagram

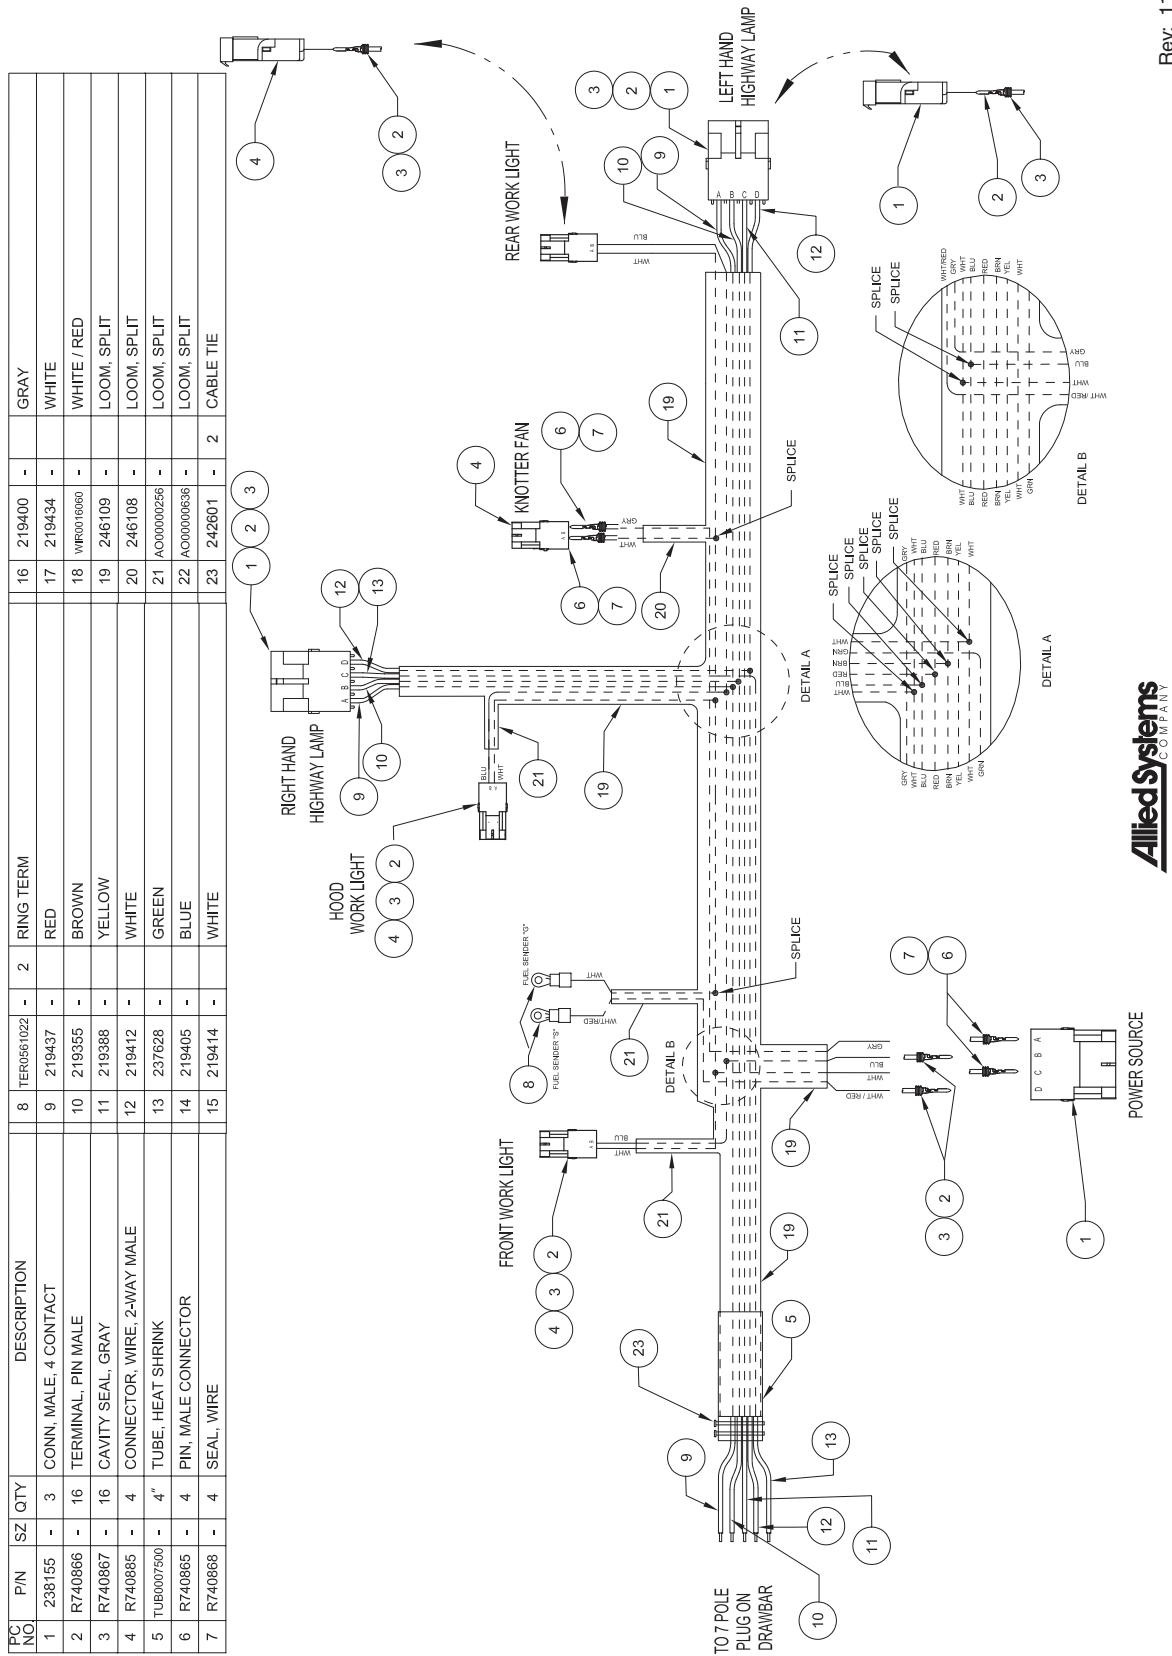
Allied Systems
COMPANY

 Rev. 11/14
E
Page 1 of 1
903581

Lights Installation, Sidefeed Balers


Page 1 of 2

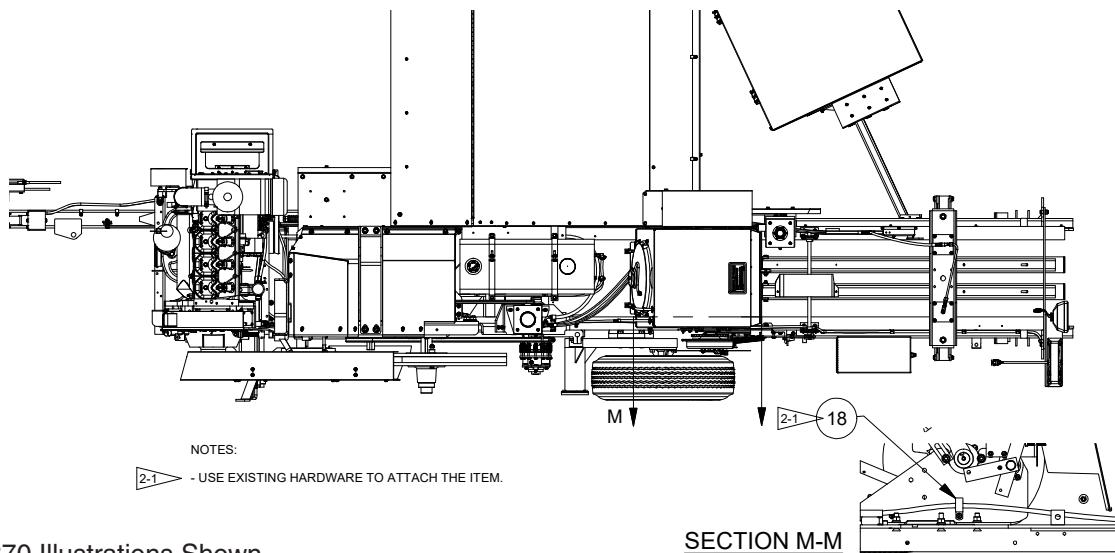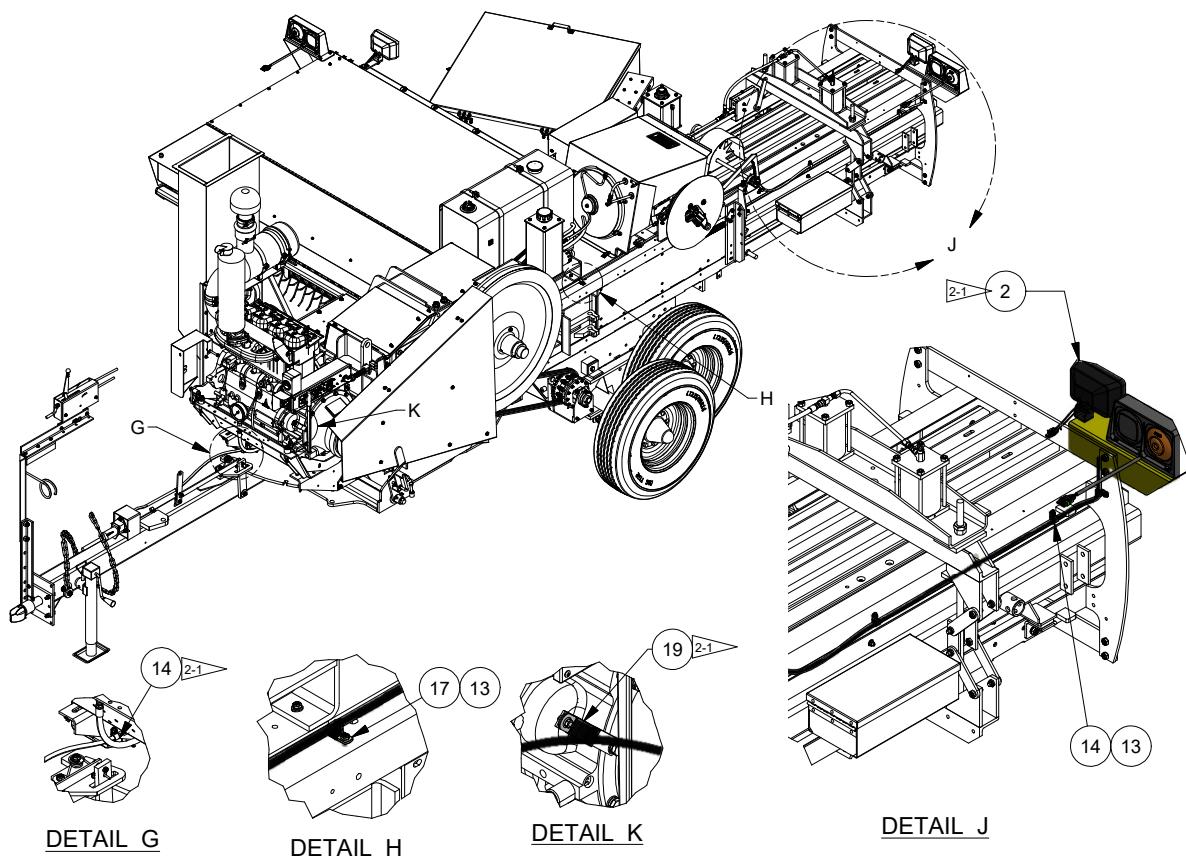

370 Illustrations Shown

Lights Installation, Sidefeed Balers

Page 2 of 2

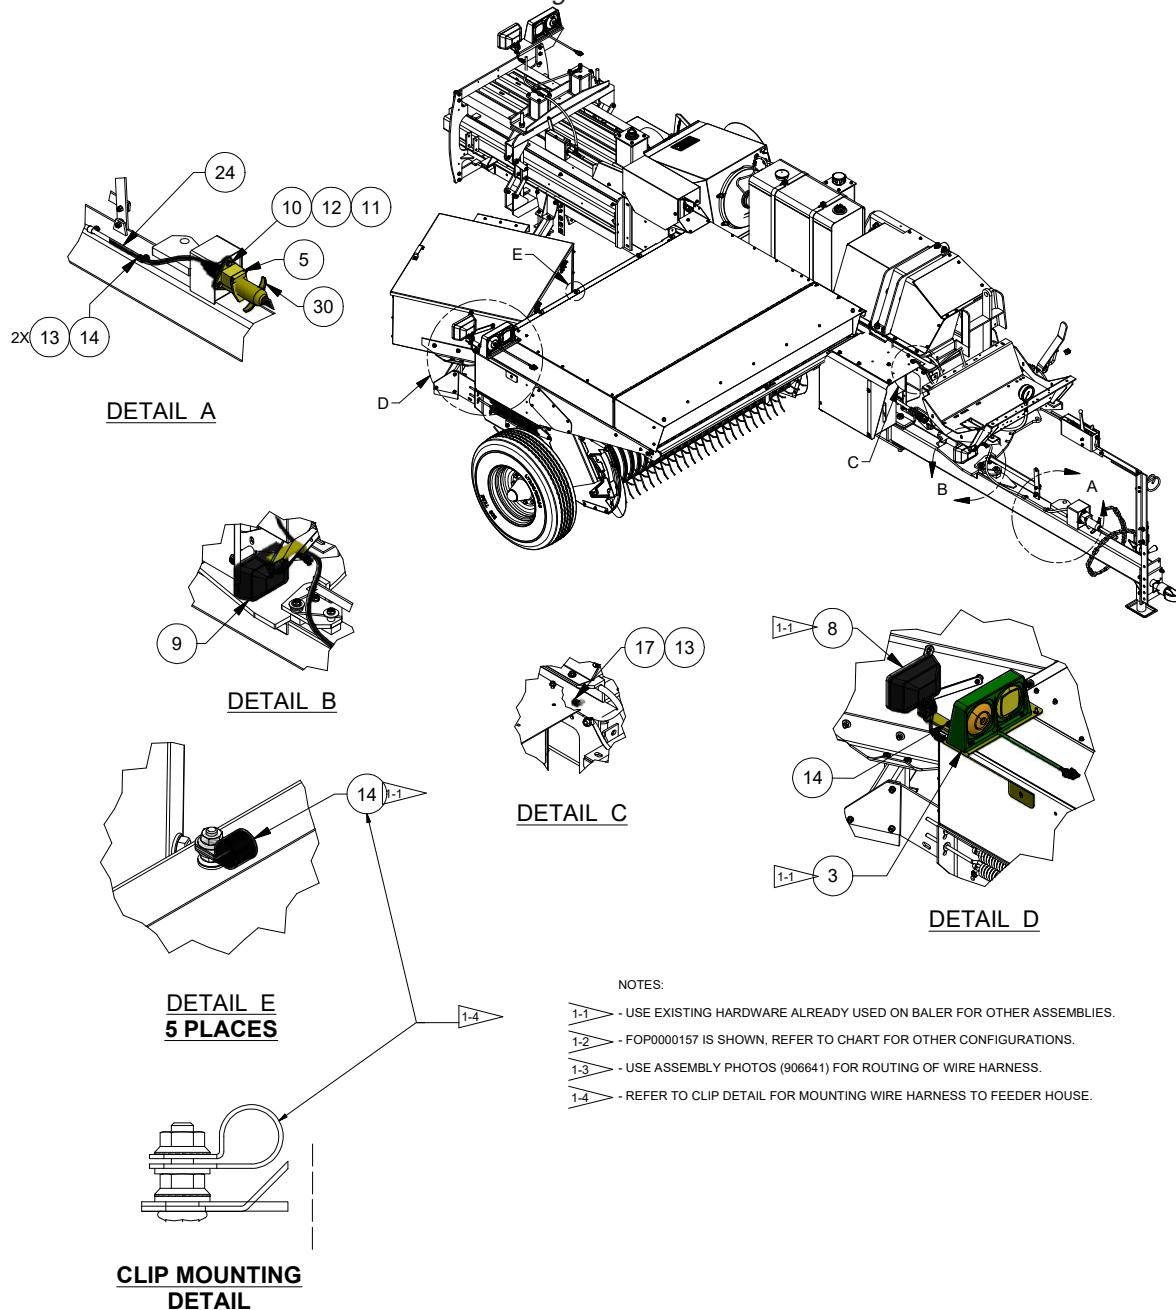


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description	
	FOP0000157		Lights Installation	20	*d	902796	1	. Work Light Sub-Assy, Front
1 *a	902450	1	. Light Assembly, LH	21	223428	3	. Washer	
2 *b	902449	1	. Light Assembly, RH	22	R13802619	2	. Washer	
7	CBL1121702	1	. Cable, Connector	23	228412	2	. Lockwasher	
8	SOK0012310	1	. Socket	24	228413	2	. Hex Nut	
9	SOK0000007	1	. Boot	25	209588	14	. Clip, Insulated	
10	903581	1	. Wire Harness	26	227398	1	. Clamp	
11	R13810989	9	. Capscrew	27	R13810020	1	. Clamp	
13	SMS0000184	3	. Screw					
14	232939	3	. Nut					
16	CLP0000123	2	. Clamp					
19 *c	902795	1	. Work Light Sub-Assy, RH					

*a See Separate Coverage Page 11-8
 *b See Separate Coverage Page 11-9
 *c See Separate Coverage Page 11-10
 *d See Separate Coverage Page 11-11

Rev A


Light Assembly, LH

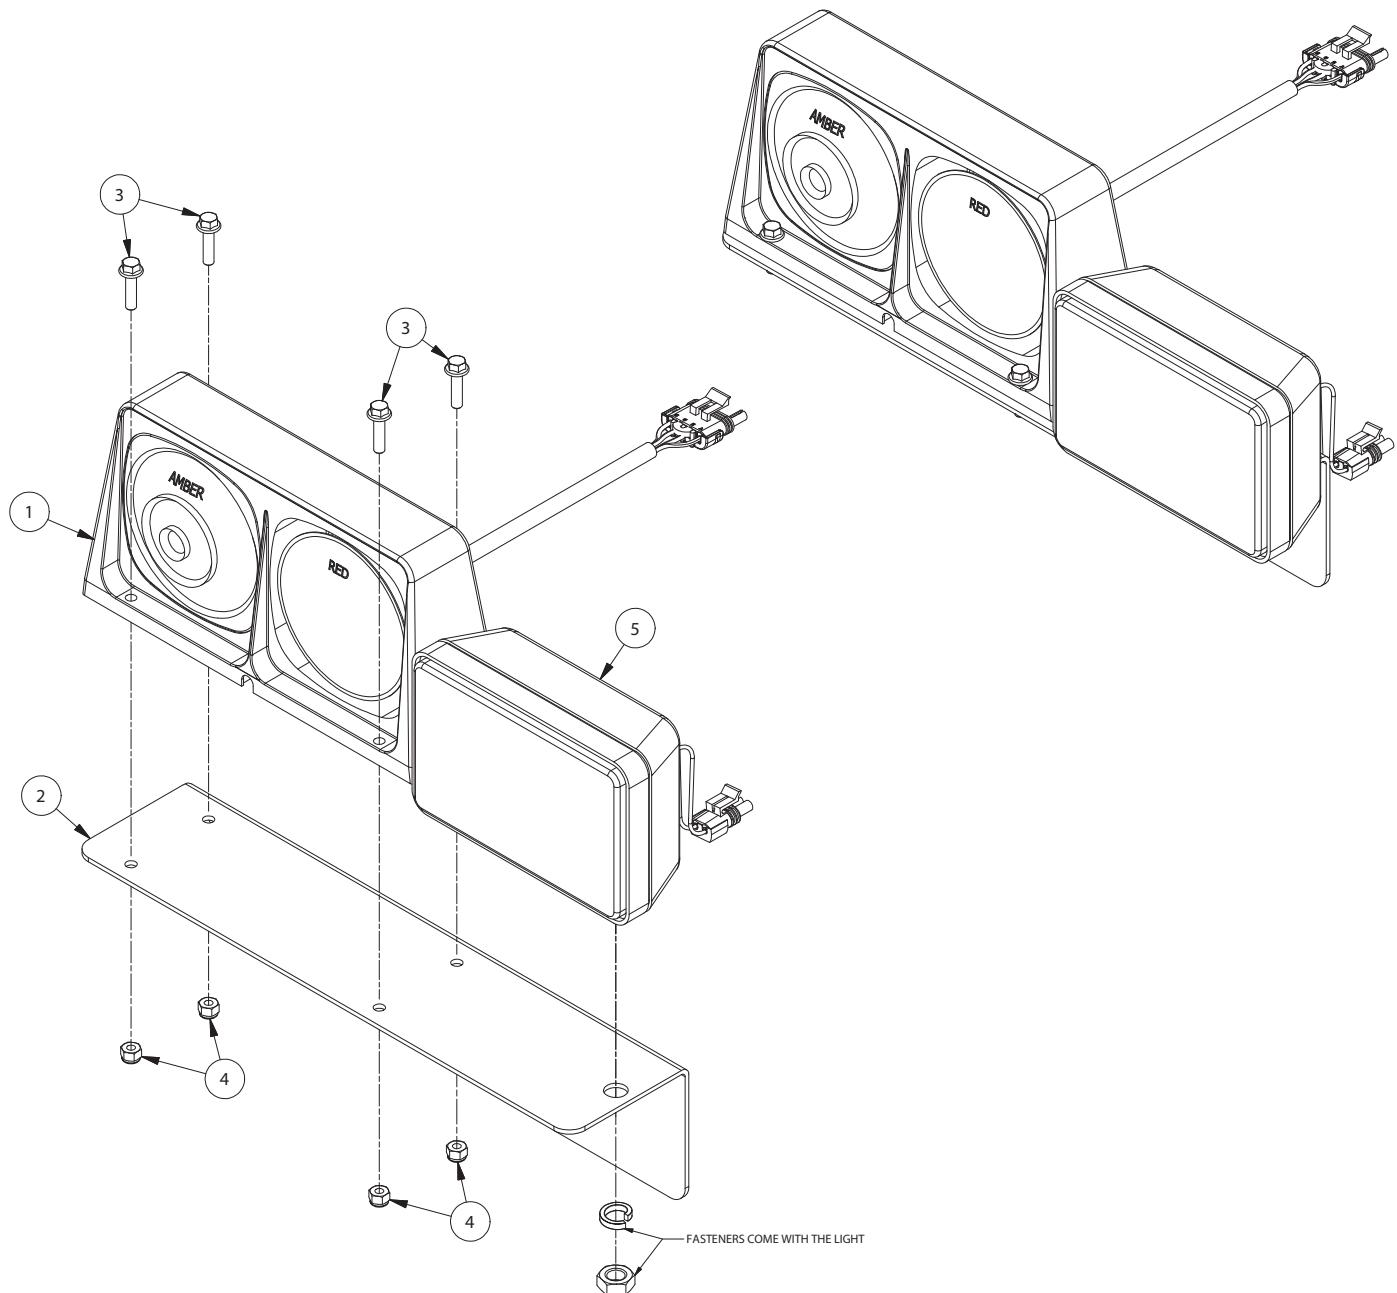

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902450			Light Assembly, LH				
1	LIT037163B	1	. Light Assembly, LH	4	235620	4	. Nut, Esna
2	BKT037152B	1	. Bracket, LH	5	901521	1	. Light Assembly, Work
3	SMS0000305	4	. Bolt				

Rev D


Light Assembly, RH

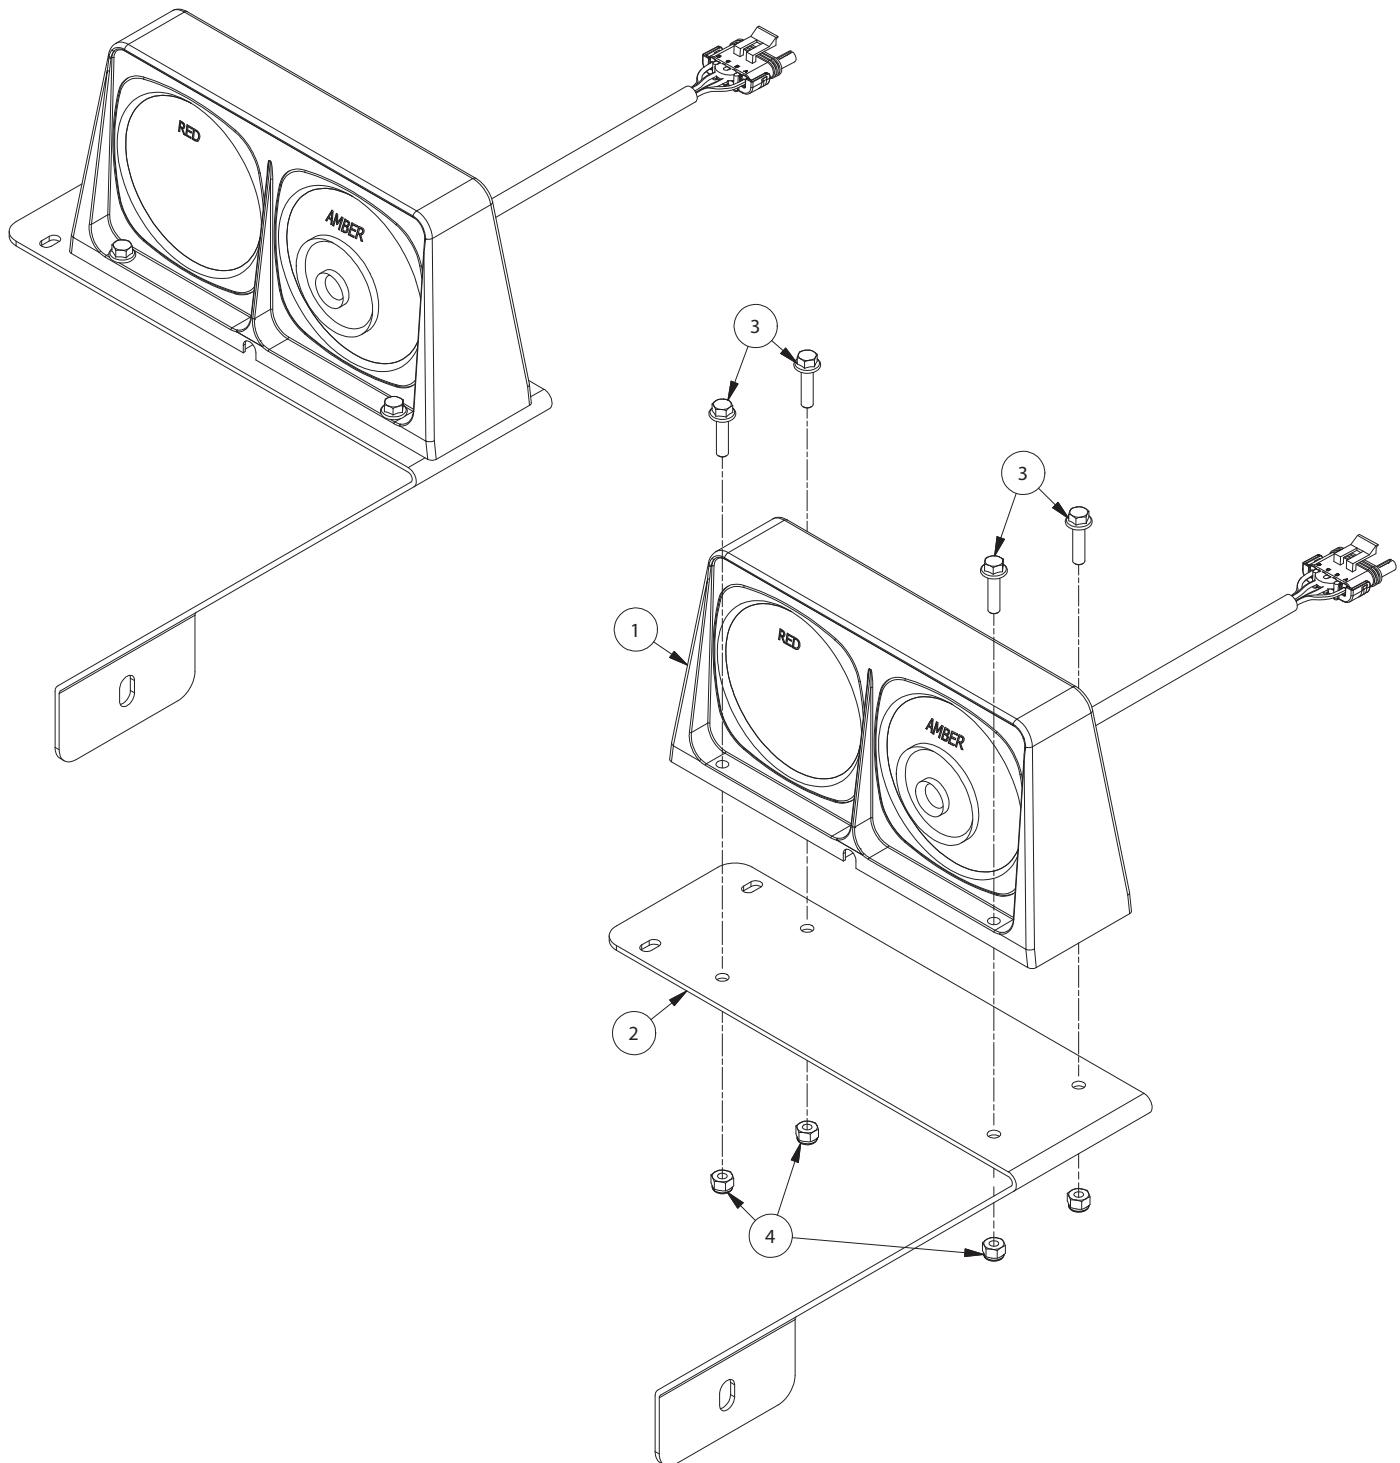

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	902449 LIT037164B	1	Light Assembly, RH . Light Assembly, RH	3	SMS0000305	4	. Bolt
2	BKT037149B	1	. Bracket, RH Rear	4	235620	4	. Nut, Esna


Rev B

Work Light Sub-Assembly, RH

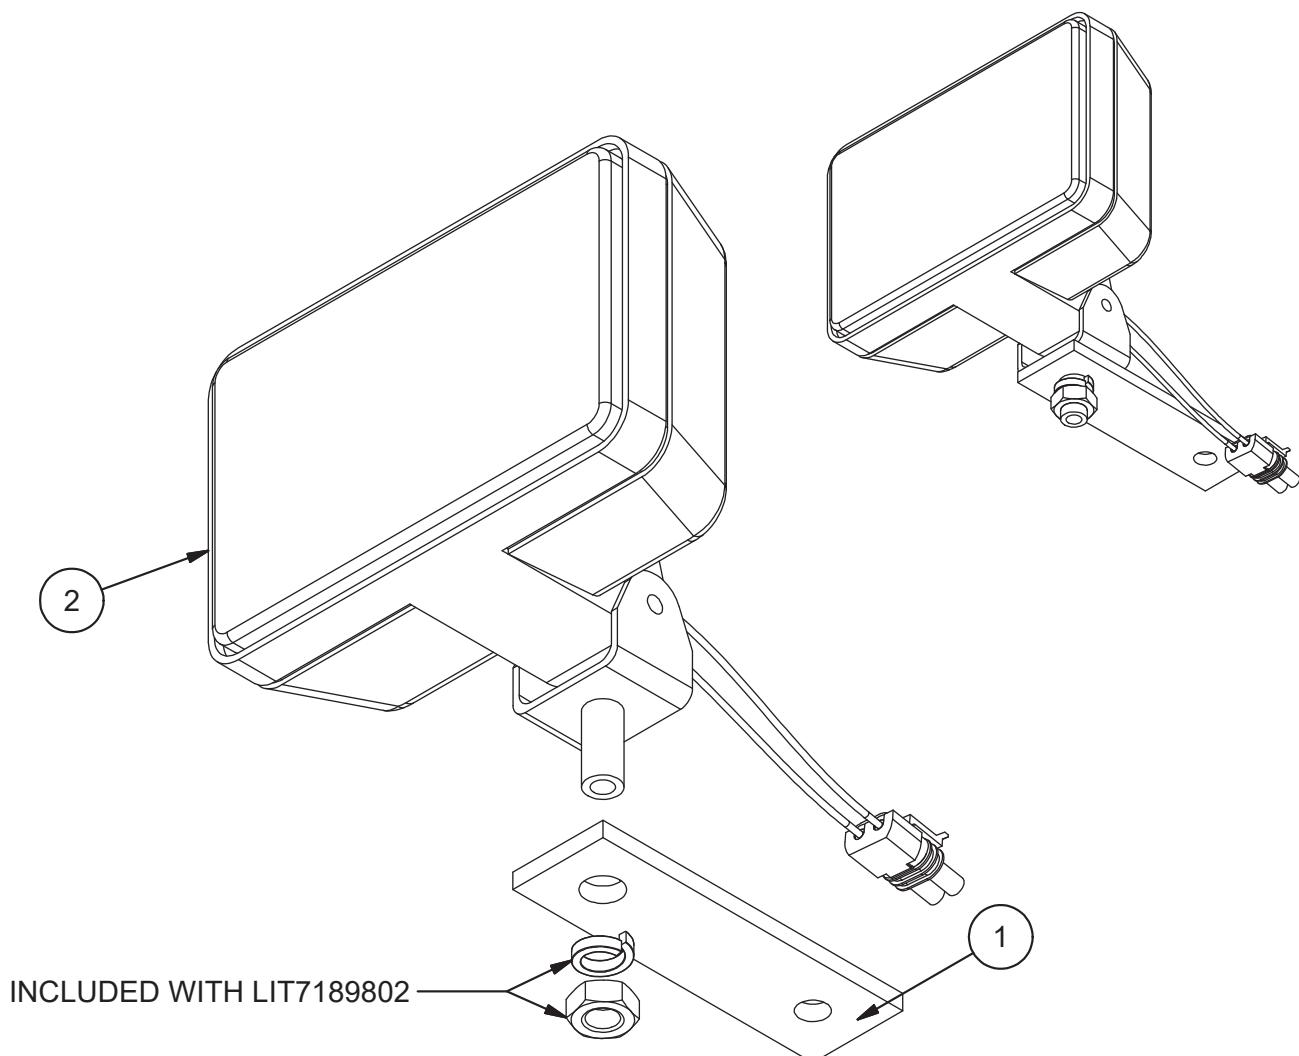

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902795			Work Light Sub Assembly, RH				
1	F000008062	1	. Bracket				
2	901521	1	. Light Assembly, Work				Rev B

Work Light Sub-Assembly, Front

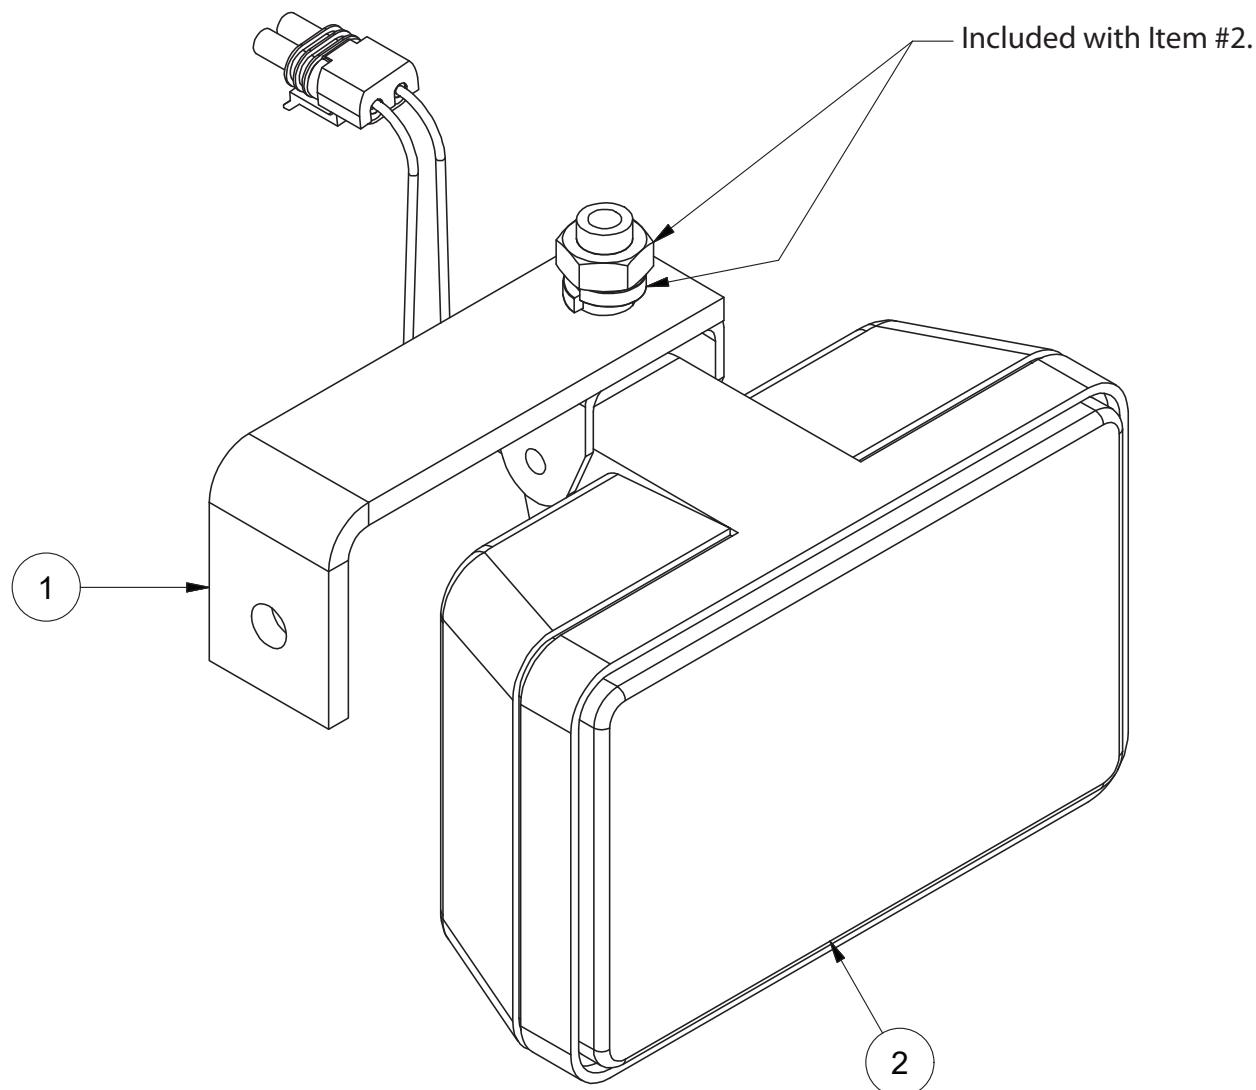

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	902796	1	Work Light Sub Assembly, Front				
2	F000006577	1	. Bracket				
	901521	1	. Light Assembly, Work				Rev C

This page is intentionally left blank.


Section 12

Misc Parts and Optional Equipment

Bale Chute Installation.....	12-3
Bale Chute Attachment.....	12-4
Bale Counter Installation.....	12-5
. Bale Counter Assembly.....	12-6
Bale Weight Indicator Installation.....	12-7
. Bale Weight Indicator Assembly.....	12-9
Hay Saver Wheel Installation.....	12-10
. Hay Saver Wheel Assembly.....	12-11
Tool Box Installation.....	12-12
Slow Moving Vehicle Sign Installation.....	12-13
Decal List, 270.....	12-14
Decal List, 275.....	12-16
Hitch Ball	12-18
Misc. Parts	12-19


This page is intentionally left blank.

Bale Chute Installation

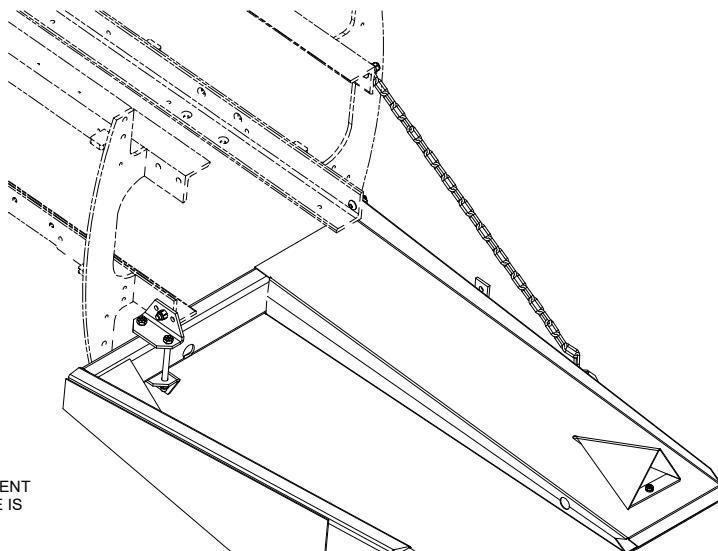
NOTE:

1. BALE CHUTE CAN BE INSTALLED ON BALER AS SHOWN OR REVERSED. BALE TURNER WELDMENT (ITEM 4) IS MOUNTED ON OTHER SIDE IF CHUTE IS REVERSED.


2. BALE CHUTE FOR 3-TIE BALER SHOWN (902838)

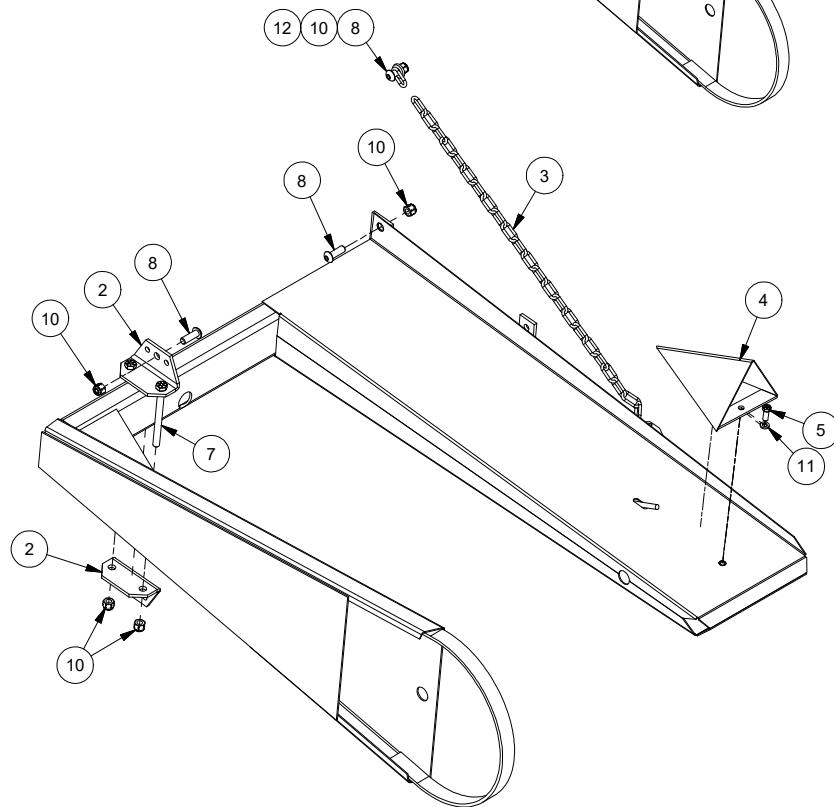

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902839							
1	CHU0178761	1	. Chute Assy, Bale (2-Tie)	7	R13801857	2	. Capscrew
2	F000007657	2	. Bracket	8	Y25G-0824	3	. Capscrew
3	F000007659	1	. Chain, Bale Chute	10	223587	5	. Nut, Esna
4	F000007655	1	. Bale Turner Weldment	11	R13812514	1	. Lockwasher
5	Y17C-0616	1	. Capscrew	12	221771W	1	. Hard Washer


Rev D

Bale Chute Attachment

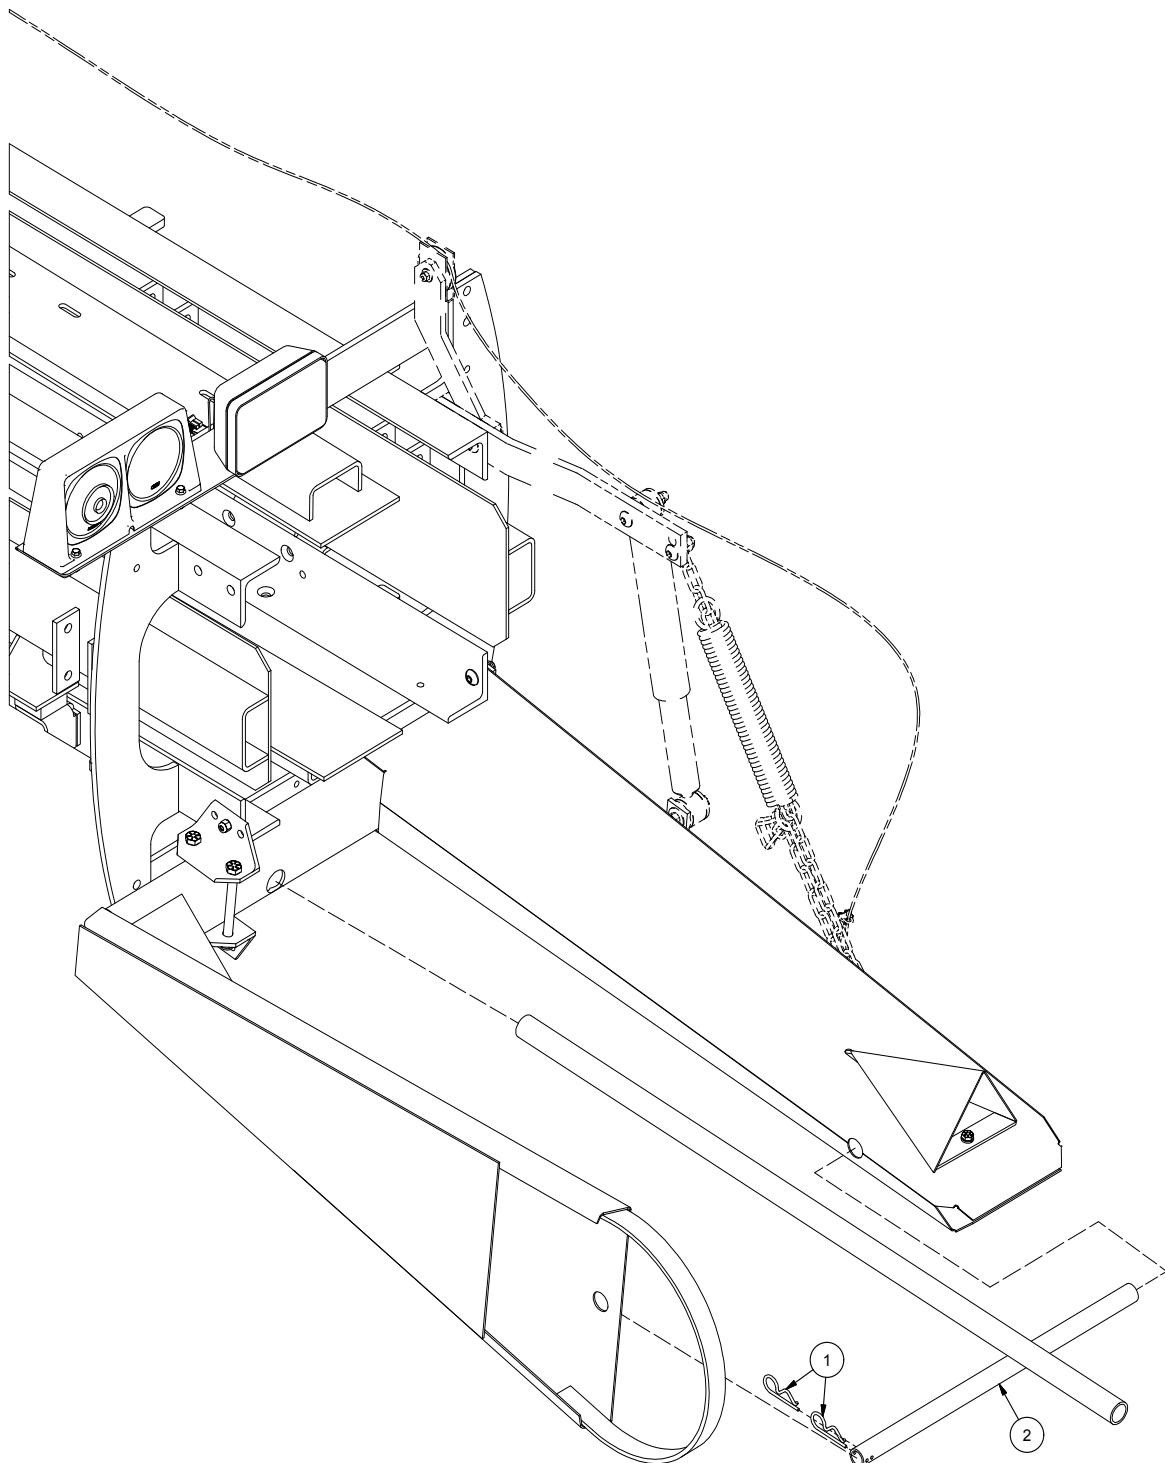

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FOP0000129		Bale Chute Attachment, Flat				
1	F000001019	2	. Pin, Hairpin Cotter				
2	CHU1319501	1	. 2 Tie Flat Chute				

Bale Counter Installation

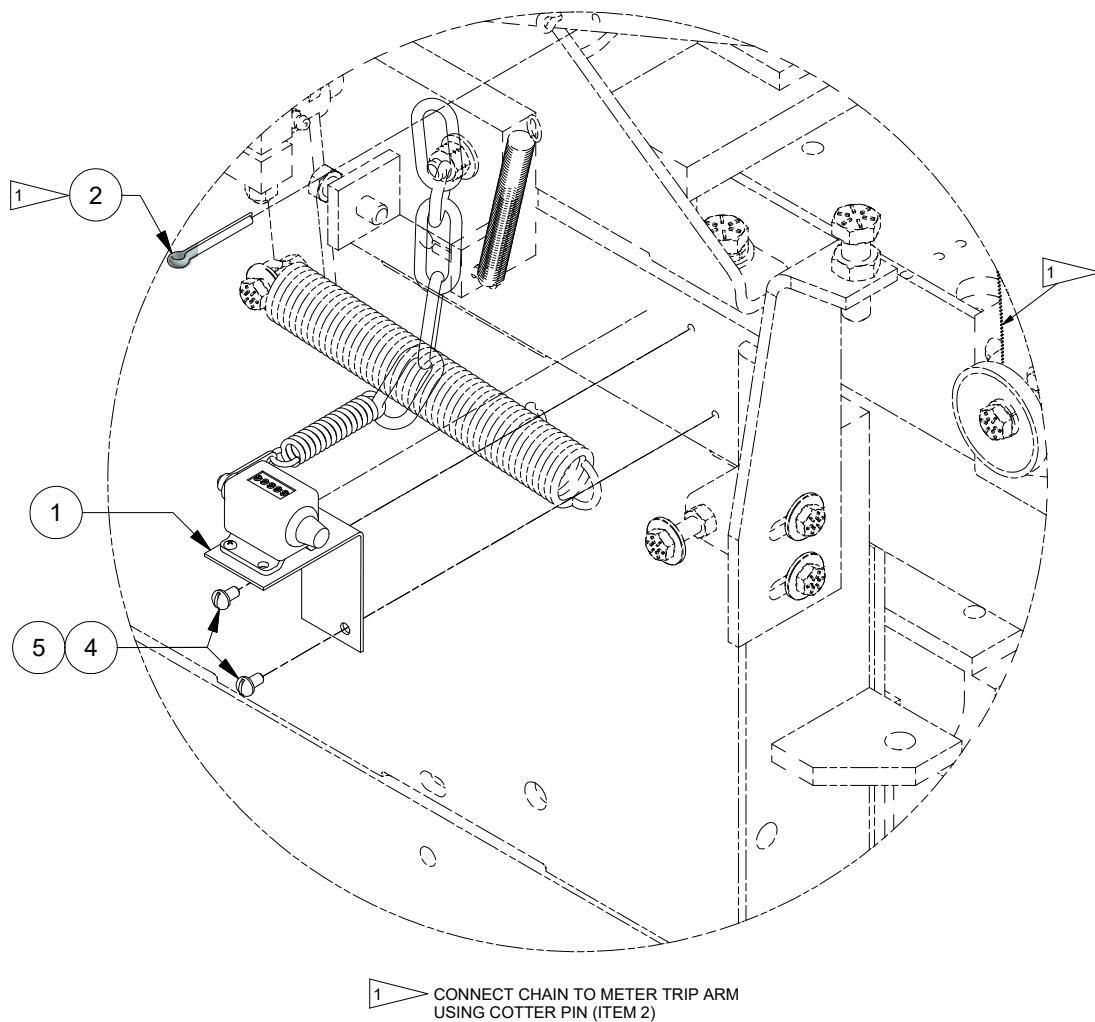


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
904041			Bale Counter Installation				
1 *a	902793	1	. Bale Counter Subassembly	4	233963	2	. Capscrew
2	00103409	1	. Cotter Pin	5	18423W	2	. Lock Washer

*a See Separate Coverage (Page 12-6)

Rev D

Bale Counter Assembly

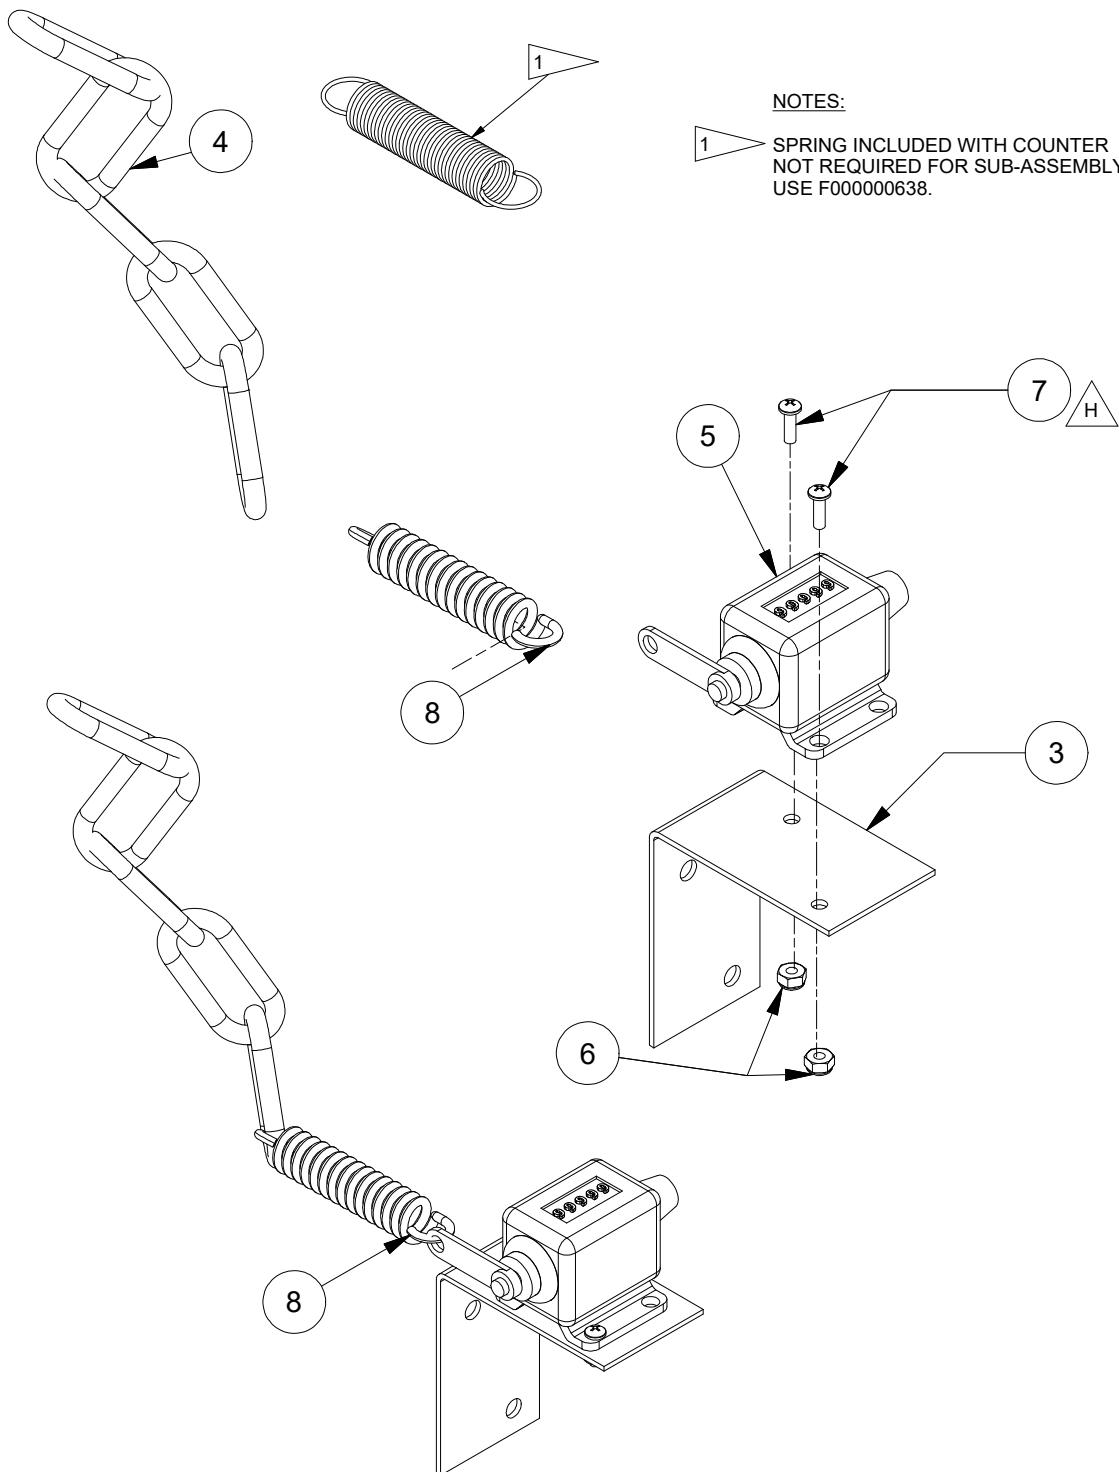


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902793			Bale Counter Subassembly				
3	F000007391	1	. Bracket	6	247673	2	. Nut
4	F000000637	1	. Bale Counter Chain	7	SMR4403750	2	. Machine Screw
5	256353	1	. Counter W/Spring, Resettable	8	F000000638	1	. Extension Spring

Rev F


Bale Weight Indicator Installation

Page 1 of 2

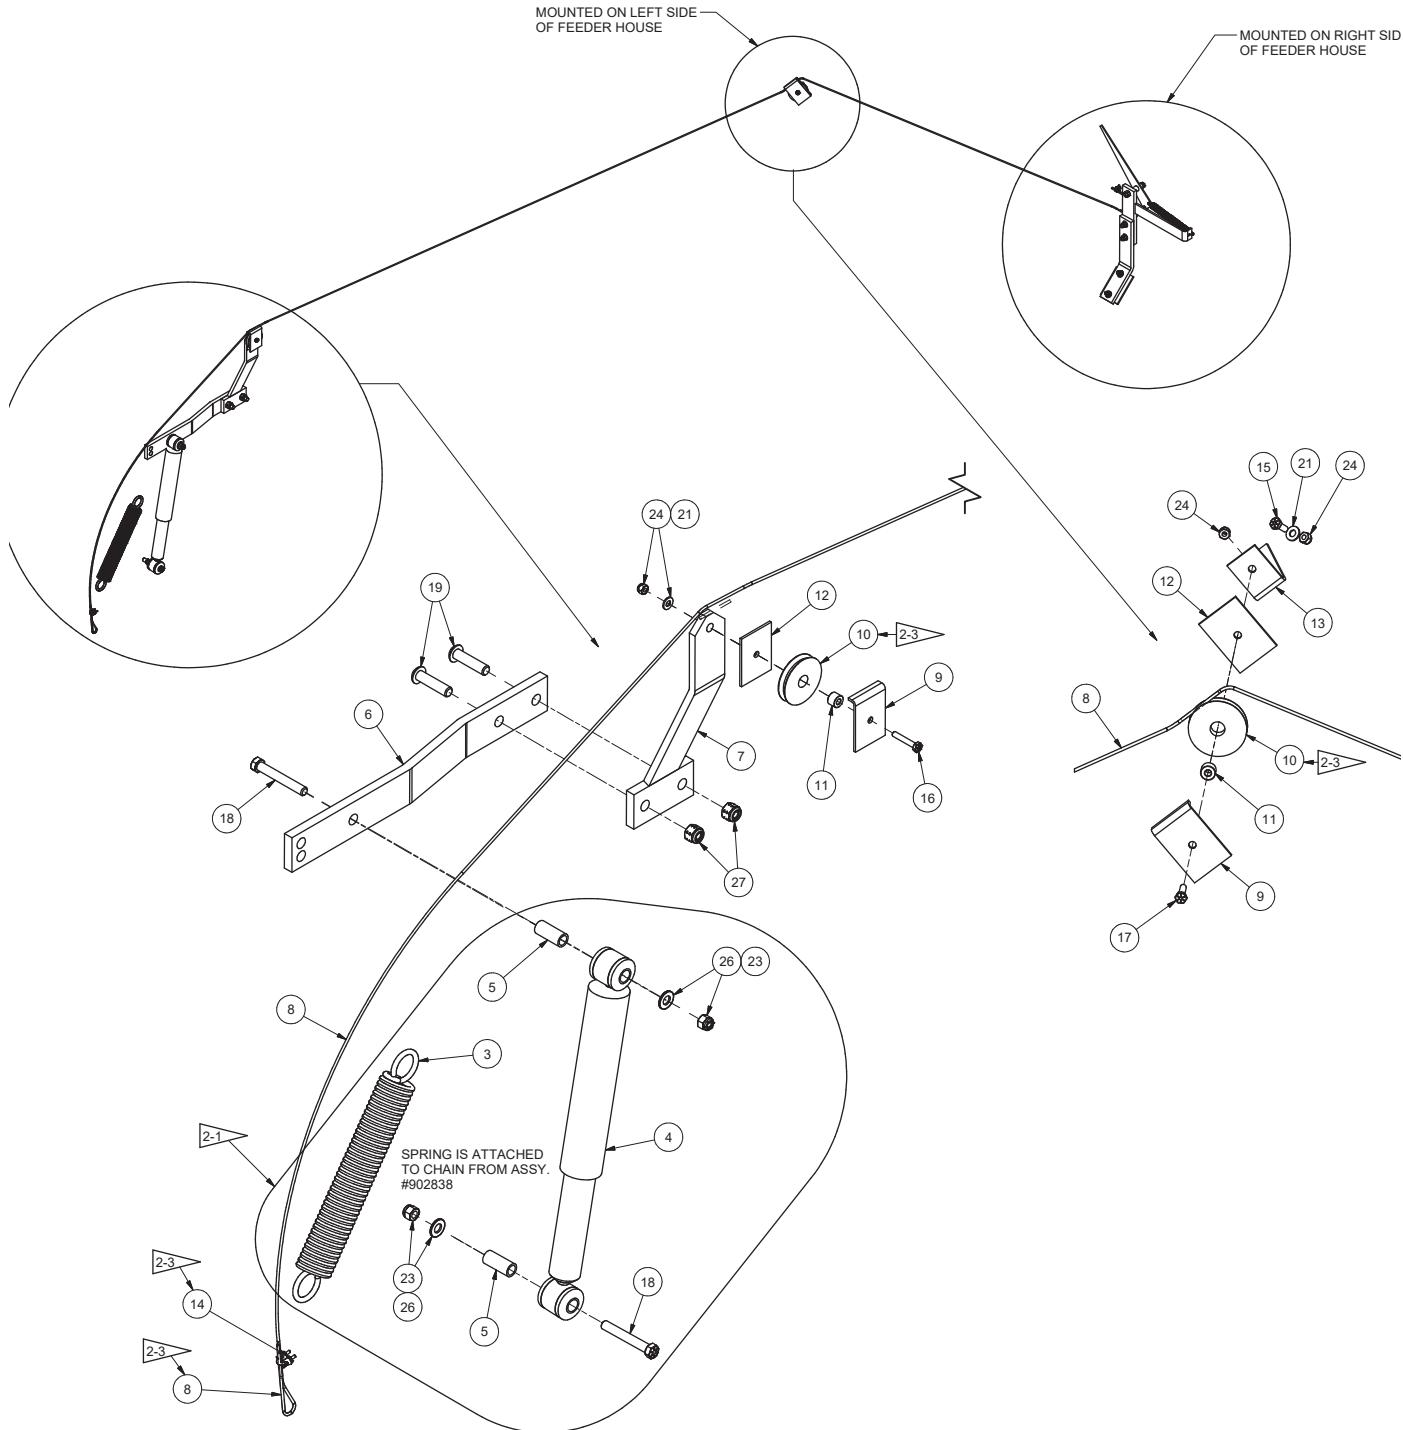

Bale Weight Indicator Installation

Page 2 of 2

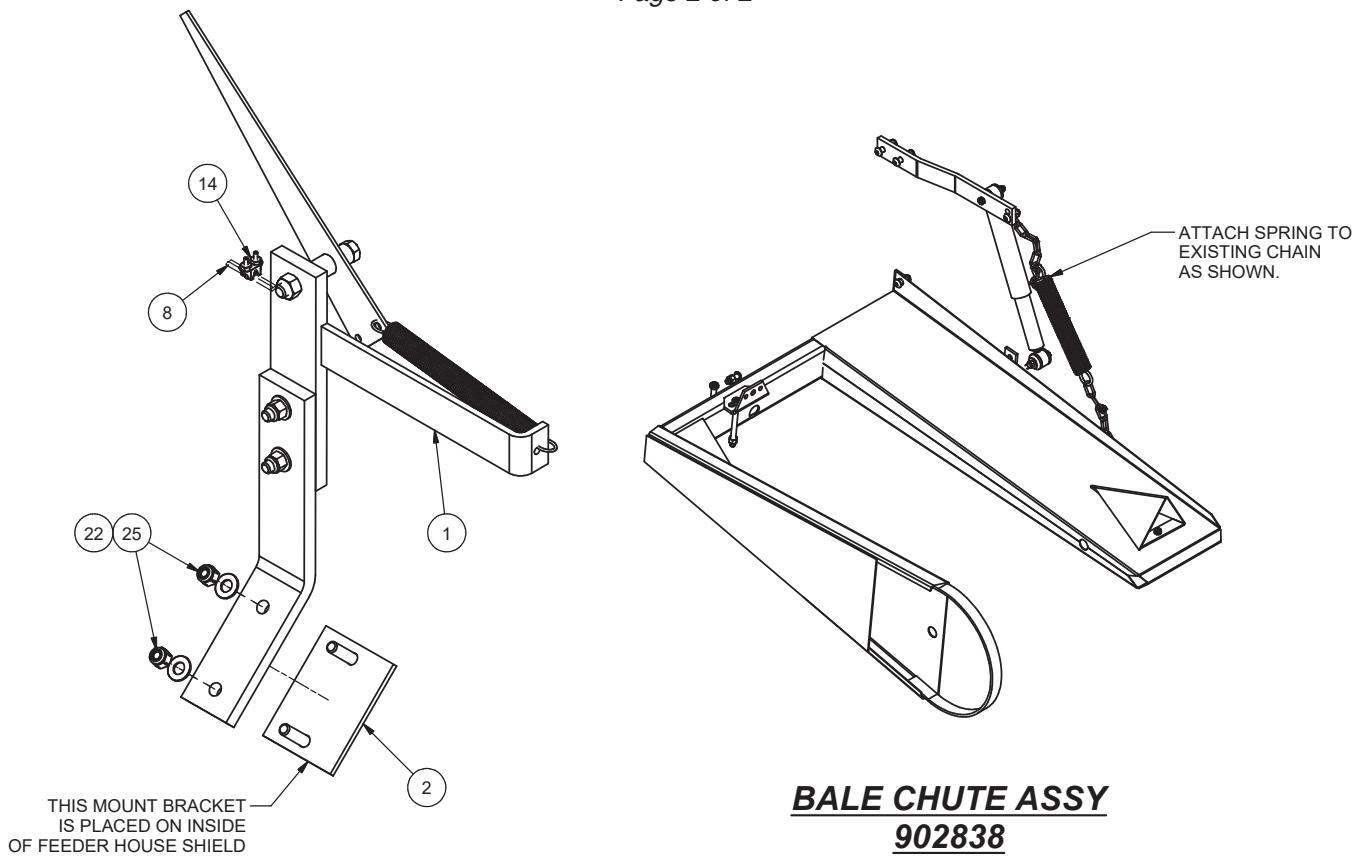

BALE CHUTE ASSY
902838

NOTES


- 2-1 PARTS SHIPPED LOOSE WITH BALER
- 2-2 ASSEMBLY PHOTOS AVAILABLE FOR REFERENCE
- 2-2 CABLE IS LOOPED AROUND ROLLER AND SECURED WITH CLAMP FOR SHIPMENT

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902833		Bale Weight Indicator Installation, RH				
1	* 902752	1	. Bale Weight Indicator Sub-Assembly	15	224120W	1	. Capscrew
2	MNT0033273	1	. Indicator Mount	16	R13801783	1	. Capscrew
3	F000000985	1	. Bale Chute Spring	17	R13801782	1	. Capscrew
4	F000000988	1	. Shock Absorber	18	R13811062	2	. Capscrew
5	F000000993	2	. Bushing, Bale Weight Indicator	19	Y25G-0832	2	. Capscrew
6	F000001638	1	. Bar, Shock Absorber	21	R13802619	2	. Washer
7	F000001639	1	. Bracket	22	221767W	2	. Washer
8	902902	1	. Cable, Bale Weight Indicator	23	222677	2	. Washer
9	F000000994	2	. Shield	24	15113W	3	. Nut, Esna
10	F000004067	2	. Roller	25	237567	2	. Locknut
11	F000004068	2	. Bushing	26	R13805167	2	. Nut, Esna
12	F000000995	2	. Plate, Roller	27	223587	2	. Locknut
13	BKT0008104	1	. Pulley Bracket Weight Indicator				
14	F000000990	2	. Clamp, Cable				

Rev BG

* See Separate Coverage (Page 12-9)


Bale Weight Indicator Assembly

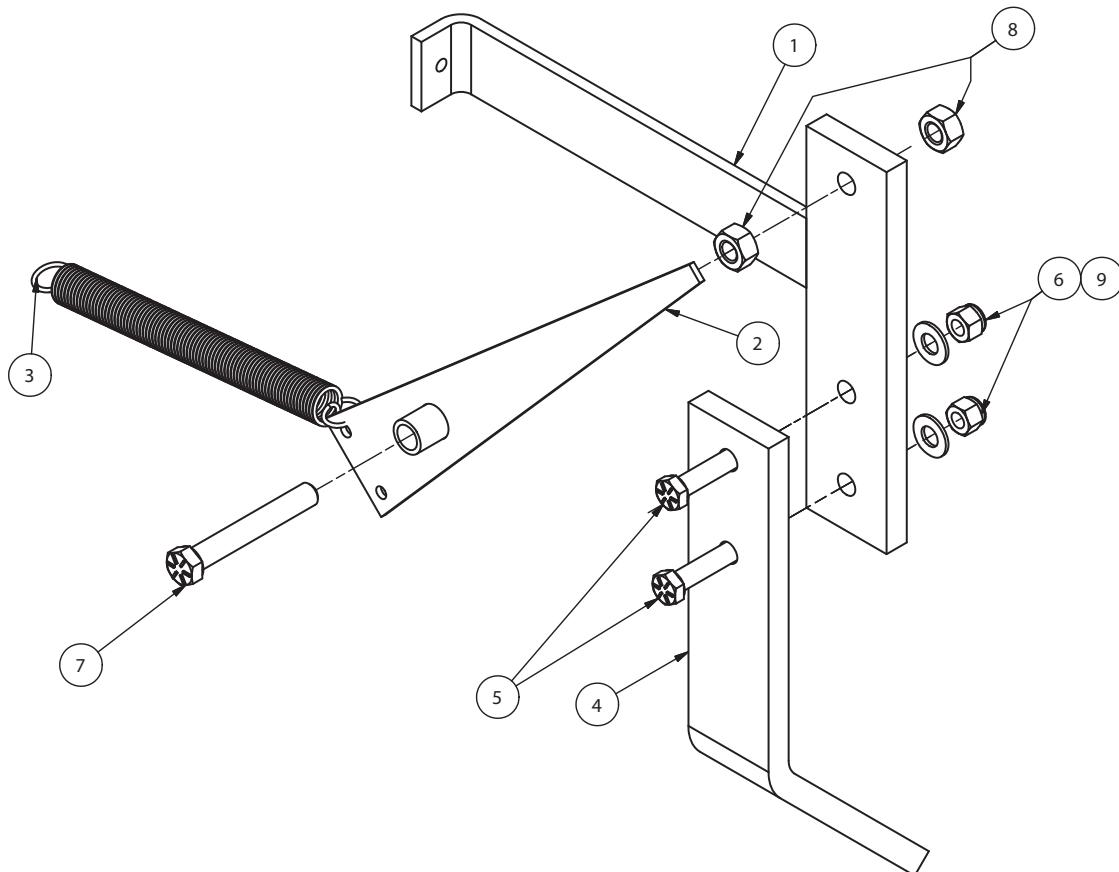

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902752			Bale Weight Indicator Assembly				
1	F000000997	1	. Bracket	6	237567	2	. Nut, Esna
2	F000000998	1	. Indicator	7	R13811062	1	. Capscrew
3	F000000268	1	. Indicator Return Spring	8	R13806770	2	. Hex Nut
4	BKT0014239	1	. Bracket, Support	9	223427	2	. Flat Washer
5	R13801813	2	. Capscrew				

Rev A

Hay Saver Wheel Installation

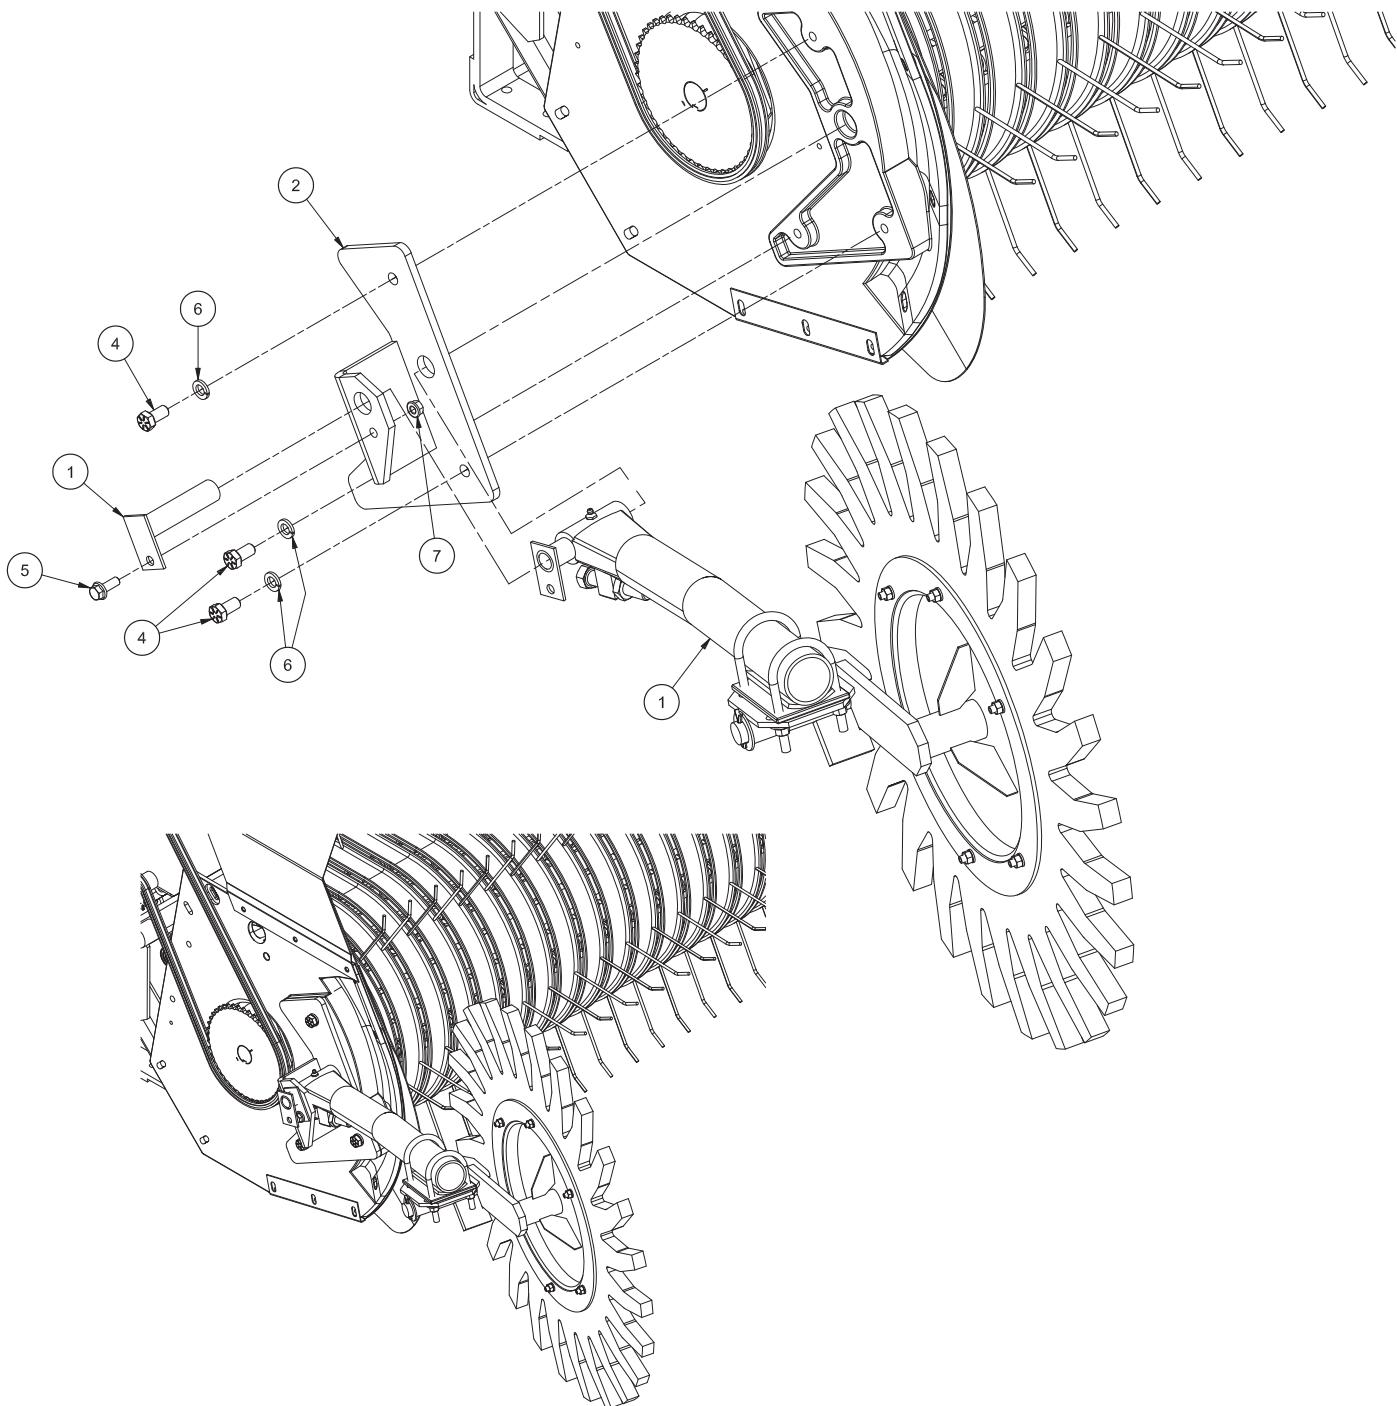


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
902854			Hay Saver Wheel Installation				
1 *a	F00001893A	1	. Hay Saver Wheel Assembly	6	234665	3	. Lockwasher
2	MNT0020484	1	. Mounting Weldment	7	09411507	1	. Nut, Serrated
4	221560W	3	. Capscrew				
5	174413W	1	. Screw				

*a See Separate Coverage (Page 12-11)

Rev B


Hay Saver Wheel Assembly

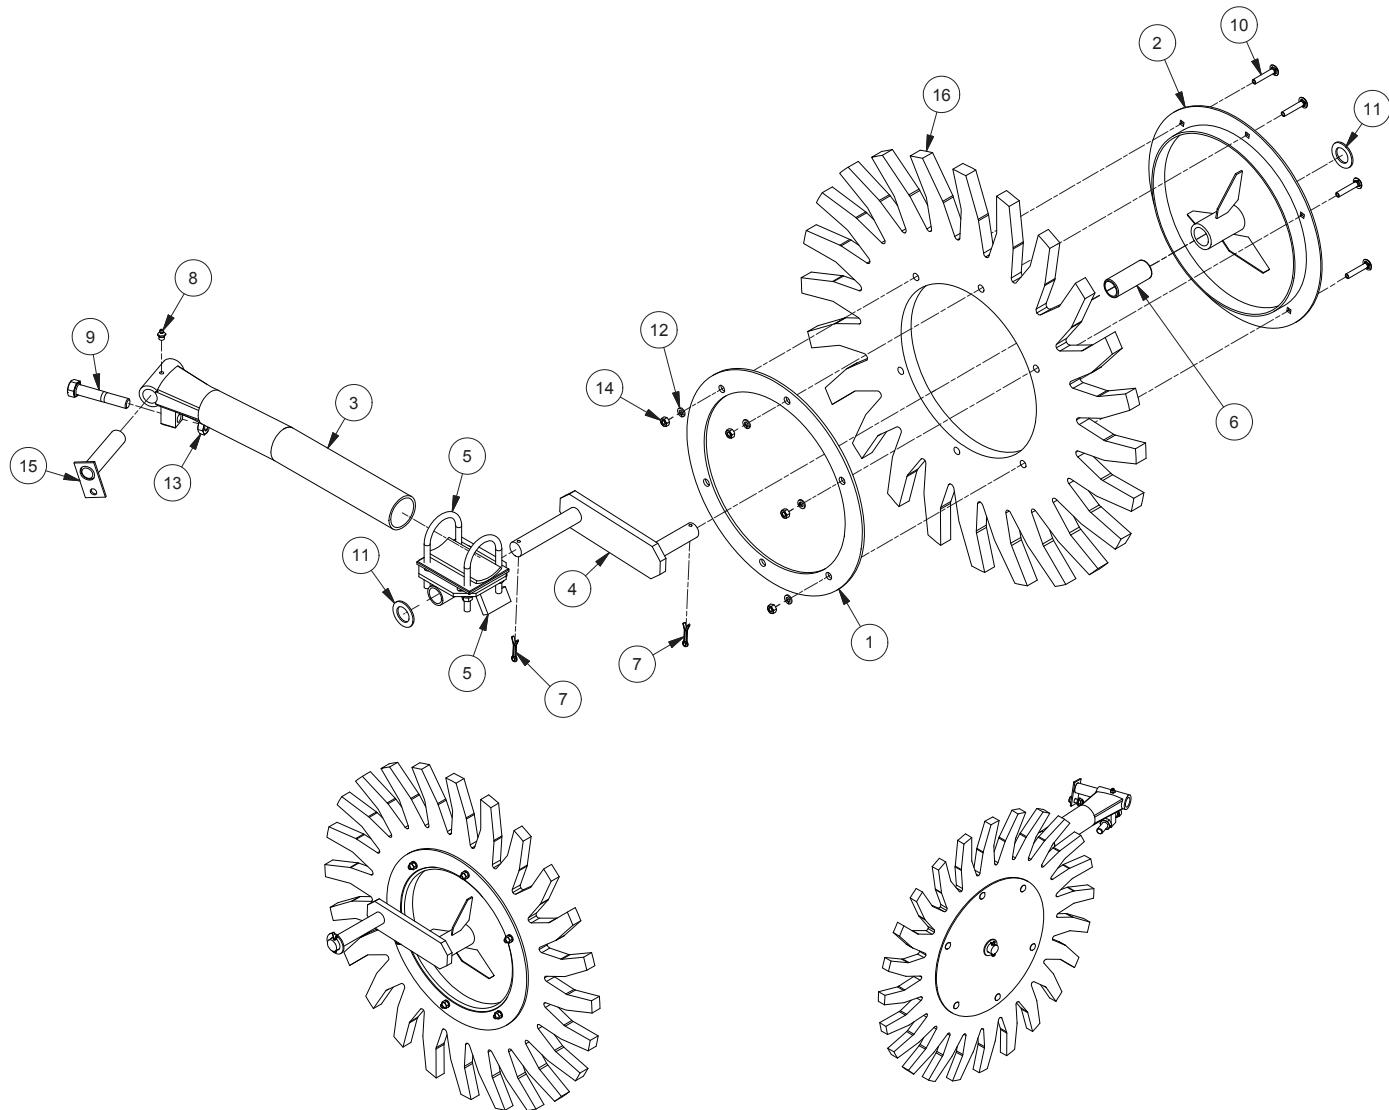

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
F00001893A			Hay Saver Wheel Assembly				
1 *a	F000001906	2	. Backup Ring F/Hay Saver Disc	12 *a	R13812513	6	. Lockwasher
2 *a	F000001911	1	. Wheel Disc Only F/Hay Saver	13	FT00000055	1	. Jam Nut
3	F000001895	1	. Hay Saver Arm W/Stop Bolt	14 *a	R13811512	6	. Hex Nut
4	F00001905A	1	. Wheel Axle Arm - Bushing Type	15	F000001897	1	. Pin, Pivot
5	F000001900	1	. Hay Saver Rotary Clamp	16 *a	F000001907	1	. Rubber Ring F/Hay Saver
6 *a	BSH0162048	1	. Hay Saver Wheel Bushing				
7 *b	200614	2	. Cotter Pin				*a Included in Kit F000001904, Hay Saver Disc Assembly
8	11079	1	. Fitting, Lube				*b Included in F00001905A, Wheel Axle Arm
9	Y17C-1056	1	. Capscrew				
10 *a	CRB3131750	6	. Bolt				
11 *b	R13802637	2	. Flat Washer				

Rev E


Tool Box Installation

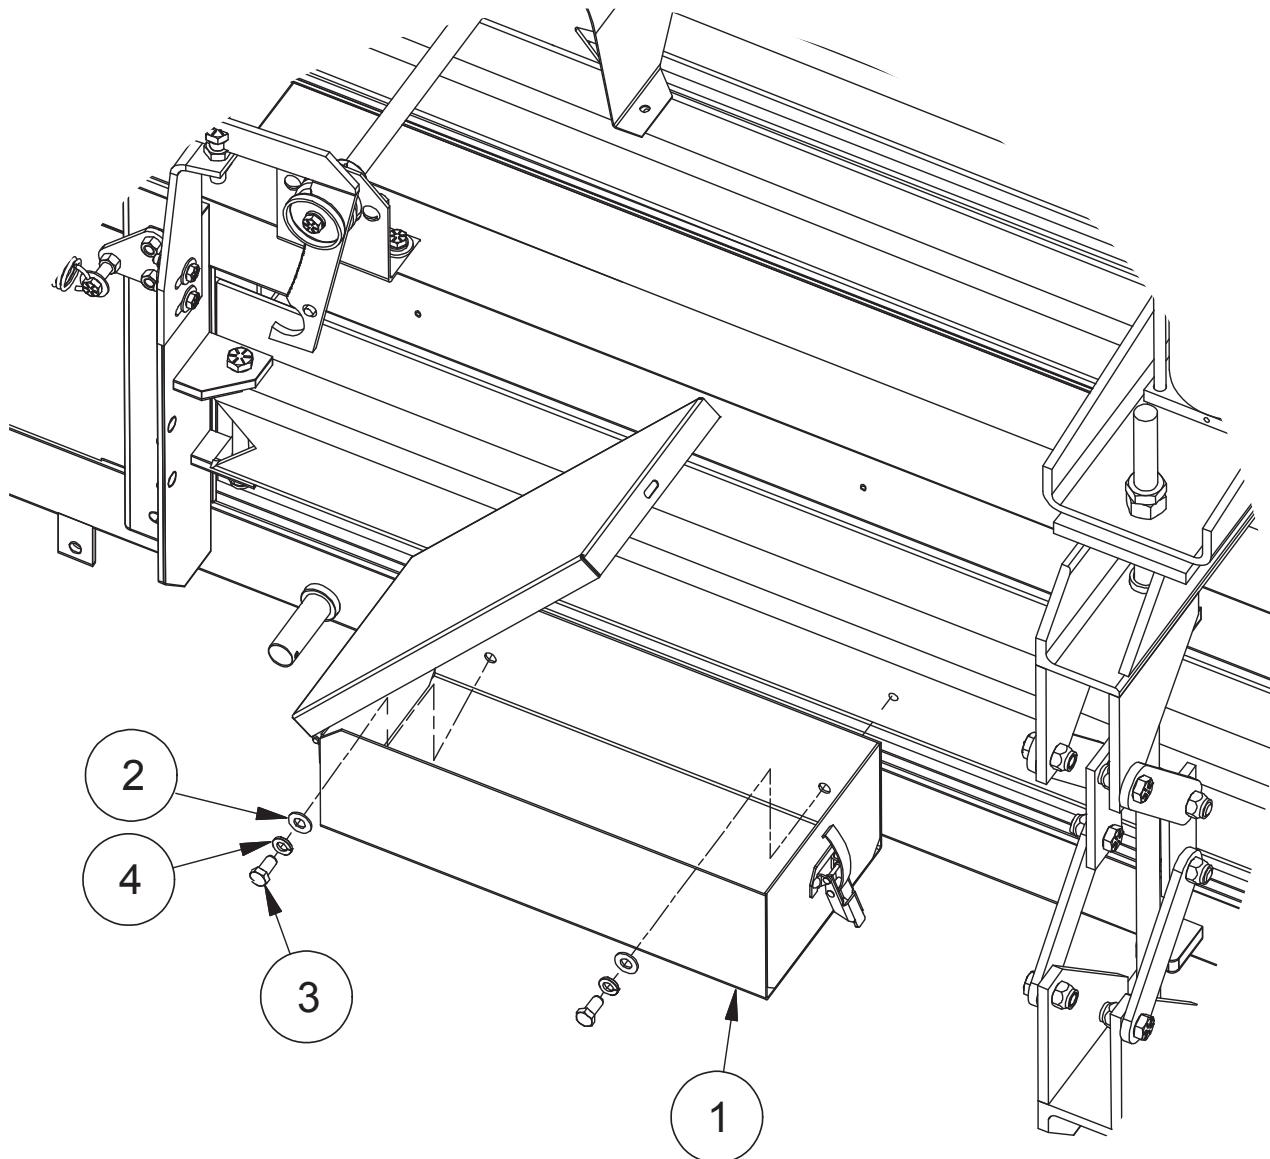

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
905033			Tool Box Installation				
1	BOX0007161	1	. Toolbox	3	16597W	2	. Capscrew
2	223427	2	. Flat Washer	4	201567	2	. Lock Washer

Rev - A


Slow Moving Vehicle Sign Installation

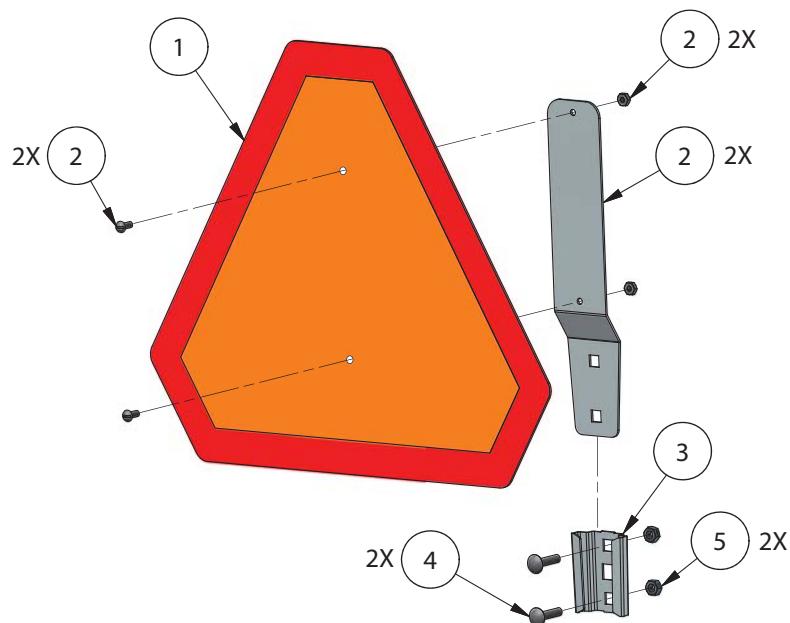

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	SGN0024006	1	Slow Moving Vehicle Sign	4	SMS0000177	2	Capscrew
2	BKT0000001	1	Bracket	5	273802	2	Nut
3	MNT0000001	1	Bracket Mount				

Decal List, 270

Page 1 of 2

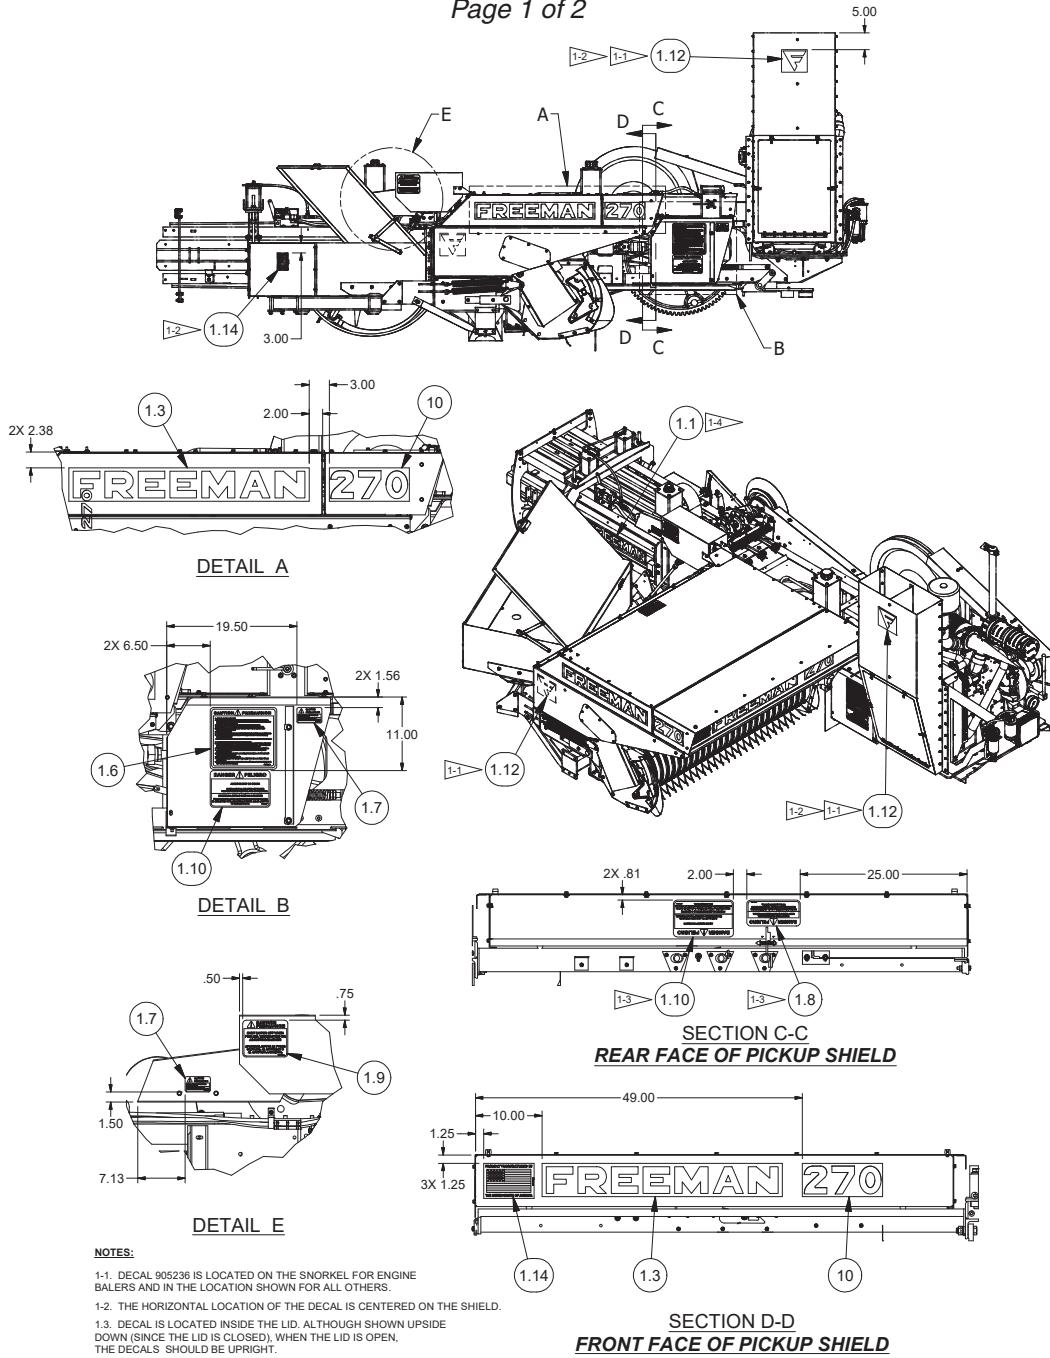


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	FD00002700		Decal Installation, 270				
1	FD00007111	1	. Decal, White Freeman	9	FD00023581	3	. Decal, Caution Shut Off Motor
2	FD00007112	1	. Decal, Red Freeman	10	FD00025126	2	. Decal, Pickup Hazard Warning
3	FD00007114	4	. Decal, Red Freeman	11	FD00028004	2	. Decal, Pre-set Do Not Adjust
4	FD00007126	1	. Decal, NEEDLE ADJUSTMENT	12	905236	1	. Decal, White Freeman Logo
5	FD00008193	1	. Decal, Avoid Equipment Damage	13	905235	1	. Decal, Red Freeman Logo
6	FD00023473	3	. Decal, Caution, General Notes	14	FD70000434	2	. Decal, Manufactured In USA
7	FD00023572	4	. Decal, Keep Shields In Place	10	FD00000270	3	. Decal, 270
8	FD00023575	2	. Decal, Danger! Do Not Ride				

Rev D


Decal List, 270

Page 2 of 2

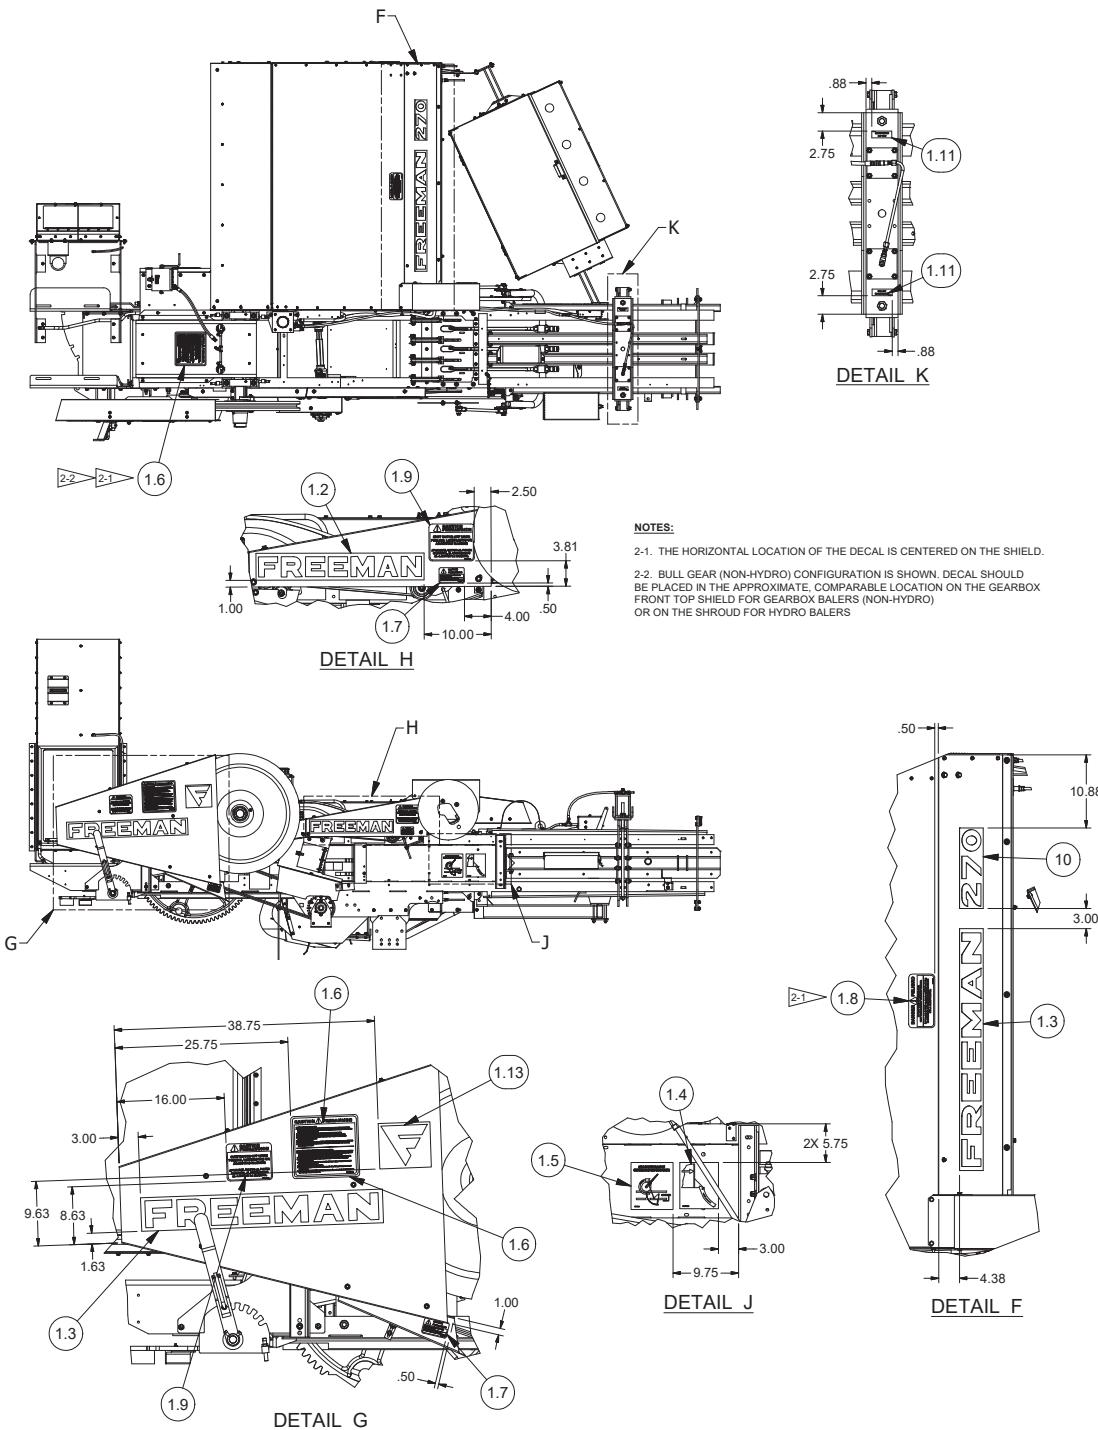

Decal List, 275

Page 1 of 2

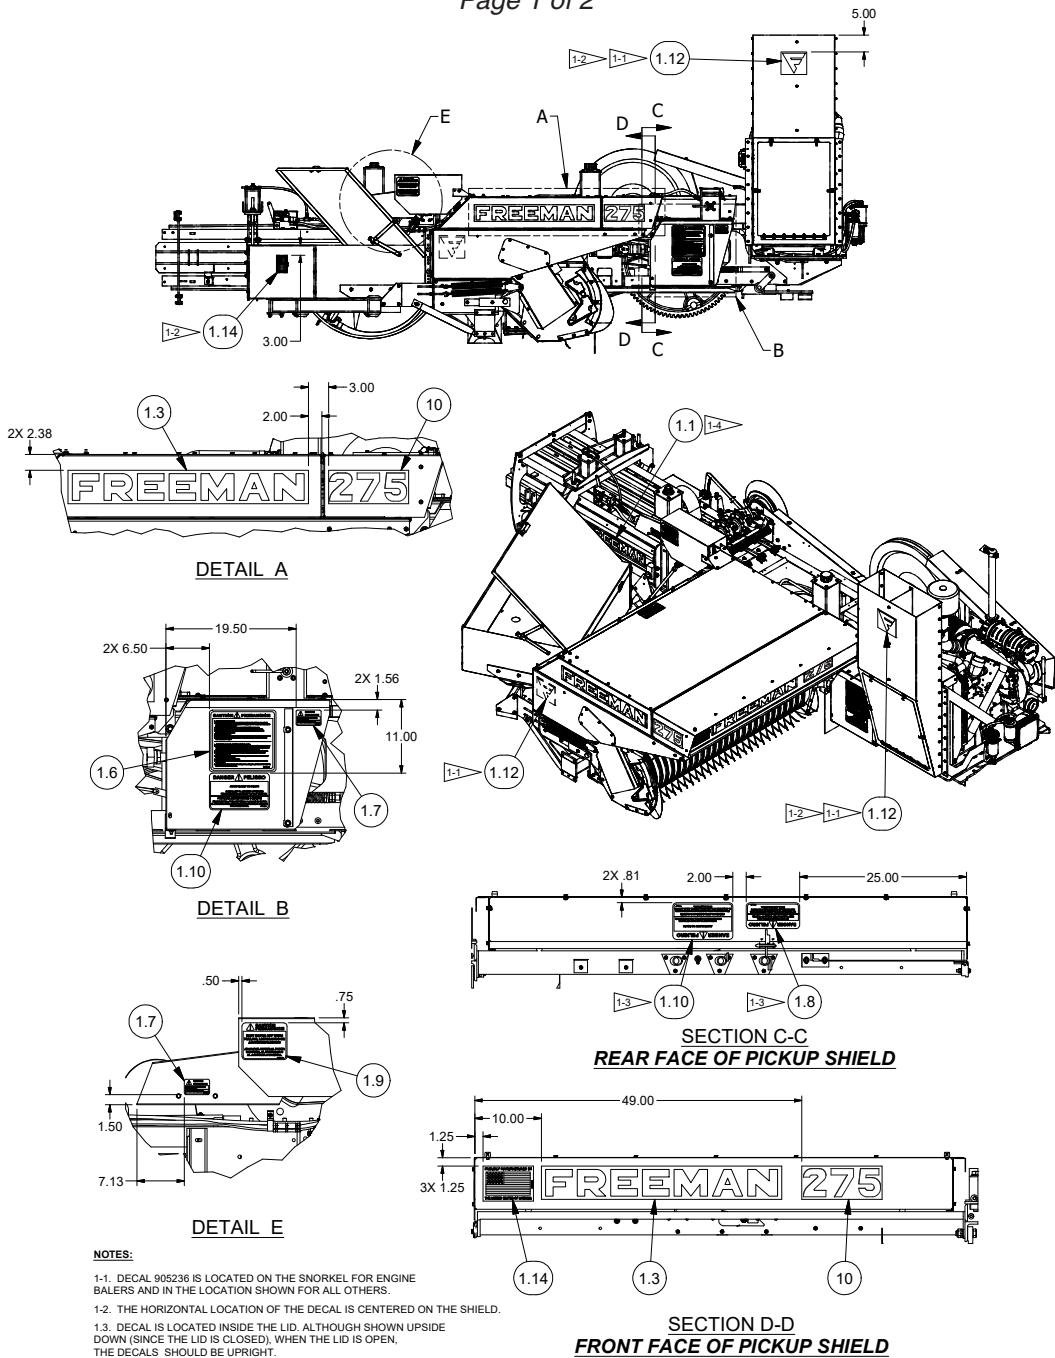


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	902418		Decal Installation, 275				
1	FD00007111	1	. Decal, White Freeman	9	FD00023581	3	. Decal, Caution Shut Off Motor
2	FD00007112	1	. Decal, Red Freeman	10	FD00025126	2	. Decal, Pickup Hazard Warning
3	FD00007114	4	. Decal, Red Freeman	11	FD00028004	2	. Decal, Pre-set Do Not Adjust
4	FD00007126	1	. Decal, NEEDLE ADJUSTMENT	12	905236	1	. Decal, White Freeman Logo
5	FD00008193	1	. Decal, Avoid Equipment Damage	13	905235	1	. Decal, Red Freeman Logo
6	FD00023473	3	. Decal, Caution, General Notes	14	FD70000434	2	. Decal, Manufactured In USA
7	FD00023572	4	. Decal, Keep Shields In Place	10	FD00000275	3	. Decal, 275
8	FD00023575	2	. Decal, Danger! Do Not Ride				


Rev B

Decal List, 275

Page 2 of 2

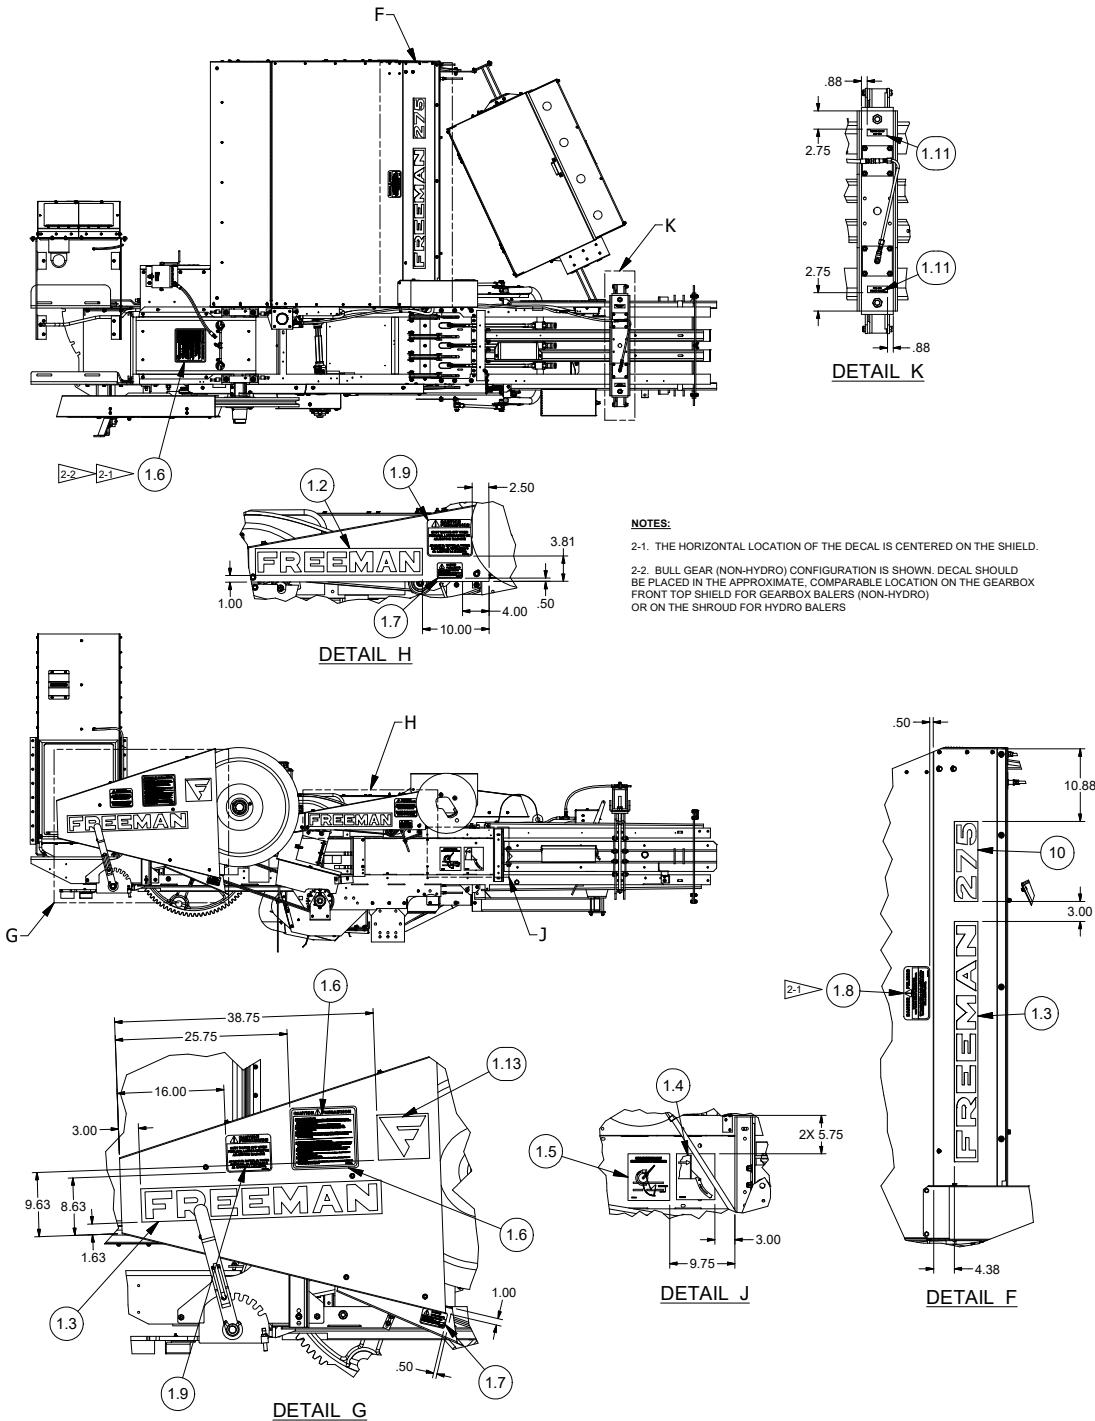

Hitch Ball

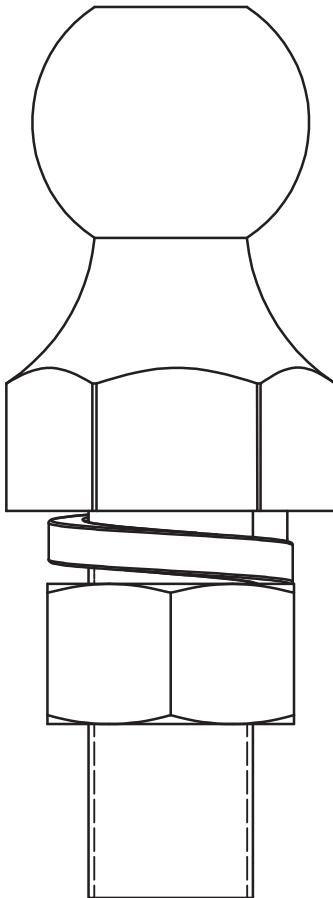

2-5/16" DIAMETER BALL
1-3/8" DIAMETER SHANK
3-1/4" SHANK LENGTH
1" RISE
THREADS= 1 3/8 - 12 UNF 2A
INCLUDES LOCKWASHER AND HEX NUT

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	HTH0031000	1	Ball Hitch				

Misc. Parts



Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1	ASC00280FA F000007626	1	Misc Parts, 280 . Bullgear Grease, 1 Gal.	246087	1		Paint, Red, 1 Gal
				246089	1		Paint, White, 1 Gal
				F000000770	1		Paint, Red, Spray Can
				F000001677	1		Paint, White, Spray Can
				WRN036554B	1		Wrench, Bearing Locknut
				WRN035826B	1		Wrench, Feed Fork Pivot Shaft

This page is intentionally left blank.

This page is intentionally left blank.



To find a dealer in your area,

Call: 503.625.2560

Fax: 503.625.7269

Visit our website: www.alliedsystems.com

Allied Systems
COMPANY

PB0000027X 05/2020

Printed in USA