


NSQ Series Front Wear Strip Installation

Removal:


1. Remove wear strip retainers from the body.
2. Remove the old wear strip.

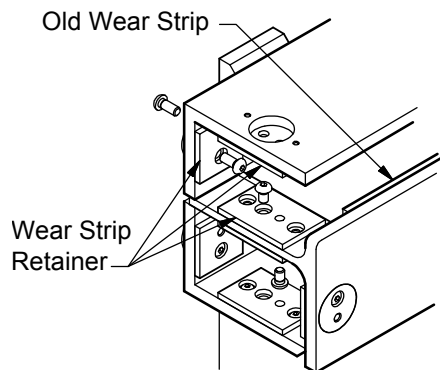

Installation:

1. When you order the front wear strip you will receive the blank material part number. (See chart for part number.)

NOTE: MAKE SURE THAT WHEN THE FRONT WEAR STRIP IS BENT, THE MILLED GROOVE IS ON THE OUTSIDE.

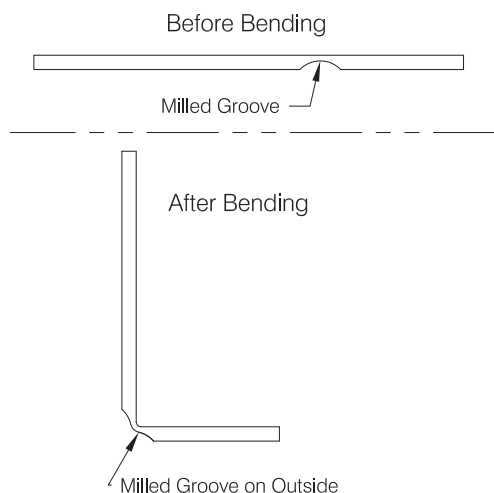

2. Slide the new wear strip blank into the body and install the wear strip retainers.
3. Use a jig saw to cut out the notch on the wear strip, using the body as a template.

Front Wear Strip	Material Part Number
YWST-0141-NSQTM	YWST-0161-NSQTM
YWST-0142-NSQTM	YWST-0163-NSQTM
YWST-0143-NSQTM	YWST-0165-NSQTM
YWST-0144-NSQTM	YWST-0166-NSQTM
YWST-0145-NSQTM	YWST-0165-NSQTM
YWST-0146-NSQTM	YWST-0167-NSQTM
YWST-0147-NSQTM	YWST-0167-NSQTM
YWST-0148-NSQTM	YWST-0168-NSQTM
YWST-0149-NSQTM	YWST-0169-NSQTM
YWST-0150-NSQTM	YWST-0161-NSQTM
YWST-0151-NSQTM	YWST-0166-NSQTM
YWST-0152-NSQTM	YWST-0173-NSQQM
YWST-0153-NSQTM	YWST-0165-NSQTM
YWST-0154-NSQTM	YWST-0161-NSQTM
YWST-0155-NSQTM	YWST-0165-NSQTM
YWST-0156-NSQTM	YWST-0161-NSQTM
YWST-0157-NSQTM	YWST-0166-NSQTM
YWST-0158-NSQPM	YWST-0172-NSQPM
YWST-0182-NSQQM	YWST-0174-NSQQM
YWST-0184-NSQTM	YWST-0170-NSQTM
YWST-0186-NSQTM	YWST-0163-NSQTM
YWST-0187-NSQTM	YWST-0166-NSQTM
YWST-0188-NSQPM	YWST-0170-NSQTM
YWST-0191-NSQTM	YWST-0161-NSQTM
YWST-0196-NSQTM	YWST-0161-NSQTM
YWST-0203-NSQNM	YWST-0167-NSQTM
YWST-0207-NSQTM	YWST-0161-NSQTM
YWST-0224-NSQTM	YWST-0161-NSQTM
YWST-0228-NSQTM	YWST-0161-NSQTM
YWST-0232-NSQNM	YWST-0175-NSQTM
YWST-0238-NSQTM	YWST-0176-NSQTM
YWST-0240-NSQTM	YWST-0165-NSQTM
YWST-0245-NSQTM	YWST-0177-NSQTM
YWST-0253-NSQTM	YWST-0161-NSQTM
YWST-0263-NSQTM	YWST-0161-NSQTM
YWST-0267-NSQTM	YWST-0178-NSQTM
YWST-0281-LFPPM	YWST-0282-LFPPM
YWST-0283-NSQTM	YWST-0161-NSQTM
YWST-0284-NSQTM	YWST-0170-NSQTM
YWST-0287-NSQTM	YWST-0161-NSQTM
2501575	2501574
2503695	YWST-0161-NSQTM
2504753	YWST-0175-NSQTM

