

PSR50NFPD148CB1AQ0 Push-Pull Installation Instructions

PSR Installation Instructions

1. PSR50 unit comes partially extended on a shipping pallet from the factory. This allows mounting on a lift truck without the use of any outside lifting device.
2. Remove previous attachment from lift truck.
3. Pull lift truck up to the mounting hooks of the PSR50 seated on pallet.
4. Tilt the mast of the lift truck to full forward position.
5. Lower the lift truck carriage to a level slightly below the upper mounting hooks of the attachment.
6. Raise lift truck carriage slowly while driving the truck under the attachment mounting hooks.
7. Raise the carriage further once attachment hooks are over the carriage bar.
8. Push up on tongue of the lower quick mounting hook. Listen for a click to be sure of engagement.
9. Hydraulic cylinders on attachment have had rods covered with rust inhibitors. Use a soft cloth to remove any substance covering the rod.
10. Wire truck electrical connections as follows:
 - Black-common ground
 - Green-switched 48v power (+)
 - White-constant 48v power (+)
11. Hook up truck hydraulic connections to attachment.
12. Cycle unit slowly several times to check for leaks in the truck to attachment connection. Tighten fittings as needed.
13. Begin to use attachment.