


SEE ASSEMBLY DRAWING FOR ORDER AND PLACEMENT OF FILTER LIGHTS, SWITCHES, CIRCUIT BREAKERS, AND SOLENOIDS

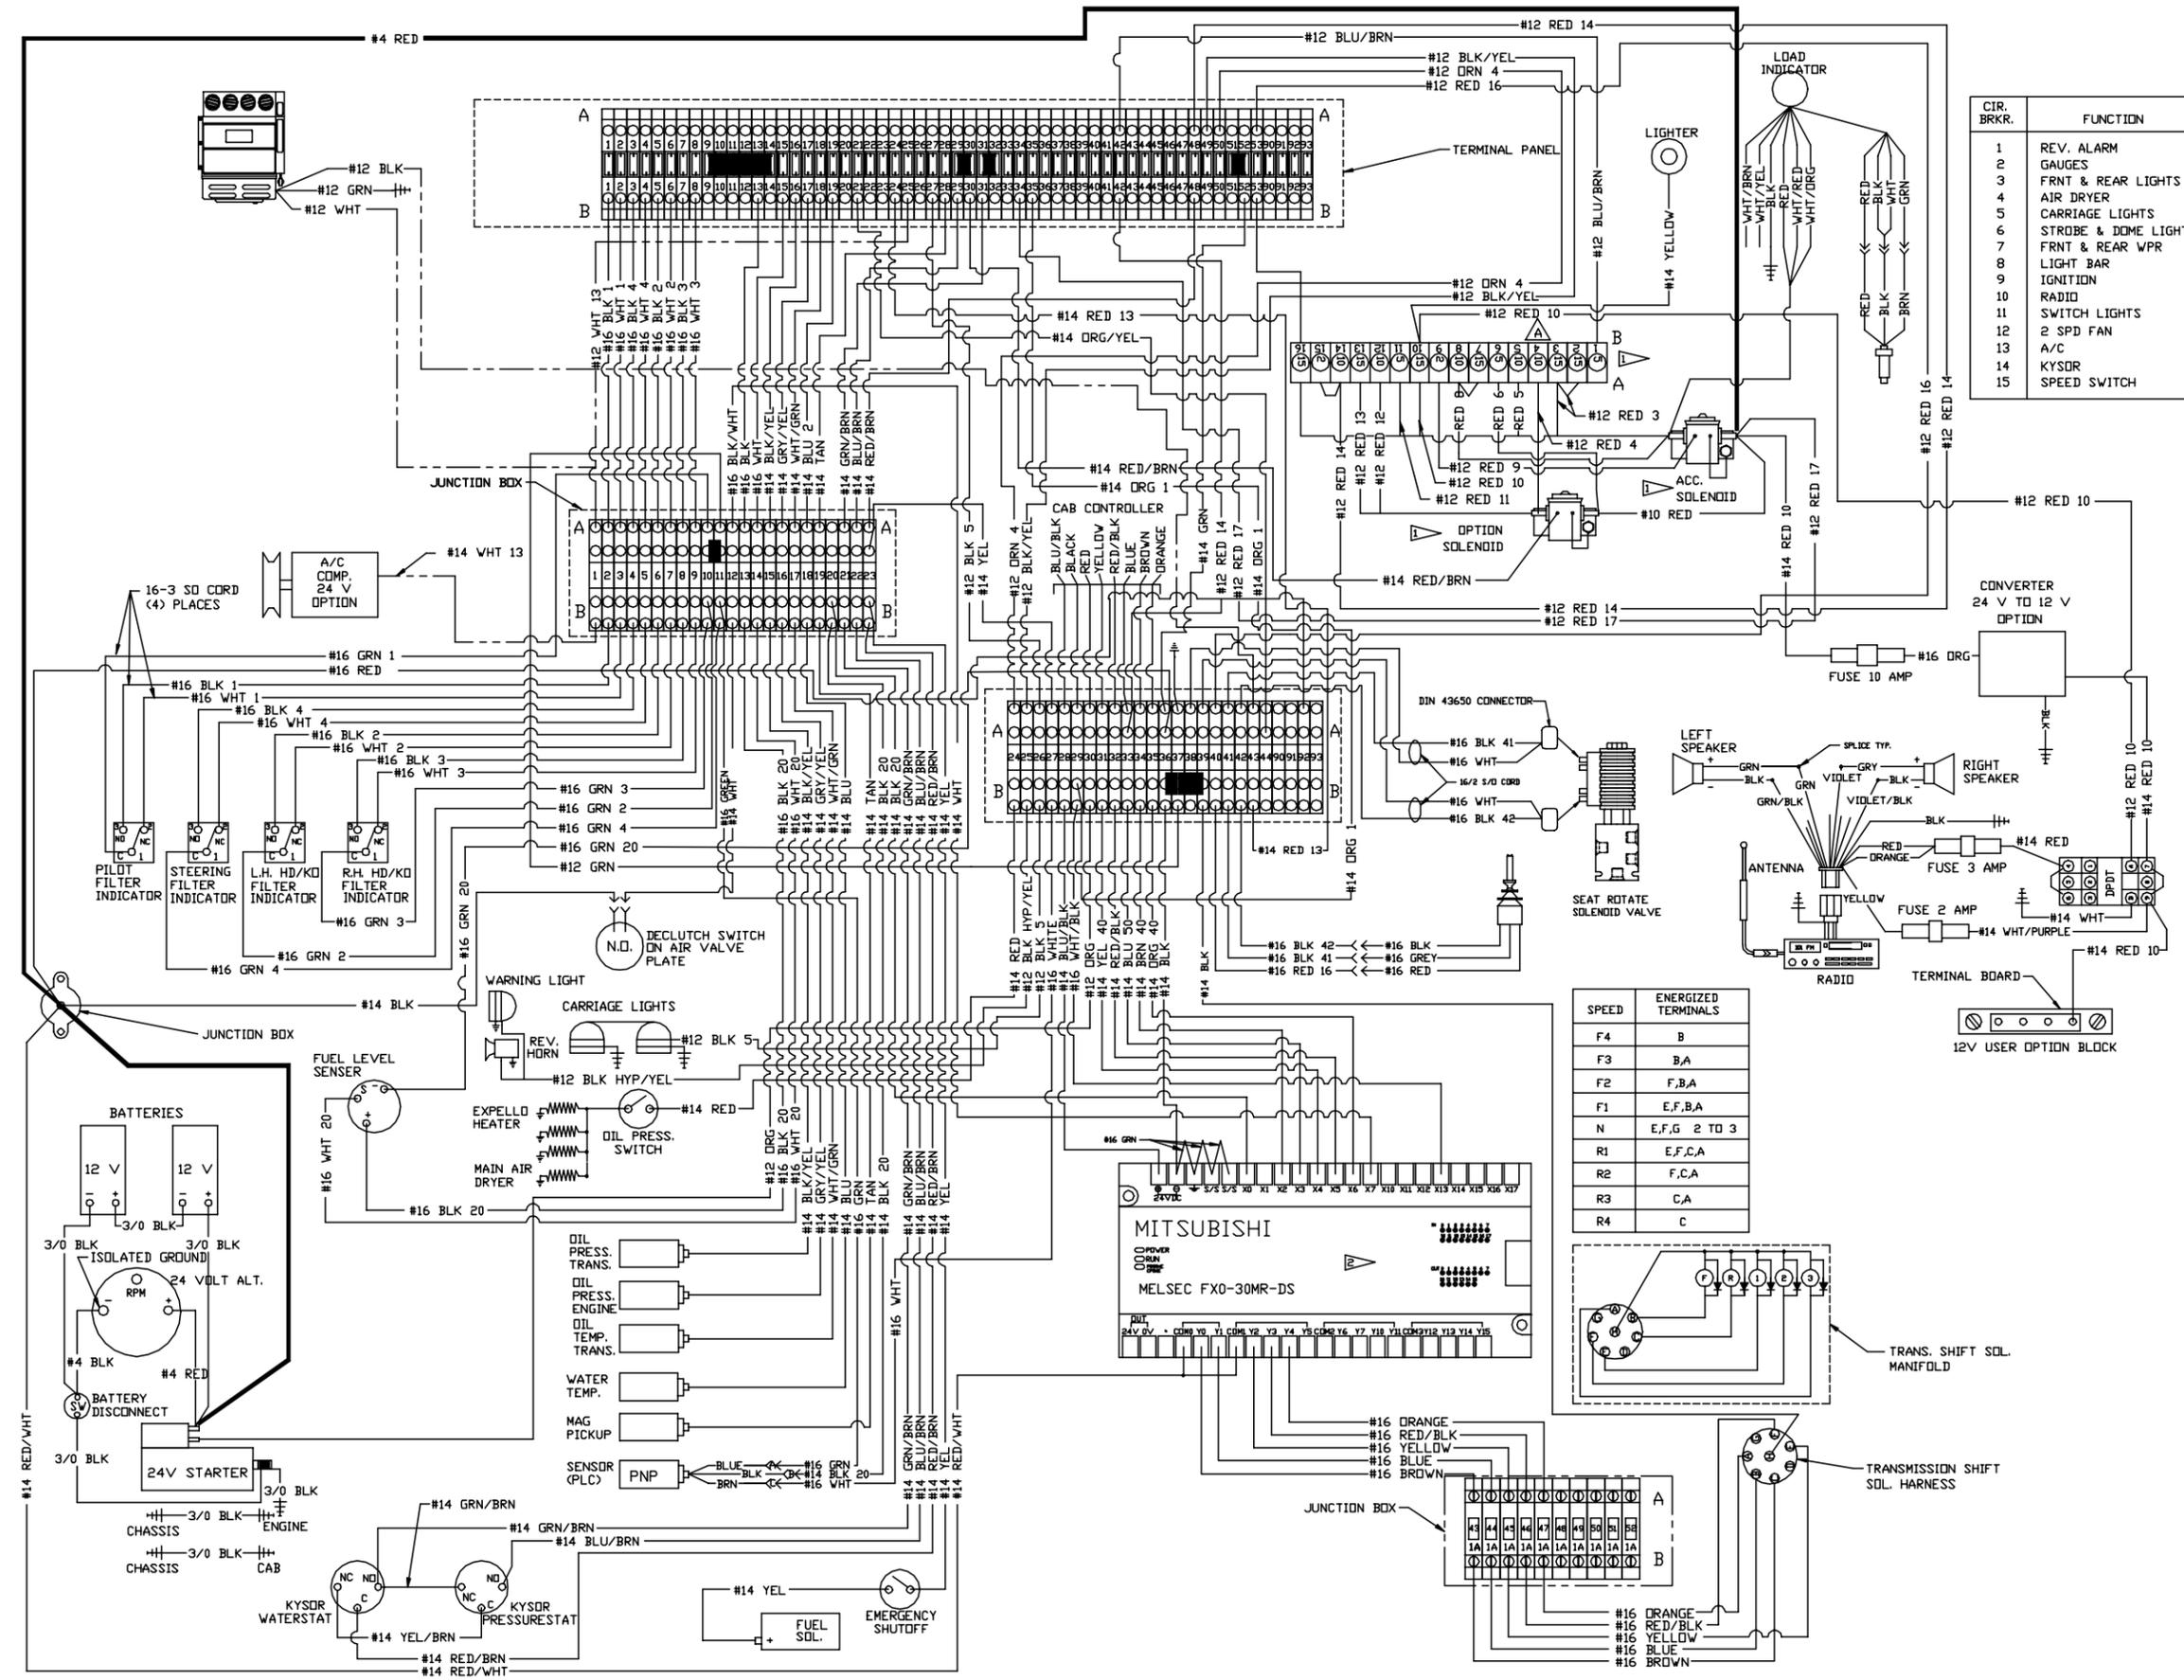

CIR. BRKR.	FUNCTION
1	REV. ALARM
2	GAUGES
3	FRNT & REAR LIGHTS
4	AIR DRYER
5	CARRIAGE LIGHTS
6	STROBE & DOME LIGHTS
7	FRNT & REAR WPR
8	LIGHT BAR
9	IGNITION
10	RADIO
11	SWITCH LIGHTS
12	2 SPD FAN
13	A/C
14	KYSOR
15	SPEED SWITCH

SPEED	ENERGIZED TERMINALS
F4	B
F3	B,A
F2	F,B,A
F1	E,F,B,A
N	E,F,G 2 TO 3
R1	E,F,C,A
R2	F,C,A
R3	C,A
R4	C

SEE ASSEMBLY DRAWING FOR ORDER AND PLACEMENT OF FILTER LIGHTS, SWITCHES, CIRCUIT BREAKERS, AND SOLENOIDS

SEE COWL ASSEMBLY-JUNCTION BOX-PROGRAM REWORK FOR INTERNAL LOGIC OF PROGRAMMABLE LOGIC CONTROLLER (PLC).