


NOTE: FOR UNITS WITH SHUTDOWN AND ELECTRIC

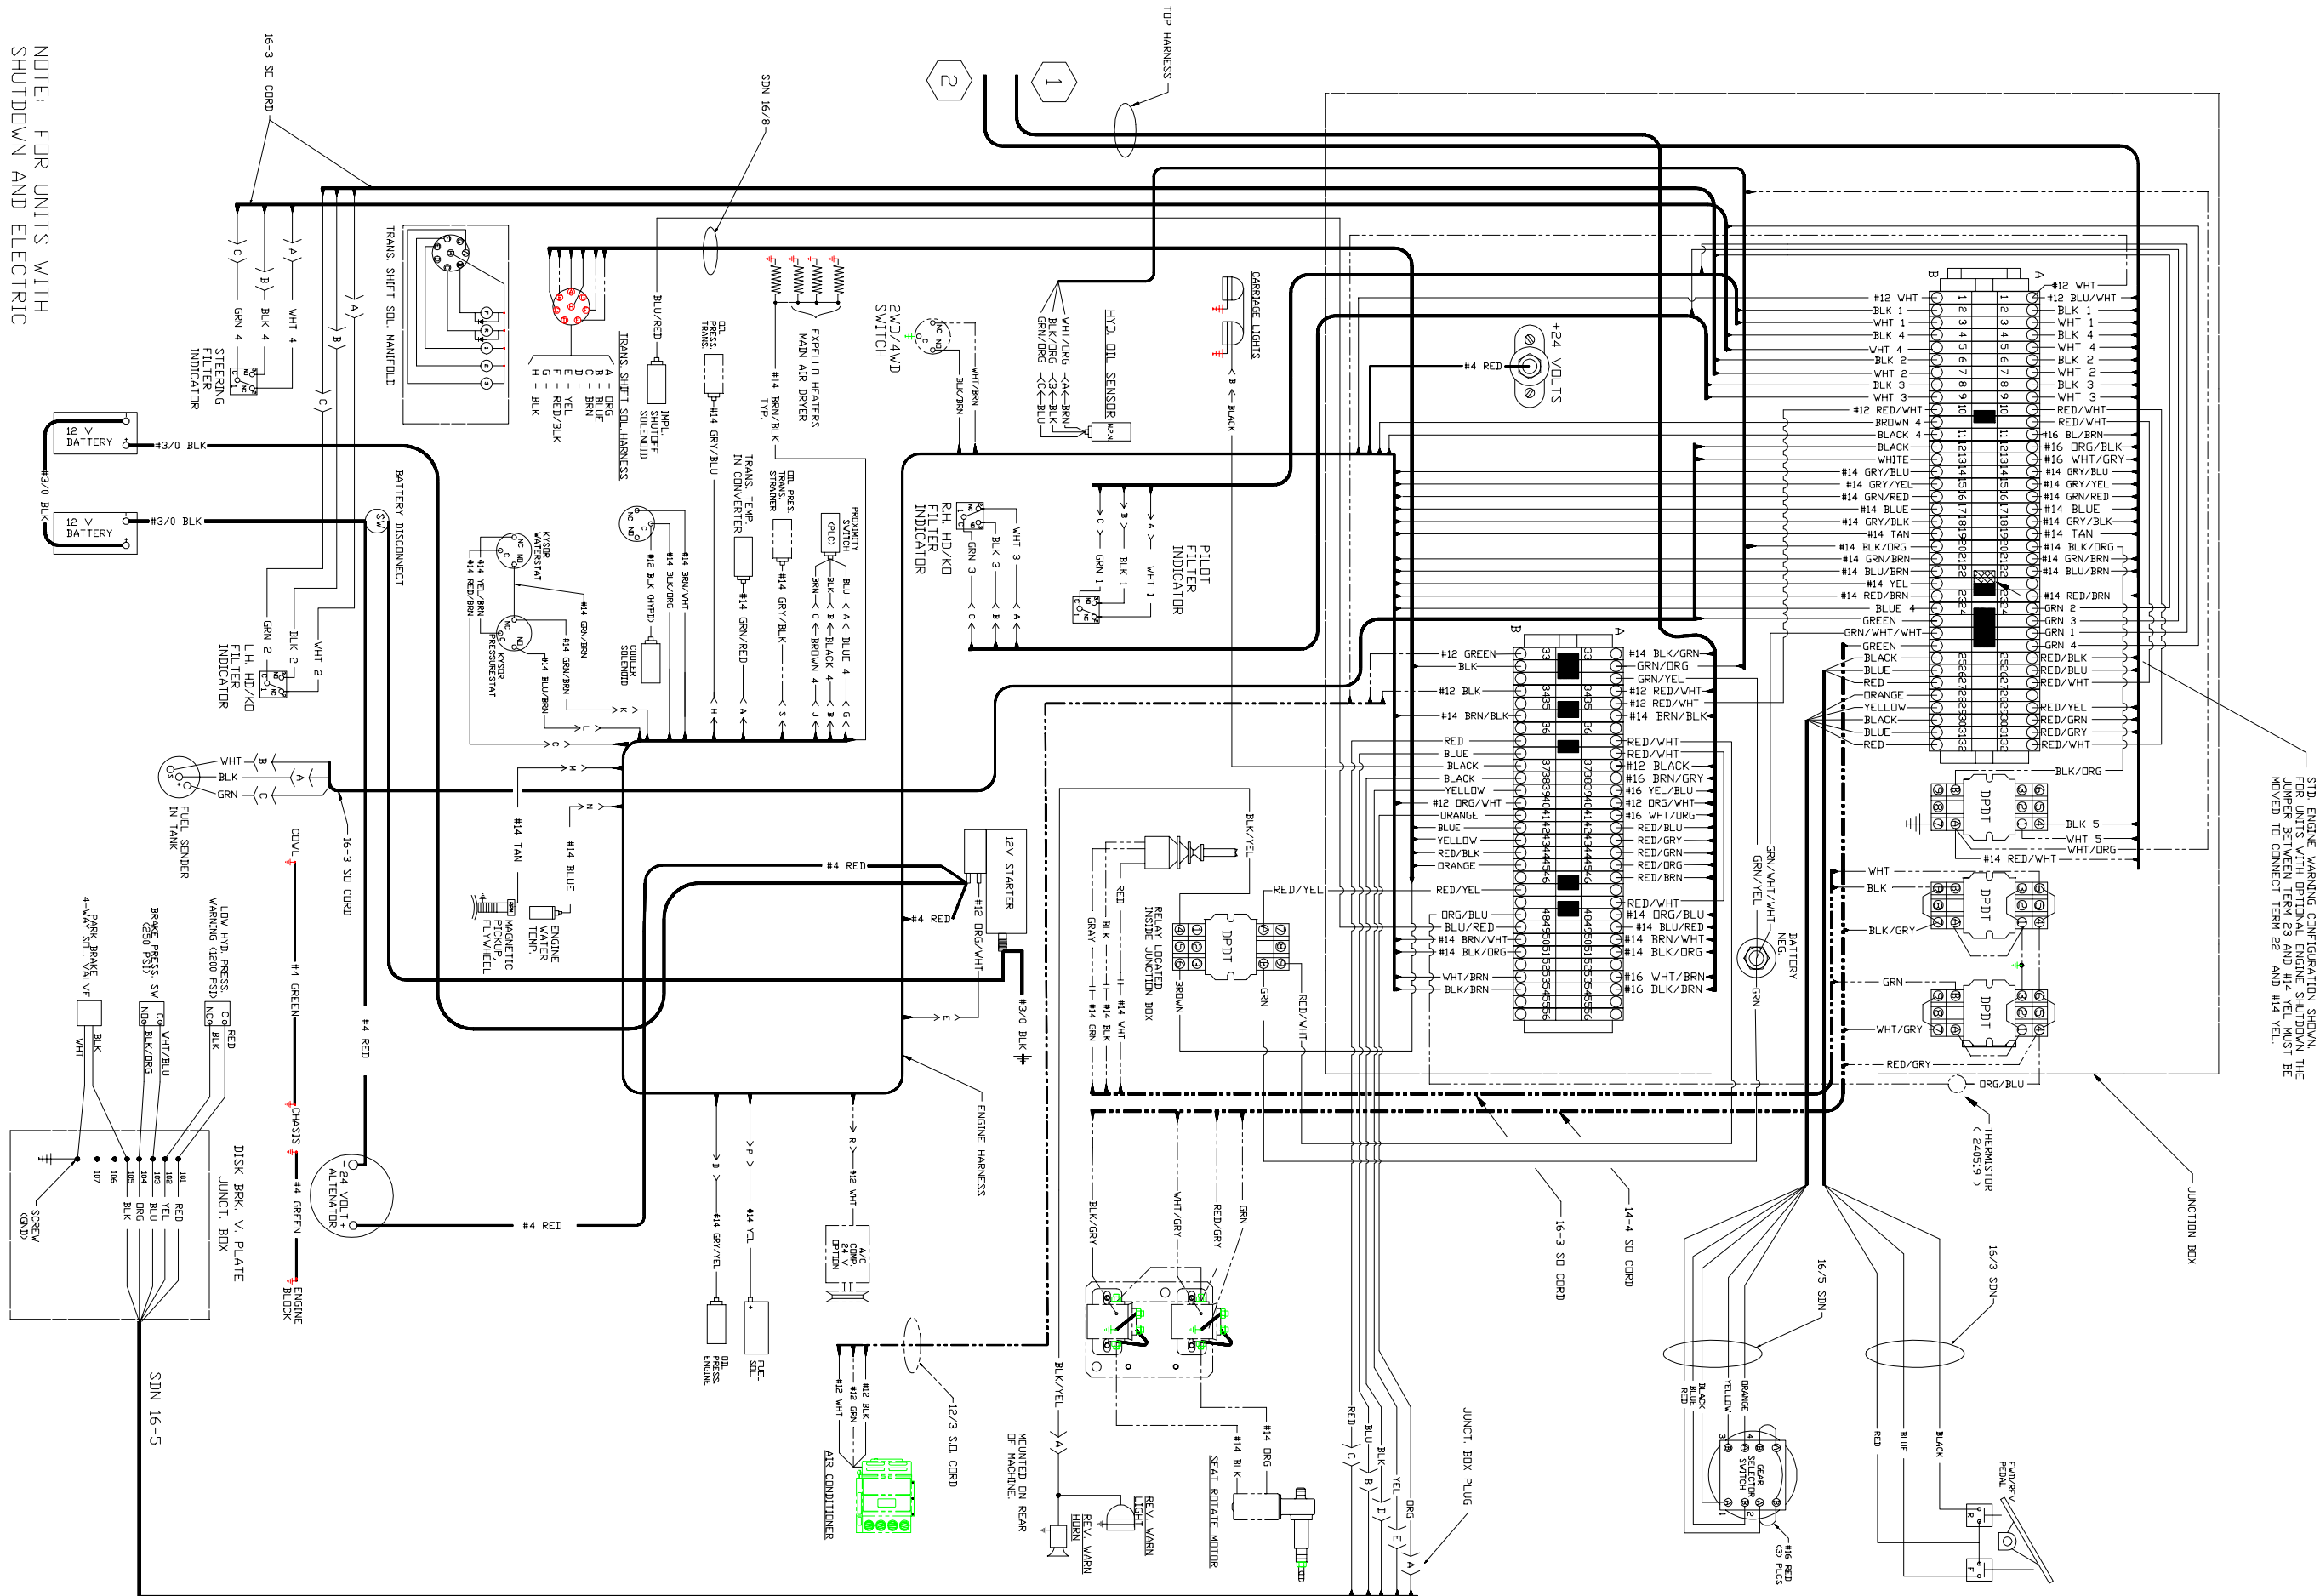

STD. ENGINE WARNING CONFIGURATION SHOWN. THE JUMPER BETWEEN TERM 23 AND #14 YEL MUST BE MOVED TO CONNECT TERM 22 AND #14 YEL.

NOTE: PHANTOM LINES INDICATE
OPTIONAL ITEMS. CHECK MASTER
SHEET FOR UNIT OPTIONS.

