



10

FROM JUNCTION BOX

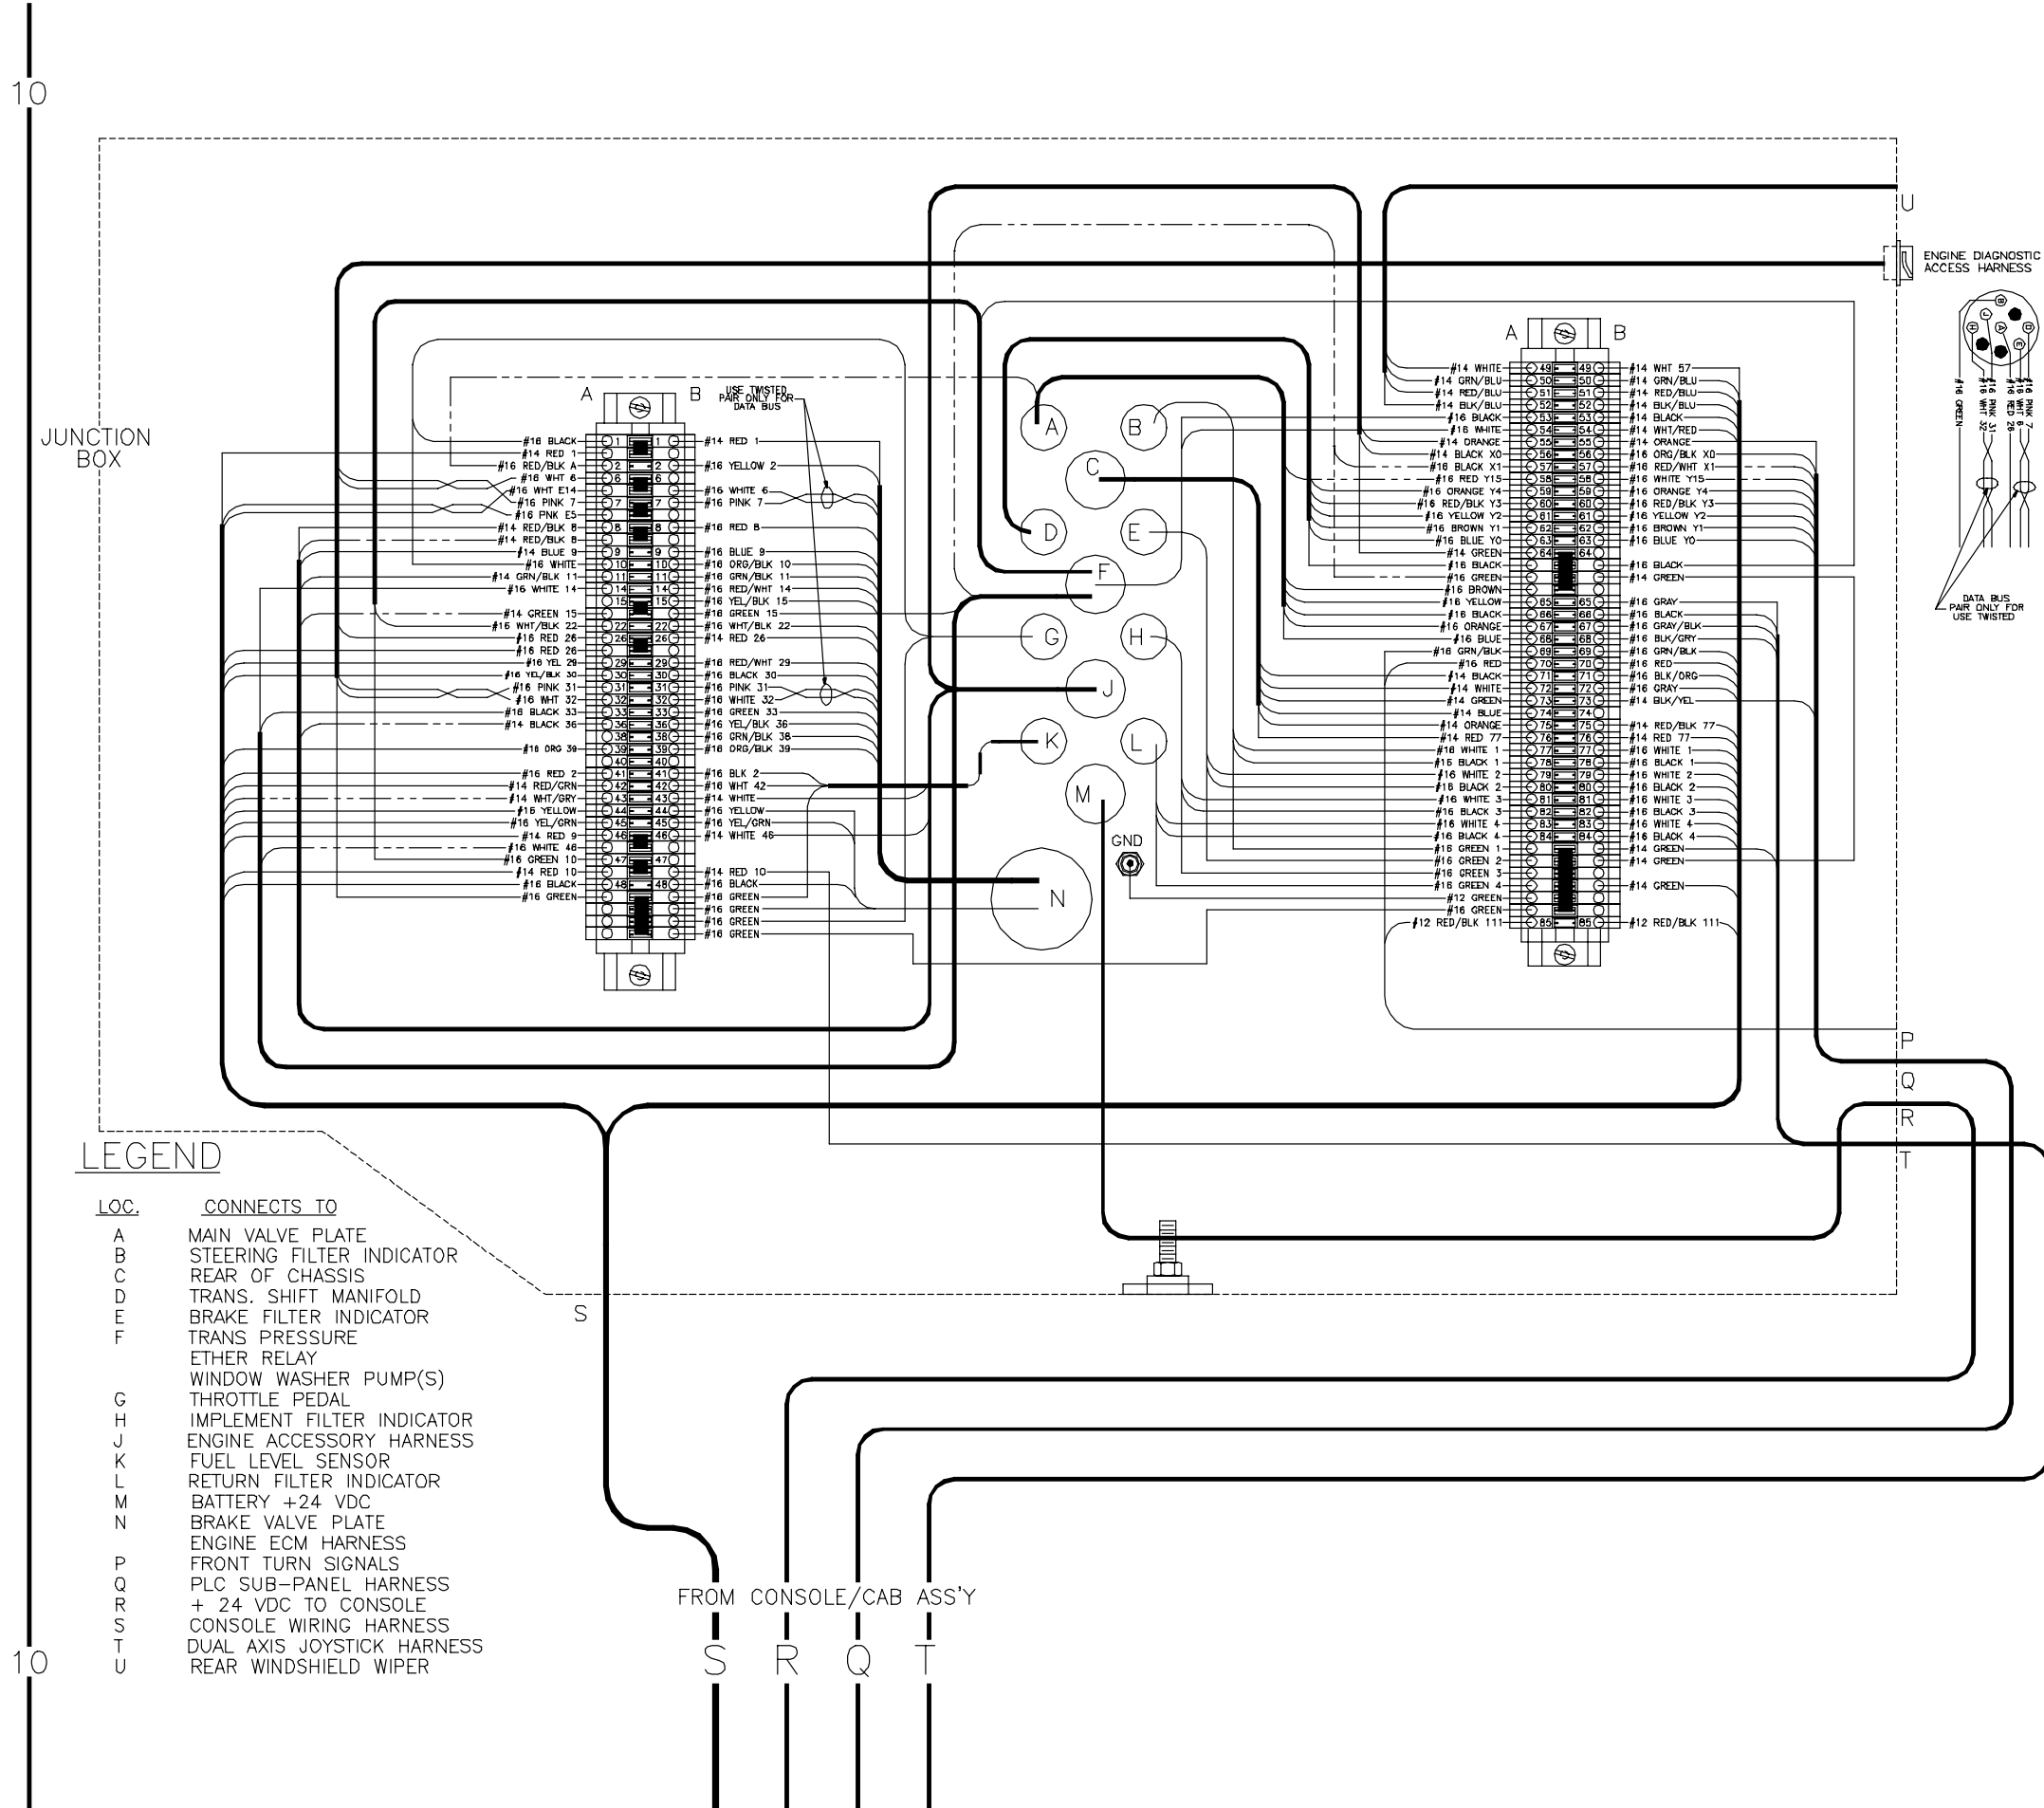

JUNCTION BOX

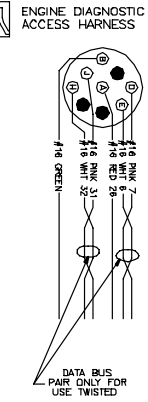

**LEGEND**

LOC.	CONNECTS TO
A	MAIN VALVE PLATE
B	STEERING FILTER INDICATOR
C	REAR OF CHASSIS
D	TRANS. SHIFT MANIFOLD
E	BRAKE FILTER INDICATOR
F	TRANS PRESSURE
G	ETHER RELAY
H	WINDOW WASHER PUMP(S)
I	THROTTLE PEDAL
J	IMPLEMENT FILTER INDICATOR
K	ENGINE ACCESSORY HARNESS
L	FUEL LEVEL SENSOR
M	RETURN FILTER INDICATOR
N	BATTERY +24 VDC
O	BRAKE VALVE PLATE
P	ENGINE ECM HARNESS
Q	FRONT TURN SIGNALS
R	PLC SUB-PANEL HARNESS
S	+ 24 VDC TO CONSOLE
T	CONSOLE WIRING HARNESS
U	DUAL AXIS JOYSTICK HARNESS
V	REAR WINDSHIELD WIPER

FROM CONSOLE/CAB ASS'Y

S R Q T



