


Joystick Assembly

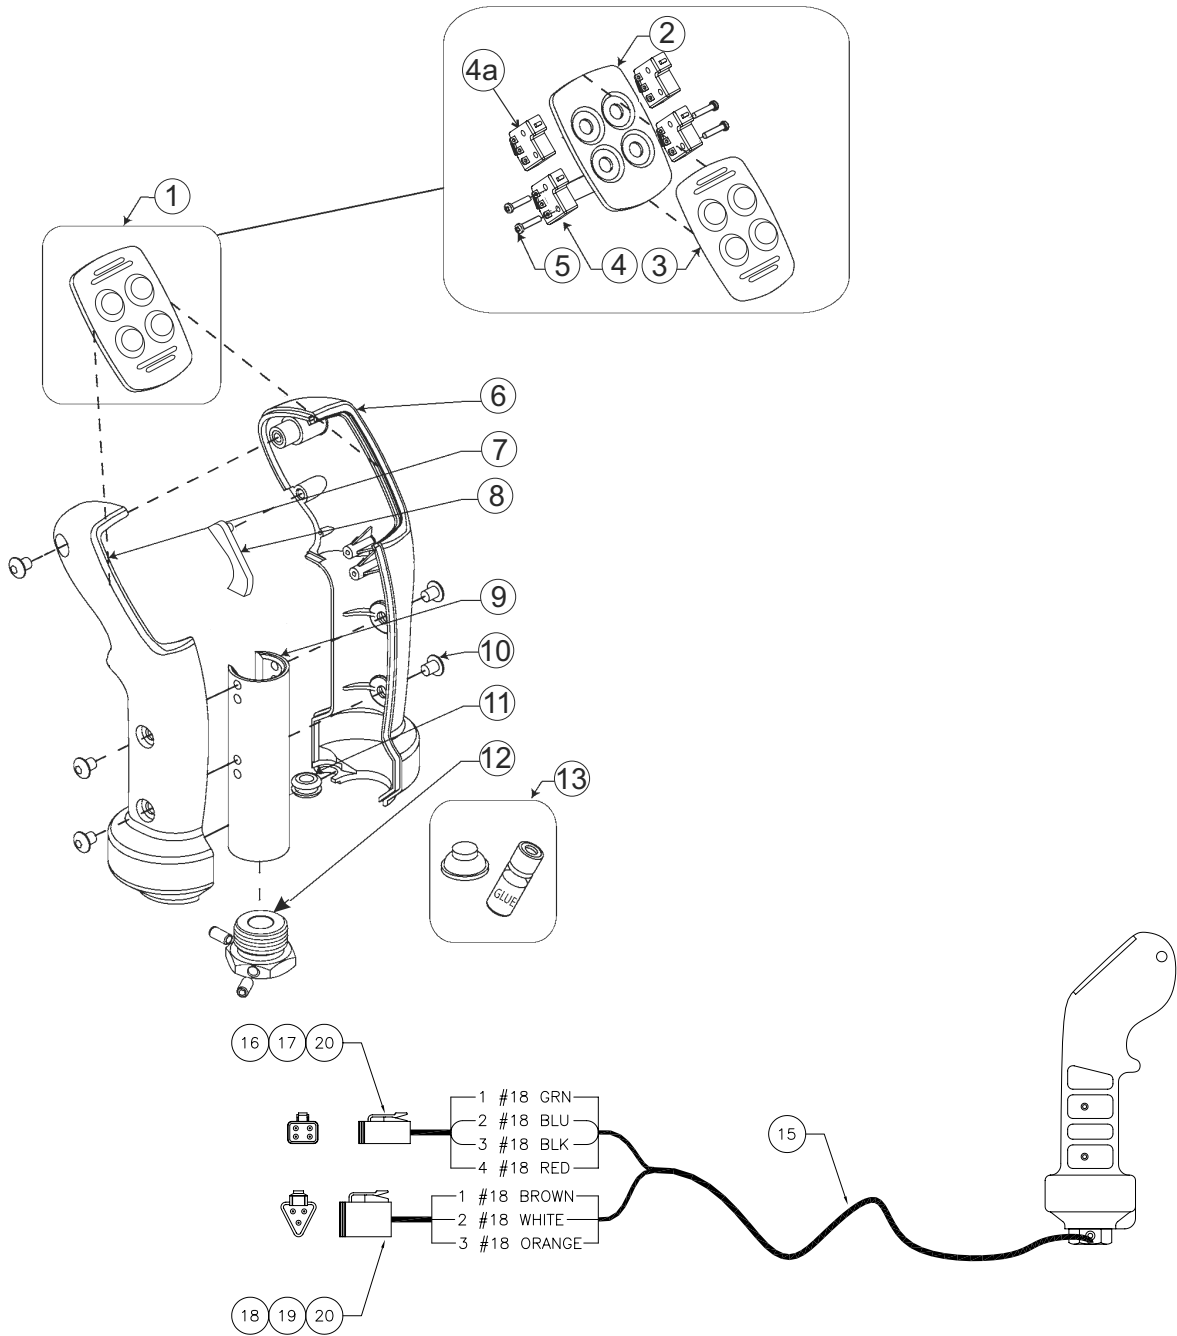

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	580099		Joystick Assembly				
	249305	1	.Handle Assembly, Joystick	10	249909	5	. . . Capscrew
1	250171	1	. . . Faceplate Assy, 4 Button	11	249910	1	. . . Grommet
2	249901	1 Faceplate	12	249911	1	. . . Adapter Bushing
3	250172	1 2 Button Overlay	13	250175	4	. . . Flex Button Repair Kit
4	249903	2 Driver Module	14	250176	3'	. . . Wire
4a	250627	2 Momentary Switch	15	249280	3'	. . . Loom, Woven PET
5	249904	8 Capscrew	16	249154	1	. . . Plug
6	250173	1	. . . Handle Case, Right	17	249155	1	. . . Wedge
7	250174	1	. . . Handle Case, Left	18	243473	1	. . . Plug
8	249907	1	. . . Trigger Insert	19	243508	1	. . . Lock
9	249908	1	. . . Mounting Pin	20	243236	7	. . . Socket