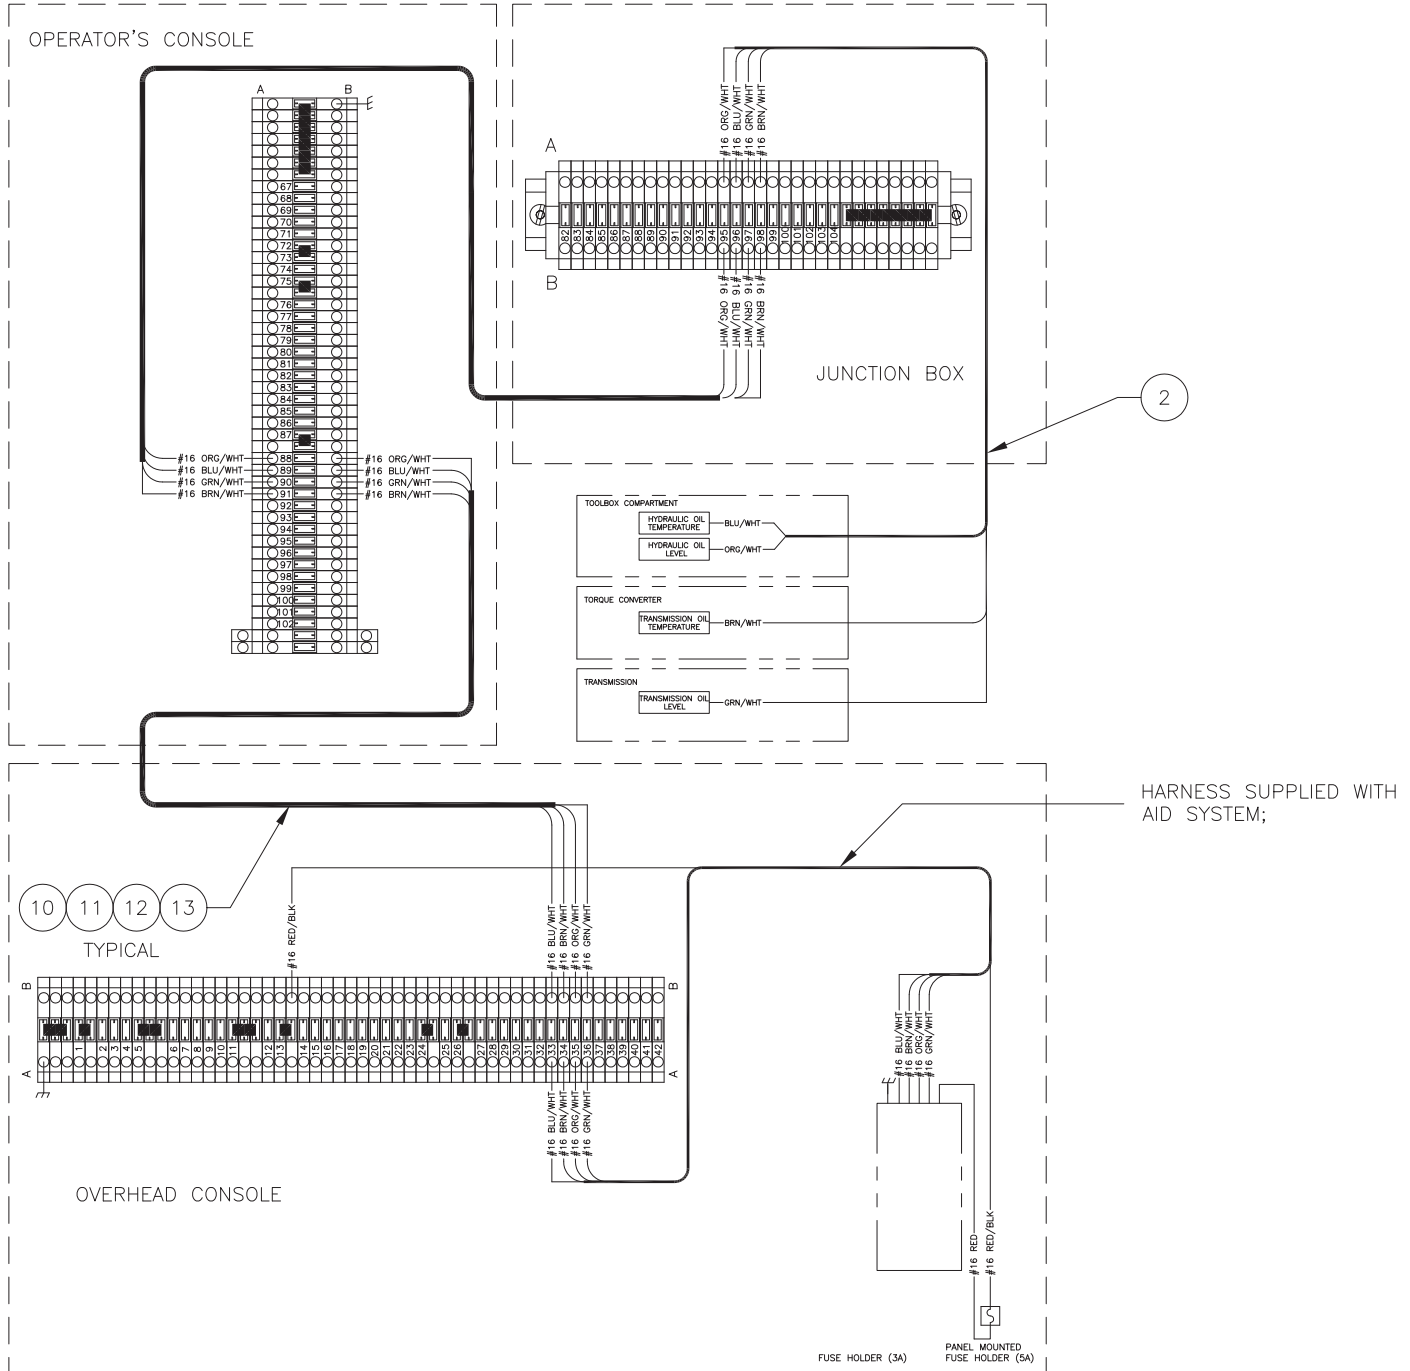
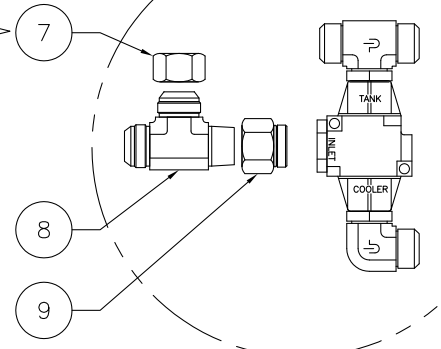
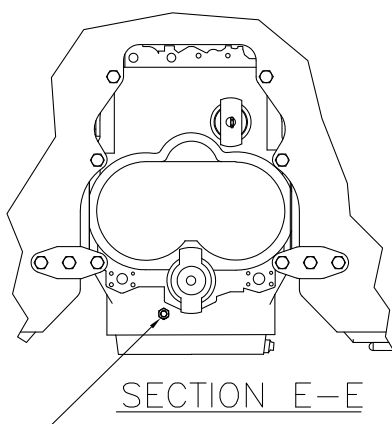
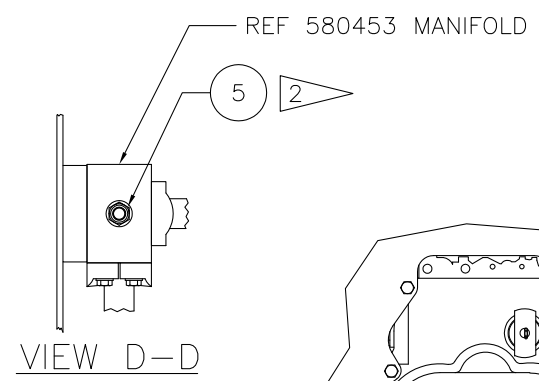
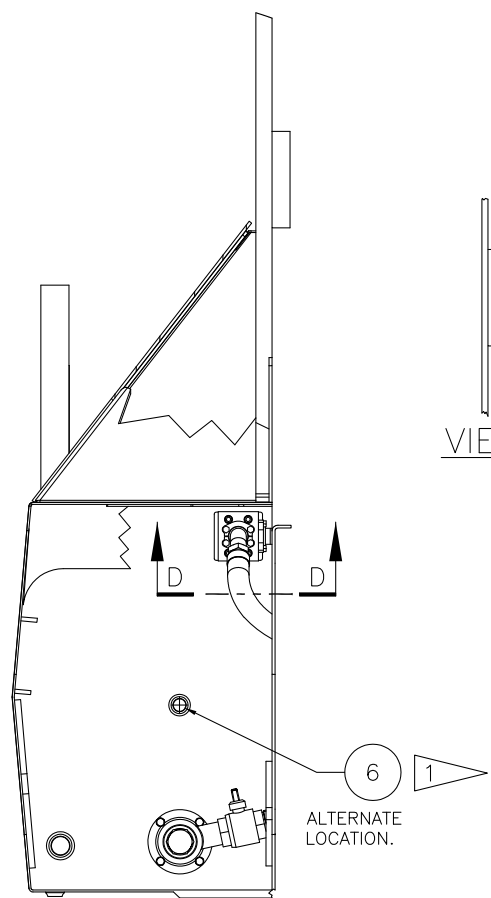
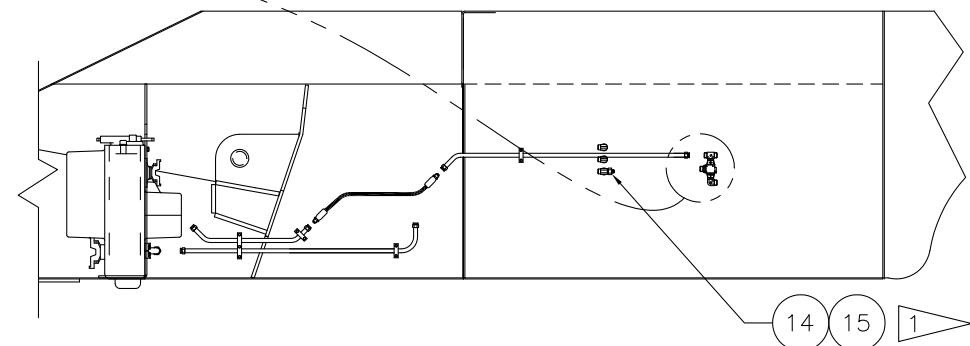
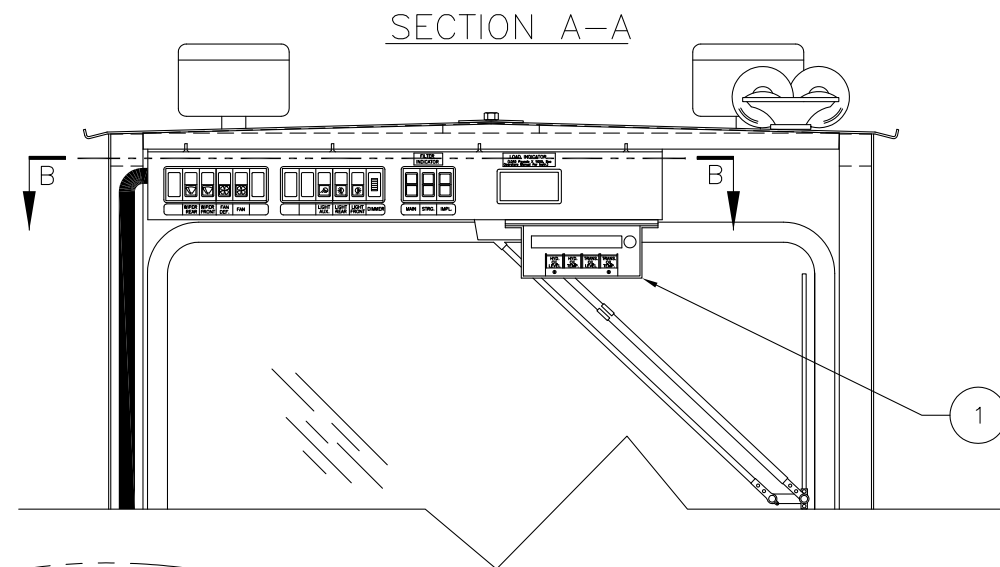
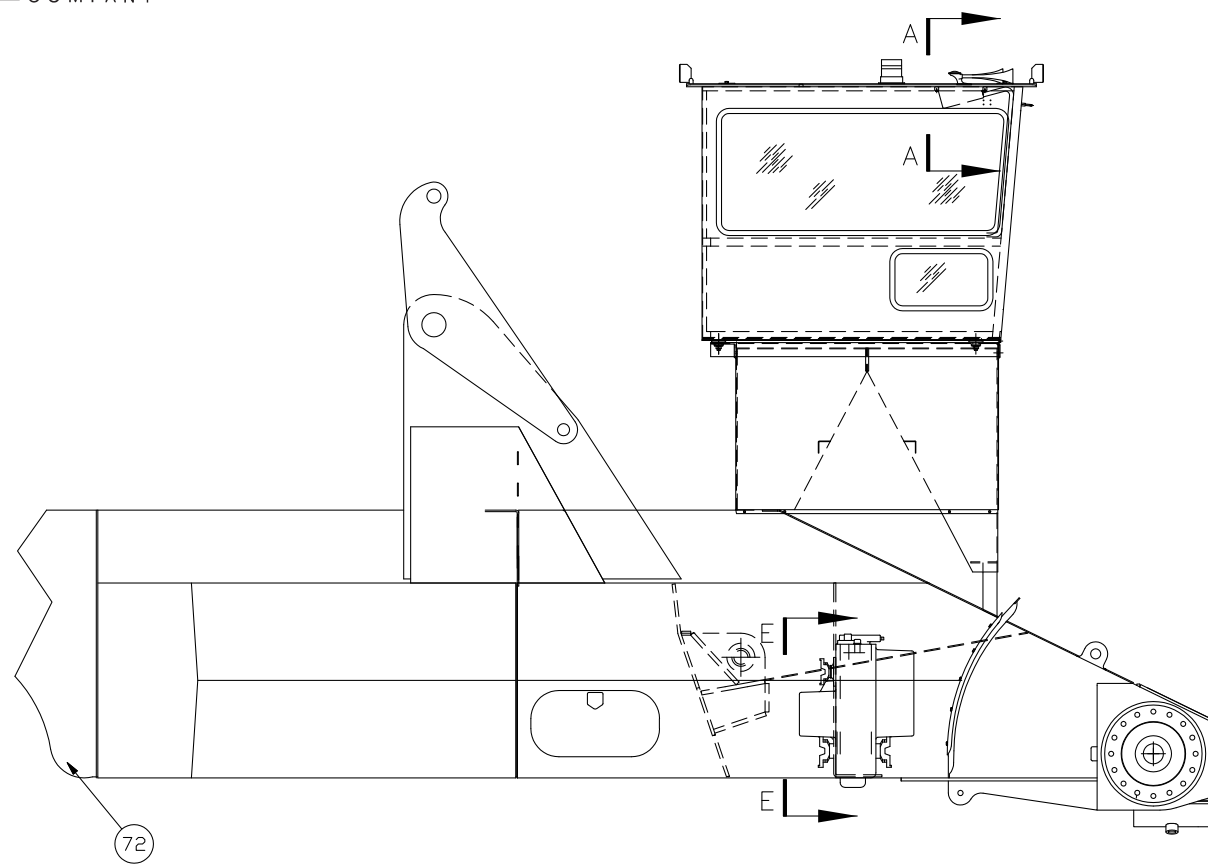

Audio Visual Warning System

Audio Visual Warning System


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	580437		Audio Visual Warning System				
1	249648	1	. Aid System	9	225270	1	. Fitting
2	216103	1	. Fuse Holder	10	231707	15'	. Wire
3	237624	1	. Fuse	11	237627	15'	. Wire
4	580871	1	. Wire Harness	12	219355	15'	. Wire
5	580873	1	. Fitting	13	237628	15'	. Wire
6	221711	1	. Flange	14	586019	1	. Fitting
7	580876	1	. Fitting	15	209141	1	. Fitting
8	222852	1	. Fitting				





NOTES:

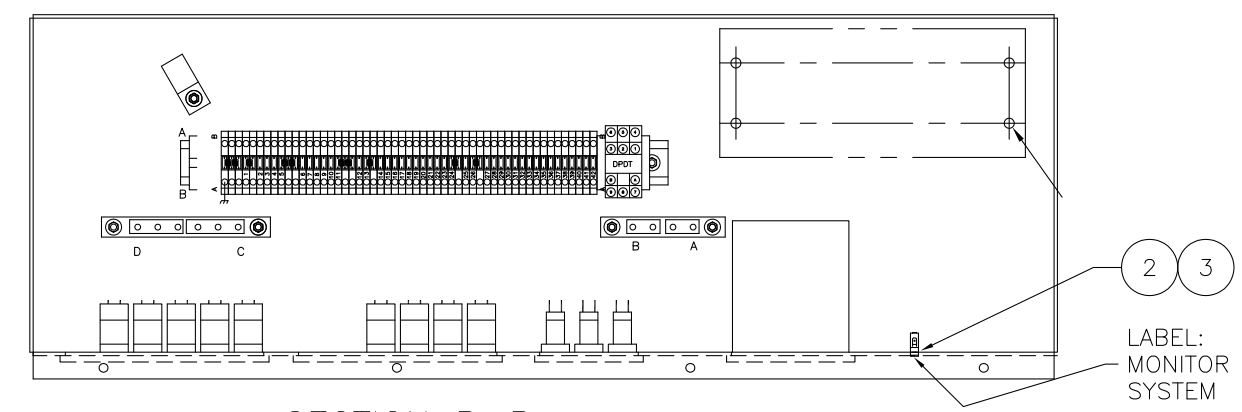- 1 INSTALL ITEM 6 AS SHOWN IF NOT ALREADY IN PLACE ON CHASSIS. INSTALL 1 SPLASH SHIELD AND 1 LEVEL SENSOR SUPPLIED WITH AID SYSTEM; NOTE ALTERNATIVE LOCATION ON RH INTERIOR OF HYDRAULIC TANK.
- 2 INSTALL ITEM 5 IN PLACE OF #12 PLUG ON MANIFOLD. INSTALL 1 TEMPERATURE SENSOR SUPPLIED WITH AID SYSTEM;
- 3 INSTALL ITEMS 7, 8 AND 9 AS SHOWN. INSTALL 1 TEMPERATURE SENSOR SUPPLIED WITH AID SYSTEM;



REMOVE 1" NPT PLUG FROM THIS LOCATION, USE 1" TO 1/2" NPT BLACK PIPE BUSHING
INSTALL 1 SPLASH SHIELD AND 1 LEVEL SENDER SUPPLIED WITH AID SYSTEM;

SECTION C-C

SECTION B-B