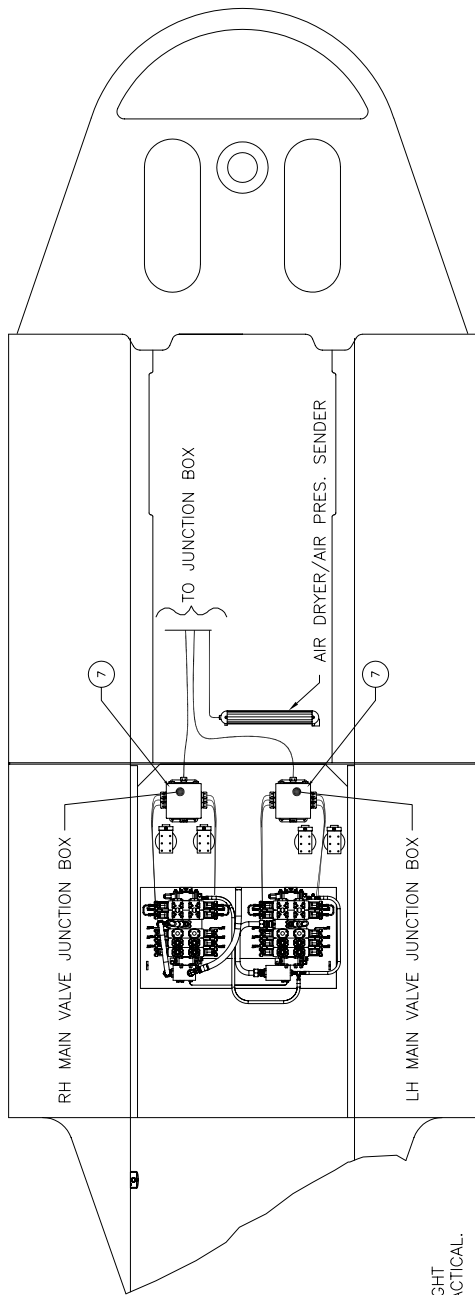

Wiring, Chassis

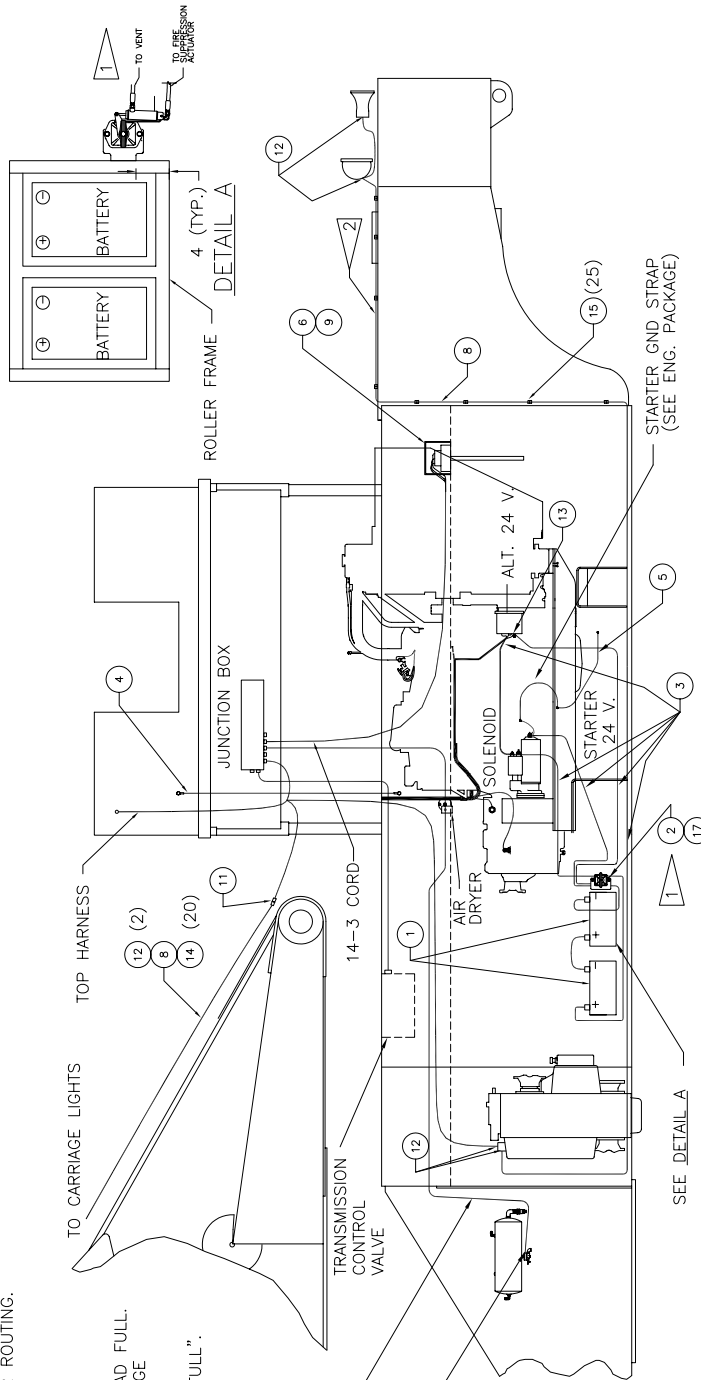


1 SEE FIRE SUPPRESSION SYSTEM ON M/S FOR DETAILS.

2 ROUTE THIS WIRE WITH THE REAR DECK LIGHT WIRES. USE COMMON CLAMPS WHERE PRACTICAL. REFER TO THE LIGHT INSTALLATION--REAR CHASSIS ON THE LIGHTS PARTS LIST FOR ROUTING.

FUEL SENDER -- POTENTIOMETER ADJUSTMENT

1. WHILE UNIT IS OUT OF TANK, TURN BOTH POTENTIOMETERS ON UNIT FULLY CLOCKWISE.
2. TURN IGNITION ON. FUEL GAUGE SHOULD READ FULL.
3. RETARD "E" POTENTIOMETER UNTIL FUEL GAUGE READS "EMPTY".
4. INSERT SENDER INTO TANK AND RETARD "F" POTENTIOMETER UNTIL FUEL GAUGE READS "FULL".



Wiring, Chassis

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	580543		Wiring, Chassis				
1	200220	2	. Battery	12	200248	6	. Terminal Ring
2	249106	1	. Switch, Batt Discnt	13	221181	5	. Boot, Rubber
3	580894	1	. Battery Harness	14	223872	20	. Tie Strap
4	526544	1	. Wire Assembly, Grnd	15	200499	14	. Hose Clamp
5	526535	1	. Wire Assembly, Grnd	16	221963	9	. Terminal
6	560516	1	. Bracket	17	557276	1	. Bracket
7	* 580544	2	. Junction Box Assy, Main Valve	19	200247	1	. Terminal Ring
8	219386	60'	. Wire	20	219410	20'	. Wire
9	230729	1	. Sending Unit				
10	221964	9	. Terminal				
11	221966	1	. Terminal				

* See Separate Coverage