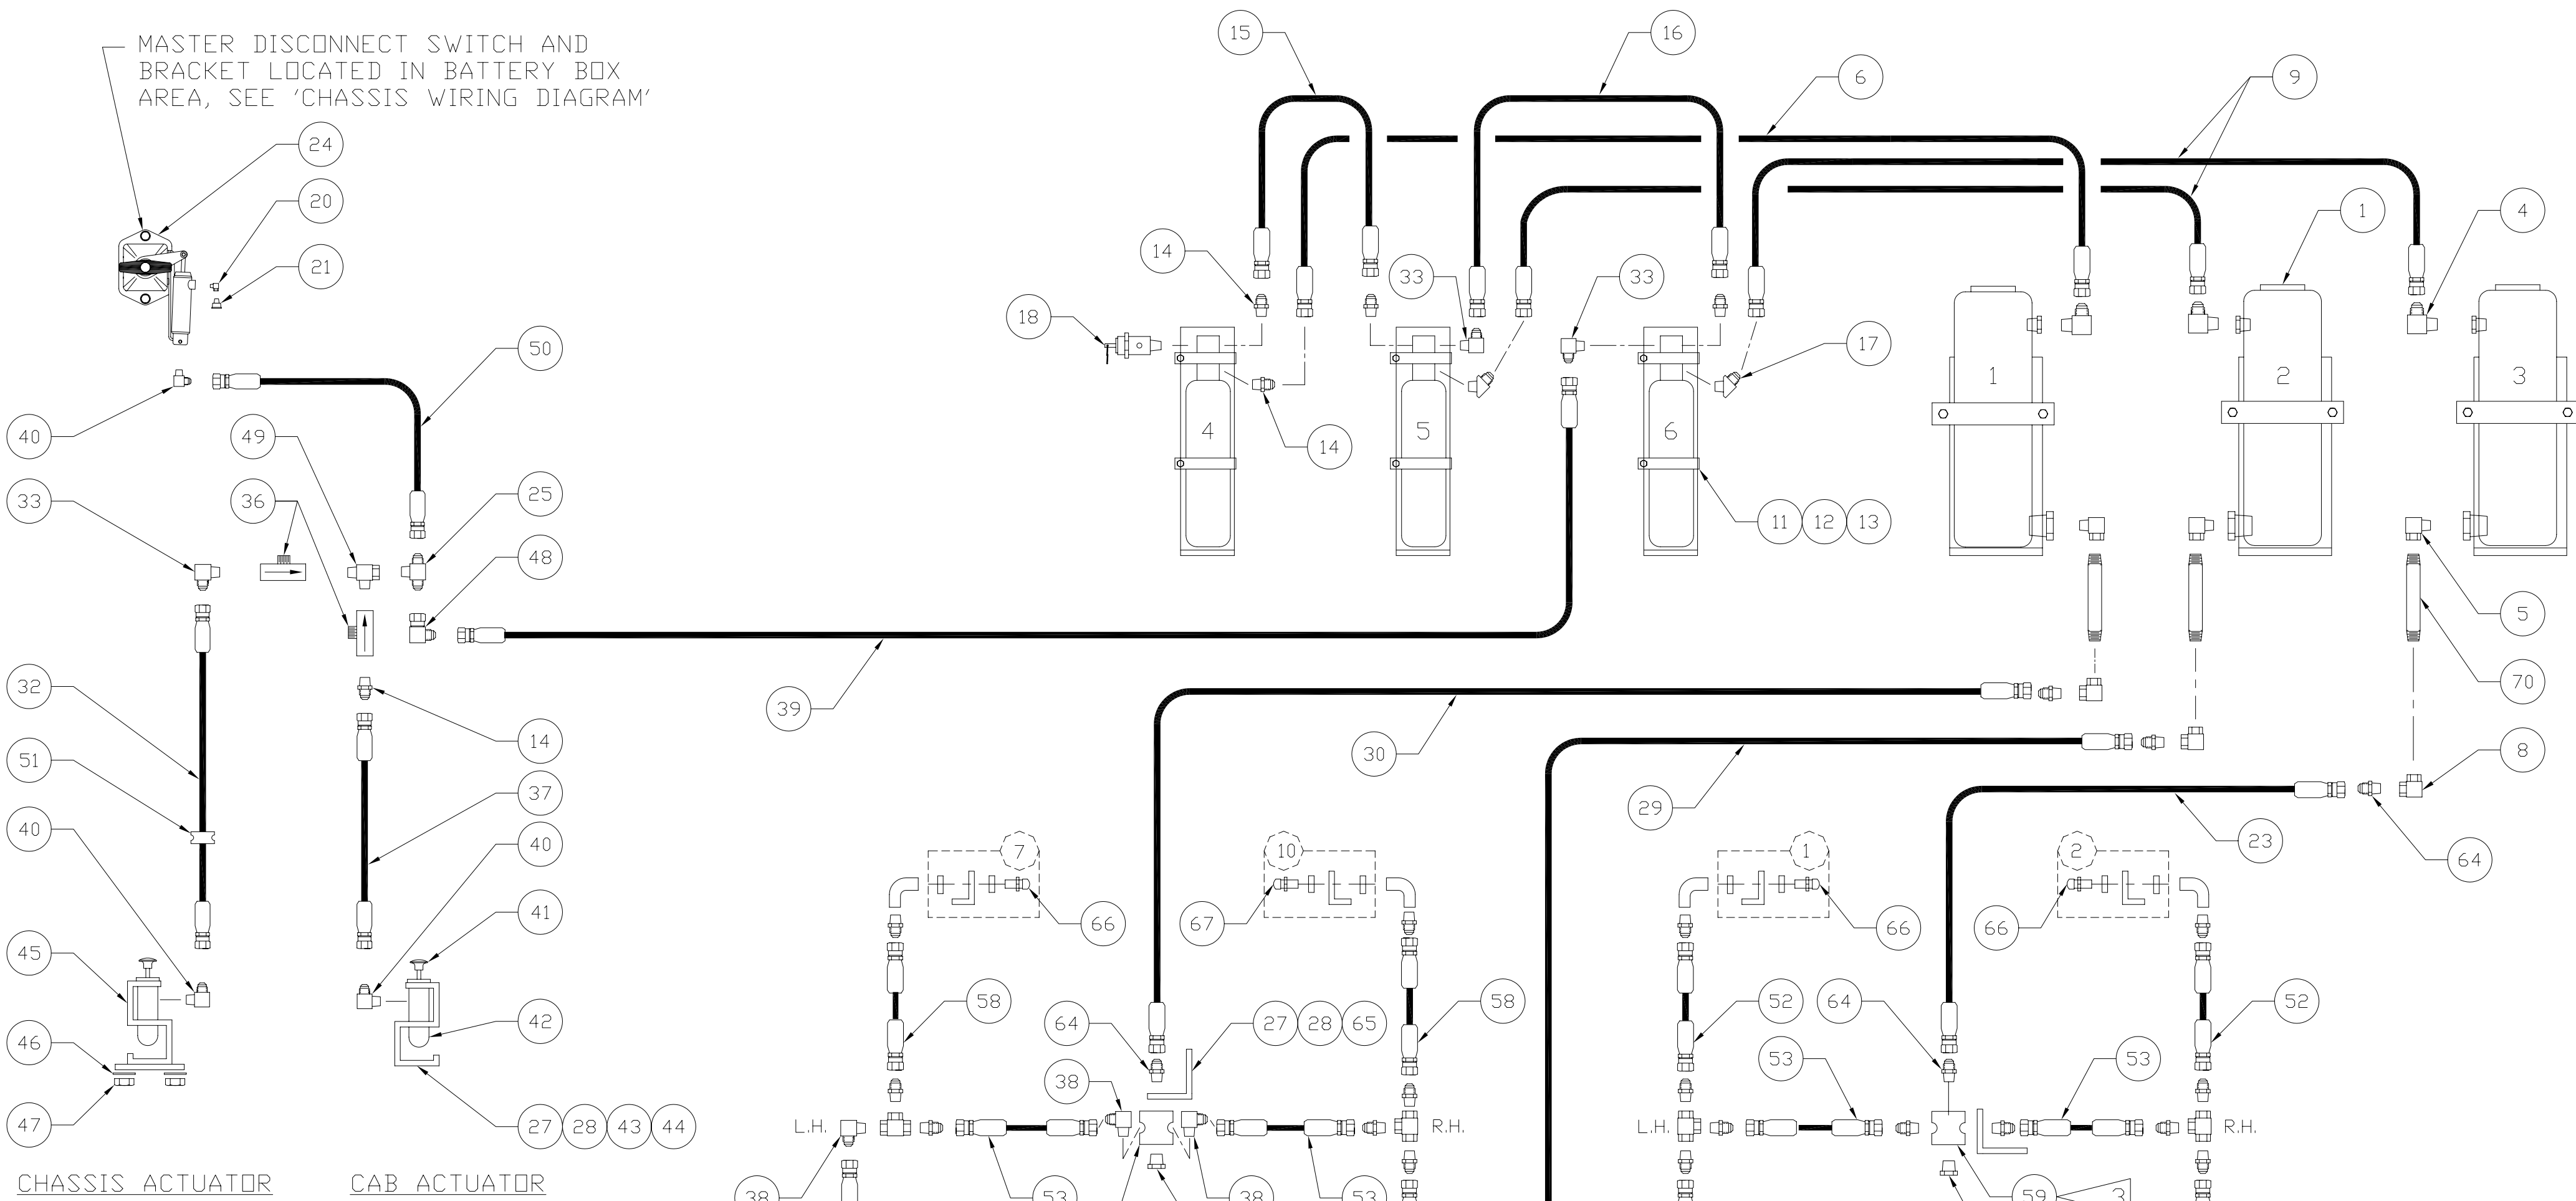

Fire Suppression System

Fire Suppression System

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	580690		Fire Suppression System				
1	248751	3	. Tank, Dry Chem W/Bracket	41	225172	1	. Actuator
4	209920	3	. Fitting	42	225177	1	. Cartridge, Nitrogen
5	250351	3	. Elbow, Street	43	* 578987	1	. Fire Detection System
6	232981	1	. Hose Assembly	44	553781	4	. Tube, Spacer
7	216455	1	. Hose Assembly	45	558723	1	. Plate Weldment, End
8	250352	3	. Elbow, Pipe	46	00103339	4	. Flat Washer
9	216774	2	. Hose Assembly	47	224209	4	. Nut, Esna
11	221961	3	. Cartridge	48	212718	1	. Fitting
12	223041	3	. Bracket, Mtg	49	28331	1	. Fitting
13	223326	3	. Actuator, Pneumatic	50	218857	1	. Hose Assembly
14	209752	5	. Fitting	51	208264	1	. Grommet
15	216460	1	. Hose Assembly	52	225137	4	. Hose Assembly
16	216477	1	. Hose Assembly	53	217252	4	. Hose Assembly
17	209791	2	. Fitting, Ff	54	218703	2	. Hose Assembly
18	218728	1	. Relief Valve	55	219151	1	. Hose Assembly
20	230456	1	. Fitting	56	216782	4	. Hose Assembly
21	210299	1	. Air Cleaner	57	249795	3	. Fitting
23	242164	1	. Hose Assembly	58	217560	2	. Hose Assembly
24	249106	1	. Switch, Batt Discnt	59	224343	3	. Tee, Distribution
25	217482	1	. Fitting	60	209393	33	. Fitting
27	223654	10	. Locknut	61	223168	6	. Fitting
28	201570	10	. Spring Washer	62	00119098	12	. Elbow, Pipe
29	225152	1	. Hose Assembly	64	209759	6	. Fitting
30	225138	1	. Hose Assembly	65	560132	3	. Bracket
32	216472	1	. Hose Assembly	66	225144	6	. Nozzle
33	209406	2	. Fitting	67	225143	6	. Nozzle, Fire Ext
36	226271	2	. Check Valve	68	225250	24	. Lockwasher
37	218315	1	. Hose Assembly	69	218809	12	. Cap, Blow Off
38	209800	3	. Fitting	70	250353	3	. Nipple, Pipe
39	217431	1	. Hose Assembly				
40	209405	2	. Fitting				

* See Separate Coverage

MASTER DISCONNECT SWITCH AND BRACKET LOCATED IN BATTERY BOX AREA, SEE 'CHASSIS WIRING DIAGRAM'



CHASSIS ACTUATOR

CAB ACTUATOR

NOZZLE LOCATION/AIM KEY

①	AIM @ L.H. BTM. REAR OF CONV./PUMP
②	AIM @ R.H. BTM. REAR OF CONV./PUMP
③	AIM @ R.H. TOP OF TRANS. PLATE
④	AIM @ STARTER ON R.H. SIDE OF MOTOR
⑤	AIM @ L.H. TOP PUMP
⑥	AIM @ REAR/TRANS. MOUNTED ON R.H.
⑦	AIM @ L.H. BTM. OF MOTOR
⑧	AIM @ R.H. TOP OF VALVE COVER
⑨	AIM @ L.H. TOP OF VALVE COVER
⑩	AIM @ R.H. BTM. OF MOTOR
⑪	AIM @ L.H. TOP OF TRANS. PLATE
⑫	AIM @ OIL FILTER L.H. SIDE OF MOTOR

