


Air Valve Module

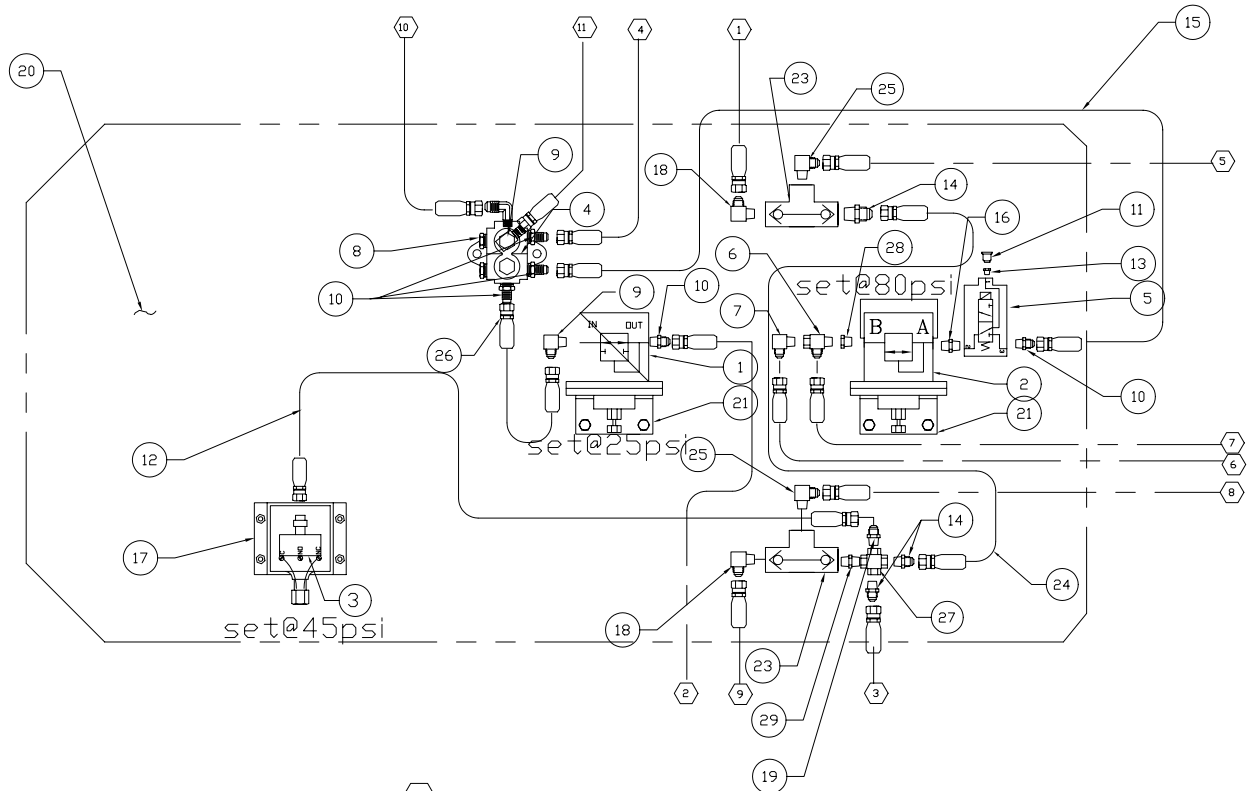

- ① TO LEFT BRAKE BUTTON
- ② TO BRAKE BUTTONS(SUPPLY)
- ③ FROM TREADLE VALVE
- ④ TO PARK BRAKE SWITCH ON PANEL
- ⑤ TO LEFT RELAY
- ⑥ CONNECT TO SEAT
- ⑦ CONNECT TO PILOT CONTROLS
- ⑧ TO RIGHT RELAY
- ⑨ TO RIGHT BRAKE BUTTON
- ⑩ TO SUPPLY PRESSURE/AIR TANK
- ⑪ TO TREADLE VALVE

FOR THOSE UNITS WITH OPTIONAL JAKE BRAKE, DELETE ITEM 7 AND INSTALL P/N 214001 INSTEAD.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
580823 Air Valve Module							
1	* 201358	1	. Valve	17	541732	1	. Bracket
2	* 201352	1	. Valve	18	209920	2	. Fitting
3	219150	1	. Switch, Pressure	19	209391	1	. Fitting
4	207902	1	. Manifold	20	577578	1	. Plate, Air Valve
5	* 239444	1	. Valve	21	545588	2	. Bracket
6	209952	1	. Fitting	23	207921	2	. Valve, Shuttle
7	209317	1	. Fitting	24	219398	1	. Hose Assembly
8	209512	5	. Fitting	25	209397	2	. Fitting
9	209394	2	. Fitting	26	216471	1	. Hose Assembly
10	209921	4	. Fitting	27	209497	1	. Fitting
11	210299	1	. Air Cleaner	28	229944	1	. Fitting
12	217146	1	. Hose Assembly	29	217494	1	. Fitting
13	209500	1	. Fitting				
14	209392	3	. Fitting				
16	222321	1	. Fitting				

* See Separate Coverage