


Tailwheel Indicator Installation

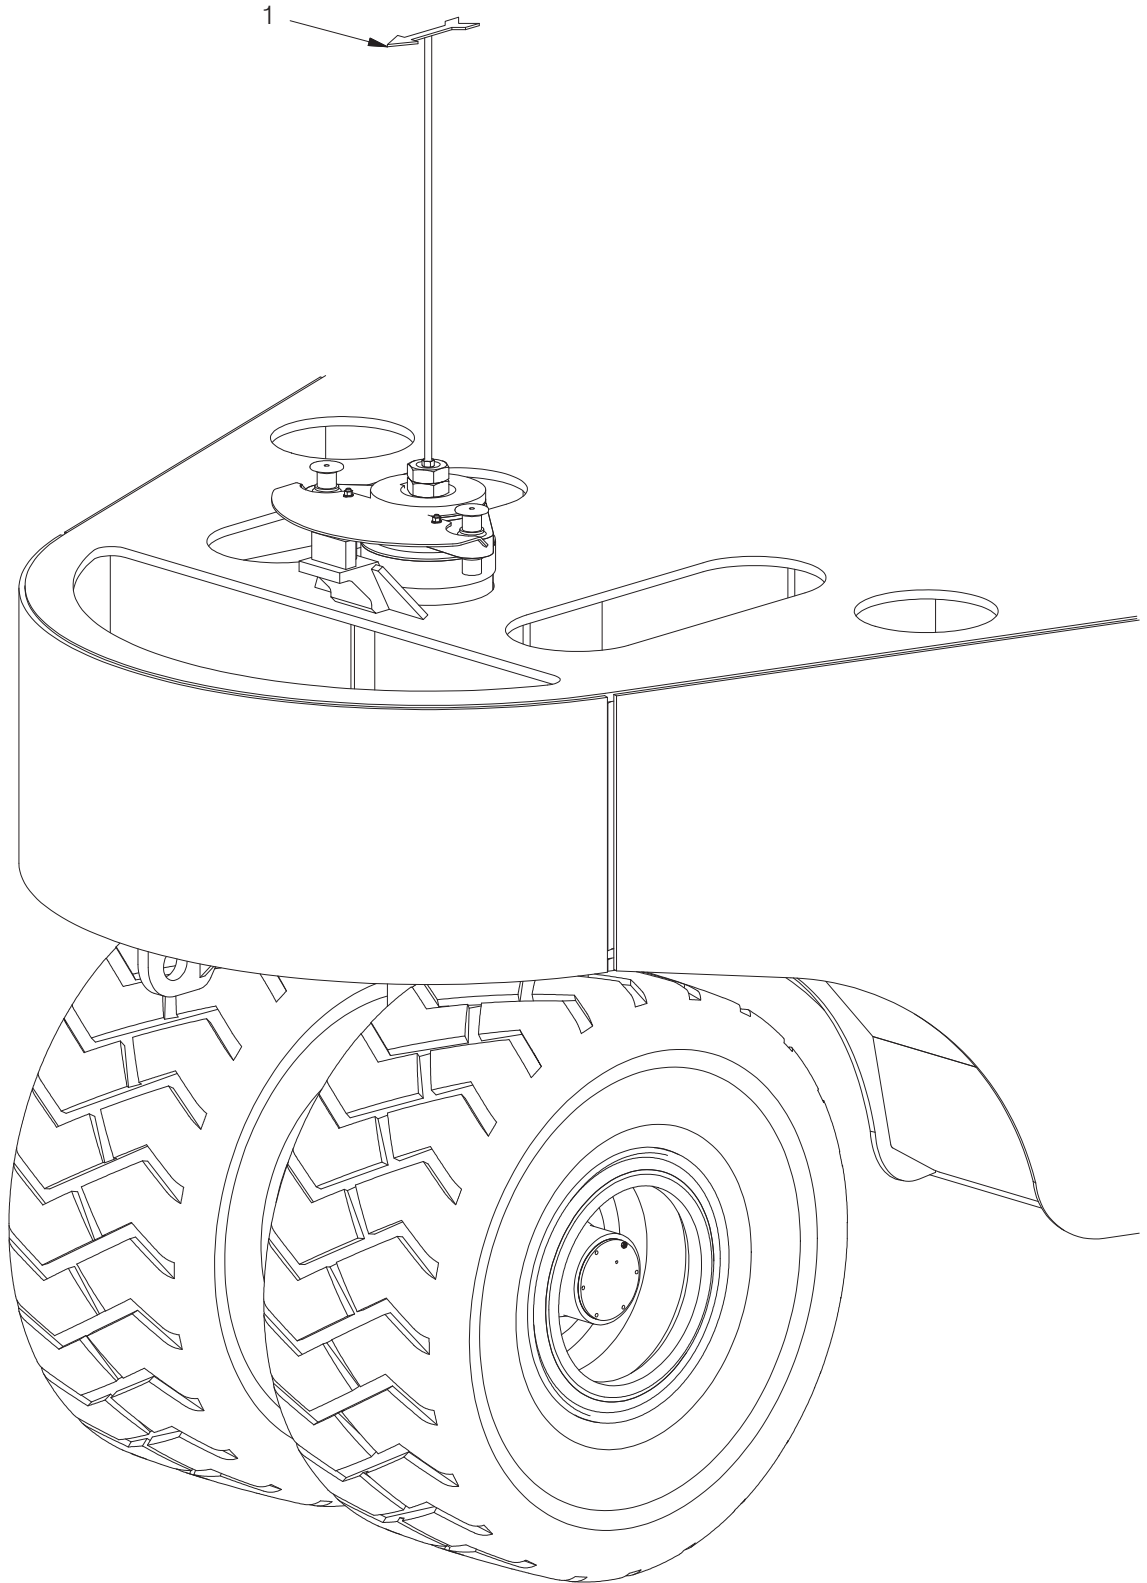

| Item | Part No. | Qty | Description | Item | Part No. | Qty | Description |
|------|----------|-----|-------------|------|----------|-----|-------------|
|------|----------|-----|-------------|------|----------|-----|-------------|

| | | | | | | | |
|---|----------|---|---|--|--|--|--|
| 1 | * 584958 | 1 | Tailwheel Indicator Installation | | | | |
| | 584959 | | . Tailwheel Indicator | | | | |

* Note: This Tailwheel Indicator supersedes the Tailwheel Indicator called out on the Tailpost Installation page.