


Handle, Joystick, 2 Button, 1 Rocker

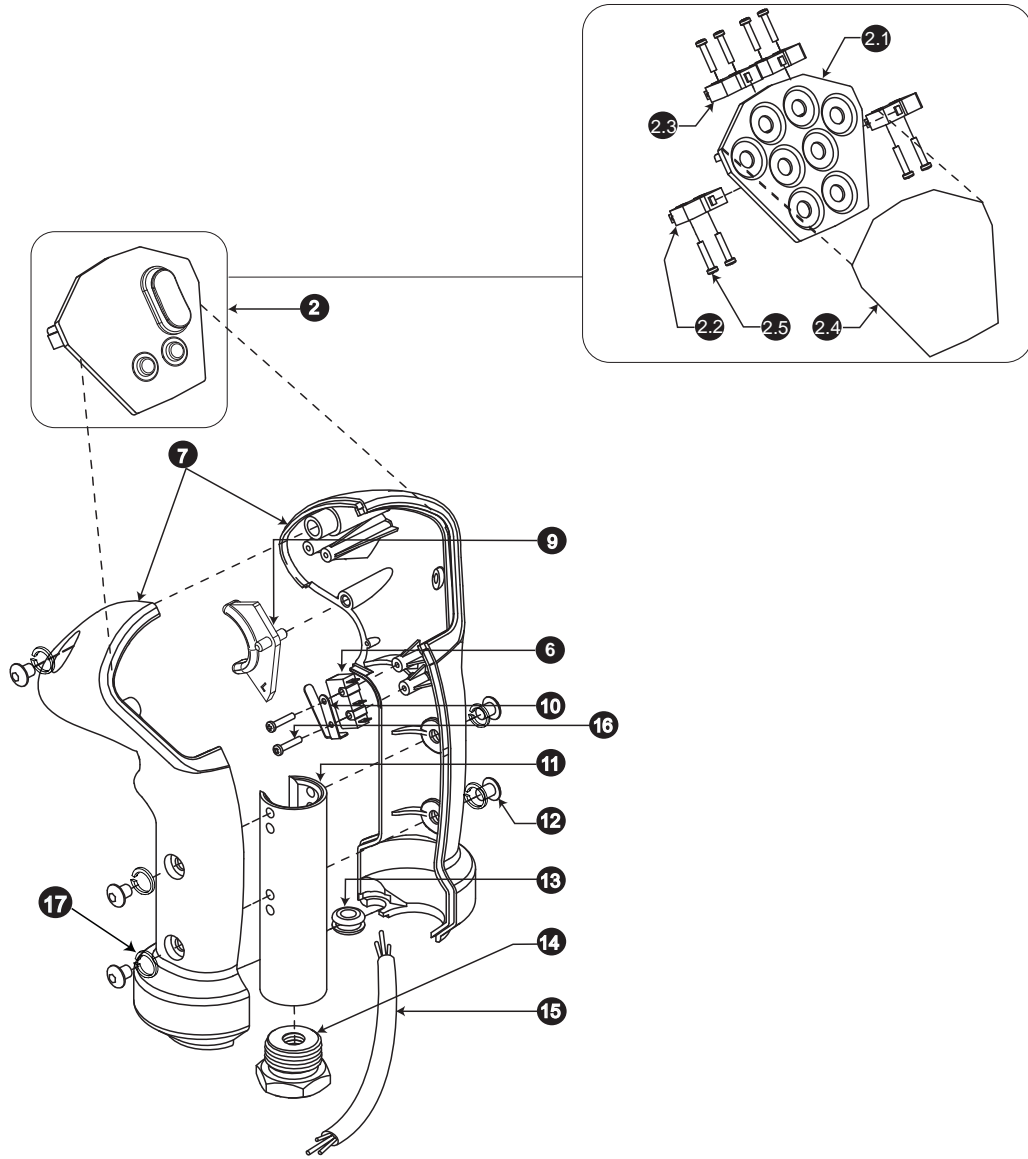

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
Handle, Joystick, 2 Button, 1 Rocker							
2	596639	1	. Switch Pack Assembly	11	NSS	1	. Mounting Pin
2.1	N S S	1	.. Empty Faceplate	12	256874	5	. Capscrew
2.2	250627	3	.. Switch	13	249910	1	. Grommet
2.3	596640	1	.. Rocker Switch	14	593476	1	. Adapter Bushing
2.4	N S S	1	.. Button Overlay	15	593521	1	. Wire Harness
2.5	249904	6	.. Screws	16	253037	2	. Screws, Trigger Switch
6	250627	1	. Switch	17	256875	5	. Washer, Lock
7	593475	1	. Handle Case, Black				
9	588944	1	. Single Trigger, Black				
10	253042	1	. Leaf Spring For Trigger				
					NSS		Not sold separately