

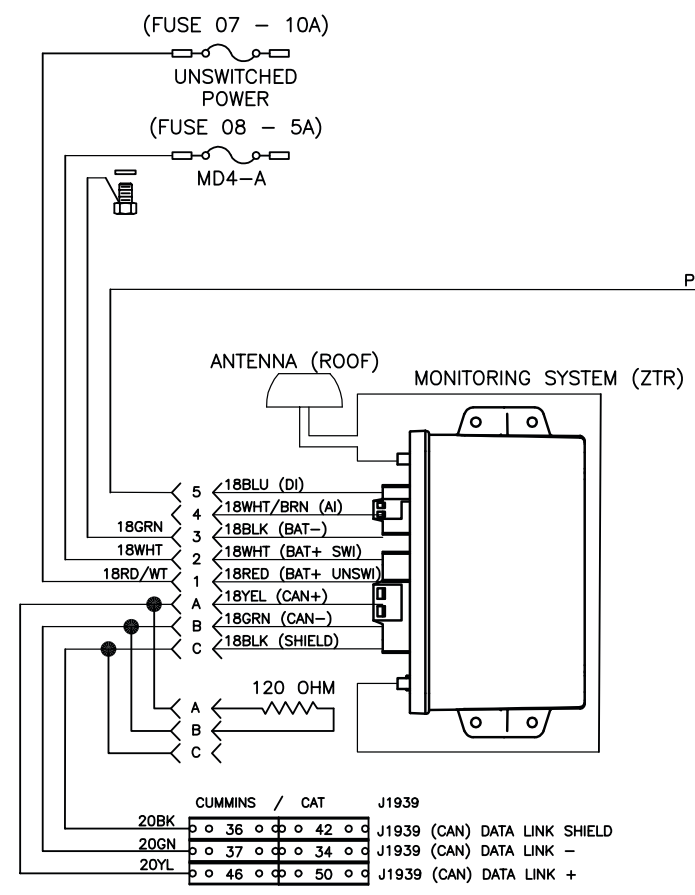



ENGINE

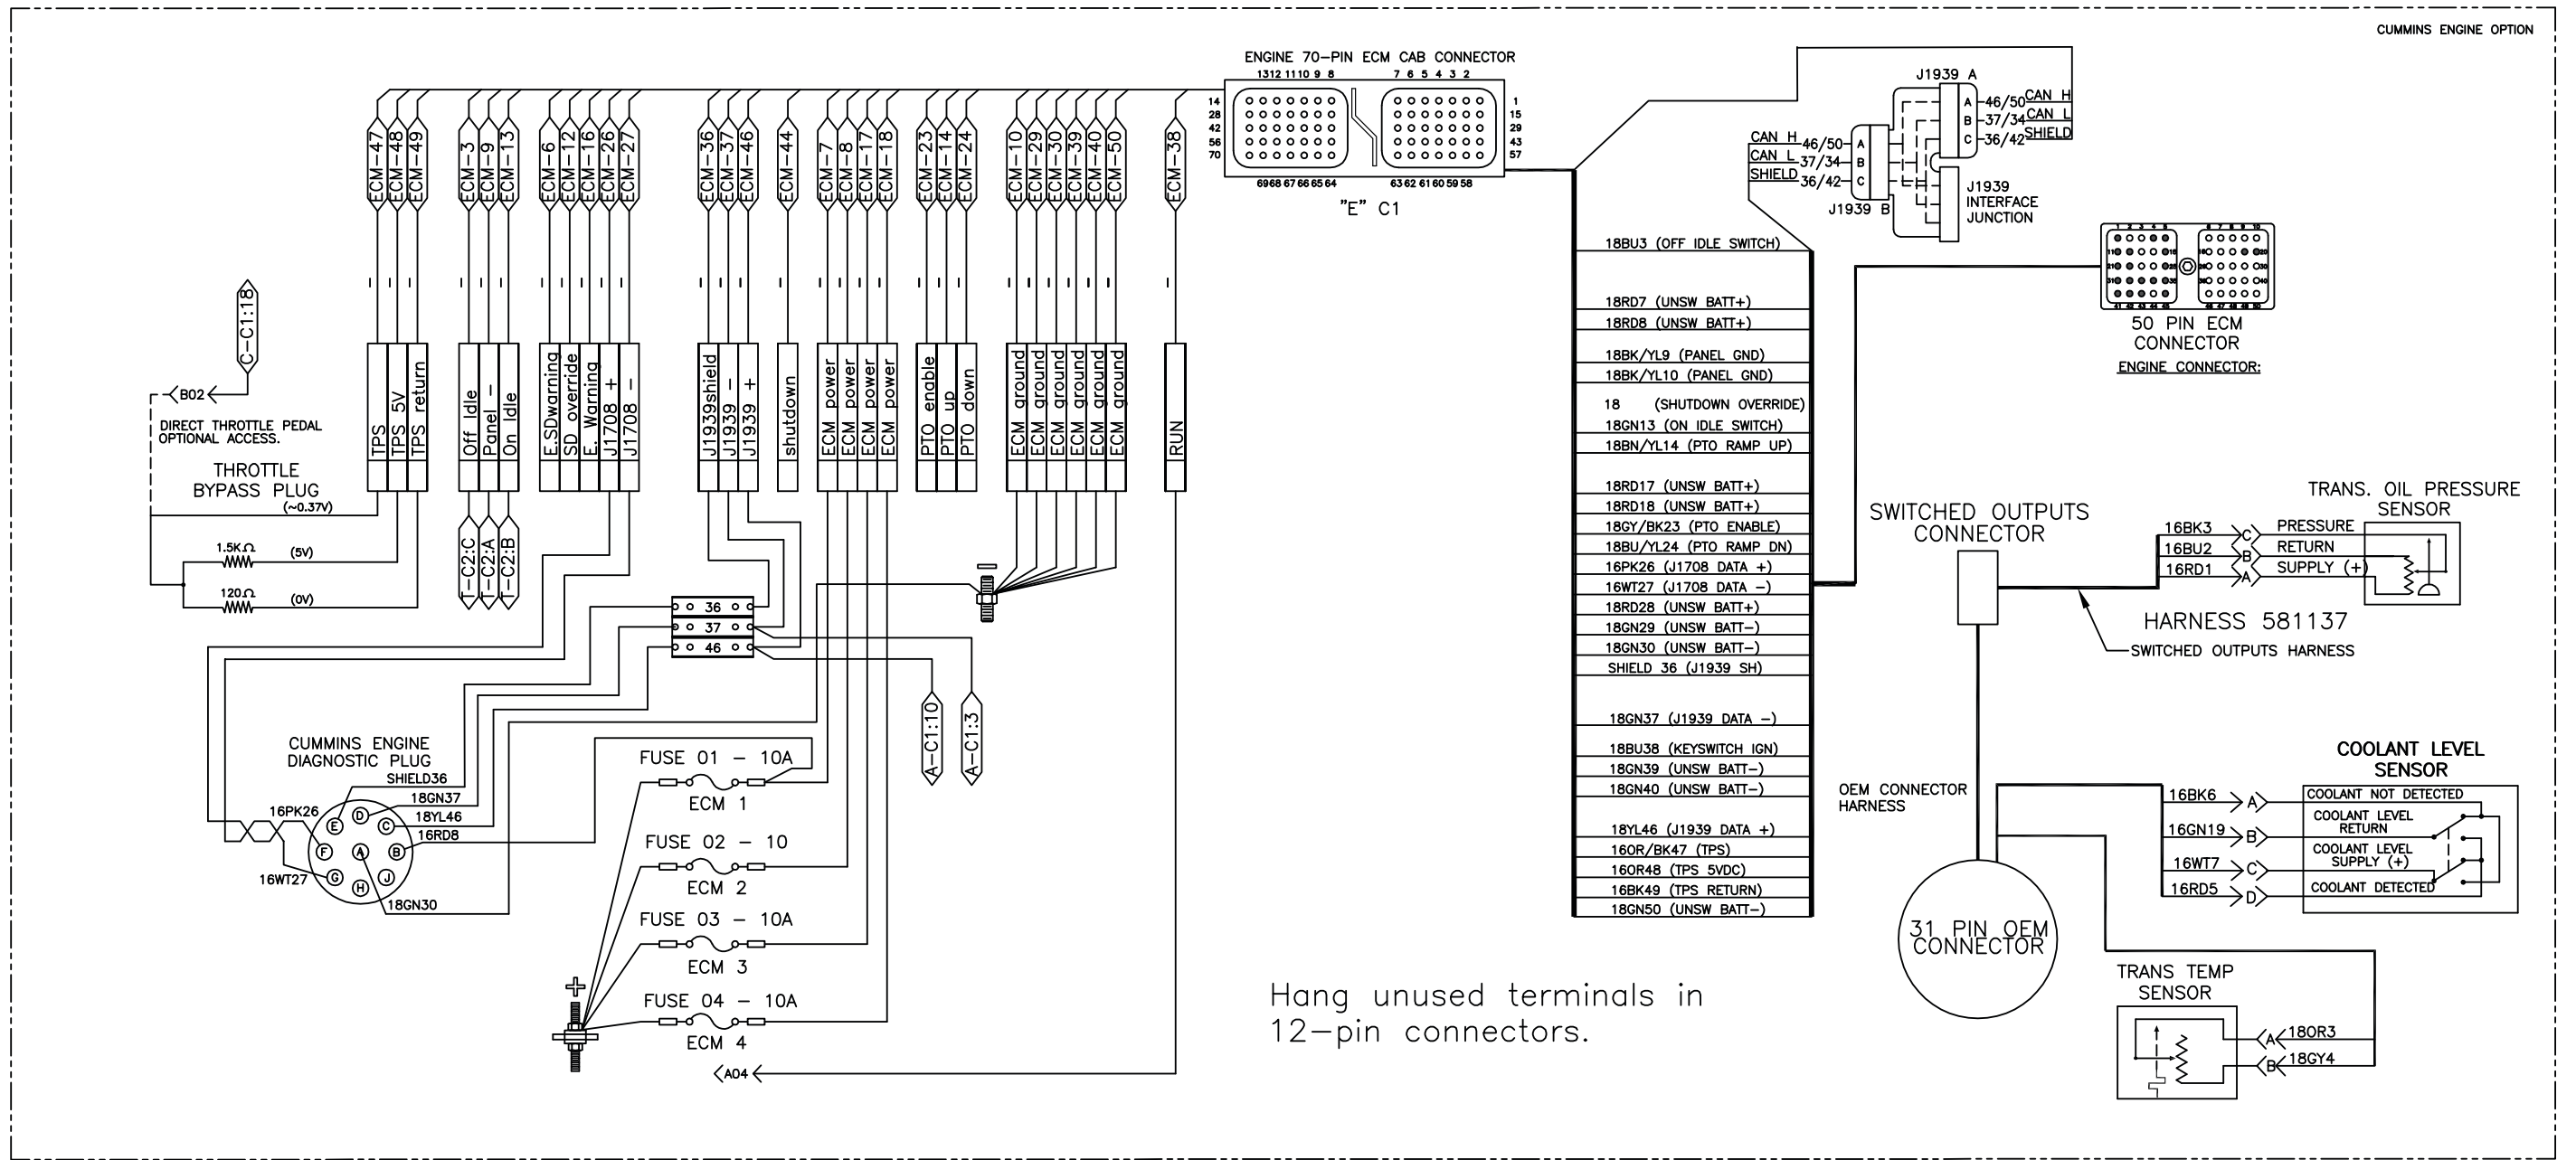


RELAY PANEL

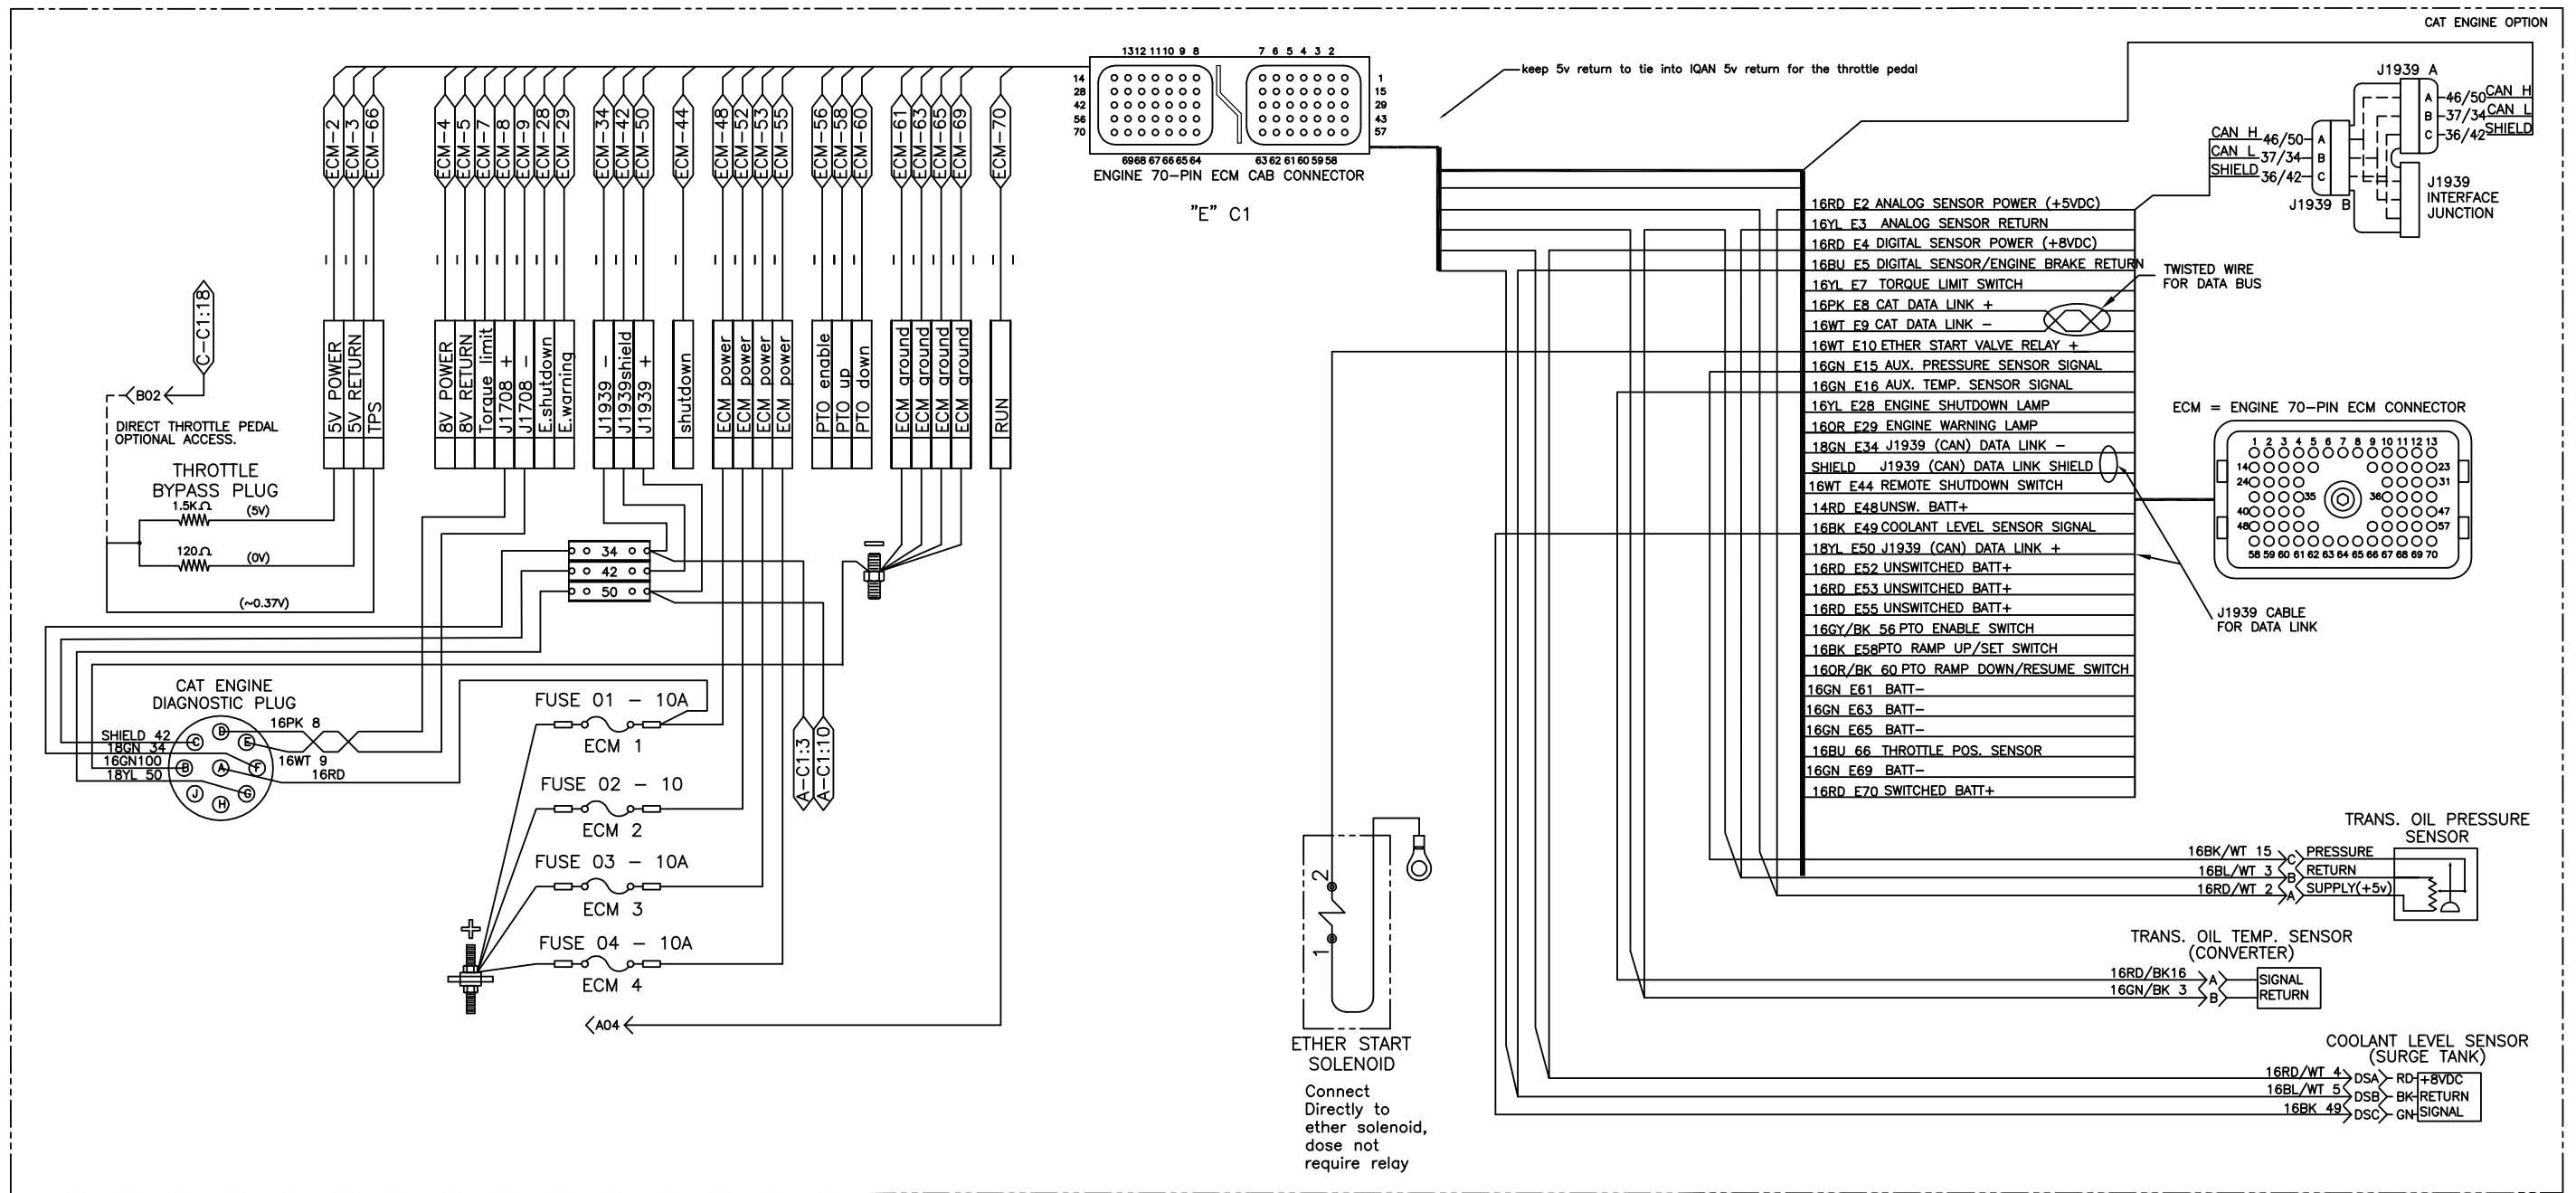

CB PANEL / BULKHEAD

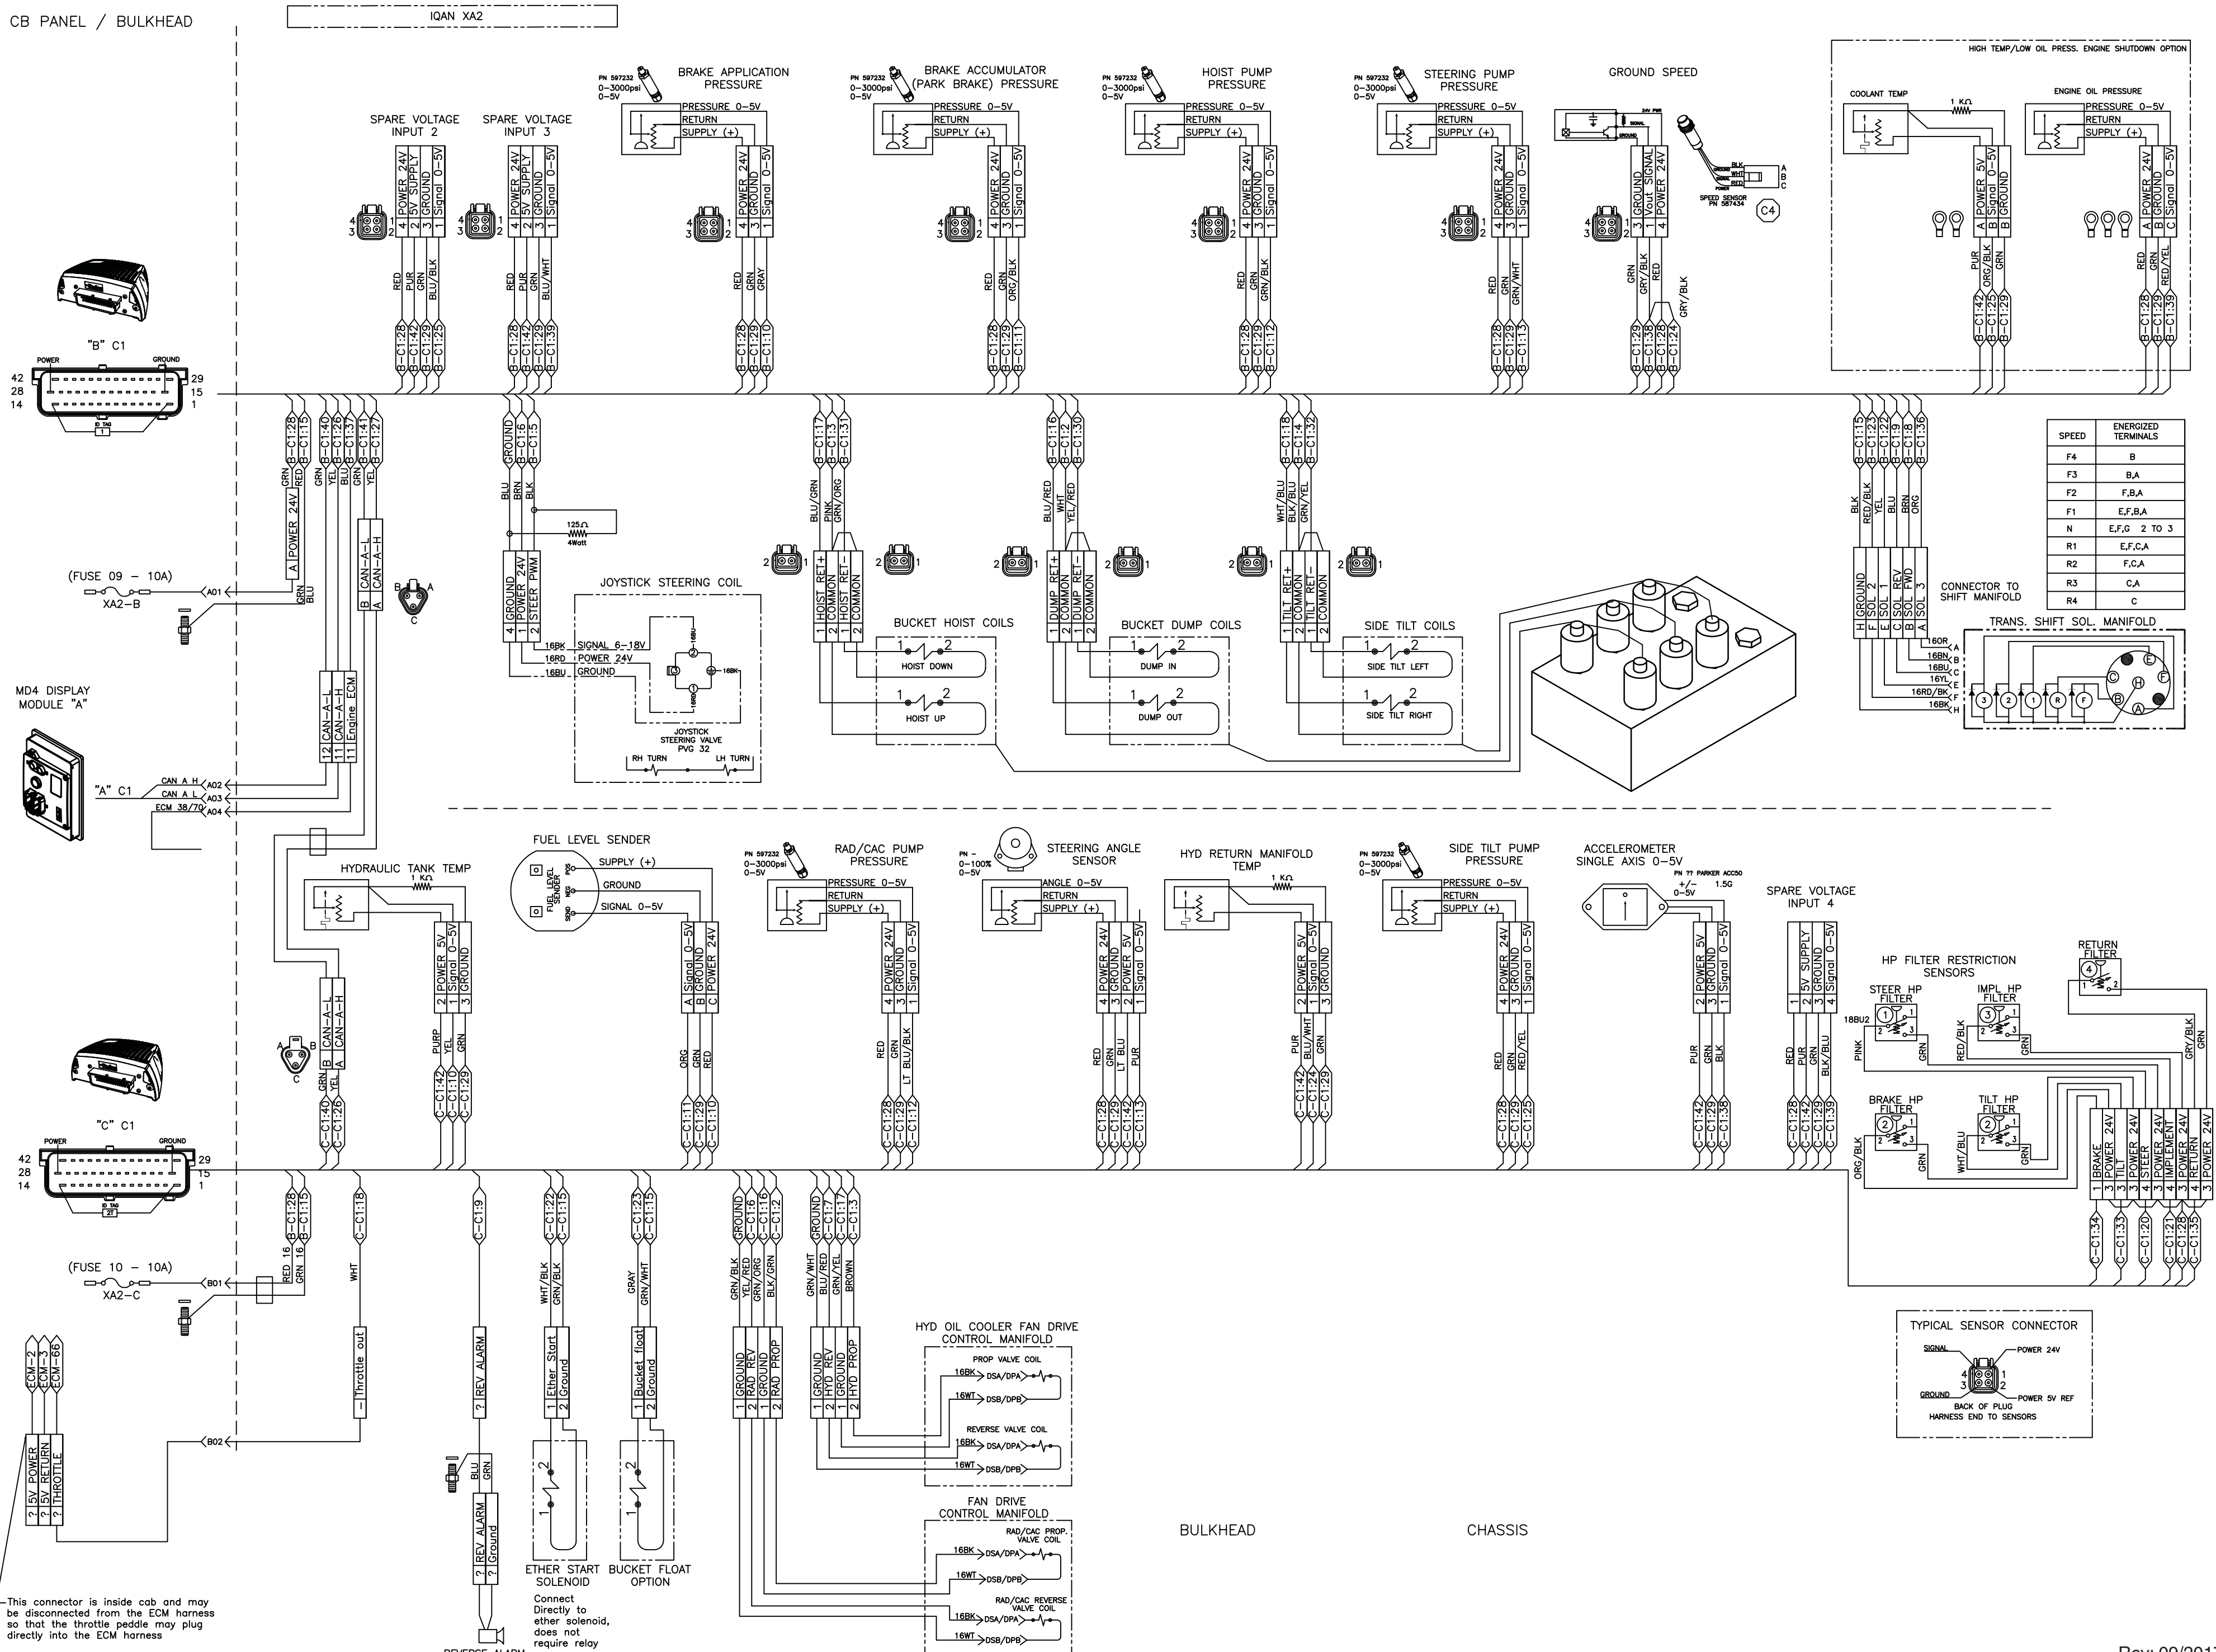

SPEED	ENERGIZED TERMINALS
F4	B
F3	B,A
F2	F,B,A
F1	E,F,B,A
N	E,F,G 2 TO 3
R1	E,F,C,A
R2	F,C,A
R3	C,A
R4	C

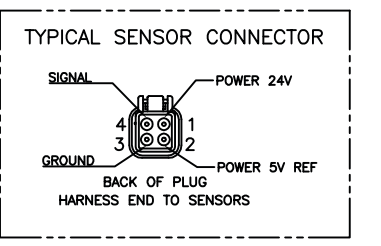

This connector is inside cab and may be disconnected from the ECM harness so that the throttle peddle may plug directly into the ECM harness

REVERSE ALARM
Connect Directly to ether solenoid, does not require relay

