
Auto Lube System, Boom

Auto Lube System, Boom

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
598768 Auto Lube System, Boom							
3.1	* 592591	1	. Distribution Block, 8 Port	3.11	231296	3	. Clamp
3.2	* 592528	4	. Metering Unit No. 9	3.16	231251	1	. Clamp
3.3	* 592527	2	. Metering Unit No. 8	3.17	230918	2	. Fitting
3.4	* 592554	1	. Plug, Twin Metering	3.99	598779	1	. Kit, Hose
3.5	* 592583	1	. Switch, Pressure	3.99.1	21673	1	.. Hose Assembly
3.6	229551	4	. Fitting	3.99.2	598774	2	.. Hose Assembly
3.7	293797W	2	. Capscrew	3.99.3	238186	1	.. Hose Assembly
3.8	209750	10	. Fitting	3.99.4	237910	2	.. Hose Assembly
3.9	231248	7	. Clamp	3.99.5	28973	1	.. Hose Assembly
3.10	231249	1	. Clamp	3.99.6	233887	1	.. Hose Assembly

* Not included with 598768. Included in Auto Lube Kit. See Separate Coverage for the contents of that kit.


NOTES:

1. PRIME ALL METERED LUBRICATION LINES PRIOR TO FINAL ASSEMBLY WITH THE DISTRIBUTION BLOCKS. THIS WILL GREATLY SHORTEN THE TIME NECESSARY TO REMOVE AIR AND DEBRIS FROM THE LINES. ENSURE ALL GREASE LINES ARE FREE OF DEBRIS.


2. INTER SUB-SYSTEM CONNECTIONS ARE IDENTIFIED AS SINGLE LETTER MARKERS. THESE CONNECTIONS ARE MADE AS A TO A, B TO B, ETC...

3. USE SPIRAL WRAP TO WRAP HOSES AT PASS THROUGHS AND ANYWHERE THERE MAY BE POTENTIAL FRICTION.

BOOM ROUTING	
ROUTE	TO
B1	RH BOOM TO CHASSIS PIVOT
B2	LH BOOM TO CHASSIS PIVOT
B3	RH BOOM TO CARR PIVOT
B4	RH HOIST CYL STEM PIVOT
B5	LH BOOM TO CARR PIVOT
B6	LH HOIST CYL STEM PIVOT

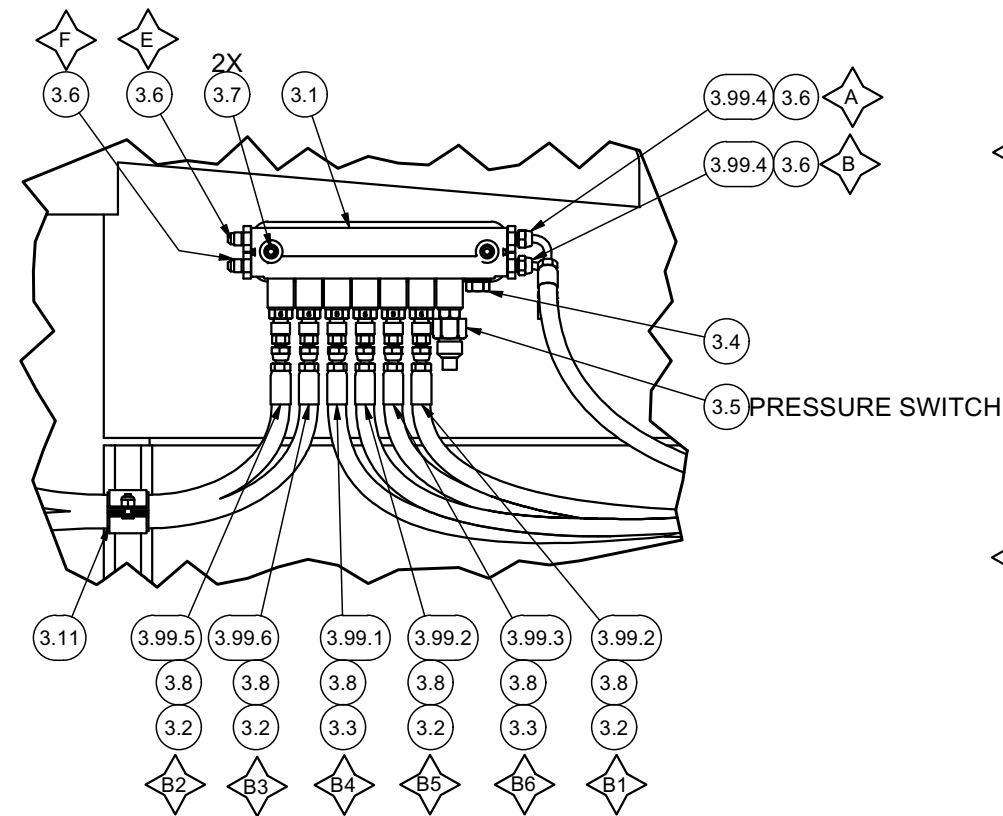

DETAIL 13W13
BOOM GREASE DISTRIBUTION MANIFOLD

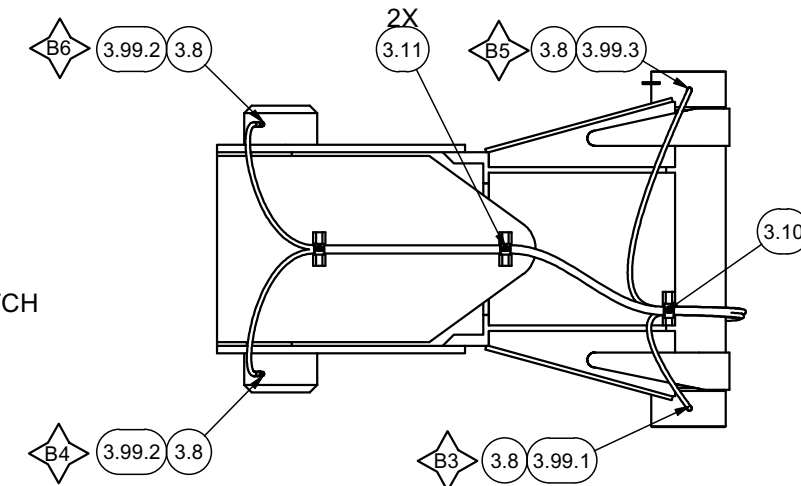

SECTION 13V13-13V13
VIEW ROTATED FOR CLARITY

