



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 21-Jun-11

REVISED: 16-Aug-11

Revision Level : #5

PAGE: 1 of 5

MODEL: L90S

SERIAL NO: 039323

GENERAL INFORMATION

SECTION 1

1-1	General
-----	Master Check Sheets
80-035	How to Read Your Master Check Sheet
800137	Alphabetical Index
80-007A	Procedure For Ordering Parts (WAGNER)
1-2	Operation
586418	Decal Location / Finish List

POWER UNIT

SECTION 2

2-1	Engine
586403	Power Unit
258748	Engine
	Serial Number: JRE 11889
	Perf. Spec.: OK-4921
	Arrangement Number: 241-0020
2-4	Fuel
558024	Fuel System Plumbing
2-5	Air Intake & Exhaust
586405	Exhaust Installtion
586404	Air Cleaner Installation
258700	Air Cleaner Assembly
2-6	Cooling
586893	Radiator Assembly
258749	Radiator/CAC Assembly
249984	Cooler, Transmission

DRIVETRAIN

SECTION 3

3-1	General
580948	Driveline Installation

* Backordered



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 21-Jun-11

REVISED: 16-Aug-11

Revision Level : #5

PAGE: 2 of 5

MODEL: L90S

SERIAL NO: 039323

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
586421	Transmission Circuit
580386	Transmission Installation
578293	Shift Valve, 24V
257100	Kit, Flexplate; 16" W/Driveplate
256295	Converter
244179	Transmission
3-3	Drivelines
249025	Driveline Assembly
249020	Driveline Assembly
3-4	Axles
586407	Axle W/Wet Disc Brakes
584897	Disc Brake, Wet
580700	Differential & Carrier
577696	Tailfork Installation
577281	Parking Brake Installation
249162	Wheel End & Differential Carrier
211953	Planet Carrier Assembly
3-5	Wheels & Tires
586424	Wheels and Tires
	Rear Tires: 23 X 5R 25, Bridgestone
	Front Tires: 37 x 25R 35, Bridgestone

AIR & BRAKE SYSTEMS

SECTION 4

4-1	Systems
585961	Air System - Vehicle
4-3	Supply Components
250658	Accumulator
245411	Accumulator
4-4	Control Components
586172	Manifold Assembly, Brakes
4-5	Actuator Components
244409	Parking Brake Caliper

* Backordered



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 21-Jun-11

REVISED: 16-Aug-11

Revision Level : #5

PAGE: 3 of 5

MODEL: L90S

SERIAL NO: 039323

AIR & BRAKE SYSTEMS

SECTION 4

4-6	Miscellaneous
509574	Air Hose Kit

HYDRAULIC SYSTEM

SECTION 5

5-1	Systems & Circuits
587121	Hydraulic System - Seat
586915	Hydraulic System - Cowl to Valves
586415	Hydraulic System - Chassis
586413	Hydraulic System - Steering
586412	Hydraulic System - Hoist & Tilt
586411	Hydraulic System - Boom
586410	Hydraulic System - Carriage
586408	Hydraulic System - Brakes

5-2	Pumps
PA039323	Pump Arrangement
258358	Pump, Gear
258357	Pump, Piston
245520	Hydraulic Pump
245289	Tandem Pump

5-3	Valves
* 586777	Base, Joystick
* 586775	Base, Joystick
586605	Manifold Assembly
586414	Valve Module
586199	Manifold Hoist & Tilt
581812	Steering Load Sensing Valve
581404	Manifold Assembly
566303	Holddown/Kickoff Valve
250637	Hoist & Tilt Valve
249635	Remote Steering Valve
234990	Steering Flow Amplifier
234081	Steering Control Unit

* Backordered



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 21-Jun-11

REVISED: 16-Aug-11

Revision Level : #5

PAGE: 4 of 5

MODEL: L90S

SERIAL NO: 039323

HYDRAULIC SYSTEM

SECTION 5

5-4	Cylinders
W10970	Steering Cylinder
W10708	Tilt Cylinder Installation
W10390	Hydraulic Cylinder, Hoist
569848	Hydraulic Cylinder
566290	Hydraulic Cylinder, Tilt
526164	Hydraulic Cylinder, HD & KO
5-5	Filters
FA039323	Filter Arrangement
243457	Return Filter (In-Tank)
228201	High Pressure Filter (100 GPM)
228200	High Pressure Filter (40 GPM)
5-6	Miscellaneous
258300	Cooler, Hydraulic Oil

ELECTRICAL SYSTEM

SECTION 6

6-1	Systems & Circuits
586163	Reverse Alarm
6-2	Components
586914	Light Bar
586913	Lights Installation - Cab
586812	Junction Box Assembly
586417	Light, Amber Warning
586406	Chassis Wiring
586167	Lights Installation - Carriage

CAB & COWL

SECTION 7

7-1	Basic Structure
586962	Insulation Instalation; Cowl Floor
586684	Superstructure Installation
586560	Hinge Assembly, LH Door
586558	Hinge Assembly, Upper LH
586399	Door Assembly LH
586398	Door Assembly RH
586385	Window Installation

* Backordered



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 21-Jun-11

REVISED: 16-Aug-11

Revision Level : #5

PAGE: 5 of 5

MODEL: L90S

SERIAL NO: 039323

CAB & COWL

SECTION 7

7-2	Instruments & Controls
587199	Console Assembly, Overhead
586811	Panel Assembly, Alarm
586716	Steering Column Upgrade
586692	Driveline Assembly, Steering Column
586439	Panel Assembly
586438	Panel Assemble, RH
586437	Panel Assembly, LH
258909	Joystick Control, 4 Button
258908	Joystick Control, 8 Button
252418	Pedal Assembly
7-3	Miscellaneous
586835	Platform Assembly
586834	Seat Installation
586409	Seat Assembly W/Controls
586164	Air Conditioner / Heater Installation
258675	Air Conditioner/Heater
258674	Condenser, Remote
258666	Seat Assembly With Control Pods

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
586402	Carriage Assembly
586400	Chassis Assembly
577526	Boom Assembly
8-2	Miscellaneous
586192	Stud and Bracket
580721	Battery Box Installation

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
586416	Fire Suppression System
574848	Remote Lube, Carriage

* Backordered