

**MASTER CHECK SHEET
PARTS BOOK INDEX**PAGE: 1 of 5
MODEL: L - 800NF
SERIAL NO: 107123DATE: 5-10-91
REVISED: 11-5-2009**GENERAL INFORMATION****SECTION 1**

80-35 Master Check Sheet
80-7A How to use your Master Check Sheet
----- Parts Ordering Procedure
----- Quick Reference Filters & Belts (L-800NF "Standard" w/ Cummins & Clark)

POWER UNIT**SECTION 2**

2-1 Engine
W10853 Power Unit
226062 Engine Specifications, Cummins NTA 855 355 BC III S/N 11621117
----- Engine Parts Catalog (3884235)

2-2 Controls
----- Engine Controls - See Section 7-2
----- Audiovisual Engine Protection System - See Section 6-1

2-3 Lubrication
556263 Lube Oil System - Bypass Filter
568723 Oil Fill Installation
566204 Dipstick Installation

2-4 Fuel
541761 Fuel System
----- Fuel Filter - Engine Parts Catalog - See Section 2-1

2-5 Air Intake & Exhaust
560144 Air Intake System (Ref)
217443 Air Cleaner
568474 Exhaust System
----- Exhaust Blankets - See Exhaust System

2-6 Cooling
558405 Radiator & Shroud
230479 Radiator
562408 Radiator Shutters

2-7 Miscellaneous
526723 Cold Start (Quick Start)

DRIVETRAIN**SECTION 3**

3-1 General
568412 Drivetrain Installation

DRIVETRAIN (Continued)**SECTION 3**

3-2	Transmission & Converter
-----	Converter Installation - See Section 2-1
567423	Transmission Installation
226974	Converter, S/N KUSA 55754
234050	Transmission, S/N JUSA 43243
568667	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
232061	Shift Valve Module
-----	Transmission Air Cylinder - See Section 4-5
3-3	Drivelines
-----	Driveline Installation - See Section 3-1
568413	Converter/Transmission Driveline
564753	Transmission/Axle Driveline
3-4	Axles
571637	Drive Axle
564217	Tailpost (Rear Axle)
223617	Planet Carrier
570733	Disc Brake Caliper
231414	Differential & Carrier Assembly
201087	Parking Brake
3-5	Wheels & Tires
564606	Front Wheel (Drive)
511427	Rear Wheel (Steer)
-----	Front Tires - 33.5 x 33 44PR E/L-3
-----	Rear Tires - 23.5 x 25 20PR-L3

AIR & BRAKE SYSTEMS**SECTION 4**

4-1	Systems
568624	Air System - Vehicle
567821	Air System - Implement (Ref)
568607	Hydraulic Brake System
4-2	Modules
4-3	Supply Components
224794	Air Dryer
217734	Expello Valve
4-4	Control Components
201358	Regulator Valve
216615	Relay Valve
201352	Holdback Valve
211315	Relay Valve
214161	Relay Valve
216285	Relay Valve
215085	Solenoid Valve
233035	Treadle Valve
218928	Brake Valve

DATE: 5-10-91
REVISED: 11-5-2009**AIR & BRAKE SYSTEMS (Continued)****SECTION 4**

4-4 Control Components (Continued)
214127 Rotary Valve
207272 Pushbutton Valve
227916 Remote Control Valve, Hoist & Tilt
562230 Remote Control Valve, Holddown & Kickoff

4-5 Actuator Components
211711 Declutch Air Cylinder
219109 Implement Air Cylinder - Holddown & Kickoff
219110 Implement Air Cylinder - Hoist & Tilt
505238 Implement Air Cylinder - Auxiliary Holddown
220267 Brake Actuator Assembly
222010 Brake Air Chamber, Service
217201 Brake Air Chamber, Parking
222331 Master Cylinder, Service Brake
----- Brake Caliper - See Section 3-4
568409 Parking Brake Actuator Installation

4-6 Miscellaneous
207906 Air Horn
509574 Air Hose Kit

HYDRAULIC SYSTEM**SECTION 5**

5-1 Systems & Circuits
568517 Hydraulic System - Steering (Ref)
568638 Hydraulic System - Hoist & Tilt
568739 Chassis Hydraulics
----- Boom Plumbing - See Boom, Section 8-1
568806 Carriage Hydraulics (Holddown/Kickoff)

5-2 Pumps
226539 Single Pump, Steering
229604 Tandem Pump, Holddown & Kickoff, LH & RH

DATE: 5-10-91
REVISED: 11-5-2009PAGE: 4 of 5
MODEL: L - 800NF
SERIAL NO: 107123**HYDRAULIC SYSTEM (Continued)****SECTION 5**

5-3 Valves
568601 Valve Module
224731 Steering Control Unit (Pilot)
231179 Steering Valve
225151 Hoist & Tilt Valve
230699 Holddown/Kickoff Valve, LH
565604 Holddown/Kickoff Valve, RH
215130 Auxiliary Holddown Valve
218007 Pressure Relief Valve
231816 Solenoid Valve

5-4 Cylinders
800128 Hydraulic Cylinder Locations
565522 Steering Cylinder
568347 Hoist Cylinder
568590 Tilt Cylinder
531565 Holddown Cylinder
531671 Kickoff Cylinder
536272 Auxiliary Holddown Cylinder
231817 Platform Rotate Cylinder

5-5 Filters
228201 High Pressure Filter (100 GPM)
224350 Return Filter (In-Tank)
----- Transmission Filter - See Section 3-2

5-6 Miscellaneous
537587 Hydraulic Tube Coupling
80-60 O-Ring Guide

ELECTRICAL SYSTEM**SECTION 6**

6-1 Systems & Circuits
550555 Audiovisual Engine Protection System
539396 Reverse Alarm Circuit

6-2 Components
560363 Chassis Wiring (Ref)
224207 Alternator
----- Instrument Panel - See Section 7-2
567737 Cowl Terminal Board
567736 Junction Box
800004 Lighting Components
508262 Cab Warning Light
----- Battery Box - See Section 8-1

CAB & COWL**SECTION 7**

7-1	Basic Structure
567936	Cab Assembly
568611	Cowl Assembly
567932	Door Assembly, LH
568457	Door Assembly, RH
568431	Door Latch, LH
568456	Door Latch, RH
*	Cab & Cowl Insulation
7-2	Instruments & Controls
566927	Instrument Panel
568535	Engine & Transmission Controls
224174	Accelerator Pedal
567170	Control Handle, Electric Shift
-----	Shift Valve Module - See Section 3-2
-----	Control Panel Asm, LH - See Air System - Implement, Section 4-1
-----	Control Panel Asm, RH - See Air System - Implement, Section 4-1
568157	Steering Column
7-3	Miscellaneous
W10856	Heater/Air Conditioner Installation
568083	Heater/Air Conditioner
562408	Air Conditioner Condenser Installation
*	Compressor Installation
231813	Cab Filter Box
565443	Windshield Wipers
224738	Seat Suspension
233048	Seat Assembly

FRAME & ATTACHMENTS**SECTION 8**

8-1	Frame & Attachments
568284	Boom Assembly
568050	Carriage Assembly
554110	Auxiliary Holddown Installation
-----	Tailpost - See Section 3-4
800129	Pin & Bushing Composite
568295	Chassis Assembly
8-2	Miscellaneous
551550	Battery Box

ACCESSORIES & OPTIONS**SECTION 9**

9-1	Accessories & Options
560131	Fire Suppression System

* Back Order