

Quick Start Guide

W6G, W8L, W12E



Refer to the operator's manual supplied with your winch for complete operation instructions. This quick start guide details the specific controls supplied with your winch.

When the activation switch is turned **OFF**, the LED will illuminate continuously. When the activation switch is turned **ON**, the LED will be off. If it is blinking, this indicates an error that should be addressed. If there are errors important to winch safety, the winch will remain in the off state even when the switch is in the **ON** position. Refer to error codes in Figure 4 to determine the cause of the error.

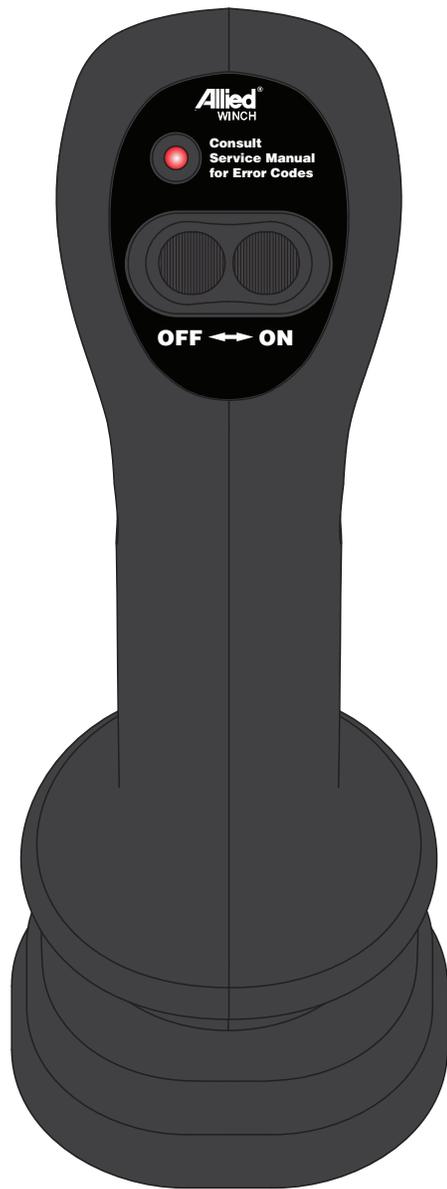


Figure 1
Joystick on Right Console

The Joystick controls the winch functions. See Figures 2 & 3.

- In the center position, the winch is in **Brake-On**.
- Move the joystick handle to the left (toward the blade at the front of the dozer) to activate **Line-In**.
- Move the joystick handle to the right (away from the blade at the front of the dozer) to activate **Line-Out**.
- Move the joystick handle forward to the detented position to activate **Brake-Off**.
- Move the joystick handle rearward to the detented position to activate **Freespool** (for winches so equipped), or **Brake-Off**.

Refer to your operator's manual for complete descriptions of these functions.

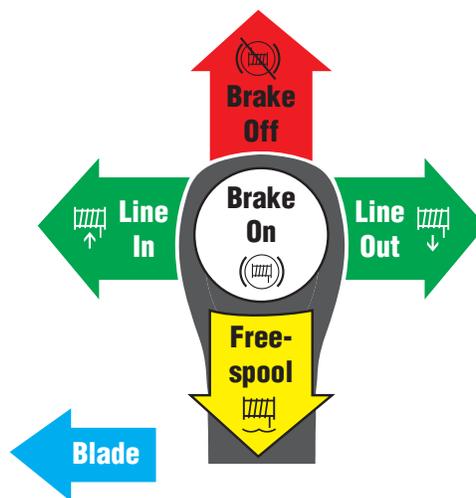


Figure 2
Winches with Freespool


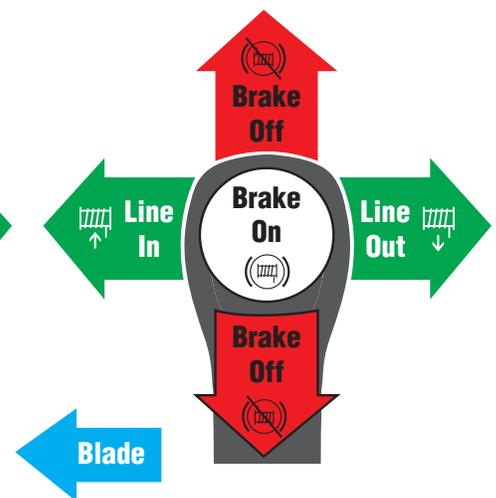


Figure 3
Winches without Freespool

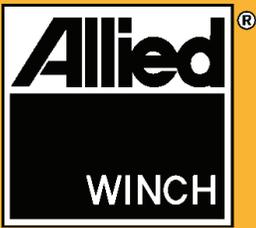

Quick Start Guide

W6G, W8L, W12E

Error Codes

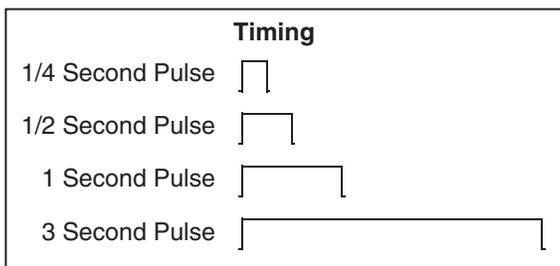
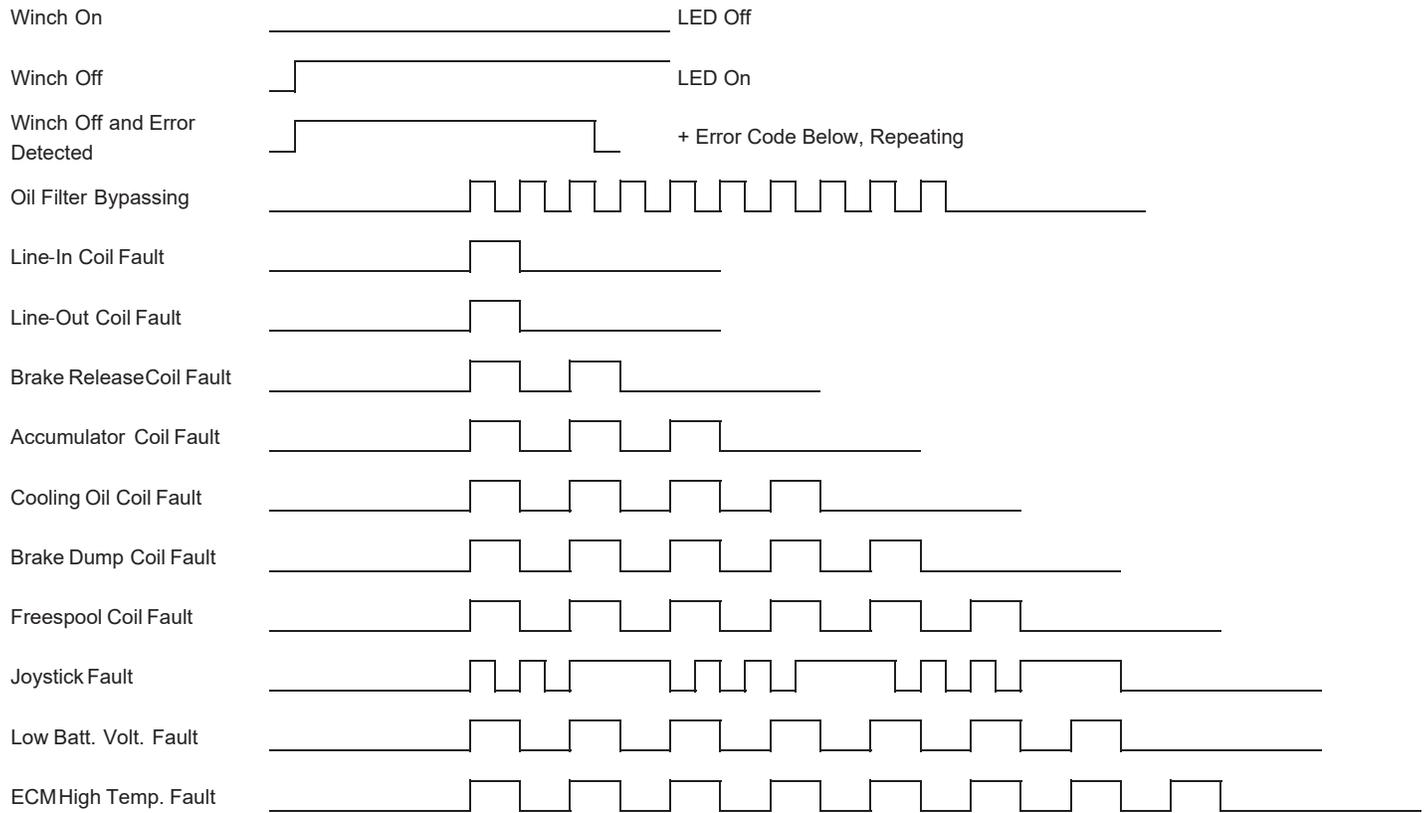


Figure 4