



Freeman Automatic Self-Propelled Bale Wagon Parts Book

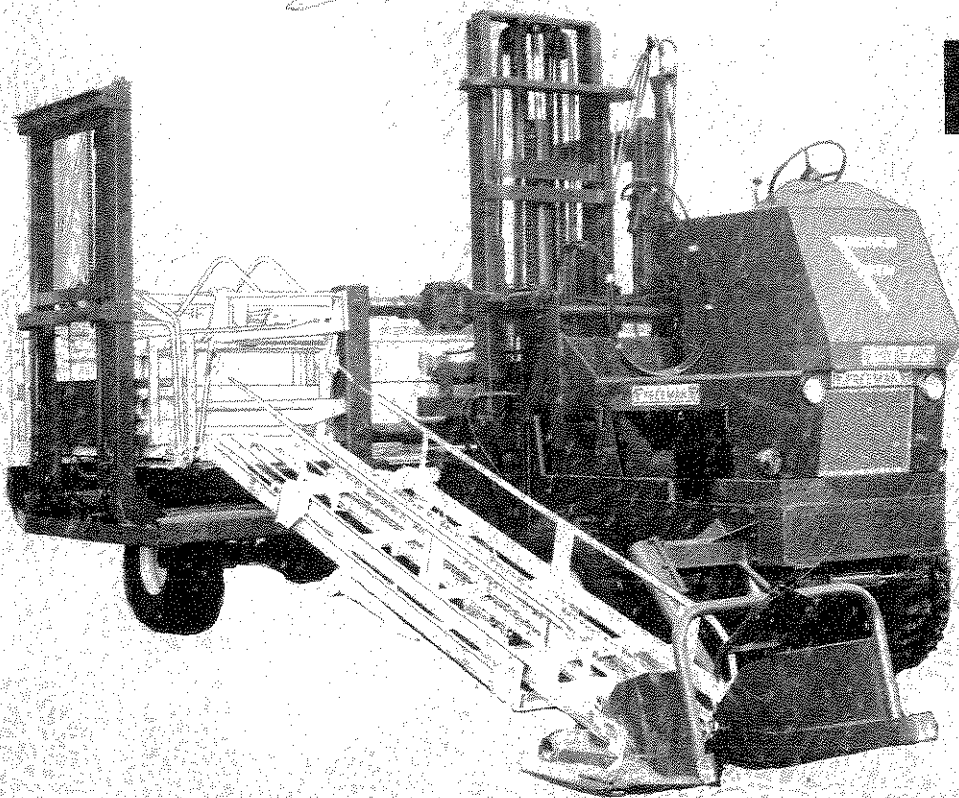

manufactured and distributed by



J. A. FREEMAN & SON, INC.

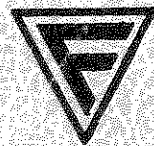

PB00000133


PORTLAND, OREGON

Printed in U.S.A. 11-71

Freeman Automatic

Self-Propelled Bale Wagon

Parts Book

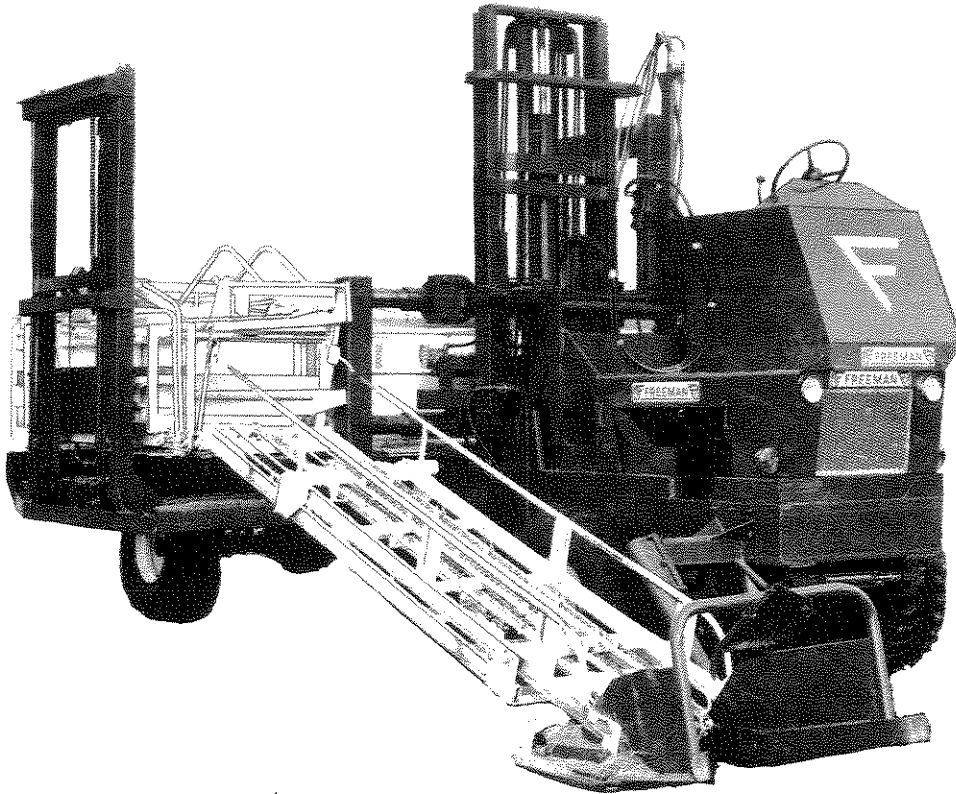

POLICY

1. It is the policy of J. A. Freeman & Son, Inc. to constantly improve its products whenever it is practical to do so.
2. J. A. Freeman & Son, Inc. reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J. A. Freeman & Son, Inc. relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by bale wagon serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, mail, rail, express or freight, air express or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J. A. Freeman & Son, Inc.
Parts Department,
2034 N. W. 27th Avenue,
Portland, Oregon 97210

Place serial number of machine here for your convenience:

Bale wagon Serial No.

Motor Serial No.

Left and right of machine are understood to mean from a position facing in the direction of baler travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"

Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

BALE WAGON
Table of Contents

Pickup	1
Front Elevator	2, 3
Rear Elevator	4, 5
Pickup Lift.	6
Frame	7
Overhead Bale Guide	8
Trap Door	9
Conveyor	10
Cage Index & Bale Support.	11
Cage Hydraulics	12, 13
Cage Trip	14, 15
Remote Trip Controls	16
Pusher	17
Right Hand Side Mast.	18, 19
Left Hand Side Mast	20, 21
Carriage Drive	22
Carriage	23
Mast	24, 25
Squeeze	26
Main Frame	27
Main Frame Hydraulics	28, 29
Platform & Engine Hood	30, 31
Steering & Seat	32
Cab	44
Hydraulic Control Levers	33
Transmission Shift Mechanism	35
Throttle Control	34
Brake & Clutch	36, 37
Front Axle	38
Rear Axle	39
Drive Line	40
Electric Systems	41
Motor Mount & Radiator	42
Air Intake & Exhaust	43

INDEX


Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
01-101	13	01-231	23	01-563	32	02-118	27
01-102	13	01-232	23	01-564	9, 13	02-119	34, 35, 37
01-103	13	01-233	29	01-565	25	02-120	35
01-104	13	01-234	32	01-601	3, 5, 13	02-121	35
01-105	13, 17	01-235	13, 29	01-602	6, 25	03-101	23
01-106	13	01-301	3, 25, 29	01-603	6, 19, 21	03-102	41
01-107	13	01-302	5, 23, 29	01-604	13	03-103	41
01-108	13, 17	01-303	13	01-605	13	03-104	41
01-109	13	01-304	13	01-606	13	03-105	41
01-110	13	01-305	19, 21	01-607	22	03-106	41
01-111	13		25, 32	01-608	29	03-107	41
01-112	13	01-306	23	01-609	29	03-108	41
01-113	13	01-307	23	01-610	29	03-109	41
01-114	13	01-308	23	01-611	29	03-110	41
01-115	13	01-309	23	01-612	29	03-111	41
01-116	13	01-310	25	01-613	31	03-112	41
01-117	13	01-311	23, 26	01-614	32	03-113	41
01-118	13	01-312	26	01-615	32	03-114	41
01-119	13	01-313	26	01-616	13	03-115	41
01-121	29	01-314	29	01-617	29	03-116	41
01-122	29	01-315	29	01-618	3, 5, 13	03-117	41
01-123	29	01-316	32	01-619	32	03-118	41
01-124	29	01-317	29	01-701	25, 26	03-119	41
01-125	29	01-401	13, 29	01-702	13, 23, 25,	03-120	41
01-126	22, 29	01-402	13, 17		26, 29	03-121	41
01-127	22, 29		23, 25, 29	01-703	13, 29	03-122	41
01-128	29	01-403	13, 29	01-704	6	03-123	41
01-131	29	01-404	13, 29	01-705	5, 13, 17,	03-124	41
01-132	29	01-405	13		23, 29	03-125	41
01-133	29	01-406	13	01-706	13	03-126	41
01-134	29	01-407	13, 17, 29	01-707	13	03-127	41
01-135	29	01-408	13, 29	01-708	13, 17	03-128	41
01-136	29	01-409	13, 29	01-709	25	03-129	41
01-137	29	01-410	13, 29	01-710	13, 29	03-130	41
01-138	29	01-411	22	01-711	25	03-131	23, 41
01-139	29	01-412	29	01-712	13, 25, 29	03-132	41
01-141	29	01-413	29	01-713	13, 23, 25	03-133	41
01-142	29	01-414	29	01-714	13, 29	03-134	41
01-143	29	01-415	29	01-715	13, 25, 29	03-135	41
01-151	23	01-501	13	01-718	6, 23, 25	03-136	41
01-152	23	01-502	13	01-719	26	03-137	41
01-153	25	01-503	13	01-720	5, 13, 17,	03-138	41
01-154	29	01-504	13, 29, 33		23, 26, 29	03-139	41
01-201	29	01-505	13	01-721	13	03-140	41
01-202	29	01-506	13	01-722	23, 29	03-141	41
01-203	3, 29	01-507	13	01-723	5, 13, 17, 29	03-142	23, 29, 41
01-204	23, 29	01-508	23, 25	01-724	13, 17, 23	03-143	41
01-205	26	01-509	23	01-725	13	03-144	41
01-206	23, 25	01-510	23	01-726	13, 29	04-101	1, 15, 37
01-207	25	01-511	23	01-727	23	04-102	6
01-208	5, 13	01-512	29, 33	01-728	23	04-103	8, 15, 23, 31
01-209	23, 25	01-513	29	02-101	3, 5	04-104	11
01-210	19, 29	01-514	29	02-102	3, 5	04-105	11
01-211	23, 25, 29	01-515	29	02-103		04-106	15
	6, 21	01-550	6	02-104	3, 5, 9, 10	04-107	15
01-212	23	01-551	9, 13	02-105	15	04-108	15
01-213	23, 25, 26	01-552	13, 17	02-106	17	04-109	15, 34
01-214	25	01-553	13, 17	02-107	19, 21	04-110	32
01-215	25, 26	01-554	19, 21	02-108	19, 21, 22	04-111	37
01-216	26	01-555	23	02-109	22	04-112	31
01-217	26	01-556	25	02-110	22	05-101	3, 5
01-218	13	01-557	25, 26	02-111	22	05-102	16
01-219	13	01-558	23	02-112	23	05-103	16
01-220	13, 17	01-559	13, 17, 19	02-113	25	05-104	3, 5
01-221	13, 29		19, 21	02-114	25	05-105	3, 5, 15, 35
01-222	5, 13, 29	01-560	23, 26	02-115	25	05-106	25
01-229	29, 32	01-561	6	02-116	26	05-107	3, 5, 10
01-230	29	01-562	13, 17	02-117	26	05-108	3, 5

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
05-109	19, 21	06-120	26	11-120	11	12-102	19
05-110	31	06-121	29	11-121	11	12-103	19
05-111	3, 5	06-122	17	11-122	11	12-104	19
05-112	3, 5	06-123	17	11-123	11	12-105	19
05-113	5, 10	06-124	32	11-124	11	12-106	19
05-114	5	06-125	33, 37	11-125	11	12-107	19
05-115	5, 15	06-126	37	11-126	11	12-108	19
05-116	5	06-127	34	11-127	11	12-109	19, 21
05-117	34	06-128	35	11-128	11	12-110	19, 21
05-118	33	06-129	35	11-129	15	12-111	19
05-119	5	06-130	33	11-130	15	12-112	19, 21
05-120	6	06-131	37	11-131	15	12-113	19, 21
05-121	10	06-132	9	11-132	15	12-114	19, 21, 22
05-122	19, 21, 22	06-133	33	11-133	15	12-115	19, 21
05-123	10	06-134	42	11-134	15	12-116	19, 21
05-124	15	06-135	43	11-135	15	12-117	19, 21
05-125	16, 34	06-136	37	11-136	15	12-118	19, 21
05-126	16, 34	10-101	1	11-137	15	12-119	19, 21
05-127	16	10-102	1	11-138	15	12-120	19
05-128	16	10-103	1	11-139	15	12-121	19
05-129	16	10-104	1	11-140	15	12-122	19, 21
05-130	15	10-105	6	11-141	15	12-123	19, 21
05-131	15	10-106	3	11-142	15	12-124	19, 21
05-132	15	10-107	3	11-143	15	12-125	19, 21
05-133	15, 33	10-108	3	11-144	15	12-126	19, 21
05-134	25	10-109	3	11-145	15	12-128	19
05-135	25	10-110	3, 5	11-146	15	12-129	19
05-136	25	10-111	3, 5	11-147	15	12-130	19
05-137	19	10-112	3	11-148	15	12-131	19
05-138	19	10-113	3	11-149	15	12-132	19
05-139	21	10-114	3	11-150	15	12-133	19
05-140	22	10-115	3	11-151	15	12-134	21
05-141	22	10-116	3	11-152	15	12-135	21
05-142	22	10-117	5	11-153	15	12-136	21
05-143	22	10-118	5	11-154	15	12-137	21
05-144	22	10-119	5	11-155	15	12-138	21
05-145	19, 21, 22	10-120	5	11-156	15	12-139	21
05-146	23, 25	10-121	5	11-157	15	12-140	21
05-147	23	10-122	5	11-158	15	12-141	21
04-148	23	10-123	5	11-159	15	12-142	21
05-149	34	10-124	5	11-160	15	12-143	21
05-150	35	10-125	5	11-161	15	12-144	21
05-151	33	10-126	5	11-162	15	12-145	21
05-152	34	10-127	5	11-163	15	12-146	21
05-153	33, 35	10-128	6	11-164	16	12-147	21
05-154	22	10-129	3	11-165	16	12-148	21
05-155	25	10-130	3	11-166	16	12-149	17, 21
05-156	19, 21	10-901	1	11-167	17	12-150	19
05-901	3, 5	10-902	3	11-168	17	12-151	19
05-902	3, 5	10-903	5	11-169	17	13-101	22
06-101	6	11-101	8	11-170	17	13-102	23
06-102	6	11-102	8	11-171	17	13-103	23
06-103	6	11-103	8	11-172	17	13-104	23
06-104	9	11-104	8	11-173	17	13-105	23
06-105	13, 25, 29	11-105	8	11-174	17	13-106	23
06-106	13, 29	11-106	8	11-175	17	13-107	23
06-107	16, 34	11-107	8	11-176	17	13-108	23
06-108	16	11-108	8	11-177	17	13-109	23, 27
06-109	16	11-109	17	11-178	17	13-110	23
06-110	16	11-110	9	11-179	17	14-101	25
06-111	16, 29	11-111	9	11-180	17	14-102	25
06-112	17	11-112	9	11-181	13	14-103	25
06-113	19, 21	11-113	10	11-182	29	14-104	25
06-114	23	11-114	10	11-183	17	14-105	25
06-115	23, 25, 26	11-115	10	11-184	15	14-106	25
06-116	23, 25, 34	11-116	10	11-185	15	14-107	25
06-117	3, 5	11-117	10	11-186	7	14-108	25
06-118	5	11-118	10	11-901	10	14-109	25
06-119	25	11-119	11	12-101	19	14-110	25


INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
15-101	26	17-149	32	19-106	38	19-179	37
15-102	26	17-150	32	19-107	38	19-180	37
15-103	26	17-151	32	19-108	38, 39	19-181	37
15-104	26	17-152	32	19-109	38, 39	19-182	37
15-105	26	17-154	32	19-110	38, 39	19-183	37
15-106	26	17-156	32	19-111	39	19-184	37
15-107	26	17-158	32	19-112	39	19-185	37
15-108	26	17-159	32	19-113	39	19-186	37
15-109	26	17-160	32	19-114	39	19-187	37
15-110	26	17-161	32	19-115	39	19-188	37
16-101	27	17-162	32	19-116	39	19-189	37
16-102	27, 29	17-163	32	19-117	39	19-190	37
16-103	27	17-164	32	19-118	39	19-191	37
16-104	27	17-165	32	19-119	40	19-192	37
16-105	27	17-166	32	19-120	40	19-193	39
16-106	27	17-167	32	19-121	40	19-194	40
16-107	27	17-168	32	19-122	40	19-195	38
16-108	27	17-169	44	19-123	40	19-196	37
16-109	27	17-170	44	19-124	40	19-901	38
16-110	27	17-171	44	19-125	40	19-902	39
16-111	27	18-101	33	19-126	40	19-903	40
16-112	27	18-102	33	19-127	40	19-904	40
16-113	27	18-103	33	19-128	40	19-905	40
16-114	27	18-104	33	19-129	40	19-906	40
16-115	27	18-105	33	19-130	40	20-101	42
17-101	31	19-106	33	19-131	40	20-102	42
17-102	31	18-107	33	19-132	40	20-104	42
17-103	31	18-108	33	19-133	40	20-105	42
17-104	31	18-109	33	19-134	32	20-106	42
17-105	31	18-110	33	19-135	32	20-107	42
17-106	31	18-111	33	19-136	32	20-108	42
17-107	31	18-112	33	19-137	32	20-109	42
17-108	31	18-113	33	19-138	37	20-110	42
17-109	31	18-114	33	19-139	37	20-111	42
17-110	31	18-115	33	19-140	37	20-112	42
17-111	31	18-116	33	19-141	37	20-113	42
17-112	31	18-117	33	19-142	37	20-114	42
17-113	31	18-118	33	19-143	37	20-115	42
17-114	31	18-119	33	19-144	37	20-116	42
17-115	31	18-120	33	19-145	37	20-117	42
17-116	31	18-121	33	19-146	37	20-118	42
17-117	31	18-122	34	19-147	37	20-119	42
17-118	31	18-123	34	19-148	37	20-120	42
17-119	31	18-124	34	19-149	37	20-121	42
17-120	31	18-125	34	19-150	37	20-122	42
17-121	31	18-126	34	19-151	37	20-123	42
17-122	31	18-127	34	19-152	37	20-124	42
17-123	31	18-128	34	19-153	37	20-125	42
17-124	31	18-129	34	19-154	37	20-126	42
17-125	31	18-130	34	19-155	37	20-127	43
17-126	31	18-131	35	19-156	37	20-128	43
17-127	31	18-132	35	19-157	37	20-129	43
17-128	31	18-133	35	19-158	37	20-130	43
17-129	31	18-134	35	19-159	37, 39	20-131	43
17-130	31	18-135	35	19-160	37	20-132	43
17-131	31	18-136	35	19-161	37	20-133	43
17-132	31	18-137	35	19-162	37	20-134	43
17-133	31	18-138	35	19-163	37	20-135	43
17-134	31	18-139	35	19-164	37	20-136	43
17-135	31	18-140	35	19-165	37	20-137	43
17-136	31	18-141	35	19-166	37	20-138	43
17-137	31	18-142	35	19-167	37	20-139	43
17-138	31	18-143	35	19-168	37	20-140	43
17-139	31	18-144	35	19-169	37	20-141	43
17-140	31	18-145	35	19-170	37	20-142	43
17-141	31	18-146	35	19-171	37	20-143	43
17-142	31	18-147	34	19-172	37	20-144	43
17-143	31	18-148	34	19-173	37	20-145	43
17-144	31	19-101	38	19-174	37	20-146	43
17-145	31	19-102	38	19-175	37	20-147	43
17-146	31	19-103	38	19-176	37	20-148	43
17-147	31	19-104	38, 39	19-177	37		
17-148	31	19-105	38, 39	19-178	37		

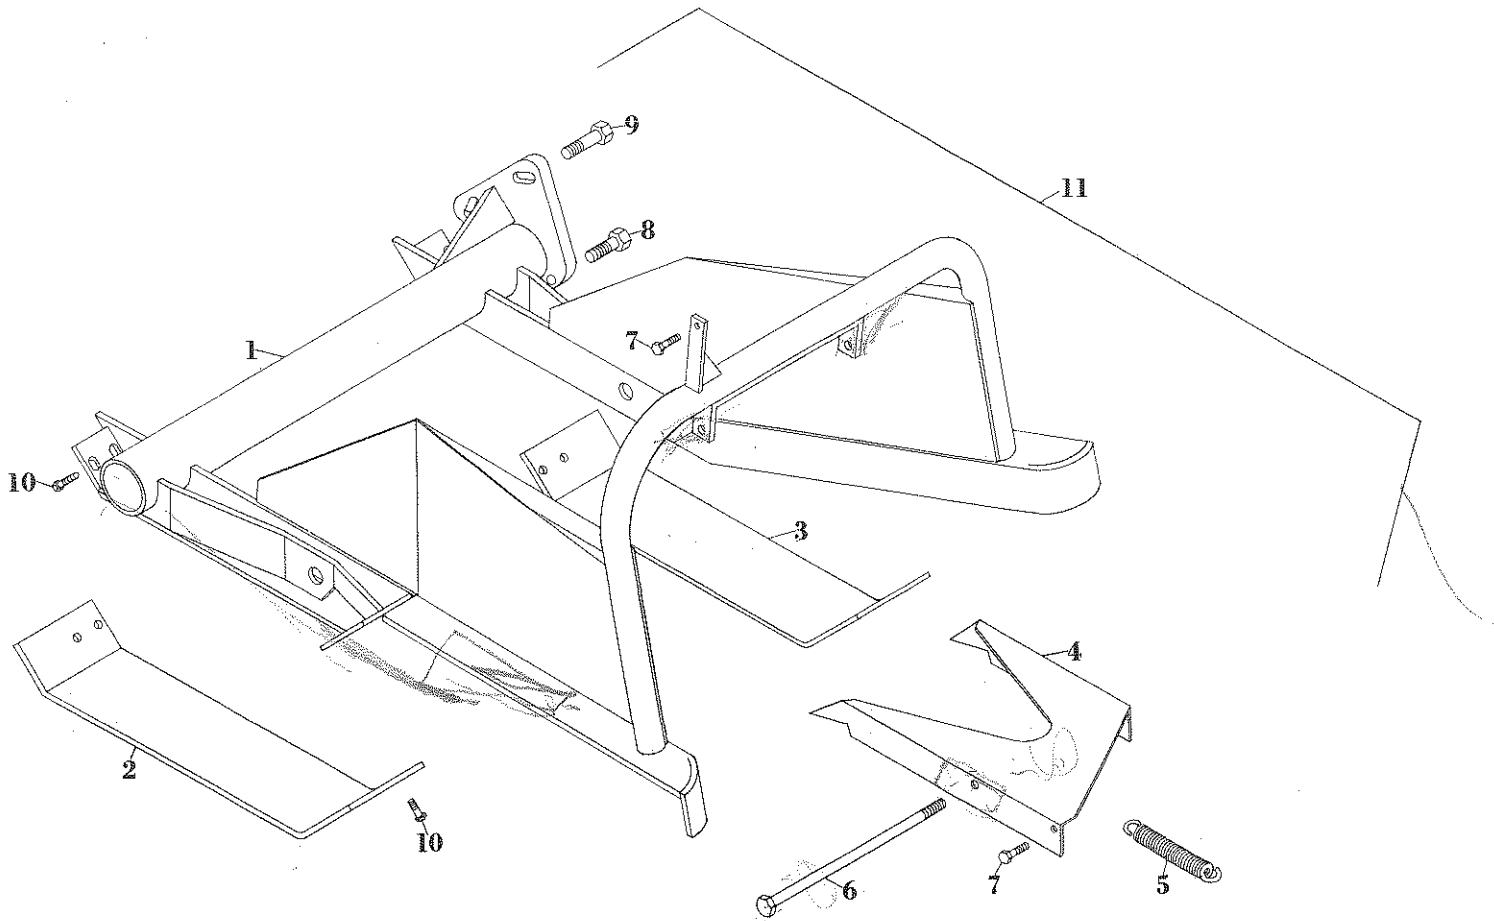


PICKUP

REF. NO.	PART NO.	DESCRIPTION
1	10-101	Pickup Frame
2	10-102	Pickup Runner, right hand
3	10-103	Pickup Runner, left hand
4	10-104	Pickup Bale Check
5	04-101	Spring (F747)
6		1/2" x 14" NC Cap Screw
7		5/16" x 1-1/4" NC Cap Screw, 2 used
8		5/8" x 2" NC Cap Screw
9		5/8" x 2-1/2" NC Cap screw
10		3/8" x 1-1/2" NC Cap Screw 8 used
11	10-901	Pickup Assembly Complete

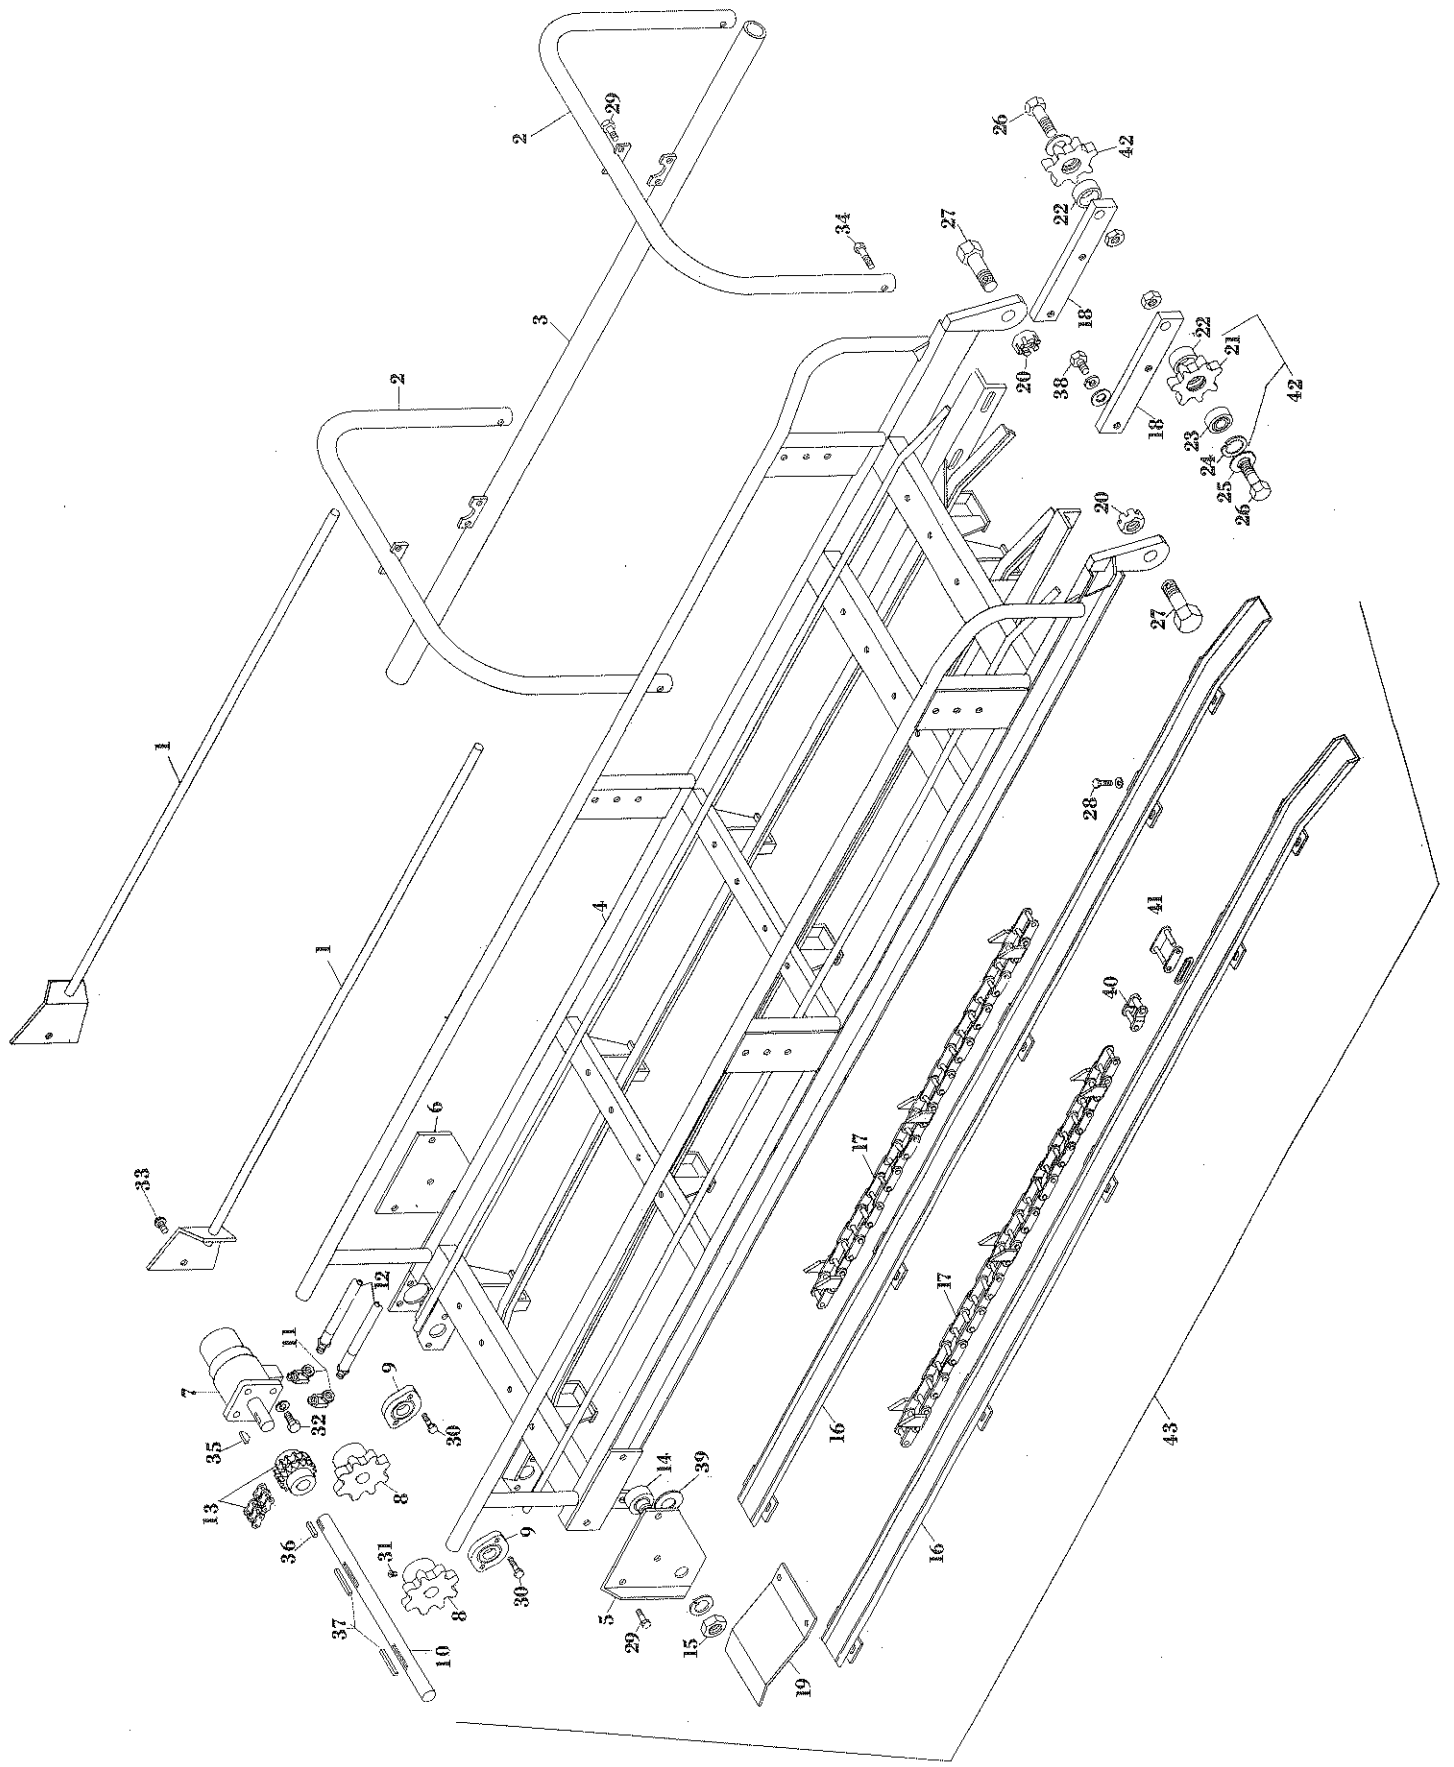


FRONT ELEVATOR

REF. NO.	PART NO.	DESCRIPTION
1	10-106	Bale guide, elevator, 2 used
2	10-107	Pipe mount, bale guide, 2 used
3	10-108	Pipe, bale guide
4	10-109	Frame, front elevator
5	10-110	Plate, roller mount, RH
6	10-111	Plate, roller mount, LH
7	01-601	Hydraulic motor, elevator drive, A5K Charlynn
	01-618	Seal kit for 01-601 orbit motor
8	05-101	Sprocket, elevating chain, 8 tooth, 2 used
9	02-104	Bearing, drive shaft, FLCT 1" Fafnir
10	10-112	Drive shaft, front elevator
11	01-301	1/2" x 45° swivel adapter, 2 used, 9355 x 8 x 8WH
12	01-203	1/2" Hydraulic Hose, 65", 2 used
13	05-901	Chain coupler, D4016 x 1" x 1"
	05-111	Chain coupler half, 1" bore
	05-112	Coupler chain
14	02-101	Roller, 6206 BCA, 2 used
15		Jam nut, 1" NF, 2 used
16	10-113	Chain track, 2 used
17	10-129	Chain, front elevator, 136P-#550, 2 used
18	10-114	Tightener bracket, elevating chain, 2 used
19	10-115	Bale lifter
20		Nut, 1" NC Castelated, 2 used
21	05-104	Sprocket, 7 tooth idler, #550, 2 used
22	05-105	Set collar, 3/4", 2 used
23	02-102	Bearing, idler sprocket, 2 used, P204KRN-P2 Fafnir
24	06-117	Snap ring, 2 used, N5000-181 Truarc
25		Machinery bushing, 3/4" x 12 ga, 2 used
26		3/4" x 3" NCHT cap screw, 2 used
27	10-116	Pin, 1", 2 used
28		5/16" x 1" NCHT cap screw, 20 used
29		3/8" x 1" NCHT cap screw, 6 used
30		5/16" x 1-1/4" NCHT cap screw, 4 used
31		5/16" NC set screw, 4 used
32		3/8" x 3/4" NCHT cap screw, 4 used
33		5/16" x 3/4" NC socket, button head cap screw, 2 used
34		3/8" x 2-1/4" NCHT Cap screw, 4 used
35		Woodruff key, 1/4" x 1"
36		Key, 1/4" x 1"
37		Key, 1/4" x 1-3/4", 2 used
38		1/2" x 1-1/4" NCHT cap screw, 4 used
39		Flat washer, 1" (as required)
40	05-108	Offset link, #550, 2 used
41	05-107	Connector link, #550, 2 used
42	05-902	Sprocket with bearing, 7 tooth idler, #550
43	10-902	Front elevator assembly complete

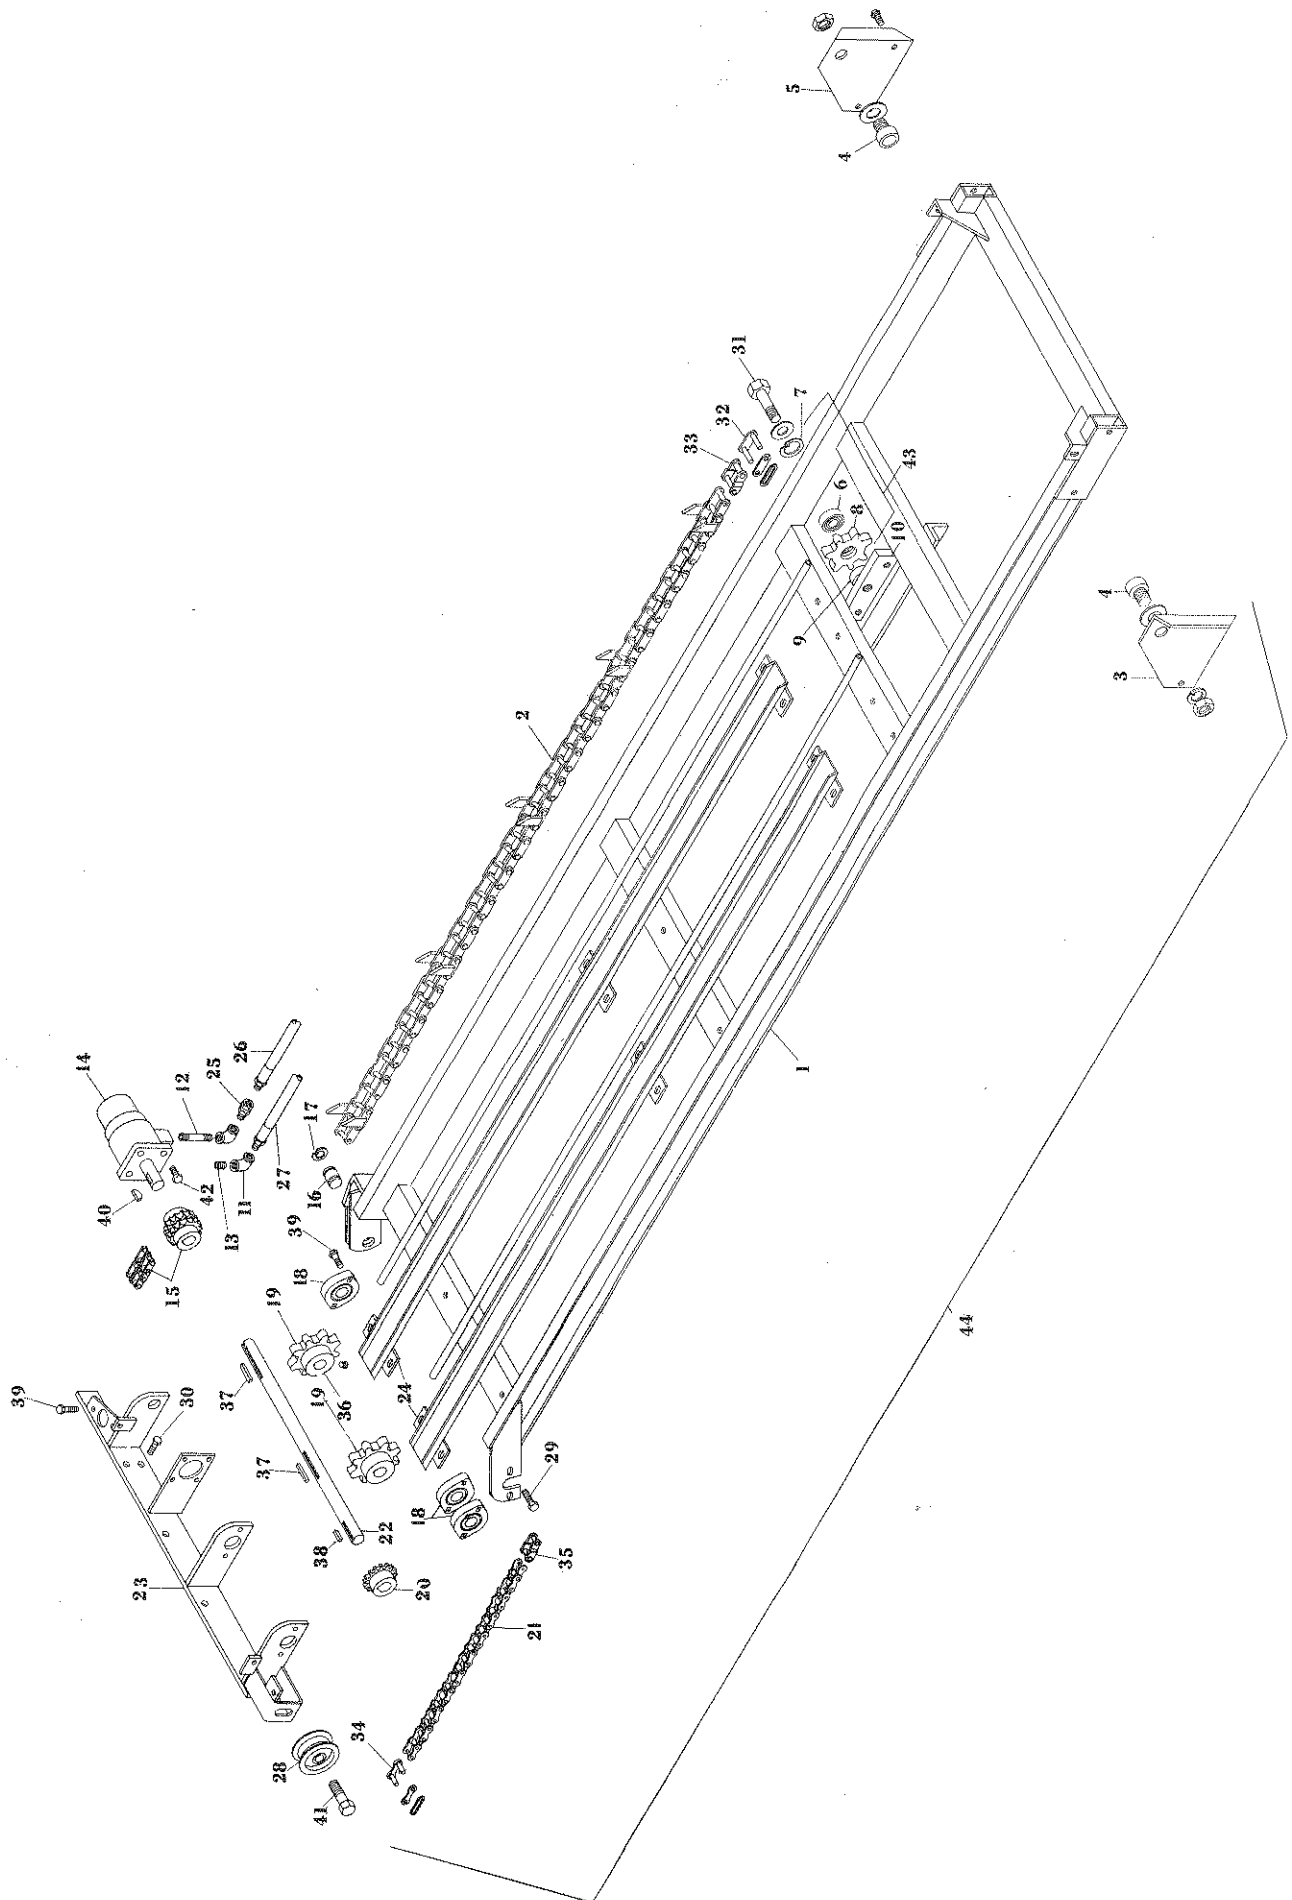


REAR ELEVATOR

REF. NO.	PART NO.	DESCRIPTION
1	10-117	Frame, rear elevator
2	10-130	Chain, rear elevating, 119P-#550
3	10-110	Plate, roller mount, RH
4	02-101	Roller, 2 used, 6296 BCA
5	10-111	Plate, roller mount, LH
6	02-102	Bearing, idler sprocket, 2 used, P204KRN-P2 Fafnir
7	06-117	Snap ring, 2 used, N5000-181 Truarc
8	05-104	Sprocket, 7 tooth idler, #550
9	05-105	Set collar, 3/4"
10	10-118	Tighter bracket, elevating chain
11	01-705	1/2" x 90° steel elbow, C3509 x 8 WH
12	01-723	1/2" x 3" extra heavy black nipple
13	01-720	1/2" x close extra heavy black nipple
14	01-601	Hydraulic motor, elevator drive, A5K Char-Lynn
	01-618	Seal kit for 01-601 Orbit motor
15	05-901	Chain coupler, D4016 x 1" x 1"
	05-111	Chain coupler half, 1" bore
	05-112	Coupler chain
16	10-119	Pin, pickup pivot
17	06-118	Snap ring, 2 used (F857) 5100-100 Truarc
18	02-104	Bearing, drive shaft, FLCT1" Fafnir
19	05-101	Sprocket, elevating chain, 8 tooth
20	05-113	Sprocket, cage conveyor drive, 50B14 x 1"
21	05-114	Chain, cage conveyor drive, #50RC
22	10-120	Drive shaft, rear elevator
23	10-121	Mounting hinge, rear elevator to cage
24	10-122	Chain track, 2 used
25	01-302	1/2" straight swivel adapter, 9205 x 8 x 8WH
26	01-222	1/2" hydraulic hose, 24-1/2"
27	01-208	1/2" hydraulic hose, 23"
28	05-119	Idler, chain adjusting (F7330)
29		3/8" x 1-1/4" NCHT cap screw
30		3/8" x 1" NCHT cap screw
31		3/4" x 2-1/2" NCHT cap screw
32	05-107	Connecting link, #550
33	05-108	Offset link, #550
34	05-115	Connecting link, #RC50
35	05-116	Offset link, #RC50
36		5/16" set screw
37		Key, 1/4" x 1-3/4", 2 used
38		Key, 1/4" x 1", 2 used
39		5/16" x 1-1/4" NCHT cap screw, 4 used
40		Woodruff key, 1/4" x 1"
41		1/2" x 2-1/4" NCHT cap screw
42		3/8" x 3/4" NCHT cap screw
43	05-902	Sprocket with bearing, 7 tooth idler, #550
44	10-903	Rear elevator assembly, complete

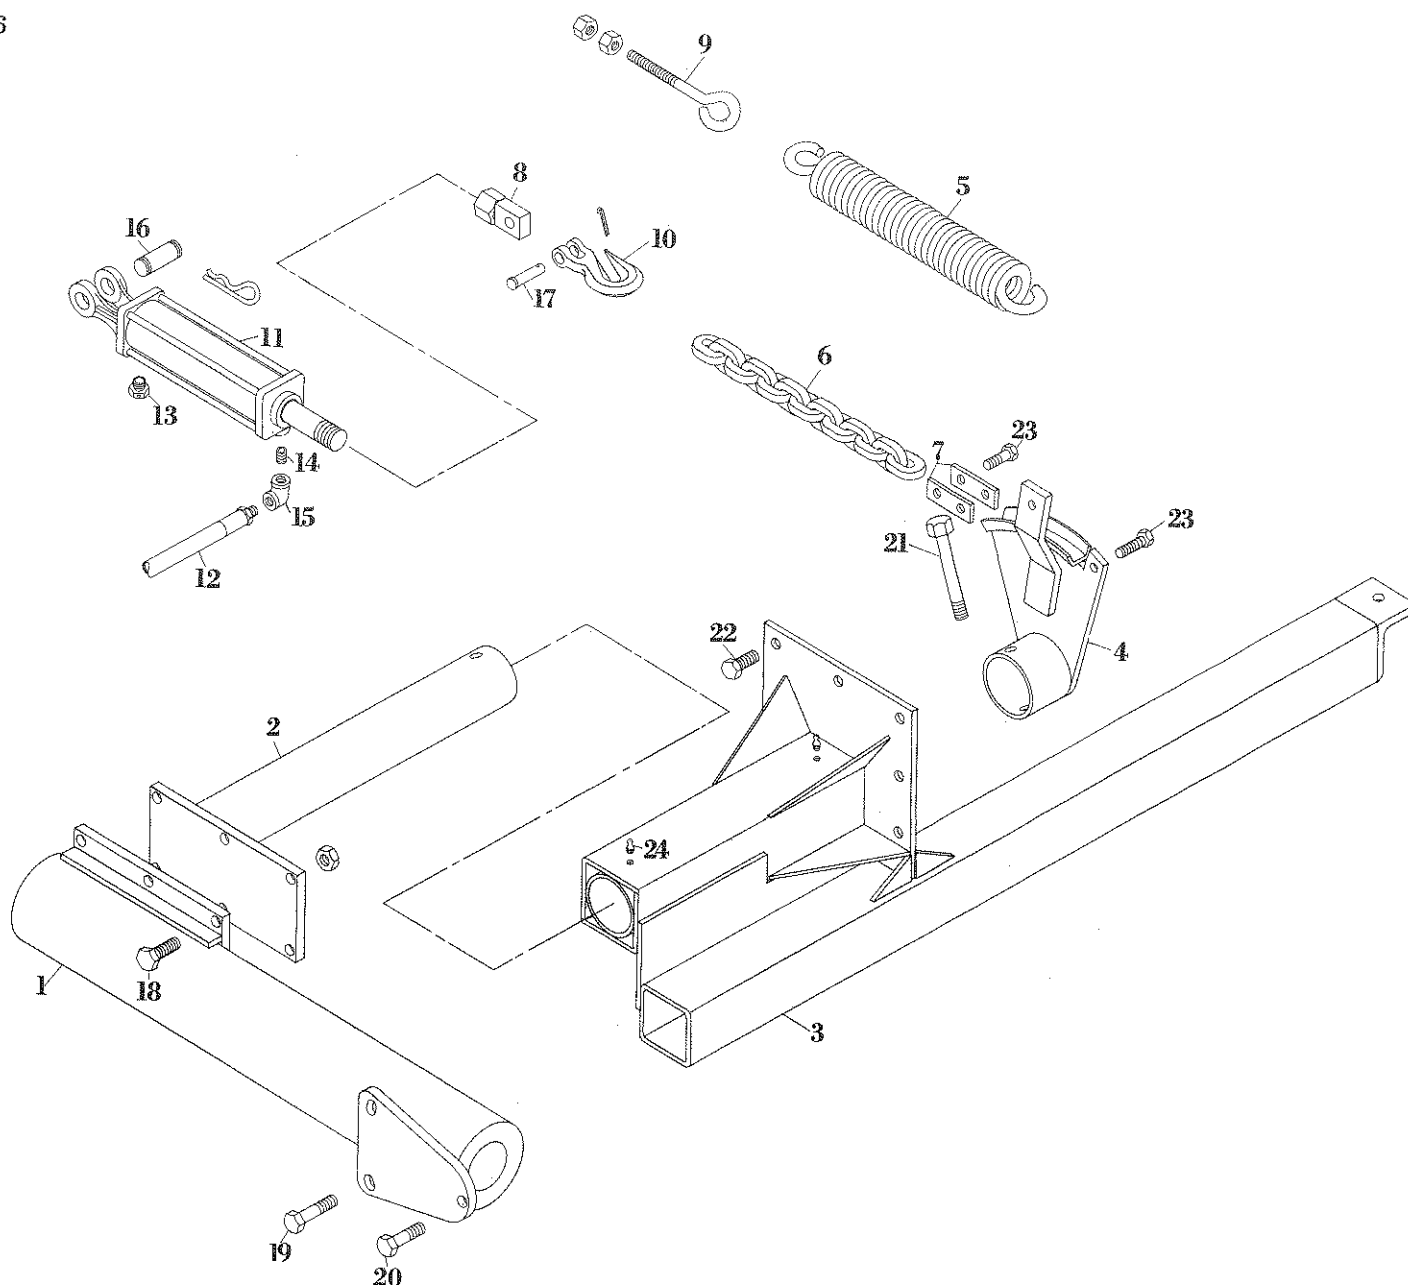


PICKUP LIFT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	10-123	Arm, pickup support	13	01-602	Breather, 1/2", PM-BHF-3 Prince
2	10-124	Pivot tube, pickup support arm		01-603	Breather, 3/8", PM-BHF-4 Prince
3	10-125	Bearing, pickup support arm	14	01-718	3/8" close extra heavy black nipple
		pivot tube	15	01-704	3/8" x 90° steel elbow, C3509 x 6WH
4	10-126	Lever, pickup lift and balance	16	06-102	Pin, cylinder, with keeper, Cross
5	04-102	Spring, pickup and balance	17	06-103	Pin, with key, 9/16" x 2"
6	05-120	Chain, pickup lift, 1/2" x 13 links	18		1/2" x 2-1/2" NCHT cap screw, 6 used
7	10-127	Strap, chain connector, 2 used	19		5/8" x 2-1/2" NCHT cap screw, 2 used
8	10-128	End block, pickup cylinder	20		5/8" x 2" NCHT cap screw
9	10-105	Eye bolt, pickup balance spring	21		3/4" x 6" NCHT cap screw
10	06-101	Hook, pickup chain, 808 Midland	22		5/8" x 2-1/4" NCHT cap screw, 7 used
11	01-550	Hydraulic cylinder, pickup lift, 2-1/2" x 8" Cross	23		1/2" x 1-1/2" NCHT cap screw, 2 used
	01-561	Seal kit for 01-550 cylinder	24		Zerk, 1/4" - 28, 2 used
12	01-211	3/8" hydraulic hose, 24"			

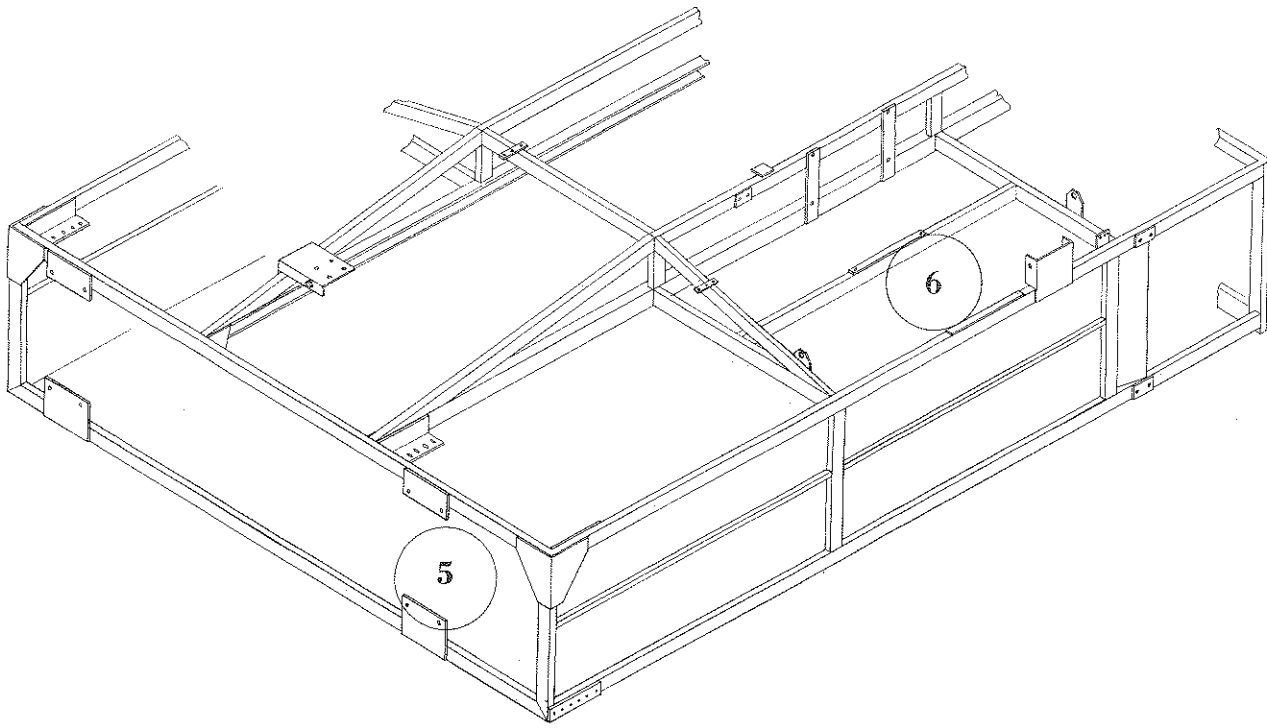


LEFT SIDE - REAR VIEW

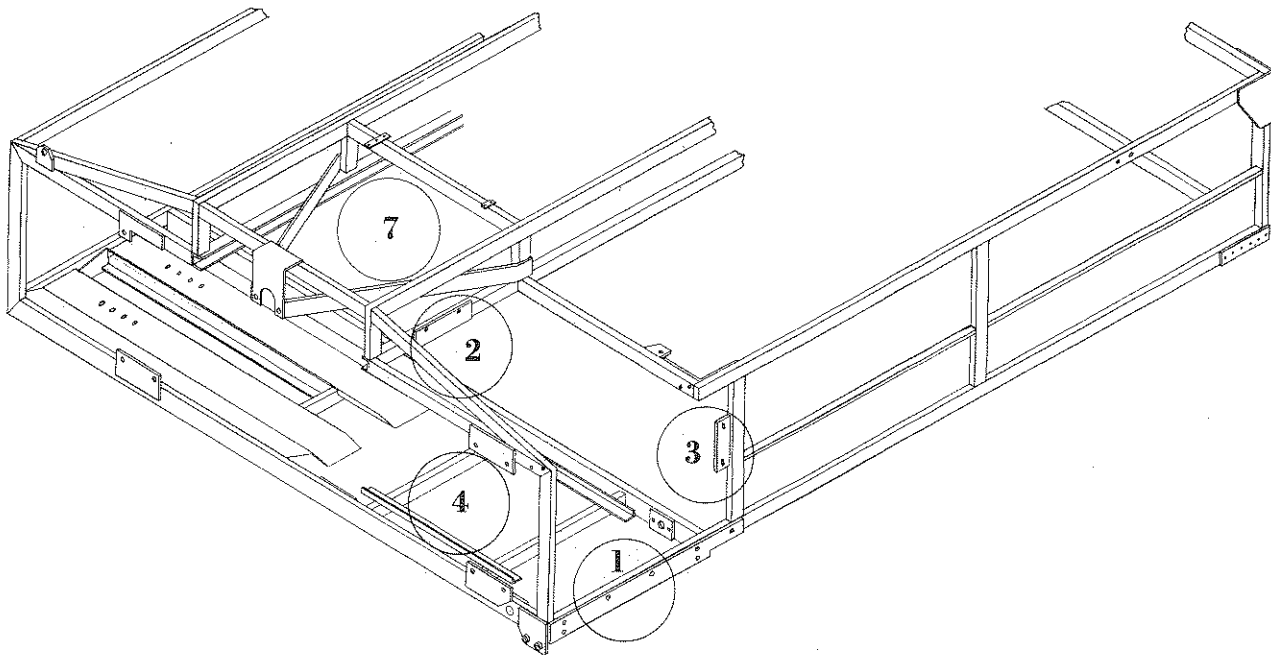**CAGE FRAME**


Part No. 11-186

REF. NO.	PART NO.	DESCRIPTION
1	5	Rear Elevator
2	8	Overhead bale guide
3	9	Trap door
44	10	Cage Conveyor
5	11	Cage index and bale support
6	14 & 15	Cage trip
7	5	Pusher

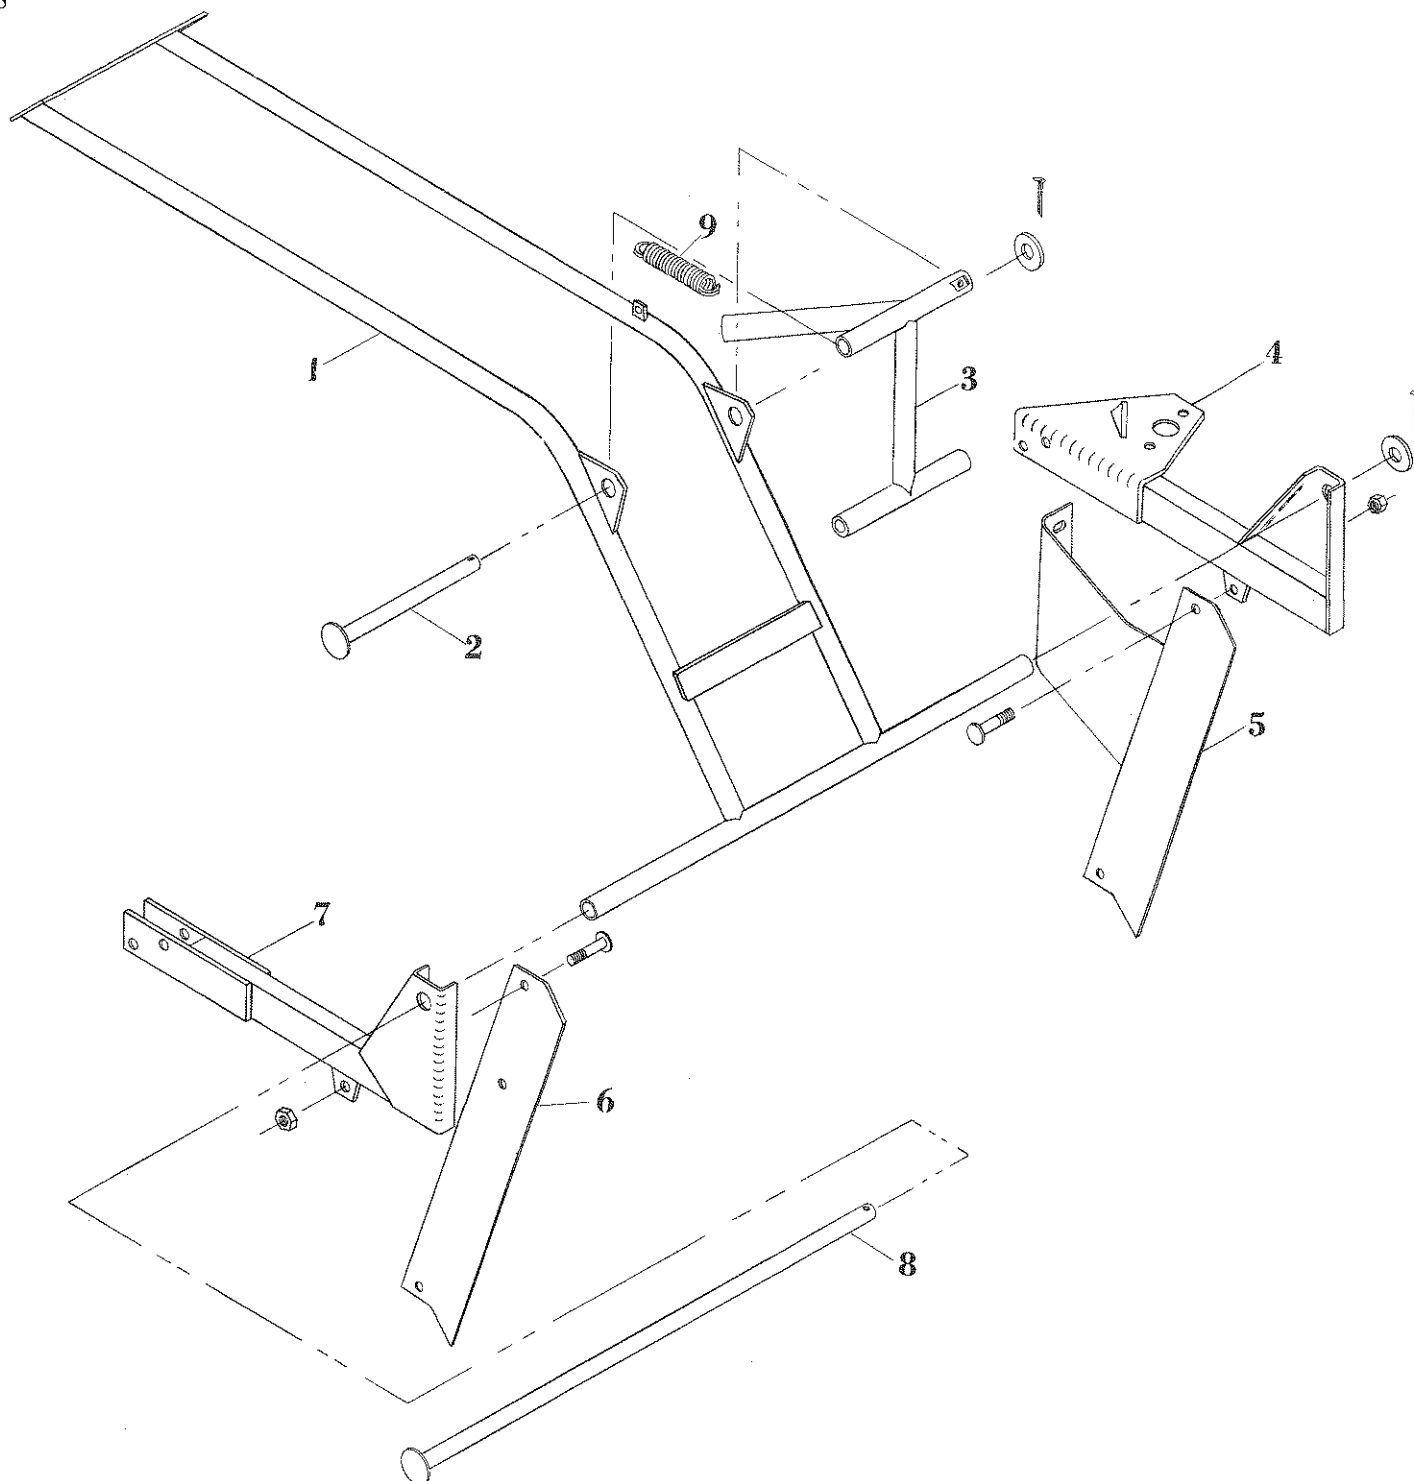


OVER HEAD BALE GUIDE

REF. NO.	PART NO.	DESCRIPTION
1	11-101	Frame, overhead bale guide
2	11-102	Pin, bale kicker
3	11-103	Bale kicker
4	11-104	Mount, bale kicker assembly, LH
5	11-105	Guide, pickup bale, LH
6	11-106	Guide, pickup bale, RH
7	11-107	Mount, bale kicker assembly, RH
8	11-108	Pin, over head bale guide
9	04-103	Spring (F268)

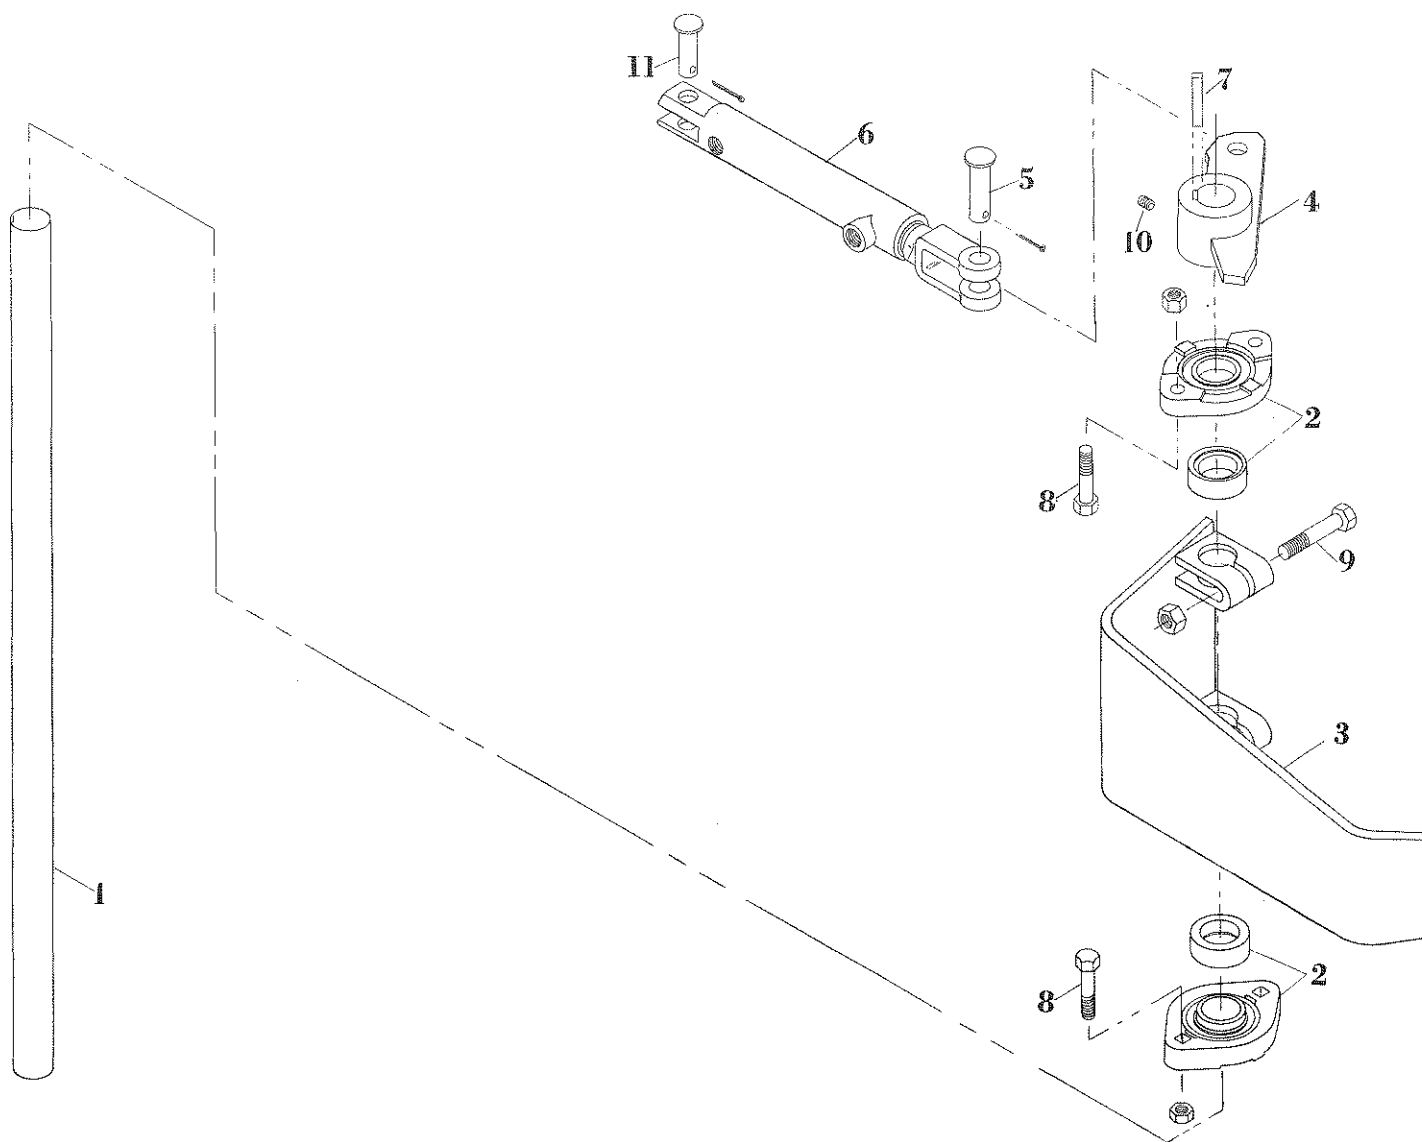


TRAP DOOR

REF. NO.	PART NO.	DESCRIPTION
1	11-110	Shaft, trap door
2	02-104	Bearing, 1" flange, FLCT-1" Fafnir, 2 used
3	11-111	Trap door
4	11-112	Cylinder arm and stop, trap door
5	06-104	Clevis pin with cotter, 1/2 x 1-3/4" (F1323)
6	01-551	Cylinder, trap door, (F5953)
	01-564	Seal kit for 01-551 cylinder
7		Key, 1/4" x 1-1/2"
8		5/16" x 1-1/4" NCHT cap screw, 4 used
9		3/8" x 2-1/4" NCHT cap screw
10		Set screw, 1/4 NC
11	06-132	Clevis pin w/cotter, 1/2" x 1-3/8" (F5049)

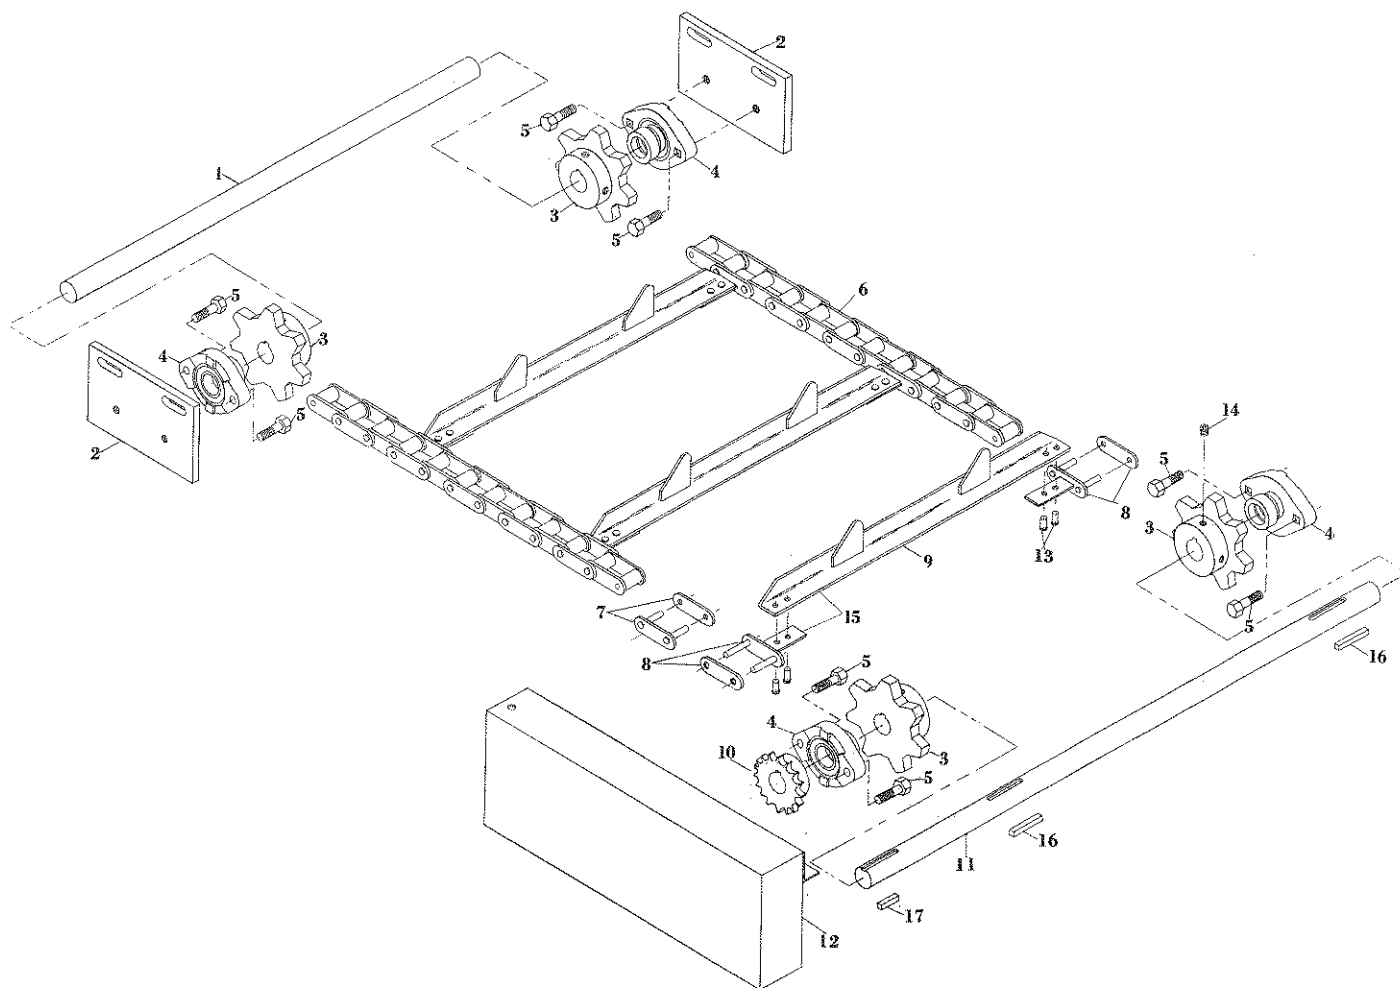


CAGE CONVEYOR

REF. NO.	PART NO.	DESCRIPTION
1	11-113	Idler shaft, cage conveyor
2	11-114	Adjustment plate, cage conveyor chain, 2 used
3	05-121	Sprocket, 7 tooth, 1" bore #550, 4 used
4	02-104	Bearing, 1" flange, FLCT-1" Fafnir, 4 used
5		5/16" x 1-1/2" NCHT cap screw, 8 used
6	11-901	Chain, cage conveyor, 48 pitch each side
7	05-107	Connecting link, #550
8	05-123	Attachment link with slat mount, CA550
9	11-115	Slat, cage conveyor, 8 used
10	05-113	Sprocket, cage conveyor, driven, 50B14 x 1"
11	11-116	Shaft, cage conveyor drive
12	11-117	Shield, cage conveyor drive chain
13		1/4" x 3/4" round head rivet
14		5/16" NC set screw
15	11-118	Slat complete with attachment link,
16		Key, 1/4" x 1-3/4"
17		Key, 1/4" x 1"

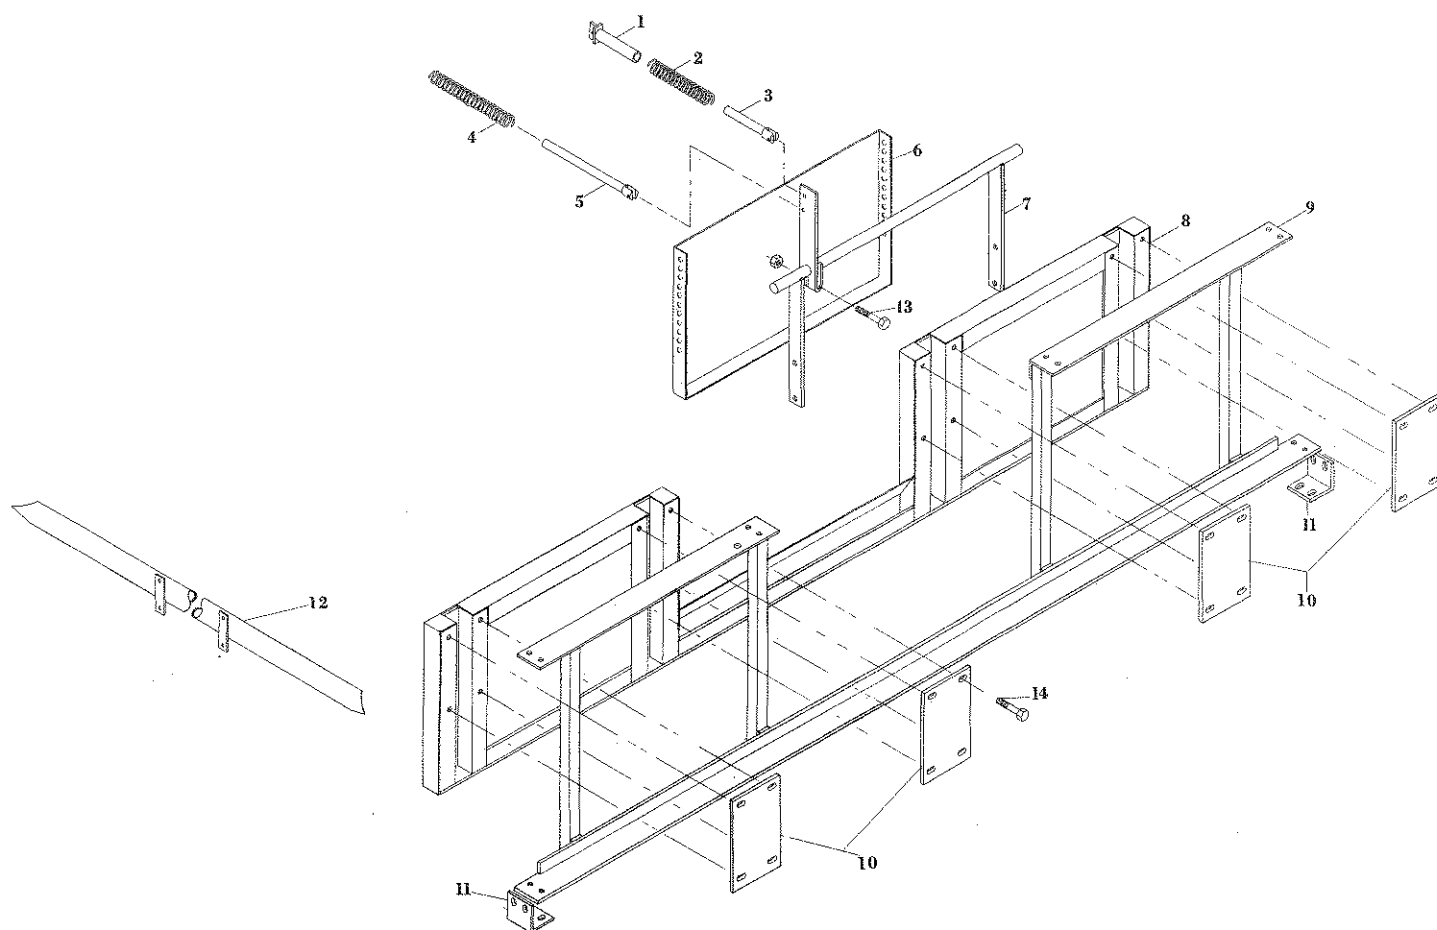


CAGE INDEX AND BALE SUPPORT

REF. NO.	PART NO.	DESCRIPTION
1	11-119	Plunger tube, cage index valve
2	04-104	Spring, index trip, #310 Winks
3	11-120	Plunger, cage index valve
4	04-105	Spring, index trip return, #461 Winks
5	11-121	Rod, index valve return
6	11-122	Skid, index
7	11-123	Frame, index
8	11-124	Bale support
9	11-125	Mount bracket, bale support
10	11-126	Guide plate, bale support, 4 used
11	11-127	Mount angle, bale support, 2 used
12	11-128	Bale guide tube, front
13		1/2" x 2-3/4" NCHT cap screw
14		3/8" x 3/4" NCHT cap screw

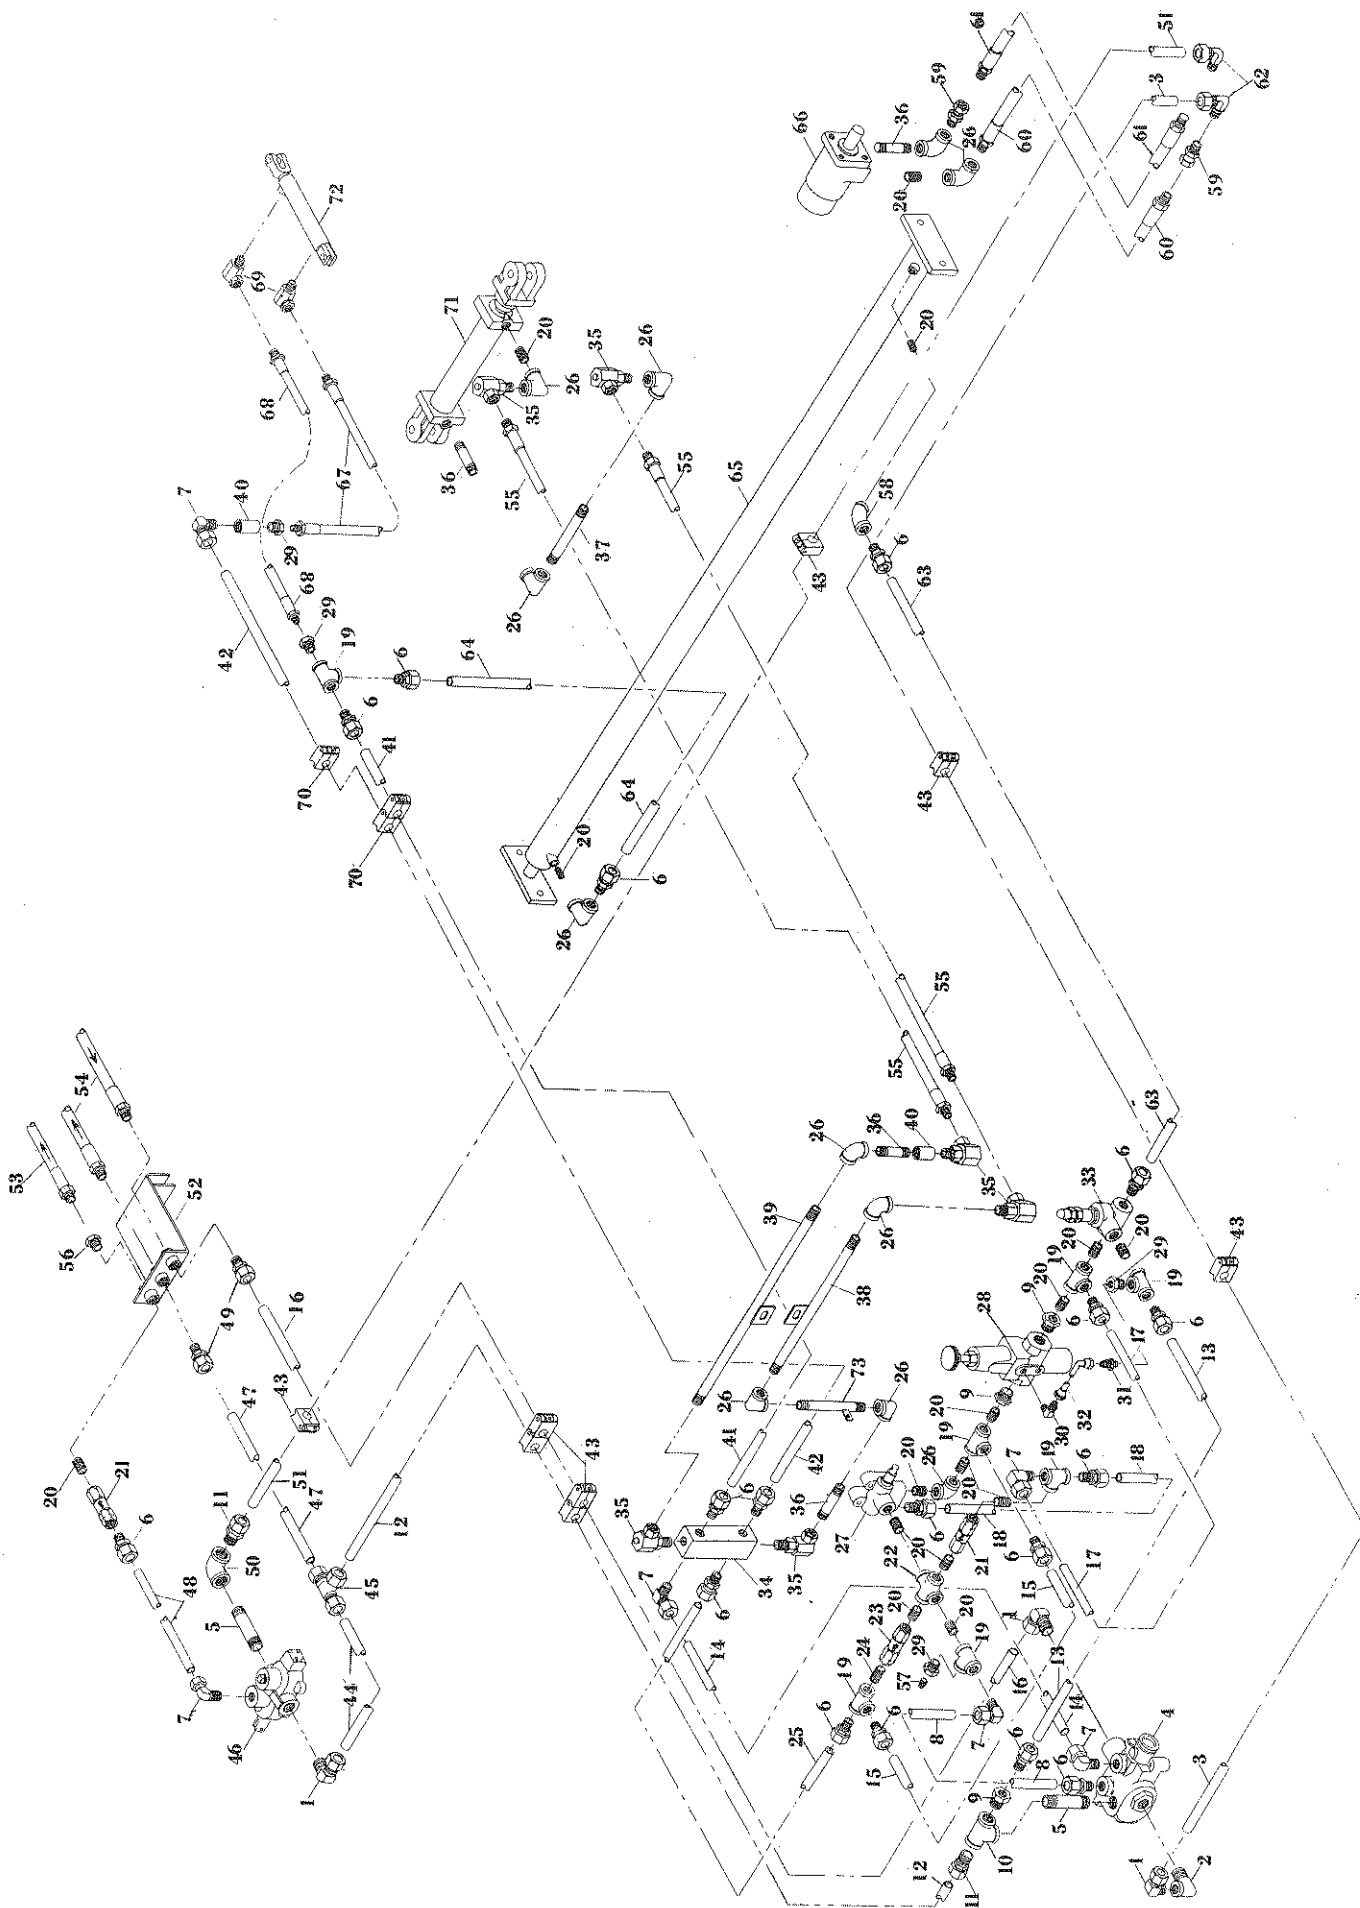


CAGE HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	01-401	3/4" x 90° male tube fitting, 3 used, 8405 x 12WH
2	01-707	3/4" x 90° steel street elbow, C3409 x 12WH
3	01-113	3/4" hydraulic tube
4	01-501	Trip valve, SPYT-4-NR-NH Gresen
5	01-726	3/4" x 4" extra heavy black nipple, 2 used
6	01-402	5/8" straight male tube fitting, 17 used, 8205 x 10WH
7	01-403	5/8" x 90° male tube fitting, 6 used, 8405 x 10WH
8	01-101	5/8" hydraulic tube
9	01-714	3/4" x 1/2" steel bushing, 3 used, C3109 x 12 x 8WH
10	01-703	3/4" steel tee, C3709 x 12WH
11	01-404	3/4" straight male tube fitting, 2 used 8205 x 12WH (F3105)
12	01-115	3/4" hydraulic tube
13	01-112	5/8" hydraulic tube
14	01-104	5/8" hydraulic tube
15	01-118	5/8" hydraulic tube
16	01-116	3/4" hydraulic tube
17	01-107	5/8" hydraulic tube
18	01-110	5/8" hydraulic tube
19	01-702	1/2" steel tee, 7 used, C 3709 x 8 WH
20	01-720	1/2" x close extra heavy black nipple, 16 used
21	01-502	Check valve, 1/2", 65#, DC500-65 Bruning
22	01-725	1/2" steel cross, C3959 x 8WH
23	01-503	Check valve, 1/2", DC500-5 Bruning
24	01-721	1/2" x 1-1/2" extra heavy black nipple
25	01-103	5/8" hydraulic tube
26	01-705	1/2" x 90° steel elbow, 11 used C3509 x 8WH
27	01-504	Selector valve, S50 Gresen
28	01-505	Sequence valve, UA2-175-PDX Double A
29	01-712	1/2" x 1/4" steel bushing, 3 used, C 3109 x 8 x 4 WH
30	01-405	1/4" x 90° male tube fitting, 8405 x 4WH (F3122)
31	01-406	1/4" straight male tube fitting, 8205 x 4 x 4 WH
32	01-119	1/4" Steel tube with fittings
33	01-506	Relief valve, JL50 Gresen, RD11A Cross
34	01-604	Hydraulic swivel block
35	01-407	1/2" x 90° Rotating swivel hydraulic fitting, 6 used, 59UC-08 x 08 x 08 Imperial
36	01-723	1/2" x 3" extra heavy black nipple, 4 used
37	01-724	1/2" x 6" extra heavy black nipple
38	01-605	Swivel arm, 15"
39	01-606	Swivel arm, 22"
40	01-710	1/2" steel coupling, 2 used, C3309 x 8WH
41	01-109	5/8" Hydraulic tube
42	01-102	5/8" Hydraulic tube
43	06-106	3/4" Tube clamp, 8 used, 100 3/4 Girard
44	01-117	3/4" Hydraulic tube
45	01-408	3/4" Tee tube union, 8705 x 12 WH
46	01-507	Index valve, 400 Gresen
47	01-111	3/4" hydraulic tube
48	01-106	5/8" hydraulic tube
49	01-409	3/4" Straight male tube fitting, 2 used, 8205 x 12 x 8 WH
50	01-706	3/4" x 90° Steel elbow, C3509 x 12 WH
51	01-114	3/4" hydraulic tube
52	11-181	Manifold, cage
53	01-221	3/8" hydraulic hose, 90", w/hose guard
54	01-235	1/2" hydraulic hose, 90", w/hose guard, 2 used
55	01-220	3/8" hydraulic hose, 22", 2 used
56	01-713	1/2" x 3/8" Steel bushing, C3109 x 8 x 6WH
57	01-715	1/4" Steel hex head plug, C3159 x 4 WH
58	01-708	1/2" x 45° Steel elbow, C 3559 x 8 WH
59	01-303	1/2" straight swivel adapter, 2 used, 9205 x 4 x 4 WH
60	01-208	1/2" hydraulic hose, 23"
61	01-222	1/2" hydraulic hose, 24-1/2"
62	01-410	3/4" x 90° Male tube fitting, 2 used, 8405 x 12 x 8 WH
63	01-108	5/8" Hydraulic tube
64	01-105	5/8" hydraulic tube
65	01-552	Hydraulic Cylinder, pusher, LC 2 x 65 Sp. Hypower
	01-559	Seal kit for 01-552 cylinder
66	01-601	Hydraulic orbit motor, A5K CharLynn
	01-618	Seal kit for 01-601 orbit motor
67	01-218	1/4" hydraulic hose, 28"
68	01-219	1/4" hydraulic hose, 52"
69	01-304	1/4" x 90° Swivel adapter, 2 used, 9405 x 4 x 4 WH
70	06-105	5/8" tube clamp, 3 used, 100 5/8" Girard
71	01-553	Hydraulic cylinder, tie, PMC8408 Prince
	01-562	Seal kit for 01-553 cylinder
72	01-551	Hydraulic cylinder, trap door, (F 5953)
	01-564	Seal kit for 01-551 cylinder
73	01-616	1/2" pipe with spring anchor

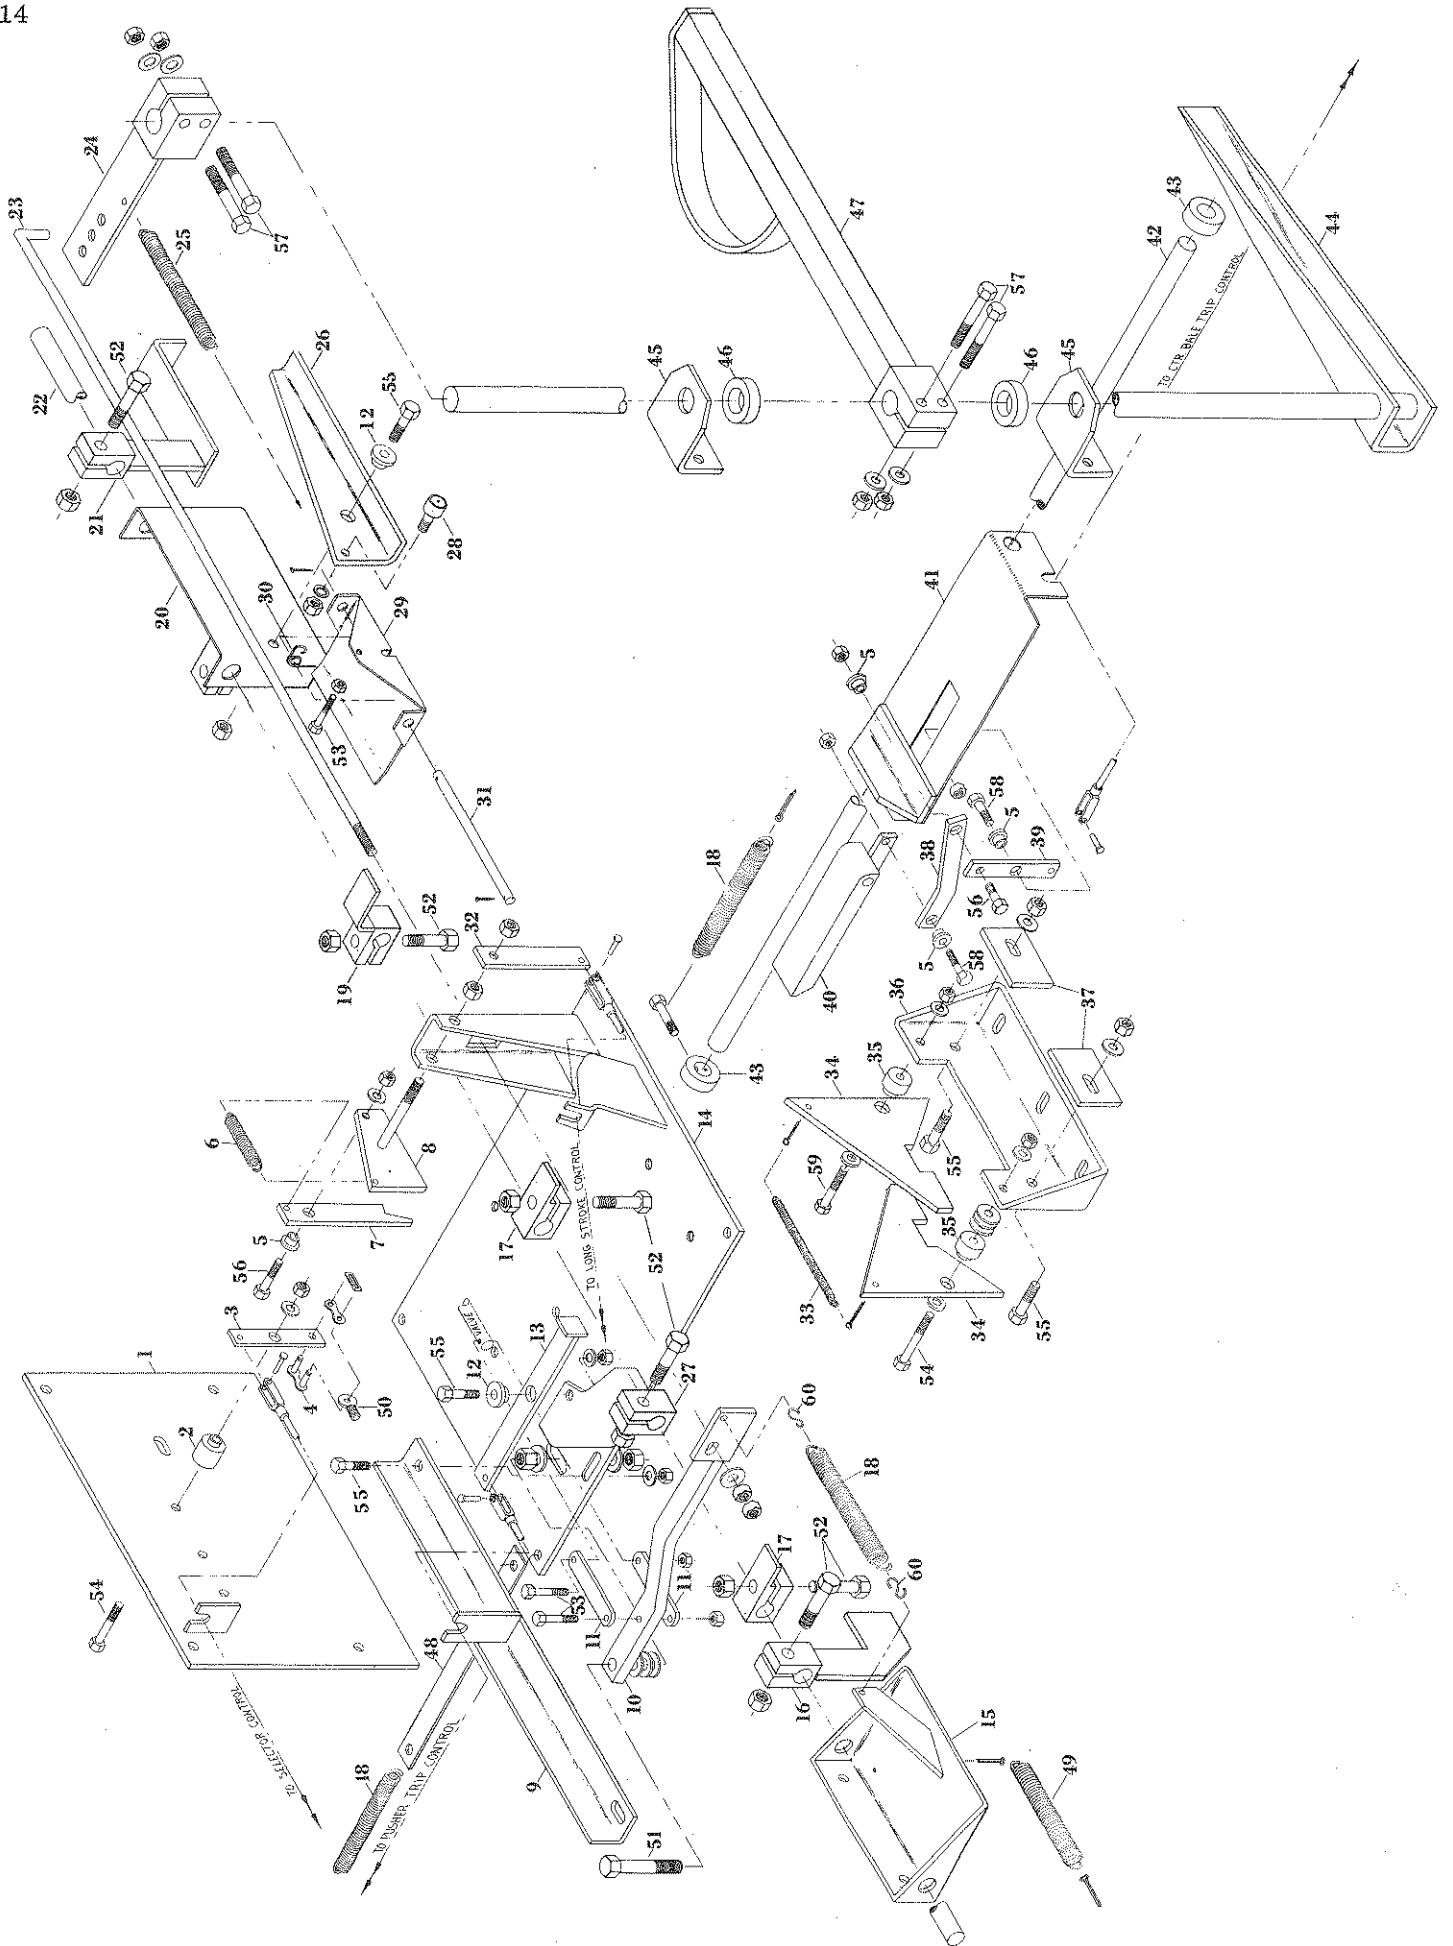


CAGE TRIP

REF. NO.	PART NO.	DESCRIPTION
1	11-129	Mounting plate, tie selector control
2	05-130	Ferrule, 1-1/8"
3	11-130	Lever, tie selector valve
4	05-115	Connecting link, RC50
5	05-131	Ferrule (F1461)
6	04-106	Spring (F4115)
7	11-131	Latch trigger
8	11-132	Cam, long stroke
9	11-133	Mount, manual control pusher trip cable
10	11-134	Lever, trip
11	11-135	Link, lever, 2 used
12	05-132	Ferrule, 7/16"
13	11-136	Lever, manual control pusher trip
14	11-137	Mount plate, valve and trip
15	11-138	Trip rod guide
16	11-139	Trip, long stroke return
17	11-140	Trip release
18	04-101	Spring (F747)
19	11-141	Release, latch trigger, long stroke
20	11-142	Mount, retracting latch
21	11-143	Lever, pusher trip stop
22	11-144	Trip rod, 3/4" x 92"
23	11-145	Rod, mechanical control trip
24	11-146	Arm, mechanical control trip
25	04-107	Spring (F 278)
26	11-147	Retracting latch, mechanical control
27	11-147	Clamp block, mechanical control return
28	11-148	Roller (F7079)
29	11-149	Trigger plate, long stroke
30	04-108	Spring (F 4210)
31	11-150	Pivot shaft, trigger plate
32	11-151	Control arm, long stroke
33	04-109	Spring, 525 Winks
34	11-152	Trip latch
35	05-133	Ferrule, 3/4"
36	11-153	Plate, trip mount
37	11-154	Stop, trip lever
38	11-155	Connecting link, center bale trip
39	11-156	Control link, center bale trip
40	11-157	Lever, center bale trip
41	11-158	Trip mount, center bale
42	11-159	Shaft, center bale trip
43	05-105	3/4" set collar
44	11-160	Trip arm, center bale
45	11-161	Mount plate, trip arm
46	05-124	1" set collar
47	11-162	Trip arm
48	11-163	Spring bracket, swivel arm
49	04-103	Spring, (F-268)
50	11-184	Valve spool stud
51		1/2" x 2-1/2" cap screw
52		7/16" x 1-3/4" NC cap screw, 7 used
53		1/4" x 1-1/4" NC cap screw, 3 used
54		5/16" x 2" (2 used) NC cap screw, 2 used
55		3/8" x 1-1/4" NC cap screw, 6 used
56		5/16" x 1" NC cap screw, 2 used
57		7/16" x 2-1/2" NC cap screw, 4 used
58		1/4" x 1" NC (2 used) cap screw, 2 used
59		5/16" x 1-1/2" NC cap screw
60	11-185	Spring hook, "S" hook

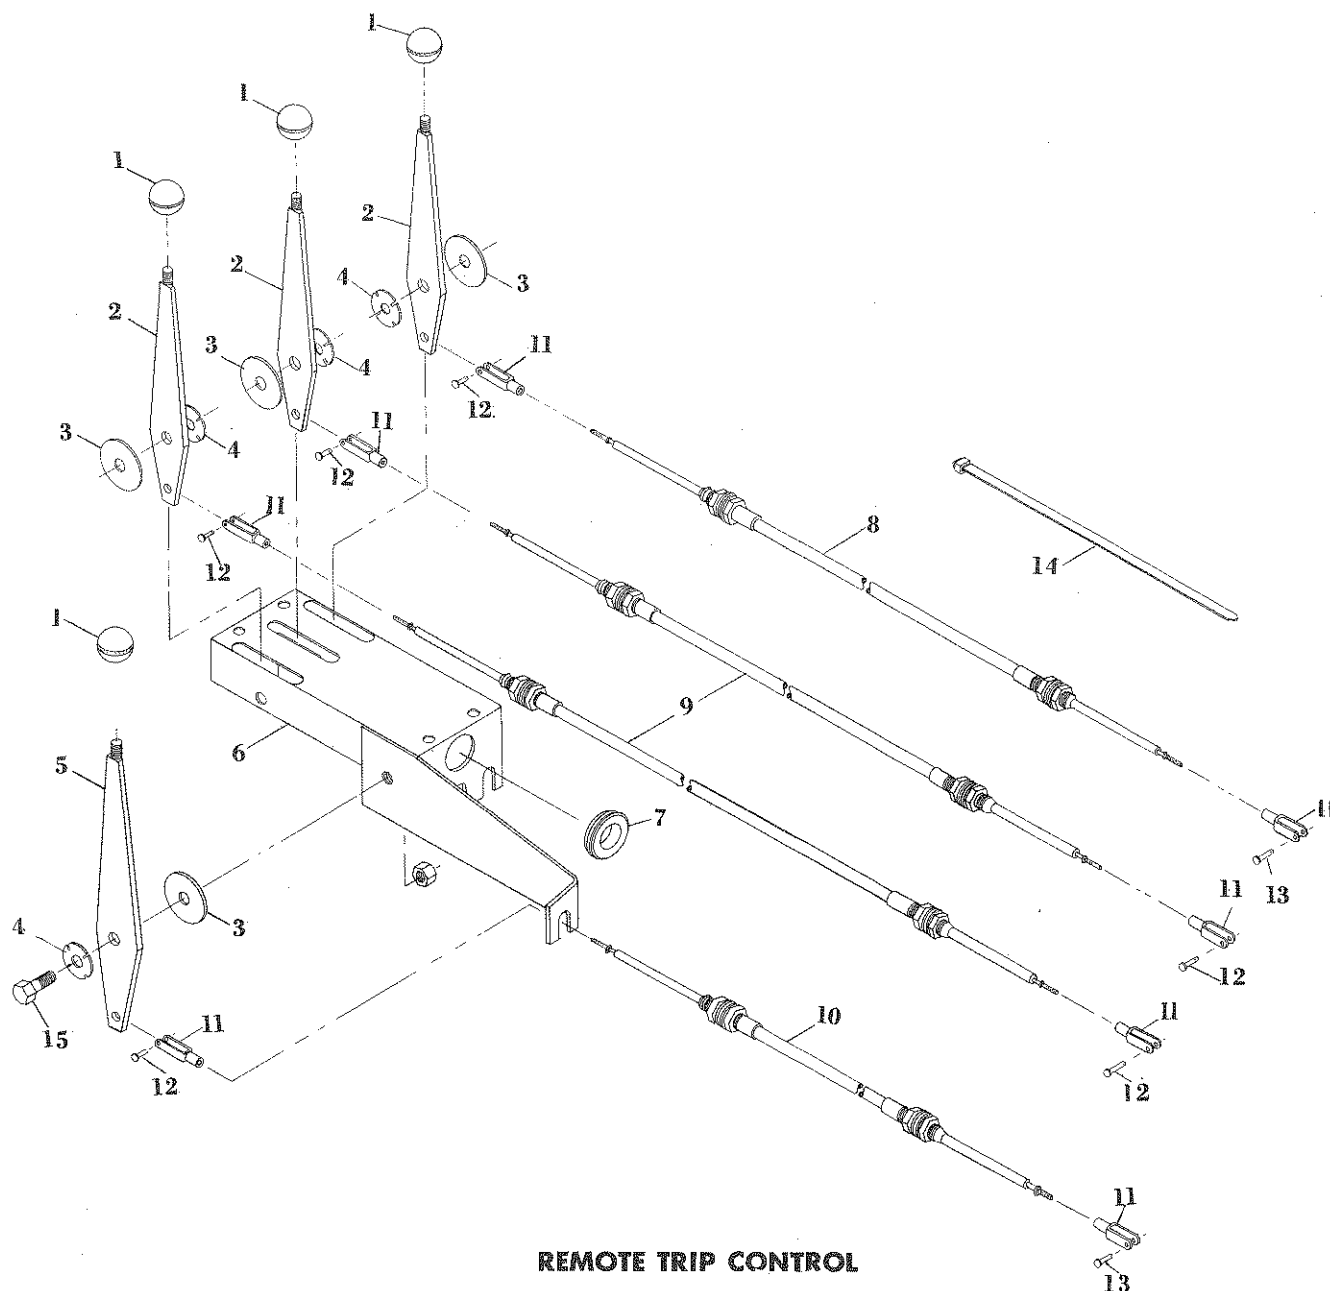


REMOTE TRIP CONTROL

REF. NO.	PART NO.	DESCRIPTION
1	05-125	Knob, control lever, 4 used, (F 5554)
2	11-164	Lever, remote control, center bale, long stroke & tie
3	05-126	Friction disc, 4 used, (F 1003)
4	06-107	Conical washer, 4 used (F 1002)
5	11-165	Lever, remote control, pusher trip
6	11-166	Mount, control lever
7	05-102	Rubber grommet, 2870 India
8	05-127	Cable, manual control, center bale, 32B30 Morse
9	05-128	Cable, manual control, long stroke & tie, 2 used, 32B25 Morse
10	05-129	Cable, manual control, pusher 33B24 Morse
11	06-108	3/16" Clevis, 8 used
12	06-109	Clevis Pin, 3/16" x 5/8", 6 used
13	06-110	Clevis pin, 3/16" x 1", 2 used
14	06-111	Tie strap, nylon, 12 used
15		3/8" x 1-1/4" NCHT cap screw, 4 used

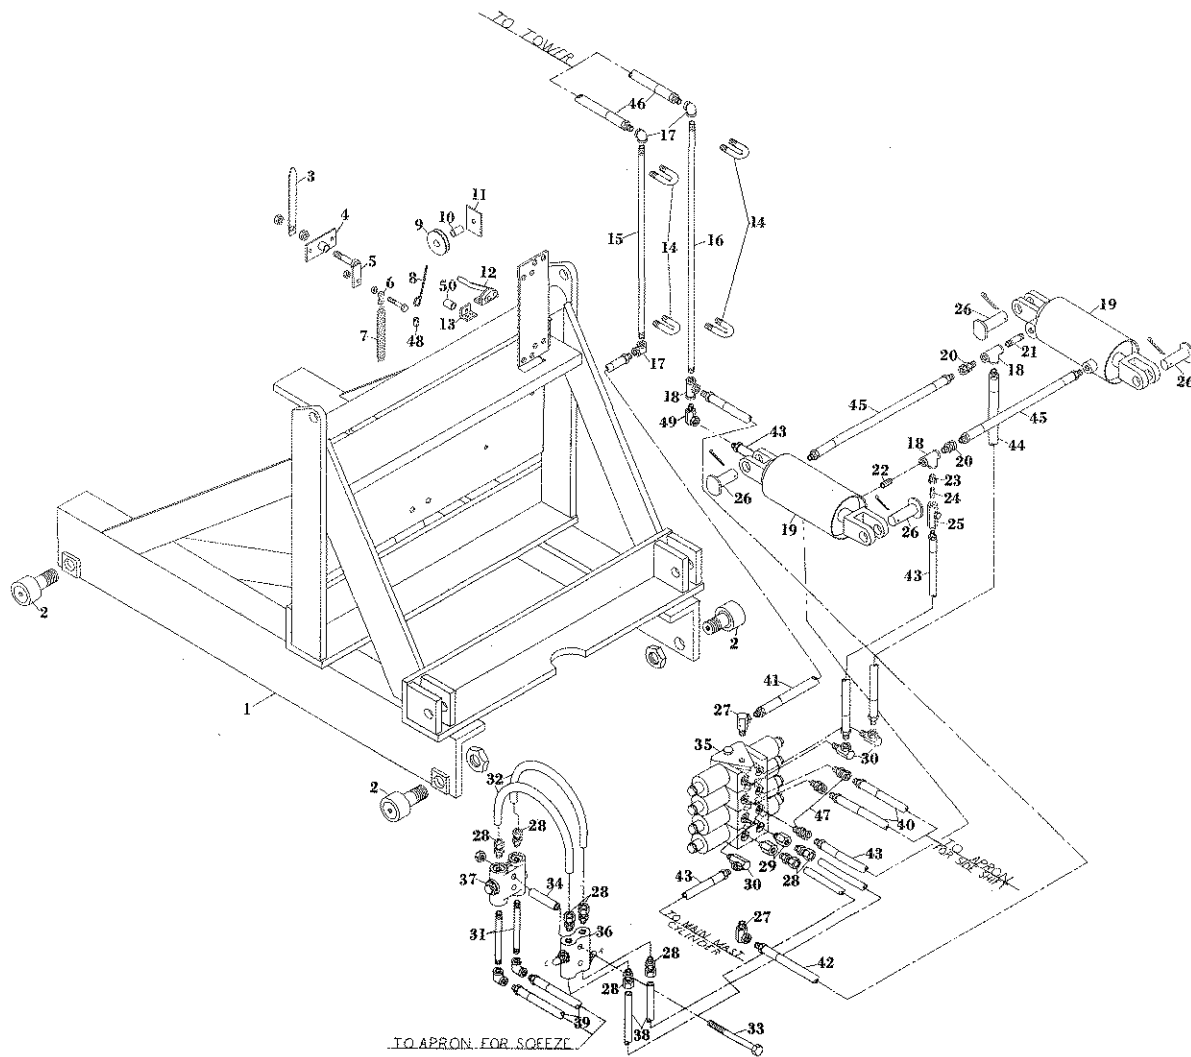


CARRIAGE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	13-103	Carriage frame	27	01-306	1/2" x 90° "O" ring, swivel adapter, 2 used, 9515 x 8 x 8WH
2	02-112	Roller, carriage, CFH 2-1/2"S McGill, 4 used	28	01-402	5/8" straight male tube fitting, 8 used, 8205 x 10WH
3	13-104	Arm, tilt indicator, (F6009)	29	01-307	1/2" Xolid adapter, 2H108F - 120RPM Cross
4	13-105	Base plate, tilt indicator, (F6122)	30	01-308	3/8" x 90° "O" ring swivel adapter, 9515 x 8 x 6WH
5	13-106	Lever, tilt indicator	31	01-724	1/2" x 6" extra heavy black nipple, 2 used
6	13-107	Link, tilt indicator spring	32	01-152	5/8" hydraulic tube, 2 used
7	04-103	Spring, (F268)	33		5/16" x 5-1/2" NC cap screw
8	05-146	Cable, tilt indicator, 1/16" x 32"	34	13-110	Spacer, 1-3/4"
9	05-147	Roller, (F4067)	35	01-509	Solenoid stack valve, 4013-13-13-13-12 VDC - FPS
10	05-148	Bushing, (F4068)		03-142	Solenoid coil only
11	13-108	Shield for roller, (F995)	36	01-510	Relief valve, RD11CA Cross
12	03-131	Switch, limit, (F946)	37	01-511	Lockout valve, LO50D Gresen, (F6188)
13	13-109	Bracket, limit switch	38	01-151	5/8" hydraulic tube, 2 used
14	06-114	"U" Bolt clamp, 4 used, 010 Chicago	39	01-209	3/8" hydraulic hose, 21", 2 used
15	01-727	1/2" x 20" extra heavy, black pipe	40	01-206	3/8" hydraulic hose, 25", 2 used
16	01-728	1/2" x 30" extra heavy, black pipe	41	01-232	1/2" hydraulic hose, 10"
17	01-705	1/2" x 90° steel elbow, 3 used, C3509 x 8WH	42	01-231	1/2" hydraulic hose, 11"
18	01-702	1/2" steel tee, 3 used, C3709 x 8WH	43	01-213	3/8" hydraulic hose, 22"
19	01-555	Hydraulic cylinder, tilt, 2 used, LC4 x 6Sp, Hypower	44	01-211	3/8" hydraulic hose, 24"
	01-560	Seal kit for 01-555 cylinder	45	01-212	3/8" hydraulic hose, 26-1/2", 2 used
20	01-302	1/2" straight swivel adapter, 2 used, 9205 x 8 x 8WH	46	01-204	1/2" hydraulic hose, 90", 2 used
21	01-722	1/2" x 2" extra heavy black nipple	47	01-309	1/2" straight "O" ring swivel adapter, 9315 x 8 x 6WH
22	01-720	1/2" x close, extra heavy black nipple	48	06-116	Cable clamp, 3-4711 Balkamp, (F5861)
23	01-713	1/2" x 3/8" steel bushing, C3109 x 8 x 6WH	49	01-311	1/2" x 90° swivel adapter, 9405 x 6 x 8 WH
24	01-718	3/8" x close, extra heavy black nipple	50	13-102	Spacer, 1-1/4"
25	01-508	Restrictor valve, F25B Pneutrol			
26	06-115	Pin, 4 used with keeper, 2-1/2" Hypower			

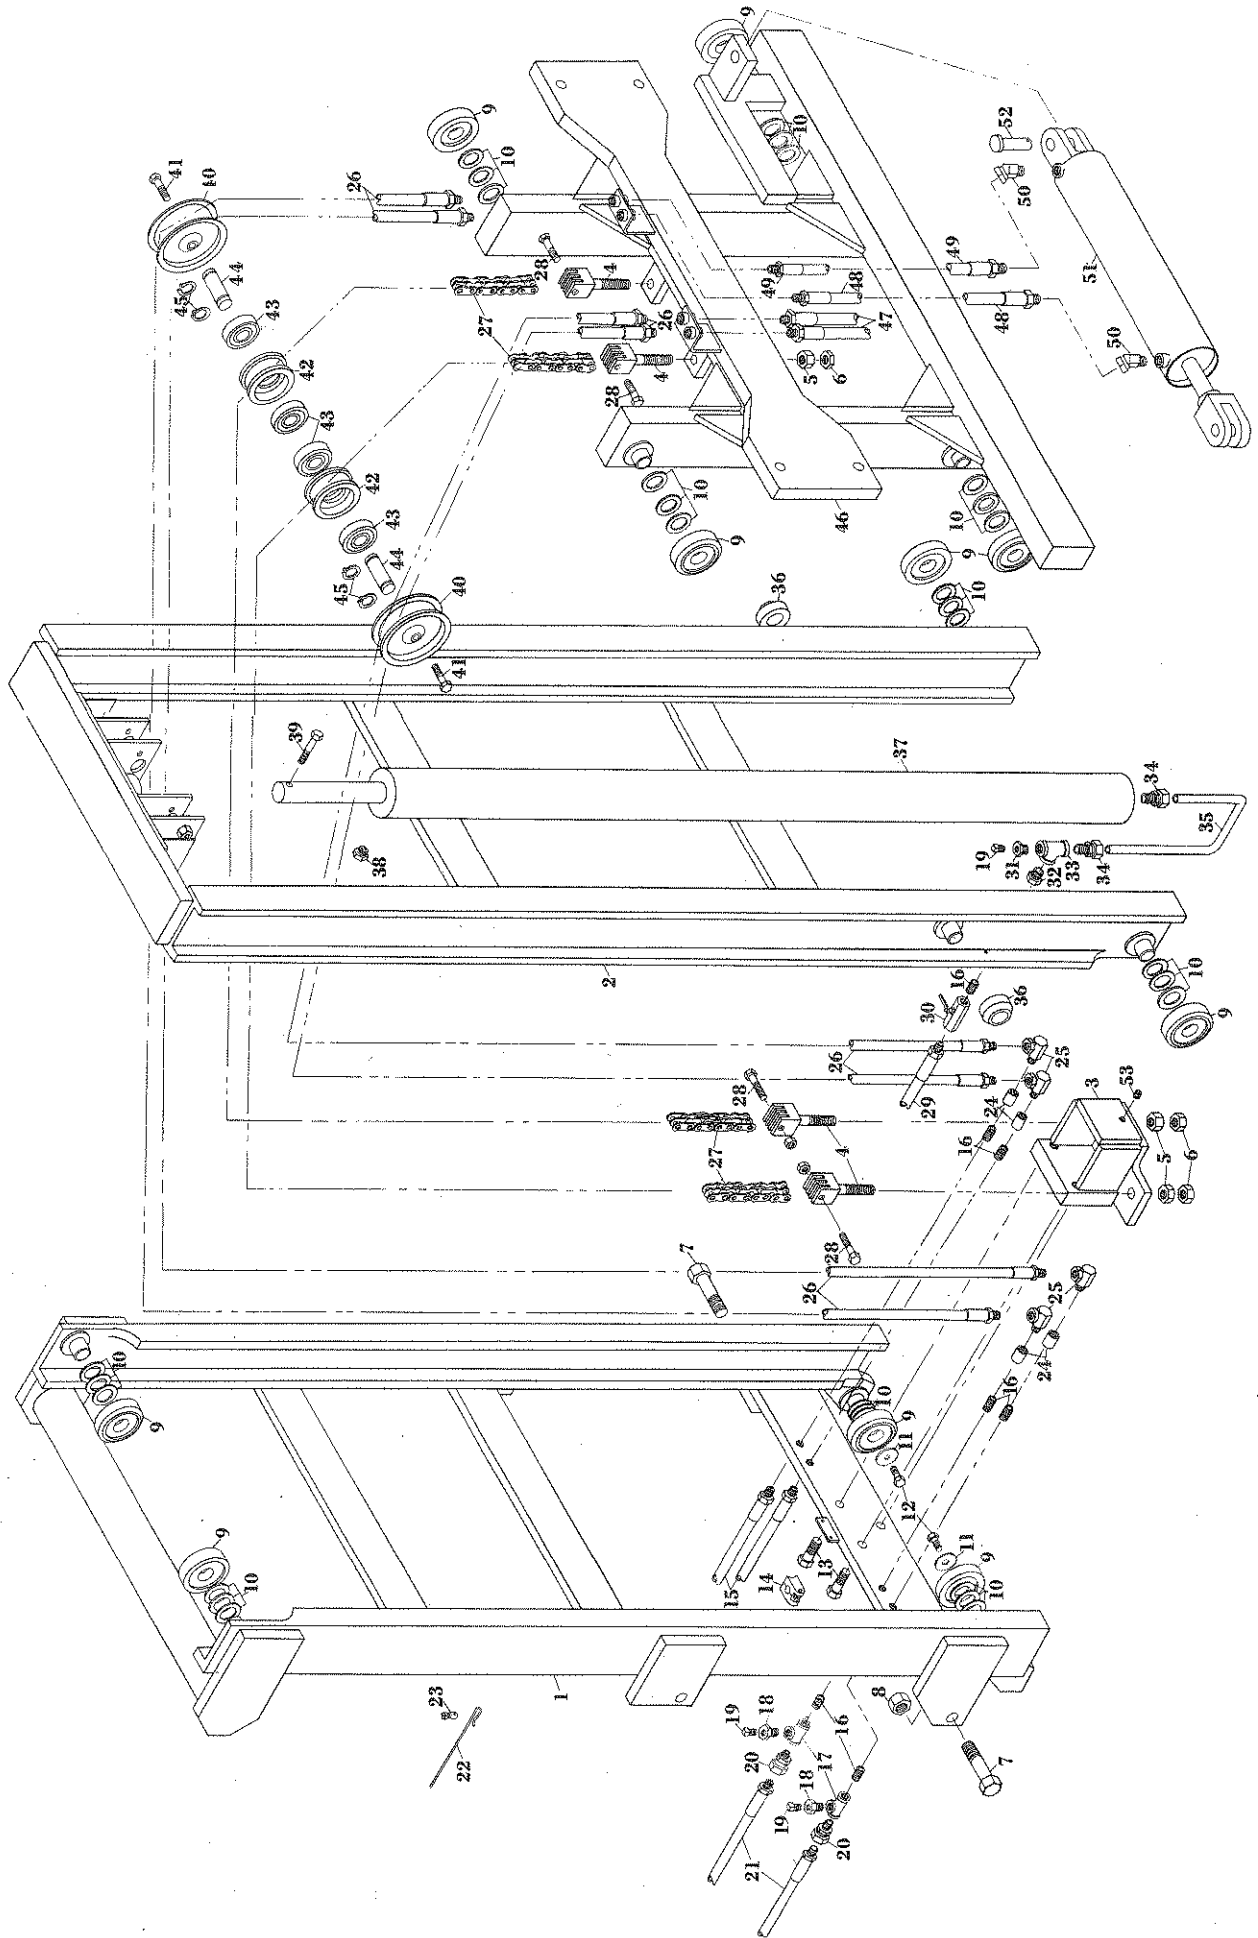


MAIN MAST

REF. NO.	PART NO.	DESCRIPTION
1	14-101	Main mast frame, outer
2	14-102	Main mast frame, inner
3	14-103	Cylinder mount
4	14-104	Anchor bolt, lift chain, 4 used
5		3/4" NF nut, 4 used
6		3/4" NF jam nut, 4 used
7	14-105	Pivot bolt, main mast, 2 used
8		1" nut, castellated, 2 used
9	02-113	Roller bearing, main mast, MRC 307SZZ4, 10 used
10	05-134	Shim washer, 10 ga. (F4159)
	05-135	Shim washer, 14 ga. (F 4160)
	05-136	Shim washer, 18 ga. (F 4161)
11	05-155	Washer, (F 246), 2 used
12		3/8" NC x 1" cap screw, 2 used
13		3/4" x 2-1/2" cap screw, 3 used
14	06-105	Tube clamp, #100 x 5/8" Girard
15	01-206	3/8" hydraulic hose, 25", 2 used
16	01-718	3/8" close extra heavy black nipple, 7 used
17	01-701	3/8" steel tee, 2 used, C3709 x 6WH
18	01-711	3/8" x 1/4" steel bushing, 2 used, C3109 x 6 x 4WH
19	01-715	1/4" steel hex head plug, 3 used C3159 x 4WH
20	01-310	3/8" straight swivel adapter, 2 used, 9205 x 6 x 6WH
21	01-209	3/8" hydraulic hose, 21", 2 used
22	05-146	Cable, tilt indicator
23	06-116	Cable clamp, 3-4711 Balkamp, (F 5861)
24	01-709	3/8" steel coupling, 4 used, C3309 x 6WH
25	01-305	3/8" x 90° swivel adapter, 4 used, 9405 x 6 x 6WH
26	01-207	3/8" hydraulic hose, 137", 4 used
27	05-106	Lift chain, 139", 2 used, BL834
28	14-110	Bolt, chain connector, 4 used
29	01-213	3/8" hydraulic hose, 22"
30	01-508	Restrictor valve, F25B Pneutrol
31	01-712	1/2" x 1/4" steel bushing, C3109 x 8 x 4 WH
32	01-713	1/2" x 3/8" steel bushing, C3109 x 8 x 6 WH
33	01-702	1/2" steel tee, C3709 x 8 WH
34	01-402	5/8" hydraulic tube fitting, 2 used, 8205 x 10WH
35	01-153	5/8" hydraulic tube,
36	14-106	Guide roller, 2 used
37	01-556	Hydraulic cylinder, main mast lift, LCA4 x 60Sp Hypower
	01-565	Seal kit for 01-556 cylinder
38	01-602	Breather, 1/2", PM-BHF-3Prince
39		3/8" x 3-1/2" NC cap screw
40	02-114	Idler roller, hose, 2 used, 6435BCA
41		1/2" x 1-3/4" Cap Screw
42	14-107	Idler Roller, Lift chain, 2 used
43	02-115	Roller Bearing, 306SZZ MRC, 4 used
44	14-108	Pin, Chain Idler Pulley, 2 used
45	06-119	Snap Rings, 4 used, 5100-113 Truarc
46	14-109	Main Mast Apron Frame
47	01-215	3/8" Hydraulic Hose, 28", 2 used
48	01-211	3/8" Hydraulic Hose, 24"
49	01-214	3/8" Hydraulic Hose, 17"
50	01-301	1/2" x 45° Swivel Adapter, 2 used, 9355 x 8 x 8WH
51	01-557	Hydraulic Cylinder, Side Shift, LC 4 x 18 Sp Hypower
	01-560	Seal kit for 01-557 cylinder
52	06-115	Pin With Keeper, Hypower
53		1/2" x 1/2" Socket Head Set Screw

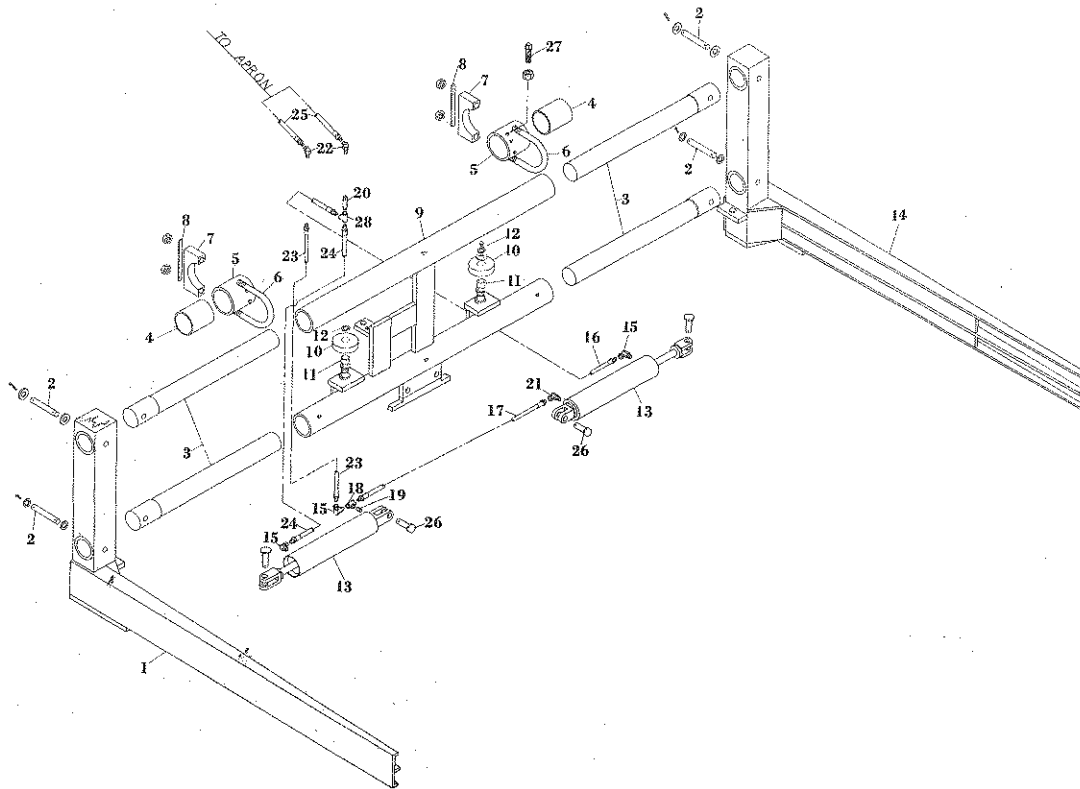


SQUEEZE

REF. NO.	PART NO.	DESCRIPTION
1	15-101	Squeeze arm, LH
2	15-102	Pin, squeeze side shift, 4 used
3	15-103	Shaft, squeeze side shift, 4 used
4	02-116	Brass bushing, side shift bearing, 2 used, J9800 Bunting
5	15-104	Bearing, side shift, 2 used
6	15-105	"U" bolt, side shift bearing 2 used
7	15-106	Bearing saddle, side shift, 2 used
8	15-107	Shim, side shift bearing saddle
9	15-108	Squeeze frame
10	15-109	Roller, side shift, 2 used
11	02-117	Bushing, side shift roller, 2 used MI-22 McGill, (F4135)
12	06-120	Snap ring, side shift roller, 5100- 137 Truarc
13	01-557	Hydraulic cylinder, squeeze, 2 used, LC4x18 Sp Hypower
	01-560	Seal kit for 01-557 cylinder
14	15-110	Squeeze arm, RH
15	01-311	1/2" x 90° swivel adapter, 3 used, 9405 x 6 x 8WH
16	01-216	3/8" hydraulic hose, 43"
17	01-205	1/2" hydraulic hose, 12"
18	01-702	1/2" Steel Tee, C3709 x 8
19	01-720	1/2" close extra heavy black nipple
20	01-719	3/8" x 4" extra heavy black nipple
21	01-312	1/2" x 90° swivel adapter, 9405 x 8 x 8WH
22	01-313	3/8" x 45° Swivel adapter, 2 used, 9355 x 6 x 6WH
23	01-217	3/8" hydraulic hose, 20"
24	01-213	3/8" hydraulic hose, 22"
25	01-215	3/8" hydraulic hose, 28"
26	06-115	Pin, w/keeper, Hypower 2-1/2", 4 used
27		3/8" x 1" Square head Set Screw w/jam nut, 4 used
28	01-701	3/8" Steel tee, C 3709 x 6WH

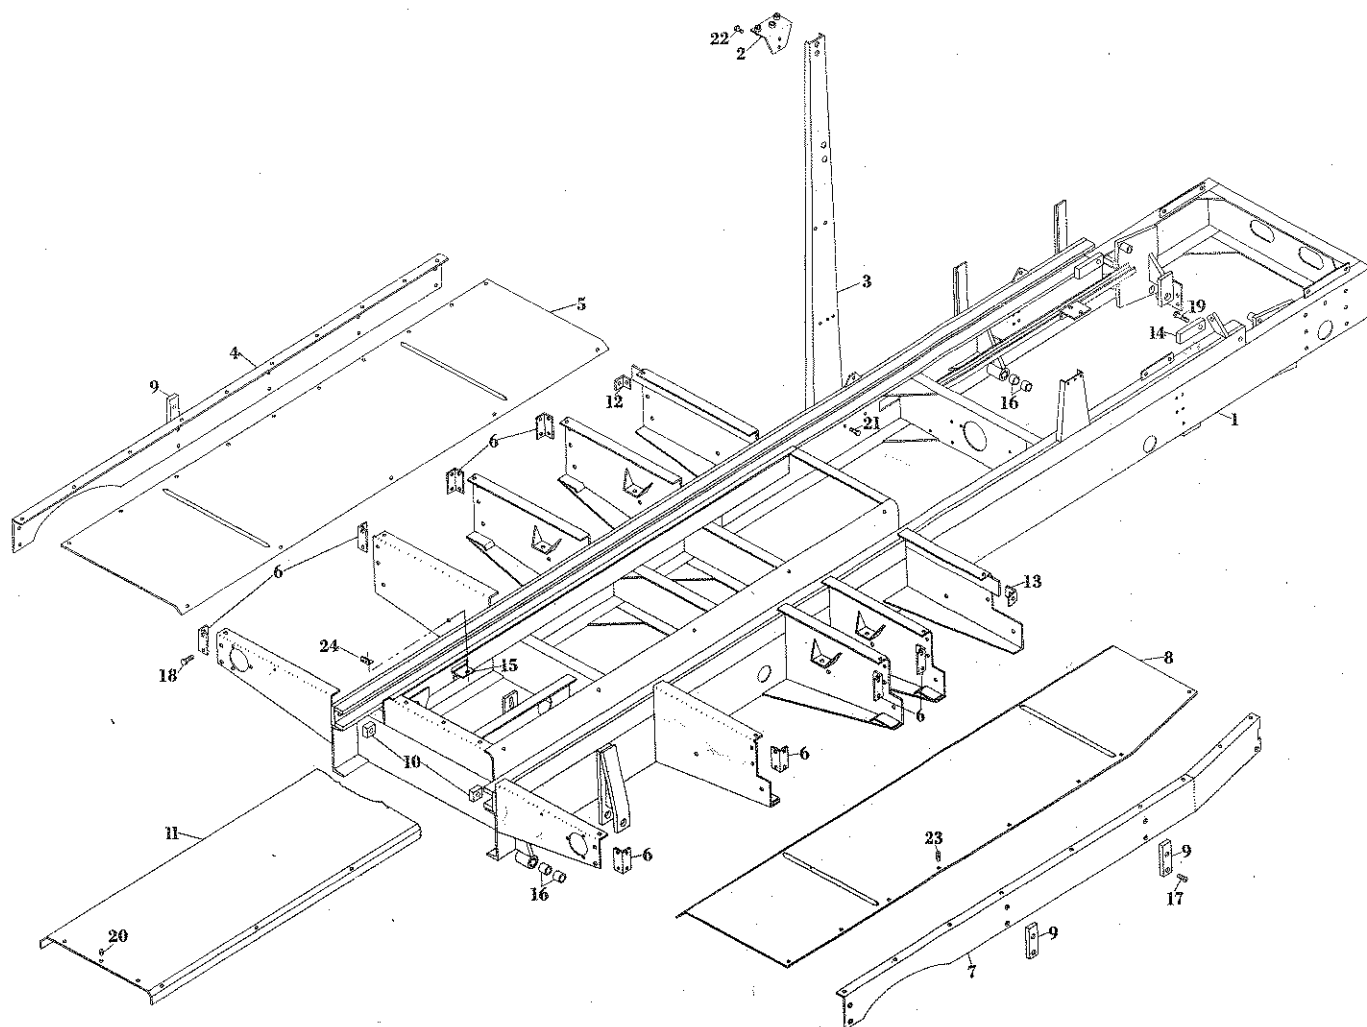


MAIN FRAME

REF. NO.	PART NO.	DESCRIPTION
1	16-101	Main frame
2	16-102	Hose mount plate, tower
3	16-103	Tower
4	16-104	Side trim, LH
5	16-105	Deck plate, LH
6	16-106	Bracket, side trim, 8 used
7	16-107	Side trim, RH
8	16-108	Deck plate, RH
9	16-109	Stop, squeeze, 3 used
10	16-110	Stop, carriage, rear, 2 used
11	16-111	Deck plate, center
12	16-112	Bracket, side trim
13	16-113	Bracket, side trim
14	16-114	Stop, carriage, front, 2 used
15	16-115	Mounting Bracket, limit switch mount, 2 used
16	02-118	Bushing, 1-1/8" x 1-3/8" x 1-1/2", 8 used (F 4027)
17		3/8" x 1-3/4" NC flat head socket cap screw
18		3/8" x 1-1/2" NC cap screw
19		5/8" x 2-1/2" NCHT cap screw, 4 used
20		3/8" x 3/4" NC button head socket cap screw
21		1/2" x 1-1/4" NCHT cap screw, 3 used
22		3/8" x 1" NCHT cap screw, 2 used
23		3/8" x 1" NC button head socket cap screw, 16 used
24	13-109	Limit switch bracket, 2 used

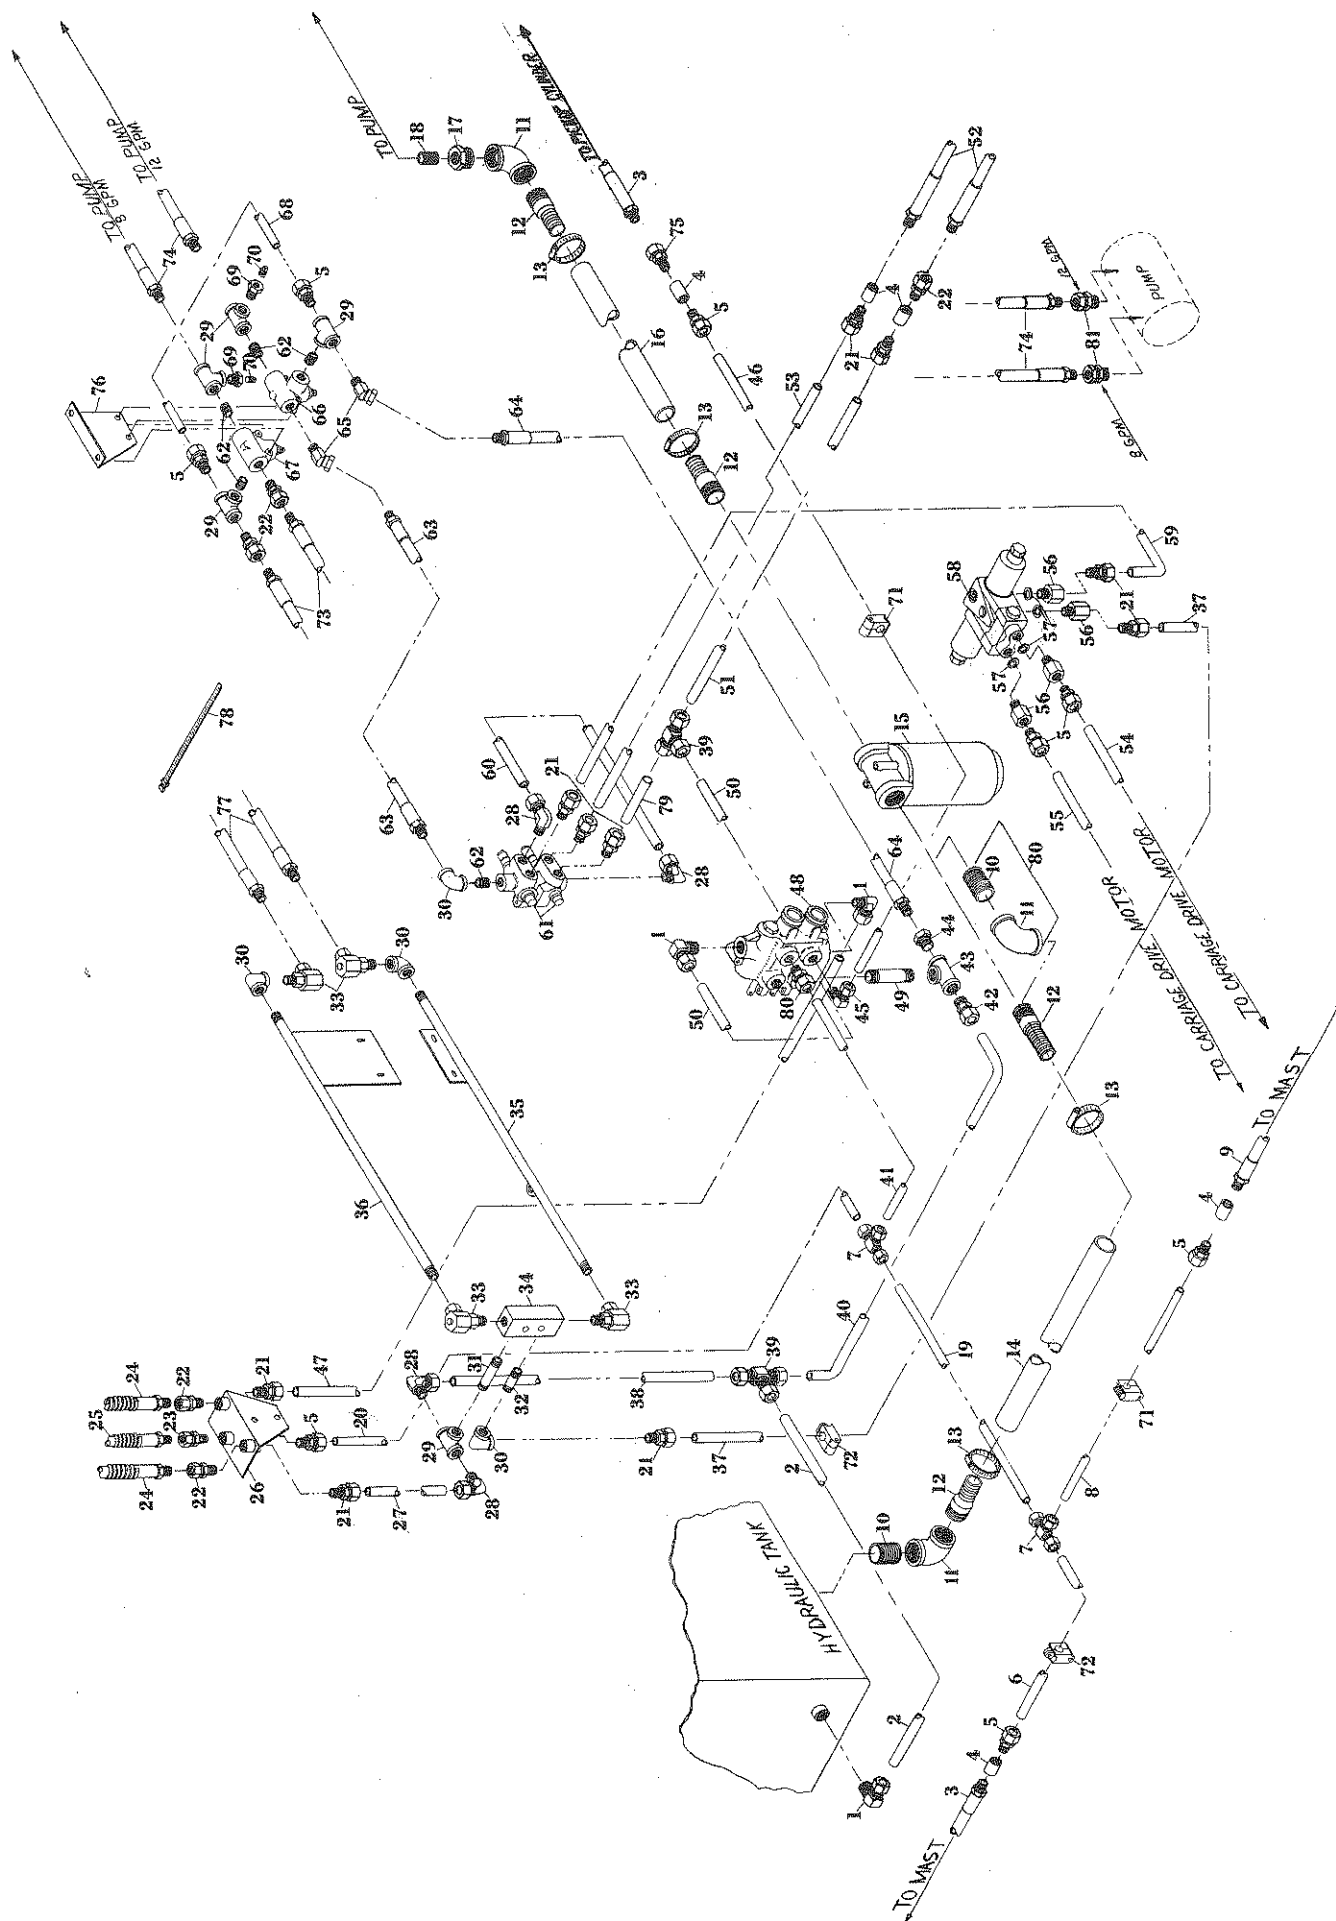


MAIN FRAME HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	01-401	3/4" x 90° hydraulic tube fitting, 3 used, 8405 x 12WH	40	01-141	3/4" hydraulic tube
2	01-142	3/4" hydraulic tube	41	01-121	5/8" hydraulic tube
3	01-211	3/8" hydraulic hose, 24", 2 used	42	01-404	3/4" straight hydraulic tube fitting, 8205 x 12WH
4	01-710	1/2" steel coupling, 5 used, C3309 x 8WH	43	01-703	3/4" Steel tee, C3709 x 12WH
5	01-402	5/8" straight hydraulic tube fitting, 9 used, 8205 x 10WH	44	01-714	3/4" x 1/2" Steel bushing, C3109 x x 12 x 8WH
6	01-125	5/8" hydraulic tube	45	01-403	5/8" x 90° hydraulic tube fitting, 8405 x 10WH
7	01-412	5/8" tee union hydraulic tube fitting, 2 used, 8605 x 10WH	46	01-128	5/8" hydraulic tube
8	01-124	5/8" hydraulic tube	47	01-136	3/4" hydraulic tube
9	01-210	3/8" hydraulic hose, 47"	48	01-512	Valve, pickup and mast, SPYE-3-3- NRFNH Gresen
10		1-1/4" x close standard black nipple	49	01-726	3/4" x 4" extra heavy black nipple
11		1-1/4" x 90° standard black elbow, 2 used	50	01-139	3/4" hydraulic tube
12	01-612	1-1/4" hose nipple, 4 used, 73270018 Gates	51	01-133	3/4" hydraulic tube
13	06-121	Hose clamp, 4 used, 4-1203BK	52	01-203	1/2" hydraulic hose, 65", 2 used
14	01-201	1-1/4" suction hose, 48", 3580-0125 Gates	53	01-134	3/4" hydraulic tube
15	01-611	Oil filter, FA203 Gresen	54	01-126	5/8" hydraulic tube
	01-617	Filter element, for 01-611	55	01-127	5/8" hydraulic tube
16	01-202	1-1/4" suction hose, 18", 3580- 0125 Gates	56	01-413	1/2" "O" Ring adapter fitting, 4 used, C5255 x 8 x 8WH
17		3/4" x 1-1/4" standard black hex bushing	57	01-414	"O" Ring, 4 used, 7629 x 8WH
18		3/4" x close standard black nipple	58	01-515	Solenoid valve, carriage travel, with relief, 4413F 12VDC FPS
19	01-123	5/8" hydraulic tube		03-142	Solenoid coil only
20	01-122	5/8" hydraulic tube	59	01-131	3/4" hydraulic tube
21	01-409	3/4" straight hydraulic tube fitting, 7 used, 8205 x 12 x 8WH	60	01-132	3/4" hydraulic tube
22	01-302	1/2" straight swivel adapter, 9205 x 8 x 8WH	61	01-504	Valve, system selector & pickup motor 2 used, S-50 Gresen
23	01-314	3/8" straight swivel adapter, 9205 x 6 x 8WH	62	01-720	1/2" x close extra heavy black nipple, 5 used
24	01-235	1/2" hydraulic hose with hose guard, 90", 2 used	63	01-230	1/2" hydraulic hose, 50"
25	01-221	3/8" hydraulic hose, 90"	64	01-233	1/2" hydraulic hose, 60"
26	16-102	Hose mount plate, tower	65	01-301	1/2" x 45° swivel adapter, 2 used, 9355 x 8 x 8WH
27	01-138	3/4" hydraulic tube	66	01-513	Relief valve, RD11D, 2000 psi
28	01-410	3/4" x 90° hydraulic tube fitting, 4 used 8405 x 12 x 8WH	67	01-514	Relief valve, RD11C, 1500 psi
29	01-702	1/2" steel tee, 5 used C3709 x 8WH	68	01-154	5/8" hydraulic tube
30	01-705	1/2" x 90° steel elbow, 4 used, C3509 x 8WH	69	01-712	1/2" x 1/4" Steel bushing, 2 used, C3109 x 8 x 4WH
31	01-723	1/2" x 3" extra heavy black nipple	70	01-715	1/4" Steel hex head plug, C3159 x 4WH
32	01-722	1/2" x 2" extra heavy black nipple	71	06-105	5/8" tube clamp, 8 pr. used, #100 Girard
33	01-407	1/2" x 90° rotating swivel fitting, 4 used, 59UC-08-08-08 Imp.	72	06-106	3/4" tube clamp, 4 pr. used #100 Girard
34	01-608	Swivel block, hydraulic	73	01-229	3/8" hydraulic hose, 2 used, 57"
35	01-609	Swivel arm, hydraulic, lower	74	01-222	1/2" hydraulic hose, 24-1/2", 2 used
36	01-610	Swivel arm, hydraulic, upper	75	01-315	1/2" straight swivel restricted adapter, 61SA08 x 08 Imperial
37	01-137	3/4" hydraulic tube	76	11-182	Mount plate, relief valves
38	01-143	3/4" hydraulic tube	77	01-204	1/2" hydraulic hose, 90", 2 used
39	01-408	3/4" tee union hydraulic tube fitting, 2 used 8705 x 12WH	78	06-111	Tie strap, nylon, 12 used
			79	01-135	3/4" hydraulic tube
			80	01-415	5/8" Straight hydraulic restricted tube fitting
			81	01-317	7/8" O-ring straight swivel adapter, 2 H0714-08 Cross

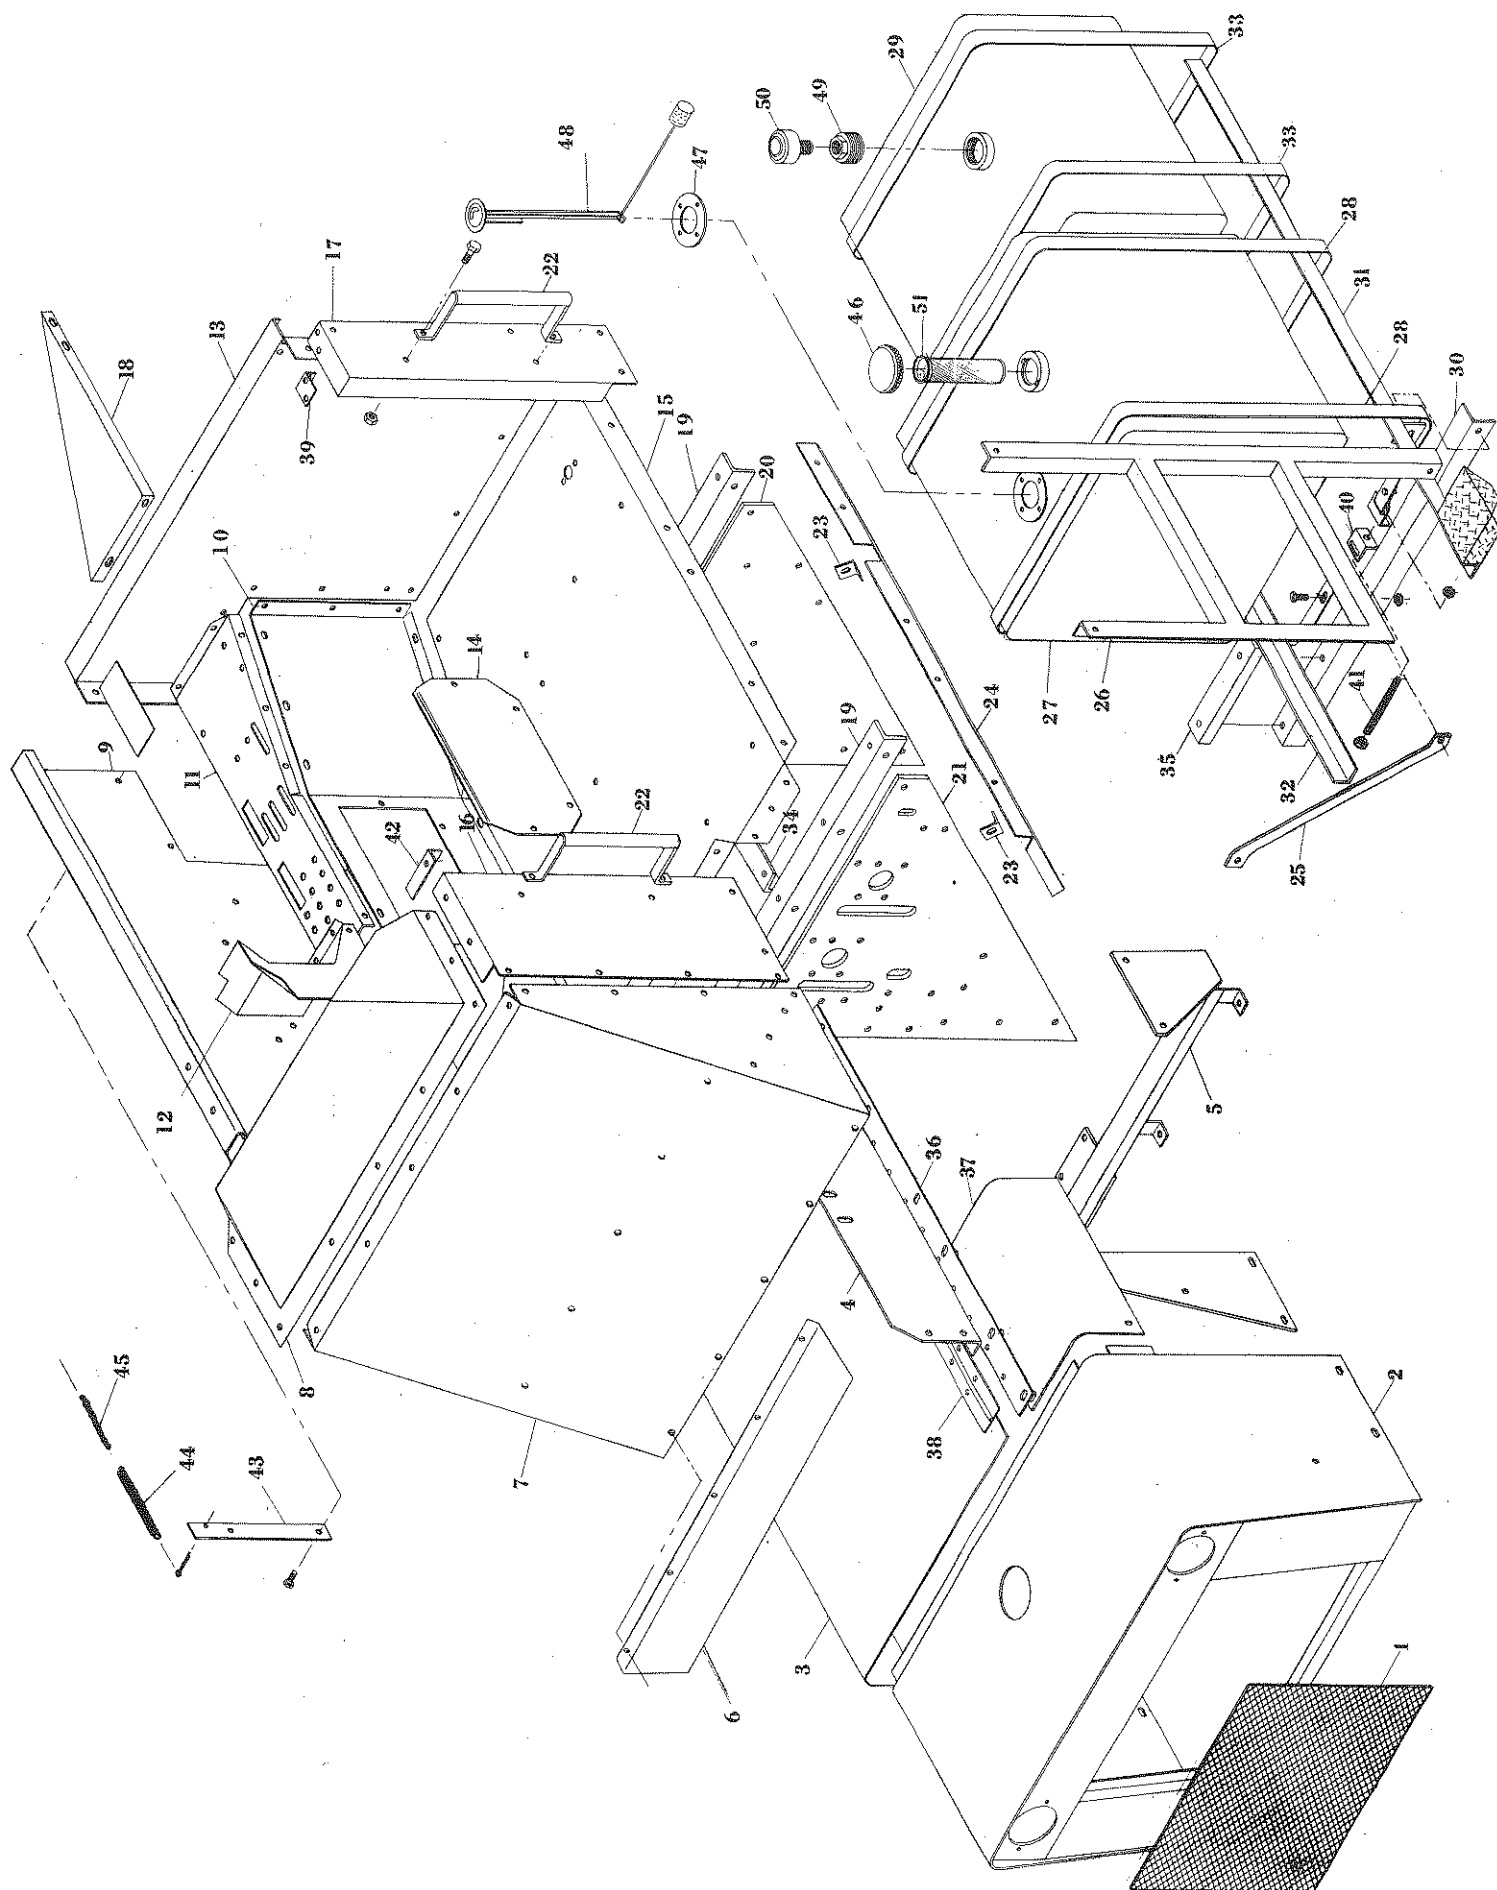


PLATFORM AND ENGINE HOOD

REF. NO.	PART NO.	DESCRIPTION
1	17-101	Grill
2	17-102	Hood, front
3	17-103	Hood, right side
4	17-104	Shield, platform, RH
5	17-105	Hood support, gasoline
	17-106	Hood support, diesel
6	17-107	Shield, platform, front
7	17-108	Panel, platform, front
8	17-109	Panel, instrument
9	17-110	Side panel, RH, platform
10	17-111	Side, control panel
11	17-112	Panel, control
12	17-113	Panel, control top
13	17-114	Panel, rear, platform
14	17-115	Cover, control panel side
15	17-116	Platform
16	17-117	Side panel, LH, front platform
17	17-118	Side panel, LH, rear platform
18	17-119	Support, tower
19	17-120	Ribs, platform mount, 2 used
20	17-121	Support, rear platform
21	17-122	Support, front platform
22	17-123	Hand rail, platform, 2 used
23	17-124	Shield mount, 2 used
24	17-125	Shield, platform, LH
25	17-126	Brace, ladder
26	17-127	Ladder
27	17-128	Fuel tank
28	17-129	Tank straps, fuel, 2 used
29	17-130	Hydraulic tank
30	17-131	Bracket, tank rail support
31	17-132	Tank rail, LH
32	17-133	Tank rail, RH
33	17-134	Tank strap, hydraulic, 2 used
34	17-135	Rib, platform center
35	17-136	Spacer, tank rail support
36	17-137	Plate, hood hinge
37	17-138	Hood, left side
38	17-139	Hinge, hood
39	17-140	Connecting angle, platform panel
40	17-141	Tank strap anchor, 8 used
41	17-142	Bolt with nut, tank strap
42	17-143	Angle, signal control mount
43	17-144	Bracket, swivel arm stop
44	04-112	Spring, swivel arm return, 641 Winks
45	05-110	Chain, swivel arm return
46	17-145	Cap, fuel tank (F1689)
47	17-146	Gasket, fuel gauge (F5949)
48	17-147	Gauge, fuel (F5948)
49		3/4" x 2" standard hex bushing
50	01-613	Breather, hydraulic tank (FT530)
51	17-148	Filter screen, fuel tank (F5950)

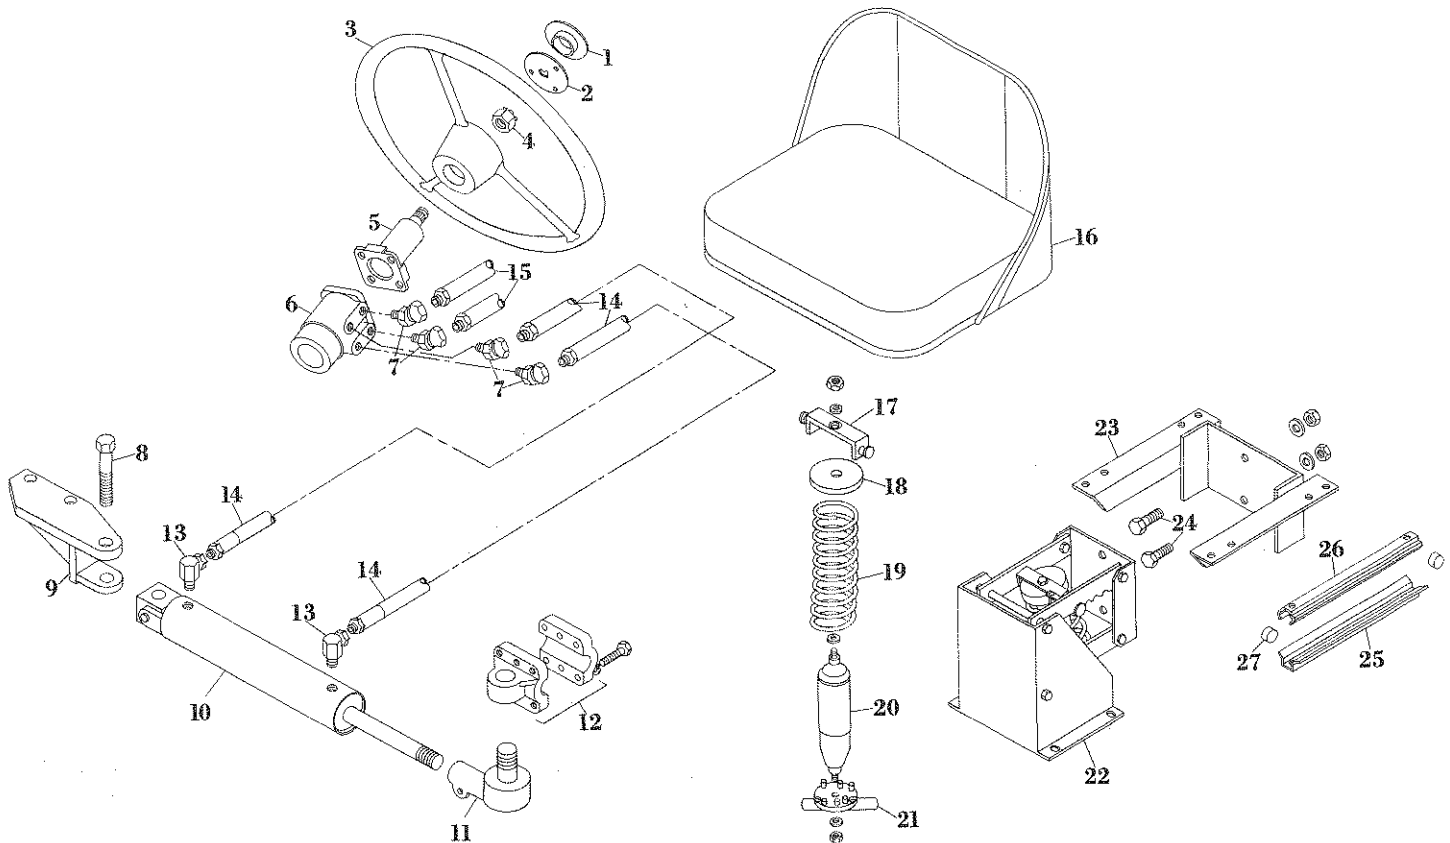


SEAT AND STEERING

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17-149	Steering column cap, 18" wheel, - 0026 (F 5031)	13	01-305	3/8" x 90° swivel adapter, 2 used, 9405 x 6 x 6WH
	17-168	Steering column cap, 14" wheel 0027 -, (F 6575)	14	01-234	3/8" Hydraulic hose, 100", 2 used
2	17-150	Steering column cap holder, - 0026, (F5032)	15	01-229	3/8" Hydraulic hose 57", 2 used
3	17-151	Steering wheel, 18", - 0026, (F6292)	16	17-152	Seat assembly (F 5918)
4	06-124	Nut, steering column, 13/16 - 20, 21084 CharLynn		17-154	Bottom seat cushion, (F 5920)
5	01-615	Steering orbitrol column, SCB Char-Lynn		17-156	Back cushion (F 5921)
6	01-614	Steering orbitrol control unit, UD-01 Char-Lynn	17	17-158	Spring and cylinder adjusting bracket (F 5501)
	01-619	Seal kit for 01-614 orbitrol	18	17-159	Cup washer (F 5502)
7	01-316	3/8" x 45° swivel adapter, 4 used 3974 Couplomatic (F 6295)	19	04-110	Spring, seat assembly (F 5705)
8	19-134	Steering cylinder pin, #201 Garrison	20	17-160	Shock absorber (F 5866)
9	19-135	Cylinder mount	21	17-161	Plate, bottom pivot (F 5505)
10	01-558	Steering cylinder, 2850 Garrison	22	17-162	Seat spring and hydraulic assembly complete (F 5703)
	01-563	Seal kit for 01-558 cylinder	23	17-163	Seat bracket (F 5867)
11	19-136	Tie rod end, 32796 Garrison	24		1/2" x 1-3/4" N.C. cap screw
12	19-137	Clamp, drag link, 253 Garrison	25	17-164	Seat adjusting rail, top (F 6079)
			26	17-165	Seat adjusting rail, bottom (F 6080)
			27	17-166	Roller for seat adjusting rails (F 6081)

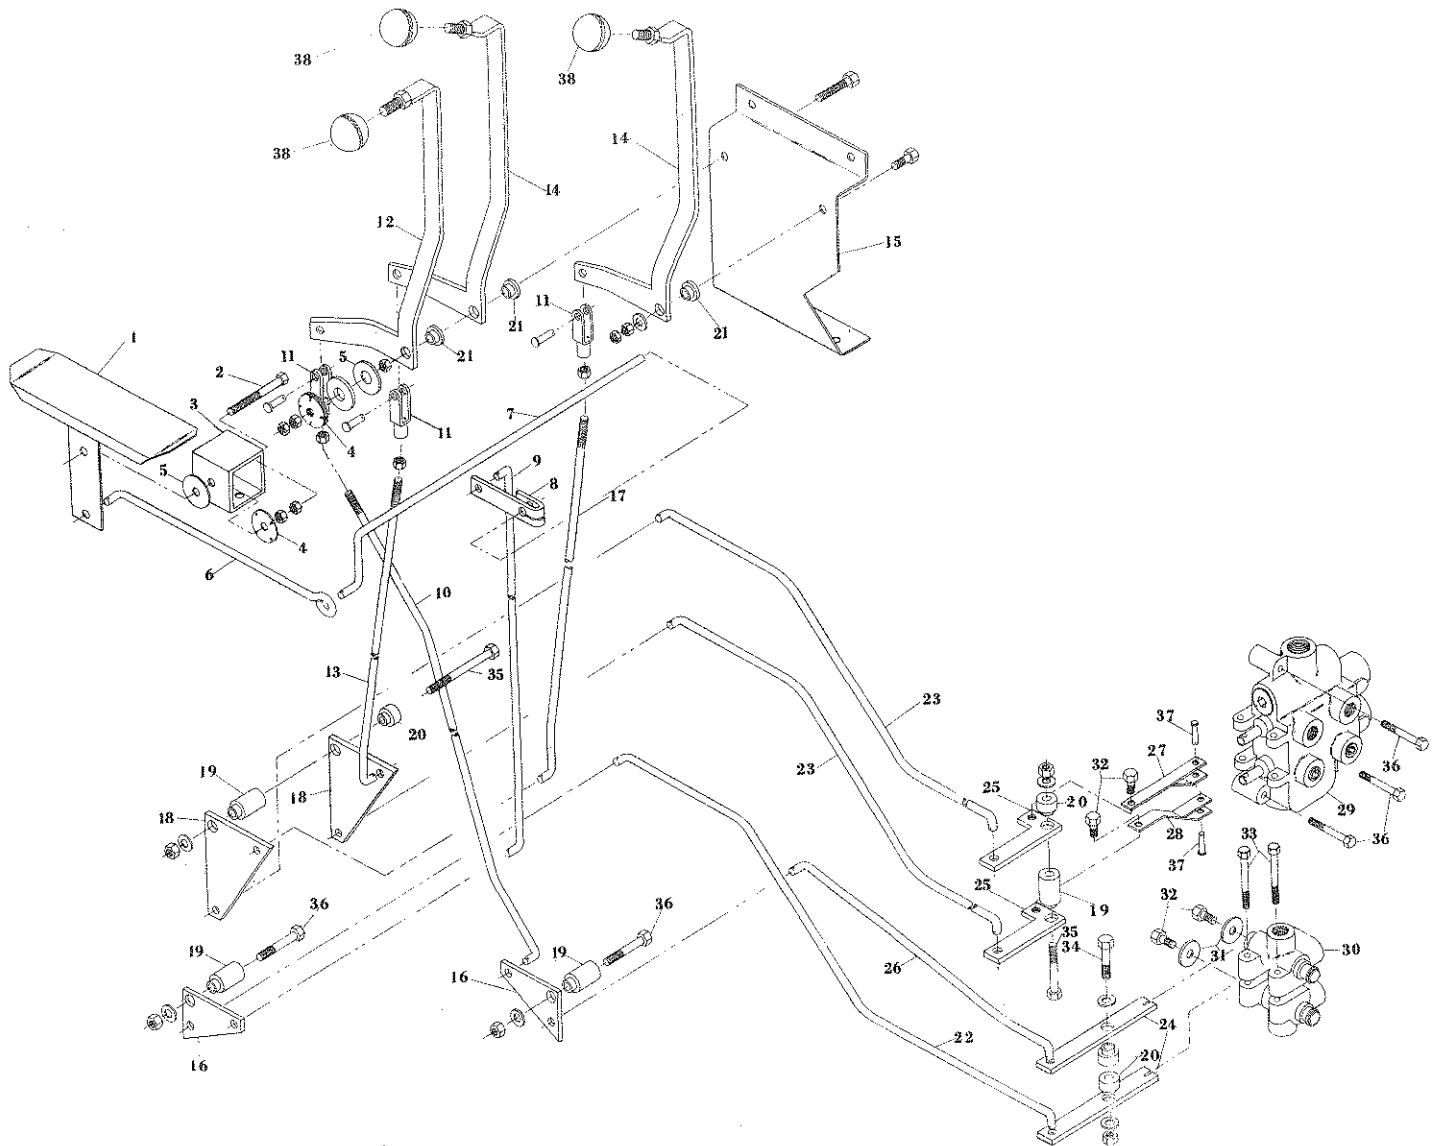


HYDRAULIC CONTROL LEVERS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	18-101	Pedal, pickup selector	21	05-153	Ferrule, 3/8", 3 used (F 440)
2		5/16" x 3-1/2" NCHT cap screw	22	18-115	Rod, pickup selector, horizontal
3	18-102	Mount, pickup selector pedal	23	18-116	Rod, Cage & pickup, horizontal
4	06-133	Conical washer, 3 used, (F 5551)	24	18-117	Lever, Selector valve, 2 used
5	05-103	Friction disc, 2 used (F 5546)	25	18-118	Bell crank, pickup & cage valve, 2 used
6	18-103	Rod, pickup selector	26	18-119	Rod, system selector
7	18-104	Rod lever, pickup selector	27	18-120	Link, cage valve
8	18-105	Lever, pickup, selector	28	18-121	Link, pickup valve
9	18-106	Vertical rod, pickup selector	29	01-512	Valve, Pickup & cage, SPYE 3-3NR-NH Gresen
10	18-107	Rod, system selector	30	01-504	Valve, selector, S50 Gresen
11	06-125	3/8" Clevis, 3 used	31		Washer, (F 246)
12	18-108	Lever, system selector	32		3/8" x 3/4" NCHT cap screw
13	18-109	Rod, pickup, vertical	33		5/16" x 3" NCHT cap screw
14	18-110	Lever, pickup & cage, 2 used	34		5/16" x 2-1/4" NCHT cap screw
15	18-111	Mount plate, control lever	35		5/16" x 3-1/4" NCHT cap screw
16	18-112	Bell crank, selector valves, 2 used	36		5/16" x 2-1/2" NCHT cap screw
17	18-113	Rod, Cage, vertical	37	06-130	Clevis Pin, 1/4" x 1-1/4", 2 used
18	18-114	Bell crank, pickup & cage valves, 2 used	38	05-151	Knob, lever, 1/2" NC thread, (F 5055) 3 used
19	05-118	Ferrule, 1-3/4", 4 used			
20	05-133	Ferrule, 3/4", 4 used			

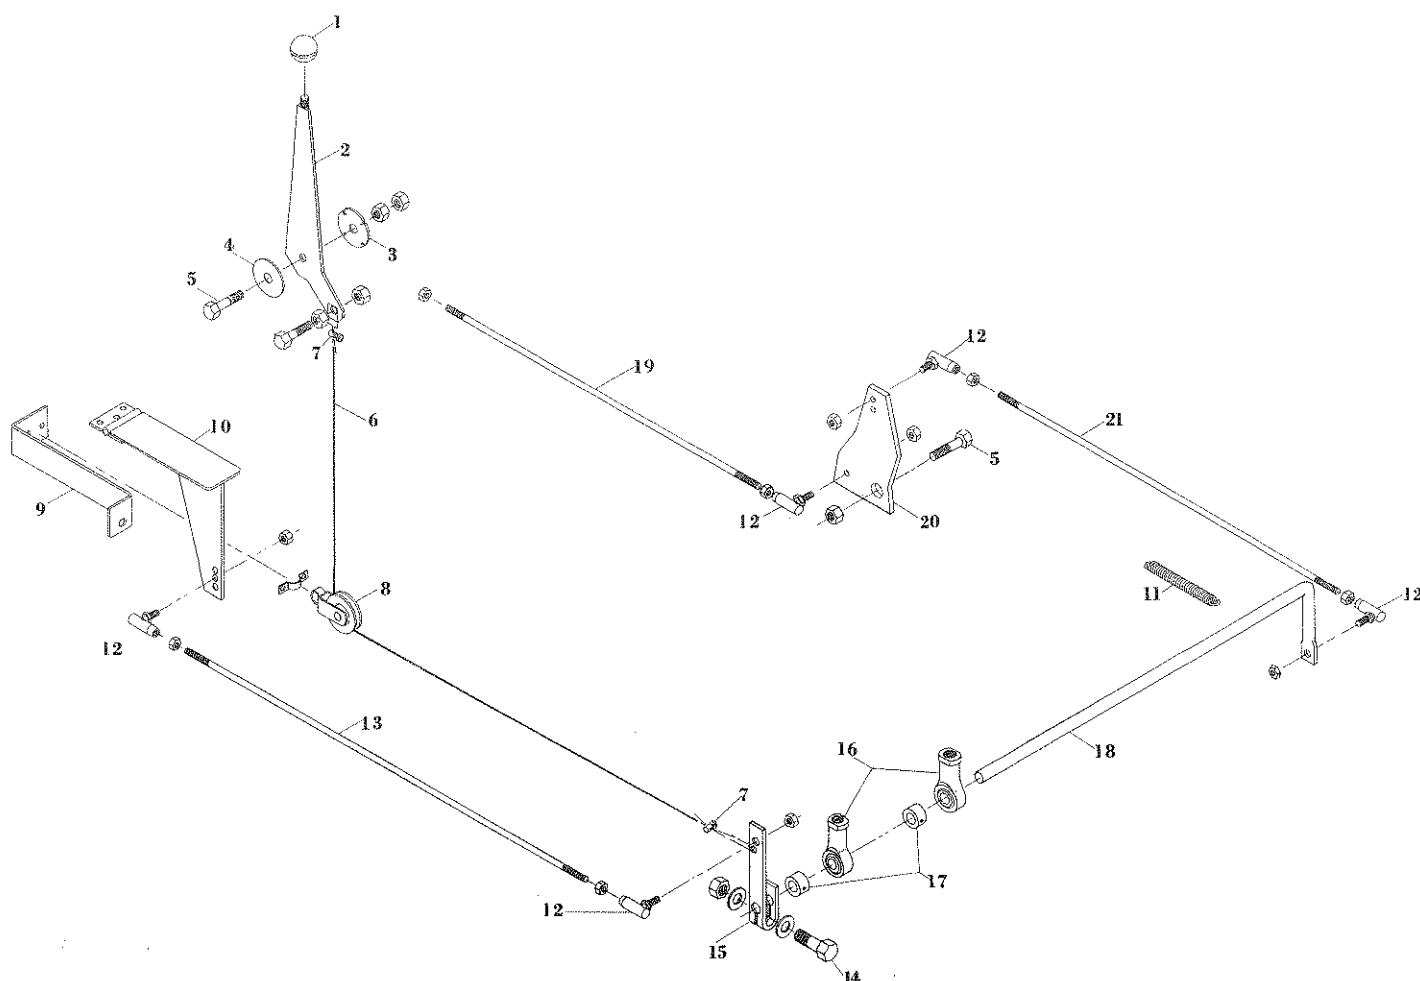


THROTTLE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	05-125	Knob, throttle lever (F 5554)	13	18-125	Throttle rod, horizontal, 20"
2	18-122	Lever, throttle	14		3/8" x 1-1/4" NCHT cap screw
3	06-107	Conical washer (F 1002)	15	18-126	Lever, throttle cross shaft
4	05-126	Friction disc (F 1003)	16	02-119	Rod end, FR-8N, 2 used (F 6212), - 0031
5		5/16" x 1-1/4" NC cap screw	17	05-149	1/2" Set collar
6	05-152	Cable, throttle, 38"	18	18-127	Cross Shaft, throttle, - 0031
7	06-116	Clamp, throttle cable, 2 used (F 5861)		18-147	Cross shaft, throttle, 0032 -
8	05-117	Pulley w/swivel (F 5179)		18-128	Governor rod, 18-1/4", gasoline
9	18-123	Bracket, throttle pulley	20	18-129	Bell crank, throttle, gasoline
10	18-124	Foot throttle	21	18-130	Throttle rod, vertical, 23-1/2, gasoline
11	04-109	Spring, diesel 525 Winks		18-148	Throttle rod, 32", diesel
12	06-127	Ball joint, 1/4" R.H., 5 used (F 5077)			

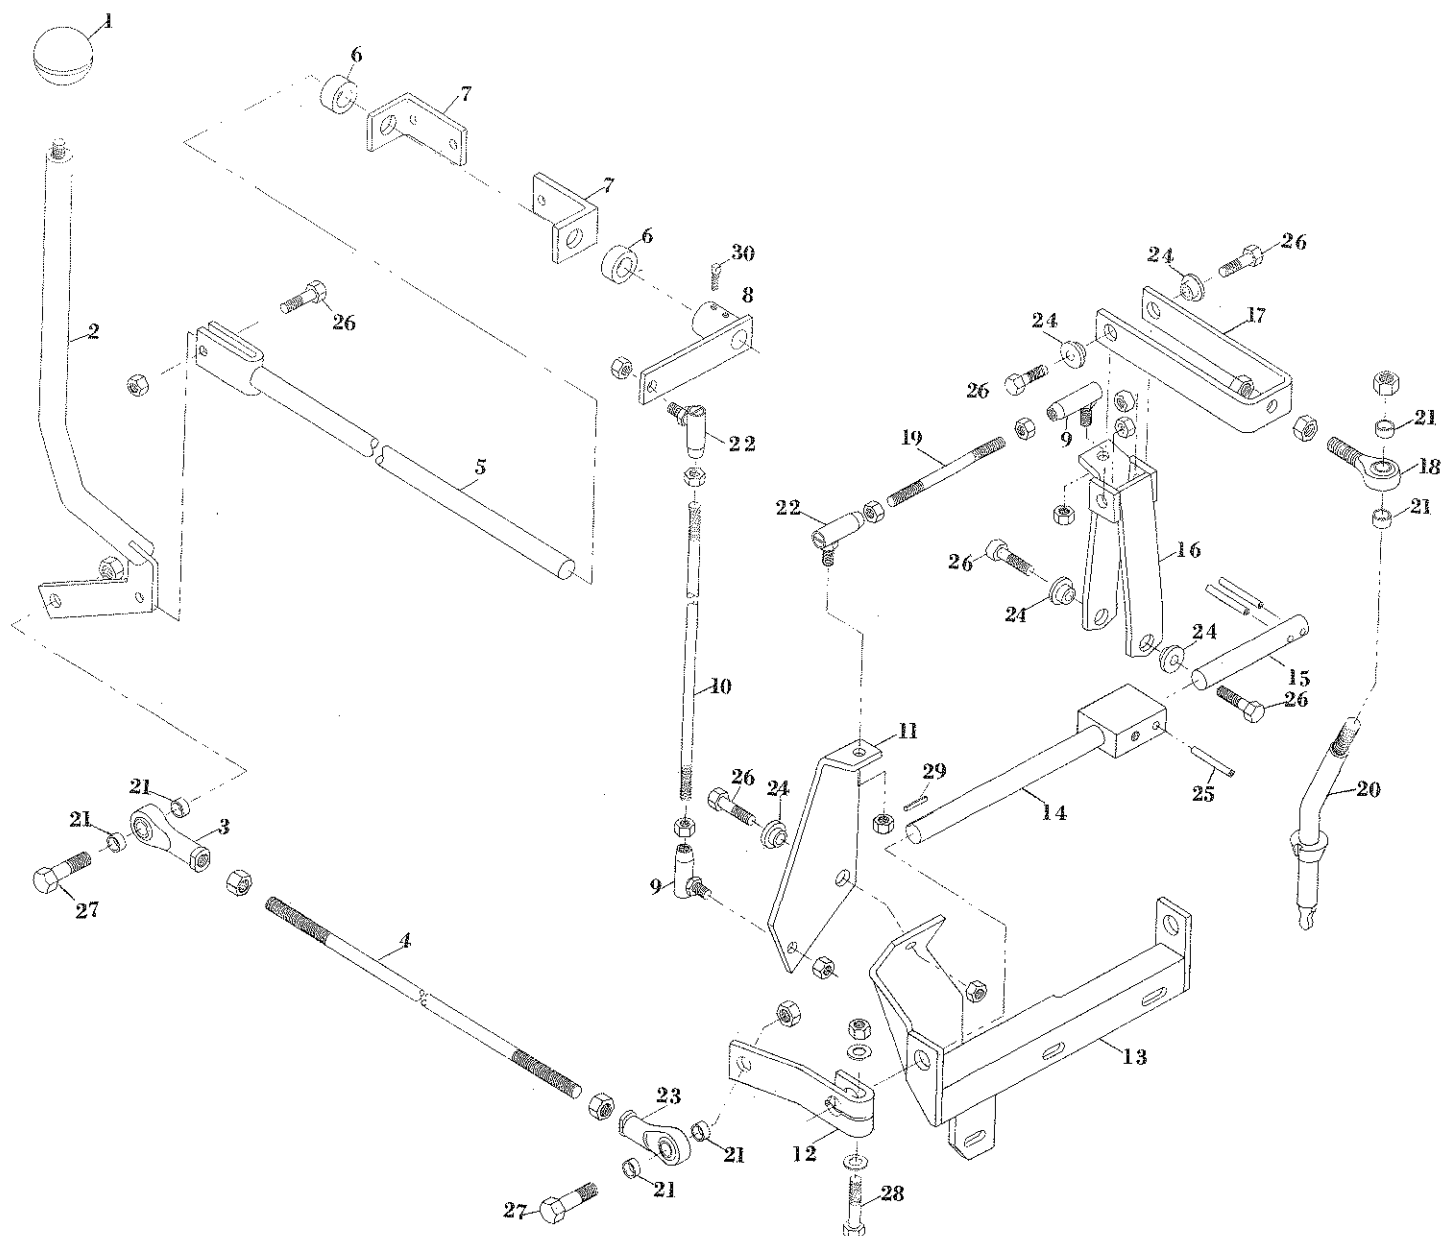


TRANSMISSION SHIFT MECHANISM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	05-150	Knob, shift lever, 3/8" NF thread, (F 6278)	15	18-141	Shaft extension, shift
2	18-131	Shift lever, transmission	16	18-142	Pivot, shift lever
3	02-119	Rod end, 1/2" RH female thread, FR-8N Spherico (F 6212)	17	18-143	Shift link
4	18-132	Rod, shift connecting, front, 1/2" x 40"	18	02-121	Rod end, shift lever, 1/2" RH male thread, TRE-8N Spherico (F 5992)
5	18-133	Shaft, shift lever	19	18-144	Drag link, 3/8" x 5-1/2"
6	05-105	3/4" set collar, 2 used	20	18-145	Shift lever
7	18-134	Bracket, shift shaft, 2 used	21	18-146	Spacer, 6 used
8	18-135	Lever, shift shaft	22	06-129	Ball joint, 3/8", LH thread, 2 used, (F 1295)
9	06-128	Ball joint, 3/8" RH threads, 2 used, (F 1294)	23	02-120	Rod ends, 1/2", LH female thread, FRL-8N Spherico
10	18-136	Rod, shift connecting, rear, 3/8" x 30"	24	05-153	Ferrule, 3/8" 5 used, (F 440)
11	18-137	Bell crank, shift selector	25		Roll pin, 1/4" x 2", 3 used
12	18-138	Lever, shift shaft	26		3/8" x 1" NCHT cap screw
13	18-139	Mount, shift shaft	27		1/2" x 1-3/4" NCHT cap screw
14	18-140	Shaft, shift	28		3/8" x 2-3/4" NCHT cap screw
			29		Key, 1/4" x 1/4" x 1"
			30		5/16" x 3/4" NC square head set screw

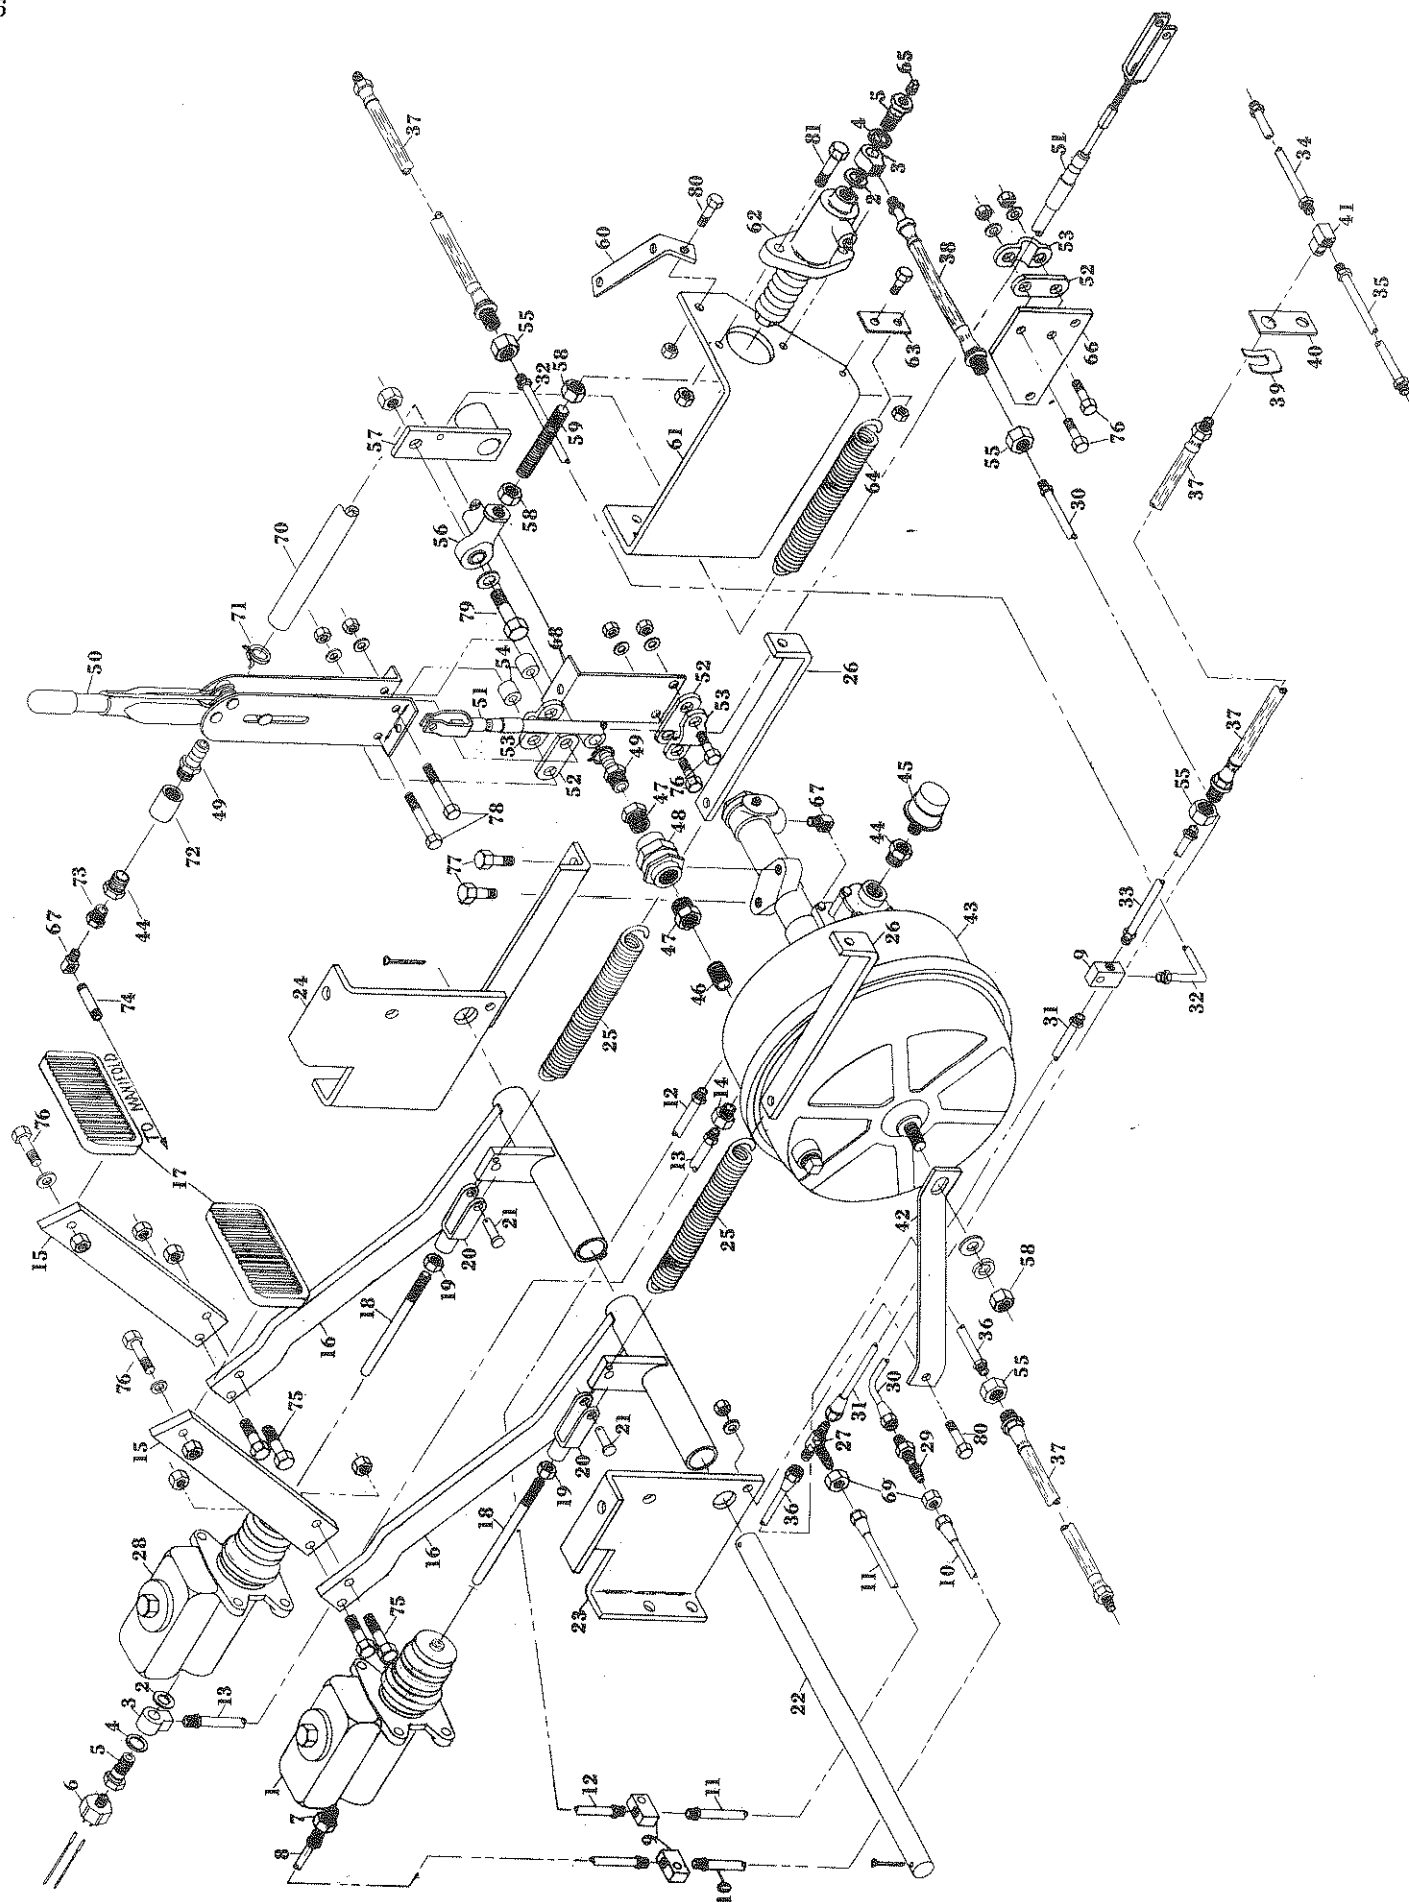


BRAKE AND CLUTCH

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	19-138	Clutch master cylinder, F 22977 Wagner	38	19-192	Clutch hose, F 27048 Wagner
2	19-139	Washer, stop light adapter, 19/32", F 603 Wagner	39	06-131	Spring lock, 5188 WH
3	19-140	Adapter, stop light, F 2678 Wagner	40	19-159	Brake line support
4	19-141	Washer, stop light adapter, 1/2", F 602 Wagner	41	19-160	Brass fitting, 7734 WH
5	19-142	Adapter, stop light, F 3474 Wagner	42	19-161	Vacuum booster brace
6	03-130	Switch, stop light, SL 134 Echlin	43	19-162	Vacuum booster, C 464R Midland
7	19-144	Brass fitting, 7727 WH	44		3/8" x 1/4" NPT Hex bushing, 2 used
8	19-145	Hydraulic clutch line, 1/4"	45	19-163	1/4" air filter
9	19-146	Brass fitting, 7708 WH	46		3/8" close nipple
10	19-180	Hydraulic clutch line, 1/4"	47		1/2" x 3/8" NPT Hex bushing
11	19-181	Hydraulic brake line, 1/4"	48	19-164	Vacuum check valve, C11475 Midland
12	19-182	Hydraulic brake line, 1/4"	49	19-165	3/8" x 1/2" hose coupler, 2 used (FT193)
13	19-183	Hydraulic brake line, 1/4"	50	19-166	Brake lever assembly, 01009300 Orscheln
14	19-147	Brass fitting, 200 x 4 WH	51	19-167	Brake cable assembly, 15259600 Orscheln
15	19-148	Pedal extension, brake and clutch, 2 used	52	19-168	Link spacer, 81000131 Orscheln
16	19-149	Pedal lever, brake and clutch, 2 used	53	19-169	Cable clamp, 81000104 Orscheln
17	19-150	Pedal pad, brake and clutch, 2 used	54	19-170	Spacer, 81000108 Orscheln
18	19-151	Push rod, brake and clutch cylinder, 2 used	55		5/8" NF Jam nut
19		3/8" NF nut	56	02-119	Rod end, FR-8N Sperico (F 6212)
20	06-125	3/8" clevis, 2 used	57	19-171	Clutch lever
21	06-126	Pin, 3/8" clevis, 2 used	58		1/2" NF Nut, 3 used
22	19-152	Pivot shaft, brake and clutch	59	19-172	1/2" x 3" ready bolt, NF
23	19-153	Pedal hanger bracket, LH	60	19-173	Mount brace, slave cylinder
24	19-154	Pedal hanger bracket, RH	61	19-174	Mounting bracket, clutch slave cylinder
25	04-111	Brake return spring, 2 used (F 1517)	62	19-175	Slave cylinder, F 26022 Wagner
26	19-155	Brake return spring holder, 2 used	63	19-176	Spring anchor (F 6056)
27	19-156	Bulkhead branch tee, C 5725 x 4 WH	64	04-101	Spring (F 747)
28	19-157	Brake master cylinder, F 27304 Wagner	65		Plug, 1/8" NPT
29	19-158	Bulkhead union, C 5325 x 4 WH	66	19-177	Brake cable mount
30	19-184	Hydraulic clutch line, 1/4"	67	19-178	90° Elbow, 400 x 4 WH, 2 used
31	19-185	Hydraulic brake line, 1/4"	68	19-179	Brace, emergency brake cable
32	19-186	Hydraulic brake line, 1/4"	69		7/16" NF Nut, 2 used
33	19-187	Hydraulic brake line, 1/4"	70	19-196	Vacuum hose, 1/2" ID x 55" Long, gasoline
34	19-188	Hydraulic brake line, 1/4"	71	06-136	Hose clamp, 2 used, 4-4553 BK
35	19-189	Hydraulic brake line, 1/4"	72		3/8" Standard black coupling
36	19-190	Hydraulic brake line, 1/4"	73		1/4" x 1/8" NPT HEX bushing
37	19-191	Brake hose, F 4000 Wagner	74		1/8" x 1-1/2 standard black nipple
			75		3/8" x 1-1/4" NC cap screw, 4 used
			76		5/16" x 1-1/4" NC cap screw, 6 used
			77		7/16" x 1-1/4" NF cap screw, 2 used
			78		5/16" x 2-1/4" NC cap screw, 2 used
			79		1/2" x 1-3/4" NC cap screw
			80		5/16" x 1" NC cap screw, 2 used
			81		3/8" x 1-1/2" NC cap screw, 2 used

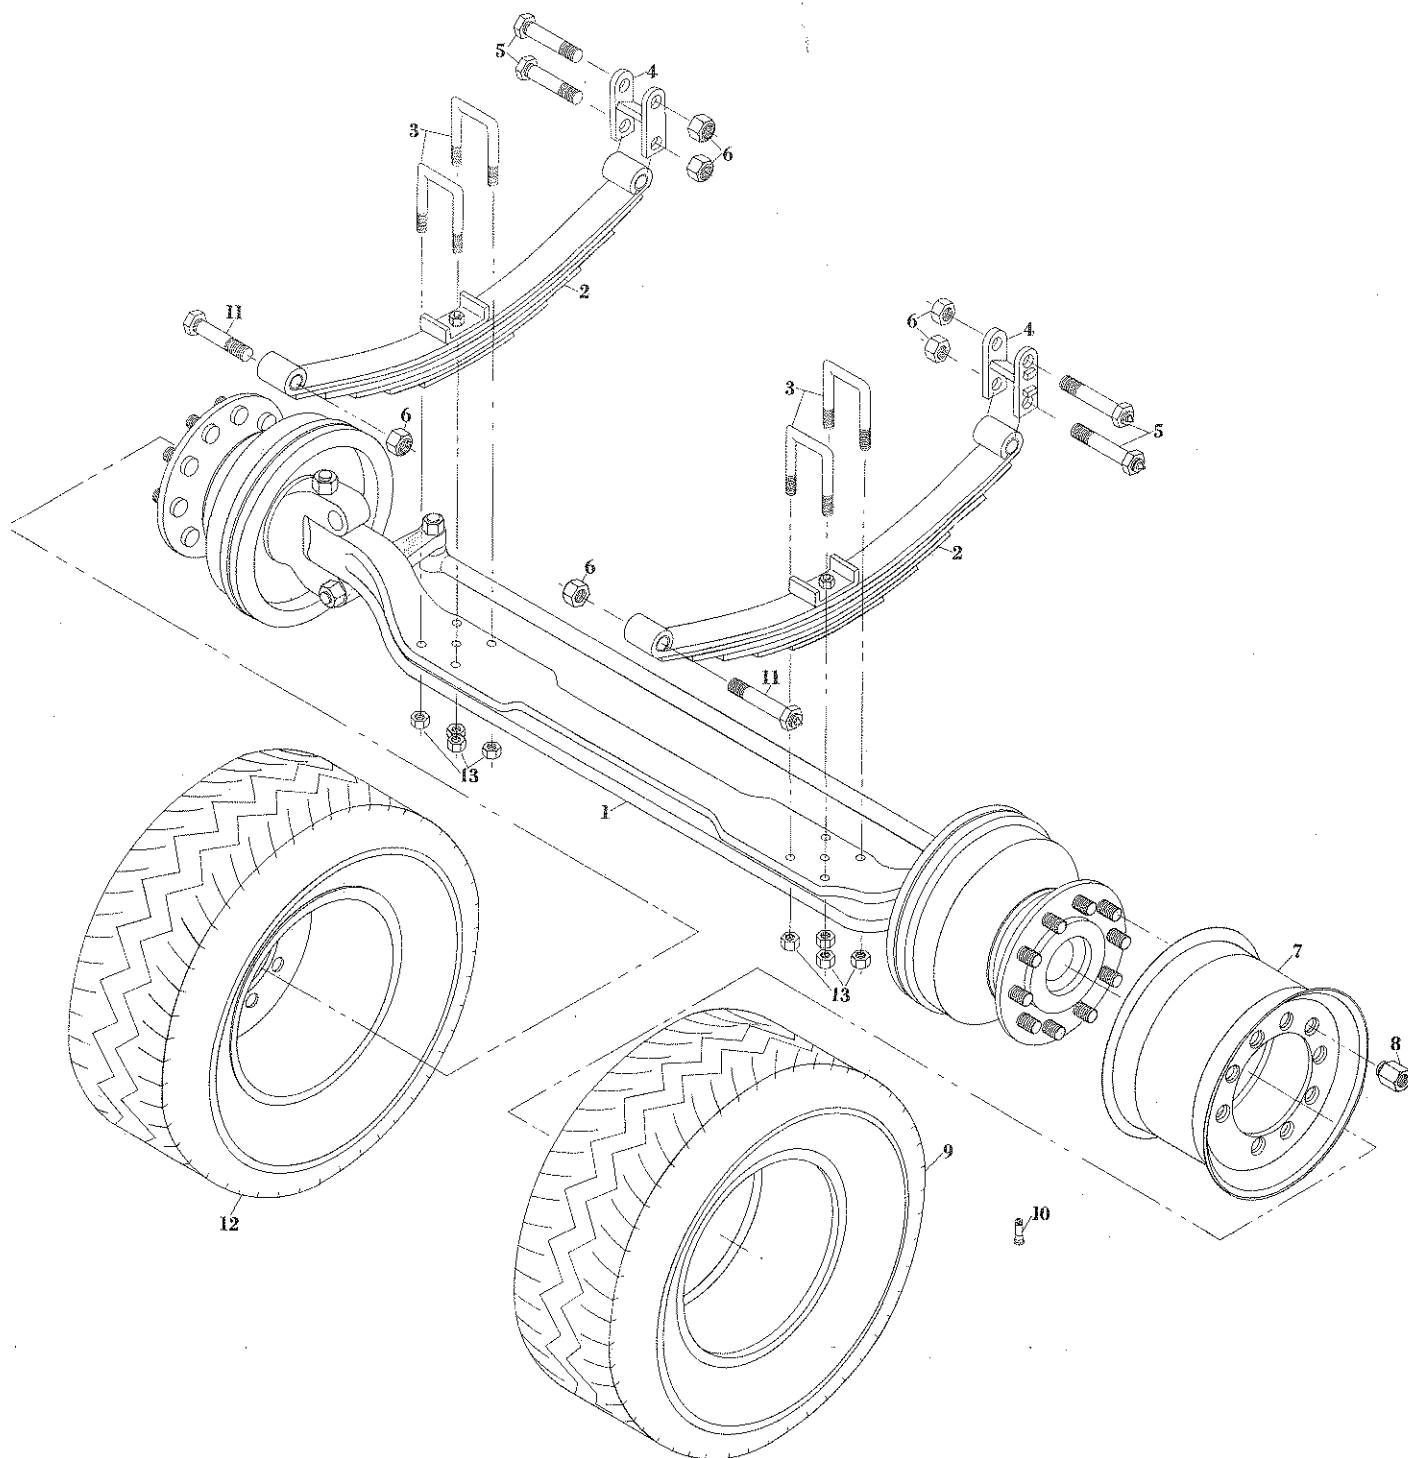


FRONT AXLE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	19-101	Front axle assembly	7	19-106	Front wheel, 10 hole, 2 used, #31279
2	19-102	Spring, front, 2 used	8	19-107	Lug nut, LH, 10 used
3	19-103	"U" bolt, front spring, 4 used		19-195	Lug nut, RH, 10 used
4	19-104	Spring shackle, 2 used	9	19-108	Tire, 14 : 17.5-10 ply SAT duplex, 2 used
5	19-105	Bolt, rear shackle, 4 used	10	19-109	Valve stem, 2 used, 165R Balkamp
6		1-1/8" NF Esna Nut, 6 used	11	19-110	Bolt, front shackle, 2 used
			12	19-901	Tire & wheel assembly

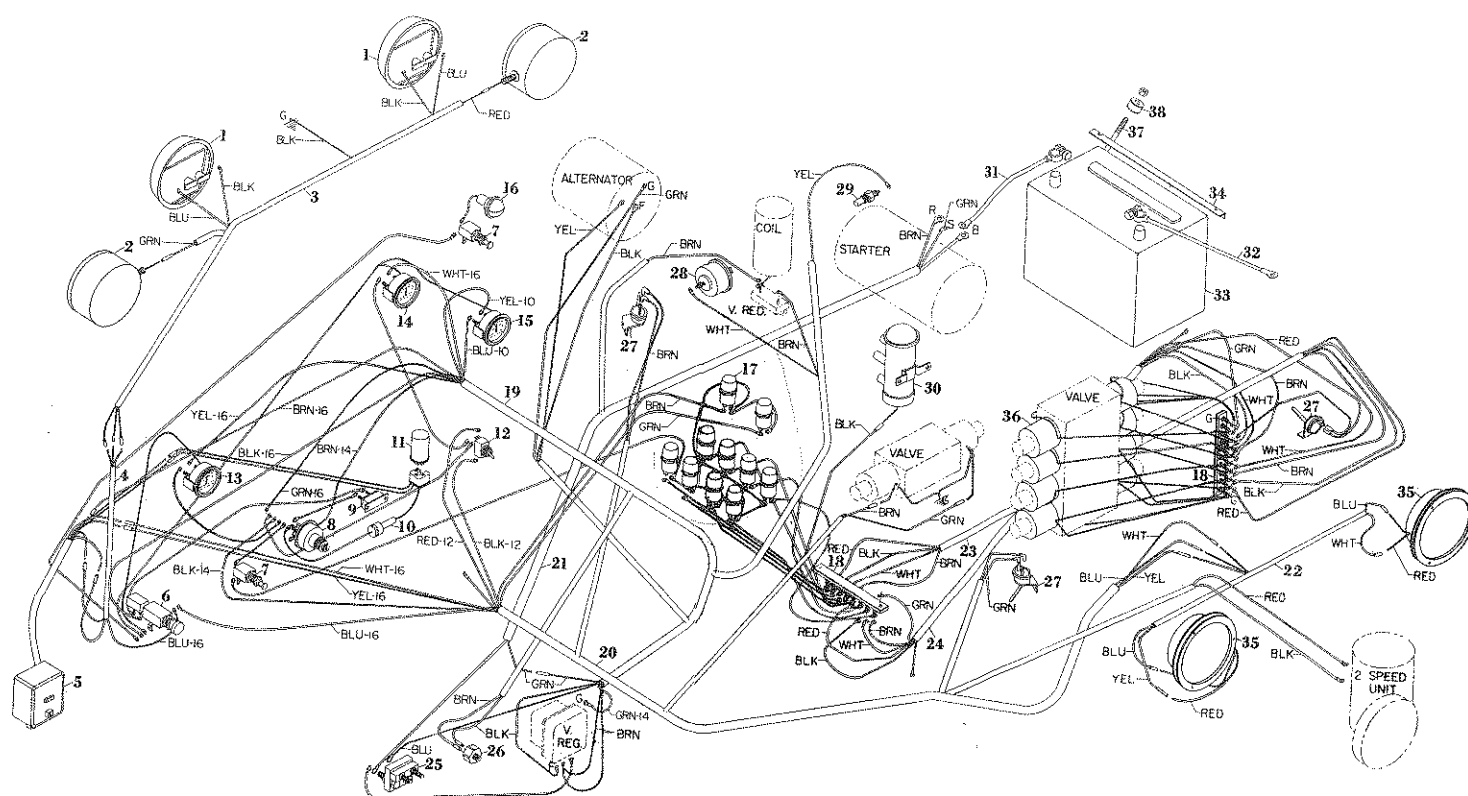


ELECTRICAL SYSTEM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	03-102	Headlight with housing, 2 used (F 6428)	20	03-123	Wire harness, deck to rear
	03-103	Sealed beam unit only (F 6429)	21	03-124	Wire harness, starter to terminal block, gasoline
2	03-104	Turn signal light, 4-810 Dietz. 2 used		03-125	Wire harness, starter to terminal block, diesel
3	03-105	Wire harness, front lights	22	03-126	Wire harness, rear lights
4	03-106	Wire harness, deck to hood	23	03-127	Electric cable, 4 strand, 192", 7793 Belden
5	03-107	Control, signal light, 628-5001 Visall	24	03-128	Electric cable, 6 strand, 192", 7794 Belden
6	03-108	Switch, light (F 862)	25	03-129	Junction block assembly (F 6039)
7	03-109	Switch, 2 used (F 5235)	26	03-130	Switch, stop light, SL 134 Echlin
8	03-110	Switch, ignition, 956-4704 CH	27	03-131	Switch, limit, 3 used, (F 946)
9	03-111	Circuit breaker, 3005-30 CH	28	03-132	Sending unit, oil pressure, 3535 Stewart Warner
10	03-112	Fuse, 14 amp	29	03-133	Sending unit, oil pressure, 353S Stewart Warner
11	03-113	Flasher, 550 Echlin	30	03-134	Electric fuel pump, #476087 Bendix
12	03-114	Switch, 2 speed, 2 x 465 Grainger	31	03-135	Battery cable
13	03-115	Gauge, temperature, 311 HH Stewart Warner	32	03-136	Ground cable
14	03-116	Gauge, oil, 306 DD Stewart Warner	33	03-137	Battery, gasoline, 24-3000
15	03-117	Gauge, amp. 359 EN Stewart Warner		03-138	Battery, diesel, 24-4000, 2 used
16	03-118	Console light, 81-3505 NAPA	34	03-139	Battery hold down, gasoline
17	03-119	Switch, solenoid control, 10 used (F 5237)		03-140	Battery hold down diesel
18	03-120	Terminal block, 4721-P8 C.H., 2 used	35	03-141	Tail & Stop light, 6-410R Dietz, 2 used
19	03-121	Wire harness, deck to engine, gasoline	36	03-142	Solenoid coil only for 01-509 & 01-515
	03-122	Wire harness, deck to engine, diesel	37	03-143	Battery hold down bolt, 2 used (F 6551)
			38	03-144	Battery hold down grommet (F 6328)

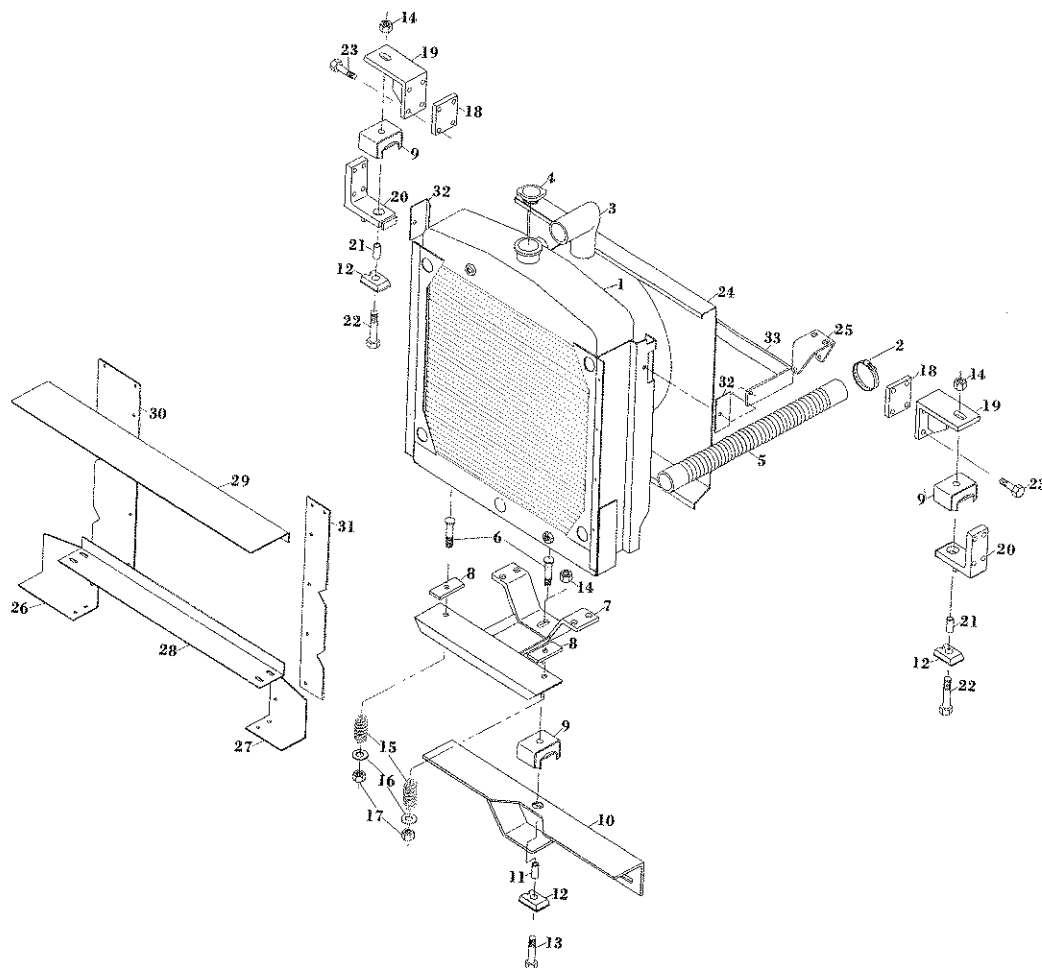


RADIATOR AND ENGINE MOUNT

REF. NO.	PART NO.	DESCRIPTION
1	20-101	Radiator, IHC gasoline
	20-102	Radiator, IHC diesel
2	06-134	Hose clamp, 4 used, 4-1204 BK
3	20-104	Radiator hose, 7031 NAPA
4	20-105	Radiator cap
5	20-106	Radiator hose, FM53 Modoc
6		3/8" x 3" Carriage bolt, 2 used
7	20-107	Mount bracket, engine & radiator
8	20-108	Radiator pad, 2 used
9	20-109	Motor mount, 3 used, 3-5114 BK
10	20-110	Front engine support
11	20-111	Bushing, 1-7/16" long
12	20-112	Motor mount, 3 used, 3-5115 BK
13		9/16" x 3" NC Cap Screw
14		9/16" Esna Nut, 3 used
15		Spring, radiator mount, 2 used
16		3/8" Washer, 2 used
17		3/8" NC Nut, 2 used
18	20-113	Engine mount spacer, 2 used
19	20-114	Engine mount, 2 used
20	20-115	Engine mount to frame, 2 used
21	20-116	Bushing, 1-11/16" long, 2 used
22		9/16" x 3-1/2" NC cap screw, 2 used
23		1/2" x 2" NC cap screw, 8 used
24	20-117	Shroud
25	20-118	Alternator mount, IHC gasoline
26	20-119	Wind baffle, lower right section
27	20-120	Wind baffle, lower left section
28	20-121	Wind baffle, bottom section
29	20-122	Wind baffle, top section
30	20-123	Wind baffle, right side
31	20-124	Wind baffle, left side
32	20-125	Cover plate, radiator side, 2 used
33	20-126	Support Strap, Radiator Top

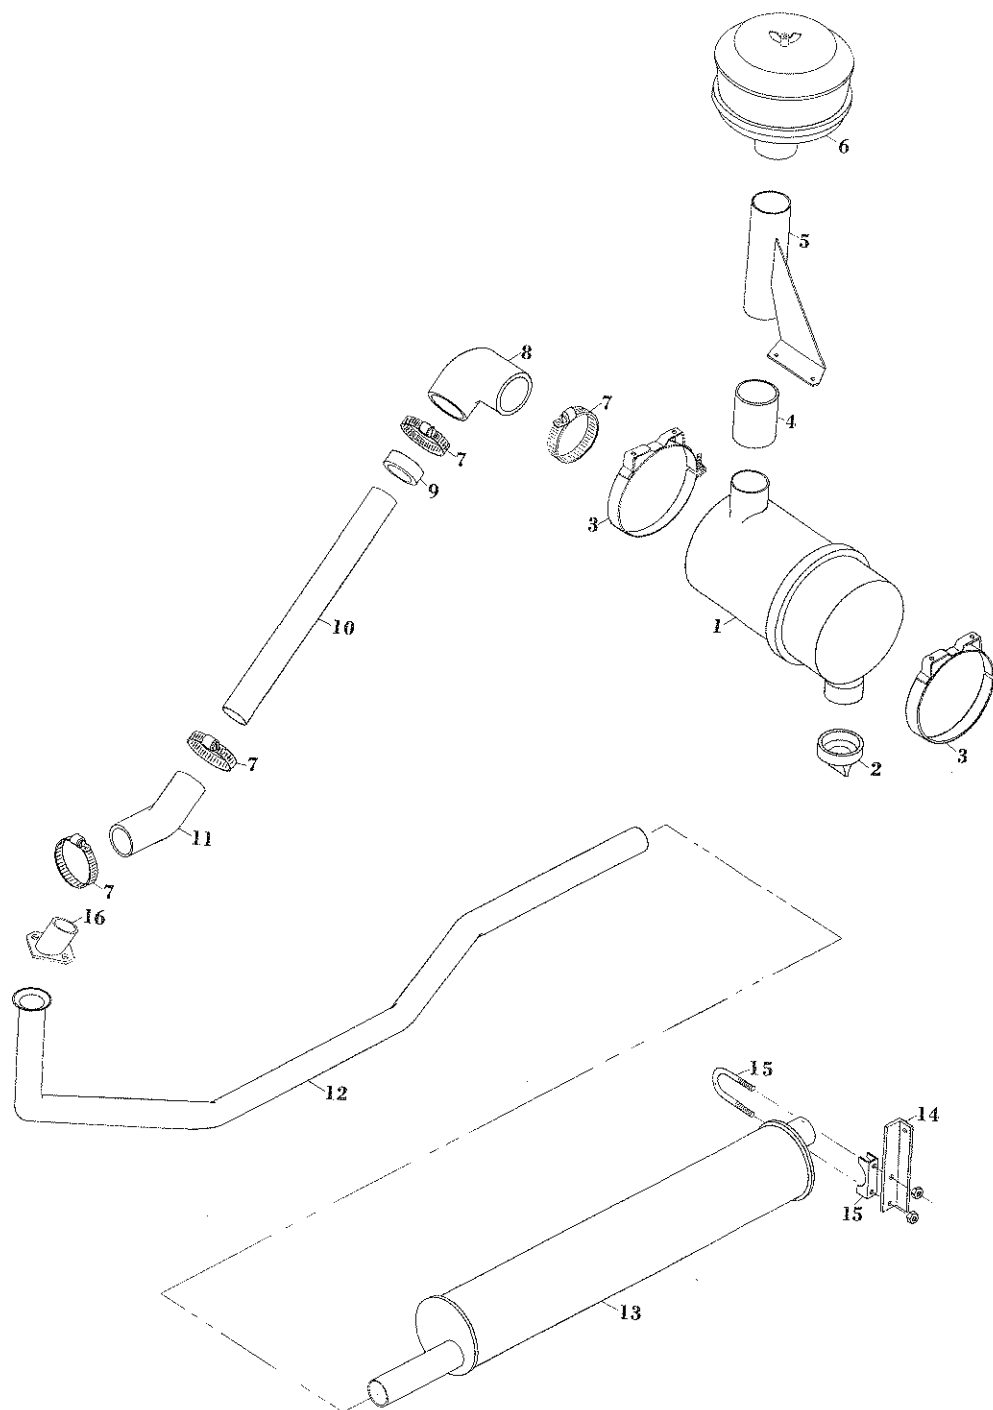

AIR INTAKE AND EXHAUST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	20-127	Air Cleaner	11	20-137	Rubber elbow, 2-1/4" ID x 45°, gasoline
	20-133	Element, air cleaner		20-148	Rubber elbow, 2-1/4" ID x 90°, diesel
2	20-128	Bleeder, air cleaner	12	20-138	Exhaust pipe, IHC gasoline
3	20-129	Clamp, air cleaner mount, 2 used		20-144	Exhaust pipe, IHC diesel
4	20-130	Hose, 3" I.D. x 4" long		20-145	Exhaust pipe, Ford gasoline
5	20-131	Air cleaner stand	13	20-139	Muffler, IHC gasoline 0035 - 22800 SM
6	20-132	Pre cleaner, H 253 Donaldson		20-140	Muffler, IHC diesel, 21475 SM
7	06-135	Hose clamp, 4 used, 4-1216 BK	14	20-141	Mounting bracket, muffler clamp, gasoline
8	20-134	Rubber elbow, 3" x 90°		20-147	Mounting bracket, muffler calmp, diesel
9	20-135	Rubber bushing, 2-1/4" to 3", P10-4090	15	20-142	Muffler clamp, gasoline, 35 - 408 SM
10	20-136	Pipe, 2-1/4" ID x 25" gasoline		20-143	Muffler clamp, diesel, 3 - 4889 SM
	20-146	Pipe, 2-1/4 IDx 23-1/2", diesel			

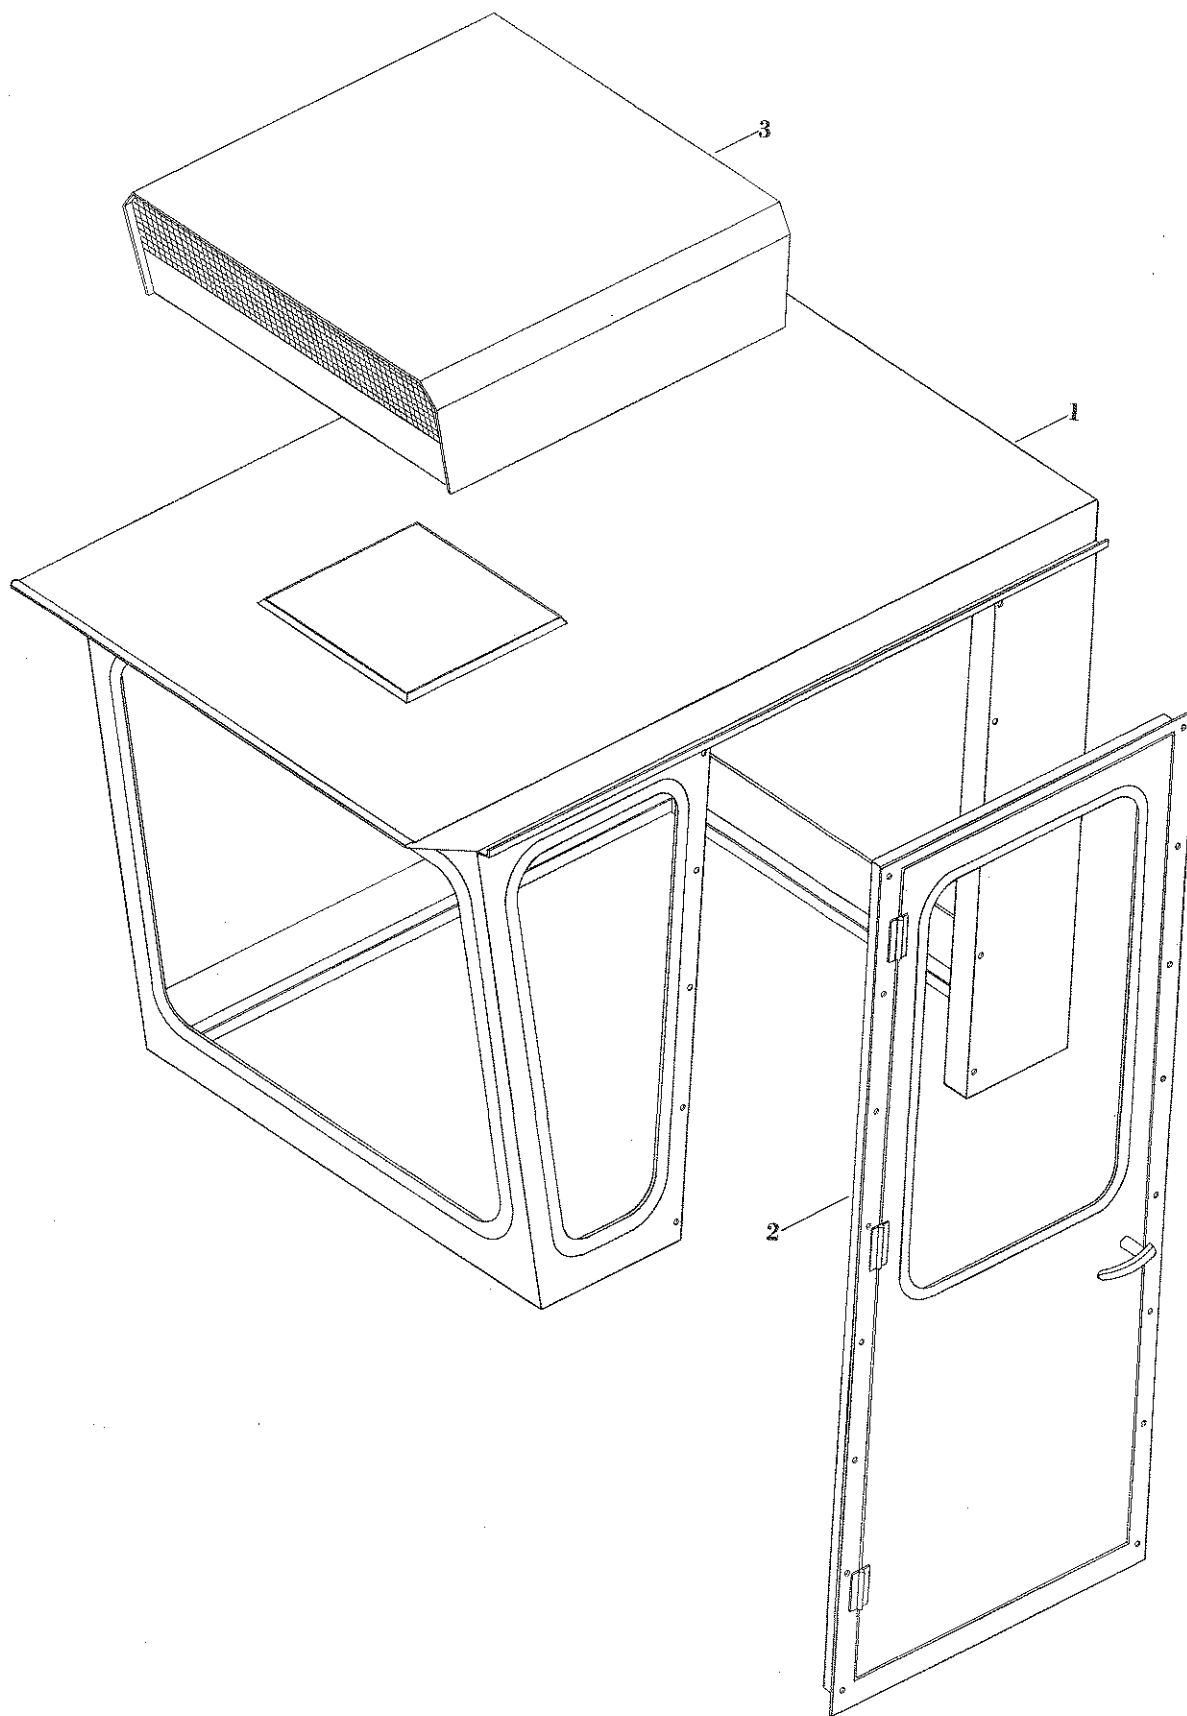**CAB**

REF. NO.	PART NO.	DESCRIPTION
1	17-169	Cab complete with door
2	17-170	Door for cab
3	17-171	Blower for cab