 
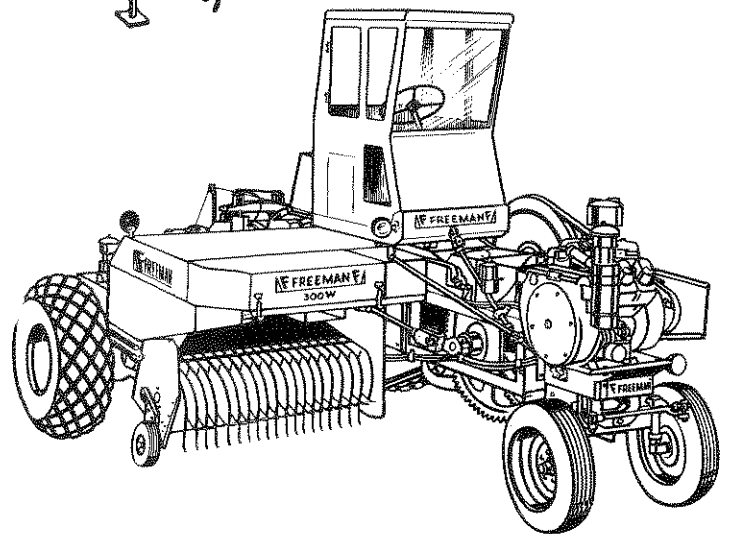 


1966 PARTS LIST

for
Model 200W and 200T
Model 300W and 300T

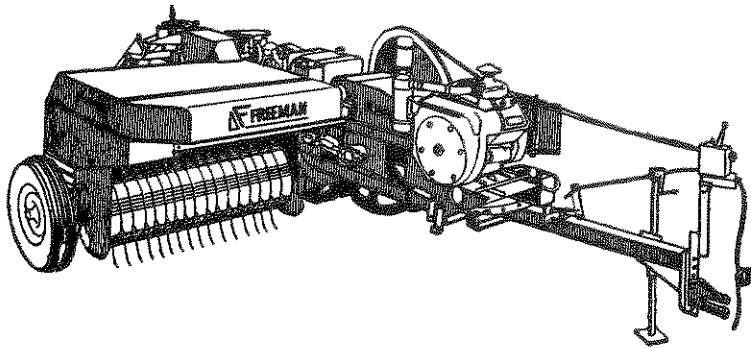

POLICY

1. It is the policy of J. A. Freeman & Son to constantly improve its products whenever it is practical to do so.
2. J. A. Freeman & Son reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J. A. Freeman & Son relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by baler serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, mail, rail, express or freight, air express or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J. A. Freeman & Son
Parts Department,
2034 N. W. 27th Avenue,
Portland 10, Oregon

Place serial number of machine here for your convenience:

Baler Serial No. _____

Motor Serial No. _____

Left and right of machine are understood to mean from a position facing in the direction of baler travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"

Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

CONTENTS

Axle, spindle and wheels	9
Bale chamber and rails	7
Bale Chute	24
Bullgears and side plate	4
Centralized greasing	31
Extra equipment	33
Feed arm and fork	14
Feed arm pivot shaft	15
Feed fork drive	13
Feeder house	10
Flywheel and pinion shaft	2
Front end frame	1
Fuel tank, battery, and lights	32
Knotter drive shaft	7
Knotter trip	8
Needles and needle yoke	20
Pickup	11
Pickup drive	12
Plunger connecting rod	5
Plunger and rails	6
Plunger latch	20
P. T. O. drive line	30
P. T. O. gear box	29
P. T. O. pulley and clutch	30
Wire box and guides	19
Wire knotter	17-18
Wire knotter brake	16
Tension control ram	26
Tension control bypass box	27
Tension control pump	28
Throttle and control box	25
Twine box and guides	23
Twine fingers	23
Twine knotters	22
Twine knotter clutch and mounts	21

INDEX

Pull Type Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 7	12	F 264	22	F 658	22	F 898	20
F8A	12	F 265	22	F 659	22	F 901	30
F 9A	4	F 267	22	F 660	22	F 930	6
F 12	21	F 268	24	F 661	22	F 932	6
F 34	2	F 278	8	F 662	22	F 933	5-6
F 40	22	F 281	14	F 663	22	F 934	9
F 46	5	F 294	6	F 664	33	F 942	33
F 49	6	F 298	6	F 667	9	F 944	9
F 52	6	F 299	6	F 668	9	F 946	19
F 55	5	F 304	33	F 669	12	F 949	22
F 72	2	F 312	4	F 671	12	F 951	30
F 73	2	F 318	12	F 672	12	F 952	30
F 74A	22	F 321	9	F 680	22	F 954	30
F 75	22	F 322	9	F 689	6	F 955	30
F 78	22	F 323	9	F 695	7	F 956	30
F 83	21-22	F 324	9	F 698	2	F 957	29
F 97	11	F 325	9	F 710	21	F 958	30
F 98	11	F 326	9	F 711	21	F 959	30
F 99	12	F 327	9	F 731	9	F 960	30
F 100	11	F 333	20	F 732	33	F 961	30
F 101	11	F 334	9	F 733	33	F 962	30
F 108	24	F 335	9	F 734	33	F 963	30
F 117	11	F 354	13	F 735	33	F 967	2
F 122	12	F 365	22	F 736	33	F 967A	2
F 126	12	F 418	12	F 746	21-22	F 967B	2
F 129	12	F 433	9	F 747	23	F 979	6
F 153	20-23	F 440	1-8-18	F 751	6	F 985	24
F 169	23	F 462	9	F 753	4	F 986	6
F 172	17-20-21	F 480	13	F 755	18-21	F 987	24
F 181	23	F 481	13	F 765	2	F 988	24
F 183	1	F 482	13	F 766	21	F 990	24-30
F 188	7	F 484	13	F 768	21	F 993	24
F 210	36	F 485	13	F 770	33	F 994	24
F 211	9	F 486	13	F 772	6	F 995	24
F 212	9	F 493	7	F 773	6	F 997	24
F 213	9	F 494	7	F 774	6	F 998	24
F 214	9	F 497	7	F 775	6	F 999	24
F 215	9	F 498	2	F 776	6	F 1002	25
F 220	7	F 523	23	F 777	6-31-33	F 1003	25
F 221	2	F 524	23	F 778	5-6	F 1004	25
F 224	22	F 525	21-23	F 779	6	F 1005	25
F 225	4	F 539	21-22	F 780	6	F 1006	25
F 226	4	F 540	22	F 781	6	F 1007	25
F 227	6	F 541	22	F 800	33	F 1008	25
F 228	6	F 542	22	F 802	13	F 1011	25
F 234	22	F 543	22	F 817	2	F 1012	25
F 235	22	F 544	22	F 822	14	F 1013	25
F 236	22	F 565	23	F 837	7	F 1014	25
F 237	22	F 570	23	F 840	12	F 1015	25
F 238	22	F 598	5	F 841	7	F 1016	25
F 239	22	F 600	7	F 853	4-10	F 1017	25
F 240	22	F 602	22	F 856	19-23	F 1018	25
F 241	22	F 604	7	F 857	19-23	F 1019	25
F 244	22	F 635	33	F 874	33	F 1020	25
F 246	16-18-21-22-30	F 636	33	F 878	1	F 1021	25
F 247	21-22	F 637	33	F 883	7	F 1025	25
F 248	21-22	F 638	33	F 884	9	F 1026	25
F 249	21-22	F 649	33	F 886	2	F 1043	9
F 263	22	F 656	22	F 889	30	F 1044	9
		F 657	22	F 893	32	F 1063	30

INDEX

Pull Type Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 1064	 30	F 1289	 23	F 1513	 8	F 1622	.. 18-21
F 1065	 30	F 1290	 23	F 1514	 8	F 1623	.. 18-21
F 1066	 30	F 1291	 23	F 1515	 8	F 1624	 9
F 1071	 13	F 1292	 23	F 1517	... 8-20	F 1625	 9
F 1075	 29	F 1293	 23	F 1520	 5	F 1626	 9
F 1076	 29	F 1294	 23	F 1521	 5	F 1627	 9
F 1077	 29	F 1295	 23	F 1522	 5	F 1628	 9
F 1078	 29	F 1296	 23	F 1523	 5	F 1629	 6
F 1080	 29	F 1297	 23	F 1524	 5	F 1631	 9
F 1083	 29	F 1298	 23	F 1525	 5	F 1632	 8
F 1084	 29	F 1306	 13	F 1526	 5	F 1633	.. 18-21
F 1085	 29	F 1310	 7	F 1527	 5	F 1634	.. 14-15
F 1087	 29	F 1343	 23	F 1528	 5	F 1635	 14
F 1093	 29	F 1371	 25	F 1529	 5	F 1636	 6
F 1095	 29	F 1377	 15	F 1530	 5	F 1638	 24
F 1101	 30	F 1382	 9	F 1531	 8	F 1639	 24
F 1102	 30	F 1383	 9	F 1536	 23	F 1641	 6
F 1103	 30	F 1385	 13	F 1537	 6	F 1643	 14
F 1104	 30	F 1386	 13	F 1538	 6	F 1644	 32
F 1105	 30	F 1392	 7	F 1540	 6	F 1645	 32
F 1106	 30	F 1393	 21	F 1548	 20	F 1647	 9
F 1108	 30	F 1394	 21	F 1549	 20	F 1648	 14
F 1109	 29	F 1395	 20	F 1550	 20	F 1649	 14
F 1129	 25	F 1407	 29	F 1551	 20	F 1653	 9
F 1130	 25	F 1409	 29	F 1552	 20	F 1654	 9
F 1131	 25	F 1410	 29	F 1556	 14	F 1655	 23
F 1132	 2	F 1411	 29	F 1557	 14	F 1658	 25
F 1134	 5	F 1412	 29	F 1558	 14	F 1660	 20
F 1151	 7	F 1414	 29	F 1559	 14	F 1661	... 4-15
F 1161	 30	F 1415	 29	F 1561	 14	F 1662	 7
F 1165	 30	F 1416	 29	F 1563	 14	F 1672	 23
F 1189	 14	F 1417	 29	F 1564	 8	F 1673	 14
F 1191	 14	F 1418	 29	F 1568	 8	F 1675	 33
F 1193	 14	F 1419	 29	F 1571	 8	F 1676	 33
F 1195	 14	F 1420	 29	F 1572	... 8-16	F 1677	 33
F 1216	 7	F 1421	 29	F 1573	 6	F 1686	 8
F 1221	 30	F 1427	 15	F 1574	 20	F 1687	 8
F 1222	 30	F 1428	 15	F 1575	 8	F 1688	 32
F 1226	 11	F 1433	 25	F 1576	 18	F 1689	 32
F 1229	 15	F 1436	 5	F 1577	.. 18-21	F 1690	 32
F 1235	.. 14-15	F 1441	... 5-6	F 1579	 8	F 1691	 32
F 1237	 15	F 1444	 15	F 1581	 7	F 1692	 6
F 1238	 15	F 1446	 25	F 1586	 1	F 1697	 33
F 1239	 15	F 1447	 25	F 1587	 8	F 1698	 33
F 1240	 15	F 1450	 13	F 1589	 7	F 1699	 33
F 1241	 15	F 1451	 25	F 1590	 7	F 1700	 22
F 1244	 15	F 1452	 25	F 1601	 29	F 1703	 32
F 1245	 15	F 1453	 25	F 1604	 14	F 4014	.. 19-20
F 1246	 15	F 1454	 25	F 1605	 1	F 4015	.. 19-20
F 1247	 15	F 1455	 25	F 1606	 1	F 4016	 20
F 1248	 15	F 1456	 25	F 1607	 1	F 4024	 17
F 1250	 15	F 1458	 25	F 1608	 8	F 4030	 18
F 1251	 15	F 1459	 25	F 1609	 6	F 4046	 17
F 1256	 4	F 1465	 23	F 1613	 2	F 4050	 14
F 1259	 13	F 1494	 7	F 1614	 2	F 4067	.. 19-24
F 1260	 13	F 1497	 32	F 1617	 8	F 4068	.. 19-24
F 1261	 13	F 1499	 32	F 1618	 8	F 4069	 19
F 1264	 12	F 1505	 32	F 1619	 8	F 4076	 21
F 1267	 4	F 1511	 33	F 1620	.. 18-21	F 4077	 21
F 1288	 23	F 1512	 6	F 1621	 21	F 4078	 21

INDEX

Pull Type Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 4115	.. 18-21	F 7037	 4	F 7182	 11	F 7324	 21
F 4133	 18	F 7038	 4	F 7183	 11	F 7325	 21
F 4134	 18	F 7039	 4	F 7184	 11	F 7329	 17
F 4135	 18	F 7040	 4	F 7185	 11	F 7330	 17
F 4136	.. 12-18	F 7042	 5	F 7186	 11	F 7332	 18
F 4137	 18	F 7046	 32	F 7187	 11	F 7333	 18
F 4138	 18	F 7048	 32	F 7188	 11	F 7334	 18
F 4150	 20	F 7049	 32	F 7189	 11	F 7335	 18
F 4163	 19	F 7051	 12	F 7190	 11	F 7337	 2
F 4190	 19	F 7052	 12	F 7193	 11	F 7344	 19
F 4191	 19	F 7053	 12	F 7194	... 1-11	F 7345	 18
F 4193	 33	F 7055	 7	F 7207	 25	F 7346	 18
F 4203	 19	F 7056	 7	F 7210	 2	F 7348	 17
F 4204	 19	F 7062	 17	F 7212	 32	F 7349	 18
F 4205	 19	F 7063	 18	F 7213	 1	F 7353	 17
F 4210	 19	F 7064	 17	F 7217	 9	F 7354	 4
F 4222	 19	F 7065	 17	F 7220	 7	F 7355	 11
F 4223	 19	F 7066	 17	F 7221	 7	F 7356	 11
F 4224	 19	F 7069	 18	F 7222	 7	F 7358	 4
F 4225	 19	F 7072	 18	F 7223	 7	F 7361	 30
F 5080	 25	F 7075	 17	F 7227	... 8-17	F 7362	 1
F 5159	 19	F 7076	.. 17-18	F 7235	 32	F 7363	 1
F 5232	 32	F 7077	 17	F 7236	 24	F 7364	 1
F 5233	 32	F 7078	 17	F 7239	 14	F 7365	 30
F 5264	.. 25-31	F 7079	 17	F 7241	 2	F 7366	 30
F 5445	 15	F 7080	 17	F 7247	.. 18-20	F 7367	 30
F 5446	 15	F 7081	 17	F 7248	 17	F 7368	 30
F 5499	 32	F 7084	 17	F 7257	 18	F 7369	 30
F 5545	 25	F 7085	 17	F 7264	 14	F 7370	 30
F 5554	 25	F 7086	 17	F 7265	 14	F 7371	 30
F 5559	 25	F 7087	 17	F 7268	 13	F 7372	 30
F 5842	 32	F 7089	 17	F 7275	 14	F 7373	 30
F 5941	 32	F 7121	 7	F 7276	 14	F 7374	 30
F 5922	 33	F 7122	 7	F 7277	 14	F 7375	 30
F 7000	 2	F 7123	 7	F 7279	 1	F 7376	 30
F 7001	 1	F 7127	 10	F 7280	 1	F 7377	 30
F 7002	 1	F 7136	 23	F 7281	 1	F 7378	 30
F 7003	 1	F 7142	 10	F 7282	 1	F 7379	 30
F 7004	 1	F 7143	 10	F 7283	 1	F 7382	 11
F 7005	 1	F 7145	 10	F 7285	 2	F 7387	 17
F 7006	 1	F 7146	 11	F 7294	 7	F 7388	 17
F 7007	 1	F 7148	 11	F 7295	 32	F 7391	 33
F 7008	 1	F 7149	 11	F 7296	 7	F 7394	 10
F 7009	 1	F 7151	 11	F 7298	 9	F 7396	 31
F 7011	 1	F 7152	 10	F 7299	 10	F 7397	 7
F 7012	 1	F 7154	 11	F 7300	 12	F 7398	 31
F 7013	 25	F 7155	 11	F 7301	 12	F 7400	 31
F 7014	 2	F 7156	 11	F 7302	 12	F 7401	 31
F 7015	 2	F 7157	 10	F 7303	 12	F 7402	 31
F 7016	 2	F 7158	 10	F 7304	 12	F 7403	 31
F 7017	 2	F 7159	 10	F 7305	 12	F 7405	 31
F 7025	 2	F 7163	 10	F 7311	 17	F 7406	 31
F 7026	 4	F 7164	 10	F 7312	 17	F 7407	 31
F 7026D	 4	F 7166	 10	F 7313	 17	F 7409	 31
F 7031	 4	F 7174	 9	F 7315	 17	F 7413	 31
F 7032	 4	F 7176	 11	F 7316	 17	F 7414	 31
F 7033	 4	F 7177	 11	F 7317	 17	F 7415	 31
F 7034	 4	F 7179	 11	F 7318	 17	F 7416	 31
F 7035	 4	F 7180	 11	F 7321	 7	F 7417	 31
F 7036	 4	F 7181	 11	F 7322	 7	F 7418	... 5-31

INDEX

Pull Type Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 7430	1	F 7554	20	F 7626	33	F 7710	14
F 7431	18	F 7555	19	F 7627	4	F 7711	20
F 7432	18	F 7556	19	F 7628	4	F 7713	10
F 7437	2	F 7557	19	F 7629	4	F 7714	10
F 7438	4	F 7558	20	F 7630	4	F 7715	1
F 7439	6	F 7559	16	F 7631	4	F 7716	19
F 7448	16	F 7560	16	F 7632	4	F 7717	19
F 7449	16	F 7561	16	F 7633	10	F 7718	31
F 7450	16	F 7562	7	F 7634	10	F 7719	31
F 7451	16	F 7563	7	F 7635	10	F 7720	31
F 7452	16	F 7564	9	F 7636	9	F 7721	33
F 7453	16	F 7565	1	F 7637	19	F 7722	33
F 7454	16	F 7566	1	F 7638	19	F 7723	33
F 7455	31	F 7567	1	F 7639	19	F 7725	1
F 7456	18	F 7568	20	F 7640	19	F 7726	31
F 7457	18	F 7569	20	F 7641	19	F 7727	33
F 7461	18	F 7570	18	F 7642	19	F 7728	33
F 7462	4	F 7571	18	F 7643	19	FT 10	26
F 7463	4	F 7572	11	F 7644	19	FT 11	26
F 7472	10	F 7573	11	F 7645	19	FT 12	26
F 7479	31	F 7574	20	F 7649	9	FT 13	26-28
F 7482	10	F 7575	20	F 7650	5	FT 14	26-28
F 7485	23	F 7577	14-15	F 7651	5	FT 15	26
F 7488	2	F 7578	13	F 7652	20	FT 16	26
F 7507	7	F 7579	10	F 7653	5	FT 18	26
F 7515	19	F 7580	6	F 7654	10	FT 19	26
F 7516	7	F 7581	6	F 7655	24	FT 25	30
F 7517	10	F 7582	6	F 7656	24	FT 50	27
F 7519	18	F 7583	11	F 7657	24	FT 53	27
F 7520	20	F 7584	11	F 7658	24	FT 54	27
F 7521	20	F 7585	16	F 7659	24	FT 55	27
F 7522	20	F 7586	16	F 7660	14-15	FT 58	27
F 7523	20	F 7587	16	F 7661	24	FT 61	27
F 7524	20	F 7588	20	F 7662	9	FT 62	27
F 7526	20	F 7590	1	F 7663	9	FT 63	27
F 7527	20	F 7591	1	F 7668	7	FT 65	27
F 7528	16	F 7592	1	F 7669	7	FT 67	27
F 7529	14-15	F 7593	5	F 7670	7	FT 68	27
F 7531	14	F 7594	5	F 7671	33	FT 72	27-33
F 7532	14	F 7595	5	F 7673	33	FT 73	26
F 7533	14	F 7596	6	F 7674	33	FT 74	26-27-33
F 7534	14	F 7597	11	F 7675	33	FT 75	26
F 7535	12	F 7598	11	F 7676	33	FT 82	28
F 7536	1	F 7599	11	F 7677	33	FT 87	27
F 7537	1	F 7600	24	F 7679	33	FT 101	28
F 7538	1	F 7601	24	F 7680	33	FT 107	26-27-28
F 7539	1	F 7602	13	F 7681	1	FT 113	28
F 7540	1	F 7603	13	F 7682	1	FT 114	28
F 7541	1	F 7604	14	F 7690	23	FT 123	27
F 7542	5	F 7605	14	F 7691	23	FT 136	26-27
F 7543	5	F 7606	14	F 7692	30	FT 137	26
F 7544	5	F 7607	14	F 7693	30	FT 150	27-28
F 7545	5	F 7608	19	F 7696	1	FT 153	26
F 7546	12	F 7609	33	F 7699	2	FT 157	2-28
F 7547	20	F 7610	14	F 7700	1	FT 163	26
F 7548	4	F 7611	5	F 7704	2	FT 177	27
F 7549	4	F 7612	13	F 7705	19	FT 178	27
F 7550	4	F 7617	33	F 7706	12	FT 179	27
F 7551	10	F 7624	24	F 7708	5	FT 180	26
F 7552	20	F 7625	13	F 7709	5	FT 181	26

INDEX


Pull Type Balers

PART	PAGE
No.	No.
FT 182	26
FT 183	26
FT 184	27
FT 185	27
FT 187 . .	27-28
FT 188	27
FT 191 . .	27-28
FT 192	27
FT 193 . .	27-28
FT 194	27
FT 197	28
FT 198	26
FT 199	26
FT 200	26


PART	PAGE
No.	No.
FT 201	26
FT 202	26
FT 207	27
FT 208 . .	27-28
FT 209	27
FT 210	27
FT 211	27
FT 500	28
FT 503	28
FT 504	28
FT 505	28
FT 506	28
FT 507	28

PART	PAGE
No.	No.
FT 508	28
FT 509	28
FT 510	28
FT 511	28
FT 512	28
FT 513	28
FT 514	28
FT 517	28
FT 518	28
FT 519	28
FT 521	28
FT 524	28
FT 525	28

PART	PAGE
No.	No.
FT 527	28
FT 528	28
FT 529	28
FT 530	28
FT 532	28
FT 533	28
FT 534	28
FT 535	28
FT 536	28
FT 537	28
FT 538	28
FT 539	28
FT 541	28

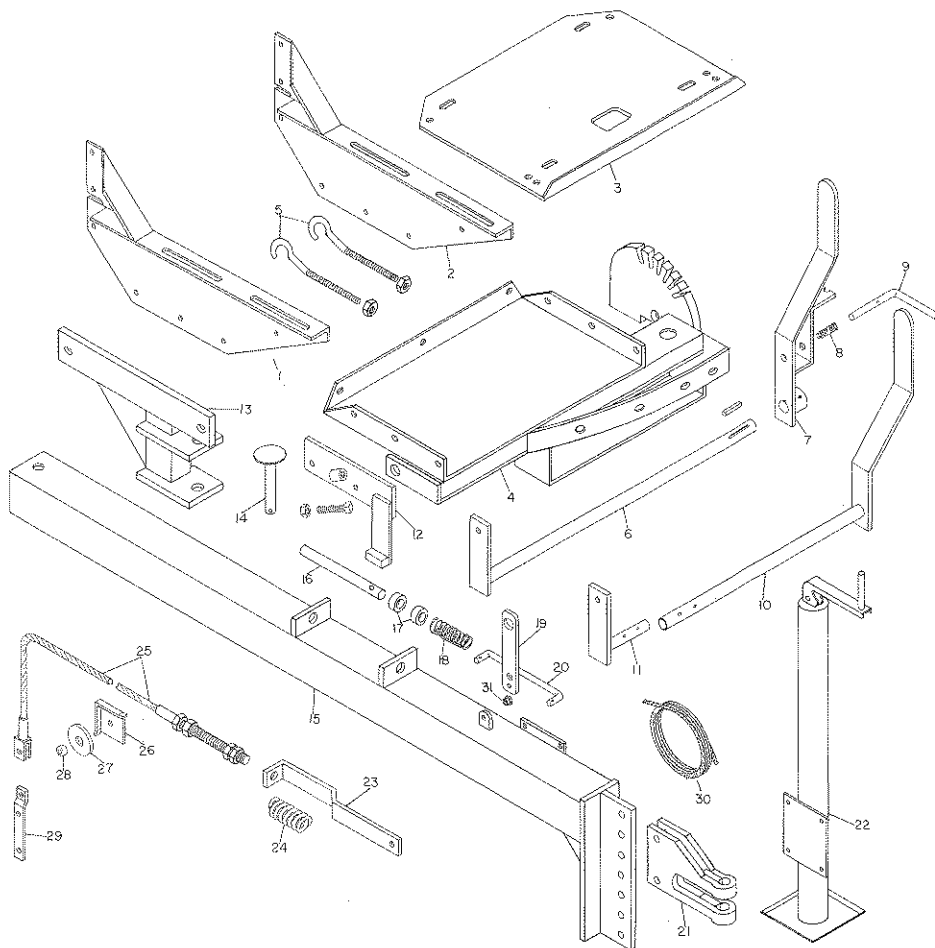 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7009	Engine mount, RH and LH (200 and 300)	12	F 7682	Pickup lift lever stop bracket
	F 7362	PTO gear box mounting bracket RH and LH (200 and 300)	13	F 7007	Pivot pin bracket
2	F 7009	Engine mount LH and RH (200 and 300)	14	F 7006	Drawbar pivot pin
3	F 7279	Engine base plate, 18" chamber	15	F 7001	Drawbar for engine baler
	F 7700	Engine base plate 22" and 23" chambers		F 7696	Drawbar for PTO baler 66-
	F 7364	PTO gear box plate 200 only	16	F 7002	Drawbar locking pin
4	F 7363	PTO gear box plate 300 only	17	F 7004	Set collar, drawbar locking pin
	F 7280	Hitch base plate 18" chamber	18	F 7003	Spring, drawbar locking pin
	F 7537	Hitch base plate with pickup quadrant 22" chamber	19	F 7283	Actuating lever, drawbar locking pin
	F 7536	Hitch base plate with pickup quadrant 23" chamber	20	F 7282	Link, drawbar locking pin
	F 7012	Hitch base plate, PTO, 23" chamber	21	F 183	Front end hitch
	F 7213	Hitch base plate, PTO, 22" chamber	22	F 7430	Front end jack complete for engine balers
5	F 7010	Engine adjusting bolt (2 used)		F 1586	Front end jack complete for PTO balers
6	F 7538	Pickup lift lever cross rod 300 only 65-		F 878	Jack handle assembly
7	F 7539	Pickup lift lever 65-		F 1605	Ram only for jack
	F 7725	PTO pickup lift lever 300 only 65-		F 1606	Cap for jack
8	F 7541	Spring for F 7540 pin 65-		F 1607	Thrust bearing for jack
9	F 7540	Pickup lift lever adjusting pin 65-	23	F 7567	Cable connecting link for cushion spring 65-
10	F 7281	Pickup lift lever 200 only	24	F 7566	Cushion spring (pickup cable) 65-
	F 7715	PTO pickup lift lever 200 only	25	F 7565	Pickup lift cable with ends 65-
11	F 7681	Pickup lift crank 200 only	26	F 7590	Sheave clip, pickup lift roller
			27	F 7591	Roller for pickup lift 65-
			28	F 7592	Bushing for F 7591 roller
			29	F 7194	Pickup lift bracket
			30	F 7005	Rope, drawbar pin, 9'
			31	F 440	Ferrule for F 7283 lever

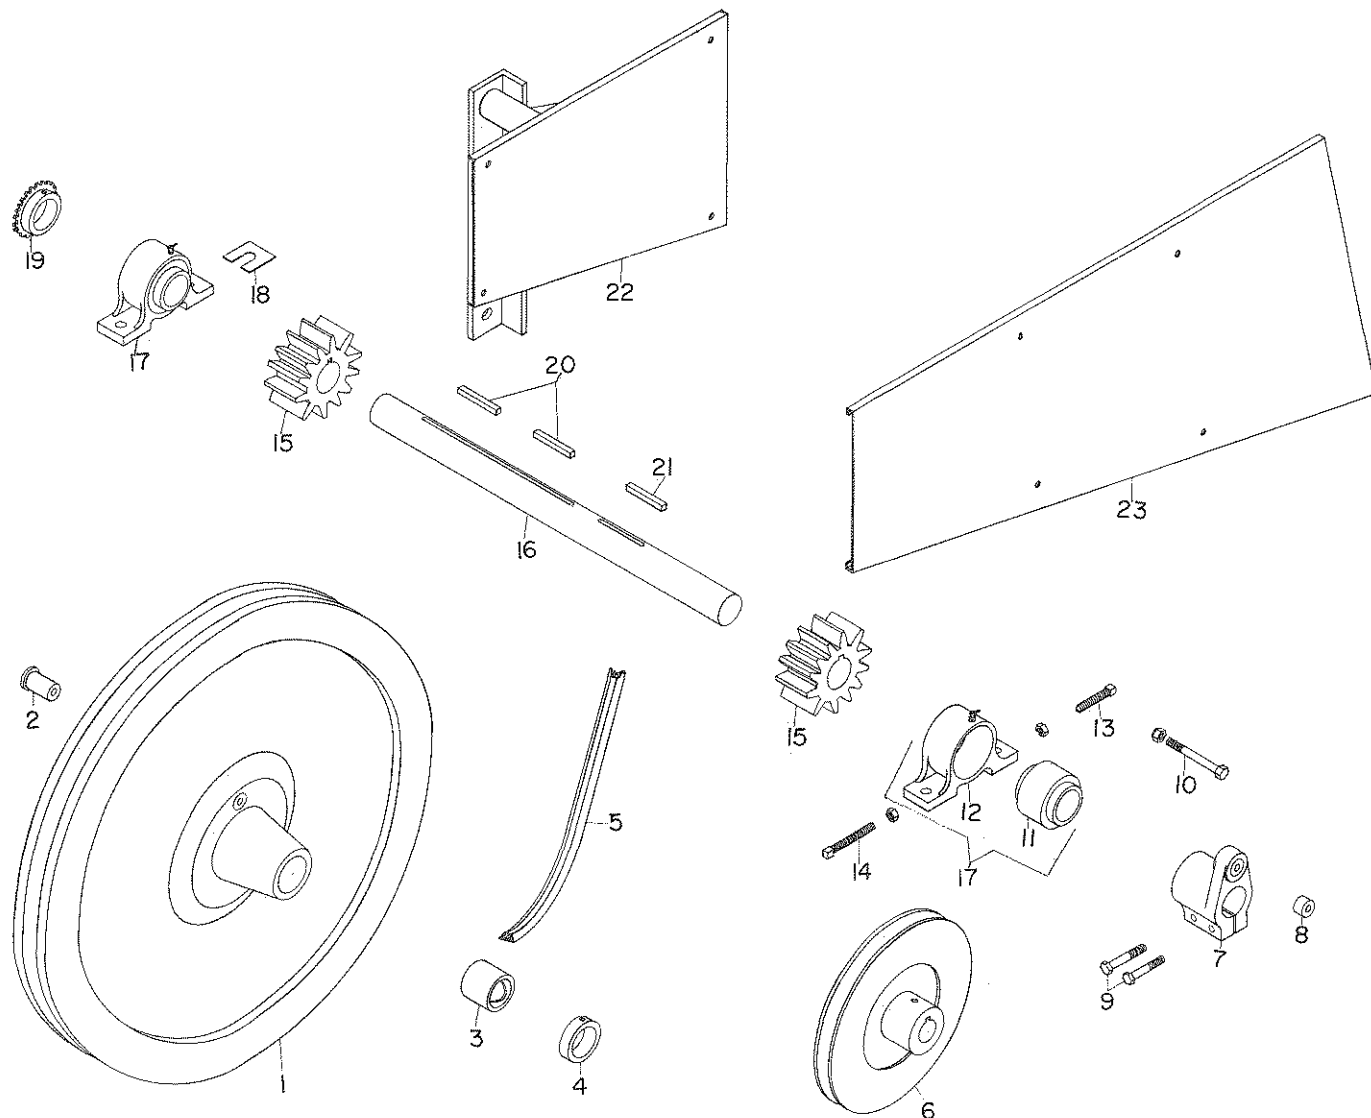 


REF. NO.	PART NO.	DESCRIPTION
1	F 7704	Flywheel with bushings, motor drive 66-
	F 1613	Flywheel with bushings, PTO drive 65-
2	F 1614	Shear bushing in flywheel, flanged 65-
3	F 886	Bushing for F 7704 and F 1613 flywheel
4	F 221	Set collar, pinion shaft, 2-1/8"
5	F 7000	Drive belt, D-165, for VG4D engine and all S. P. balers
	F 7337	Drive belt, D-162, for VH4D engine and PTO
6	F 7014	Motor pulley 10" OD for VG4D
	F 7241	Motor pulley 8" OD for VH4D
	F 7699	Motor pulley 10" OD for V461D (1-3/4" bore)
7	F 817	Shear hub for flywheel
8	F 1132	Shear bushing in flywheel shear hubs
9		1/2" x 3-1/4" heat treated cap screws with lock nuts
10	F 7015	Shear bolt 1/2" x 5" N.C. grade 2 bright cap screw
11	F 698	Bearing insert for F 765 cage


REF. NO.	PART NO.	DESCRIPTION
12	F 765	Bearing cage for F 34 bearing
13	F 498	Set screw for F 34 bearings, rear, 1/2" x 2" (2 used)
14	F 73	Set screw for F34 bearings, front, 1/2" x 4" (2 used)
15	F 7437	Pinion, 200 and 300, used with F 7438 gear (12T)
16	F 7025	Pinion shaft, 23" chamber
	F 7210	Pinion shaft, 22" chamber
	F 7285	Pinion shaft, 18" chamber
17	F 34	Bearing complete for pinion shaft, (2 used)
18	F 967	Shim for F34 bearing, 16 ga.
	F 967A	Shim for F34 bearing, 20 ga.
	F 967B	Shim for F34 bearing, 10 ga.
19	FT 157	Sprocket, drive for hydraulic pump
20	F 7488	Tapered key for pinions 3-1/2" (2 used)
21	F 72	Key for shear hub 1/2" x 1/2" x 3-1/2"
22	F 7017	Bracket, drive belt shield
23	F 7016	Drive belt shield

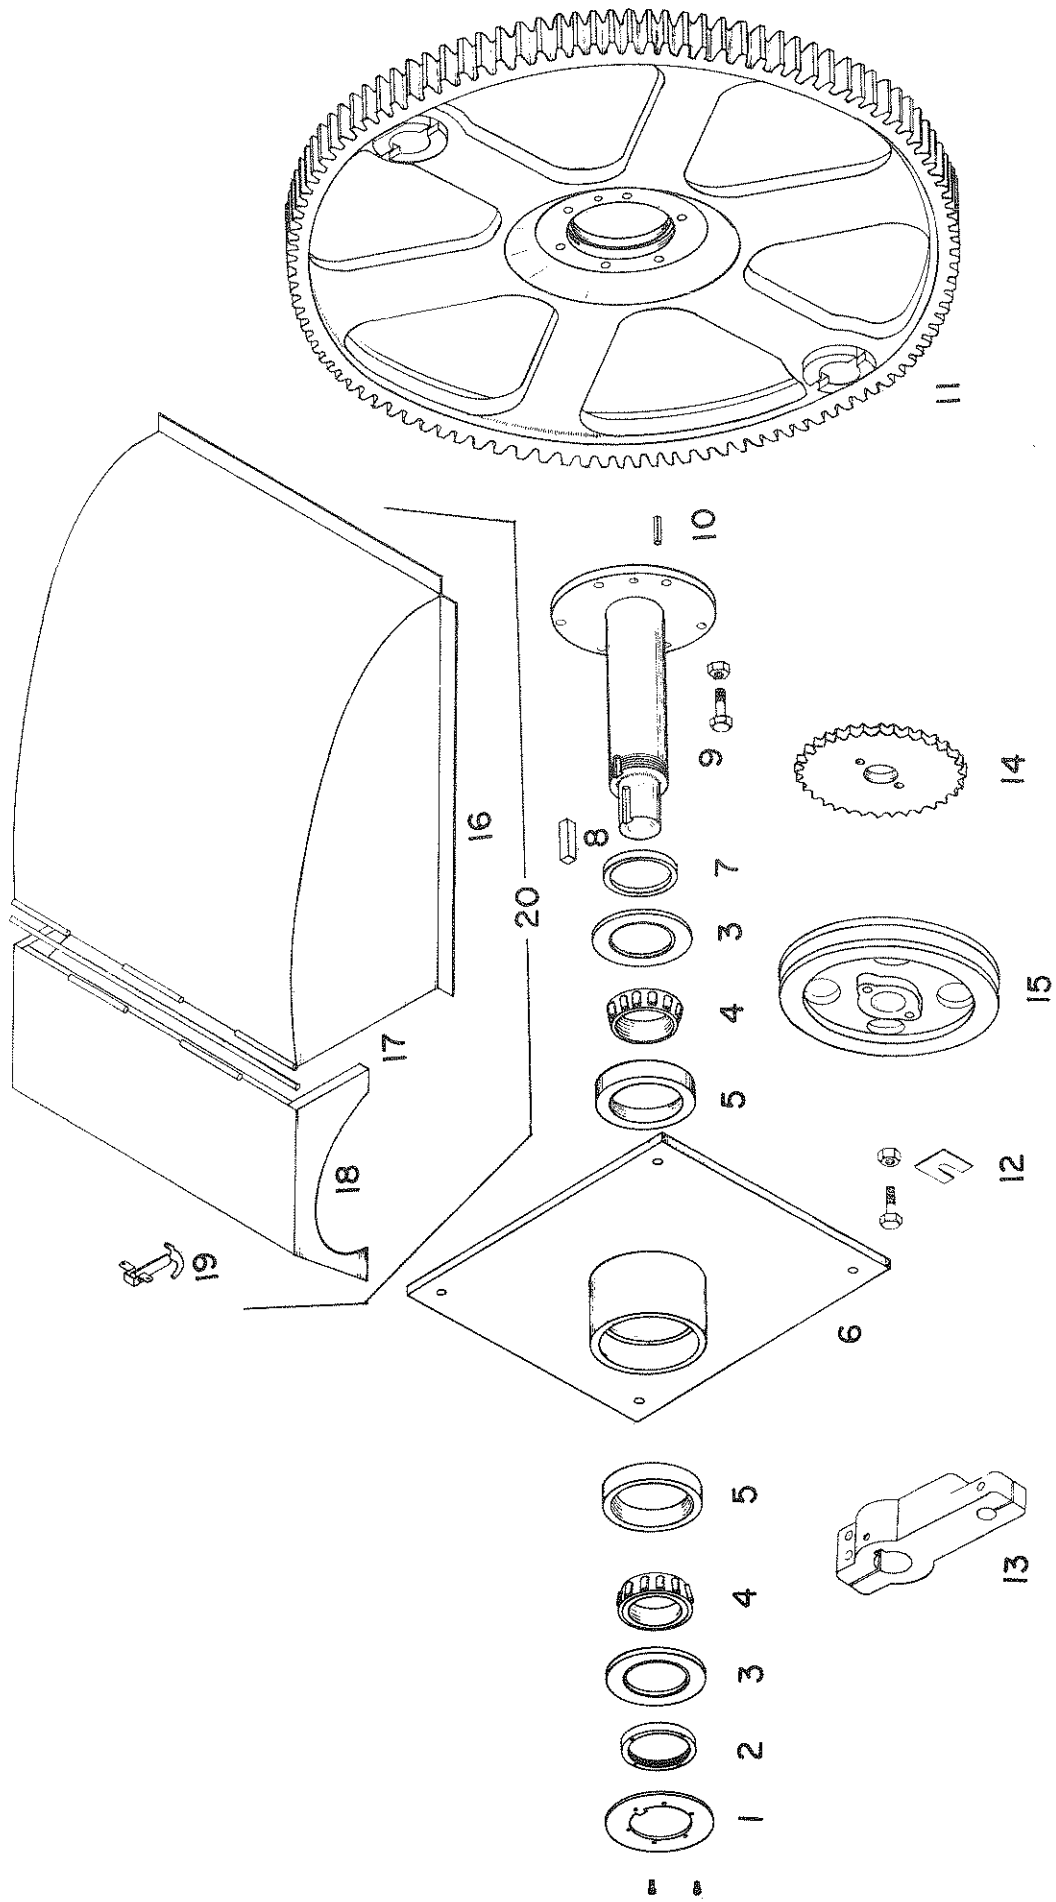 


REF. NO.	PART NO.	DESCRIPTION
1	F 7038	Locking washer
	F 7039	Screw for locking washer, 8/32" x 1/2" H.H.C.S. (4 used)
	F 7040	Lock washer for F 7039 screw, #8 medium (4 used)
2	F 7037	Adjusting nut for side plate bearing
3	F 7035	Seal for side plate #255833 (4 used)
4	F 7033	Bearing for side plate, #33287 (4 used)
5	F 7034	Bearing cup for side plate #33462 (4 used)
6	F 7354	Side plate, R.H. with bearing cups
	F 7462	Side plate, L.H. with bearing cups
	F 7358	Side plate, R.H. w/bearing and shaft
	F 7463	Side plate, L.H. w/bearing and shaft
7	F 7036	Seal race
8	F 225	Key, knotter drive shaft
9	F 7031	Shaft, feed fork drive
	F 7032	Shaft, knotter drive
10	F 7239	Roll pin 3/8" x 1-1/2" for bullgear
11	F 7438	Bullgear 88 tooth for F 7437 pinions (2 used)
	F 7026	Bullgear 110 tooth for F 47, F 47S and F 7286 pinions (2 used)
	F 7026D	Bullgear 110 tooth for F 47, F 47s and F 7286 pinions (ductile steel)
12	F 1267	Shim for aligning side plate
		Bolt for side plate, 1/2" x 1-3/4" N.C. cap screw with fiber lock nuts
13	F 1256	Crank arm
	F 312	1/2" x 3-1/4" N.F.H.T. cap screw with fibre lock nut
	F 226	Key 1/2" x 1/2" x 2"
		1/2" x 1/2" Hollow head set screw (3 used)
14	F 753	Sprocket, knotter drive (32T #60)
15	F 9A	Sheave, pickup drive
16	F 7627	Bullgear shield less access door 300 only 65-
	F 7628	Bullgear shield less access door 200 only 65-
17	F 7629	Bullgear shield hinge pin 300 only 65-
	F 7630	Bullgear shield hinge pin 200 only 65-
18	F 7631	Bullgear shield access door 300 only 65-
	F 7632	Bullgear shield access door 200 only 65-
19	F 853	Catch for bullgear shield
20	F 7548	Bullgear shield complete with door 300 only 65-
	F 7549	Bullgear shield complete with door 200 only 65-
	F 7550	Rubber grommet
	F 1661	Hydraulic shut-off fitting

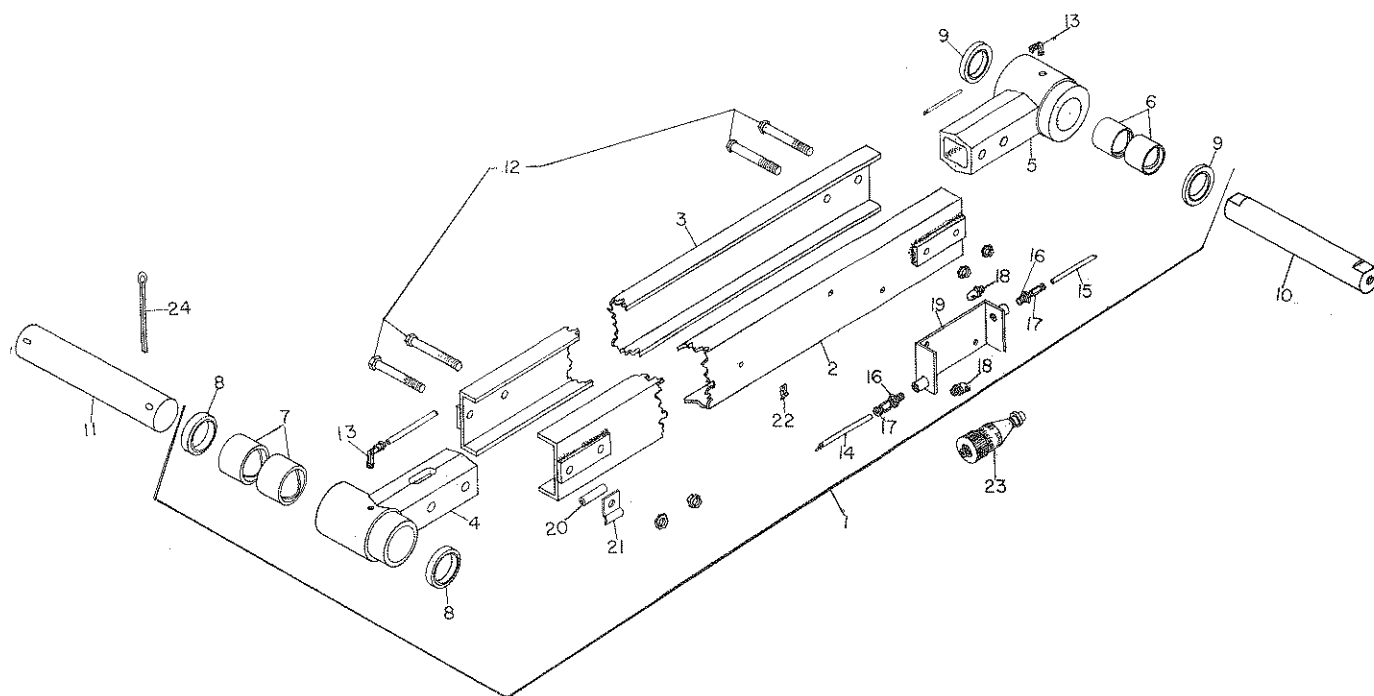 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7594	Conn. rod complete with heads 23" chamber 65-	9	F 1529	Grease seal for F 1521 and F 1523 heads 1-11/16" #471812
	F 7595	Conn. rod complete with heads 18" chamber 65-	10	F 7708	Plunger pin 200 only
	F 7650	Conn. rod complete with heads 22" chamber 65-		F 7709	Plunger pin 300 only
2	F 7593	Conn. rod channel L.H. drilled for F 7542 65-	11	F 46	Crank pin, gear end 200 only
3	F 7042	Conn. rod channel R.H.		F 598	Crank pin, gear end 23" chamber
4	F 1520	Conn. rod head with bushings and seals gear end 200 only		F 1134	Crank pin, gear end 22" chamber
	F 1522	Conn. rod head with bushings and seals gear end 300, 23" chamber	12		5/8" x 4-1/2" NF HT cap screw
	F 1524	Conn. rod head with bushings and seals gear end 300, 22" chamber	13	F 1441	Elbow for conn. rod grease tube (2 used) I. M. P. 889L
5	F 1521	Conn. rod head with bushings and seals, plunger end, 200 only	14	F 7544	Grease tube, crank pin to F 7542 bracket, 7"
	F 1523	Conn. rod head with bushings and seals, plunger end, 300 only	15	F 7545	Grease tube, plunger pin to F 7542 bracket, 36"
6	F 1526	Bushing for F 1521 head, plunger end, 200 only	16	F 7418	Bushing, grease tube connector to bracket 1/4" to 1/8"
	F 1528	Bushing for F 1523 head, plunger end, 300 only	17	F 778	Connector, grease tubes #308808
7	F 1525	Bushing for F 1520 head, gear end, 200 only	18	F 7651	Grease fitting on conn. rod (2 used)
	F 1527	Bushing for F 1522 and F 1524 heads gear end, 300 only	19	F 7542	Bracket for grease tubes on conn. rod channel
8	F 1530	Grease seal for F 1520, F 1522 and F 1524 heads 1-15/16" #50409	20	F 933	Protector tube for grease tube
			21	F 1436	Clip for grease tube protector
			22	F 7653	Clip for grease tube
			23	F 7543	Spring loaded grease cup for F 7542
			24	F 55	Key for crank pin (2 used)
				F 7611	Conn. rod ends greasing kits, including ref. No. 14 to 22

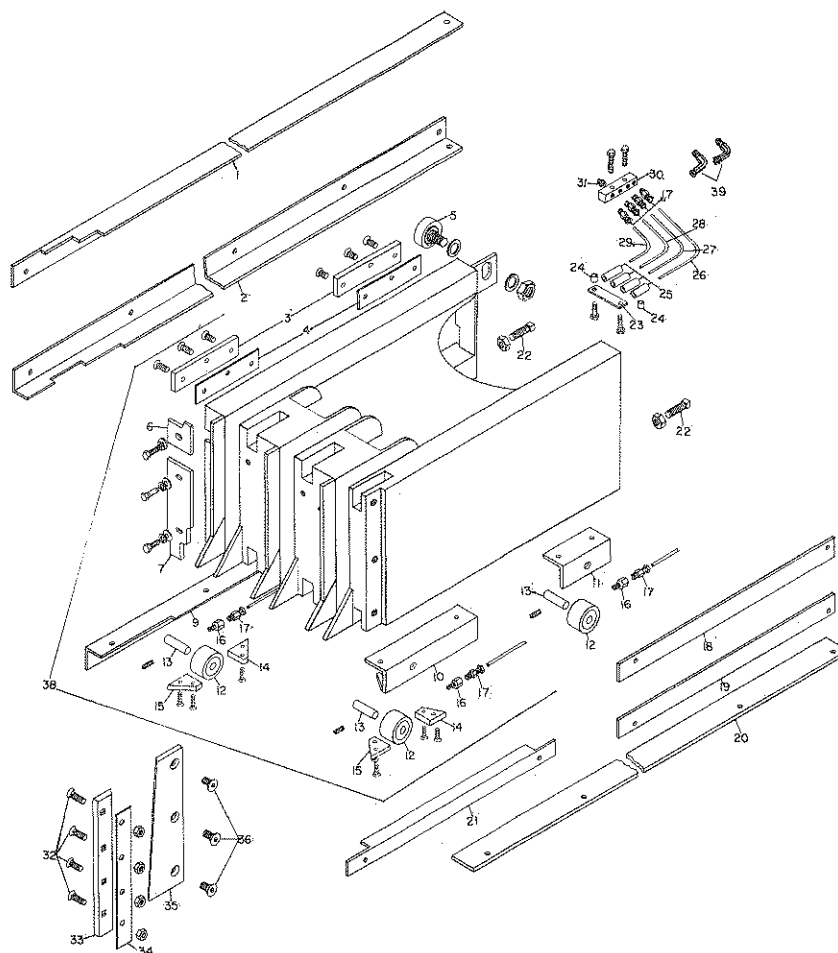 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 294	Slide, plunger angle top L.H.	28	F 779	Grease tube, right front 30"
2	F 1540	Slide, plunger angle, bottom L.H.	29	F 780	Grease tube, right rear 36"
3	F 1537	Hard slide for roller plunger (4 used)	30	F 979	Manifold for grease tube 4 holes for plunger roller
4	F 1538	Shim for F 1537 slide	31		1/8" straight grease fitting (4 used)
5	F 1636	Roller for top of plunger 3/4" shank 65-	32	F 1629	Bolt for stationary knife (sq. hd) for F1609 knife 65- (4 used)
6	F 689	Adjusting pad for plunger face, top left		F 228	Bolt for stationary knife (rnd. hd) for F52 knife (4 used)
7	F 1692	Adjusting pad for plunger face, left side	33	F 1609	Slicing knife, stationary (with sq. holes) 65-
9	F 1573	Roller mounting angle L.H.		F 52	Slicing knife, stationary (w/round holes)
10	F 773	Roller mounting angle R.H. rear	34	F 751	Shim for stationary knife, 14 ga.
11	F 772	Roller mounting angle, R.H., front		F 1512	Shim for stationary knife, 20 ga.
12	F 775	Roller for plunger (4 used)	35	F 49	Shear knife on plunger
13	F 776	Pin for F 775 roller (4 used)	36	F 227	Bolt, for shear knife 5/8 x 1 N.F. 3 used
14	F 774	Wiper, front (2 used)	38	F 7581	Plunger complete less knife 23" chamber 300 only 65-
15	F 986	Wiper, rear (2 used)		F 7596	Plunger complete less knife 22" chamber 300 only 65-
16	F 777	Adapter, grease tube (4 used) #51942		F 7582	Plunger complete less knife 18" chamber 200 only 65-
17	F 778	Connector, grease tubes, (8 used - 3-tie) (6 used - 2-tie) #308808	39	F 1441	Elbow, grease tube, (2 used on 2-tie) I.M.P. 889L
18	F 299	Slide, plunger flat, upper side R.H.			5/16" x 1" N.C.F.H. hard slide to plunger (12 used)
19	F 298	Slide, plunger flat, lower side R.H.			1/4" x 1" N.C.F.H. wiper to roller mounting angle (8 used)
20	F 7580	Slide, plunger flat, bottom R.H. 65-			3/8" x 1" N.C.F.H. adjusting pads to plunger (3 used)
21	F 7439	Knife guide under feed opening			5/16" x 1-1/2" N.C.C.S. clamp and manifold to plunger (4 used)
22	F 1641	Set screw for plunger pin (2 used) (3/4" x 1-1/2" sq. hd. set screw)			5/16" x 5/16" N.C. allen screw roller pin lock
23	F 930	Cap, grease tube clamp			
24	F 932	Spacer, grease tube clamp (2 used)			
25	F 933	Protector tube for grease tube (3 used)			
26	F 781	Grease tube, left front 14"			
27	F 779	Grease tube, left rear 30"			

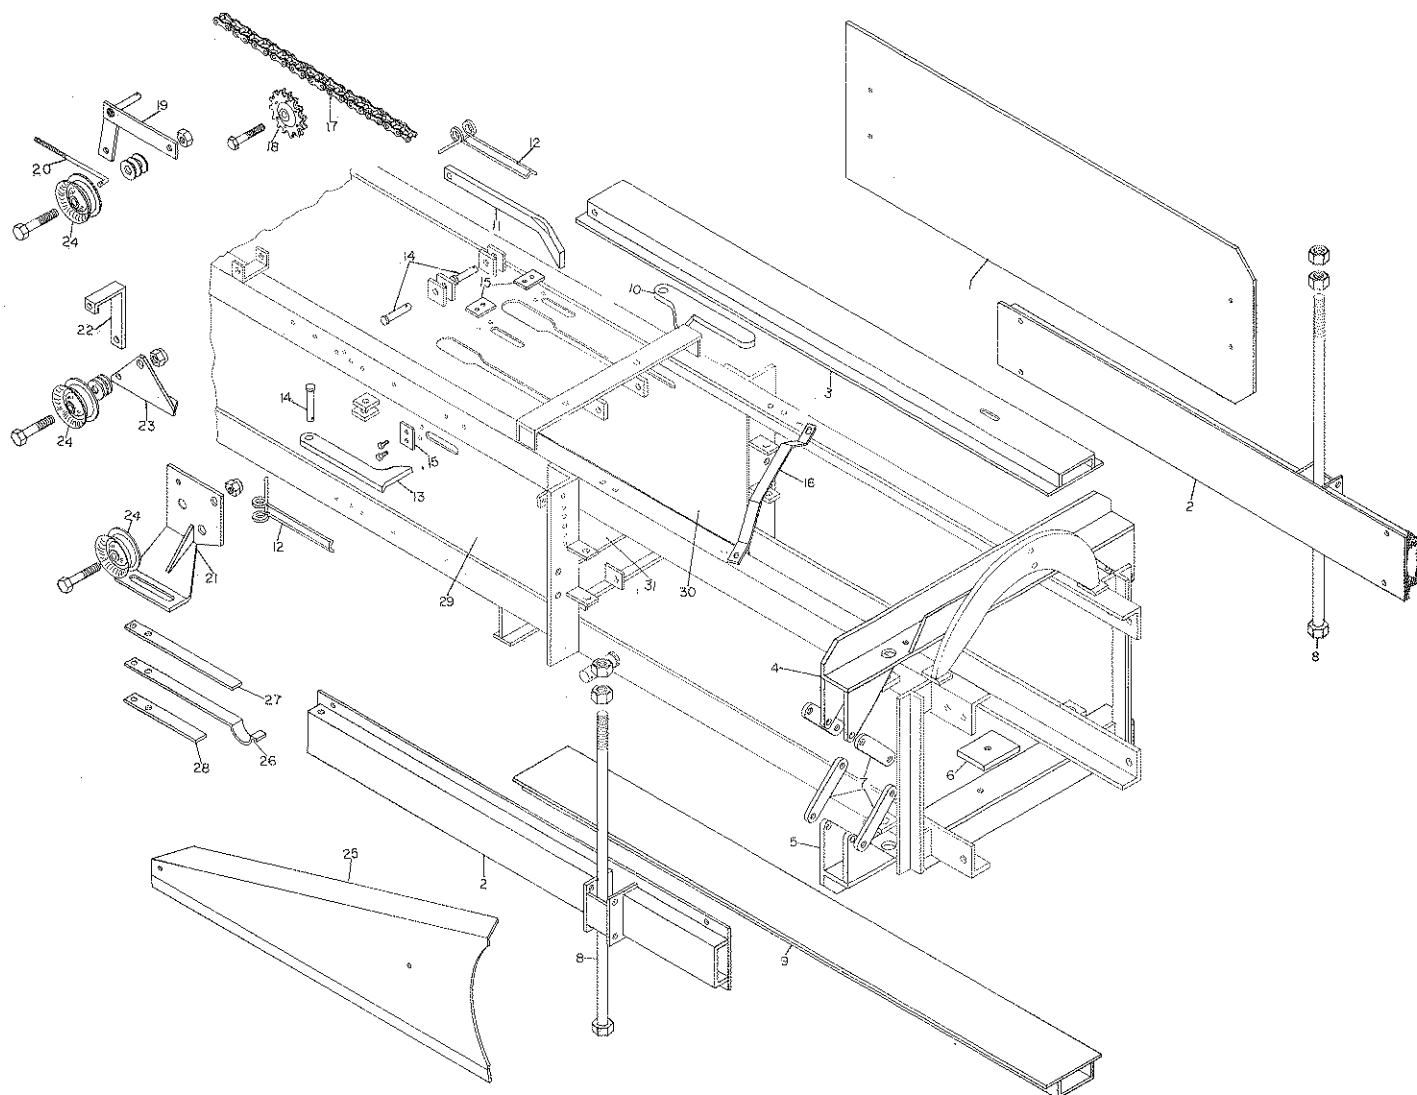 


REF. NO.	PART NO.	DESCRIPTION
1	F 7507	Solid side for 200 and 300 (2 used)
2	F 7121	Side tension rail (2 used)
3	F 1590	Top tension rail 200 only 64-
	F 7122	Top tension rail 300 only (2 used)
4	F 493	Top tension angle, 18" chamber
	F 7668	Top tension angle, 22" chamber
	F 7669	Top tension angle, 23" chamber
5	F 494	Bottom tension angle 18" chamber
	F 1151	Bottom tension angle 22" chamber
	F 604	Bottom tension angle 23" chamber
6	F 1662	Spacer shim 1 used on 200, 2 used on 300
7	F 497	Flat linkage bar (8 used)
8	F 600	Tension bolt, 3/4" x 27-3/4" (2 used)
9	F 7294	Bottom tension rail 200 only
	F 7123	Bottom tension rail 300 only (2 used)
10	F 7563	Hay dog R.H.
11	F 837	Hay dog top and bottom
12	F 188	Hay dog spring
13	F 7562	Hay dog L.H.
14	F 220	Pin, hay dog
15	F 1589	Rubber pads for hay dogs w/screws
16	F 7322	Wire hold down 200 only
	F 7321	Wire hold down 300 only
17	F 1392	Knotter drive chain, twine tie balers (238P) #60

REF. NO.	PART NO.	DESCRIPTION
	F 7055	Knotter drive chain, wire tie balers (239P) #60
18	F 7397	Sprocket, (1/2" bore) for chain divider (2 used)
19	F 841	Tightener bracket, knotter drive chain
20	F 7670	Chain tightener adjusting bolt
21	F 1310	Saddle spring and idler roller bracket (twine only)
22	F 1581	Bracket for knotter drive chain shield
23	F 7516	Idler roller mounting plate (wire balers only)
24	F 883	Tightener and idler pulley for knotter drive chain
25	F 7056	Shield, knotter drive chain
26	F 1494	Saddle spring (Twine only)
27	F 695	Saddle spring helper (Twine only)
28	F 1216	Saddle spring stiffener
29	F 7221	Liner for bale chamber L.H.
30	F 7220	Liner for bale chamber R.H.
31	F 7296	Bale chamber bottom, 18" chamber
	F 7223	Bale chamber bottom, 22" chamber
	F 7222	Bale chamber bottom, 23" chamber

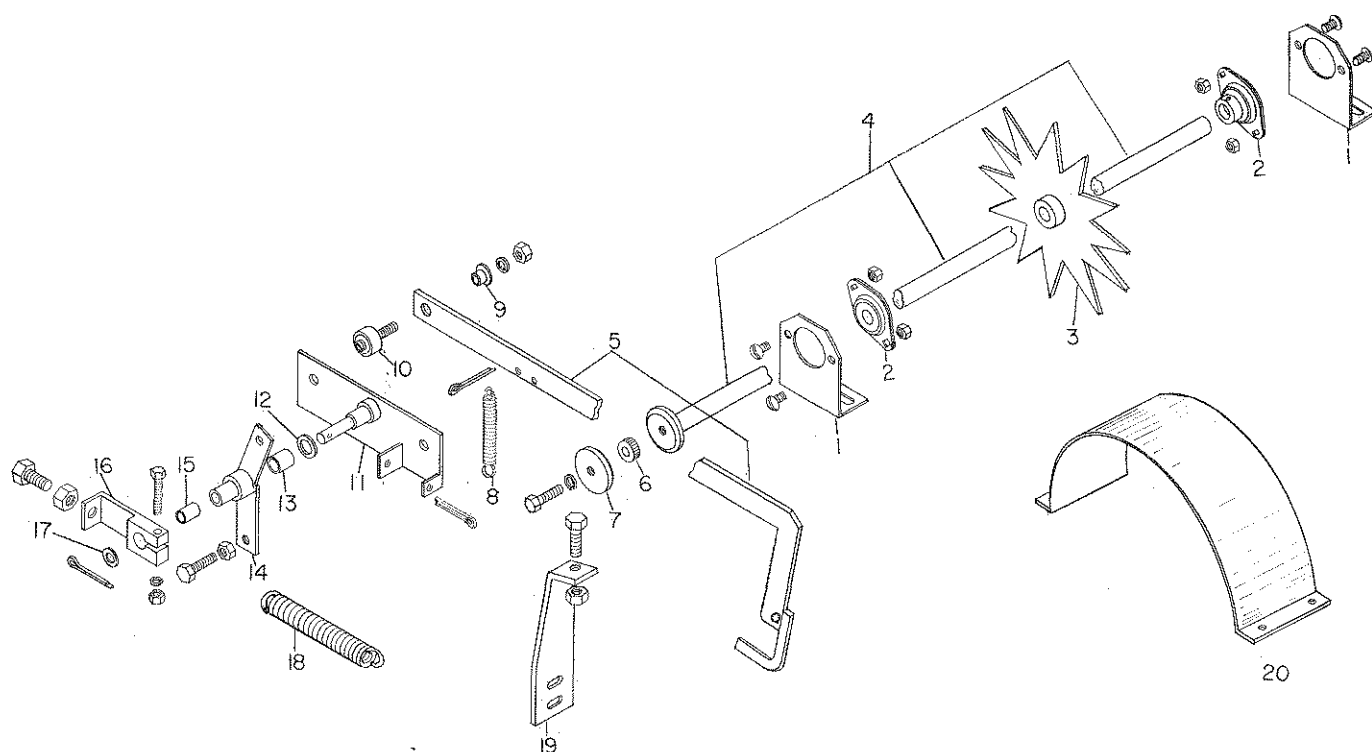 


REF. NO.	PART NO.	DESCRIPTION
1	F 1617	Meter wheel shaft bracket (2 used) 65-
2	F 1618	Meter wheel shaft bearing complete (2 used) 65-
	F 1619	Meter wheel shaft bearing only RAO12N, P. P. B., 65-
3	F 1531	Meter wheel, adjustable trip, 10"
4	F 1564	Meter wheel shaft w/guide washer, 300 only 23" chamber
	F 1587	Meter wheel shaft w/guide wahser, 300 only 22" chamber
	F 1575	Meter wheel shaft w/guide washer, 200, 25A and 25AW
5	F 1686	Meter trip bar
6	F 1687	Knurled friction disc
7	F 1571	Guide washer
8	F 278	Spring
9	F 440	Ferrule
10	F 1572	Cam follower bearing
11	F 1513	Knotter trip mount
12		3/4" x 1-1/4" - 10 ga. machine bushing
13	F 7227	Bushing 3/4" x 7/8" x 3/4" oilite
14	F 1514	Reset lever
15	F 1568	Bushing, rest lever 1/2" x 5/8" x 1" oilite
16	F 1515	Clutch stop lever
17		1/2" x 7/8" - 14 ga. machine bushing
18	F 1517	Trip spring
19	F 1632	Meter tripbar stop with bolt 65-
20	F 1579	Shield for meter wheel 300 only
	F 1608	Shield for meter wheel 200, 25A and 25AW

 1/2" x 1-1/2" N.C.C.S. trip bar stop
 1/2" x 1-1/4" N.C.C.S. clutch stop
 5/16" x 2" N.F.C.S. clutch stop clamp
 3/8" x 1-1/4" N.C.C.S. knurled roller and washers
 5/16" x 3/4" N.C.B.H. bearing to bracket

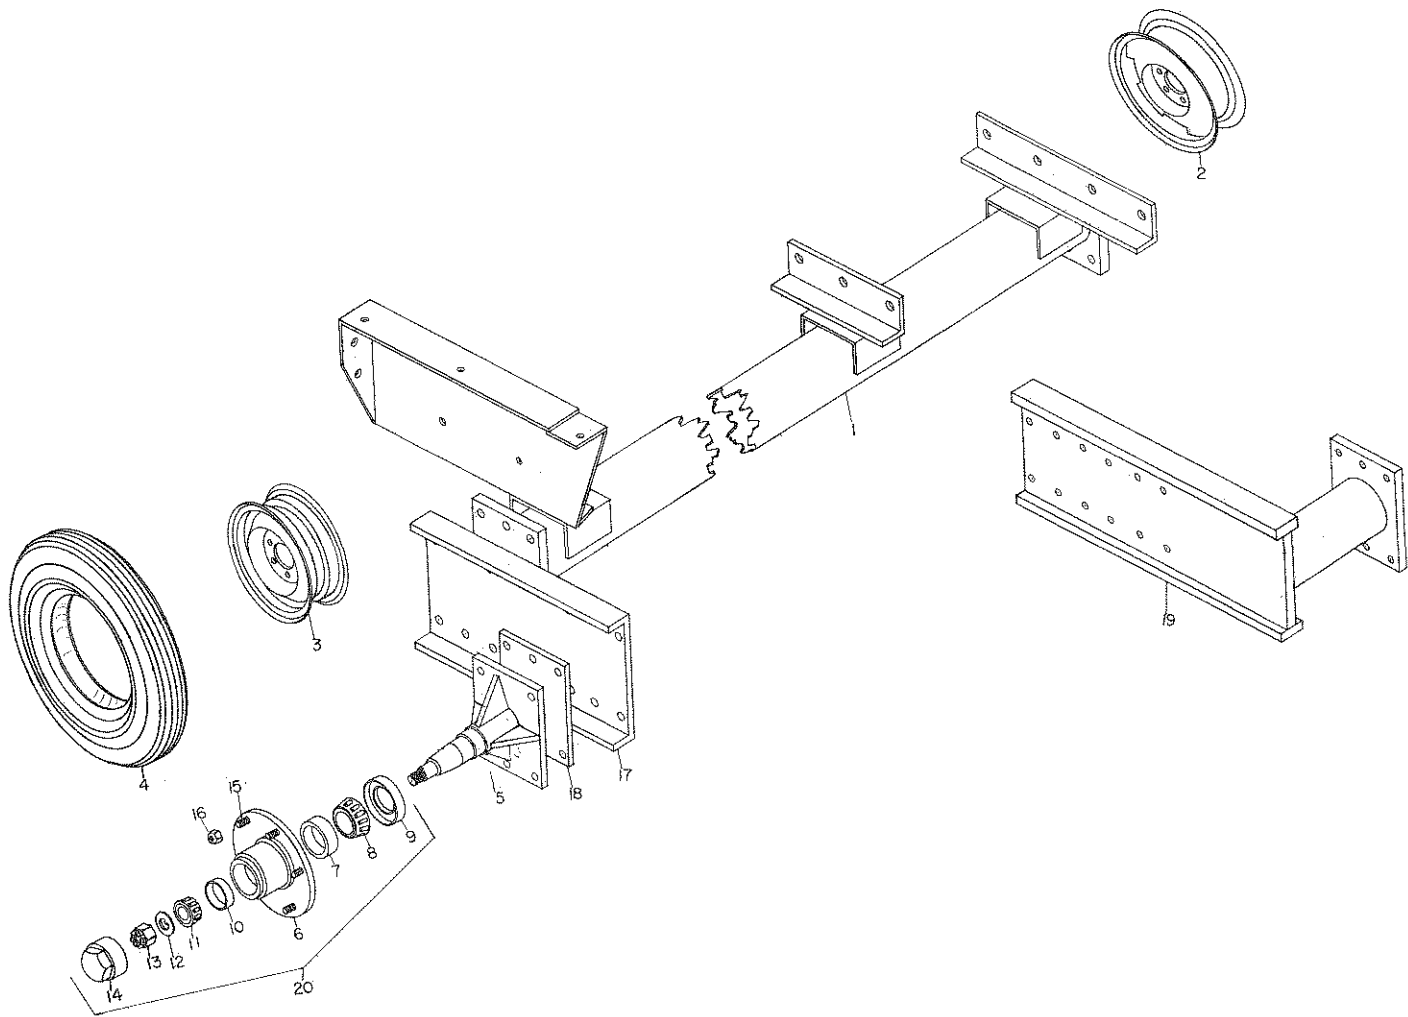


REF. NO.	PART NO.	DESCRIPTION
1	F 7174	Tubular axle 23" chamber
	F 7217	Tubular axle 22" chamber
	F 7298	Tubular axle, 18" chamber
2	F 944	Wheel, flat base for F 1624 and F 364 hubs
	F 322	Wheel, flat base for dual wheel hub No. F 321
	F 731	Dual wheel with tire, tube and flat mounted
3	F 211	Wheel, drop center for F 1624 and F 364 hubs
4	F 212	Tire, 7:50 x 16 4 ply R.H.
	F 213	Tire, 7:50 x 16 8 ply L. H.
	F 215	Inner tube 7:50 x 16 for F212 tire R. H.
	F 667	Inner tube 7:50 x 16 T and B for flat base rim
	F 668	Flap for flat base rim
5	F 1044	Spindle for F 1624 and F 364 hub 200 only
	F 1631	Spindle for F 1624 and F 364 hub R.H.
	F 1043	Spindle for F 321 dual wheel hub
6	F 1624	Hub with cups for F 211 and F 944 wheels
	F 321	Hub with cups for F 322 dual wheel #82165
7	F 1653	Inner cup for F 1624 hub 65- L.M. 29710
	F 1382	Inner cup for F 321 dual wheel hub #3720
8	F 1625	Inner wheel bearing for F1624 hub 65- #L.M. 29749
	F 323	Inner wheel bearing for F 321 dual wheel hub #3780
9	F 1627	Grease retainer for F 1624 hub 65- #54605 K.H.


REF. NO.	PART NO.	DESCRIPTION
	F 325	Grease retainer for F 321 dual wheel hub 5875
10	F 1654	Outer cup for F 1624 hub 65- #L44610
	F 1383	Outer cup for F 321 dual wheel hub #3320
11	F 1626	Outer wheel bearing for F 1624 hub 65- #L44640
	F 324	Outer wheel bearing for F 321 dual wheel hub #3379
12	F 884	Washer for F 1044 and F 1631 spindles
	F 327	Washer for F 1043 dual wheel spindle
13	F 934	Nut for F 1631 and F 1044 spindles
	F 326	Nut for F 1043 dual wheel spindle
14	F 1628	Hub cap for F 1624 hub #46749
	F 334	Hub cap for F 321 dual wheel hub #07347
15	F 462	Lug bolt for F 1624 and F 364 hub
	F 335	Lug bolt for F 321 dual wheel hub
16	F 214	Lug nut for F 462 bolt #15085
	F 433	Lug nut for F 335 dual wheel bolt
17	F 7564	Mounting channel R.H. wheel
18	F 7636	Spacer plate used w/F7564 when using F 1044 spindle on R.H. wheel
19	F 7649	Tandem wheel plate R or L
20	F 7662	Single wheel hub with bearings complete less spindle 65-
	F 7663	Dual wheel hub with bearings complete less spindle
	F1647	Dual wheel hub w/F 1043 spindle complete

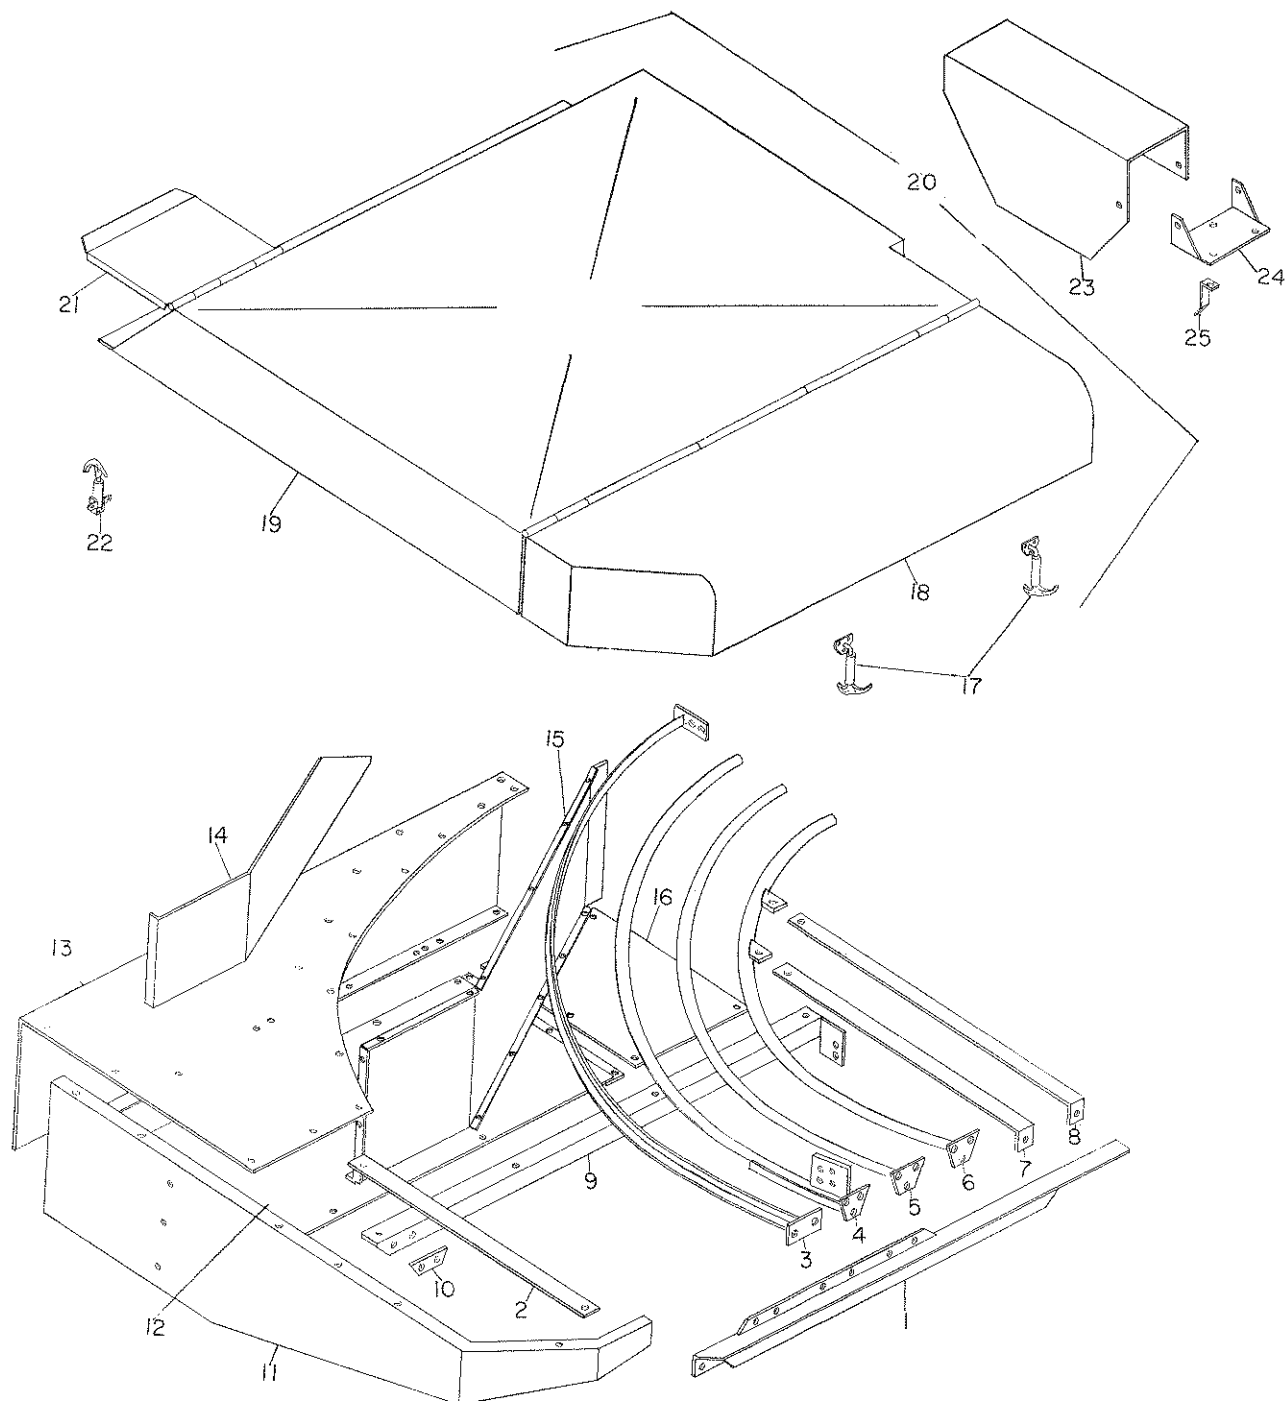 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7482	Support angle for guard pipes	13	F 7142	Feeder house rear and top section
2	F 7158	Hay hold down, outside	14	F 7127	Upright shield under hood
3	F 7299	Guard angle	15	F 7152	Feeder house back sheet
4	F 7472	Guard pipe, outside with latch mounting plate	16	F 7145	Feeder house bottom wear plate
5	F 7163	Guard pipe, center	17	F 7166	Catch for access door
6	F 7164	Guard pipe, inside	18	F 7633	Access door for F 7551 shield 65-
7	F 7159	Hay hold down, center	19	F 7634	Shield over pickup, rear 65-
8	F 7160	Hay hold down, inside	20	F 7551	Shield over pickup complete 65-
9	F 7157	Angle brace for feeder house bottom sheet	21	F 7635	Tool box lid 65-
10	F 7394	Pickup stop 63-	22	F 853	Catch for tool box cover
11	F 7143	Feeder house end plate	23	F 7517	Shield for needle yoke drive arm and brake 65-
12	F 7713	Feeder house bottom, 66-	24	F 7579	Bracket knottter drive arm shield 65-
	F 7714	Feeder house bottom end shim, R.H. side 66-	25	F 7654	Brace for F 7579 bracket

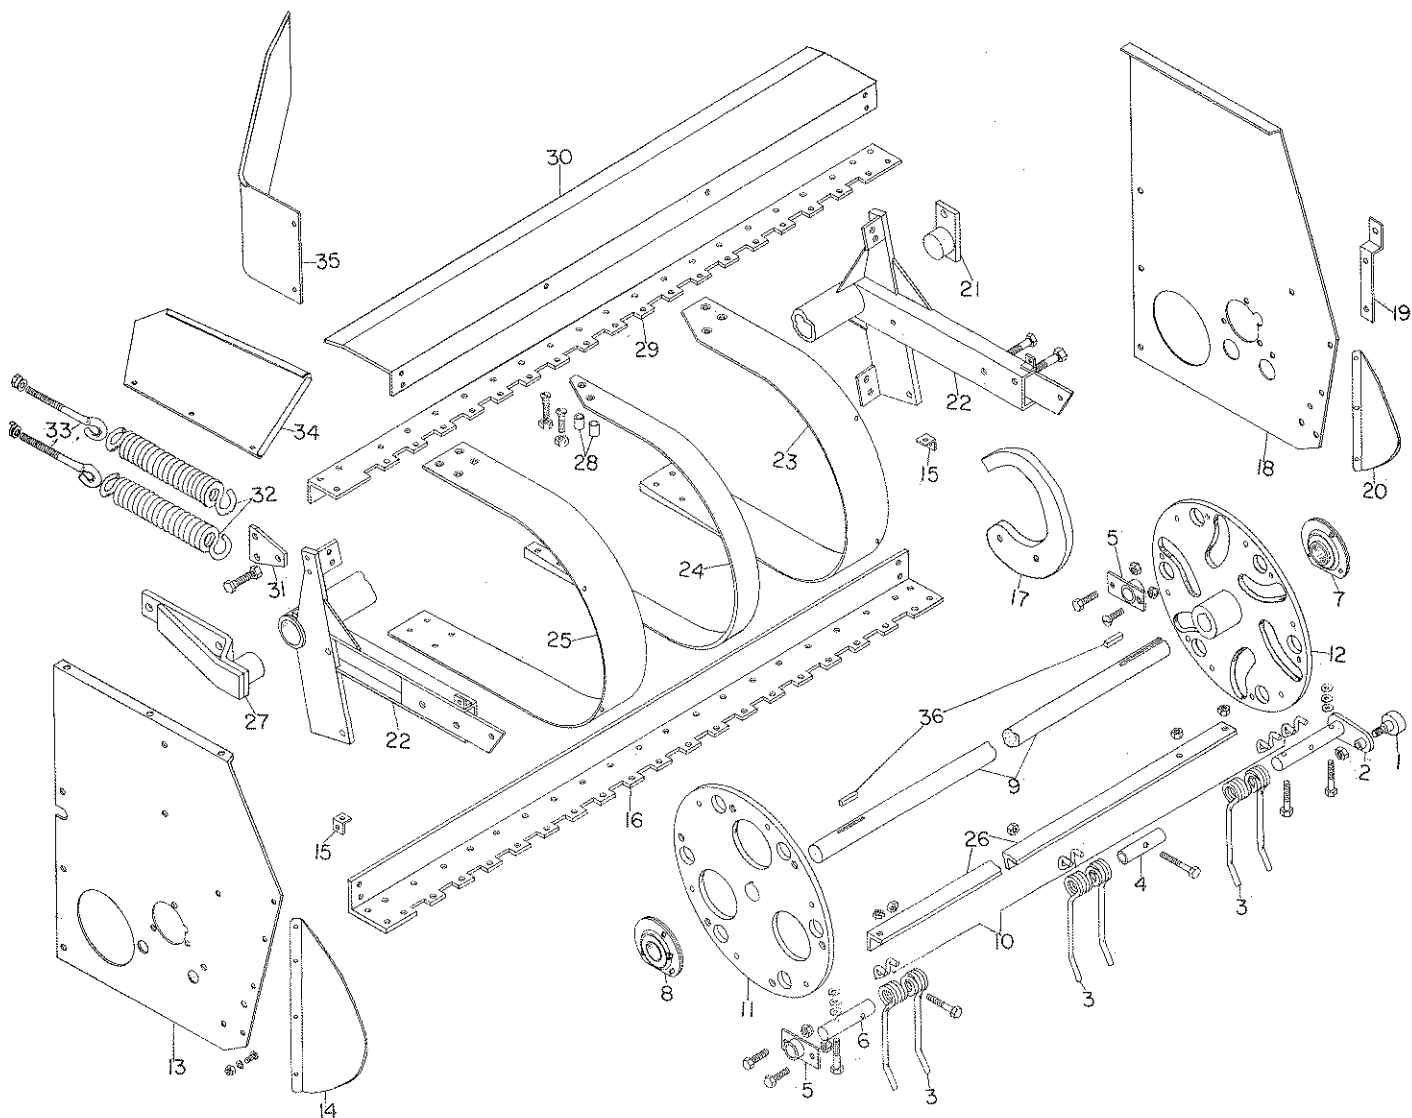 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7598	Roller for F 7597 cam lever 65-	19	F 7194	Pickup lift bracket, pull type
2	F 7599	Cam lever only 65-	20	F 7151	Fender flare, inside
	F 7597	Cam lever with roller (6 used) 65-		F 7356	Fender flare extension, inside
3	F 1226	Pickup finger 6-1/2" shank (54 used)	21	F 7176	Bearing, L.H. pickup mounting
4	F 101	Pipe, pickup finger guide pipe (42 used)	22	F 7177	Pickup frame
5	F 7187	Tooth bar bearing (12 used)	23	F 7184	Stripper, inside
6	F 98	Pin, tooth bar (6 used)	24	F 7183	Stripper, center (17 used)
7	F 7584	Bearing, pickup shaft L.H.	25	F 7185	Stripper, outside
8	F 7583	Bearing, pickup shaft R.H.	26	F 7186	Tooth bar (6 used)
9	F 7179	Pickup shaft	27	F 7382	Bearing, R.H. pickup mounting pull type
10	F 100	Pickup finger guide (60 used)	28	F 117	Pickup fender guard spacer (40 used)
11	F 7189	Pickup flange R.H.	29	F 7181	Top stripper bar
12	F 7188	Pickup flange L.H.	30	F 7182	Pickup joint sheet
13	F 7573	Fender, outside 65-	31	F 7156	Spring plate
14	F 7148	Fender flare, outside	32	F 7154	Spring for pickup balance (2 used)
	F 7355	Fender flare extension, outside	33	F 7155	Eyebolt for pickup balance spring (2 used)
15	F 7193	Fender mounting clip (4 used)	34	F 7146	Skirt for fender
16	F 7180	Bottom stripper bar	35	F 7149	Fender extension
17	F 7190	Pickup cam	36	F 97	Key 1/4" x 1/4" x 1-1/2" flange to shaft
18	F 7572	Fender, inside 65-			

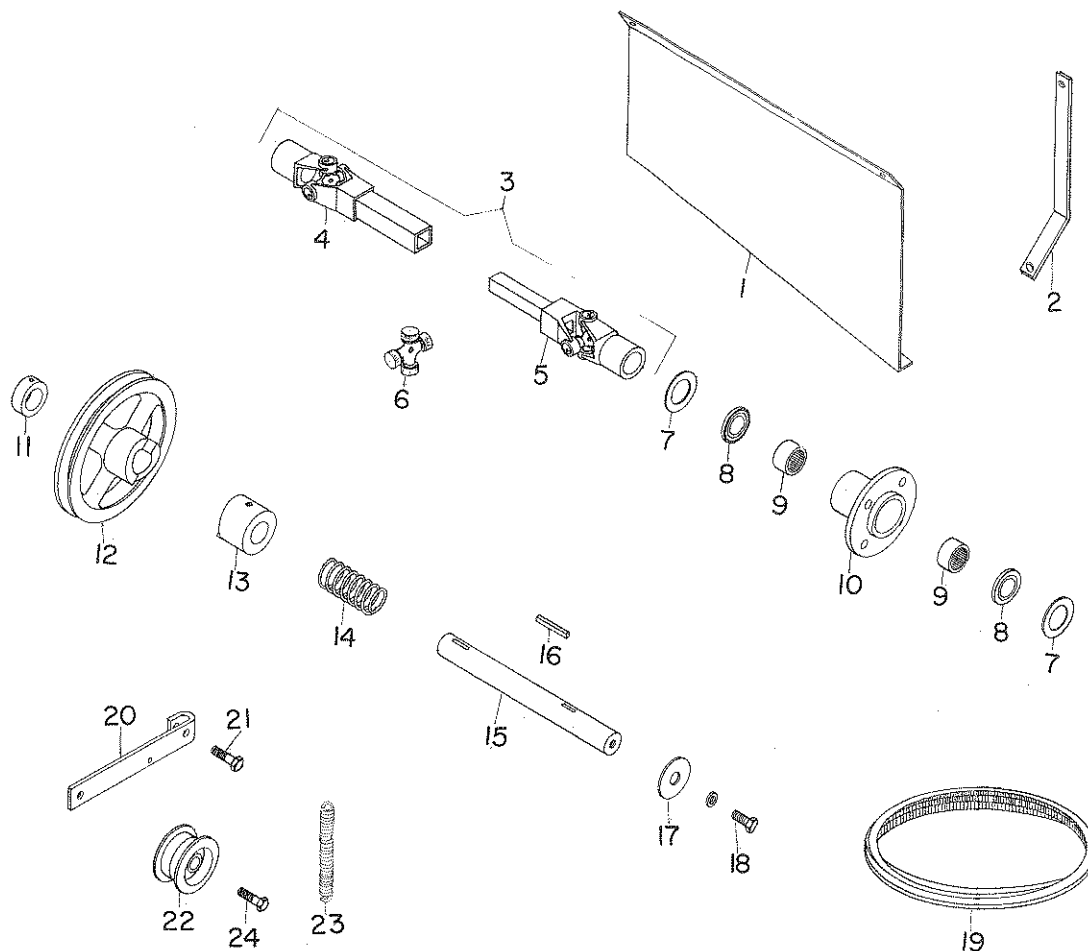 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7304	Pickup drive shaft shield, 300, 23" chamber	10	F 669	Pickup shaft bearing cage with bearing and seal
	F 7706	Pickup drive shaft shield, 300, 22" chamber	11	F 99	Set collar, 1-3/8"
	F 7305	Pickup drive shaft shield, 200	12	F 8A	Pickup driven sheave
2	F 7303	Brace for pickup drive shaft shield	13	F 7	Pickup clutch ring
3	F 7051	Universal drive shaft complete, 300	14	F 126	Pickup clutch spring
	F 7302	Universal drive shaft complete, 200	15	F 1264	Pickup drive shaft, hardened and ground
4	F 7053	Universal with square tube, 300	16	F 122	Key, 1/4" x 1/4" x 2-1/2" (2 used)
	F 7301	Universal with square tube, 200	17	F 418	Pickup clutch spring cap
5	F 7052	Universal with square shaft, 300	18		1/2" x 1" N.C. cap screw
	F 7300	Universal with square shaft, 200	19	F 7535	Pickup drive belt (CX105) for pull type balers
6	F 318	Universal joint repair kit	20	F 7546	Pickup drive belt tightener bracket
7	F 4136	Washer (2 used)	21		1/2" x 2-1/4" N.C. cap screw
8	F 671	Grease seal for F 669 (40169) (2 used)	22	F 840	Idler pulley, pickup belt tightener
9	F 672	Needle bearing for F 669 (BH2216) (2 used)	23	F 129	Spring, pickup belt tightener
			24		1/2" x 2-1/2" N.C. cap screw

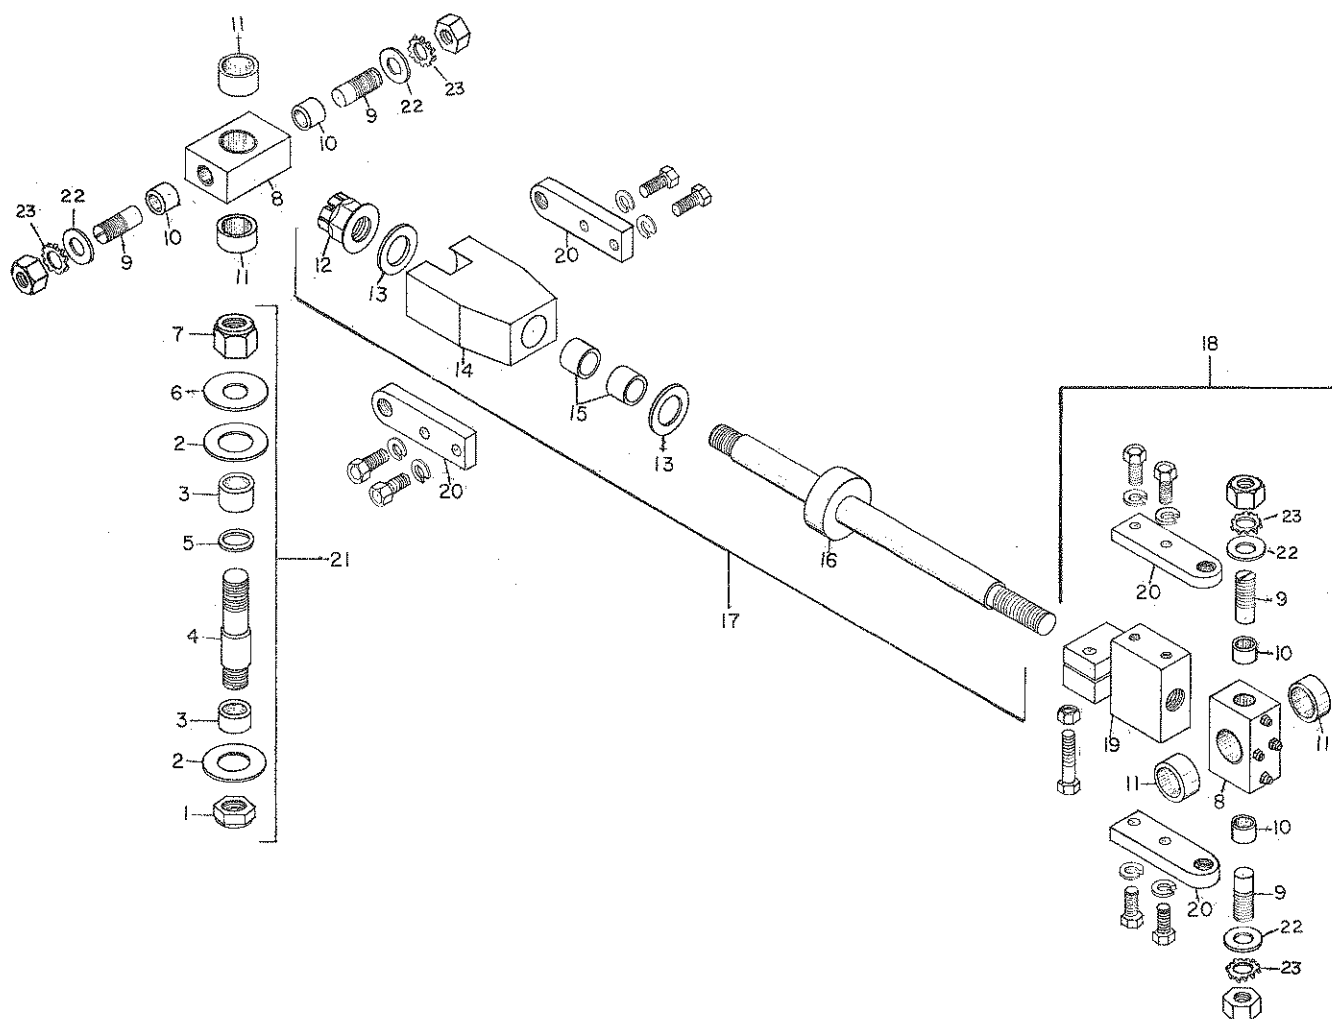 


REF. NO.	PART NO.	DESCRIPTION
1	F 1386	Lock nut (1" jam)
2	F 1260	Hardened washer 1-3/8" x 2-1/2" x .025 (4 used)
3	F 1071	Inner race for F 480 bearing I.R. 1812 (4 used)
4	F 1306	Crank pin only
5	F 1259	Spacer for F 1071
6	F 1261	Hardened washer 1" x 2-1/2" x .065 (2 used)
7	F 1385	Lock nut (1" full)
8	F 486	Bearing block with bearings (2 used)
9	F 485	Bearing pin in F 484 strap (4 used)
10	F 481	Bearing in F 486 block (small) B1212 (4 used)
11	F 480	Bearing in F 486 block (large) B2212 (4 used)
12	F 7602	1" nut with thrust washer 65-
13	F 7603	Thrust washer for F 7578 block 65-
14	F 7578	Thrust bearing block 65-
15	F 7612	Bushing for F 7578 block, 1-3/16" x 1-5/16" x 1-1/4"
16	F 7268	Feed arm conn rod only, pull type blaers
17	F 7625	Feed arm conn rod assembly
18	F 482	Universal joint complete RH thread
19	F 354	Adjusting block RH thread
20	F 484	Strap for universal (4 used)
21	F 1450	Crank pin with races, washers and nuts complete
22	F 802	Washer, bearing pin
23		3/4" star lock washer

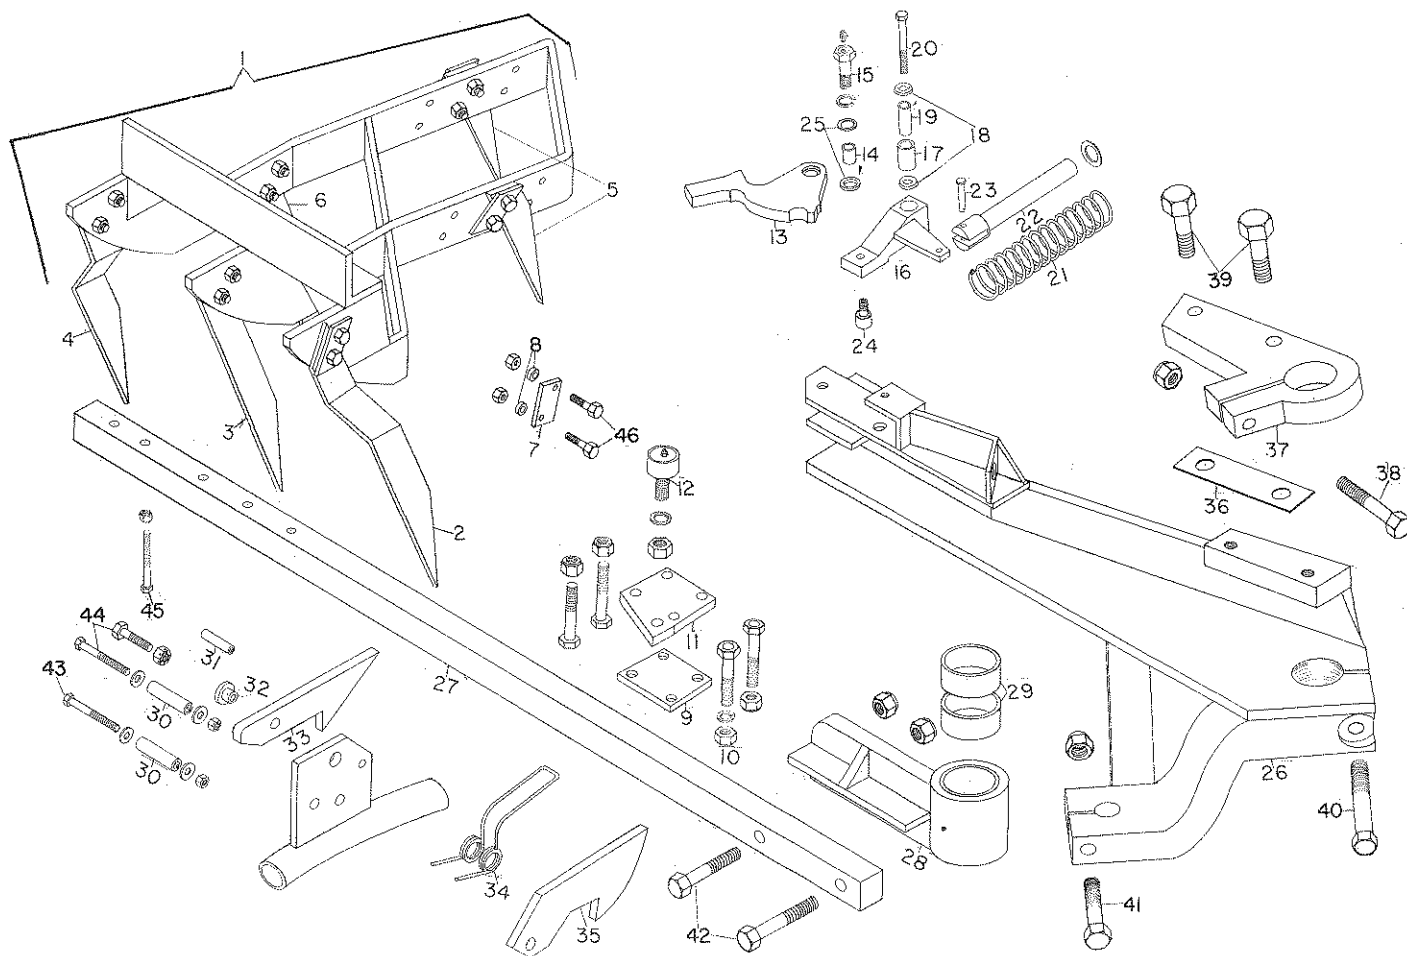 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7710	Feed fork complete 300 only 66-	29	F 1235	Bushing for torque shaft bearing (2" x 2-1/2" x 1")
	F 7531	Feed fork complete 200 only 65-	30	F 7275	Roll pin (1/2" x 2-1/2") (2 used)
2	F 7265	Tine, trailing, inside 2-1/2" offset	31	F 7239	Roll pin (3/8" x 1-1/2")
3	F 1191	Tine, trailing, center	32	F 7276	Ferrule for F 1563
4	F 7264	Tine, trailing, outside 2-1/2" offset	33	F 7277	Catch for torque shaft 1963 only
5	F 1603	Tine, leading, short (2 used on 3-tie)	34	F 281	Spring, latch
6	F 1189	Tine, outside senter	35	F 1563	Catch for torque shaft 64-
7	F 1195	Clip for tines	36	F 1648	Shim for straddle mount, 16 ga.
8	F 1193	Bushing and stop for tines		F 1649	Shim for straddle mount, 22 ga.
9	F 7532	Bottom plate 65-	37	F 1634	Straddle mount plate for pivot shaft
10	F 7534	Bolt, 3/8" x 2-3/4" N. F. H. T. C. S.			
11	F 7533	Roller plate 65-	38	F 1673	Bolt, 1/2" x 3" NF grade 8 with nut, straddle mount plate clamp
12	F 4050	Latch roller			
13	F 7604	Latch 65-	39		5/8" x 1-3/4" N. C. cap screw, straddle mount plate
14	F 7607	Bushing for F 7604 latch 65-	40		1/2" x 3" N. F. cap screw with lock nut, grade 8, feed arm clamp
15	F 7605	Latch hinge pin 65-	41		1/2" x 4-1/4" N. F. cap screw with lock nut, clamp for feed arm pin
16	F 7606	Trip arm 65-	42		1/2" x 3 N. F. cap screw with lock nut, torque shaft
17	F 1556	Trip arm bushing	43		5/16" x 2-1/2" N. C. cap screw, for spring and stop latch
18	F 1557	O ring (2 used)	44		3/8" x 1-1/2" N. C. cap screw, latch hinge pin
19	F 1558	Trip arm sleeve	45		3/8" x 2-1/2" N. F. H. T. cap screw (5 used)
20	F 1559	Trip arm pin	46		7/16" x 1-1/2" N. F. H. T. cap screw
21	F 1635	Trip arm spring 65-			
22	F 1643	Trip arm spring rod 65-			
23	F 1561	Trip arm spring rod clevis pin			
24	F 822	Cam follower for spring arm (CF1-S) 65-			
25	F 7610	Quad ring for F 7604 latch 65-			
26	F 7577	Feed arm 65-			
27	F 7529	Torque shaft, 1-1/2" 65-			
28	F 7660	Torque shaft bearing with bushing 65-			

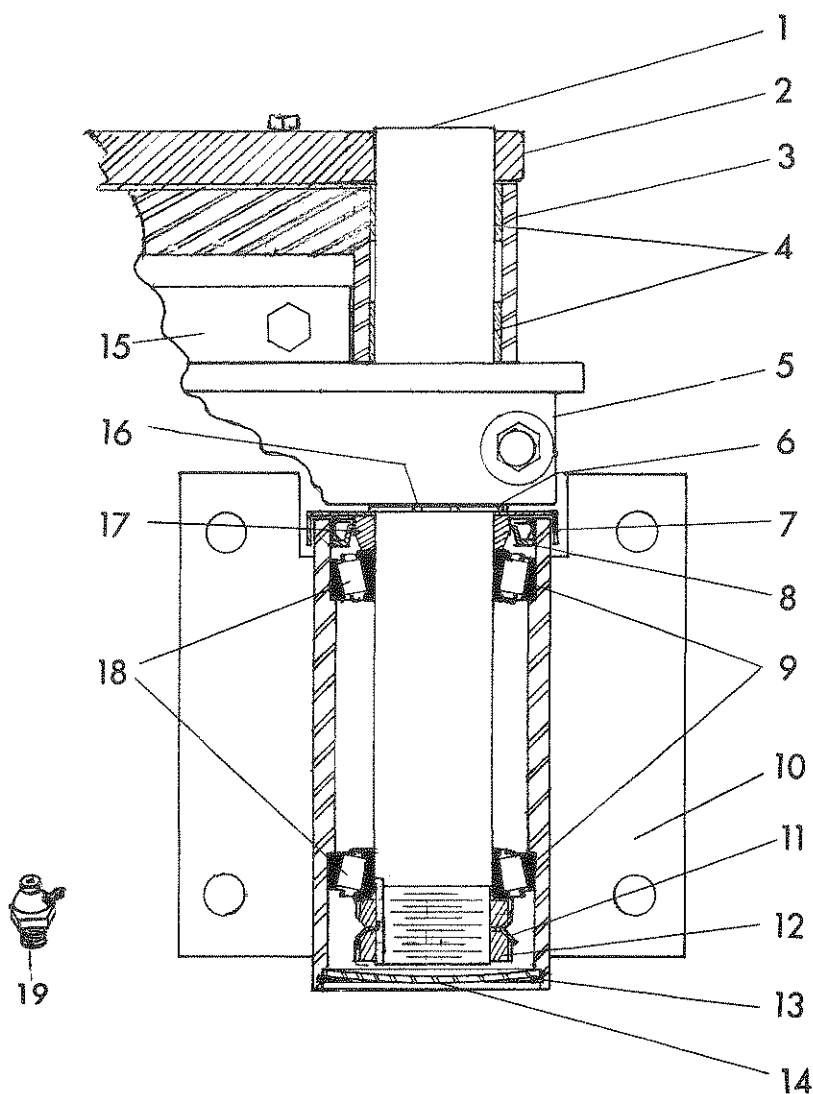 

REF. NO.	PART NO.	DESCRIPTION
1.	F 1427	Pivot shaft, replaces F 1229 63-
	F 1229	Pivot shaft, see F 1427
2.	F 1634	Straddle mount plate for pivot shaft 65-
3.	F 7660	Feed arm torque shaft bearing with bushing
4.	F 1235	Bronze bushing (2" x 2-1/4" x 1") (2 used)
5.	F 7577	Feed arm
6.	F 1238	Retaining pin 5/32" x 3/4" roll pin used w/F 1229 shaft
7.	F 1239	Dust cap
8.	F 1428	Oil seal, used with F 1427 shaft (Nat. 55093)
	F 1240	Oil seal, used with F 1229 shaft (Nat. 55368)
9.	F 5445	Bearing cup 362A (2 used)
10.	F 1244	Feed arm bearing housing w/2-F5445 bearing cups
11.	F 1246	Lock wash (W-10)
12.	F 1245	Nut, bearing takeup (N-10) (2 used)
13.	F 1247	Retaining ring (RR375)
14.	F 1248	Plug cap (HP3750-134)
15.	F 7529	Torque shaft
16.	F 1237	Snap ring used with F 1229 shaft only (5100-200)
17.	F 1241	Bearing shoulder and seal race, used w/F1229 shaft
18.	F 5446	Bearing cone (368A) (2 used)
	F 1377	Spacer washer for feed arm bearing
19.	F 1661	Hydraulic shut-off fitting. #1940B
	F 1444	Pivot shaft tube assembly w/bearings and F 1427 shaft complete
	F 1250	Pivot shaft plate 16" chamber
	F 1251	Pivot shaft plate 17" chamber

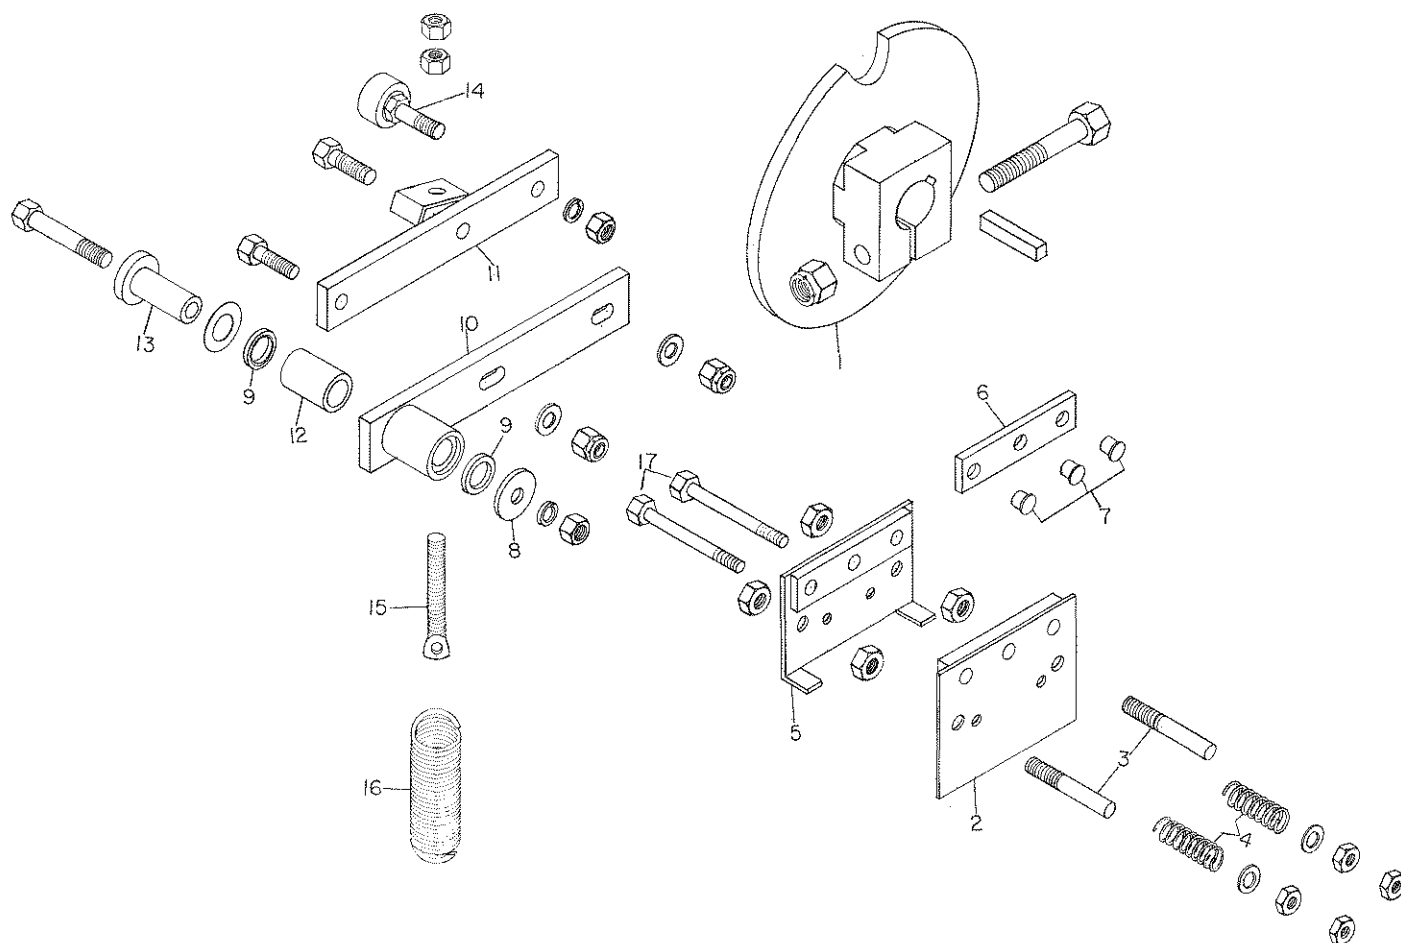 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7528	Brake disc with hard notch
2.	F 7450	Outside brake plate with lining
3.	F 7451	Brake plate stud (2 used)
4.	F 7453	Brake plate spring (2 used)
5.	F 7449	Inside brake plate with lining
6.	F 7454	Brake lining with rivets (2 used)
7.		Rivets for brake lining (6 used)
8.	F 246	Saddle lever washer
9.	F 7587	Seal for saddle lever anchor (63123 Victor) 65-
10.	F 7561	Saddle lever lower half with bushing 65-
11.	F 7560	Saddle lever upperhalf with spring anchor 65-
12.	F 7586	Bushing for saddle lever 3/4" x 1" x 1-1/2" 65-
13.	F 7585	Saddle lever sleeve 65-
14.	F 1572	Cam follower, saddle lever
15.	F 7448	Saddle lever spring eyebolt
16.	F 7559	Saddle lever spring
17.	F 7452	Brake plate bolt, 1/4" x 3-1/2" N.C.
		3/8" x 3/8" x 2" key for brake disc
		1/2" x 3-1/4" N.C. cap screw w/fibre lock nut for brake clamp
		5/16" x 1-1/4" N.C. cap screw w/fibre lock nut for saddle lever
		3/8" x 3-1/2" N.C. cap screw w/fibre lock nut for saddle lever anchor

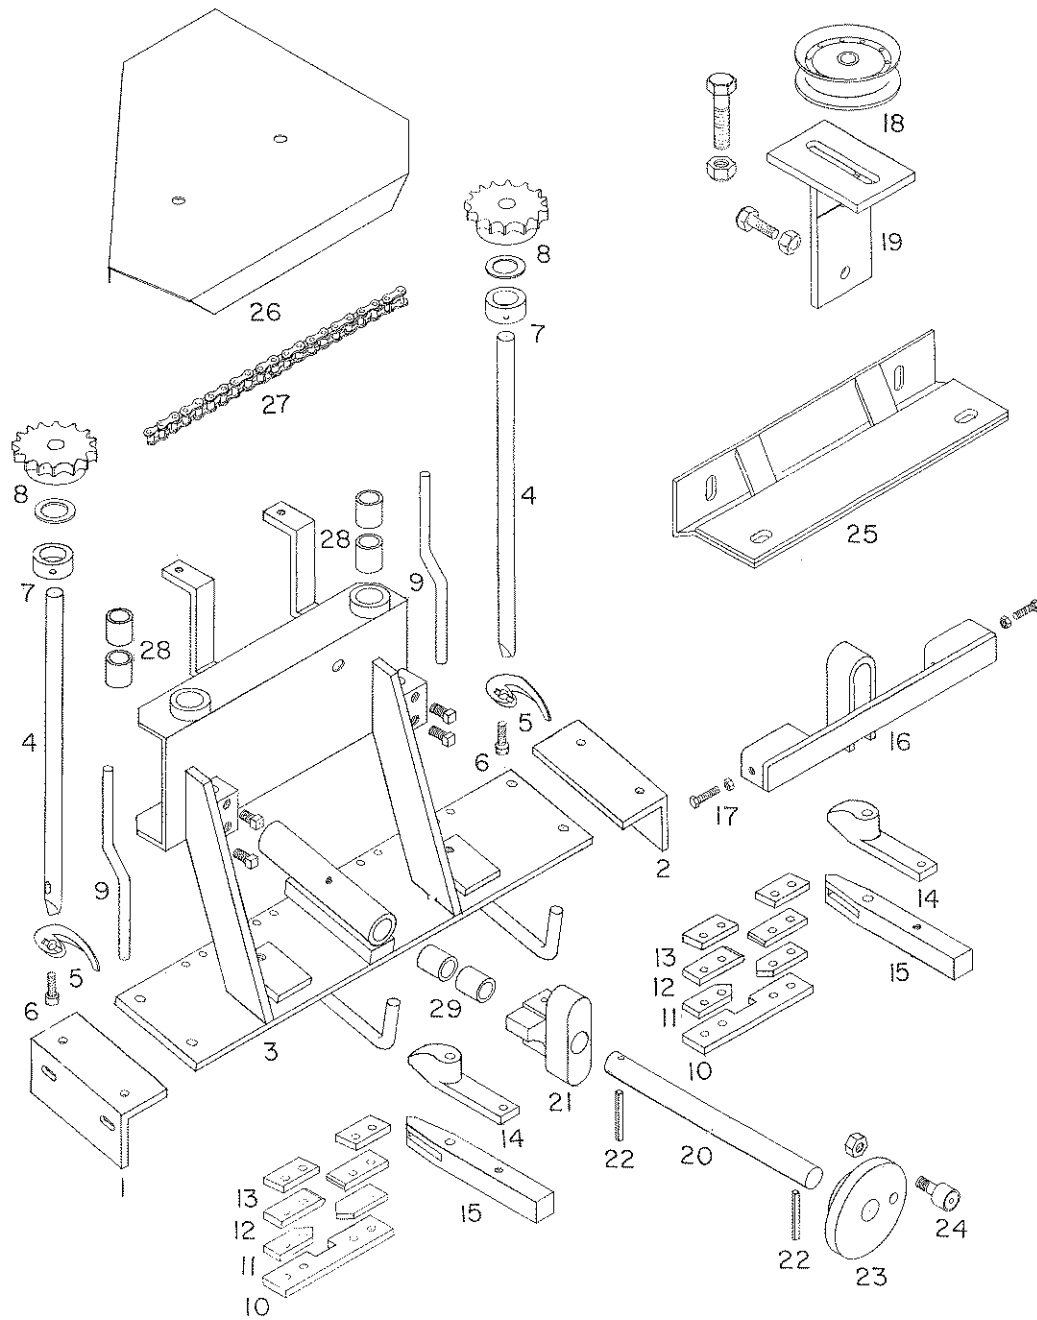 


REF. NO.	PART NO.	DESCRIPTION
1	F 7062	Knotter mounting angle, L. H.
2	F 7065	Knotter mounting angle, R. H.
3	F 7387	Twister and shuttle bar frame, 23\" chamber
	F 7388	Twister and shuttle bar frame, 22\" chamber
	F 7311	Twister and shuttle bar frame, 18\" chamber
4	F 7089	Twister shaft
5	F 4046	Twister hook
6	F 7248	Twister hook bolt
7	F 172	Set collar, 3/4\"
8	F 4024	Sprocket, twister shaft, 15T
9	F 7318	Wire holder rod
10	F 7087	Wire knife
11	F 7086	Gripper spacer, bottom
12	F 7085	Wire gripper
13	F 7084	Gripper, top plate
14	F 7312	Wire divider
15	F 7313	Wire gripper tongue
16	F 7080	Shuttle bar w/adjusting screws, 300W only
	F 7316	Shuttle bar w/adjusting screws, 200W only
17	F 7081	Shuttle bar adjusting screws


REF. NO.	PART NO.	DESCRIPTION
18	F 7330	Chain tightener pulley - 300W only
19	F 7329	Chain tightener pulley bracket
20	F 7077	Cam shaft
21	F 7075	Shuttle bar drive cam
22	F 7076	Roll pin, 1/4\" x 1 1/2\"
23	F 7078	Shuttle bar crank flange
24	F 7079	Cam follower
25	F 7315	Upper wire guide bracket - 300W only
	F 7353	Upper wire guide bracket - 200W only
26	F 7064	Shield - 300W only
	F 7317	Shield - 200W only
27	F 7066	Twister drive chain - 300W only, 84P #40
	F 7348	Twister drive chain - 200W only, 64P #40
28	F 7227	Bushing, twister shaft
29	F 7227	Bushing, cam shaft

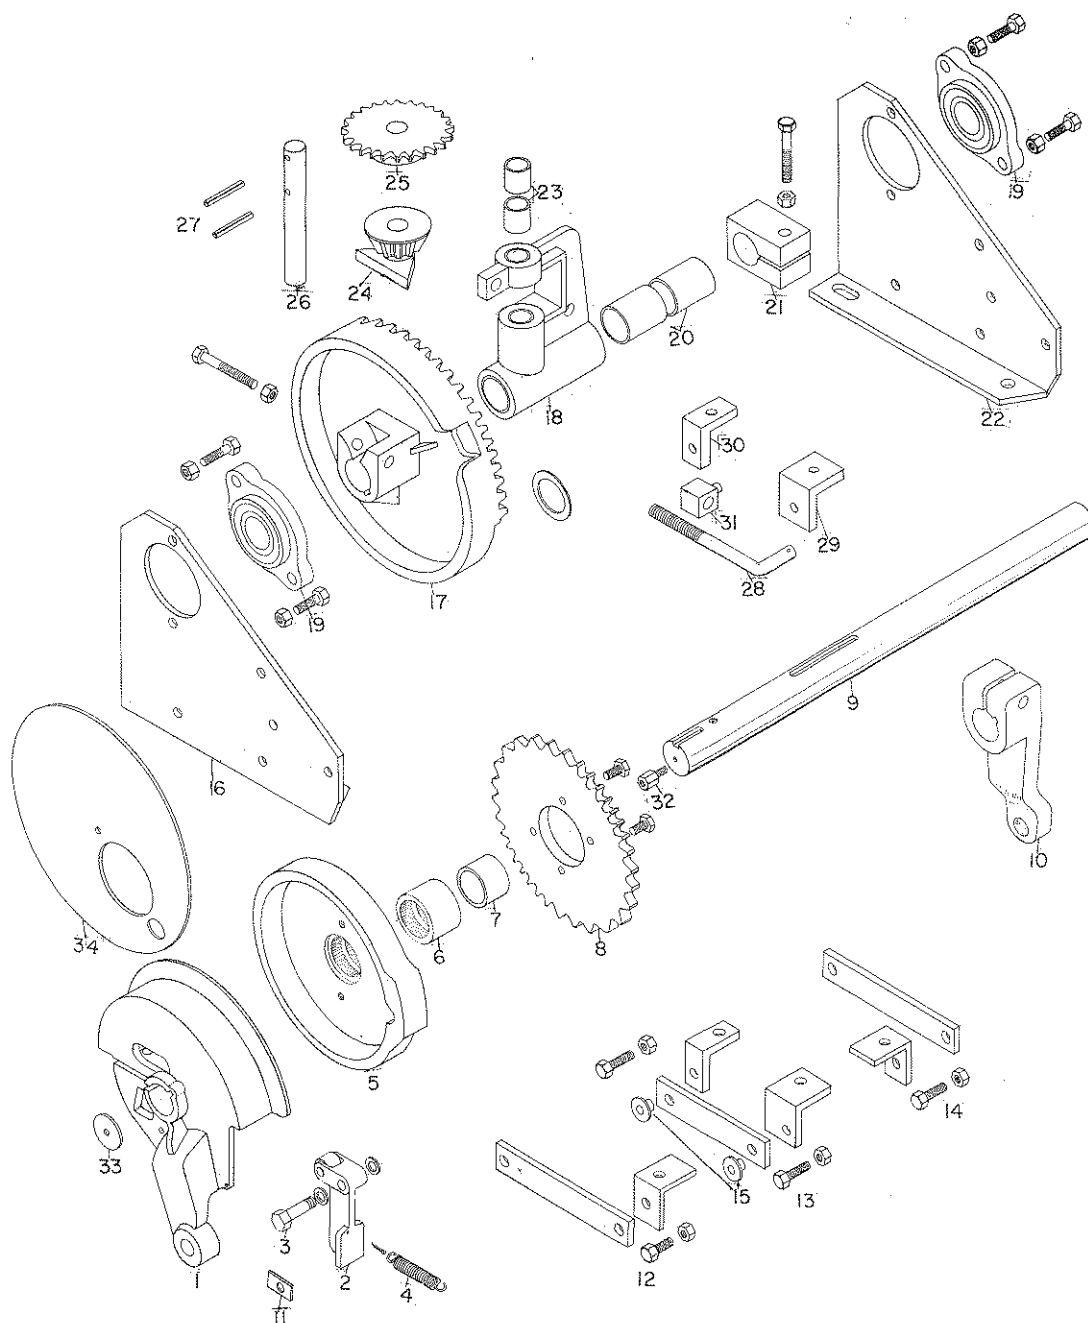 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7519	Clutch w/pawl 1-3/8" 65-	17	F 7432	Intermittent gear, used with F 7431 pinion
2	F 1622	Clutch pawl 65-	18	F 7072	Pinion frame
	F 1623	Washer each side of pawl 7/16" I. D. x 7/8" O. D. x .025 65-	19	F 7063	Bearing, knotter shaft (2 used)
3	F 1633	Clutch pawl pin 65-	20	F 4137	Bushing for F 7072 frame, 1-3/8" x 1-1/2" x 2"
4	F 4115	Spring, clutch pawl 65-	21	F 4138	Clamp collar
5	F 4133	Notched clutch disc with F 4134 bearing 1-3/8"	22	F 7570	Knotter mount R. H.
6	F 4134	Bearing for F 4133 disc	23	F 7247	Bushing for F 7072 frame 7/8" x 1" x 1"
7	F 4135	Inner race for F 4134 bearing	24	F 7431	Pinion, used with F 7432 gear
	F 4136	Hardened washer between F 7519 and F 4133	25	F 7257	Twister drive sprocket, 25T
8	F 755	Clutch sprocket (32T-#60)	26	F 7069	Pinion shaft
9	F 7456	Knotter shaft, 300W	27	F 7076	Roll pin, pinion to shaft 1/4" x 1-1/2"
	F 7457	Knotter shaft, 200W		F 4030	Roll pin, sprocket to shaft 1/4" x 2"
10	F 7461	Needle yoke drive arm 300 only	28	F 7334	Chain tightener rod, 200W only
11	F 1620	Clutch pawl pin lock	29	F 7332	Angle for chain tightener rod, rear, 200 only
12	F 7349	Brace w/angle L. H. 300W only	30	F 7333	Angle for chain tightener rod, 200 only
13	F 7346	Brace w/angle center, 300W only	31	F 7335	Block for chain tightener rod, 200 only
14	F 7345	Brace w/angle R. H., 300W only	32	F 1576	Adapter for zerker, end of knotter shaft 3/8" S. A. E.
15	F 440	Ferrule for F 7346 brace, 300W only	33	F 246	Knotter shaft end washer, L. H.
16	F 7571	Knotter mount L. H.	34	F 1577	Shield for knotter clutch

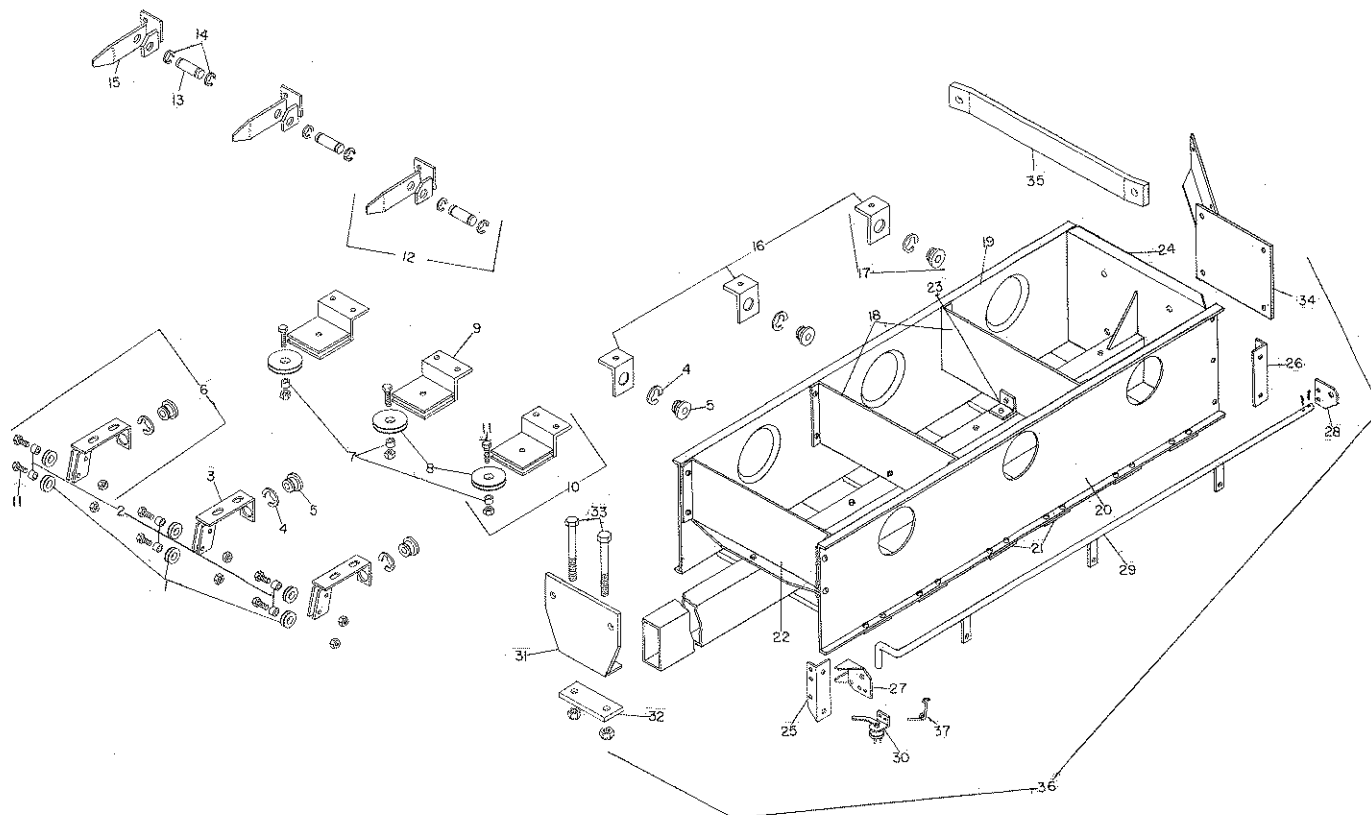 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 4014	Roller for wire guide and needle	22	F 7641	Wire box end (left)
2	F 4015	Bushing for F 4014 roller	23	F 7642	Wire box divider angle
3	F 4222	Wire guide frame only (lower rear)	24	F 7643	Wire box base with end plate
4	F 857	Snap ring for F 856 bushing	25	F 7644	Angle for wire alarm mounting bracket, L.H.
5	F 856	Wire guide bushing	26	F 7645	Angle for wire alarm mounting bracket, R.H.
6	F 4205	Wire guide complete, lower rear	27	F 4191	Mounting bracket for wire alarm rod L.H.
7	F 4068	Bushing for F 4067 roller	28	F 4190	Mounting bracket for wire alarm rod R.H.
8	F 4067	Roller, lower front wire guide	29	F 7608	Rod for wire alarm 300 only 65-
9	F 4223	Wire guide frame only, lower front		F 7716	Rod for wire alarm 200 only 66-
10	F 4069	Wire guide complete, lower front		F 946	Switch only for wire alarm
11		Bolt with lock nut 1/4" x 1" N. C. C. S.	30	F 7555	Wire box mounting bracket
12	F 4203	Upper wire guide complete with pin	31	F 7556	Bottom support plate for F 7555
13	F 4204	Upper wire guide wear pin	32		Bolt with nut 1/2" x 5-1/2" N. C. C. S.
14	F 5159	Snap ring for wear pin	33		
15	F 4225	Upper wire guide, bracket only	34	F 7557	Wire box mounting bracket R.H.
16	F 4163	Wire guide bracket, rear	35	F 7705	Brace for F 7557 RH wire box bracket
17	F 4224	Wire guide bracket complete with bushing	36	F 7515	6 compartment wire box complete with braces and harness
18	F 7637	Wire box divider		F 7717	4 compartment wire box complete with braces and harness
19	F 7638	Wire box side (front)	37	F 4210	Spring for wire alarm rod
20	F 7639	Wire box side (rear)			
21	F 7640	Wire box bottom slats			

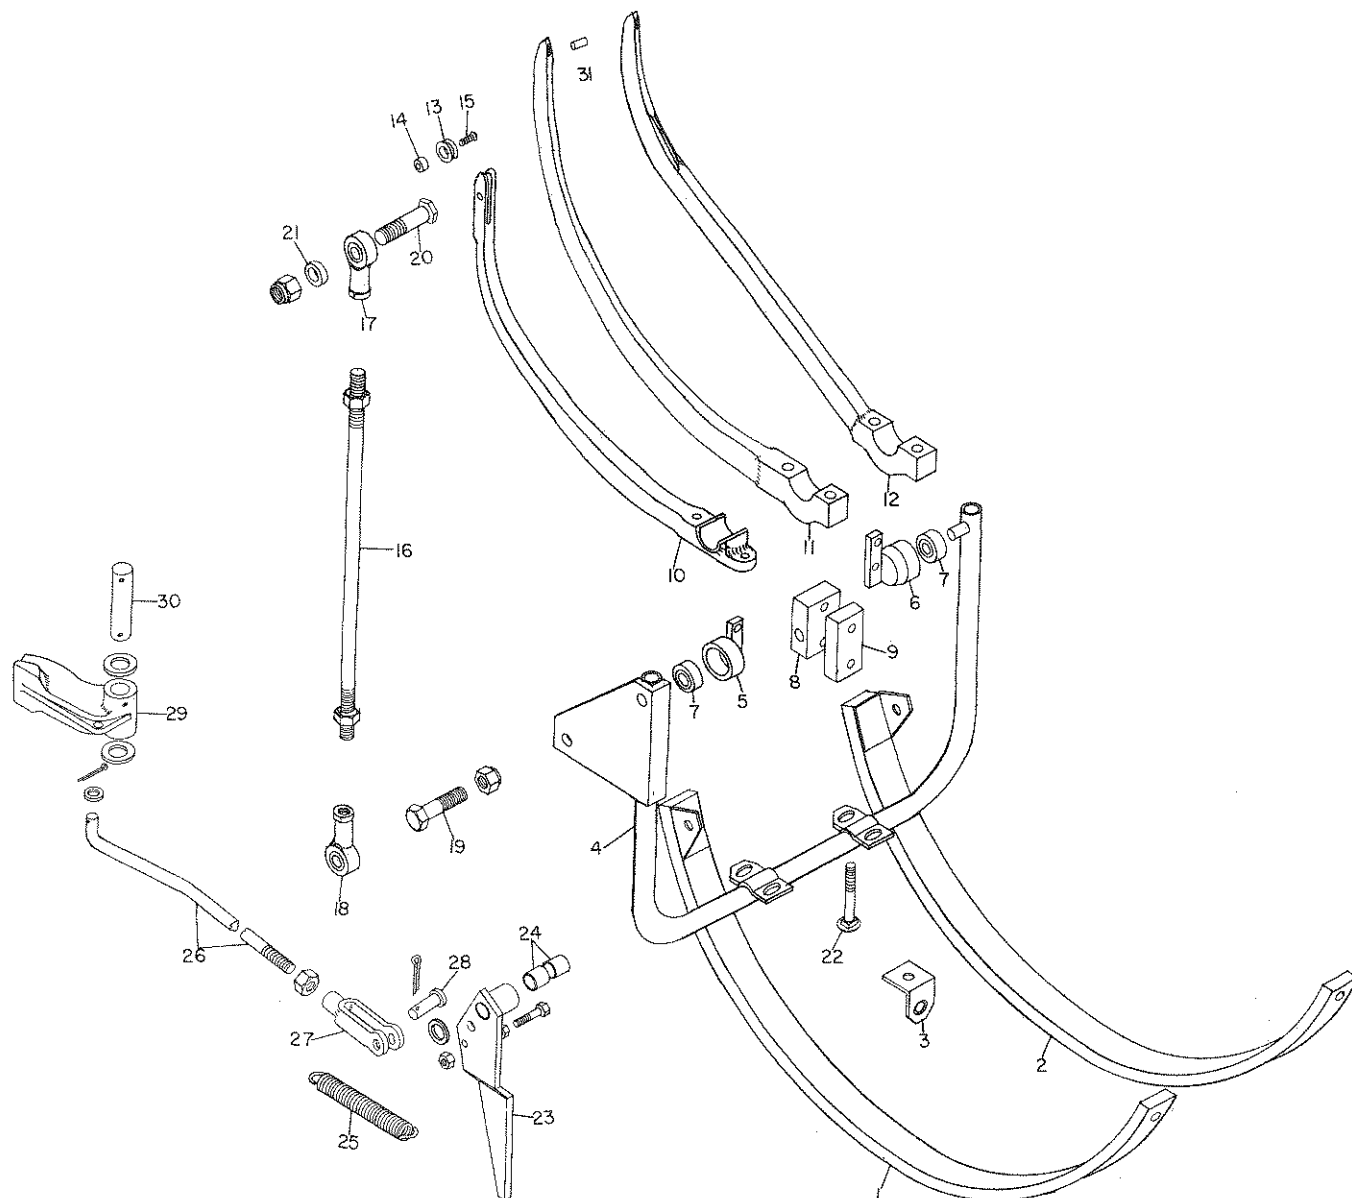 


REF. NO.	PART NO.	DESCRIPTION
1	F 7569	Needle guard L.H. 65-
2	F 7568	Needle guard R.H. 65-
3	F 153	Needle twine guide
4	F 7558	Needle yoke 200 wire only 65-
	F 7575	Needle yoke, 200 twine only 65-
	F 7520	Needle yoke 300 wire only 65-
	F 7574	Needle yoke 300 twine only 65-
5	F 7522	Needle yoke bearing complete L.H. 65-
		wire only
6	F 7521	Needle yoke bearing complete R.H. 65-
		wire only
7	F 7523	Bearing for F 7521 and F 7522 KP12A 65-
8	F 4150	Needle yoke bearing, R.H. and L.H.
		2 twine only
9	F 898	Spacer for needle yoke bearing used
		w/F 333 needles
10	F 7711	Needle, wide base, wire only
11	F 1395	Needle, Mag. curved twine only
12	F 333	Needle, Mag. straight, twine only
13	F 4014	Roller for needle and wire guide 21/32"
		bore
14	F 4015	Bushing for F 4014 roller

REF. NO.	PART NO.	DESCRIPTION
15	F 4016	Bolt, needle roller
16	F 7554	Needle yoke drive rod wire only 65-
	F 1548	Needle yoke drive rod twine only used
		with F 1549 and F 1550
17	F 1550	Needle yoke drive rod end L.H. thread
18	F 1549	Needle yoke drive rod end R.H. thread
19	F 1552	Bolt, drive rod to needle yoke with nut
20	F 1551	Bolt, drive rod to clutch with nut
	F 1574	Bolt, drive rod to R.H. needle yoke
		drive arm, 300W only
21	F 172	Spacer collar used on twine tie only
22	F 7552	Bolt, needle to yoke with nut 1/2" x 3-1/4"
		carriage
23	F 7652	Plunger dog return lever 65-
24	F 7247	Bushing for plunger dog return lever
		7/8" x 1" x 1" 65-
25	F 1517	Plunger dog return spring 65-
26	F 7524	Plunger dog return rod 65-
27	F 7526	Clevis for dog return rod 65-
28	F 7527	Clevis pin for F 7526 clevis 65-
29	F 7547	Plunger stop dog 65-
30	F 7588	Plunger dog pin 65
31	F 1660	Pin for twine needle

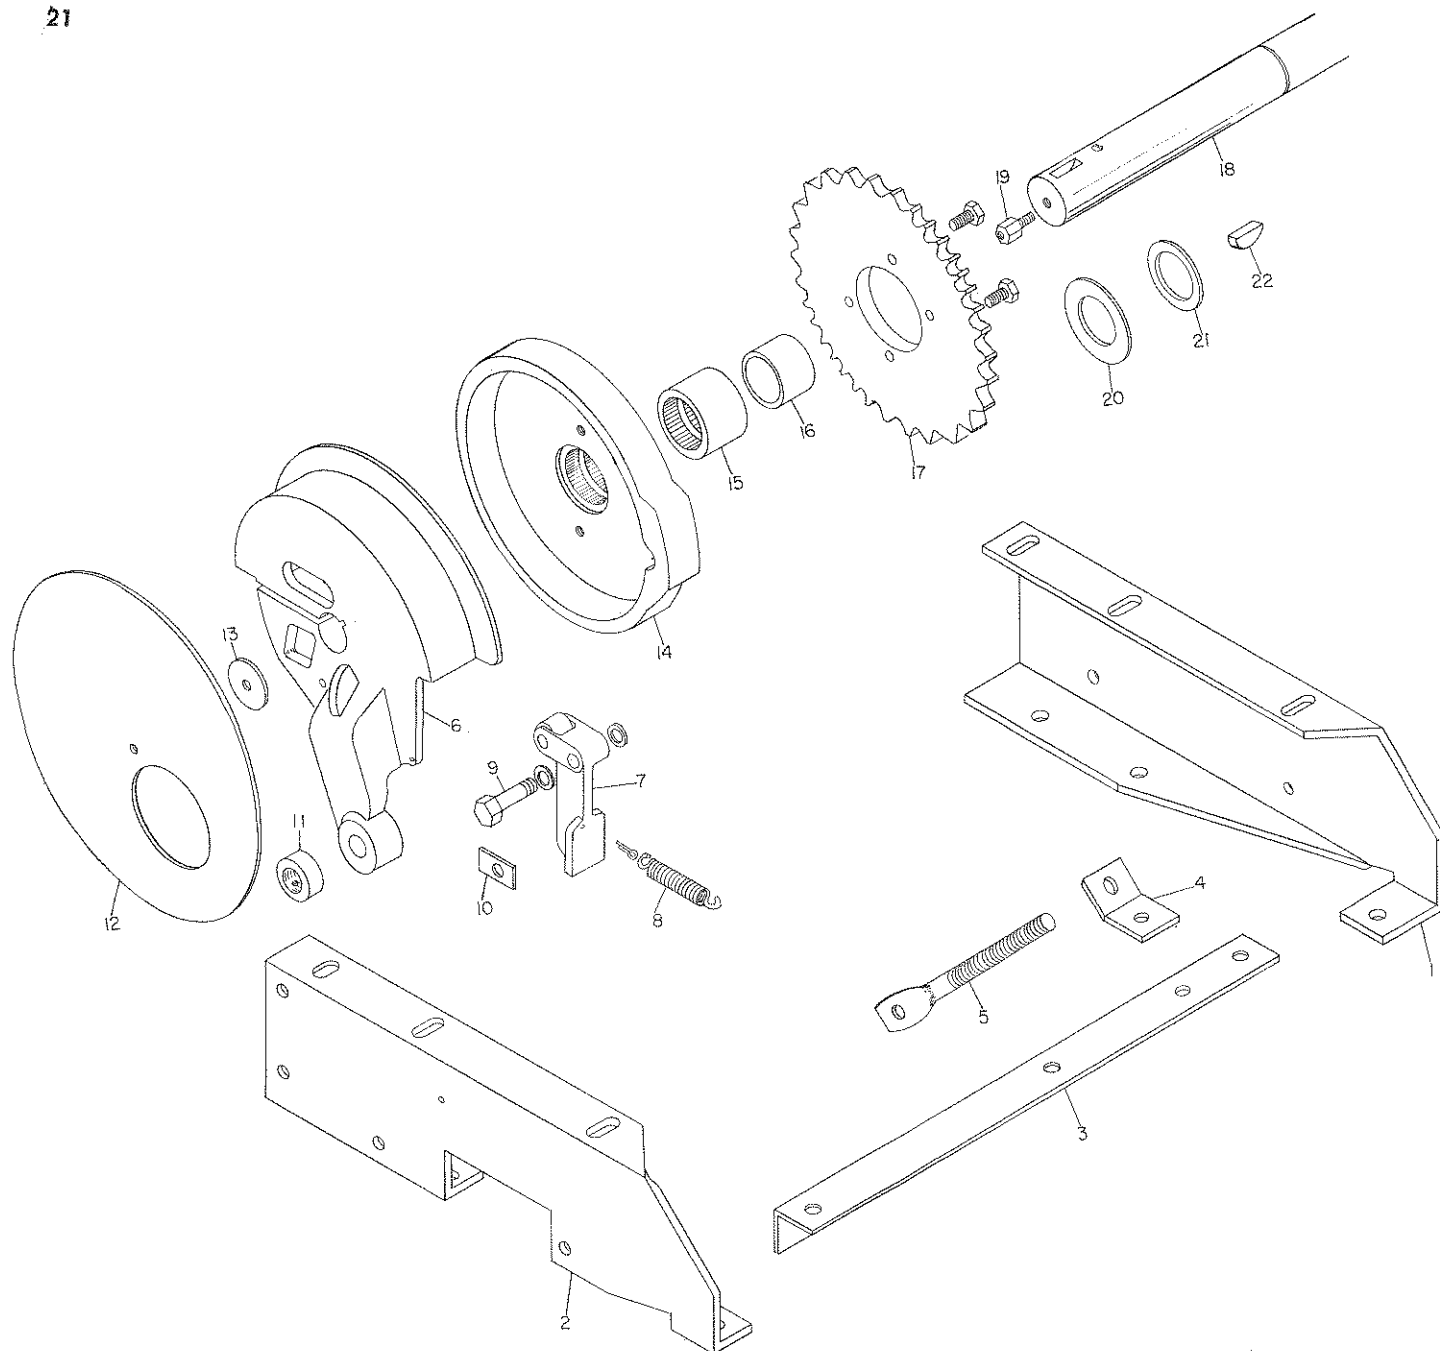 


REF. NO.	PART NO.	DESCRIPTION
1	F 1393	Knotter mount, R.H. 300T only
	F 7324	Knotter mount, R.H. 200T only
2	F 1394	Knotter mount, L.H. 300T only
	F 7325	Knotter mount L.H. 200T only
3	F 710	Tie bar, knotter mounting rail 200T
	F 768	Tie bar, knotter mounting rail 300T
4	F 711	Knotter anchor strap
5	F 12	Knotter anchor bolt
6	F 1621	Clutch with pawl 1-1/8" shaft, twine only 65-
7	F 1622	Clutch pawl 65-
	F 1623	Washer, each side of clutch pawl (7/16" I. D. x 7/8" O. D. x .025)
8	F 4115	Spring, clutch pawl
9	F 1633	Clutch pawl pin
10	F 1620	Clutch pawl pin lock
11	F 172	3/4" spacer collar
12	F 1577	Shield for knotter clutch
13	F 246	Washer end of knotter shaft L. H.
14	F 4076	Notched clutch disc, with F 4077 bearing 1-1/8"
15	F 4077	Bearing in F 4076 clutch disc, GR22 S. S.


REF. NO.	PART NO.	DESCRIPTION
16	F 4078	Inner race for F 4077 bearing 1-1/8" M. L. 18
17	F 755	Sprocket, knotter clutch 32T #60
18	F 539	Knotter shaft 200T
	F 540	Knotter shaft 300T
19	F 746	Adapter for zerk, end of knotter shaft
20	F 766	Washer, hardened, each side of F 4077 bearing 1-1/8", 16 ga.
21	F 247	Washer, knotter shaft spacer, 10 ga.
	F 248	Washer, knotter shaft spacer, 14 ga.
	F 249	Washer, knotter shaft spacer, 18 ga.
22	F 83	Woodruff key 3/8" x 1-1/4"

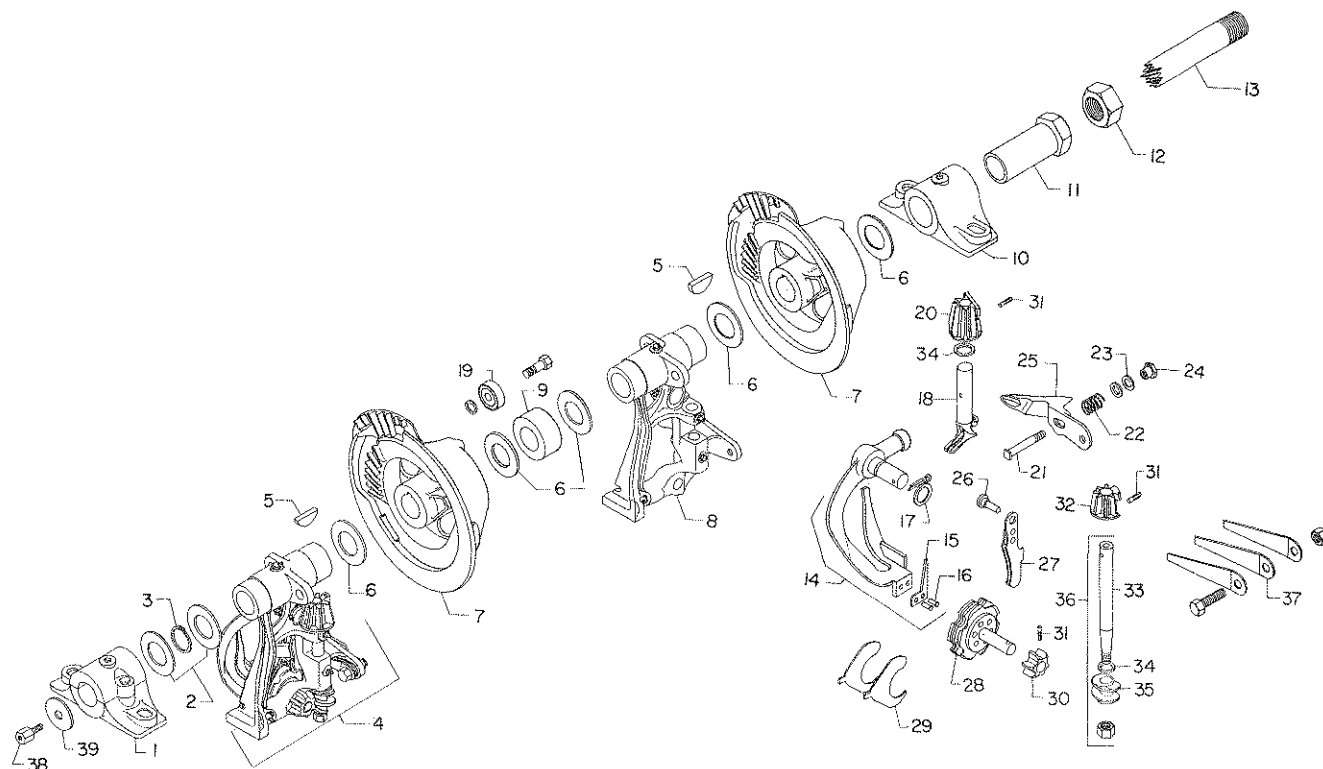 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 244	Knotter shaft bearing, L.H.	22	F 224	Knotter hook cam adjusting spring
2	F 602	Washer, hard (each side of retaining ring)	23	F 656	Washer, bill hook cam adj. spring
3	F 543	Retaining ring	24	F 240	Knotter hook cam adj. screw nut
4	F 74A	Knotter frame complete	25	F 238	Knotter hook cam
5	F 83	Woodruff key, 3/8" x 1-1/4"	26	F 365	Twine holder pin
6	F 247	Knotter shaft spacer washer, 10 ga.	27	F 78	Twine holder
	F 248	Knotter shaft spacer washer, 14 ga.	28	F 940	Twine disc (triple)
	F 249	Knotter shaft spacer washer, 18 ga.	29	F 236	Twine disc cleaner
7	F 241	Knotter cam gear	30	F 265	Pinion twine holder disc
8	F 75	Knotter frame only	31	F 237	Taper pin
9	F 466	Knotter shaft spacer	32	F 234	Pinion, knotter worm
10	F 541	Knotter shaft bearing, R.H.	33	F 662	Knotter worm shaft
11	F 542	Adjusting collar	34	F 657	Washer, knotter worm shaft, 10 ga.
12	F 544	Lock nut, knotter shaft		F 658	Washer, knotter worm shaft, 14 ga.
13	F 539	Knotter shaft, 200T only		F 659	Washer, knotter worm shaft, 18 ga.
	F 540	Knotter shaft, 300T only	35	F 663	Knotter worm only
14	F 680	Twine knife arm complete	36	F 264	Knotter worm complete
15	F 267	Twine knife only	37	F 235	Twine holder spring
16	F 617	Rivet for twine knife	38	F 746	Adapter for zerk end of knotter shaft
17	F 660	Washer, knife arm, 14 ga.	39	F 246	Knotter shaft end washer
18	F 661	Washer, knife arm, 20 ga.		F 1668	Knotter Assembly, complete with clutch and shield, 300
19	F 40	Knotter bill hook		F 1669	Knotter Assembly, complete with clutch and shield, 200
20	F 570	Roller, twine finger drive (on cam gear) 6200-22			
21	F 263	Pinion, knotter hook			
	F 1700	Pinion, knotter hook			
	F 239	Knotter hook cam adjusting screw			

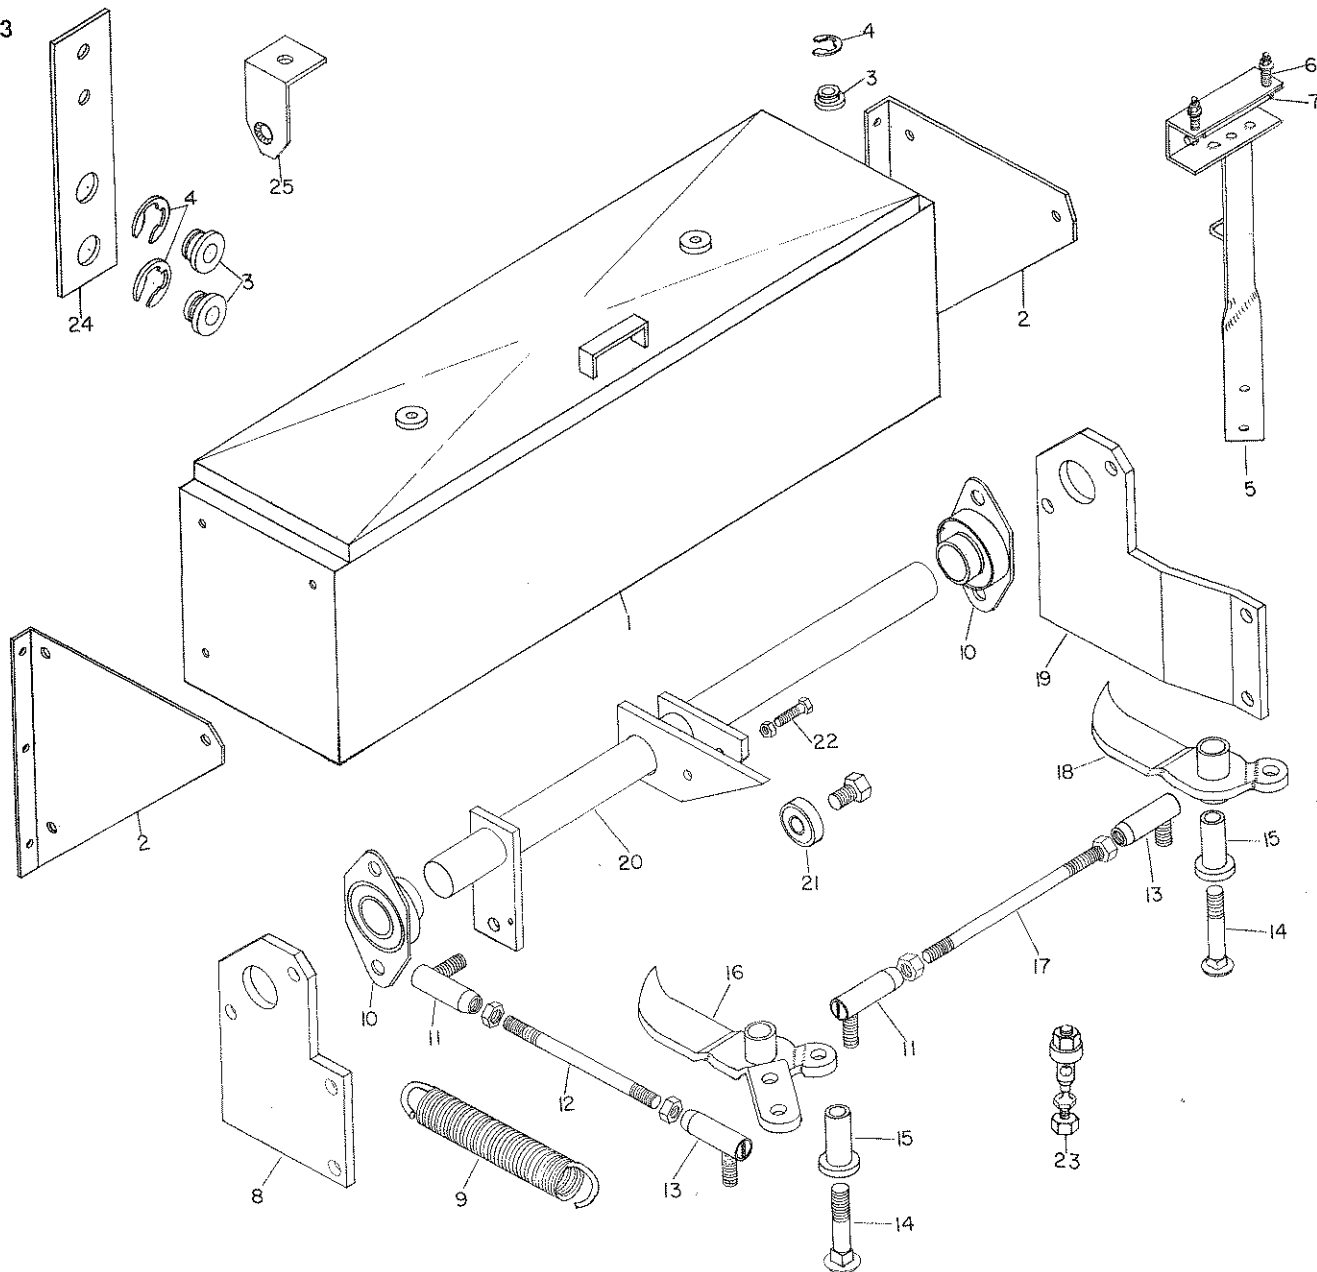 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1465	Twine box (4 compartment) 200 only	13	F 1295	Ball joint, twine finger drive L. H. thread (2 used)
	F 7690	Twine box 8 compartment	14	F 1672	3/8" x 2-1/2" Grade 8 carriage bolt with nut
	F 7485	Twine box (6 compartment) 300 only	15	F 181	Bushing, twine finger
2	F 7136	Bracket for mounting twine box, 4 and 6 compartment	16	F 1536	Twine finger, L. H. used with ball joint
	F 7691	Bracket for mounting 8 compart- ment box	17	F 1297	Twine finger cross rod with nuts 200T only
3	F 856	Twine guide bushing		F 1298	Twine finger cross rod with nuts 300T only
4	F 857	Snap ring for F 856	18	F 565	Twine finger R. H. and center
5	F 523	Twine tension assembly com- plete, 200 & 300	19	F 1292	Mount, twine finger drive shaft R. H.
6	F 169	Spring, twine tension assembly	20	F 1288	Twine finger drive shaft assembly 200T only
7	F 1655	Roller twine tension assembly		F 1289	Twine finger drive shaft assembly 300T only
8	F 1291	Mount, twine finger drive shaft L. H.	21	F 570	Roller, twine finger drive (on cam gear) 6200-22
9	F 747	Spring, twine finger return	22		1/4" x 1" N. C. cap screw
10	F 1290	Bearing, twine finger drive rod (2 used)	23	F 1296	Ball joint, center 300T only
11	F 1294	Ball joint, twine finger drive R.H. thread (2 used)	24	F 524	Holder for twine guide bushing 200T
	F 1343	Ball only for F 1294 and F 1295		F 525	Holder for twine guide bushing 300T
12	F 1293	Twine finger drive rod	25	F 153	Needle twine guide

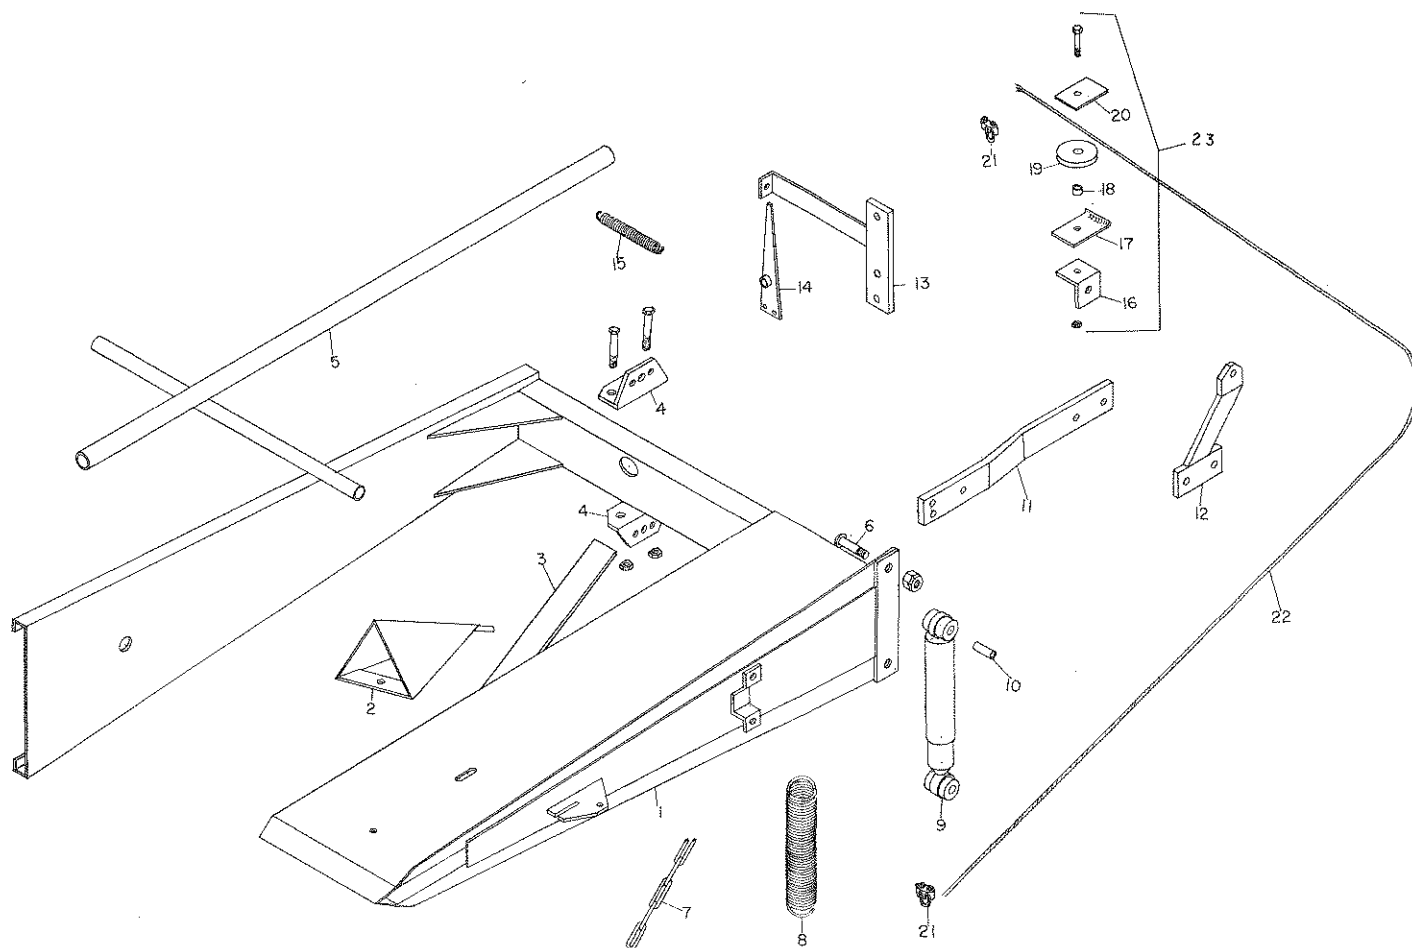 


REF. NO.	PART NO.	DESCRIPTION
1	F 7600	Bale chute, combination 300 only 65-
	F 7601	Bale chute, combination 200 only 65-
2	F 7655	Bale turner
3	F 7656	Bale skid
4	F 7657	Bale skid bracket, 2 used
5	F 7624	Flat chute adapter for combination chute 200 and 300
6	F 7658	Button head bolt 1/2" x 1-1/2"
7	F 7659	Chain, bale chute
8	F 108	Spring, bale chute, 2 tie turning
	F 985	Spring, bale chute 2-tie flat and 3-tie turning
	F 987	Spring, bale chute, 3-tie flat
9	F 988	Shock absorber
10	F 993	Bushing for shock absorber
11	F 1638	Shock absorber support
12	F 1639	Cable bracket
13	F 997	Weight indicator bracket
14	F 998	Indicator hand
15	F 268	Indicator return spring
16	F 999	Mounting angle for F 7236 sheave
17	F 994	Shield for F 4067 roller
18	F 4068	Bushing for F 4067 roller
19	F 4067	Roller for F 7236 sheave
20	F 995	Plate for F 4067 roller
21	F 990	Cable clamp 1/8" (2 used)
22	F 7661	Indicator cable 1/8" aircraft 65" 65-
23	F 7236	Sheave complete, bale weight indicator

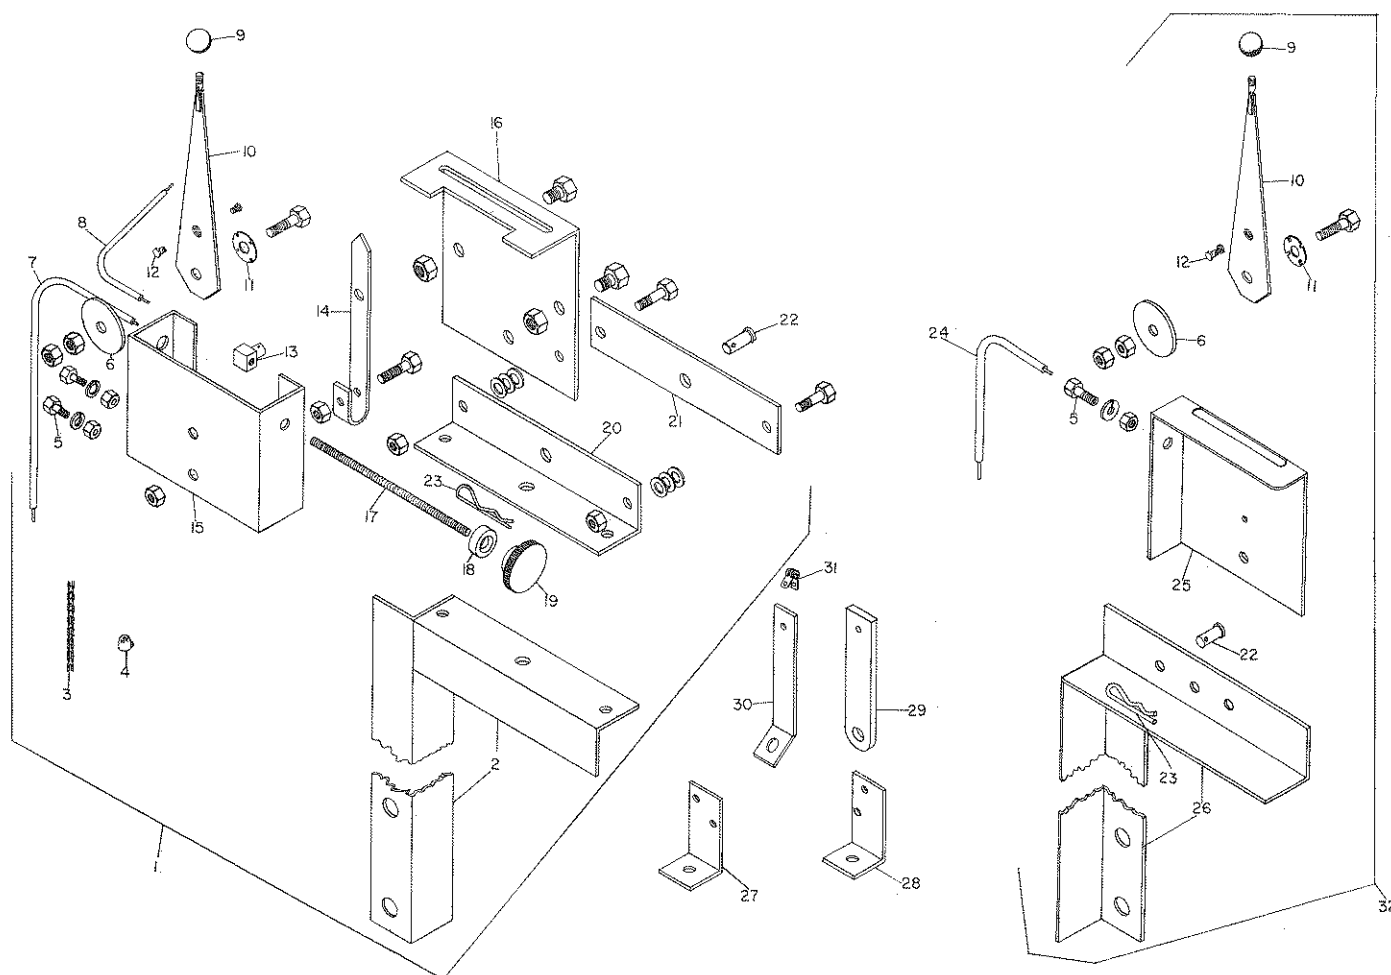 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1025	Control box complete, baler mounted	17	F 1006	Adjusting rod
	F 1026	Control box complete, tractor mounted	18	F 1131	Thrust bearing
	F 1451	Control box complete less cable and standard	19	F 1007	Control knob for F 1006
2	F 1658	Standard only	20	F 1017	Mounting base angle
3	F 1015	Chain, throttle control 4"	21	F 1018	Mounting base plate
4	F 5080	Cable stop, throttle control	22	F 1020	Clevis pin 3/8" x 1"
5	F 5559	Beech nut with nut and washer	23	F 1019	Hairpin cotter key
6	F 1003	Friction disc	24	F 1453	Cable complete for throttle control F 1458 7 feet
7	F 1130	Cable complete for tension control 24 feet		F 1454	Conduit, throttle control 7 feet
	F 1013	Conduit, tension control 24 feet	25	F 1455	Wire, throttle control 8 feet
	F 1014	Wire, tension control 25 feet	26	F 1447	Throttle control box only
8	F 1129	Cable complete for throttle control 12 feet	27	F 1456	Standard only for throttle control
	F 1011	Conduit, throttle control 12 feet	28	F 7207	Angle bracket for VG4D throttle
	F 1012	Wire, throttle control, 13 feet	29	F 1016	Angle bracket for VH4D, VE4D and VF4D
9	F 5554	Knob for throttle lever	30	F 1021	Throttle cable bracket VG4D and V461D
10	F 1433	Throttle lever		F 1021	Throttle cable bracket VH4D, VE4D and VF4D
11	F 1002	Conical washer	31	F 5264	Clamp, throttle cable
12	F 5545	Swivel fasteners (throttle)	32	F 1371	Throttle control complete with cable and standard
13	F 1005	Adjusting stud nut (tension)		F 1458	Throttle complete with standard, less cable
14	F 1004	Indicator tension control		F 1459	Throttle box complete with cable, less standard
15	F 1008	Control box		F 1446	Throttle box complete less cable and standard
16	F 1452	Control box cover			

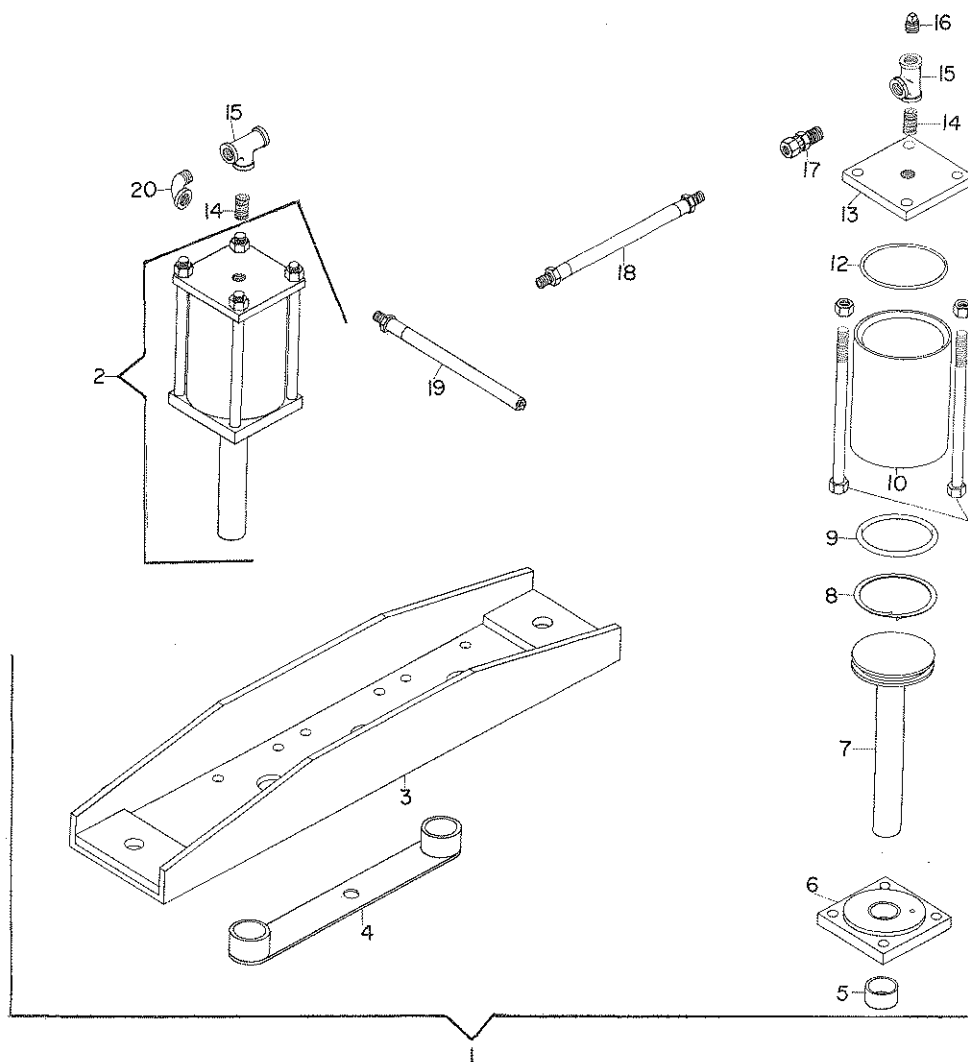 


REF. NO.	PART NO.	DESCRIPTION
1	FT 182	Dual ram assy., complete 23" chamber
	FT 183	Dual ram assy., complete 22" chamber
	FT 153	Single ram assy., complete 18" chamber
2	FT 198	3" cylinder complete with top and bottom
3	FT 199	Cylinder frame (dual and single ram) 18" chamber
	FT 181	Cylinder frame (dual and single ram) 22" chamber
	FT 180	Cylinder frame (dual and single ram) 23" chamber
4	FT 201	Receptical for rams, 2 tie balers
	FT 202	Receptical for rams 3-tie balers
5	FT 19	Bushing for FT 14 (1" x 1-1/4" x 5/8")
6	FT 14	Cylinder bottom with bushing
7	FT 11	Piston
8	FT 137	Back up ring for FT 12 (MS-28782-37)
9	FT 12	O-ring for piston
10	FT 10	Cylinder
11	FT 16	Tie bolt 3/8" x 7" N. F. H. T. with nut (4 used)
12	FT 15	O-ring top seal
13	FT 13	Cylinder top
14	FT 73	Nipple, 1-1/2"
15	FT 74	Tee
16	FT 75	Pipe plug
17	FT 107	Union Swivel
18	FT 163	Pressure hose, ram to ram 13-1/4" 300 only
	FT 200	Pressure hose, ram to ram 8" 200 only
19	FT 136	Pressure hose, bypass to ram 24"
20	FT 18	Street elbow

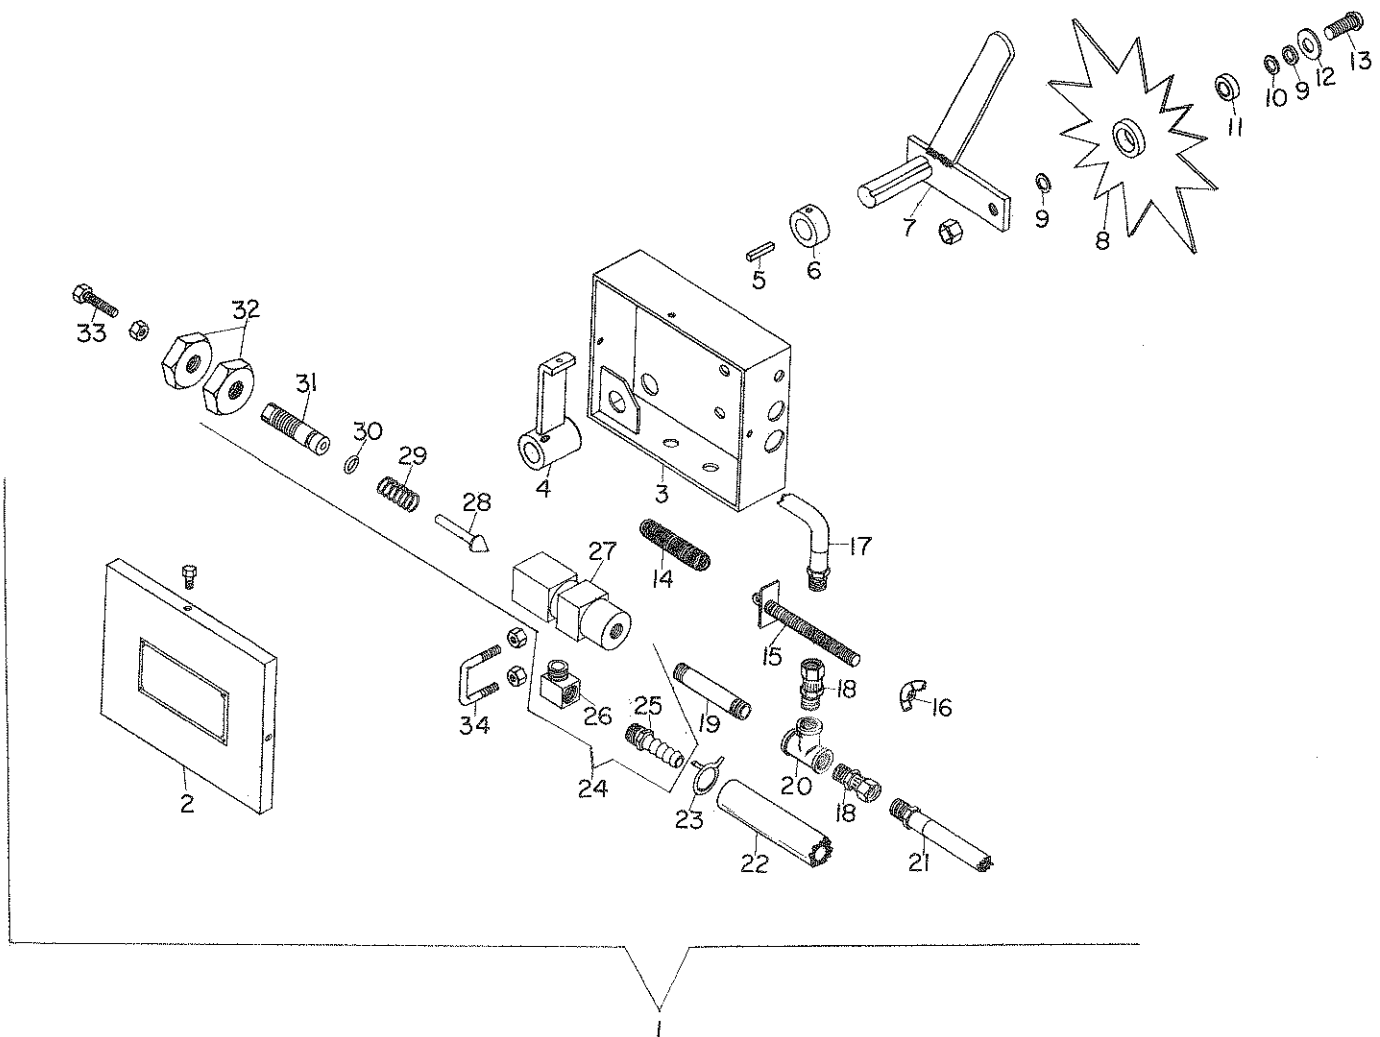 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 192	Bypass box complete with 1/2" return hose, less pressure hose	20	FT 74	Tee
2	FT 50	Bypass box cover	21	FT 150	Pressure hose, pump to bypass
3	FT 194	Bypass box		FT 207	Pressure hose, pump to bypass 102" S. P. balers 66-
4	FT 67	Bypass lever	22	FT 191	Bypass return hose 1/2" x 93"
5		Key 3/16" x 3/16" x 1"		FT 208	Bypass return hose 1/2" x 105" SP balers 66-
6	FT 68	Spacer, penetration wheel arm	23	FT 187	Hose clamp, 1/2"
7	FT 177	Penetration wheel arm (tapped)	24	FT 185	Bypass assembly complete for 1/2" return hose (Sq. stock)
8	FT 178	Penetration wheel with bearing	25	FT 193	Hose nipple (1/2" hose)
9	FT 209	Washer 14 ga. 3/8" x 5/8"	26	FT 188	3/8" street elbow, weatherhead (3400 x 3/8")
10	FT 210	Washer 18 ga. 3/8" x 5/8"	27	FT 184	Bypass cylinder, 1/2" hose (sq. stock)
11	FT 179	Bearing, penetration wheel (BR9904)	28	FT 87	Bypass check pin
12	FT 123	Washer 3/8"	29	FT 63	Spring, bypass check pin
13	FT 211	Button head bolt 3/8" x 1"	30	FT 53	O-ring, bypass
14	FT 65	Adjusting screw tension spring	31	FT 54	Plunger, less nuts
15	FT 61	Adjusting screw (eyebolt)	32	FT 55	Jamb nut 5/8"
16	FT 62	Wing nut for adjusting screw	33		1/4" x 1-1/4" N. C. cap screw
17	FT 136	Pressure hose, bypass to ram 24"	34	FT 58	U-bolt
18	FT 107	Union swivel			
19	FT 72	Pipe nipple 3"			

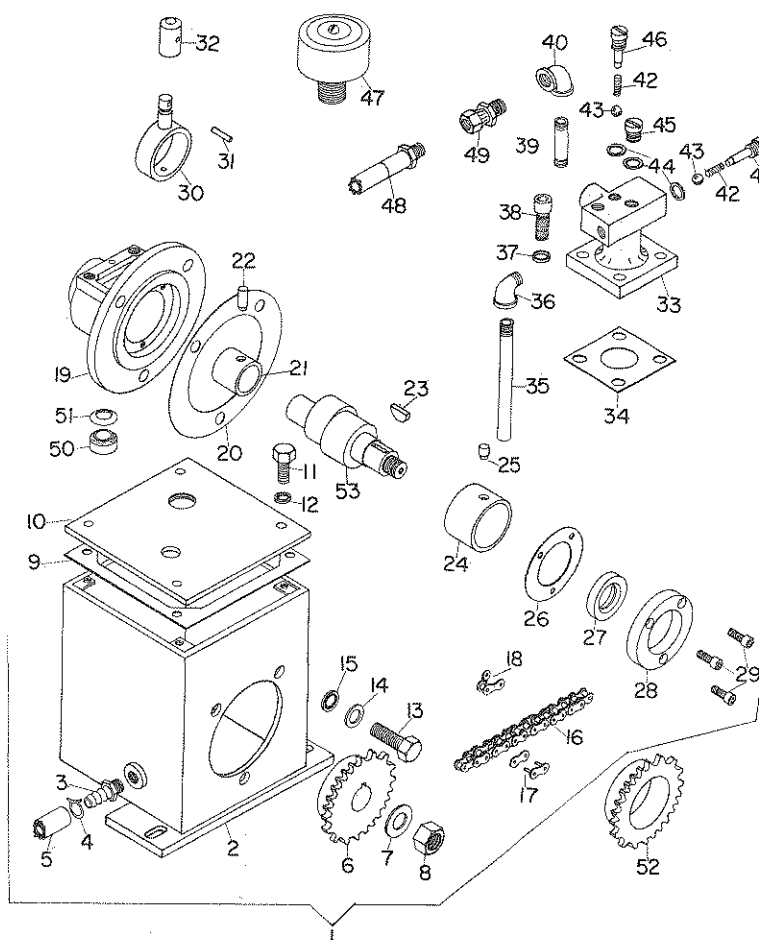 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 537	Pump and tank assembly complete, less hose 1/2"	27	FT 507	Oil seal (500455)
2	FT 536	Tank only for 1/2" hose	28	FT 504	Retaining ring
3	FT 193	Hose nipple 1/2" hose	29		Allen screws for retaining ring 1/4" x 3/4"
4	FT 187	Hose clamp 1/2"	30	FT 500	Connecting rod
5	FT 191	Return hose 1/2"	31	FT 506	Piston pin
6	FT 101	Sprocket, driven 22T	32	FT 505	Piston
7		Flat washer 9/16"	33	FT 524	Head
8		Nut 5/8 SAE jam	34	FT 521	Head gasket
9	FT 528	Tank cover gasket	35	FT 535	1/4" x 6" nipple
10	FT 532	Tank cover	36	FT 18	Street elbow
11		Cap screw 5/16" x 3/4" N.C.	37		7/16" high collar lock washer
12	FT 538	Washer seal for tank cover bolts 5/16"	38		7/16" Allen screw
13		Cap screw 7/16" x 3/4" N.C.	39	FT 534	1/4" x 2" nipple
14		7/16" flat washer	40	FT 82	90° elbow
15	FT 539	Washer seal for pump mounting bolts 7/16"	41	FT 517	Check valve pin (intake)
16	FT 197	Chain, pump drive, 69P. #41	42	FT 513	Check ball spring (2 used)
17	FT 114	Connecting link, #41	43	FT 512	Check ball (2 used)
18	FT 113	1/2 (offset) link, #41	44	FT 514	Gasket (3 used)
19	FT 525	Crankcase, 7/16" tapped hole	45	FT 519	Plug
20	FT 527	Pump base gasket	46	FT 518	Check valve pin (outlet)
21	FT 508	Crankshaft bushing, inner	47	FT 530	Filter assembly
22	FT 510	Anchor pin for FT 508 bushing	48	FT 150	Pressure hose, pump to bypass
23		Woodruff key 1/4" x 3/4"	49	FT 107	Union swivel
24	FT 509	Crankshaft bushing, outer	50	FT 529	Outlet gasket
25	FT 511	Anchor pin for FT 509 bushing	51	FT 533	Washer for FT 529
26	FT 541	Gasket for FT 504 retaining ring	52	FT 157	Sprocket, drive for hydraulic pump
			53	FT 503	Crankshaft

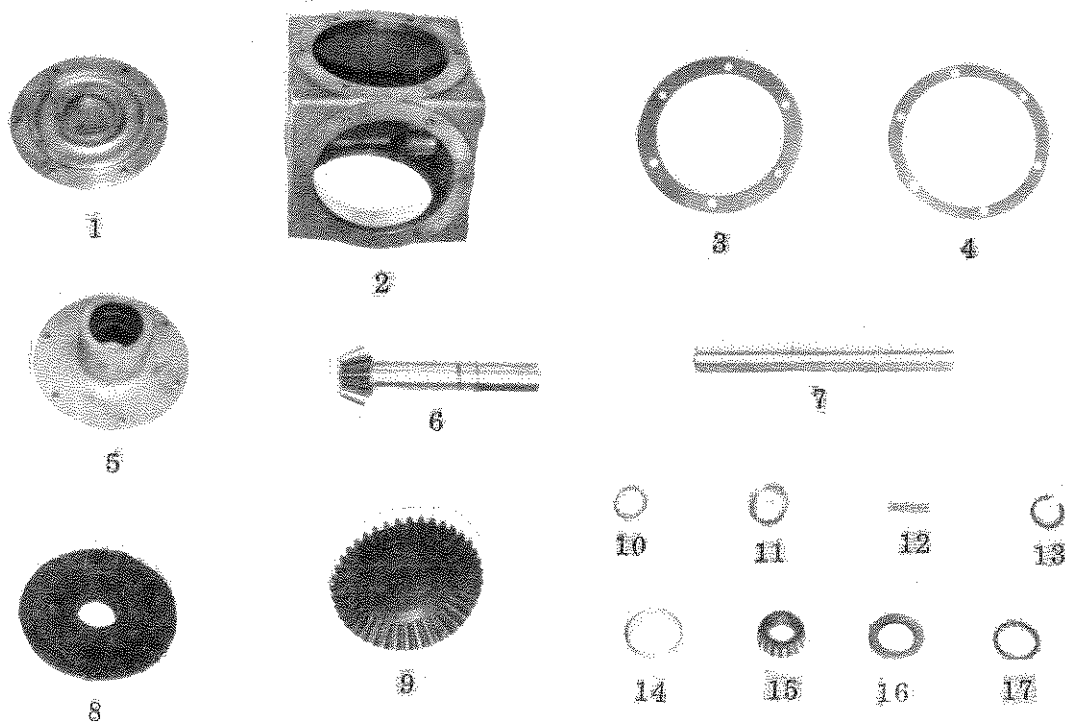 


REF. NO.	PART NO.	DESCRIPTION
1	F 1409	Cap, drive shaft bearing (closed end)
2	F 1407	Case for gear box
3	F 1095	Gasket, (.005 thick) for F 1076 and F 1078
	F 1414	Gasket, (.010 thick) for F 1076 and F 1078
	F 1415	Gasket, (.015 thick) for F 1076 and F 1078
	F 1416	Gasket, (1/32" thick) for F 1076 and F 1078
4	F 1417	Gasket, (.005 thick) for F 1409
	F 1418	Gasket, (.010 thick) for F 1409
	F 1419	Gasket, (.015 thick) for F 1409
5	F 1078	Housing, pinion shaft bearing
6	F 1410	Pinion and shaft
7	F 1601	Drive shaft
8	F 1076	Cap, drive shaft bearing (open end)
9	F 1411	Bevel gear
10	F 957	Snap ring 1-3/8"
11	F 1420	Steel shim (.003 thick)
12	F 1093	Key, drive shaft and sheave, 5/16" x 5/16" x 2"
13	F 1087	Snap ring, pinion shaft
14	F 1084	Bearing cup, pinion and drive shaft (LM48510)
15	F 1083	Bearing cone, pinion and drive shaft (LM48548)
16	F 1421	Grease seal for pinion shaft (CR256112)
17	F 1085	Seal, drive shaft (CR186112)
	F 1412	Gear box complete less sheave

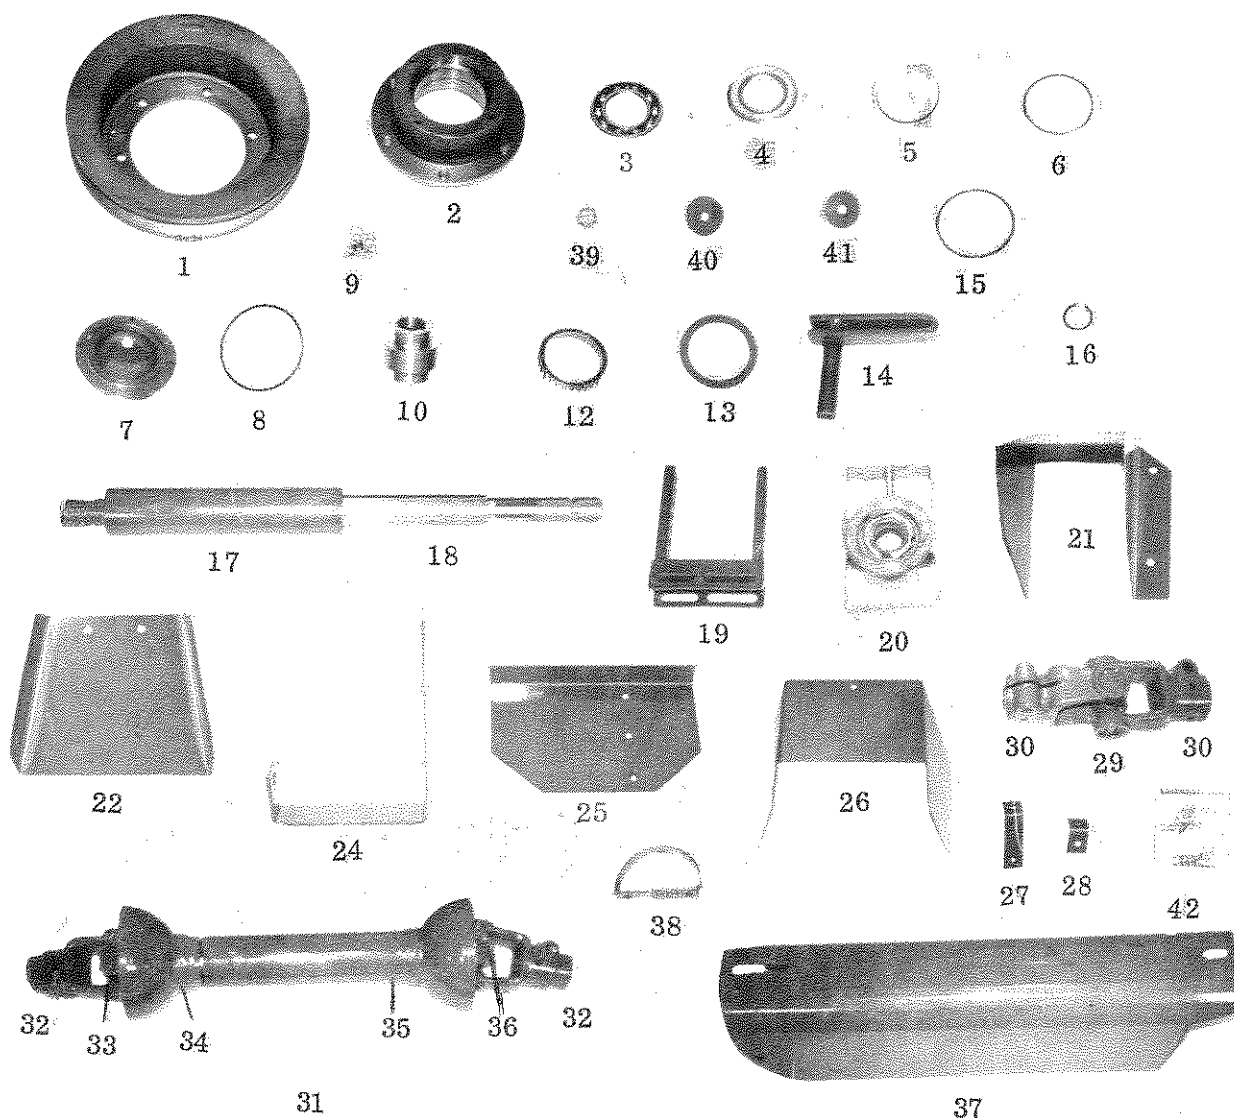 


REF. NO.	PART NO.	DESCRIPTION
1	F 1161	Sheave, PTO single groove (540 RPM)
2	F 1165	Hub for F 1161 Sheave
3	F 956	Bearing, outer (SKF 6211)
4	F 955	Bearing, inner w/seal (SKF 6211-RS)
5	F 954	Seal for clutch (CR/28635)
6	F 961	Snap ring (RR 350)
7	F 952	Cap for F 1165
8	FT 25	O ring seal
9	F 958	Drain plug (DP 6)
10	F 951	Hub for over-running clutch
12	F 901	Clutch for F 1165 hub
13	F 960	Thrust washer
14	F 7373	Bearing assembly swivel bracket
	F 7692	Bearing assembly swivel bracket 66-
15	F 962	Snap ring (RR 393)
16	F 7361	Snap ring, external for PTO shaft
17	F 7366	Drive line slip tube
18	F 7367	Drive line spline shaft
19	F 7372	Bearing assembly adjusting bracket
	F 7693	Bearing assembly adjusting bracket 66-
20	F 7368	Bearing assembly for PTO drive line
	F 7369	Bearing holder
	F 7370	Bearing for holder (8507)
	F 7371	Snap ring for bearing holder
21	F 1063	Shield for sheave
22	F 7377	Front "U" joint shield


REF. NO.	PART NO.	DESCRIPTION
24	F 1222	Bracket for F 1221 shield
25	F 1221	Shield for belt PTO
26	F 1066	Shield for universal joint
27	F 1065	Bracket for F 1066 shield, long
28	F 1064	Bracket for F 1066 shield, short
29	F 7365	Universal Joint assembly, 1-3/8" x 1-3/8" round bore
30	F 1105	Yoke assembly, 1-3/8" bore (2 used)
31	F 7374	Telescoping universal drive line, 1-3/8" spline x 1-3/8" spline
	F 7375	Half drive line w/square tube
	F 7376	Half drive line w/square shaft
32	F 890	Yoke, 1-3/8" spline (2 used)
	F 1106	Lock pin w/washer
	F 1108	Spring for F 1106 lock pin
33	F 1103	Yoke and square shaft assembly (welded)
34	F 1102	Inner shield and bell assembly
35	F 1101	Outer shield and bell assembly
36	F 1104	Yoke and tube assembly (welded)
37	F 7378	Drive line shield
38	F 7379	Front mounting bracket for drive line shield
39	F 959	Gasket, drain plug
40	F 246	Washer, drive shaft end
41	F 963	Gasket, drive shaft end
42	F 889	Universal Cross repair kit for F 873, F 1096, F 7365, and F 7374

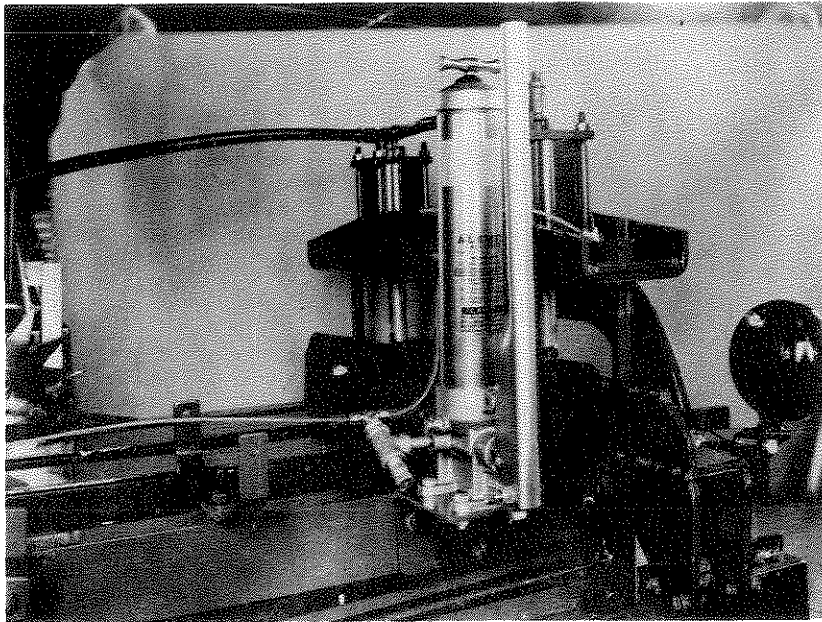 

PART NO.	DESCRIPTION
F 7414	Single stoke pump (4055)
F 7396	Pump bracket
F 7400	1/8" O. D. nylon pressure tubing (uses 34 ft.)
F 7402	90° terminating valve (381701-9) (2 used)
F 7403	90° elbow valve (381702-9) (2 used)
F 7405	Straight thru valve (381703-9) (2 used)
F 7406	Tee valve (381704-9)
F 7407	Top 90° valve (381705-9) (2 used)
F 7718	Top tee (381708-9)
F 7409	Top 60° valve (381709-9)
F 7415	Indicator with pin (380630)
F 7413	Tube clip (17743) (9 used)
F 7719	Nut (328301-2)
F 7720	Sleeve (328302-2)
F 7455	45° adapter, 1/4" to 1/8" pipe (310912) (3 used)
F 777	Straight fitting (10 used)
F 5264	#4 adel clamps
F 7417	1/8" x 1/4" x 1/4" pipe tee
F 7416	1/8" x 1-1/2" pipe nipple
F 7418	1/4" x 1/8" pipe reducer
F 7479	90° brass elbow, 1/8" pipe X 1/8" tube
F 7726	Top - straight thru snap-on valve (381717-9)
	3/8" x 3/4" N.C. cap screw with lock washers (2 used)
	5/16" x 1" N.C. cap screws with nuts and lock washers
F 7398	1 Lb. centralized type "OOO" grease
F 7401	5 Lb. centralized type "OOO" grease

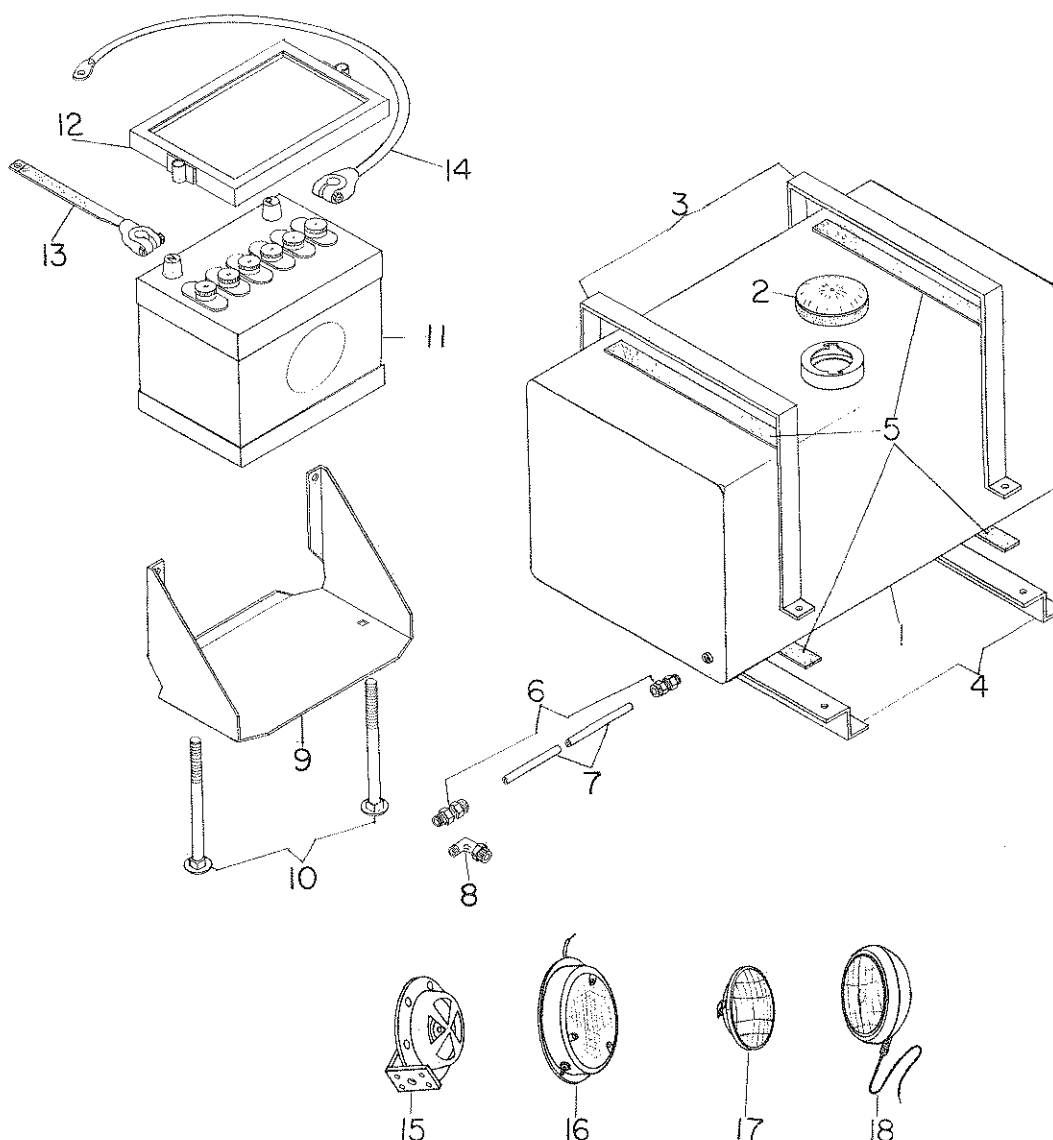 


REF. NO.	PART NO.	DESCRIPTION
1	F 1688	Fuel tank with cap, 66-
2	F 1689	Fuel tank cap for F 1688 and F 5947 tanks
3	F 7046	Fuel tank strap (2 used)
4	F 7048	Fuel tank mounting bracket, 23" chamber (2 used)
	F 7212	Fuel tank mounting bracket, 22" chamber (2 used)
	F 7295	Fuel tank mounting bracket, 18" chamber (2 used)
5	F 893	Felt for tank straps - set of four
6	F 5232	Straight fitting for gas line (268P-1/4" x 1/8")
7	F 7049	Fuel line only 62"
8	F 5233	Elbow fitting for gas line (269P-1/4" x 1/8")
9	F 1690	Battery box 66-
10	F 1691	Bolt for battery box (3/8" x 9")
11	F 1499	Battery 12 volt
12	F 5499	Battery hold down bracket
13	F 7235	Battery cable (ground) 12 volt
14	F 1703	Battery cable (insulated) 12 volt
15	F 1497	Horn, wire alarm, 12 volt
16	F 1505	Light, flush mounted, 12 volt
17	F 5842	Sealed beam unit, 12 volt
	F 5941	Sealed beam unit, 12 volt (comb. red & clear)
18	F 1645	Light, front and center, 12 volt (sealed beam)
	F 1644	Light, rear combination, 12 volt (sealed beam)

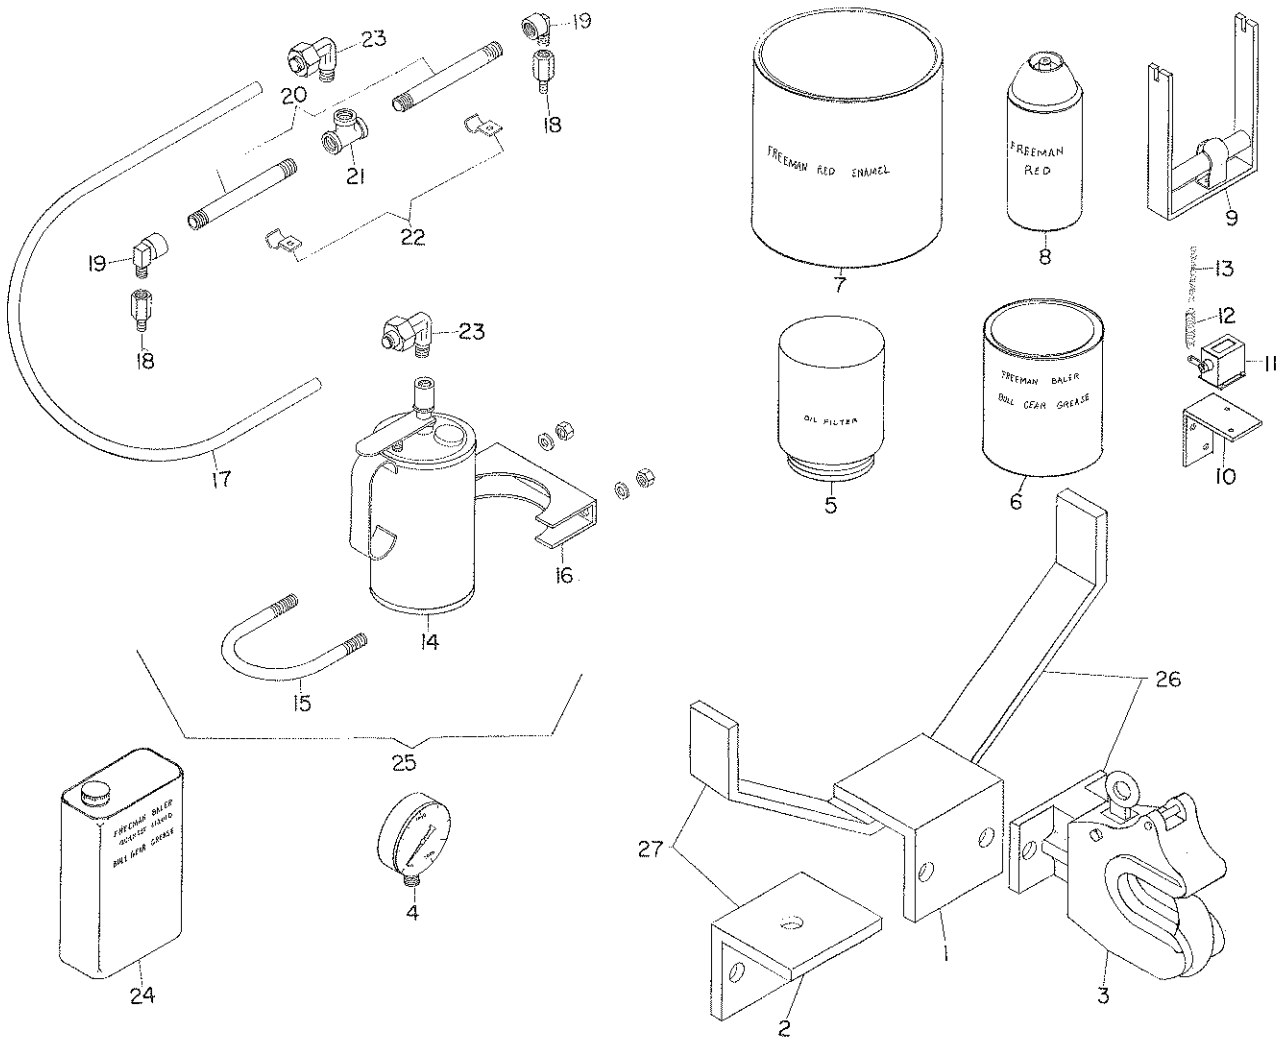 

REF. NO.	PART NO.	DESCRIPTION
1	F 1698	Trailer hitch frame only (2-tie)
	F 1699	Trailer hitch frame only 3-tie
2	F 736	Trailer hitch angle for clevis pin
3	F 1697	Holland hitch for trailer hitch
4	F 800	Hydraulic gauge (2000 lbs.)
5	F 1511	Oil filter cartridge 4 thread base (VH4D and VG4D)
	F 5922	Oil filter cartridge (V461D)
6	F 664	Bullgear grease (2 lb. can)
	F 874	Bullgear grease (1 gal.) 10 lbs.
7	F 649	Freeman red baler paint (1 gal.)
	F 942	Freeman red baler paint (1 qt.)
	F 1675	Freeman white baler paint (1 gal.)
	F 1676	Freeman white baler paint (1 qt.)
8	F 770	Freeman red baler paint, spray can
	F 1677	Freeman white baler paint, spray can
9	F 4193	Wire splicer
10	F 7391	Bale counter mounting angle
11	F 304	Bale counter (Veeder Root)
	F 635	Arm w/screw for F 304
	F 636	Reset knob for F 304
12	F 638	Spring, bale counter
13	F 637	Chain, bale counter
14	F 7671	Oil can with pump

REF. NO.	PART NO.	DESCRIPTION
15	F 7721	U bolt, grease can
16	F 7722	Grease can clamp base
17	F 7673	Nylon tubing, pull-type baler 20"
	F 7674	Nylon tubing, S.P. baler 30"
18	F 777	Adapter, 2 used (51942)
19	F 7677	90° brass elbow (2 used)
20	F 7728	1/4" x 5-1/2" pipe nipple (2 used) 23" bale chamber
	F 7727	1/4" x 5" pipe nipple (2 used) 22" bale chamber
	FT 72	1/4" x 3" pipe nipple (2 used) 18" bale chamber
21	FT 74	1/4" pipe tee
22	F 7723	Clip for grease nipple (125 jiffy)
23	F 7676	90° nylon elbow 2 used
24	F 7609	Quickset lubricant 1 qt.
	F 7626	Quickset lubricant 1 gal.
25	F 7617	Bullgear luber kit, 200 and 300 state which
26	F 732	Trailer hitch frame with Holland hitch, 2-tie
	F 734	Trailer hitch frame with Holland hitch, 3-tie
27	F 733	Trailer hitch frame with pin hitch, 2-tie
	F 735	Trailer hitch frame with pin hitch, 3-tie

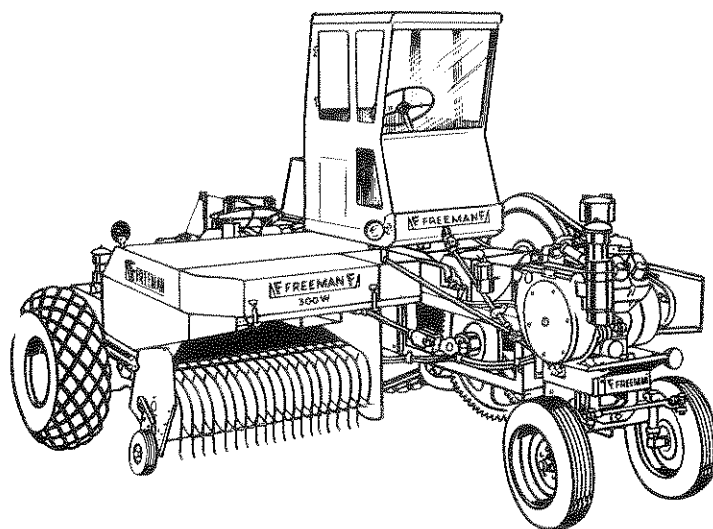 

1966 PARTS LIST

for

Model 200W and 200T

Model 300W and 300T

SELF-PROPELLED BALER

Table of Contents

	Page
Front Axle	2
Front Engine Mount	2
Operators Platform	3
Steering Shafts	4
Operators Seat	4
Rear Clutch Controls	5
Brake Controls	5
Front Throttle Controls	6
Rear Throttle Controls	6
Front Clutch Controls	7
Gear Shift Controls	7
Rear Engine Clutch	8
Rear Axle & Final Drive	10
Steering Gear Assembly	12
Transmission Assembly	14
Differential Assembly	16
Hydraulic Lift for Pickup	17
Hydraulic Pump Assembly	18
Electric System	19
Shields	20
Bale Weight Indicator	21
Hydraulic Pump Mount and Drive	21
Wire Box	22
Twine Box	22
Items Different From Pull Type	23
Excel Cab	24

Index

Self-Propelled Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 181	5, 7	F 5018	4	F 5331	14	F 5615	4
F 214	2, 10	F 5019	4	F 5332	14	F 5625	21
F 215	2	F 5023	2	F 5333	14	F 5626	2
F 268	21	F 5025	4	F 5334	14	F 5627	2
F 285	22	F 5031	4	F 5341	16	F 5630	2
F 399	22	F 5032	4	F 5342	16	F 5632	21
F 455	19	F 5039	2	F 5343	16	F 5633	21
F 462	2	F 5040	2	F 5344	16	F 5635	21
F 842	22	F 5048	7	F 5345	16	F 5648	10
F 853	20	F 5049	7	F 5346	16	F 5650	2
F 856	22	F 5055	7	F 5347	16	F 5663	2
F 857	22	F 5069	6	F 5348	16	F 5689	21
F 862	19	F 5070	6	F 5349	16	F 5703	4
F 884	2	F 5075	5	F 5350	16	F 5705	4
F 934	2	F 5076	10	F 5351	16	F 5714	2
F 946	19, 22	F 5080	6	F 5352	16	F 5720	2
F 990	21	F 5092	6	F 5353	16	F 5721	2
F 994	5, 6, 21	F 5145	2	F 5354	16	F 5759	2
F 995	6, 21	F 5156	8, 14	F 5356	16	F 5760	2
F 1005	21	F 5169	7	F 5357	16	F 5763	10
F 1007	21	F 5179	6	F 5358	16	F 5765	2
F 1131	21	F 5232	6	F 5359	16	F 5767	2
F 1294	6	F 5233	6	F 5360	16	F 5768	2
F 1461	6	F 5234	19	F 5401	16	F 5769	2
F 1497	19	F 5235	19	F 5402	16	F 5781	20
F 1499	19	F 5236	19	F 5403	16	F 5782	10
F 1624	2	F 5237	19	F 5404	16	F 5783	10
F 1625	2	F 5268	10	F 5405	16	F 5784	10
F 1626	2	F 5269	10	F 5406	16	F 5785	10
F 1627	2	F 5270	10	F 5408	16	F 5786	10
F 1628	2	F 5275	10	F 5409	16	F 5788	10
F 1644	19	F 5276	10	F 5410	16	F 5790	10
F 1645	19	F 5299	6	F 5411	16	F 5791	10
F 1653	2	F 5301	14	F 5412	16	F 5792	10
F 1654	2	F 5302	14	F 5414	16	F 5793	10
F 1689	3	F 5303	14	F 5415	16	F 5794	10
F 1720	10	F 5304	14	F 5416	16	F 5795	10
F 4014	6, 21	F 5305	14	F 5438	10	F 5796	10
F 4015	6, 21	F 5306	14	F 5445	10	F 5797	10
F 4067	5, 6, 21, 22	F 5307	14	F 5446	10	F 5798	10
F 4068	5, 6, 21, 22	F 5308	14	F 5452	10	F 5799	10
F 4081	10	F 5309	14	F 5457	10	F 5800	10
F 4115	6	F 5310	14	F 5483	21	F 5801	10
F 4191	22	F 5312	14	F 5499	19	F 5803	2
F 4195	22	F 5313	14	F 5501	4	F 5804	2
F 4210	5	F 5314	14	F 5502	4	F 5806	10
F 4211	22	F 5316	14	F 5505	4	F 5808	10
F 5001	2	F 5317	14	F 5531	22	F 5809	10
F 5002	2	F 5318	14	F 5532	22	F 5812	10
F 5006	2	F 5319	14	F 5545	6	F 5813	10
F 5007	2	F 5320	14	F 5546	6	F 5814	10
F 5008	2	F 5321	14	F 5547	10	F 5815	2
F 5009	2	F 5322	14	F 5551	6	F 5824	10
F 5011	4	F 5323	14	F 5554	6, 17	F 5826	10
F 5012	4	F 5324	14	F 5559	6, 21	F 5827	10
F 5013	4	F 5325	14	F 5561	6	F 5828	10
F 5016	2	F 5326	14	F 5578	2	F 5829	10
F 5017	4	F 5327	14	F 5596	10	F 5830	10
		F 5329	14	F 5612	21	F 5831	10
		F 5330	14, 16	F 5614	21	F 5833	10

Index


Self-Propelled Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 5837	10	F 5956	8	F 6018	17	F 6083	17
F 5840	10	F 5957	2	F 6019	17	F 6084	17
F 5842	19	F 5958	2	F 6020	17	F 6085	17
F 5852	2	F 5959	21	F 6021	17	F 6086	17
F 5853	2	F 5961	19	F 6022	7	F 6087	17
F 5854	2	F 5962	23	F 6023	7	F 6088	17
F 5856	21	F 5963	23	F 6024	7	F 6089	6
F 5858	14, 16	F 5964	23	F 6025	7	F 6090	6
F 5861	6	F 5965	23	F 6026	7	F 6091	6
F 5862	6	F 5966	23	F 6027	7	F 6092	6
F 5863	6	F 5967	8, 14	F 6028	7	F 6093	6
F 5866	4	F 5968	8	F 6029	7	F 6094	22
F 5867	4	F 5969	20	F 6030	7	F 6095	22
F 5869	19	F 5970	20	F 6031	3	F 6096	22
F 5881	4	F 5971	20	F 6032	3	F 6097	22
F 5882	4	F 5972	20	F 6033	6	F 6098	22
F 5883	4	F 5973	4	F 6034	6	F 6099	22
F 5884	20	F 5974	4	F 6035	6	F 6100	22
F 5885	21	F 5975	4	F 6036	6	F 6101	22
F 5887	21	F 5976	8	F 6037	17	F 6102	22
F 5890	10	F 5977	6	F 6039	19	F 6103	22
F 5891	10	F 5978	19	F 6040	19	F 6104	20
F 5892	10	F 5979	5	F 6041	21	F 6105	20
F 5893	10	F 5980	5	F 6042	21	F 6106	20
F 5894	10	F 5981	5	F 6044	6	F 6107	20
F 5895	10	F 5982	5	F 6045	6	F 6108	20
F 5896	10	F 5983	5	F 6046	6	F 6111	20
F 5897	10	F 5984	5	F 6047	6	F 6112	21
F 5898	10	F 5985	6	F 6048	21	F 6113	21
F 5899	10	F 5986	6	F 6049	21	F 6114	19
F 5900	10	F 5987	6	F 6050	21	F 6115	19
F 5901	10	F 5988	6	F 6051	17	F 6116	19
F 5902	10	F 5989	5	F 6053	8, 10	F 6117	19
F 5903	10	F 5990	5	F 6054	5	F 6118	22
F 5904	10	F 5991	5	F 6055	5	F 6119	21
F 5905	10	F 5992	7	F 6056	10	F 6120	21
F 5906	22	F 5993	8	F 6057	5	F 6121	21
F 5910	10	F 5994	8	F 6059	8	F 6122	21
F 5911	22	F 5995	8	F 6060	8	F 6123	21
F 5912	22	F 5996	8	F 6061	3	F 6124	23
F 5913	10	F 5997	3	F 6062	20	F 6125	23
F 5916	23	F 5998	3	F 6063	6	F 6126	6
F 5918	4	F 5999	3	F 6064	3	F 6127	6
F 5920	4	F 6000	3	F 6065	3	F 6128	4
F 5921	4	F 6001	3	F 6066	3	F 6129	4
F 5927	21	F 6002	4	F 6067	3	F 6130	4
F 5941	19	F 6003	4	F 6068	3	F 6131	3
F 5942	14, 16	F 6004	4	F 6069	3	F 6132	10
F 5943	8	F 6005	19	F 6070	7	F 6133	16
F 5944	5	F 6006	19	F 6071	7	F 6134	17
F 5945	5	F 6007	21	F 6072	7	F 6135	24
F 5946	5	F 6008	21	F 6073	7	F 6136	24
F 5947	3	F 6009	21	F 6074	7	F 6137	24
F 5948	3	F 6010	21	F 6075	8	F 6138	24
F 5949	3	F 6011	3	F 6076	8	F 6139	24
F 5951	23	F 6012	3	F 6077	5	F 6140	24
F 5952	17	F 6013	17	F 6079	4	F 6141	24
F 5953	17	F 6014	17	F 6080	4	F 6142	24
F 5954	19	F 6015	17	F 6081	4	F 6143	24
F 5955	8	F 6016	17	F 6082	17	F 6144	24

Index


Self-Propelled Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 6145	24	F 179839	12	F 5686719	18	F 5689695	12
F 6146	24	F 5682367	18	F 5686814	12	F 5689697	12
F 6147	24	F 5682898	12	F 5686815	12	F 5689698	12
F 6148	24	F 5684820	12	F 5686866	12	F 5689834	12
F 6149	24	F 5685355	12	F 5687182	12	F 5689836	12
F 6150	24	F 5685372	12	F 5687183	12	F 5690033	12
F 6151	24	F 5685706	12	F 5687184	12	F 5690698	12
F 6152	24	F 5685707	12	F 5687185	12	F 5690824	18
F 6153	24	F 5685708	12	F 5687186	12	F 5690832	18
F 6154	24	F 5685709	12	F 5687252	12	F 5691895	12
F 6155	24	F 5685710	12	F 5687277	18	F 5695670	18
F 6156	24	F 5685711	12	F 5687319	18	F 5696151	12
F 6157	22	F 5686526	12	F 5687785	18	F 5960884	4
F 7010	2	F 5686527	12	F 5687796	18		
F 7033	10	F 5686539	12	F 5687898	18	FT 18	17
F 7034	10	F 5686546	12	F 5687958	12	FT 53	10
F 7035	10	F 5686553	4	F 5688034	12	FT 82	17
F 7095	5, 8	F 5686570	12	F 5688065	18	FT 103	17
F 7136	22	F 5686577	12	F 5688066	18	FT 107	17
F 7166	20	F 5686625	12	F 5688072	18	FT 136	17
F 7236	21	F 5686644	18	F 5688079	18	FT 150	17
F 7550	20	F 5686675	18	F 5688081	18	FT 169	17
F 7608	22	F 5686676	18	F 5688752	12	FT 208	23
F 7635	20	F 5686680	18	F 5688765	12		
F 7648	22	F 5686687	18	F 5689021	12		
F 7700	2	F 5686702	18	F 5689396	18		

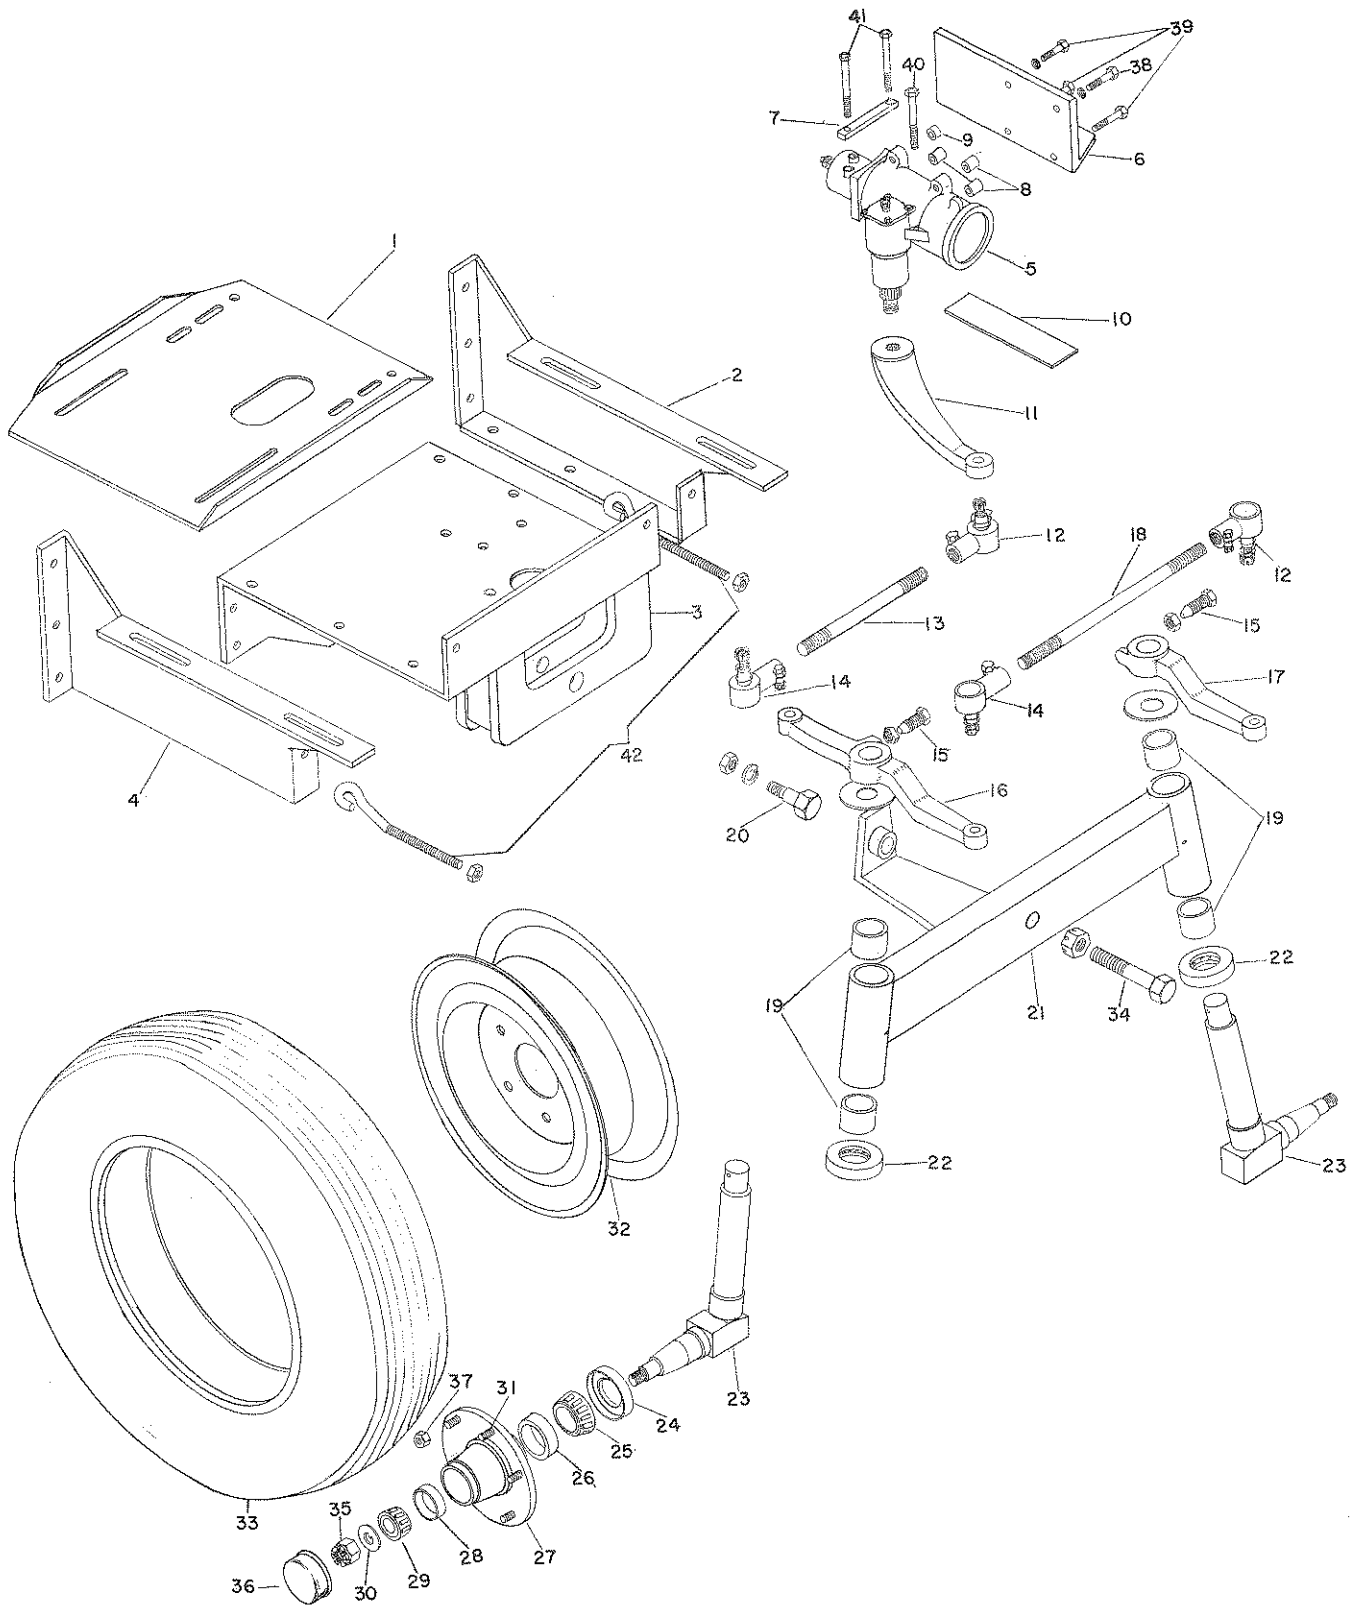 


FRONT AXLE AND ENGINE MOUNT

REF. NO.	PART NO.	DESCRIPTION
1	F 7700	Motor base plate
2	F 5663	Motor support L.H. 200 and 300
3	F 5803	Front axle bottom support plate 200
	F 5815	Front axle bottom support plate 300
4	F 5804	Motor support R.H. 300
	F 5714	Motor support R.H. 200
5	F 5765	Steering gear assembly (Saginaw 5691895)
6	F 5630	Mounting angle for F 5765 steering assembly
7	F 5852	Anchor strap for F 5765 steering assembly
8	F 5626	Spacer, steering assembly 1" long (3 used)
9	F 5627	Spacer, steering assembly 1/2" long (1 used)
10	F 5853	Spacer plate for F 5765 steering assembly
11	F 5720	Pitman arm, 200
	F 5721	Pitman arm, 300
12	F 5007	Tie rod end R.H. thread (2 used)
13	F 5760	Drag link, 200, 6-1/2"
	F 5009	Drag link, 300, 10"
14	F 5006	Tie rod end L.H. thread (2 used)
15	F 5016	Set screw for steering arm (2 used)
16	F 5001	Steering arm, R.H.
17	F 5002	Steering arm, L.H.
18	F 5759	Tie rod shaft, 18-1/4", 200
	F 5008	Tie rod shaft, 25-1/2", 300
19	F 5854	Spindle bushing, 1-3/4" x 2" x 1-1/2" prs. only (2 pr. used)
20	F 5023	Front axle shoulder bolt
21	F 5957	Front axle, 300, solid, 66-
	F 5958	Front axle, 200, solid, 66-
22	F 5769	Thrust bearing, D21 (2 used)
23	F 5768	Spindle L.H., 1-3/4"
	F 5767	Spindle R.H., 1-3/4"
24	F 1627	Front wheel grease seal (2 used) 54605 K.H.
25	F 1625	Front wheel bearing inner, (2 used) #LM 29749
26	F 1653	Cup for bearing, inner, (2 used) #LM 29710
27	F 1624	Front wheel hub, 6 hole (2 used)
28	F 1654	Cup for bearing, outer, (2 used) #L 44610
29	F 1626	Front wheel bearing, outer, (2 used) #L 44640
30	F 884	Spindle washer (2 used)
31	F 462	Lug bolt (12 used)
32	F 5145	Wheel, front 6 hole (regular)
	F 5650	Wheel, front 6 hole (flotation)
33	F 5039	Tire, front 6:70 x 15 - 6 ply (reg. and flotation)
	F 5040	Tube for front tire 6:70 x 15 (regular)
	F 215	Tube for front tire 7:50 x 16 (flotation)
34	F 5578	Front axle pivot bolt w/castillated nut, 1" x 5" NC-CS
35	F 934	Nut for F 5767 and F 5768 spindle (2 used)
36	F 1628	Hub cap (2 used)
37	F 214	Lug nut (12 used) #15085
38		3/8 x 1-1/2 N.C. cap screw
39		3/8 x 2-1/2 N.C. cap screw (3 used)
40		3/8 x 4 N. C. cap screw
41		3/8 x 5-1/2 N.C. cap screw (2 used)
42	F 7010	Front engine tightener bolt, 2 used

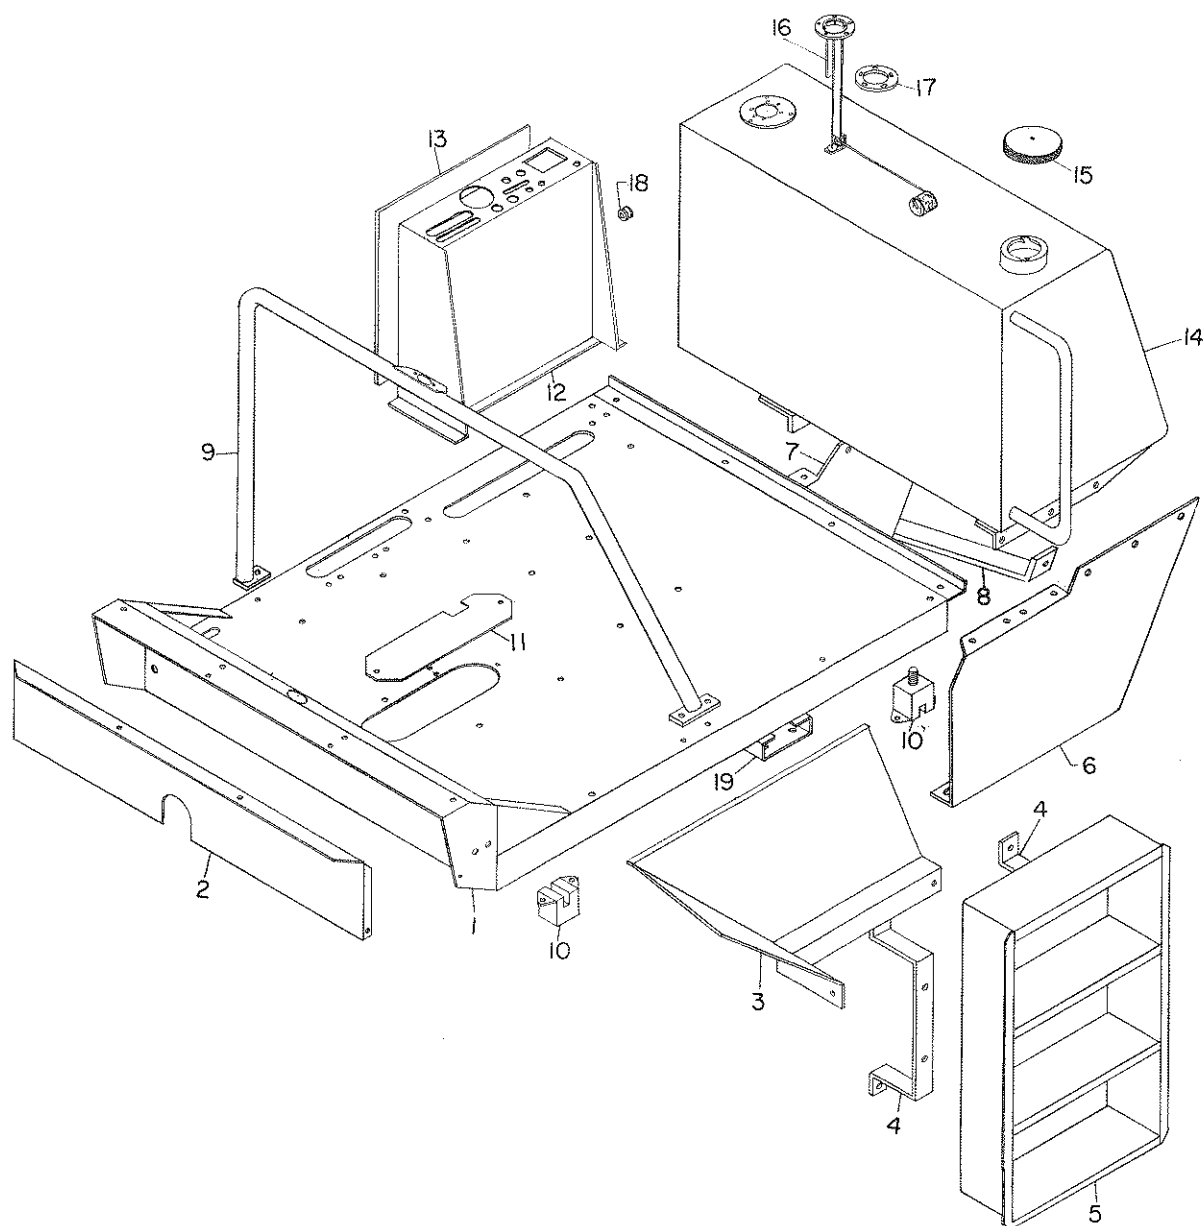 


OPERATORS PLATFORM

REF. NO.	PART NO.	DESCRIPTION
1	F 5997	Main operator deck, 66-
2	F 6064	Front deck shield
3	F 6061	Shield for chain (mounts to ladder section) 300 only
	F 6065	Shield for chain (mounts to ladder section) 200 only
4	F 6011	Ladder mounting bracket, (2 used)
5	F 6012	Ladder main section
6	F 5998	Rear mounting bracket for operator deck, L.H. 300 only
	F 6066	Rear mounting bracket for operator deck, L.H. 200 only
7	F 5999	Rear mounting bracket for operator deck, R.H., 66-
8	F 6067	Brace for rear mounting bracket
9	F 6001	Guard rail and steering shaft mounting bracket 66-
10	F 6000	Rubber mounting pad for F 5997 deck, 4 used, 66-
11	F 6068	Access cover for tension control tank
12	F 6031	Console, main section
13	F 6032	Console cover
14	F 5947	30 gal. fuel tank, less fuel gauge
15	F 1689	Fuel tank cap for F 5947 tank
16	F 5948	Fuel gauge for F 5947 tank
17	F 5949	Gasket for F 5948 gauge
18	F 6069	Rubber grommet
19	F 6131	Tie bar for rubber deck mount

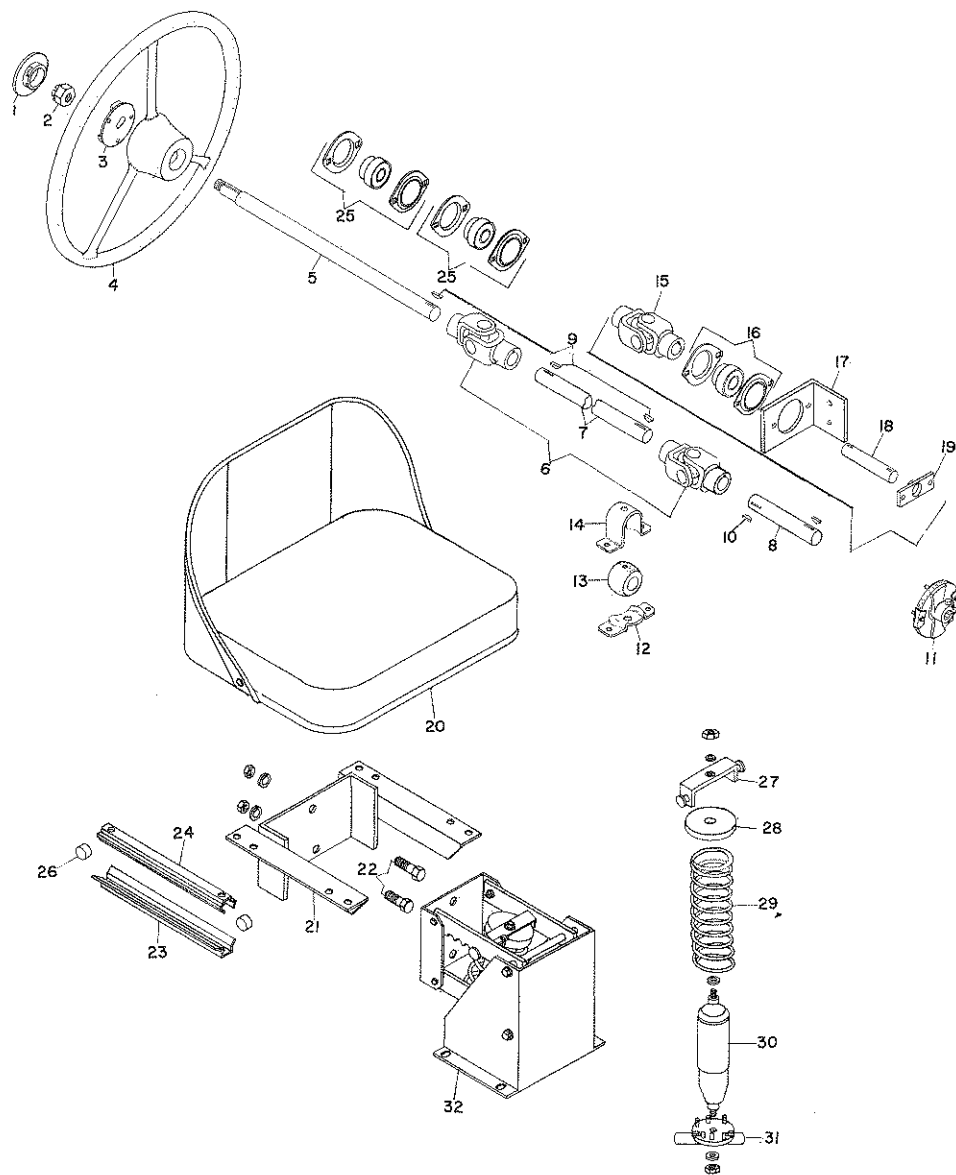 


STEERING SHAFTS AND OPERATORS SEAT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5031	Steering column cap	19	F 5615	Coupling
2		Nut, steering column, 3/4" S. A. E.	20	F 5918	Seat
3	F 5032	Steering column cap holder		F 6128	Deluxe Hi-back seat
4	F 5025	Steering wheel		F 5920	Bottom seat cushion for F 5918
5	F 5973	Top steering shaft		F 6129	Bottom seat cushion for F 6128
6	F 5012	Universal joint for steering shaft, 1" x 1" (2 used)		F 5921	Back cushion for F 5918
7	F 5974	Center steering shaft, 1" x 30-1/2"		F 6130	Back cushion for F 6128
8	F 5975	Lower steering shaft 1" x 11-1/4", 300 only	21	F 5867	Seat bracket
	F 5013	Lower steering shaft, 1" x 8-1/2", 200 only	22		1/2" x 1-3/4" N.C. cap screw
9		1/4" x 1-1/8" Woodruff key	23	F 6079	Seat Adjusting rail (top)
10		3/16" x 3/4" Woodruff key	24	F 6080	Seat adjusting rail (bottom)
11	F 5960884	Flange assembly	25	F 6002	Bearing w/stampings for top steering shaft (2 used)
	F 5686553	Bolt, flange assembly pinch		F 6003	Bearing only
12	F 5019	Base for self-aligning sleeve bearing		F 6004	Stampings only for F 6003 bearing
13	F 5018	Self-aligning sleeve bearing	26	F 6081	Roller for seat adjusting rails
14	F 5017	Top for self-aligning sleeve bearing	27	F 5501	Spring and cylinder adjusting bracket
15	F 5011	Universal joint, 1" x 7/8"	28	F 5502	Cup washer for F 5705 spring
16	F 5881	Bearing complete, 7/8"	29	F 5705	Spring, F 5703 seat assembly
17	F 5882	Bracket for F 5881 bearing	30	F 5866	Hydraulic cylinder
18	F 5883	Lower steering shaft, 7/8" x 4-3/4"	31	F 5505	Plate, bottom pivot
			32	F 5703	Seat spring and hydraulic assembly complete

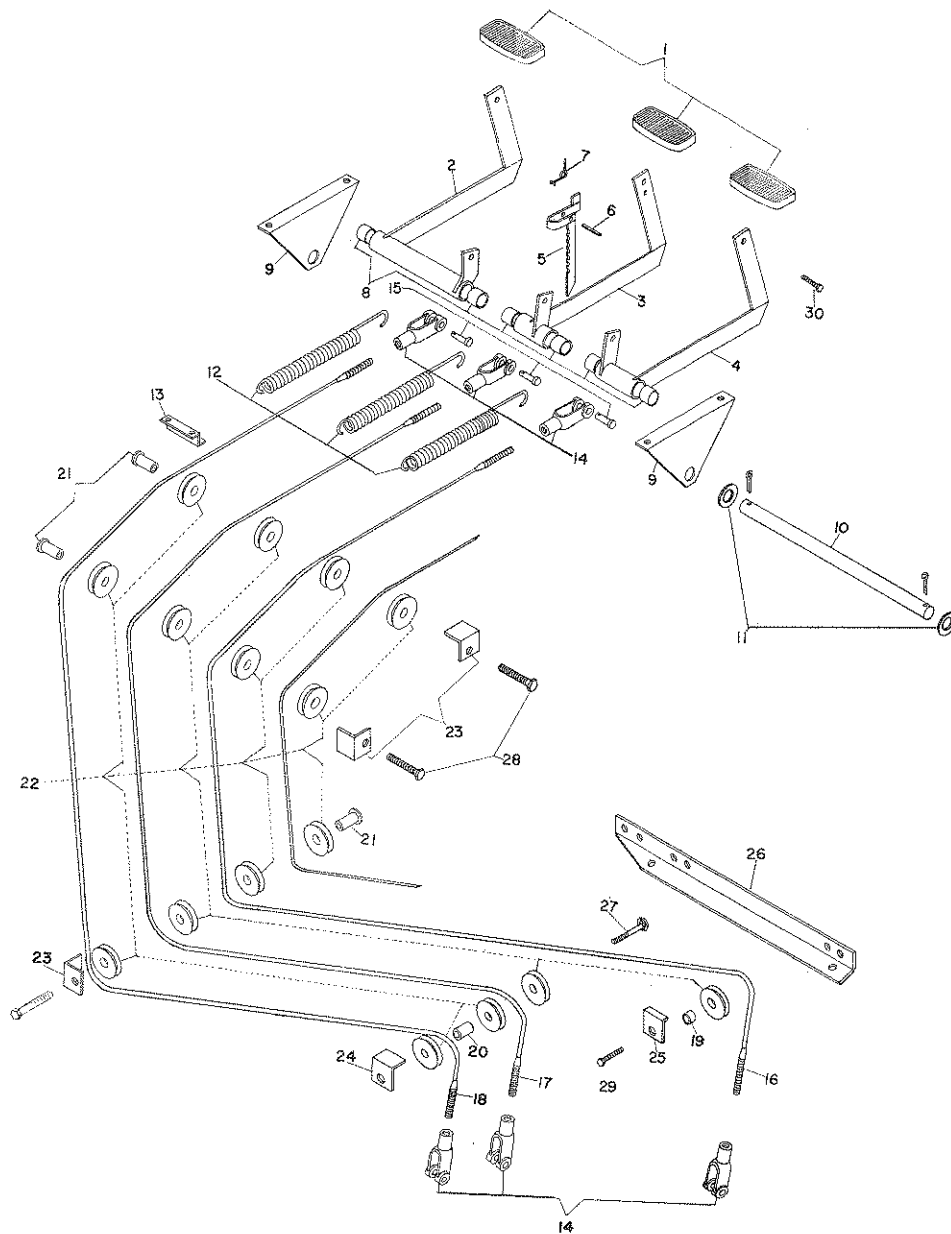 


REAR CLUTCH AND BRAKE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5979	Brake and clutch pedal pad (3 used)	16	F 5981	Brake cable R.H. (110"), 66-
2	F 5946	Clutch pedal lever 66-	17	F 5982	Brake cable L.H. (92"), 66-
3	F 5944	L.H. brake lever, 66-	18	F 5983	Clutch operating cable (96"), 66-
4	F 5945	R. H. brake lever, 66-	19	F 4068	Bushing for F 4067 roller
5	F 5984	Brake pedal lock, 66-	20	F 6057	Bushing for three roller sheave
6		1/4" x 1-1/2" roll pin	21	F 181	Bushing for four roller sheave (3 used)
7	F 4210	Spring for F 5976 brake release	22	F 4067	Roller for brake and clutch pulley
8	F 6054	Bushing for clutch and brake levers 1" x 1-1/4" x 1"	23	F 5989	Shield for brake, clutch and throttle pulleys, 66-
9	F 6055	Brake cross shaft support (2 used)	24	F 5990	Shield for brake and clutch pulley, 66-
10	F 5980	Brake pedal cross shaft, 66-	25	F 994	Shield for brake pulley
11		1" washer	26	F 5991	Cable pulley mounting bracket, 66-
12	F 7095	Brake and clutch return spring	27		3/8" x 2-1/2" carriage bolt
13	F 6077	Brake return spring anchor	28		3/8" x 2-1/2" N.C.C.S.
14	F 5075	Clevis, 5/16" for brake and clutch cable	29		1/4" x 1" N.C.C.S.
15		5/16" clevis pin	30		1/4" x 1" N.C.C.S.

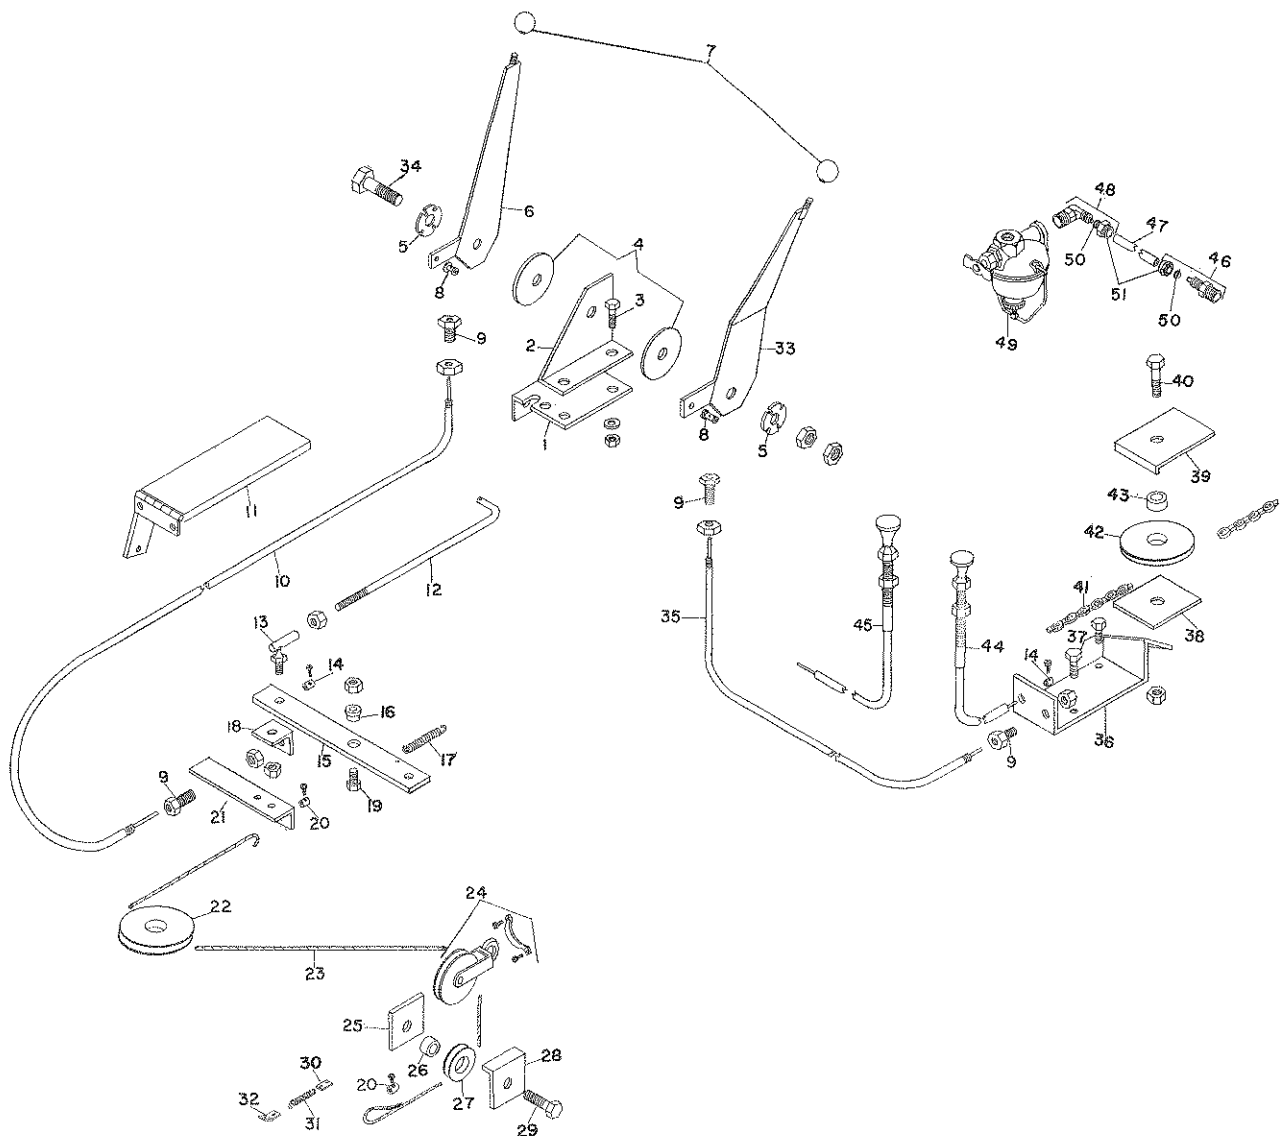 


FRONT AND REAR THROTTLE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6035	Base bracket for throttle levers	29		1/4" x 1-1/4" cap screw
2	F 6036	Top bracket for throttle levers	30	F 5862	Strap, spring to gov. lever
3		5/16" x 3/4" cap screw	31	F 6063	Gov. anti-surge spring
4	F 5546	Friction disc (2 used)	32	F 5863	Spring anchor angle
5	F 5551	Conical washer (2 used)	33	F 6033	Front throttle lever
6	F 6034	Rear throttle lever	34		3/8" x 1-3/4" cap screw
7	F 5554	Knob for throttle levers	35	F 6044	Front throttle wire conduit 109"
8	F 5545	Swivel fastener (2 used)		F 6045	Front throttle wire 114"
9	F 5559	Beech nut w/nut and washer (4 used)	36	F 6090	Pulley holder and throttle stop
10	F 6046	Rear throttle wire conduit, 28"	37		No. 10 sheet metal screw
	F 6047	Rear throttle wire, 33"	38	F 995	Plate for F 4067 roller
11	F 5985	Traction throttle pedal w/hinge	39	F 994	Shield for F 4067 roller
12	F 5977	Traction throttle rod	40		1/4" x 1-1/4" cap screw
13	F 1294	Ball joint	41	F 6091	Chain for throttle 18"
14	F 5080	Throttle stop	42	F 4067	Roller
15	F 5986	Traction throttle wobble arm	43	F 4068	Bushing for F 4067 roller
16	F 1461	Bushing	44	F 5069	Front motor choke assembly
17	F 4115	Spring	45	F 5070	Rear motor choke assembly
18	F 5987	Traction throttle cable angle stop	46	F 5232	Straight fitting for fuel line (268P-1/4" x 1/8")
19		5/16" x 1" cap screw	47	F 6092	Fuel line (rear) 65"
20	F 5861	Throttle cable clamp		F 6093	Fuel line front 10'
21	F 5988	Traction throttle cable anchor angle	48	F 5233	Elbow fitting for fuel line (269P-1/4" x 1/8")
22	F 4067	Roller (part of four roller pulley)	49	F 5299	Fuel sediment bowl and shut off valve (2 used)
23	F 5561	Throttle cable 10' - 10"			
24	F 5179	Pulley w/swivel			
25	F 6089	Plate for F 4014 roller			
26	F 4015	Bushing for F 4014 roller			
27	F 4014	Roller, throttle cable			
28	F 5092	Cable sheave clip	50	F 6126	Poly-sleeve for F 5233 fitting
			51	F 6127	Brass nut for F 5233 fitting

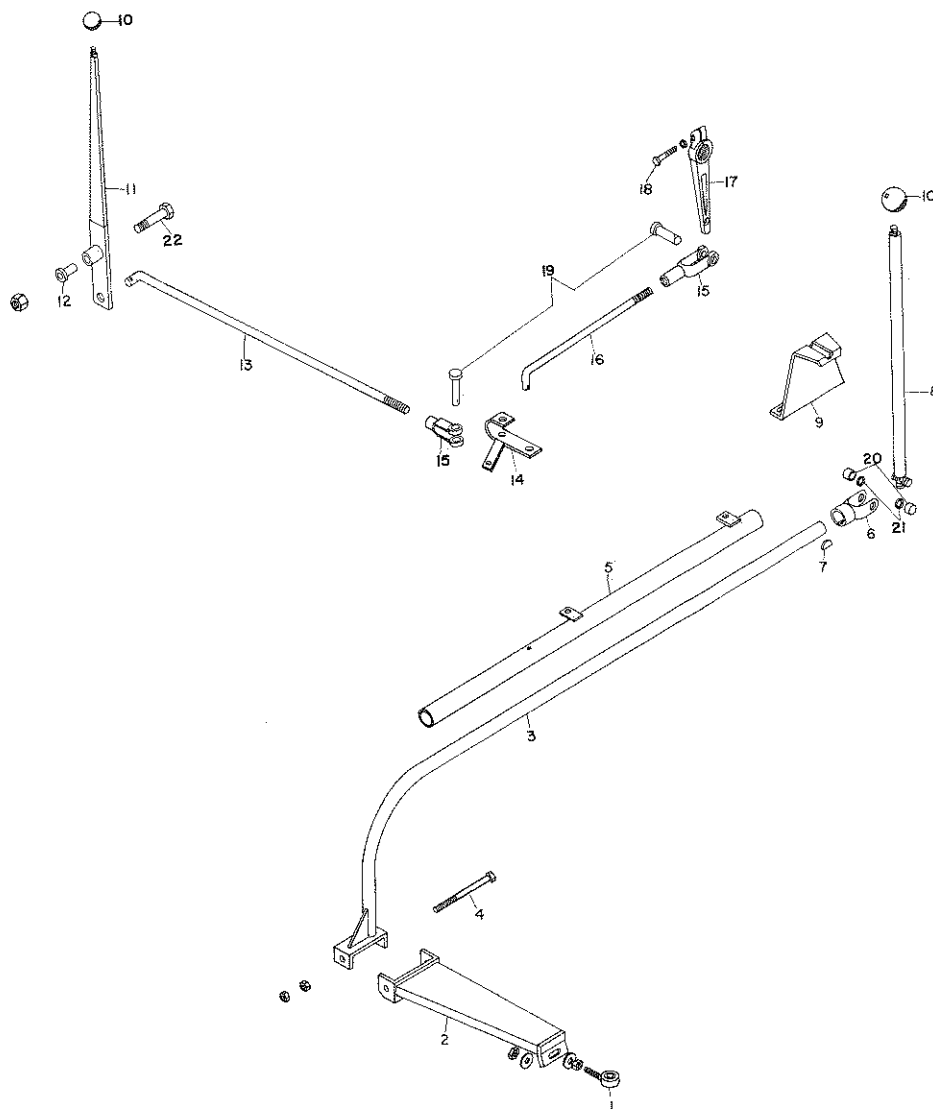 


FRONT CLUTCH AND GEAR SHIFT CONTROLS

REF. NO.	PART NO.	DESCRIPTION
1	F 5992	Swivel bearing for shift bar
2	F 6030	Shift bar
3	F 6028	Gear shift rod
4		3/8" x 5-1/4" N.C.C.S.
5	F 6029	Gear shift tube w/bushings
6	F 6070	Shift rod yoke
7		1/4" x 1-1/8" woodruff key
8	F 6027	Shift lever
9	F 6026	Shift lever bracket
10	F 5055	Gear shift lever and clutch lever knob
11	F 6022	Front clutch lever
12	F 181	Bushing
13	F 6025	Front clutch rod 41"
14	F 6023	Front clutch bell crank
15	F 5048	1/2" clevis (2 used)
16	F 6024	Front clutch cross rod 22" (300 only)
	F 5169	Front clutch cross rod 18-1/2" (200 only)
17	F 6071	Engine clutch lever (VH4D only)
	F 6072	Engine clutch lever for VG4D and V461D
18		3/8" x 1-1/2" N.C.C.S.
19	F 5049	Pin for 1/2" clevis
20	F 6073	Cup for F 6070 yoke
21	F 6074	Oil seal for F 6073 cup
22		3/8" x 2-1/2" N.C.C.S.

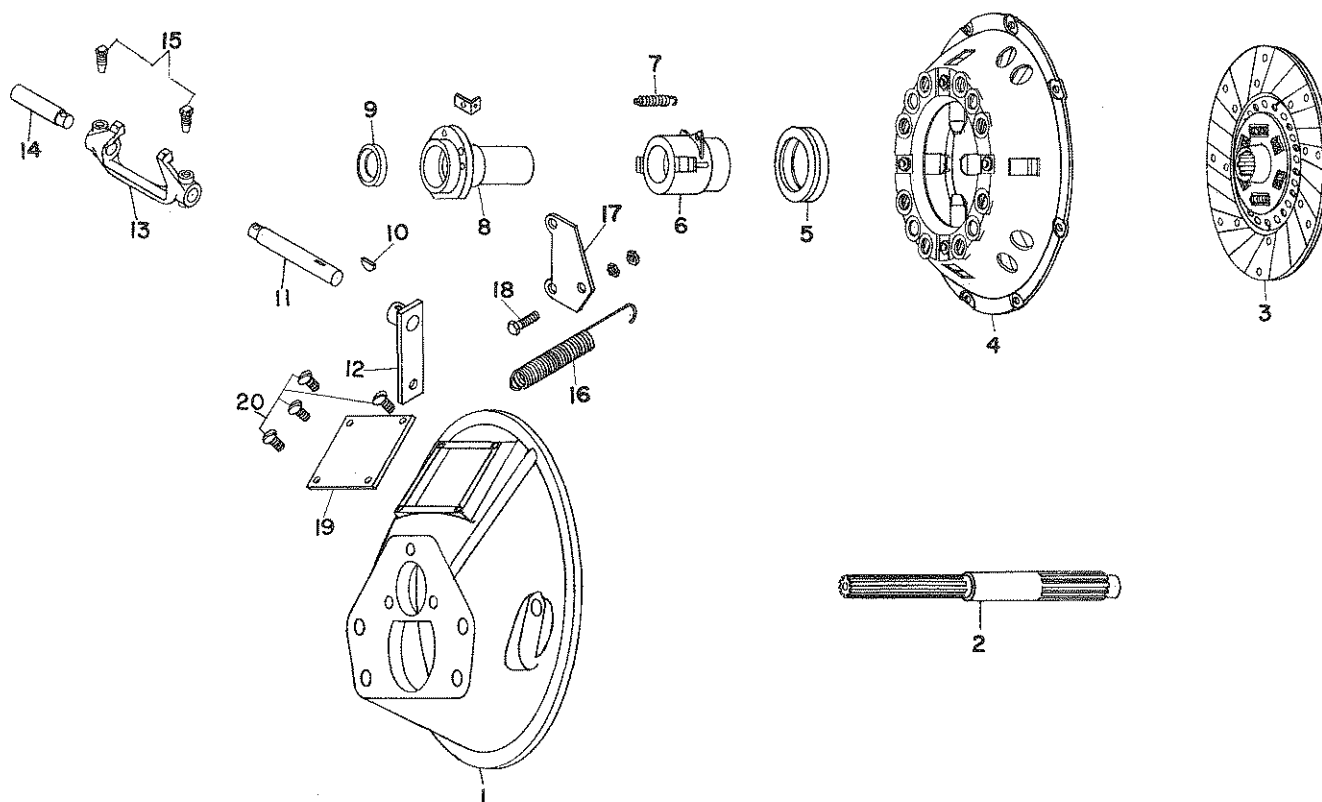 

REAR ENGINE CLUTCH

REF. NO.	PART NO.	DESCRIPTION
1	F 5943	Clutch housing
2	F 5967	Clutch and main shaft in transmission
3	F 5956	Pressure plate assembly
4	F 5955	Cover assembly
5	F 6075	Throwout bearing
6	F 5976	Bearing assembly
7	F 6053	Spring for F 5976 assembly
8	F 5968	Seal retainer for F 5976
9	F 5156	Oil seal (CR/13559)
10		3/16" x 3/4" Woodruff key
11	F 5995	Shaft for F 5993 yoke (long)
12	F 6059	Lever arm for F 5995 shaft
13	F 5993	Clutch operating yoke
14	F 5996	Shaft for F 5993 yoke (short)
15	F 5994	Set screw for operating yoke (2 used)
16	F 7095	Spring
17	F 6060	Stop bracket for drive clutch lever arm
18		5/16" x 1-1/4" N.C.C.S.
19	F 6076	Inspection cover plate
20		5/16 x 3/4 N.C.B.H.

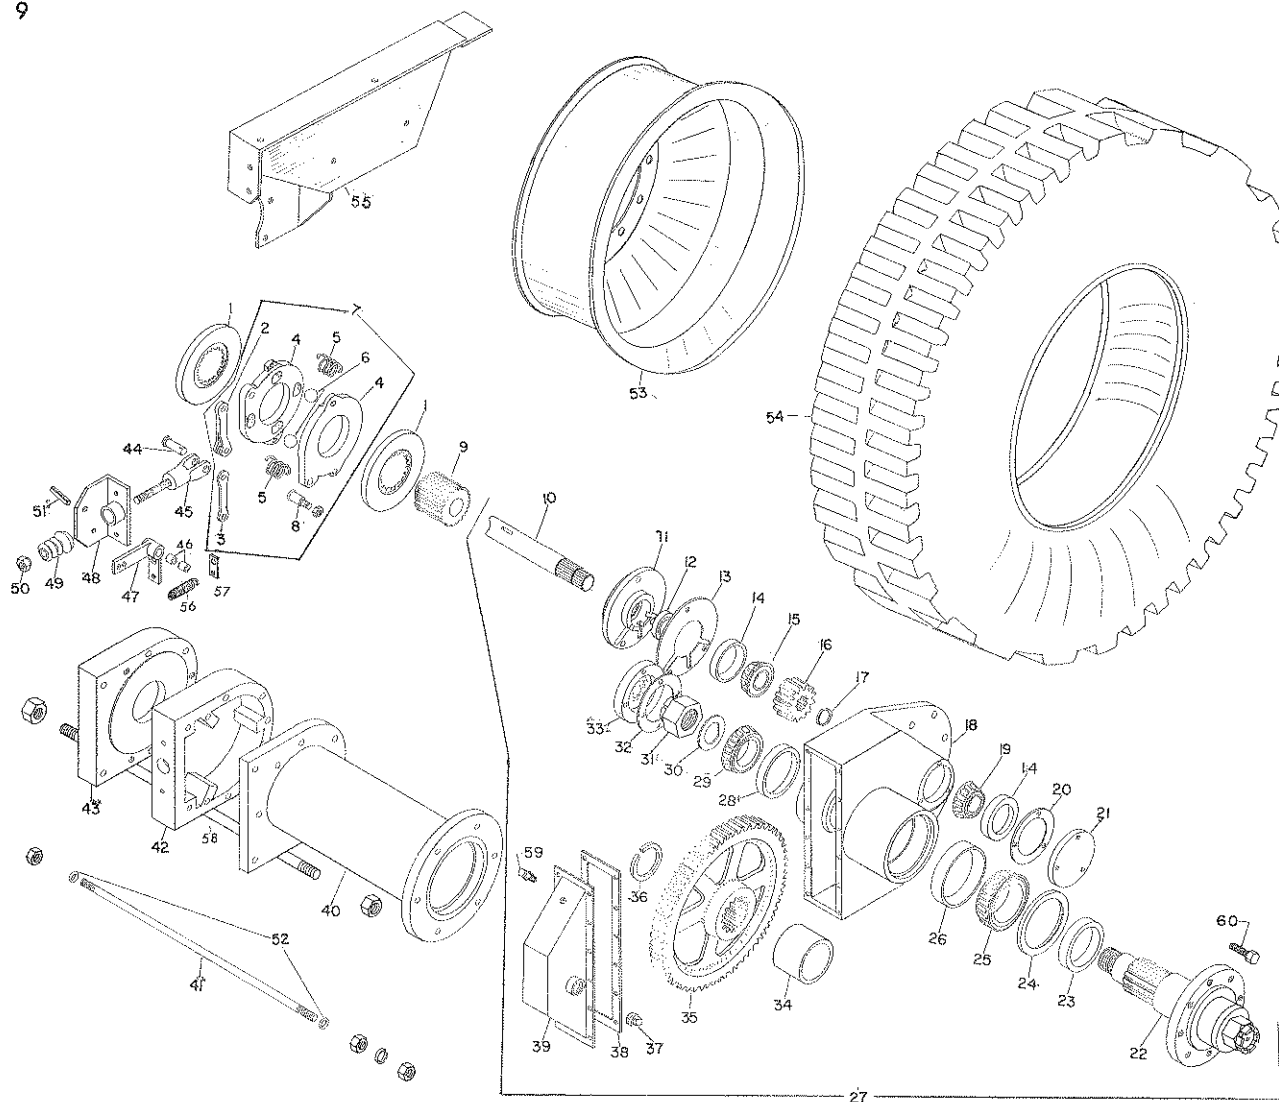 


REAR AXLE AND FINAL DRIVE

REF. NO.	PART NO.	DESCRIPTION
1	F 5794	Brake wear disc
2	F 5899	Yoke link
3	F 5900	Strap link
4	F 5898	Brake pressure plate
5	F 5901	Pressure plate spring
6	F 5902	Pressure plate ball
7	F 5903	Pressure plate complete
8	F 5904	Linkage bolt
9	F 5795	Brake hub
10	F 5791	Axle shaft, R.H. 28"
	F 5792	Axle shaft, L.H. 57-1/4" (2-tie)
	F 5793	Axle shaft, L.H. 62-1/4" (3-tie)
11	F 5801	Inside pinion bearing retainer
12	F 5806	Oil seal for axle shaft (13666 C/R)
13	F 5826	Gasket, inside pinion bearing, 1/64"
14	F 5891	Cup for F 5457 and F 5892 bearings (14282)
15	F 5457	Inner pinion bearing cone (14137A)
16	F 5452	Final drive pinion
17	F 5438	Snap ring, pinion bearing
18	F 5785	Final drive housing, R.H. and L.H.
19	F 5892	Outer axle shaft bearing (14117A)
20	F 5828	Shim .005 (steel) outside pinion bearing
	F 5829	Shim .007 (steel) outside pinion bearing
	F 5830	Shim .010 (steel) outside pinion bearing

REAR AXLE AND FINAL DRIVE


(Continued)

REF. NO.	PART NO.	DESCRIPTION
21	F 5786	Axle drive cover
22	F 5913	Wheel shaft, 8 hole, 65-
23	F 5809	Seal ring for F 5931 shaft
24	F 7035	Seal for axle shaft (255883)
25	F 7033	Outer bearing for axle shaft (33287)
26	F 7034	Outer bearing cup for F 7033 (33462)
27	F 5782	Final drive housing complete R. H. 200 and 300
	F 5783	Final drive housing complete L. H. 300 only
	F 5784	Final drive housing complete L. H. 200 only
28	F 5445	Cup for inner wheel shaft bearing (362A)
29	F 5446	Inner bearing cone for wheel shaft (368A)
30	F 5893	Wheel shaft washer
31	F 5790	Wheel shaft axle nut 1-1/2" N. F. castellated
32	F 5827	Wheel shaft bearing cover gasket 1/32"
33	F 5788	Wheel shaft cover
34	F 5808	Spacer for F 5763 gear
35	F 5763	Final drive gear (8620)
36	F 5840	Snap ring for final drive gear
37		3/4" pipe plug
38	F 5831	Gasket, drive gear cover, 1/16"
39	F 5905	Drive gear cover
40	F 5796	Axle spacer, 14-3/8" R.H. (2 and 3 tie)
	F 5797	Axle spacer 43-5/8" L.H. (2 tie only)
	F 5798	Axle spacer 48-5/8" L. H. (3 tie only)
41	F 6132	Tie bolt, 5/8" x 25"
42	F 5799	Brake housing
43	F 5800	Brake spacer R. H.
	F 5890	Brake spacer L. H.
44	F 5076	Clevis pin
45	F 5894	Brake clevis
46	F 5813	Bushing for brake lever
47	F 5812	Brake lever w/bushing
48	F 5814	Brake lever mount
49	F 5824	Dust cover for brake rod
50	F 214	Nut for brake clevis
51	F 5547	Roll pin 1/4" x 1"
52	FT 53	"O" ring
53	F 5896	Rear wheel, R. H. (9:00 x 20)
	F 5837	Rear wheel, R. H. (flotation)
	F 5895	Rear wheel, L. H. (9:00 x 20)
	F 5897	Rear wheel, L. H. (flotation)
54	F 5268	N. D. tire (9:00 x 20)
	F 5269	Tube (9:00 x 20)
	F 5270	Flap (9:00 x 20)
	F 5648	Flotation tire, 8 ply L. H. (15 x 16A)
	F 5275	Flotation tire, 6 ply R. H. (15 x 16A)
	F 5276	Tube, 15 x 16A flotation
	F 5596	Flap for F 5275 and F 5648 tires
55	F 5833	Final drive support plate, R. H.
56	F 6053	Spring, brake release
57	F 6056	Brake release spring anchor
58	F 4081	Truss rod 3/4" x 17-1/2"
59	F 1720	Vent
60	F 5910	Lug bolt

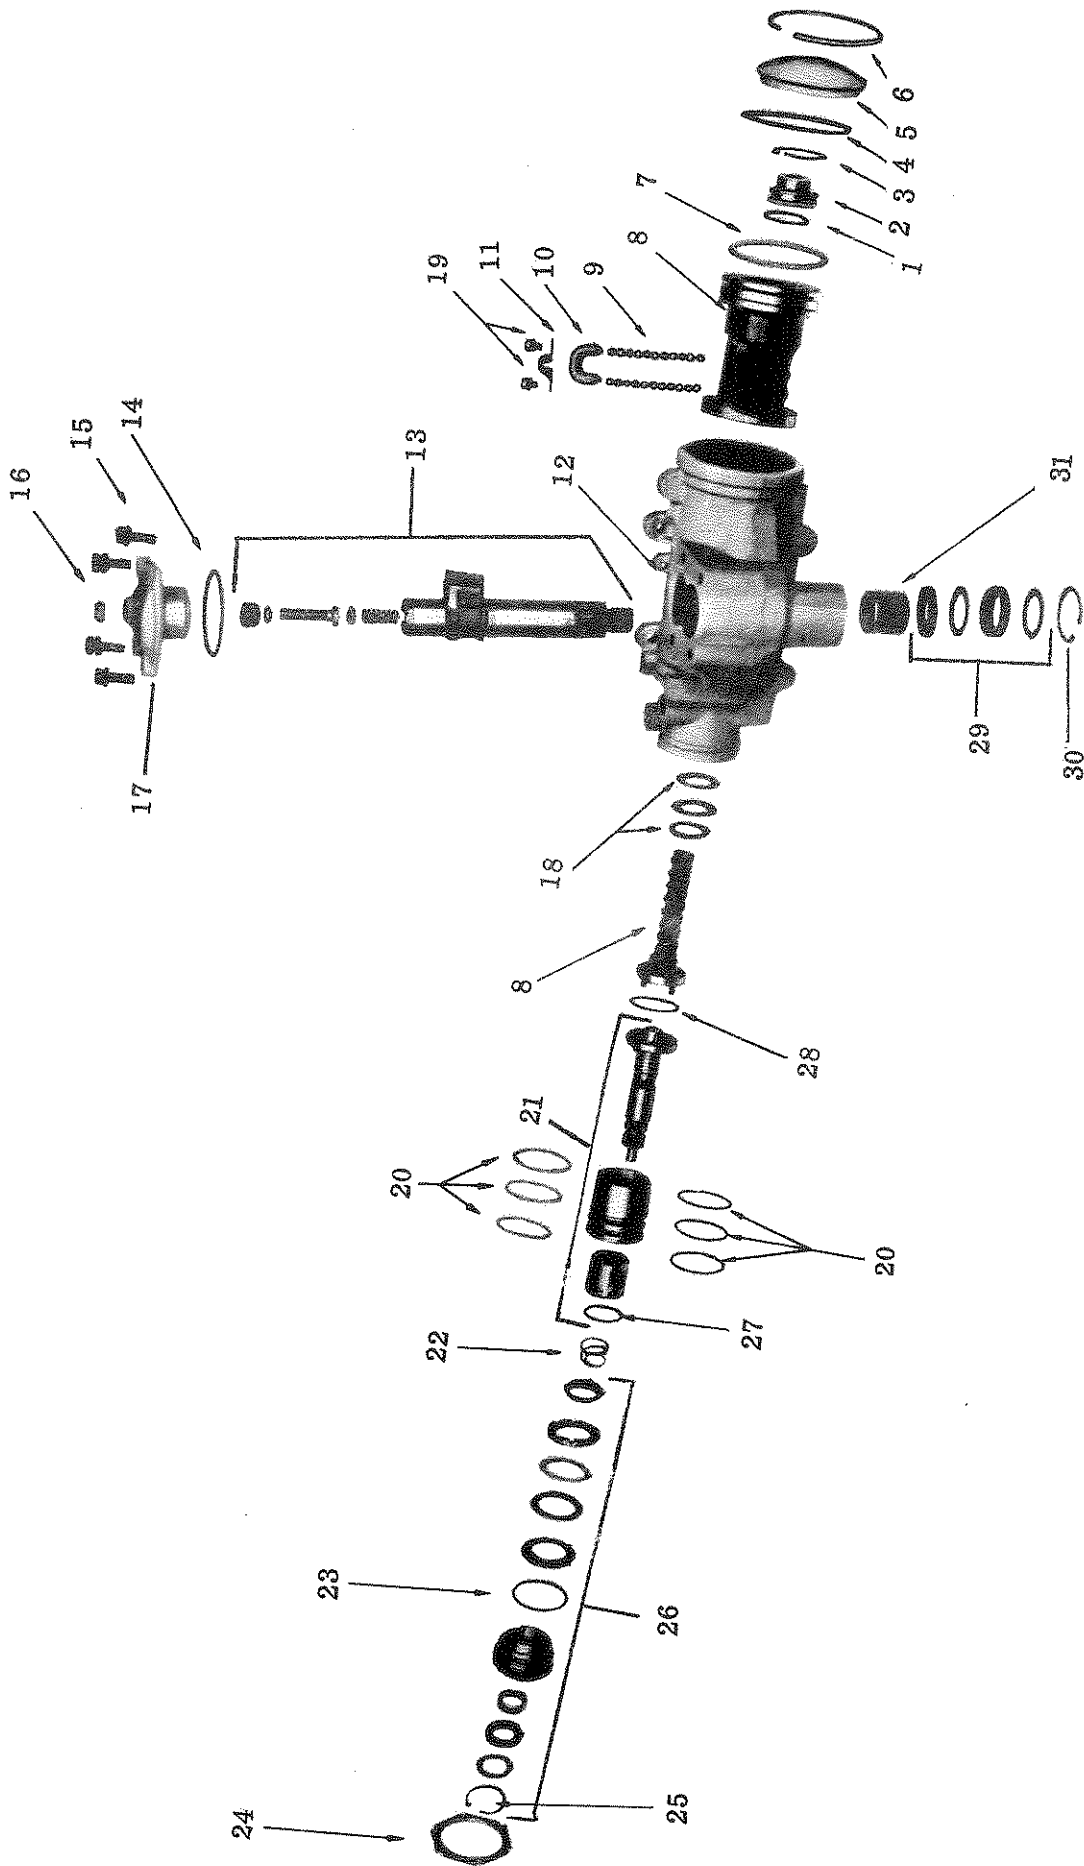 

STEERING GEAR ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5686625	O-Ring Seal
2	F 5689695	Plug, rack piston end
4	F 5686577	O-Ring Seal
5	F 5686815	Plug, housing end
6	F 5686814	Ring, end plug retainer
7	F 5687958	Ring, piston
	F 5688034	Seal, piston ring back-up
8	F 5688752	Rack-piston-nut assembly
9	F 5685706	Recirculating ball kit (.28117 dia.)
	F 5685707	Recirculating ball kit (.28125 dia.)
	F 5685708	Recirculating ball kit (.28133 dia.)
	F 5685709	Recirculating ball kit (.28141 dia.)
	F 5685710	Recirculating ball kit (.28149 dia.)
	F 5685711	Recirculating ball kit (.28157 dia.)
10	F 5688765	Guide, ball return
11	F 5686539	Clamp, return guide
12	F 5689834	Housing assembly
13	F 5687184	Pitman shaft gear service assembly
14	F 5686570	Seal, side cover
15	F 179839	Bolt, side cover (3/8 x 1 NC)
16	F 5686372	Nut, lash adjuster
17	F 5689021	Cover assembly, housing side
18	F 5687186	Lower thrust bearing service kit
19	F 5696151	Screw and Lockwasher assembly
20	F 5687182	Valve ring and back-up seal service kit
21	F 5690033	Pin and valve assembly
22	F 5687252	Spring, spool
23	F 5686527	O-Ring
24	F 5690698	Nut, adjuster plug lock
25	F 5684820	Ring, Upper end plug oil seal retainer
26	F 5686866	Adjuster plug assembly
27	F 5686546	O-Ring
28	F 5686526	O-Ring
29	F 5685355	Pitman shaft seal service kit
30	F 5682898	Ring, retaining (Pitman shaft seal)
31	F 5689836	Bearing, pitman shaft gear
	F 5689698	O-Ring seal service kit
	F 5689697	Master seal service kit
	F 5687185	Upper thrust bearing kit
	F 5687183	Adjuster plug seal service kit
	F 5691895	Complete steering gear assembly

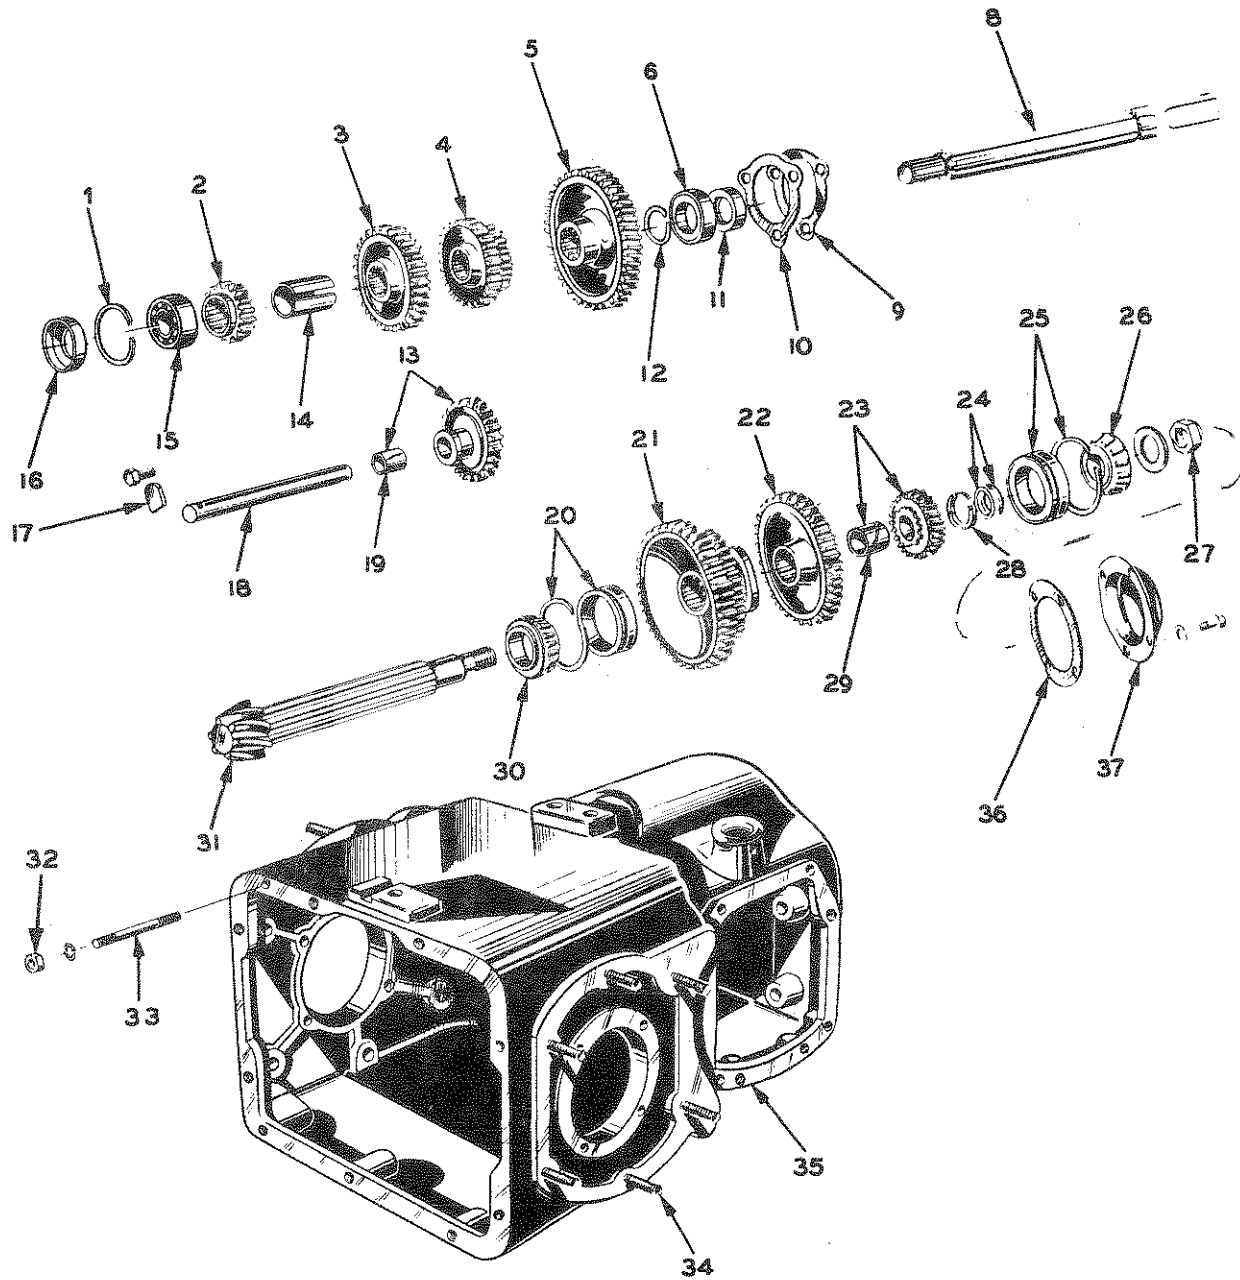 


TRANSMISSION ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5301	Mainshaft rear bearing snap ring
2	F 5302	Mainshaft 1st gear
3	F 5303	Mainshaft 3rd gear
4	F 5304	Mainshaft 2nd and reverse gear
5	F 5305	Mainshaft 4th gear
6	F 5306	Mainshaft front bearing
8	F 5967	Clutch and main transmission shaft
9	F 5307	Mainshaft front bearing cap gasket
10	F 5308	Mainshaft front bearing cap shim (.004) (A.R.)
10A	F 5309	Mainshaft front bearing cap shim (.007) (A.R.)
10B	F 5310	Mainshaft front bearing cap shim (.010) (A.R.)
11	F 5156	Clutch and mainshaft front oil seal
12	F 5312	Mainshaft locating snap ring
13	F 5313	Reverse idler gear assembly - includes Item #19
14	F 5314	Mainshaft 1st and 3rd gear spacer
15	F 5306	Mainshaft rear bearing
16	F 5316	Mainshaft rear bearing oil cup
17	F 5317	Reverse idler lock
18	F 5318	Reverse idler shaft
19	F 5319	Reverse idler gear bushing
20	F 5320	Pinion shaft rear bearing - includes Item #30
21	F 5321	Pinion shaft 1st and 3rd gear
22	F 5322	Pinion shaft 2nd and reverse gear
23	F 5323	Pinion shaft 4th gear assembly - includes Item #29
24	F 5324	Pinion shaft front bearing shim (.003) (A.R.)
24A	F 5325	Pinion shaft front bearing shim (.005) (A.R.)
24B	F 5326	Pinion shaft front bearing shim (.010) (A.R.)
25	F 5327	Pinion shaft front bearing - includes Item #26
26		See Item # 25
27	F 5329	Pinion shaft front bearing adjusting nut
28	F 5332	Pinion shaft front bearing spacer
29	F 5331	Reverse idler gear bushing
30		See Item #20
31	F 5330	Pinion shaft - includes Item #47, Page 16
32		P.T.O. locating stud nut, 3/8" N. F. hex
33		P.T.O. locating stud, 3/8" x 1-1/2" N.F. N.C. stud
34		Axle studs, 9/16" x 6" N.C. C.S. w/9/16" spring lock washer (12 used)
35	F 5858	Transmission case
36	F 5333	Pinion shaft front bearing cap gasket
37	F 5334	Pinion shaft front bearing cap
*	F 5942	Transmission & differential assy. for fabricated axle housings
*		P.T.O. locating stud nut spring lock washer, 3/8"
*		Reverse idler shaft lock screw, 3/8" x 5/8" N.C. C.S.
*		Pinion shaft front bearing cap screw, 3/8" x 1" N.C. C.S. (6 used)
*		P. S. front bearing cap screw lock washer, 3/8" spring, (6 used)
N.I.		Reverse idler lock screw lock washer, 3/8" internal star

* - Illustrated, but not numbered

N.I. - Not illustrated

 
A.R. - As required

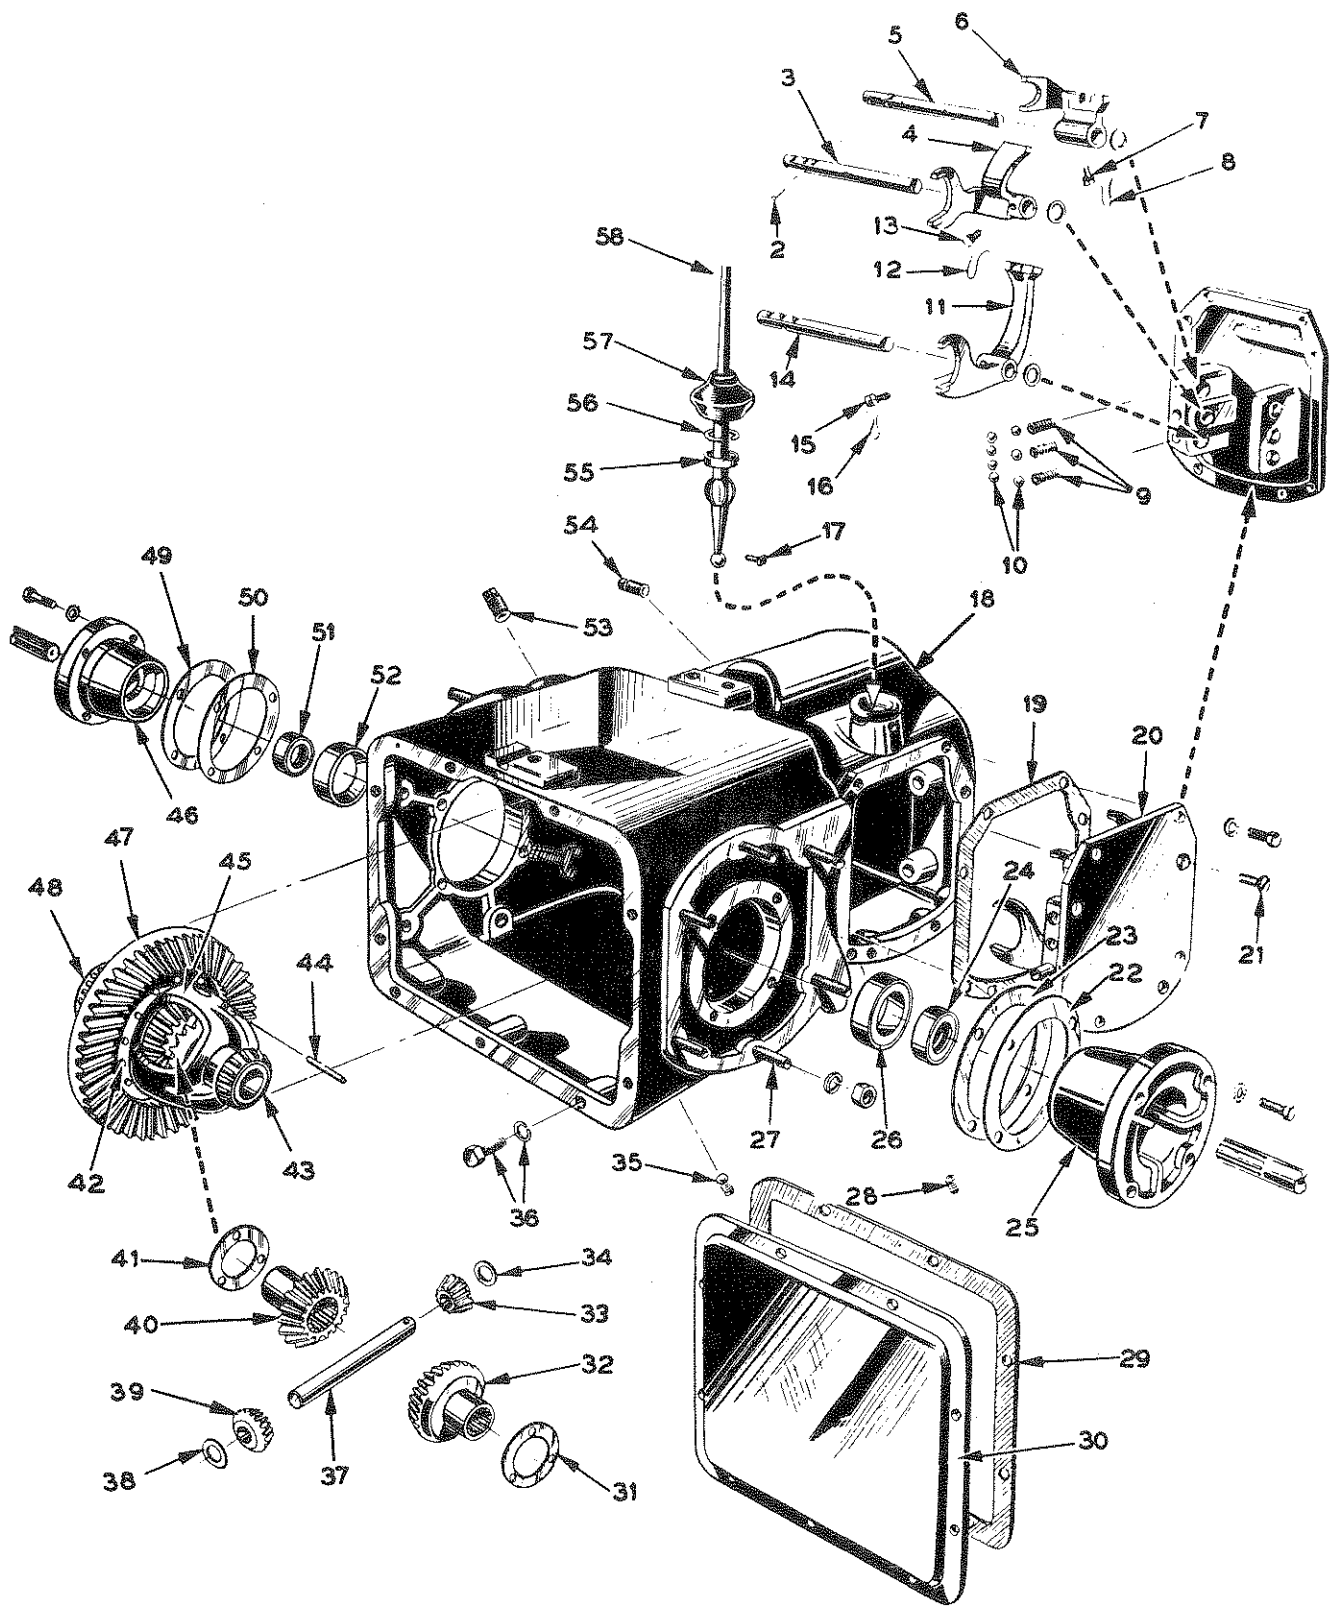

DIFFERENTIAL ASSEMBLY


16

REF. NO.	PART NO.	DESCRIPTION
2	F 5341	Interlock cross pin
3	F 5342	2nd and 4th shift rail
4	F 5343	2nd and 4th shift fork
5	F 5344	Reverse shift rail
6	F 5345	Reverse shift fork
7	F 5346	Shift fork lock screw
8	F 5347	Shift fork lock screw lock wire
9	F 5348	Mesh lock spring
10	F 5349	Mesh lock ball
11	F 5360	1st and 3rd shift fork
12	F 5347	Lock screw lock wire
13	F 5346	Lock screw
14	F 5351	1st and 3rd shift rail
15	F 5346	Lock screw
16	F 5347	Lock wire
17	F 5352	Pivot pin
18	F 5858	Transmission case
19	F 5353	Control cover gasket
20	F 5354	Control cover
21		Control cover screw, 3/8" x 1", F.H. M.B.
22	F 5356	Differential bearing carrier shim (.004)
25	F 5357	Differential bearing carrier shim (.010)
24	F 5358	Differential bearing carrier oil seal
25	F 5359	Differential bearing carrier assembly - includes Item 24
26		Differential bearing cup - See Item #43
27		Axle stud, 9/16" x 6" N.C. C. S. w/9/16" spring lockwasher
28		Drain plug, 1/2" pipe
29	F 5401	P.T.O. housing gasket
30	F 5402	Differential cover plate
31	F 5403	Differential side gear thrust washer
32	F 5404	Differential side gear
33	F 5405	Differential pinion gear
34	F 5406	Differential pinion gear thrust washer
35		Drain plug, 1/2" pipe
36		P.T.O. housing screw and spring lock washer, 3/8" x 1", N.C. C.S. w/ 3/8" washer (8 used)
37	F 5408	Differential pinion pin
38	F 5406	Differential pinion gear thrust washer
39	F 5405	Differential pinion gear
40	F 5404	Differential side gear
41	F 5403	Differential side gear thrust washer
42	F 5409	Ring gear rivet (12 used)
43	F 5410	Differential bearing (includes Item #26)
44	F 5411	Differential pinion pin lock pin
45	F 5412	Differential case
46	F 5359	Differential bearing carrier assembly (includes Item #51)
47	F 5330	Ring gear (includes Item #31, illustration page 13)
48	F 5410	Differential bearing (includes Item #52)
49	F 5357	Differential bearing carrier shim (.010) (A.R.)
50	F 5356	Differential bearing carrier shim (.004) (2 used)
51	F 5358	Differential carrier oil seal
52		Differential bearing cup (See item #43)
53		Filler plug, 1" pipe
54		Filler plug, 1/2" pipe
55	F 5414	Shift lever pivot washer
56	F 5415	Shift lever pivot washer ring
57	F 5416	Shift lever dust cover
58	F 6133	Shift lever on transmission, 66-
*		Control cover screw, 3/8" x 1", N.C. C.S.
*		Control cover screw spring lockwasher, 3/8"
*		Differential bearing carrier screw, 1/2" x 1-1/2" N.C. C.S.
*		Differential bearing carrier screw spring lockwasher, 1/2"
	F 5350	Ring, pinion and differential assembly - Includes items 31, 32, 33, 34, 37, 38, 39, 40, 41, 42, 44, 45, 47 and item 31 on page 14)
*	F 5942	Transmission and differential assy. for fabricated axle housing
*		- Illustrated but not numbered

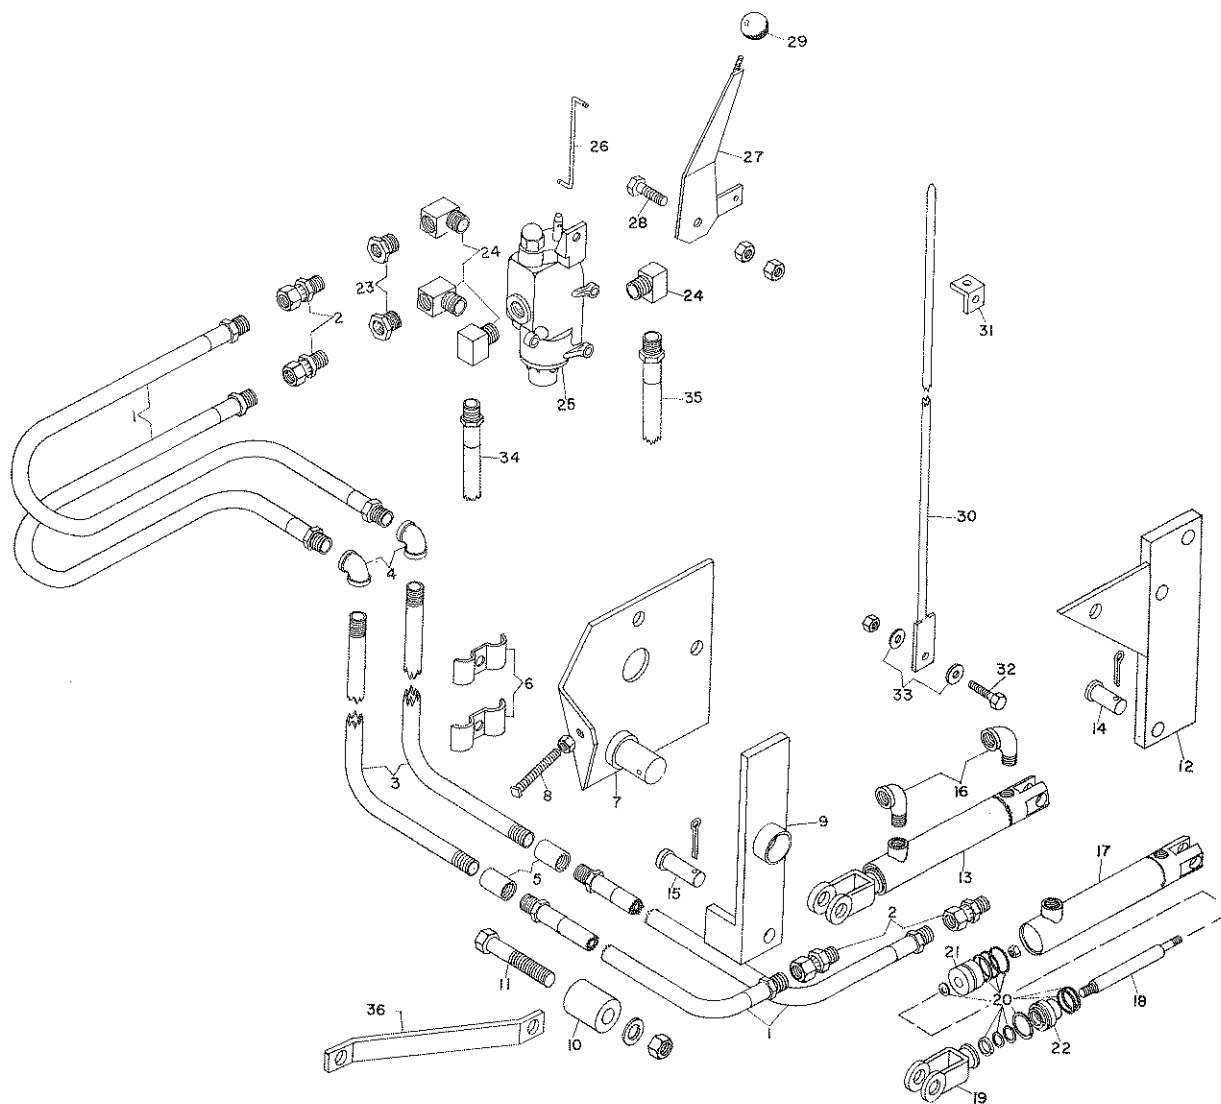 


HYDRAULIC LIFT FOR PICKUP

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 136	Pressure hose, 24" (4 used)	20	F 6051	Ring kit for F 5953 cylinder (not sold separately)
2	FT 107	Union Swivel	21	F 6085	Piston
3	F 6020	Ridgid hydraulic tube (2 used)	22	F 6086	Cylinder head
4	FT 82	1/4" pipe elbow	23	FT 103	1/4" x 3/8" pipe bushing
5		1/4" pipe coupling	24	F 6037	Brass elbow for F 5952 valve (4 used)
6	F 6021	Clamp for F 6020 tubes (2 used)	25	F 5952	Hydraulic control valve
7	F 6015	Pickup ram plate	26	F 6019	Linkage rod
8		1/2" x 2-1/2" set screw	27	F 6018	Hydraulic pickup control lever
9	F 6014	Forward pivot arm			5/16" x 1-1/4" cap screw
10	F 6016	Lift bumper on pickup	28	F 5554	Knob for control lever
11		1/2" x 3-3/4" N.F.H.T. cap screw	30	F 6087	Pickup lift indicator rod
12	F 6013	Anchor strap	31	F 6088	Guide for F 6087
13	F 5953	Hydraulic cylinder for pickup	32		1/4" x 1-1/4" R.H. stove bolt
14		1/2" x 1-3/8" pin	33		1/4" washer (2 used)
15		1/2" x 1-3/4" pin	34	FT 169	Pressure hose (pump to valve) 35"
16	FT 18	Street elbow, 1/4"	35	FT 150	Pressure hose (valve to bypass) 90"
17	F 6082	Tube assembly only	36	F 6134	Lift bumper brace
18	F 6083	Piston rod			
19	F 6084	Clevis			

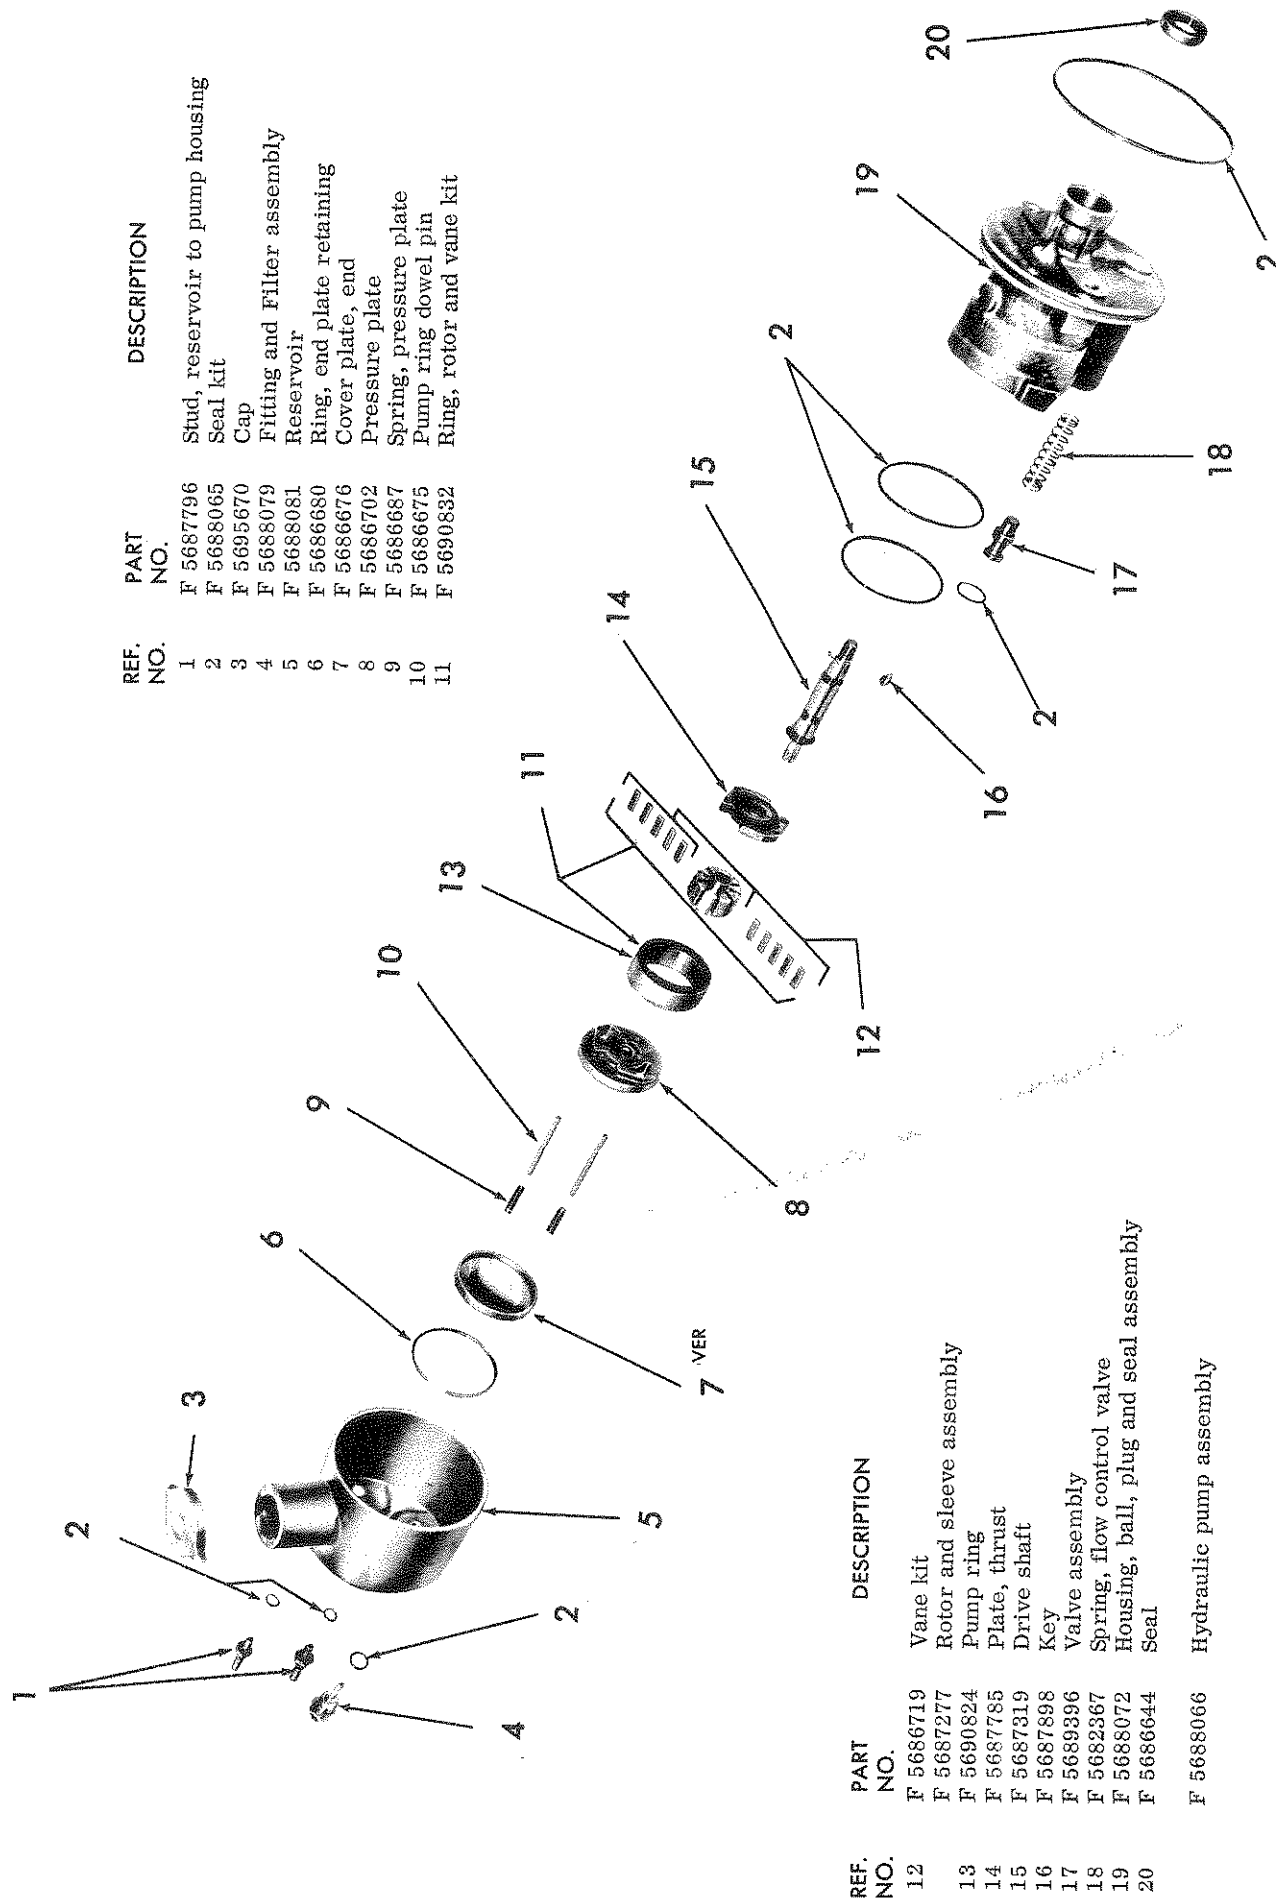 


REF. NO.	PART NO.	DESCRIPTION
1	F 5687796	Stud, reservoir to pump housing
2	F 5688065	Seal kit
3	F 5695670	Cap
4	F 5688079	Fitting and Filter assembly
5	F 5688081	Reservoir
6	F 5686680	Ring, end plate retaining
7	F 5686676	Cover plate, end
8	F 5686702	Pressure plate
9	F 5686687	Spring, pressure plate
10	F 5686675	Pump ring dowel pin
11	F 5690832	Ring, rotor and vane kit

REF. NO.	PART NO.	DESCRIPTION
12	F 5686719	Vane kit
13	F 5687277	Rotor and sleeve assembly
14	F 5690824	Pump ring
15	F 5687785	Plate, thrust
16	F 5687319	Drive shaft
17	F 5687898	Key
18	F 5689396	Valve assembly
19	F 5682367	Spring, flow control valve
20	F 5688072	Housing, ball, plug and seal assembly
21	F 5686644	Seal
	F 5688066	Hydraulic pump assembly

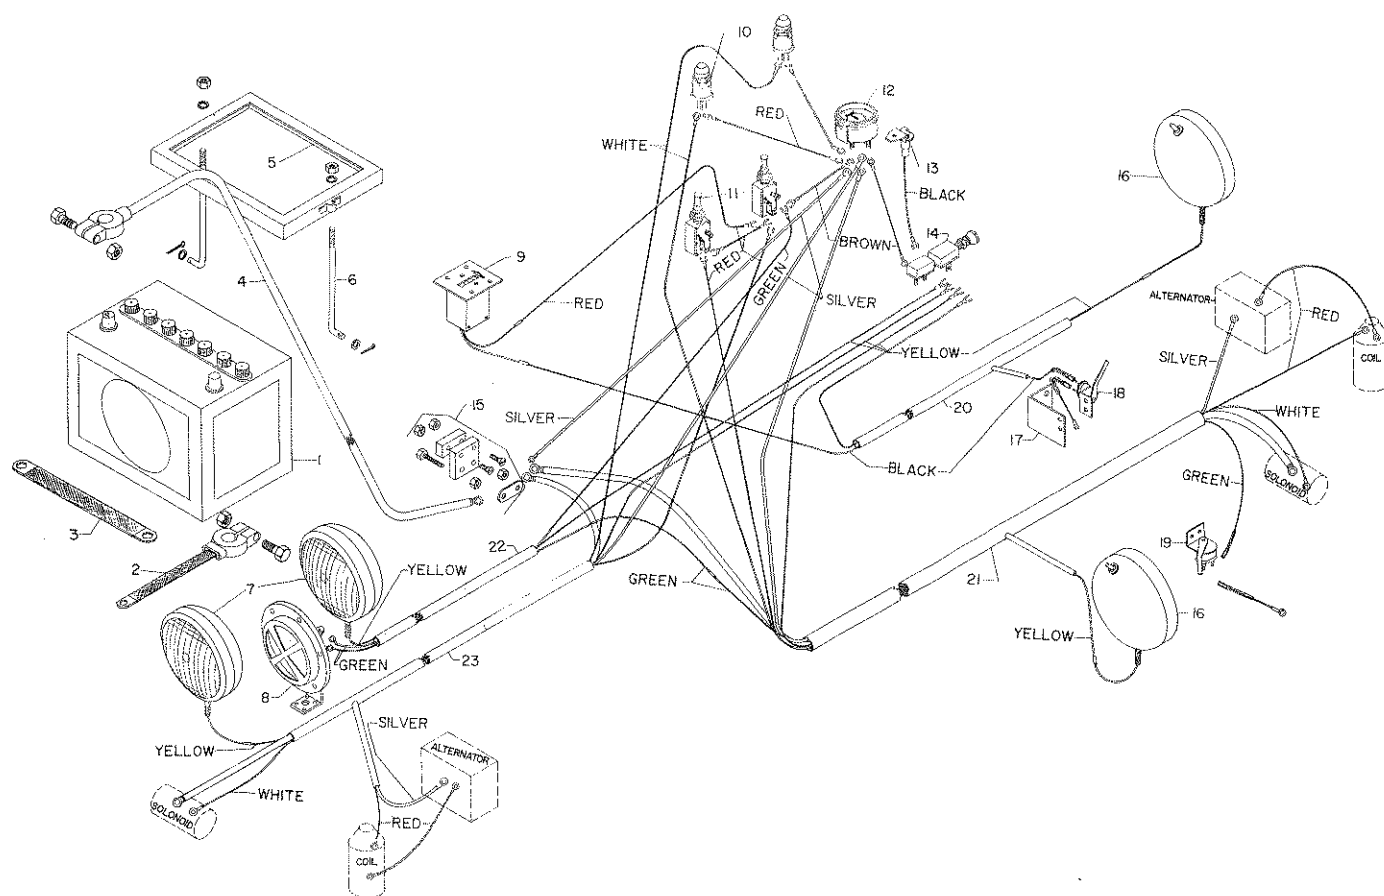 


ELECTRIC SYSTEM

REF. NO.	PART NO.	DESCRIPTION
1	F 1499	Battery, 12V
2	F 5869	Battery ground cable
3	F 6006	Ground strap, deck to frame
4	F 6005	Battery cable, insulated
5	F 5499	Battery hold down bracket
6	F 455	Bolt for battery hold down
7	F 1645	Light, front 12V sealed beam (2 used)
	F 5842	Sealed beam unit, 12V
8	F 1497	Horn, wire alarm, 12V
9	F 5954	Bale counter, electronic
10	F 5237	Starter switch (2 used)
	F 5236	Rubber cap for starter switch (2 used)
11	F 5235	Ignition switch (2 used)
12	F 6040	Ammeter
13	F 5234	Instrument panel light socket
14	F 862	Light switch
15	F 6039	Junction block assembly
16	F 1644	Light, rear combination, 12V sealed beam (2 used)
	F 5941	Sealed beam unit 12V (Comb. red and clear)
17	F 5961	Bracket for sending unit (bale counter)
18	F 5978	Sending unit for bale counter
19	F 946	Switch for wire alarm
20	F 6114	Wire harness (bale counter and light)
21	F 6115	Wire harness (rear motor)
22	F 6116	Wire harness (horn and light)
23	F 6117	Wire harness (front motor)

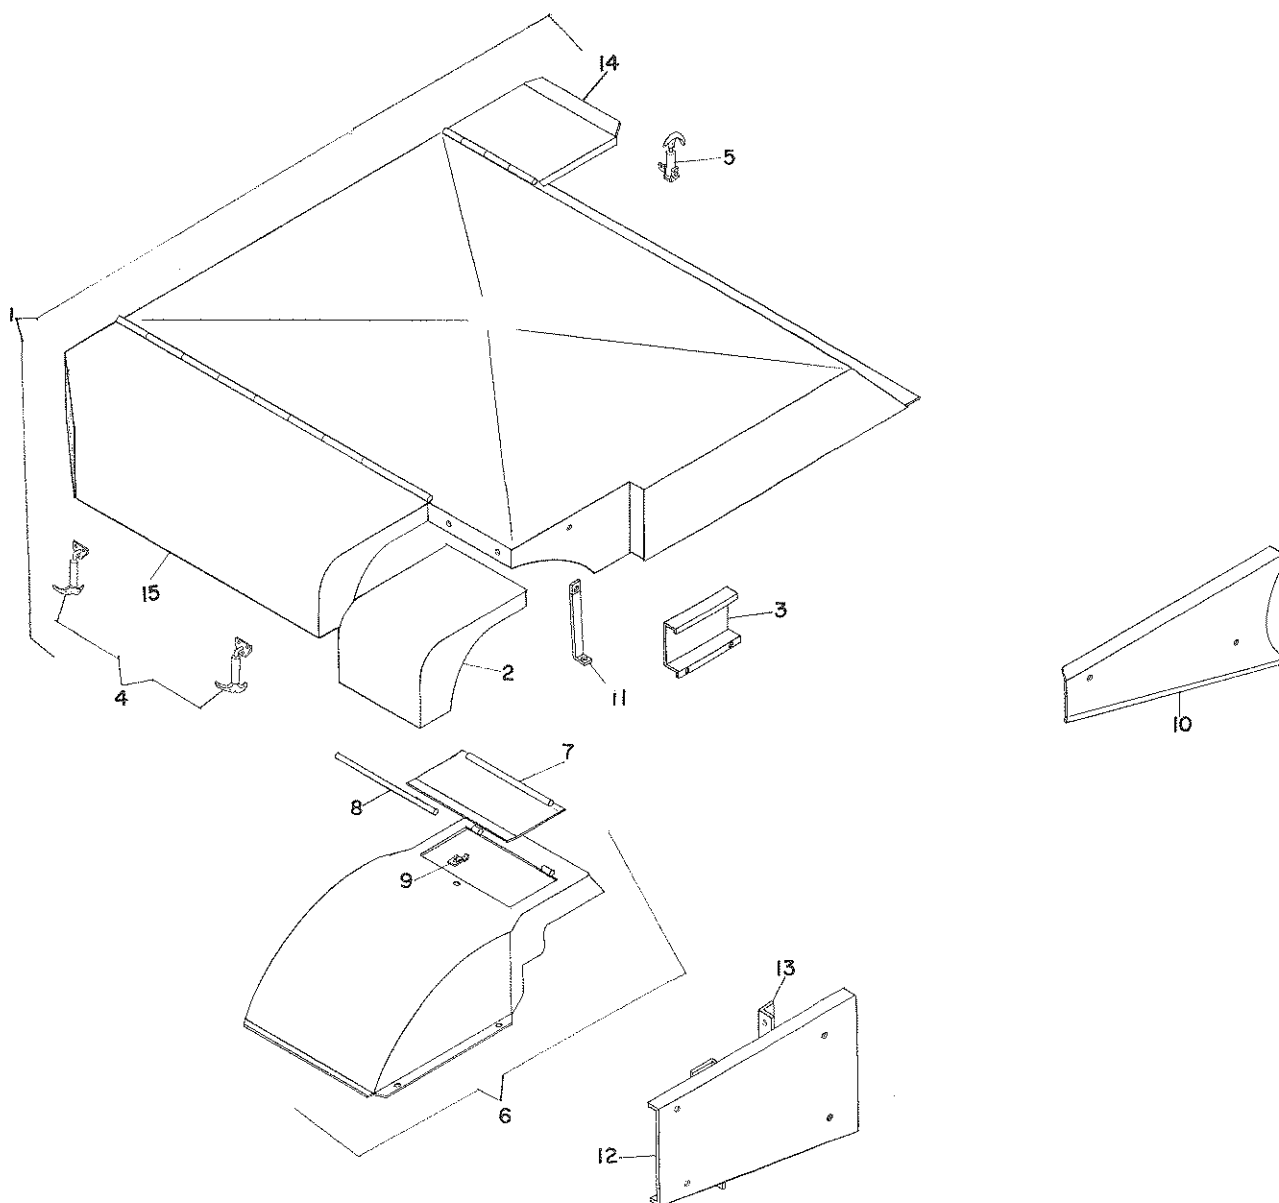 


SHIELDS

REF. NO.	PART NO.	DESCRIPTION
1	F 5971	Shield over pickup complete, 66-
2	F 6104	Front section (not hinged)
3	F 6062	Shield for tension control chain
4	F 7166	Catch for access door
5	F 853	Catch for tool box cover
6	F 5969	Bull gear shield complete, 200 only
	F 5970	Bull gear shield complete, 300 only
	F 7550	Rubber grommet for mounting shield
7	F 6106	Inspection cover
8	F 6107	Hinge pin for inspection cover
9	F 6108	Catch for inspection cover
10	F 5972	Knotter chain shield
11	F 6105	Mounting bracket for shield left side
12	F 5781	Belt shield bracket
13	F 5884	Belt shield bracket mounting angle
14	F 7635	Tool box lid
15	F 6111	Access door for F 5971 shield

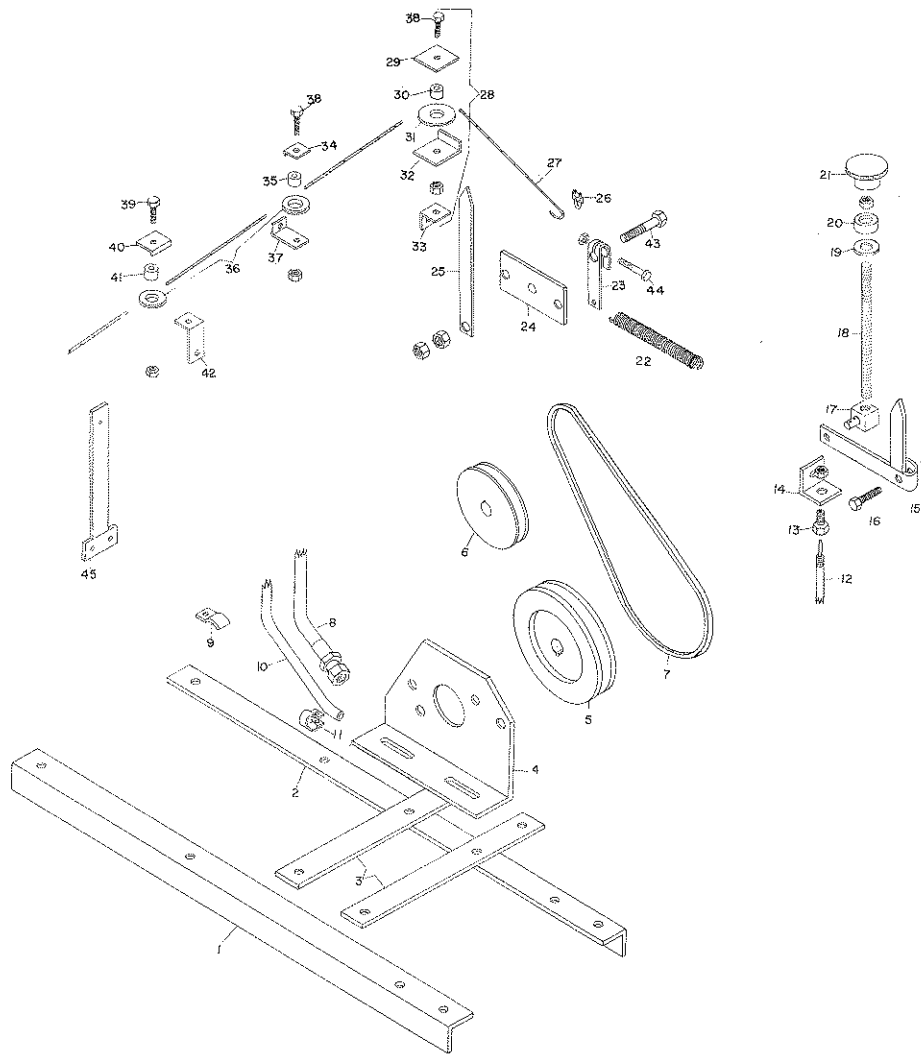 


BALE WEIGHT INDICATOR & HYDRAULIC PUMP MOUNT AND DRIVE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5632	Support angle for hydraulic pump, front (VH4D)	20	F 1131	Thrust bearing
	F 5856	Support angle for hydraulic pump, front (VG4D & V461)	21	F 1007	Control knob
2	F 5689	Support angle for hydraulic pump, rear (VH4D)	22	F 268	Indicator return spring
	F 5885	Support angle for hydraulic pump, rear (VG4D & V461)	23	F 6113	Bale weight indicator lever
3	F 5633	Strap, hydraulic pump support (VH4D) (2 used)	24	F 6122	Bale weight indicator base plate
	F 5887	Strap, hydraulic pump support (VG4D and V461)	25	F 6009	Bale weight indicator
4	F 6112	Pump mounting bracket	26	F 990	1/8" cable clamp
5	F 5614	Sheave, hydraulic pump driven	27	F 6010	Cable, bale weight 16'
6	F 5612	Sheave, hydraulic pump drive	28	F 7236	Sheave complete
7	F 5625	Belt, hydraulic pump drive (AX35)	29	F 995	Plate
8	F 5959	Pressure hose, 13' - 10"	30	F 4068	Bushing
9	F 5635	Hose clip (3 used)	31	F 4067	Roller
10	F 6123	Return hose, 3/8" - 14'	32	F 994	Shield for F 4067 roller
11		3/8" hose clamp	33	F 6007	Mounting angle (front)
12	F 6048	Tension control conduit 91"	34	F 5483	Clip for F 4014 roller
	F 6049	Tension control wire 96"	35	F 4015	Bushing
13	F 5559	Beach nut w/nut and washer	36	F 4014	Roller
14	F 6050	Anchor angle for tension control conduit	37	F 6008	Mounting angle for center sheave
15	F 6041	Tension control indicator	38		1/4" x 1" N.C. cap screw
16		5/16" x 2" N.C. cap screw	39		1/4" x 1" N.C. cap screw, 200 only
17	F 1005	Adjusting stud nut	40	F 5483	Clip for F 4014 roller, 200 only
18	F 6042	Adjusting rod	41	F 6119	Clip for F 4014 roller, 300 only
19		3/8" flat washer	42	F 4015	Bushing, 200 only
				F 6120	Bushing, 300 only
				F 6121	Mounting angle for rear sheave, 200 only
			43		3/8" x 2-1/2" N.C. cap screw
			44		5/16" x 1-1/4" N.C. cap screw
			45	F 5927	Cable bracket for bale weight indicator

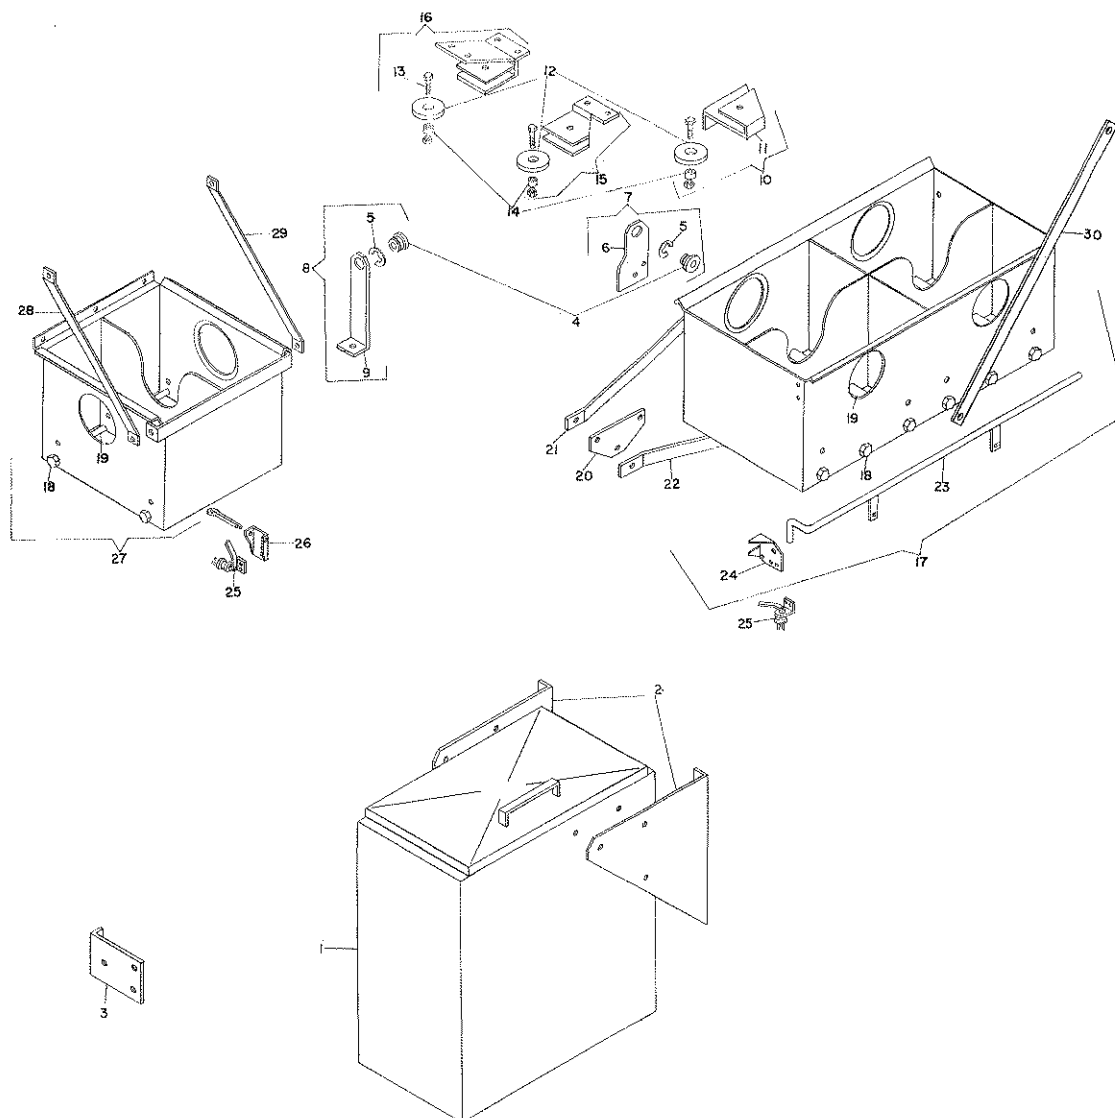 


WIRE AND TWINE BOX

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 285	Twine box (4 compartment)	14	F 4068	Bushing for F 4067 roller
	F 399	Twine box (6 compartment)	15	F 5531	Lower front wire guide w/roller R.H. 300 only
2	F 7136	Bracket for mounting twine box	16	F 5532	Lower front wire guide w/roller L.H. 300 only
3	F 6118	Rear bracket for mounting twine box (300 only)	17	F 5911	4-compartment wire box w/braces
4	F 856	Twine and wire guide bushing	18	F 4211	Stay bolt
5	F 857	Snap ring for F 856	19	F 4195	Pipe spacer
6	F 6094	Wire guide bushing holder (bolts to engine)	20	F 6098	Wire box brace bracket
7	F 6095	Wire guide complete (bolts to engine)	21	F 6100	Wire box brace, L.H., top
8	F 6096	Wire guide complete for 2-compartment wire box	22	F 6101	Wire box brace, L.H., bottom
9	F 6097	Wire guide bushing holder for 2-compartment wire box	23	F 7648	Rod for wire alarm, 200 only
10	F 5906	Wire guide complete (bolts under feeder house) 300 only		F 7608	Rod for wire alarm, 300 only
11	F 6099	Frame only for F 5906 - 300 only	24	F 4191	Mounting bracket for wire alarm, L.H.
12	F 4067	Roller for wire guides	25	F 946	Switch for wire alarm
13		1/4" x 1-1/4" N.C. cap screw	26	F 842	Bracket w/cotter key for wire alarm switch
			27	F 5912	2-compartment wire box w/braces
			28	F 6102	Brace for wire box, rear
			29	F 6103	Brace for wire box, front
			30	F 6157	Brace, wire box, R.H.

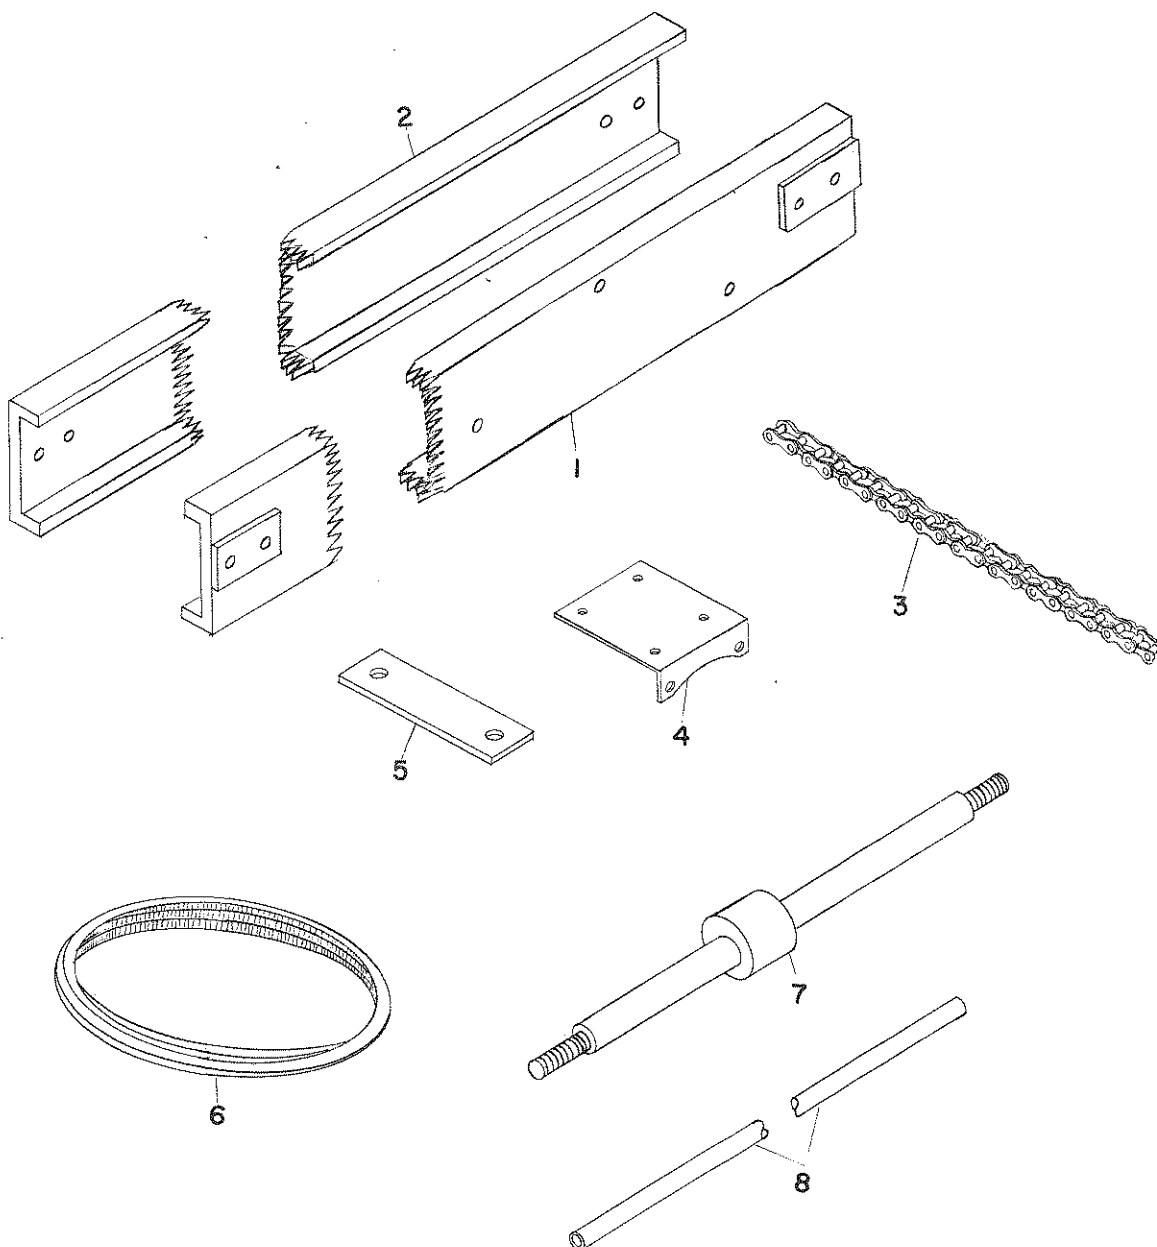 

ITEMS DIFFERENT FROM PULL TYPE

REF. NO.	PART NO.	DESCRIPTION
1	F 5962	Conn rod channel, L.H. drilled for F 7542, 66-
2	F 5963	Conn rod channel, R.H., 66-
3	F 5965	Knotter drive chain, 270P (twine tie) 66-
	F 5966	Knotter drive chain, 271P (wire tie) 66-
4	F 6124	Plate for mounting regulator V461 only
	F 6125	Shim under F34 bearing
6	F 5951	Pickup drive belt (CX128) 66-
7	F 5964	Feed arm conn rod 66-
8	FT 208	Return hose, pump to bypass 1/2" x 105" 66-
	F 5916	Bull gear luber for SP baler

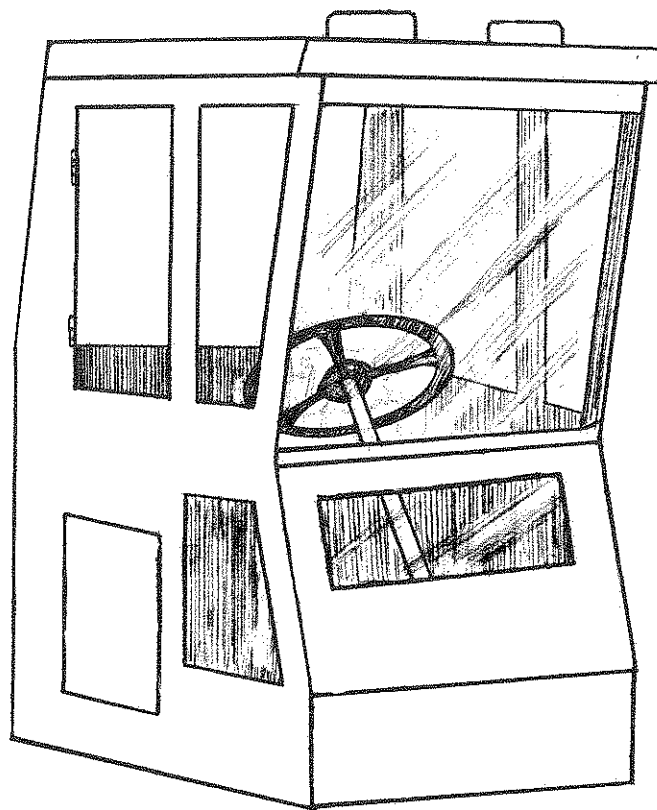 

EXCEL CAB

PART NO.	DESCRIPTION
F 6135	Glass, 1/4" tinted safety, top front
F 6136	Glass, 1/4" tinted safety, rear
F 6137	Glass, 1/4" tinted safety, bottom front
F 6138	Glass, 1/4" tinted safety, right and left top front
F 6139	Glass, 1/4" tinted safety, right rear
F 6140	Glass, 1/4" tinted safety, bottom right front
F 6141	Glass, 1/4" tinted safety, door
F 6142	Rubber moulding for setting glass (sold by the foot)
F 6143	Window adjusting arm
F 6144	Door handle, inside
F 6145	Door handle, outside
F 6146	Door latch w/handles
F 6147	Filter for air precleaner
F 6148	Air deflector
F 6149	Dome for air cleaner
F 6150	Floor mat
F 6151	Dome light
F 6152	Blower switch
F 6153	Rear view mirror
F 6154	12 Volt fan
F 6155	Door latch
F 6156	T-bolt for fan assembly

100

