 
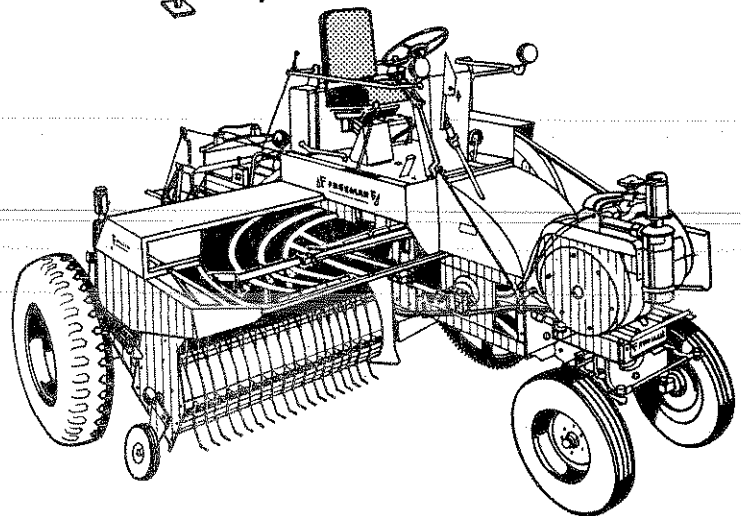 


PARTS LIST

for

Model 200W and 200T

Model 300W and 300T

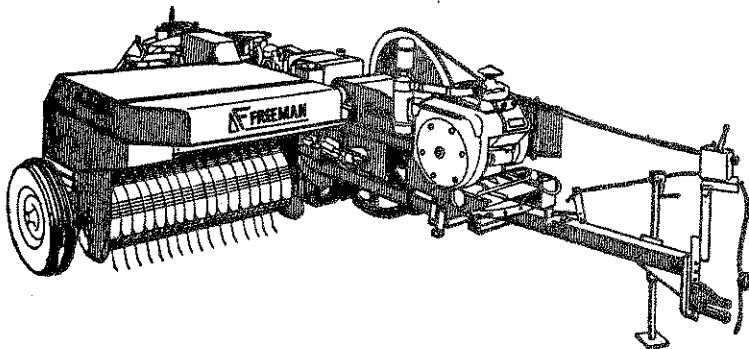

POLICY

1. It is the policy of J. A. Freeman & Son to constantly improve its products whenever it is practical to do so.
2. J. A. Freeman & Son reserve the right to redesign or change its equipment, or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J. A. Freeman & Son relieves the company of further responsibility for warranted operation and breakage replacement.

1965

INDEX

PART NO.	PAGE NO.
F7	12
F8A	12
F9A	4
F12	21
F34	2
F40	22
F46	5
F49	6
F50	5
F52	6
F55	5
F72	2
F73	2
F74A	22
F75	22
F78	22
F81	40
F83	21-22
F97	11
F98	11
F99	12
F100	11
F101	11
F108	24
F117	11
F122	12
F126	12
F129	12
F153	20-23
F169	23
F172	17-20-21 -38-51
F181	23
F183	1
F188	7
F207	36
F208	36
F209	36
F210	36
F211	9
F212	9
F213	9
F214	9-36-42
F215	9-36
F220	7
F221	2
F224	22
F225	4
F226	4
F227	6
F228	6
F234	22
F235	22
F236	22
F237	22
F238	22
F239	22
F240	22
F241	22
F244	22
F246	16-18-21

PART NO.	PAGE NO.
F247	21-22
F248	21-22
F249	21-22
F263	22
F264	22
F265	22
F267	22
F268	24-37
F278	8
F281	14
F285	55
F298	6
F299	6
F304	33
F312	4
F321	9
F322	9
F323	9
F324	9
F325	9
F326	9
F327	9
F333	20
F334	9
F335	9
F340	36
F341	36
F354	13
F364	36
F365	22
F394	5
F399	55
F418	12
F433	9
F440	8-18
F462	9-36
F480	13
F481	13
F482	13
F484	13
F485	13
F486	13
F493	7
F494	7
F497	7
F498	2
F523	23
F524	23
F525	23
F539	22
F540	22
F541	22
F542	22
F543	22
F544	22
F565	23
F570	23
F598	5
F600	7
F602	22
F604	7

PART NO.	PAGE NO.
F621	33
F635	33
F637	33
F638	33
F646	32
F649	32
F656	22
F657	22
F658	22
F659	22
F660	22
F661	22
F662	22
F663	22
F664	33
F667	9
F668	9
F669	12
F671	12
F672	12
F680	22
F689	6
F691	6
F698	2
F710	21
F711	21
F731	9
F732	33
F733	33
F734	33
F735	33
F736	33
F739	21
F740	21
F746	21-22
F747	23
F751	6
F753	4
F755	18-21
F762	32-37
F765	2
F766	21
F768	21
F770	32
F772	6
F773	6
F774	6
F775	6
F776	6
F777	6-31
F778	5-6
F779	6
F780	6
F781	6
F800	33
F817	2
F822	14
F837	7
F840	12
F841	7
F853	4-10

PART NO.	PAGE NO.
F856	19-23
F857	19-23
F874	33
F878	1
F883	7
F884	9-36
F886	2
F889	30
F893	32
F898	20
F901	30
F930	6
F932	6
F933	5-6
F934	9-36
F942	32
F944	9
F946	19
F949	22
F951	30
F952	30
F953	30
F954	30
F955	30
F956	30
F957	29
F958	30
F959	30
F960	30
F961	30
F962	30
F963	30
F967	2
F967A	2
F979	6
F985	24
F986	6
F987	24
F988	24
F990	24-30
F993	24
F994	24-53
F995	24
F997	24
F998	24
F999	24
F1002	25
F1003	25
F1004	25
F1005	25
F1006	25
F1007	25
F1008	25
F1011	25
F1012	25
F1013	25
F1014	25
F1015	25
F1016	25
F1017	25
F1018	25

INDEX

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F1019	25	F1248	15	F1458	25	F1606	1
F1020	25	F1250	15	F1459	25	F1607	1
F1021	25	F1251	15	F1465	23	F1608	8
F1025	25	F1256	4	F1494	7	F1609	6
F1026	25	F1259	13	F1495	7	F1613	2
F1043	9	F1260	13	F1497	33	F1614	2
F1044	9	F1261	13	F1498	33	F1617	8
F1063	30	F1264	12	F1499	33-52	F1618	8
F1064	30	F1266	14	F1505	33	F1619	8
F1065	30	F1267	4	F1511	33	F1620	18-21
F1066	30	F1288	23	F1512	6	F1621	21
F1071	13	F1289	23	F1513	8	F1622	18-21
F1075	29	F1290	23	F1514	8	F1623	18-21
F1076	29	F1291	23	F1515	8	F1624	9
F1077	29	F1292	23	F1517	8-20	F1625	9
F1078	29	F1293	23	F1520	5	F1626	9
F1080	29	F1294	23	F1521	5	F1627	9
F1083	29	F1295	23	F1522	5	F1628	9
F1084	29	F1296	23	F1523	5	F1629	6
F1085	29	F1297	23	F1524	5	F1631	9
F1087	29	F1298	23	F1525	5	F1632	8
F1093	29	F1306	13	F1526	5	F1633	18-21
F1095	29	F1310	7	F1527	5	F1634	14-15
F1101	30	F1338	33	F1528	5	F1635	14
F1102	30	F1377	15	F1529	5	F1636	6
F1103	30	F1382	9	F1530	5	F1638	24
F1104	30	F1383	9	F1531	8	F1639	24
F1105	30	F1385	13	F1536	23	F1641	6
F1106	30	F1386	13	F1537	6	F1643	14
F1108	30	F1392	7	F1538	6	F1644	33-52
F1109	29	F1393	21	F1540	6	F1645	33-52
F1129	25	F1394	21	F1541	6	F1647	9
F1130	25	F1395	20	F1548	20	F1648	14
F1131	25	F1407	29	F1549	20	F1649	14
F1132	2	F1409	29	F1550	20	F1653	9
F1134	5	F1410	29	F1551	20	F1654	9
F1151	7	F1411	29	F1552	20	F1655	23
F1161	30	F1412	29	F1556	14	F1656	5
F1165	30	F1414	29	F1557	14	F1658	25
F1189	14	F1415	29	F1558	14	F1660	20
F1191	14	F1416	29	F1559	14	F1661	4-15
F1193	14	F1417	29	F1561	14	F1662	7
F1195	14	F1418	29	F1563	14	F1672	23
F1212	33	F1419	29	F1564	8	F1673	14
F1213	33	F1420	29	F1565	8	F1675	32
F1214	33	F1421	29	F1568	8	F1676	32
F1215	33	F1427	15	F1569	8	F1677	32
F1216	7	F1428	15	F1571	8	F4014	19-20
F1221	30	F1433	25	F1572	8-16	F4015	19-20
F1222	30	F1436	5	F1573	6	F4016	20
F1226	11	F1441	5-6	F1575	8	F4024	17
F1229	15	F1444	15	F1576	18	F4030	18
F1235	14-15	F1446	25	F1577	18-21	F4046	17
F1237	15	F1447	25	F1579	8	F4050	14
F1238	15	F1450	13	F1581	7	F4067	19-24-53
F1239	15	F1451	25	F1586	1	F4068	19-24
F1240	15	F1452	25	F1587	8	F4069	19
F1241	15	F1453	25	F1589	7	F4076	21
F1244	15	F1454	25	F1590	7	F4077	21
F1245	15	F1455	25	F1601	29	F4078	21
F1246	15	F1456	25	F1605	1	F4115	18-21
F1247	15						

INDEX

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F4133	18	F5134	37	F5317	48	F5392	46
F4134	18	F5137	37	F5318	48	F5393	46
F4135	18	F5138	54	F5319	48	F5394	46
F4136	18	F5142	37	F5320	48	F5395	46
F4137	18	F5145	36	F5321	48	F5398	46
F4138	18	F5153	46	F5322	48	F5399	46-48
F4150	20	F5156	46-48	F5323	48	F5401	50
F4163	19	F5159	19	F5324	48	F5402	50
F4190	19	F5162	38	F5325	48	F5403	50
F4191	19	F5169	38	F5326	48	F5404	50
F4193	33	F5170	38-53	F5327	48	F5405	50
F4194	19	F5171	38	F4329	48	F5406	50
F4195	19	F5172	38	F5330	48-50	F5408	50
F4203	19	F5173	38	F5331	48	F5409	50
F4204	19	F5174	38	F5332	48	F5410	50
F4205	19	F5177	40	F5333	48	F5411	50
F4206	19	F5179	40-53	F5334	48	F5412	50
F4211	19	F5180	40-53	F5341	50	F5414	50
F4222	19	F5193	40	F5342	50	F5415	50
F4223	19	F5198	40	F5343	50	F5416	50
F4224	19	F5230	52	F5344	50	F5417	50
F4225	19	F5231	52	F5345	50	F5418	50
F5000	46	F5232	52	F5346	50	F5419	50
F5001	36	F5233	52	F5347	50	F5438	42
F5002	36	F5234	52	F5348	50	F5445	15-42
F5006	36	F5235	52	F5349	50	F5446	15-42
F5007	36	F5236	52	F5350	50	F5452	42
F5008	36	F5237	52	F5351	50	F5457	42
F5009	36	F5239	52	F5352	50	F5474	37
F5011	40	F5240	52	F5353	50	F5475	37
F5012	40	F5244	37	F5354	50	F5477	37
F5013	40	F5254	37	F5356	50	F5480	37
F5015	40	F5255	37	F5357	50	F5481	37
F5016	36	F5256	37	F5358	50	F5482	37
F5017	40	F5261	51	F5359	50	F5493	37
F5018	40	F5264	25-33-52	F5360	50	F5494	37
F5019	40	F5265	52	F5361	46	F5495	37
F5020	40	F5268	42	F5362	46	F5499	52
F5023	36	F5269	42	F5363	46	F5501	51
F5025	40	F5270	42	F5364	46	F5502	51
F5029	40	F5275	42	F5365	46	F5505	51
F5030	40	F5276	42	F5366	46	F5506	51
F5031	40	F5286	40	F5367	46	F5531	55
F5032	40	F5287	46	F5368	46	F5532	55
F5039	36	F5288	46	F5369	46	F5538	52
F5040	36	F5289	37	F5370	46	F5540	40
F5047	46	F5299	52	F5371	46	F5541	40
F5048	38-53	F5301	48	F5372	46	F5542	40
F5049	38-53	F5302	48	F5273	46	F5545	25-40
F5055	38-51-53	F5303	48	F5375	46	F5546	40
F5069	52	F5304	48	F5376	46	F5547	40-42
F5070	52	F5305	48	F5377	46	F5548	40
F5071	37	F5306	48	F5378	46	F5549	40
F5075	40-53	F5307	48	F5379	46	F5550	40
F5076	40-42	F5308	48	F5380	46	F5551	40
F5080	25-40	F5309	48	F5381	46	F5552	40
F5098	53	F5310	48	F5385	46	F5553	40
F5099	53	F5312	48	F5386	46	F5554	25-40
F5121	53	F5313	48	F5389	46	F5556	40
F5131	53	F5314	48	F5390	46	F5557	40
F5133	37	F5316	48	F5391	46	F5558	40

INDEX

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F5559	25-40	F5712	53	F5800	42	F5879	53
F5561	40	F5714	36	F5801	42	F5880	53
F5570	37	F5718	38	F5802	36	F5881	40
F5577	40	F5720	36	F5803	36	F5882	40
F5578	36	F5721	36	F5804	36	F5883	40
F5580	38	F5724	7	F5806	42	F5884	54
F5596	42	F5727	52	F5808	42	F5885	54
F5601	40	F5728	52	F5809	42	F5886	54
F5606	53	F5730	38	F5810	42	F5887	54
F5610	56	F5731	37	F5812	42	F5888	53
F5612	54	F5732	37	F5813	42	F5889	52
F5613	54	F5733	53	F5814	42	F5890	42
F5614	54	F5735	53	F5815	36	F5891	42
F5615	40	F5736	53	F5816	36	F5892	42
F5625	54	F5737	11-51	F5817	36	F5893	42
F5626	36	F5740	51	F5818	36	F5894	42
F5627	36	F5741	51	F5819	36	F5895	42
F5630	36	F5742	51	F5820	36	F5896	42
F5631	54	F5745	37	F5824	42	F5897	42
F5632	54	F5746	37	F5826	42	F5898	42
F5633	54	F5747	37	F5827	42	F5899	42
F5634	54	F4748	37	F5828	42	F5900	42
F5635	54	F5749	51	F5820	42	F5901	42
F5636	54	F5750	51	F5830	42	F5902	42
F5637	54	F5753	37	F5831	42	F5903	42
F5647	53	F5755	37	F5833	42	F5904	42
F5648	42	F5759	36	F5837	42	F5905	42
F5649	37	F5760	36	F5838	40	F5906	19
F5650	36	F5763	42	F5840	42	F5910	42
F5656	53	F5764	40	F5842	33-52	F5911	55
F5657	53	F5765	36	F5843	52	F5912	55
F5663	36	F5767	36	F5846	52	F5913	42
F5665	55	F5768	36	F5847	52	F5917	11
F5666	55	F5769	36	F5849	38	F5918	51
F5667	55	F5770	53	F5851	36	F5919	38
F5668	55	F5771	53	F5852	36	F5920	51
F5669	55	F5772	53	F5853	36	F5921	51
F5670	55	F5773	37	F5854	36	F5922	33
F5671	38	F5774	37-53	F5855	36	F5923	54
F5672	38	F5775	53	F5856	54	F5924	54
F5673	38	F5777	51	F5858	48-50	F7003	1
F5674	38	F5778	51	F5859	40	F7004	1
F5675	38	F5779	40	F5860	40	F7005	1
F5676	55	F5780	36	F5861	40	F7006	1
F5677	55	F5781	54	F5862	40	F7007	1
F5678	55	F5782	42	F5863	40	F7008	1
F5679	55	F5783	42	F5864	40	F7009	1
F5680	55	F5784	42	F5865	40	F7010	1
F5681	55	F5785	42	F5866	51	F7011	1
F5682	55	F5786	42	F5867	51	F7013	25
F5683	55	F5788	42	F5868	52	F7014	2
F5684	55	F5790	42	F5869	52	F7015	2
F5685	55	F5791	42	F5870	55	F7016	2
F5686	55	F5792	42	F5871	37	F7017	2
F5687	55	F5793	42	F5872	37	F7025	2
F5689	54	F5794	42	F5873	37	F7026	4
F5698	37	F5795	42	F5874	53	F7031	4
F5703	51	F5796	42	F5875	53	F7032	4
F5705	51	F5797	42	F5876	53	F7033	4-42
F5707	53	F5798	42	F5877	52	F7034	4-42
F5711	53	F5799	42	F5878	52	F7035	4-42

INDEX

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F7036	4	F7176	11	F7311	17	F7405	31
F7037	4	F7177	11	F7312	17	F7406	31
F7038	4	F7179	11	F7313	17	F7408	31
F7039	4	F7180	11	F7315	17	F7409	31
F7040	4	F7181	11	F7316	17	F7410	31
F7042	5	F7182	11	F7317	17	F7411	31
F7044	32	F7183	11	F7318	17	F7412	31
F7045	32	F7184	11	F7321	7	F7413	31
F7046	32	F7185	11	F7322	7	F7414	31
F7048	32	F7186	11	F7324	21	F7415	31
F7049	32	F7187	11	F7325	21	F7416	31
F7051	12	F7188	11	F7327	19	F7417	31
F7052	12	F7189	11	F7329	17	F7418	5-31
F7053	12	F7190	11	F7330	17	F7430	1
F7055	7	F7193	11	F7332	18	F7431	18
F7056	7-33	F7194	1-11	F7333	18	F7432	18
F7062	17	F7207	25	F7334	18	F7437	2
F7063	18	F7210	2	F7335	18	F7439	6
F7064	17	F7212	32	F7337	2	F7448	16
F7065	17	F7215	1	F7344	19	F7449	16
F7066	17	F7217	9	F7345	18	F7450	16
F7069	18	F7220	7-32	F7346	18	F7451	16
F7072	18	F7221	7-32	F7348	17	F7452	16
F7075	17	F7222	7-32	F7349	18	F7453	16
F7076	17-18	F7223	7-32	F7353	17	F7454	16
F7077	17	F7227	8-17	F7354	4	F7456	18
F7078	17	F7230	19	F7355	11	F7457	18
F7079	17	F7231	19	F7356	11	F7461	18
F7080	17	F7232	19	F7358	4	F7462	4
F7081	17	F7235	33	F7360	1	F7463	4
F7084	17	F7236	24	F7361	30	F7472	10
F7085	17	F7238	4	F7362	1	F7476	10
F7086	17	F7239	4-14	F7363	1	F7477	19
F7087	17	F7241	2	F7364	1	F7478	19
F7089	17	F7247	18-20	F7365	30	F7479	31
F7121	7	F7248	17	F7366	30	F7482	10
F7122	7	F7257	18	F7367	30	F7485	23
F7123	7	F7264	14	F7368	30	F7488	2
F7127	10	F7265	14	F7369	30	F7501	33
F7136	19-23	F7268	13	F7370	30	F7502	33
F7137	19	F7275	14	F7371	30	F7507	7
F7142	10	F7276	14	F7372	30	F7513	20
F7143	10	F7277	14	F7373	30	F7514	2
F7144	10	F7279	1	F7374	30	F7515	19
F7145	10	F7280	1	F7375	30	F7516	7
F7146	11	F7281	1	F7376	30	F7517	10
F7148	11	F7282	1	F7377	30	F7519	18
F7149	11	F7283	1	F7378	30	F7520	20
F7151	11	F7285	2	F7379	30	F7521	20
F7152	10	F7294	7	F7382	11	F7522	20
F7154	11	F7295	32	F7387	17	F7523	20
F7155	11	F7296	7-32	F7388	17	F7524	20
F7156	11	F7297	19	F7393	31	F7525	20
F7157	10	F7298	9	F7394	10	F7526	20
F7158	10	F7299	10	F7396	31	F7527	20
F7159	10	F7300	12	F7397	7-31	F7528	16
F7160	10	F7301	12	F7398	31	F7529	14-15
F7163	10	F7302	12	F7400	31	F7530	14
F7164	10	F7303	12	F7401	31	F7531	14
F7166	10	F7304	12	F7402	31	F7532	14
F7174	9	F7305	12	F7403	31	F7533	14

INDEX

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F7534	14	F7598	11	F7673	33	FT181	26
F7535	12	F7599	11	F7674	33	FT182	26
F7536	1	F7600	24	F7675	33	FT183	26
F7537	1	F7601	24	F7676	33	FT184	27
F7538	1	F7602	13	F7677	33	FT185	27
F7539	1	F7603	13	F7678	33	FT187	27
F7540	1	F7604	14	F7679	33	FT188	27
F7541	1	F7605	14	F7680	33	FT191	27-26
F7542	5	F7606	14	F7681	1	FT192	27
F7543	5	F7607	14	F7682	1	FT193	27
F7544	5	F7608	19	FT10	26	FT194	27
F7545	5	F7609	33	FT11	26	FT197	28
F7546	12	F7610	14	FT12	26	FT199	26
F7547	20	F7612	13	FT13	26	FT200	26
F7548	4	F7617	33	FT14	26	FT500	28
F7549	4	F7617A	33	FT15	26	FT503	28
F7550	4-33	F7617B	33	FT16	26	FT504	28
F7551	10	F7617C	33	FT18	28	FT505	28
F7552	20	F7624	24	FT19	26-40	FT506	28
F7554	20	F7625	13	FT25	30	FT507	28
F7555	19	F7626	33	FT50	27	FT508	28
F7556	19	F7627	4	FT51	27	FT509	28
F7557	19	F7628	4	FT52	27	FT510	28
F7558	20	F7629	4	FT53	27-42	FT511	28
F7559	16	F7630	4	FT54	27	FT512	28
F7560	16	F7631	4	FT58	27	FT513	28
F7561	16	F7632	4	FT61	27	FT514	28
F7562	16	F7633	10	FT62	27	FT515	28
F7563	16	F7634	10	FT63	27	FT516	28
F7564	9	F7635	10	FT65	27	FT517	28
F7565	1	F7636	9	FT67	27	FT518	28
F7566	1	F7637	19	FT68	27	FT519	28
F7567	1	F7638	19	FT72	27	FT520	28
F7568	20	F7639	19	FT73	26	FT521	28
F7569	20	F7640	19	FT74	33	FT523	28
F7570	18	F7641	19	FT75	26	FT524	28
F7571	18	F7642	19	FT82	28	FT525	28
F7572	11	F7643	19	FT85	27	FT527	28
F7573	11	F7644	19	FT87	27	FT528	28
F7574	20	F7645	19	FT101	28	FT529	28
F7575	20	F7648	19	FT107	26-28	FT530	28
F7577	14-15	F7649	9	FT113	28	FT532	28
F7578	13	F7650	5	FT114	28	FT533	28
F7579	10	F7651	5	FT136	26	FT534	28
F7580	6	F7652	20	FT137	26	FT535	28
F7581	6	F7653	5	FT138	27	FT536	28
F7582	6	F7654	10	FT139	27	FT537	28
F7583	11	F7655	24	FT140	27		
F7584	11	F7656	24	FT141	53		
F7585	16	F7657	24	FT150	26	F179839	44
F7586	16	F7658	24	FT151	26	F5682367	56
F7587	16	F7659	24	FT153	26	F5682898	44
F7588	20	F7660	14-15	FT157	28	F5684820	44
F7590	1	F7661	24	FT163	26	F5685355	44
F7591	1	F7662	9	FT170	28	F5685372	44
F7592	1	F7663	9	FT171	27	F5685706	44
F7593	5	F7668	7	FT172	27	F5685707	44
F7594	5	F7669	7	FT177	27	F5685708	44
F7595	5	F7670	7	FT178	27	F5685709	44
F7596	6	F7671	33	FT179	27	F5685710	44
F7597	11	F7672	33	FT180	26	F5685711	44


INDEX

PART NO.	PAGE NO.
F5686526..	44
F5686527..	44
F5686539..	44
F5686546..	44
F5686553..	40
F5686570..	44
F5686577..	44
F5686625..	44
F5686644..	56
F5686675..	56
F5686676..	56
F5686680..	56
F5686687..	56
F5686702..	56


PART NO.	PAGE NO.
F5686719..	56
F5686814..	44
F5686815..	44
F5686866..	44
F5687182..	44
F5687183..	44
F5687184..	44
F5687185..	44
F5687186..	44
F5687252..	44
F5687277..	56
F5687319..	56
F5687785..	56

PART NO.	PAGE NO.
F5687796..	56
F5687898..	56
F5687958..	44
F5688034..	44
F5688065..	56
F5688066..	56
F5688072..	56
F5688079..	56
F5688081..	56
F5688752..	44
F5688765..	44
F5689021..	44
F5689396..	56


PART NO.	PAGE NO.
F5689695..	56
F5689697..	44
F5689698..	44
F5689834..	44
F5689836..	44
F5690033..	44
F5690698..	44
F5690824..	56
F5690832..	56
F5690884..	40
F5692895..	44
F5695670..	56
F5696151..	44

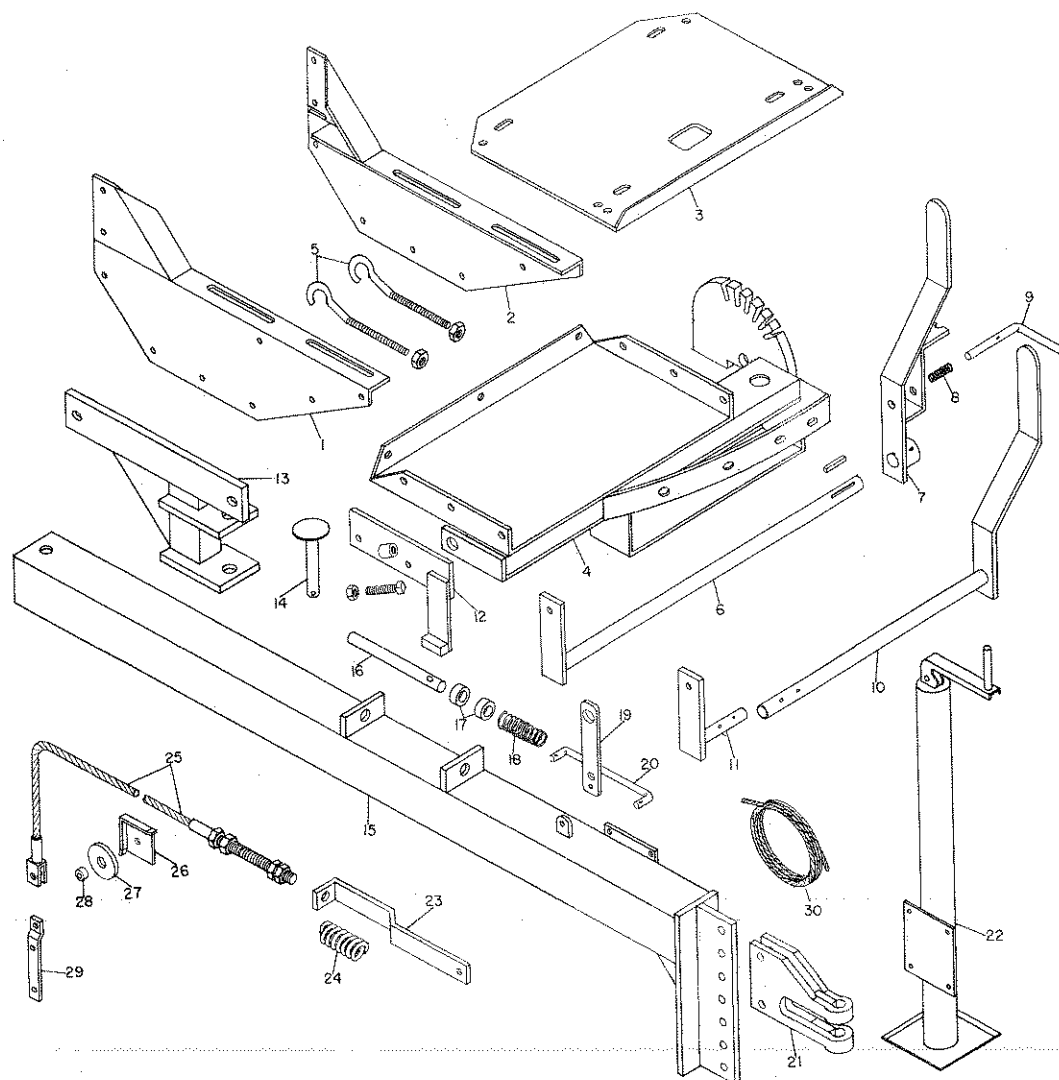 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7008	Engine mount R.H. 200 and 300. Not used on 200W VG4D engine	13.	F 7007	Pivot pin bracket
	F 7362	P.T.O. gear box mounting bracket R and L.H. 200 and 300	14.	F 7006	Drawbar pivot pin
2.	F 7009	Engine mount L.H. 200 and 300 w/VH4D engine (2 used on 200W VG4D engine)	15.	F 7001	Drawbar for engine baler
3.	F 7279	Engine base, 18" chamber		F 7360	Drawbar for P.T.O. baler
	F 7215	Engine base, 22" chamber	16.	F 7002	Drawbar locking pin
	F 7011	Engine base 23" chamber	17.	F 7004	Set collar, drawbar lock pin
	F 7364	P.T.O. gear box plate 200	18.	F 7003	Spring, drawbar lock pin
	F 7363	P.T.O. gear box plate 300	19.	F 7283	Actuating lever, drawbar lock pin
4.	F 7280	Hitch base plate 18" chamber	20.	F 7282	Link, drawbar lock pin
	F 7537	Hitch base plate w/pickup quadrant 22" chamber	21.	F 183	Front end hitch
	F 7536	Hitch base plate w/pickup quadrant 23" chamber	22.	F 7430	Front end jack complete for balers with engines
5.	F 7010	Engine adjusting bolt (2 used)		F 1586	Front end jack complete for P.T.O. balers
6.	F 7538	Pickup lift lever cross rod 300 only 65-		F 878	Jack handle assembly
7.	F 7539	Pickup lift lever 65-		F 1605	Ram only for jack
8.	F 7541	Spring for F 7540 pin 65-		F 1606	Cap for jack
9.	F 7540	Pickup lift lever adjusting pin 65-		F 1607	Thrust bearing for jack
10.	F 7281	Pickup lift lever 200 only	23.	F 7567	Cable connecting link for cushion spring 65-
11.	F 7681	Pickup lift crank 65-	24.	F 7566	Cushion spring (Pickup cable) 65-
12.	F 7682	Pickup lift lever stop bracket 65-	25.	F 7565	Pickup lift cable with ends 65-
			26.	F 7590	Sheave clip, pickup lift roller
			27.	F 7591	Roller for pickup lift 65-
			28.	F 7592	Bushing for F 7591 roller
			29.	F 7194	Pickup lift bracket
			30.	F 7005	Rope, drawbar pin, 9 ft.

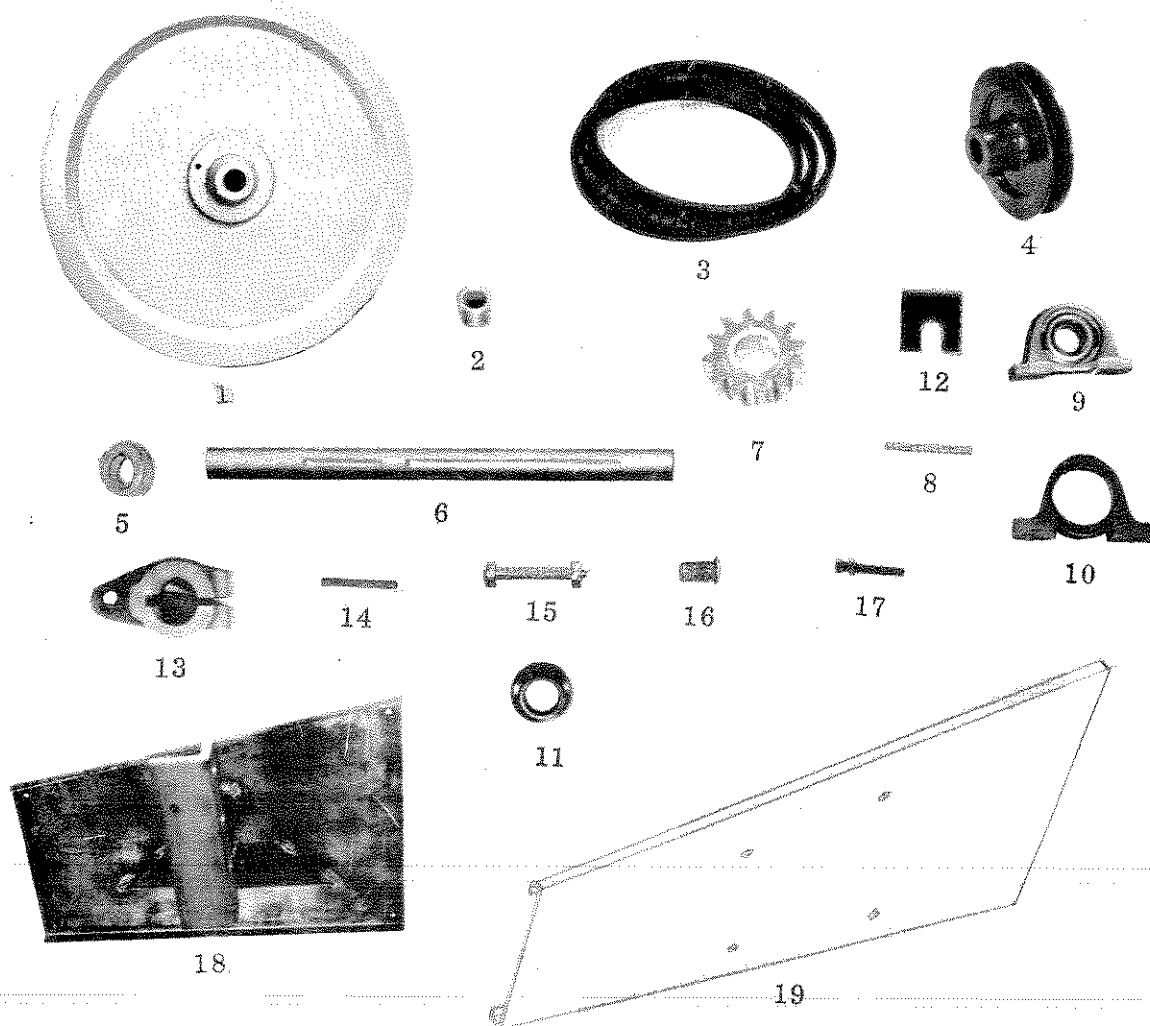 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7514	Flywheel with bushings motor drive 65-
	F 1613	Flywheel with bushings P.T.O. drive 65-
2.	F 886	Bushing for F 7514 and F 1613 flywheels
3.	F 7000	Drive belt, D 165 for VG4D engine
	F 7337	Drive belt, D 162 for VH4D and P.T.O.
4.	F 7014	Motor pulley 10" O.D. for VG4D
	F 7241	Motor pulley 8" O.D. for VH4D
5.	F 221	Set collar, pinion shaft 2-1/8"
6.	F 7025	Pinion shaft 23" chamber
	F 7210	Pinion shaft 22" chamber
	F 7285	Pinion shaft 18" chamber
7.	F 7437	Pinion, 200 and 300 used with F 7438 gear 12T-21/2P
8.	F 7488	Tapered key, pinion 3-1/2" (2 used)
9.	F 34	Bearing complete pinion shaft (2 used)
10.	F 765	Bearing cage for F 34 bearing
11.	F 698	Bearing insert for F 765 cage
12.	F 967	Shim for F 34 bearing 16 ga.
	F 967A	Shim for F 34 bearing 20 ga.
	F 967B	Shim for F 34 bearing 10 ga.
13.	F 817	Shear hub for flywheel
14.	F 72	Key for shear hub
15.	F 7015	Shear bolt 1/2 x 5 N.C. grade 2 bright cap screw
16.	F 1614	Shear bushing in flywheel, flanged 65-
	F 1132	Shear bushing in flywheel hub
17.	F 73	Set screw for F 34 bearing front 1/2" x 4" (2 used)
	F 498	Set screw for F 34 bearing rear 1/2" x 2" (2 used)
18.	F 7017	Bracket, drive belt shield
19.	F 7016	Drive belt shield

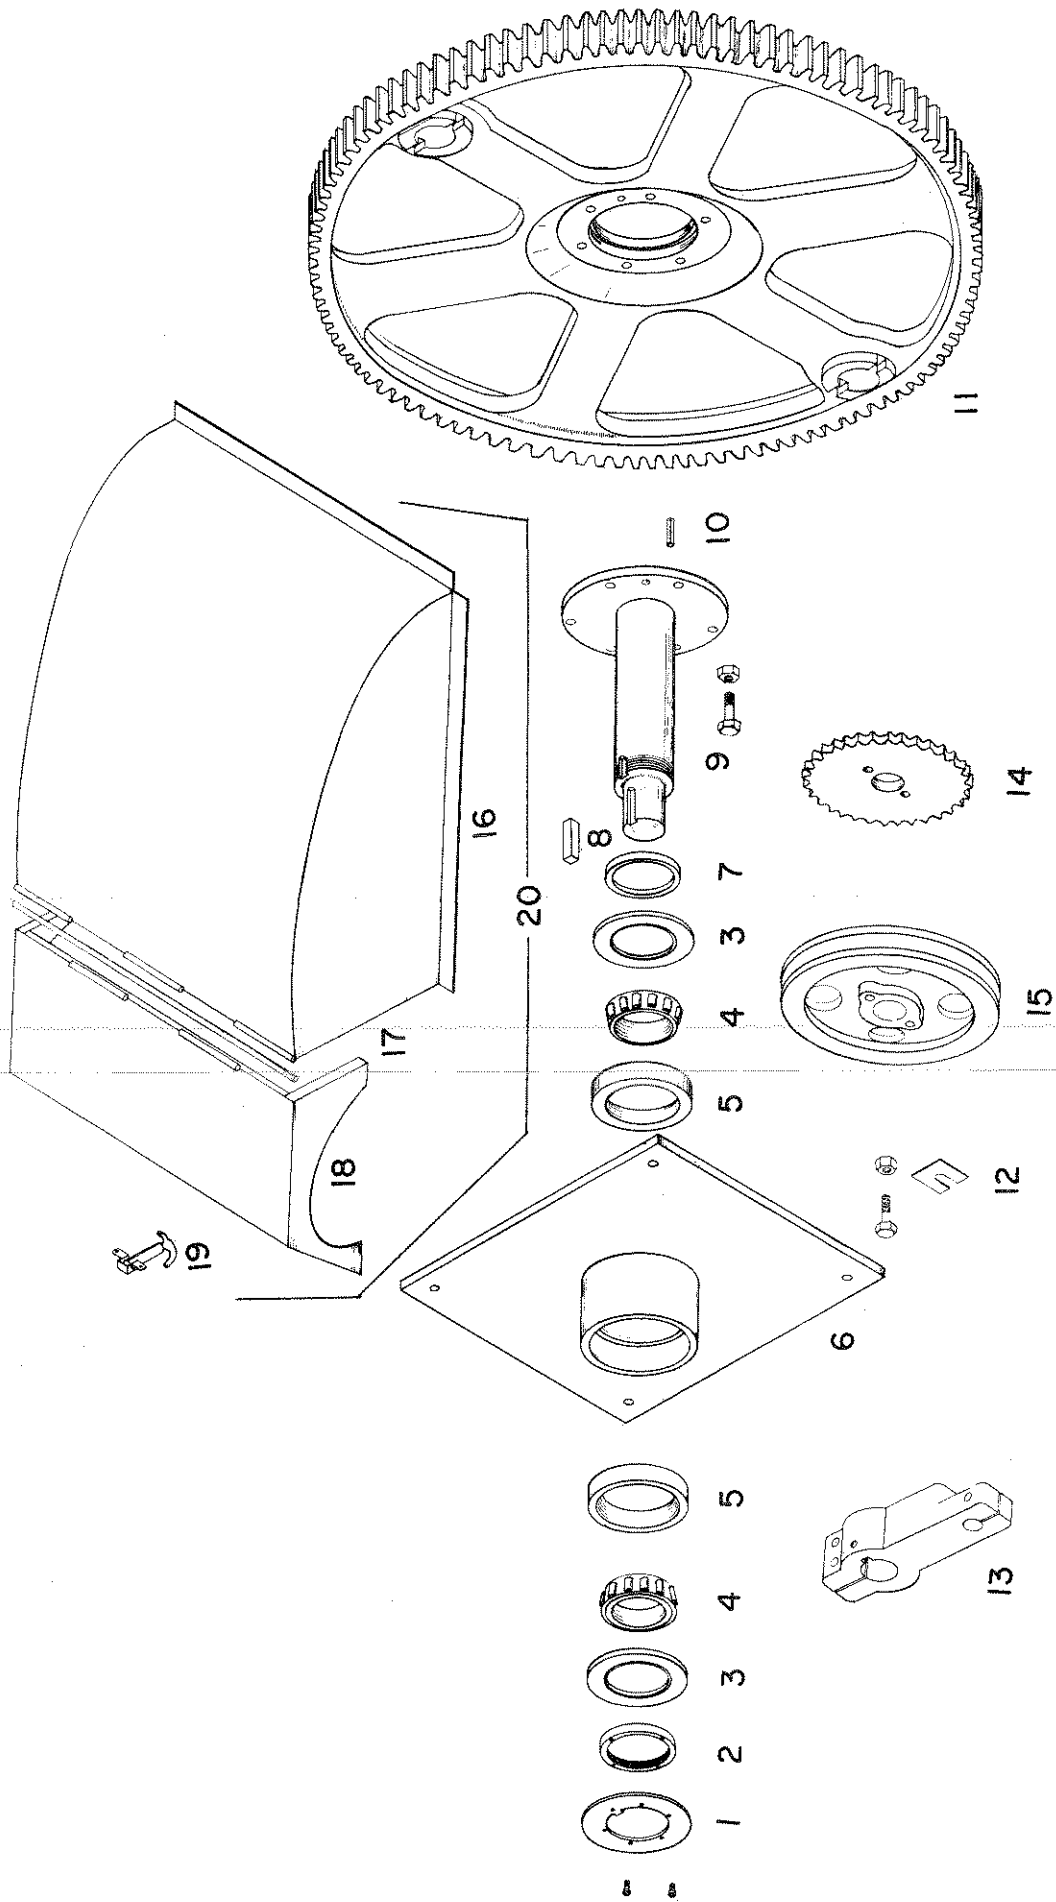 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7038	Locking washer
	F 7039	Screw for locking washer, 8/32" x 1/2" H.H.C.S. (4 used)
	F 7040	Lock washer for F 7039 screw, #8 medium (4 used)
2.	F 7037	Adjusting nut for side plate bearing
3.	F 7035	Seal for side plate #255883 (4 used)
4.	F 7033	Bearing for side plate, #33287 (4 used)
5.	F 7034	Bearing cup for side plate #33462 (4 used)
6.	F 7354	Side plate, R.H. with bearing cups
	F 7462	Side plate, L.H. with bearing cups
	F 7358	Side plate, R.H. w/bearing and shaft
	F 7463	Side plate, L.H. w/bearing and shaft
7.	F 7036	Seal race
8.	F 225	Key, knotter drive shaft
9.	F 7031	Shaft, feed fork drive
	F 7032	Shaft, knotter drive
10.	F 7239	Roll pin 3/8" x 1-1/2" for bullgear
11.	F 7438	Bullgear 88 tooth for F 7437 pinions (2 used)
	F 7026	Bullgear 110 tooth for F 47, F 47S and F 7286 pinions (2 used)
	F 7026D	Bullgear 110 tooth for F 47, F 47s and F 7286 pinions (ductile steel)
12.	F 1267	Shim for aligning side plate
		Bolt for side plate, 1/2" x 1-3/4" N.C. cap screw with fiber lock nuts
13.	F 1256	Crank arm
	F 312	1/2" x 3-1/4" N.F.H.T. cap screw with fibre lock nut
	F 226	Key 1/2" x 1/2" x 2"
		1/2" x 1/2" Hollow head set screw (3 used)
14.	F 753	Sprocket, knotter drive (32T #60)
15.	F 9A	Sheave, pickup drive
16.	F 7627	Bullgear shield less access door 300 only 65-
	F 7628	Bullgear shield less access door 200 only 65-
17.	F 7629	Bullgear shield hinge pin 300 only 65-
	F 7630	Bullgear shield hinge pin 200 only 65-
18.	F 7631	Bullgear shield access door 300 only 65-
	F 7632	Bullgear shield access door 200 only 65-
19.	F 853	Catch for bullgear shield
20.	F 7548	Bullgear shield complete with door 300 only 65-
	F 7549	Bullgear shield complete with door 200 only 65-
	F 7550	Rubber grommet
	F 1661	Hydraulic shut-off fitting

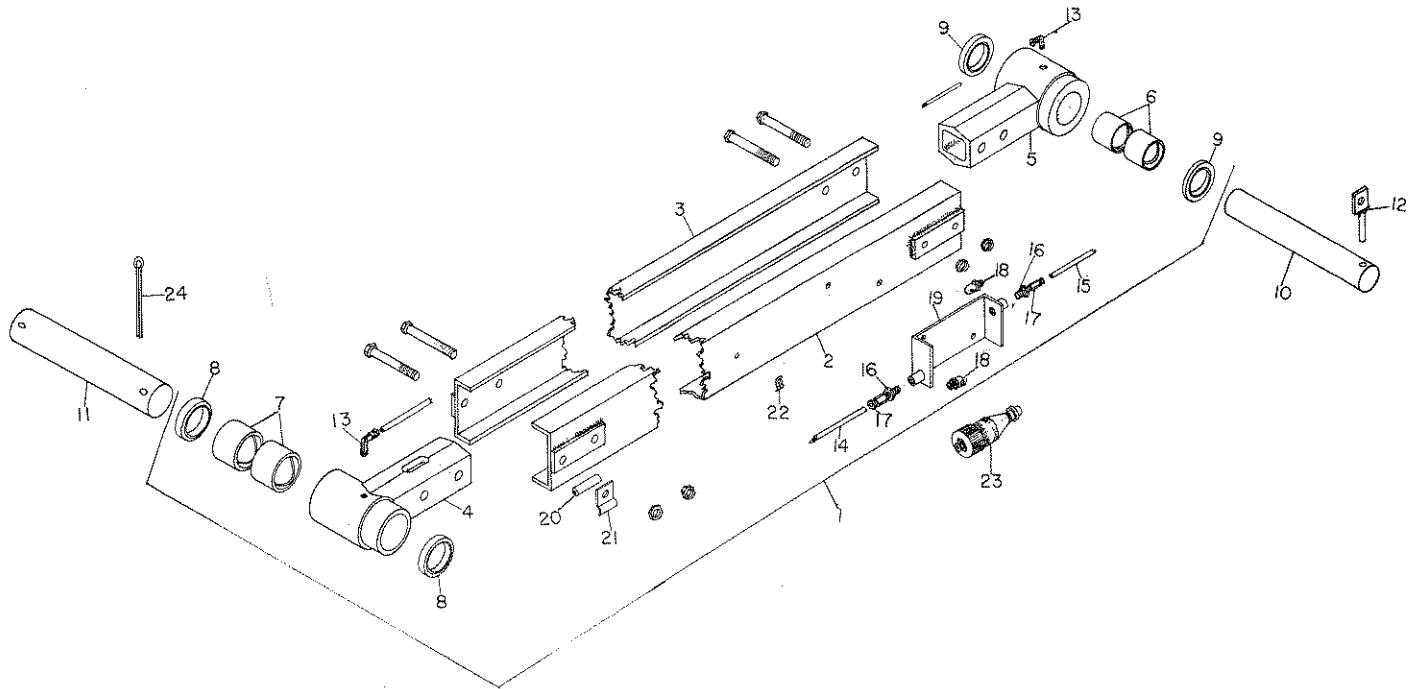 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7594	Conn. rod complete with heads 23" chamber 65-	8.	F 1530	Grease seal for F 1520, F 1522 and F 1524 heads 1-15/16" #50409
	F 7595	Conn. rod complete with heads 18" chamber 65-	9.	F 1529	Grease seal for F1521 and F1523 heads 1-11/16" #471812
	F 7650	Conn. rod complete with heads 22" chamber 65-	10.	F 50	Plunger pin 200 only
2.	F 7593	Conn. rod channel L.H. drilled for F 7542 65-		F 394	Plunger pin 300 only
3.	F 7042	Conn. rod channel R.H.	11.	F 46	Crank pin, gear end 200 only
4.	F 1520	Conn. rod head with bushings and seals gear end 200 only		F 598	Crank pin, gear end 23" chamber
	F 1522	Conn. rod head with bushings and seals gear end 300, 23" chamber		F 1134	Crank pin, gear end 22" chamber
	F 1524	Conn. rod head with bushings and seals gear end 300, 22" chamber	12.	F 1656	Lock pin for plunger pin, all balers
5.	F 1521	Conn. rod head with bushings and seals, plunger end, 200 only	13.	F 1441	Elbow for conn. rod grease tube (2 used) I.M.P. 889L
	F 1523	Conn. rod head with bushings and seals, plunger end, 300 only	14.	F 7544	Grease tube, crank pin to F 7542 bracket
6.	F 1526	Bushing for F 1521 head, plunger end, 200 only	15.	F 7545	Grease tube, plunger pin to F7542 bracket
	F 1528	Bushing for F 1523 head, plunger end, 300 only	16.	F 7418	Bushing, grease tube connector to bracket 1/4" to 1/8"
7.	F 1525	Bushing for F 1520 head, gear end, 200 only	17.	F 778	Connector, grease tubes #308808
	F 1527	Bushing for F 1522 and F 1524 heads gear end, 300 only	18.	F 7651	Grease fitting on conn. rod (2 used)
			19.	F 7542	Bracket for grease tubes on conn. rod channel
			20.	F 933	Protector tube for grease tube
			21.	F 1436	Clip for grease tube protector
			22.	F 7653	Clip for grease tube
			23.	F 7543	Spring loaded grease cup for F 7542
			24.	F 55	Key for crank pin (2 used)

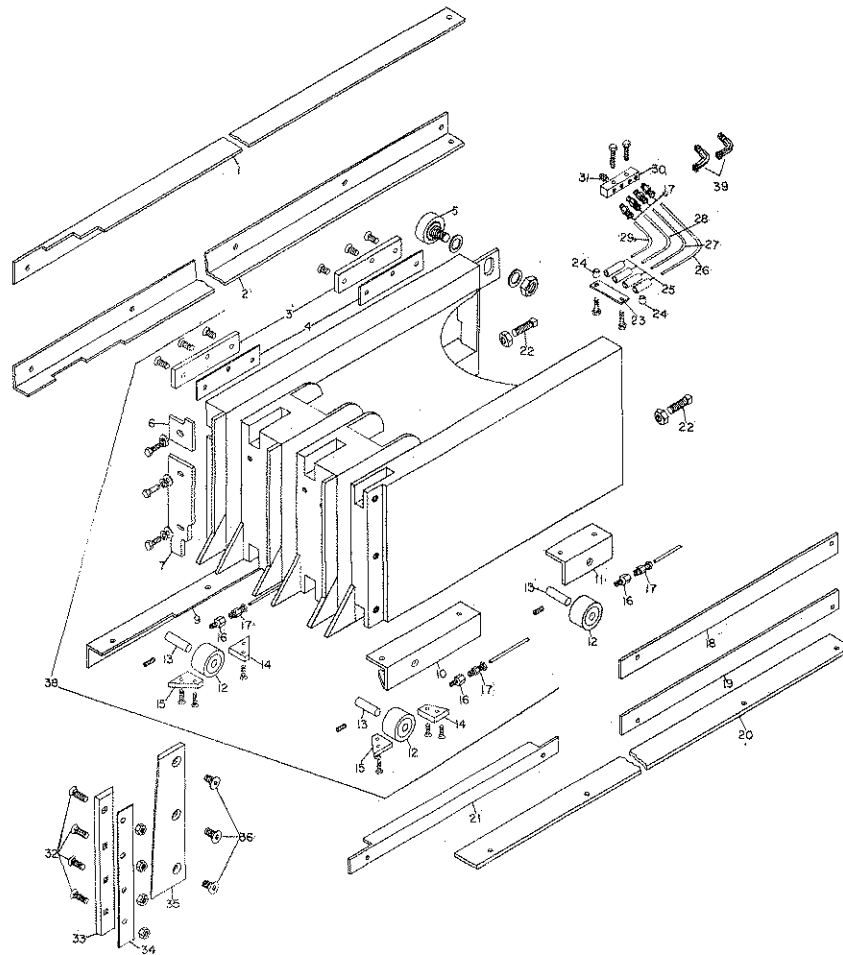 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 1541	Slide, plunger angle top L.H.	28.	F 779	Grease tube, right front 30"
2.	F 1540	Slide, plunger angle, bottom L.H.	29.	F 780	Grease tube, right rear 36"
3.	F 1537	Hard slide for roller plunger (4 used)	30.	F 979	Manifold for grease tube 4 holes for plunger roller
4.	F 1538	Shim for F 1537 slide	31.		1/8" straight grease fitting (4 used)
5.	F 1636	Roller for top of plunger 3/4" shank 65-	32.	F 1629	Bolt for stationary knife (sq. hd) for F1609 knife 65- (4 used)
6.	F 689	Adjusting pad for plunger face, top left		F 228	Bolt for stationary knife (rnd. hd) for F52 knife (4 used)
7.	F 691	Adjusting pad for plunger face, left side	33.	F 1609	Slicing knife, stationary (with sq. holes) 65-
9.	F 1573	Roller mounting angle L.H.		F 52	Slicing knife, stationary (w/round holes)
10.	F 773	Roller mounting angle R.H. rear	34.	F 751	Shim for stationary knife, 14 ga.
11.	F 772	Roller mounting angle, R.H., front		F 1512	Shim for stationary knife, 20 ga.
12.	F 775	Roller for plunger (4 used)	35.	F 49	Shear knife on plunger
13.	F 776	Pin for F 775 roller (4 used)	36.	F 227	Bolt, for shear knife 5/8 x 1 N.F. 3 used
14.	F 774	Wiper, front (2 used)	37.	F 7581	Plunger complete less knife 23" chamber 300 only 65-
15.	F 986	Wiper, rear (2 used)		F 7596	Plunger complete less knife 22" chamber 300 only 65-
16.	F 777	Adapter, grease tube (4 used) #51942		F 7582	Plunger complete less knife 18" chamber 200 only 65-
17.	F 778	Connector, grease tubes, (8 used - 3-tie) (6 used - 2-tie) #308808	38.	F 1441	Elbow, grease tube, (2 used on 2-tie) I.M.P. 889L
18.	F 299	Slide, plunger flat, upper side R.H.			5/16" x 1" N.C.F.H. hard slide to plunger (12 used)
19.	F 298	Slide, plunger flat, lower side R.H.			1/4" x 1" N.C.F.H. wiper to roller mounting angle (8 used)
20.	F 7580	Slide, plunger flat, bottom R.H.			3/8" x 1" N.C.F.H. adjusting pads to plunger (3 used)
21.	F 7439	Knife guide under feed opening			5/16" x 1-1/2" N.C.C.S. clamp and manifold to plunger (4 used)
22.	F 1641	Set screw for plunger pin (2 used) (3/4" x 1-1/2" sq. hd. set screw)			5/16" x 5/16" N.C. allen screw roller pin lock
23.	F 930	Cap, grease tube clamp			
24.	F 932	Spacer, grease tube clamp (2 used)			
25.	F 933	Protector tube for grease tube (3 used)			
26.	F 781	Grease tube, left front 14"			
27.	F 779	Grease tube, left rear 30"			

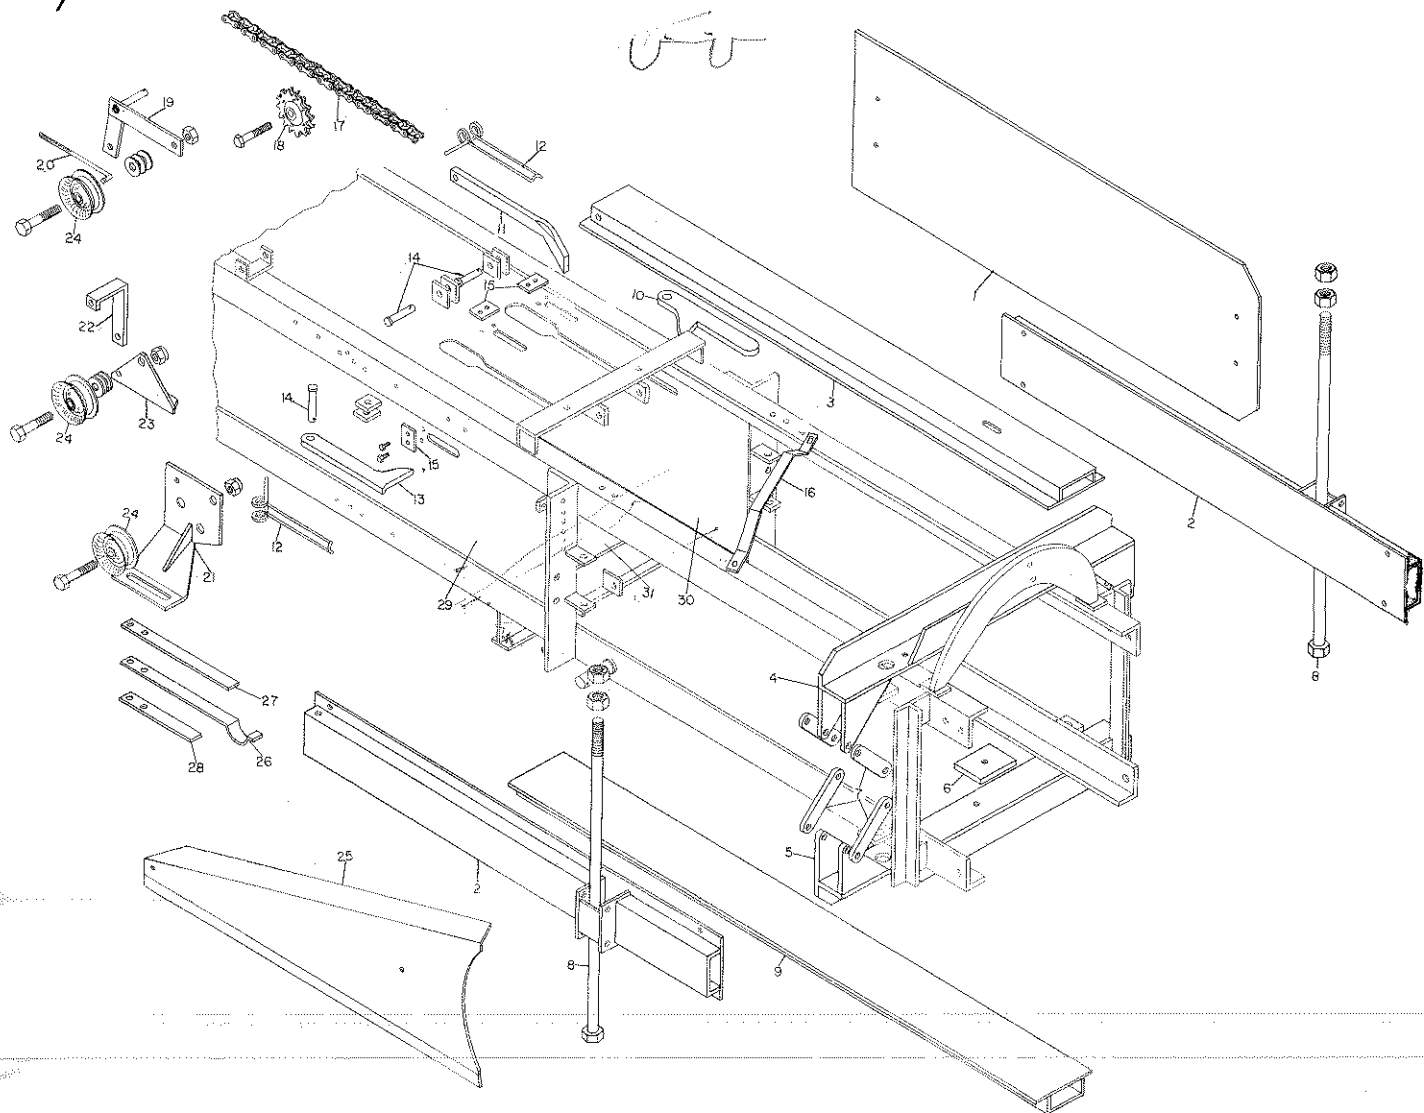 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7507	Solid side for 200 and 300 (2 used)		F 7055	Knotter drive chain, wire tie balers (239P) #60
2.	F 7121	Side tension rail (2 used)	18.	F 7397	Sprocket, (1/2" bore) for chain divider (2 used)
3.	F 1590	Top tension rail 200 only 64-	19.	F 841	Tightener bracket, knotter drive chain
	F 7122	Top tension rail 300 only (2 used)	20.	F 7670	Chain tightener adjusting bolt
4.	F 493	Top tension angle, 18" chamber	21.	F 1310	Saddle spring and idler roller bracket (twine only)
	F 7668	Top tension angle, 22" chamber	22.	F 1581	Bracket for knotter drive chain shield
	F 7669	Top tension angle, 23" chamber	23.	F 7516	Idler roller mounting plate (wire balers only)
5.	F 494	Bottom tension angle 18" chamber	24.	F 883	Tightener and idler pulley for knotter drive chain
	F 1151	Bottom tension angle 22" chamber	25.	F 7056	Shield, knotter drive chain (pull type balers)
	F 604	Bottom tension angle 23" chamber		F 5724	Shield, knotter drive chain (S. P. only)
6.	F 1662	Spacer shim 1 used on 200, 2 used on 300	26.	F 1494	Saddle spring
7.	F 497	Flat linkage bar (8 used)	27.	F 1495	Saddle spring helper
8.	F 600	Tension bolt, 3/4" x 27-3/4" (2 used)	28.	F 1216	Saddle spring stiffener
9.	F 7294	Bottom tension rail 200 only	29.	F 7221	Liner for bale chamber L.H.
	F 7123	Bottom tension rail 300 only (2 used)	30.	F 7220	Liner for bale chamber R. H.
10.	F 7563	Hay dog R.H.	31.	F 7296	Bale chamber bottom, 18" chamber
11.	F 837	Hay dog top and bottom		F 7223	Bale chamber bottom, 22" chamber
12.	F 188	Hay dog spring		F 7222	Bale chamber bottom, 23" chamber
13.	F 7562	Hay dog L.H.			
14.	F 220	Pin, hay dog			
15.	F 1589	Rubber pads for hay dogs w/screws			
16.	F 7322	Wire hold down 200 only			
	F 7321	Wire hold down 300 only			
17.	F 1392	Knotter drive chain, twine tie balers (238P) #60			

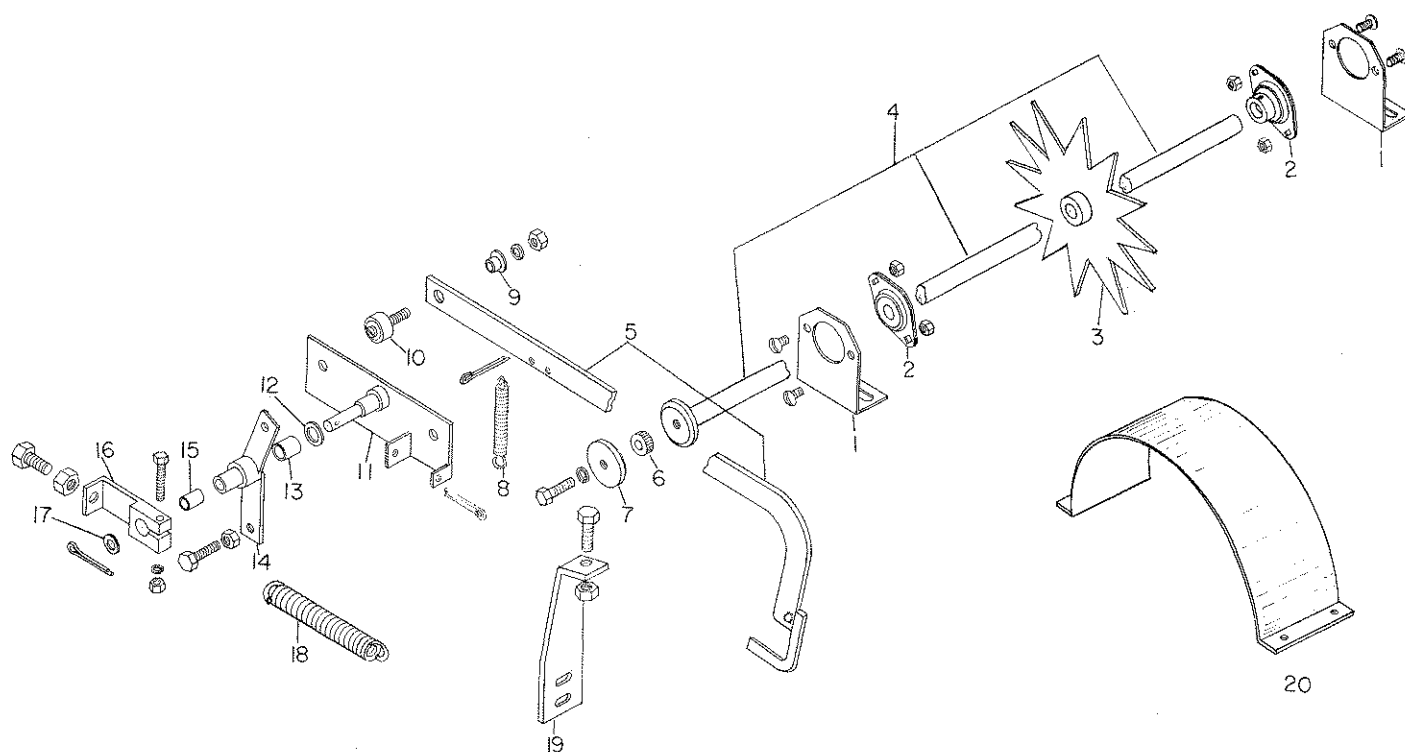 

REF. NO.	PART NO.	DESCRIPTION
1.	F 1617	Meter wheel shaft bracket (2 used) 65-
2.	F 1618	Meter wheel shaft bearing complete (2 used) 65-
	F 1619	Meter wheel shaft bearing only RAO12N. P. P. B. , 65-
3.	F 1531	Meter wheel, adjustable trip, 10"
4.	F 1564	Meter wheel shaft w/guide washer, 300 only 23" chamber
	F 1587	Meter wheel shaft w/guide wahser, 300 only 22" chamber
	F 1575	Meter wheel shaft w/guide washer, 200, 25A and 25AW
5.	F 1565	Meter trip bar
6.	F 1569	Knurled friction disc
7.	F 1571	Guide washer
8.	F 278	Spring
9.	F 440	Ferrule
10.	F 1572	Cam follower bearing
11.	F 1513	Knotter trip mount
12.		3/4" x 1-1/4" - 10 ga. machine bushing
13.	F 7227	Bushing 3/4" x 7/8" x 3/4" oilite
14.	F 1514	Reset lever
15.	F 1568	Bushing, rest lever 1/2" x 5/8" x 1" oilite
16.	F 1515	Clutch stop lever
17.		1/2" x 7/8" - 14 ga. machine bushing
18.	F 1517	Trip spring
19.	F 1632	Meter tripbar stop with bolt 65-
20.	F 1579	Shield for meter wheel 300 only
	F 1608	Shield for meter wheel 200, 25A and 25AW

 
1/2" x 1-1/2" N.C.C.S. trip bar stop

1/2" x 1-1/4" N.C.C.S. clutch stop


5/16" x 2" N.F.C.S. clutch stop clamp

3/8" x 1-1/4" N.C.C.S. knurled roller and washers


5/16" x 3/4" N.C.B.H. bearing to bracket

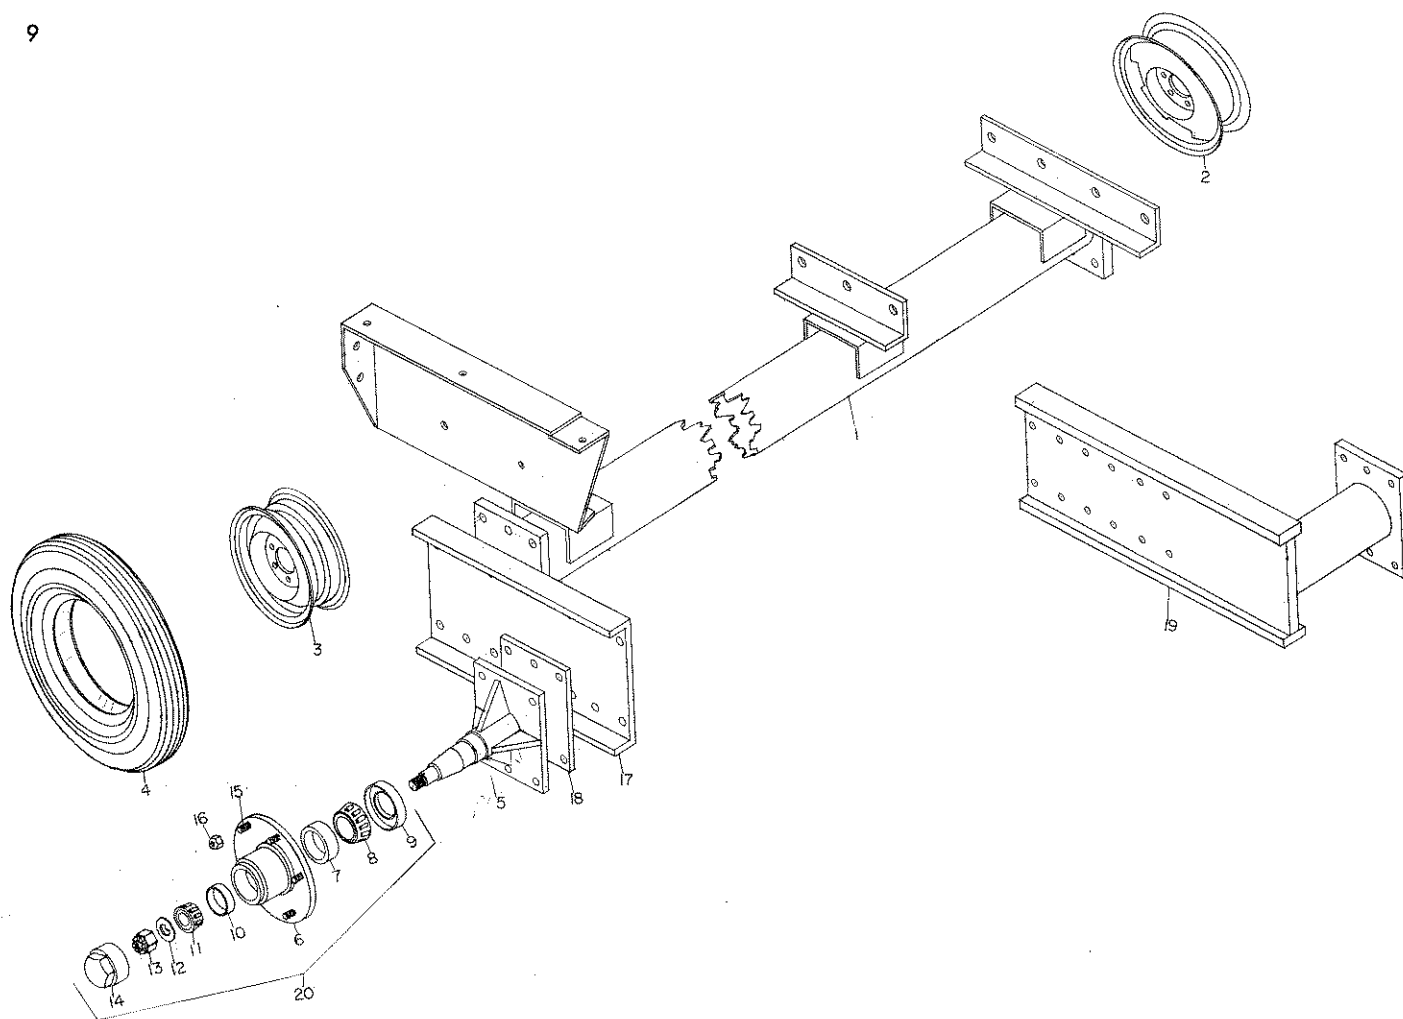


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7174	Tubular axle 23" chamber		F 325	Grease retainer for F 321 dual wheel hub 5875
	F 7217	Tubular axle 22" chamber	10.	F 1654	Outer cup for F 1624 hub 65- #L44610
	F 7298	Tubular axle, 18" chamber		F 1383	Outer cup for F 321 dual wheel hub #3320
2.	F 944	Wheel, flat base for F 1624 and F 364 hubs	11.	F 1626	Outer wheel bearing for F 1624 hub 65- #L44640
	F 322	Wheel, flat base for dual wheel hub No. F 321		F 324	Outer wheel bearing for F 321 dual wheel hub #3379
	F 731	Dual wheel with tire, tube and flat mounted	12.	F 884	Washer for F 1044 and F 1631 spindles
3.	F 211	Wheel, drop center for F 1624 and F 364 hubs		F 327	Washer for F 1043 dual wheel spindle
4.	F 212	Tire, 7:50 x 16 4 ply R.H.	13.	F 934	Nut for F 1631 and F 1044 spindles
	F 213	Tire, 7:50 x 16 8 ply L. H.		F 326	Nut for F 1043 dual wheel spindle
	F 215	Inner tube 7:50 x 16 for F212 tire R. H.	14.	F 1628	Hub cap for F 1624 hub #46749
	F 667	Inner tube 7:50 x 16 T and B for flat base rim		F 334	Hub cap for F 321 dual wheel hub #07347
	F 668	Flap for flat base rim	15.	F 462	Lug bolt for F 1624 and F 364 hub
5.	F 1044	Spindle for F 1624 and F 364 hub 200 only		F 335	Lug bolt for F 321 dual wheel hub
	F 1631	Spindle for F 1624 and F 364 hub R.H.	16.	F 214	Lug nut for F 462 bolt #15085
	F 1043	Spindle for F 321 dual wheel hub		F 433	Lug nut for F 335 dual wheel bolt
6.	F 1624	Hub with cups for F 211 and F 944 wheels	17.	F 7564	Mounting channel R.H. wheel
	F 321	Hub with cups for F 322 dual wheel #82165	18.	F 7636	Spacer plate used w/F7564 when using F 1044 spindle on R.H. wheel
7.	F 1653	Inner cup for F 1624 hub 65- L.M. 29710	19.	F 7649	Tandem wheel plate R or L
	F 1382	Inner cup for F 321 dual wheel hub #3720	20.	F 7662	Single wheel hub with bearings complete less spindle 65-
8.	F 1625	Inner wheel bearing for F1624 hub 65- #L.M. 29749		F 7663	Dual wheel hub with bearings complete less spindle
	F 323	Inner wheel bearing for F 321 dual wheel hub #3780		F1647	Dual wheel hub w/F 1043 spindle complete
9.	F 1627	Grease retainer for F 1624 hub 65- #54605 K.H.			

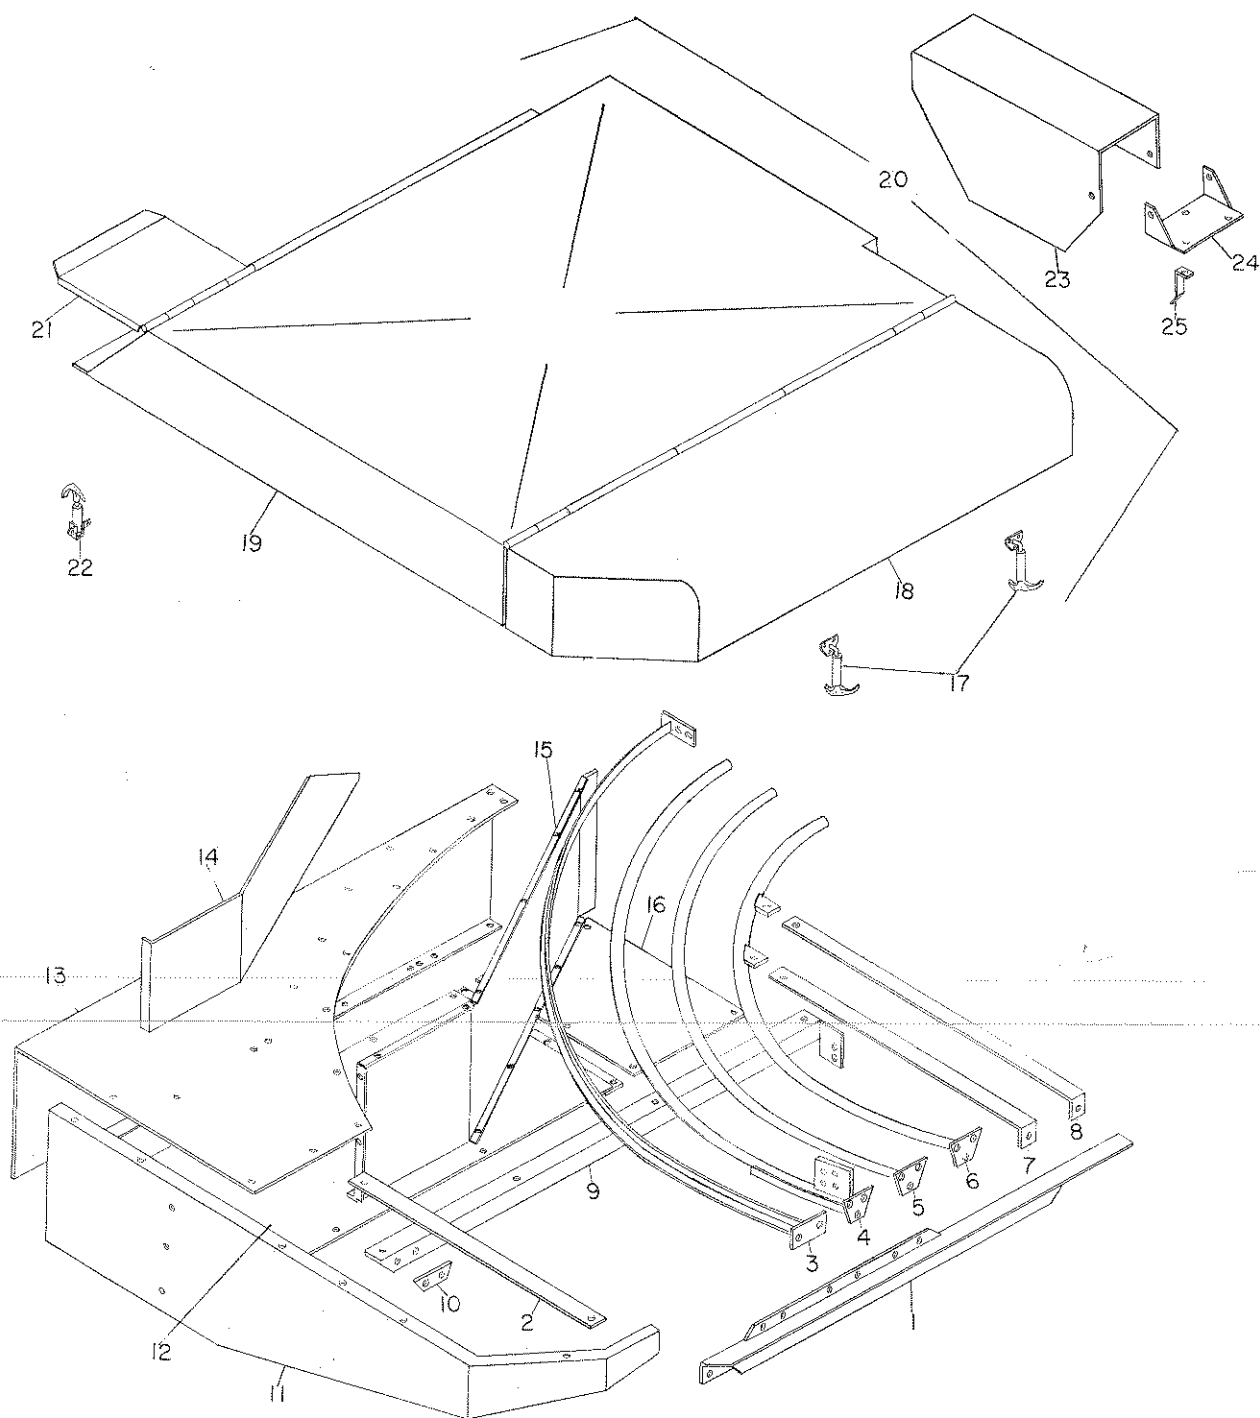 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7482	Support angle for guard pipes	13.	F 7142	Feeder house rear and top section
2.	F 7158	Hay hold down, outside	14.	F 7127	Upright shield under hood
3.	F 7299	Guard angle	15.	F 7152	Feeder house back sheet
4.	F 7472	Guard pipe, outside with latch mounting plate	16.	F 7145	Feeder house bottom wear plate
5.	F 7163	Guard pipe, center	17.	F 7166	Catch for access door
6.	F 7164	Guard pipe, inside	18.	F 7633	Access door for F 7551 shield 65-
7.	F 7159	Hay hold down, center	19.	F 7634	Shield over pickup, rear 65-
8.	F 7160	Hay hold down, inside	20.	F 7551	Shield over pickup complete 65-
9.	F 7157	Angle brace for feeder house bottom sheet	21.	F 7635	Tool box lid 65-
10.	F 7394	Pickup stop 63-	22.	F 853	Catch for tool box cover
11.	F 7143	Feeder house end plate	23.	F 7517	Shield for needle yoke drive arm and brake 65-
12.	F 7144	Feeder house bottom	24.	F 7579	Bracket knottor drive arm shield 65-
			25.	F 7654	Brace for F 7579 bracket

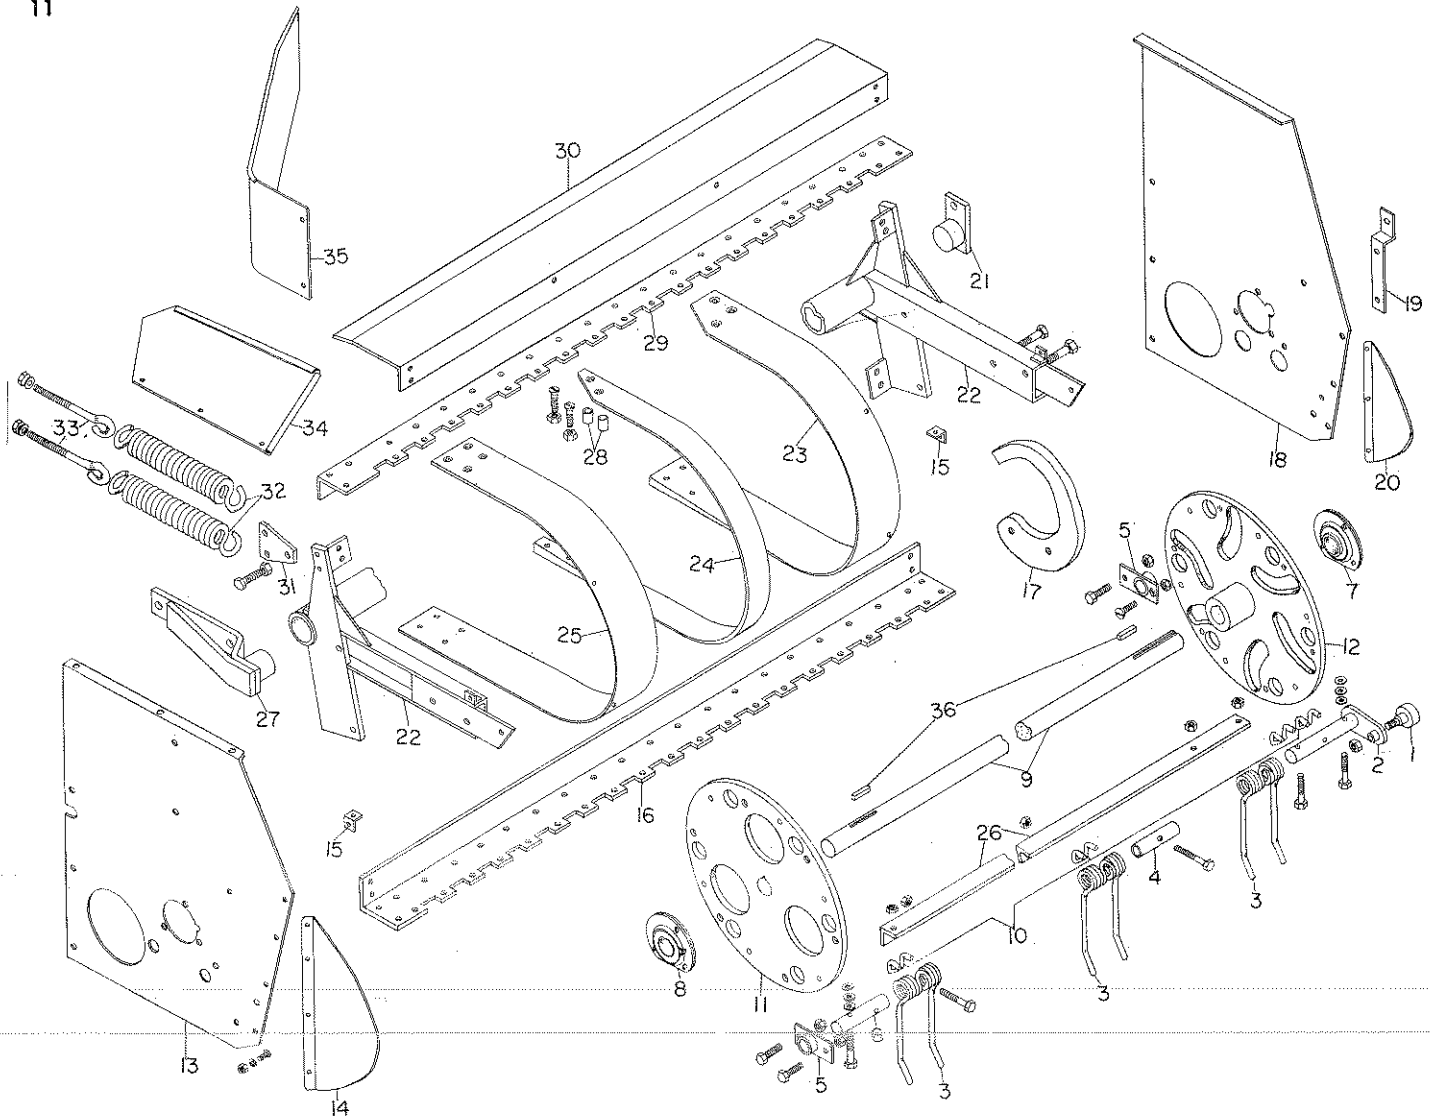 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7598	Roller for F 7597 cam lever 65-	19.	F 7194	Pickup lift bracket pull type
2.	F 7599	Cam lever only 65-		F 5737	Pickup lift bracket S.P. only
	F 7597	Cam lever with roller (6 used) 65-	20.	F 7151	Fender flare, inside
3.	F 1226	Pickup finger 6-1/2" shank (54 used)		F 7356	Fender flare extension, inside
4.	F 101	Pipe, pickup finger guide pipe (42 used)	21.	F 7176	Bearing L.H. pickup mounting
5.	F 7187	Tooth bar bearing (12 used)	22.	F 7177	Pickup frame
6.	F 98	Pin, tooth bar (6 used)	23.	F 7184	Stripper inside
7.	F 7584	Bearing pickup shaft L.H.	24.	F 7183	Stripper, center (17 used)
8.	F 7583	Bearing pickup shaft R.H.	25.	F 7185	Stripper, outside
9.	F 7179	Pickup shaft	26.	F 7186	Tooth bar (6 used)
10.	F 100	Pickup finger guide (60 used)	27.	F 7382	Bearing R.H. pickup mounting pull type
11.	F 7189	Pickup flange R.H.		F 5917	Bearing R.H. pickup mounting S.P. only
12.	F 7188	Pickup flange L.H.	28.	F 117	Pickup fender guard spacer (40 used)
13.	F 7573	Fender outside 65-	29.	F 7181	Top stripper bar
14.	F 7148	Fender flare, outside	30.	F 7182	Pickup joint sheet
	F 7355	Fender flare extension, outside	31.	F 7156	Spring plate
15.	F 7193	Fender mounting clip (4 used)	32.	F 7154	Spring for pickup balance (2 used)
16.	F 7180	Bottom stripper bar	33.	F 7155	Eyebolt for pickup balance spring (2 used)
17.	F 7190	Pickup cam	34.	F 7146	Skirt for fender
18.	F 7572	Fender inside 65-	35.	F 7149	Fender extension
			36.	F 97	Key 1/4" x 1/4" x 1-1/2" flange to shaft

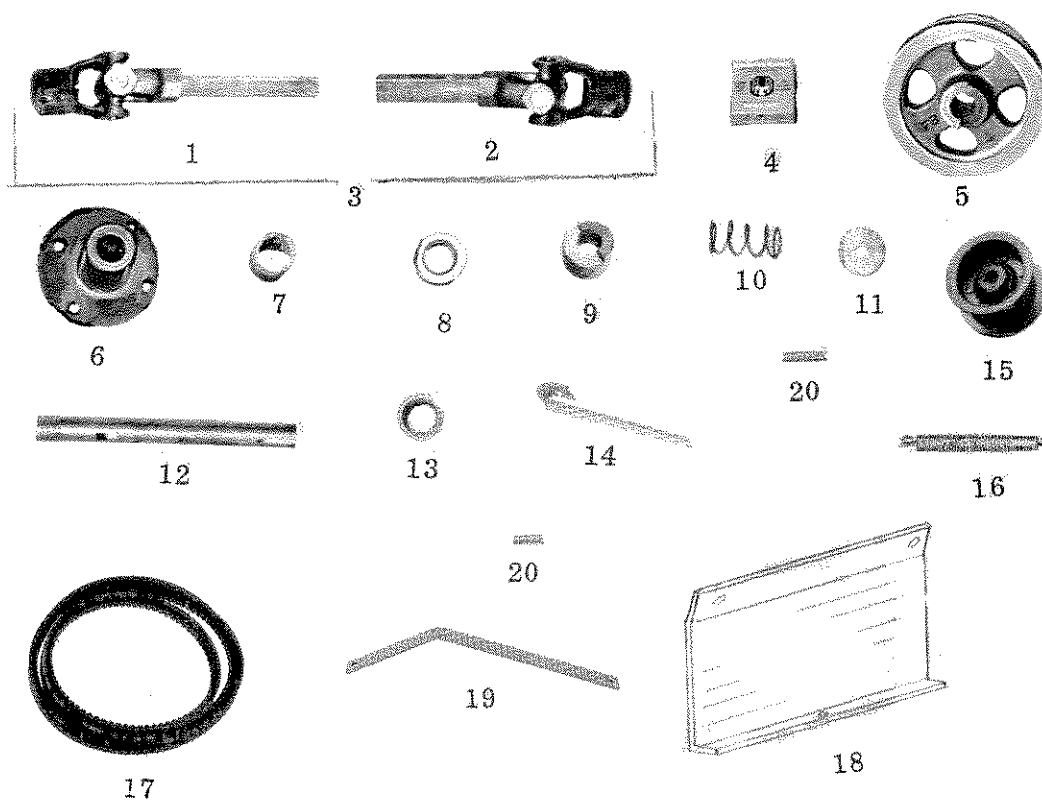 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7052	Universal with sq. shaft 300
	F 7300	Universal with sq. shaft 200
2.	F 7053	Universal with sq. tube 300
	F 7301	Universal with sq. tube 200
3.	F 7051	Universal drive shaft complete for pickup 300
	F 7302	Universal drive shaft complete for pickup 200
4.	F 318	Universal joint repair kit
5.	F 8A	Pickup driven sheave
6.	F 669	Pickup shaft bearing cage w/bearing and seal
7.	F 672	Needle bearing for F 669, #BH2216 (2 used)
8.	F 671	Grease seal for F 669, #40169 (2 used)
9.	F 7	Pickup clutch ring
10.	F 126	Pickup clutch spring
11.	F 418	Pickup clutch spring cap
12.	F 1264	Pickup drive shaft, hardened and ground
13.	F 99	Set collar 1-3/8"
14.	F 7546	Pickup drive belt tightener bracket
15.	F 840	Idler pulley, pickup belt tightener
16.	F 129	Spring, pickup belt tightener
17.	F 7535	Pickup drive belt CX105
18.	F 7304	Pickup drive shaft shield 300
	F 7305	Pickup drive shaft shield 200
19.	F 7303	Brace for shield on pickup drive shaft
20.	F 122	Key 1/4" x 1/4" x 2-1/2" (2 used)

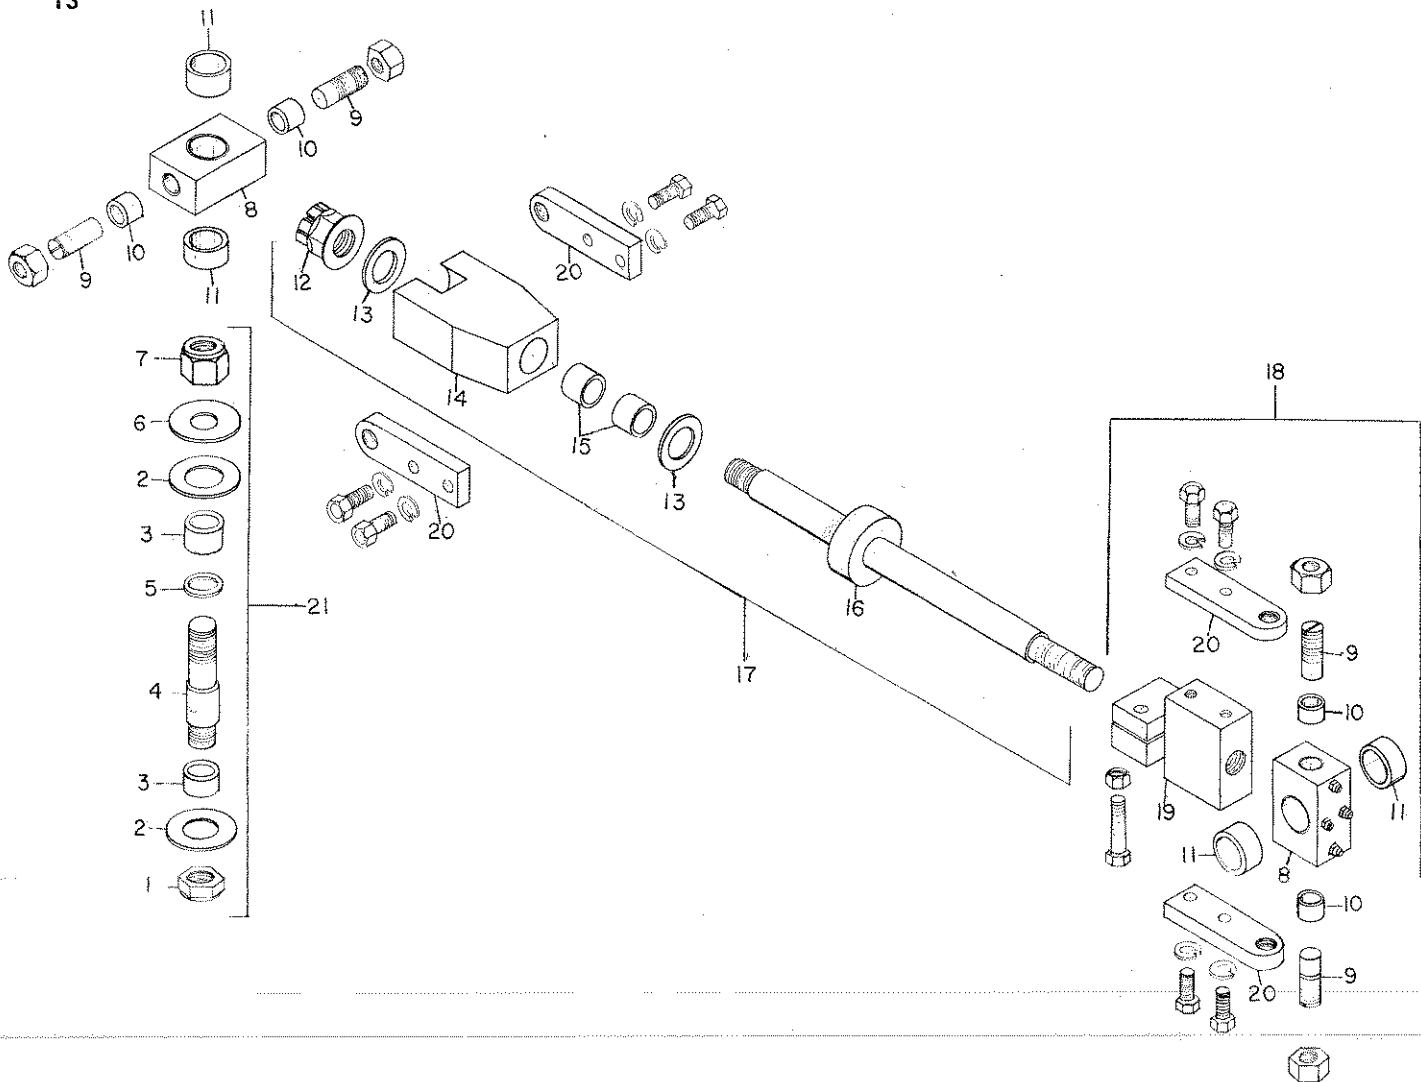 


REF. NO.	PART NO.	DESCRIPTION
1.	F 1386	Fibre lock nut (1" jam)
2.	F 1260	Hardened washer 1-3/8" x 2-1/2" x .025 (4 used)
3.	F 1071	Inner race for F 480 bearing, I.R. 1812 (4 used)
4.	F 1306	Crank pin only
5.	F 1259	Spacer for F 1071
6.	F 1261	Hardened washer 1" x 2-1/2" x .065 (2 used)
7.	F 1385	Fibre lock nut (1" full)
8.	F 486	Bearing block with bearings (2 used)
9.	F 485	Bearing pin in F 484 strap (4 used)
10.	F 481	Bearing in F 486 block, small (4 used)
11.	F 480	Bearing in F 486 block, large (4 used)
12.	F 7602	1" nut with thrust washer 65-
13.	F 7603	Thrust washer for F 7578 block 65-
14.	F 7578	Thrust bearing block 65-
15.	F 7612	Bushing for F 7578 block 1-3/16" x 1-5/16" x 1-1/4"
16.	F 7268	Feed arm conn. rod only
17.	F 7625	Feed arm conn. rod assembly
18.	F 482	Universal joint complete R.H. thread
19.	F 354	Adjusting block R.H. thread
20.	F 484	Strap for universal (4 used)
21.	F 1450	Crank pin with races, washers and nuts complete

 
F 5064
Early SP →
(30" long)

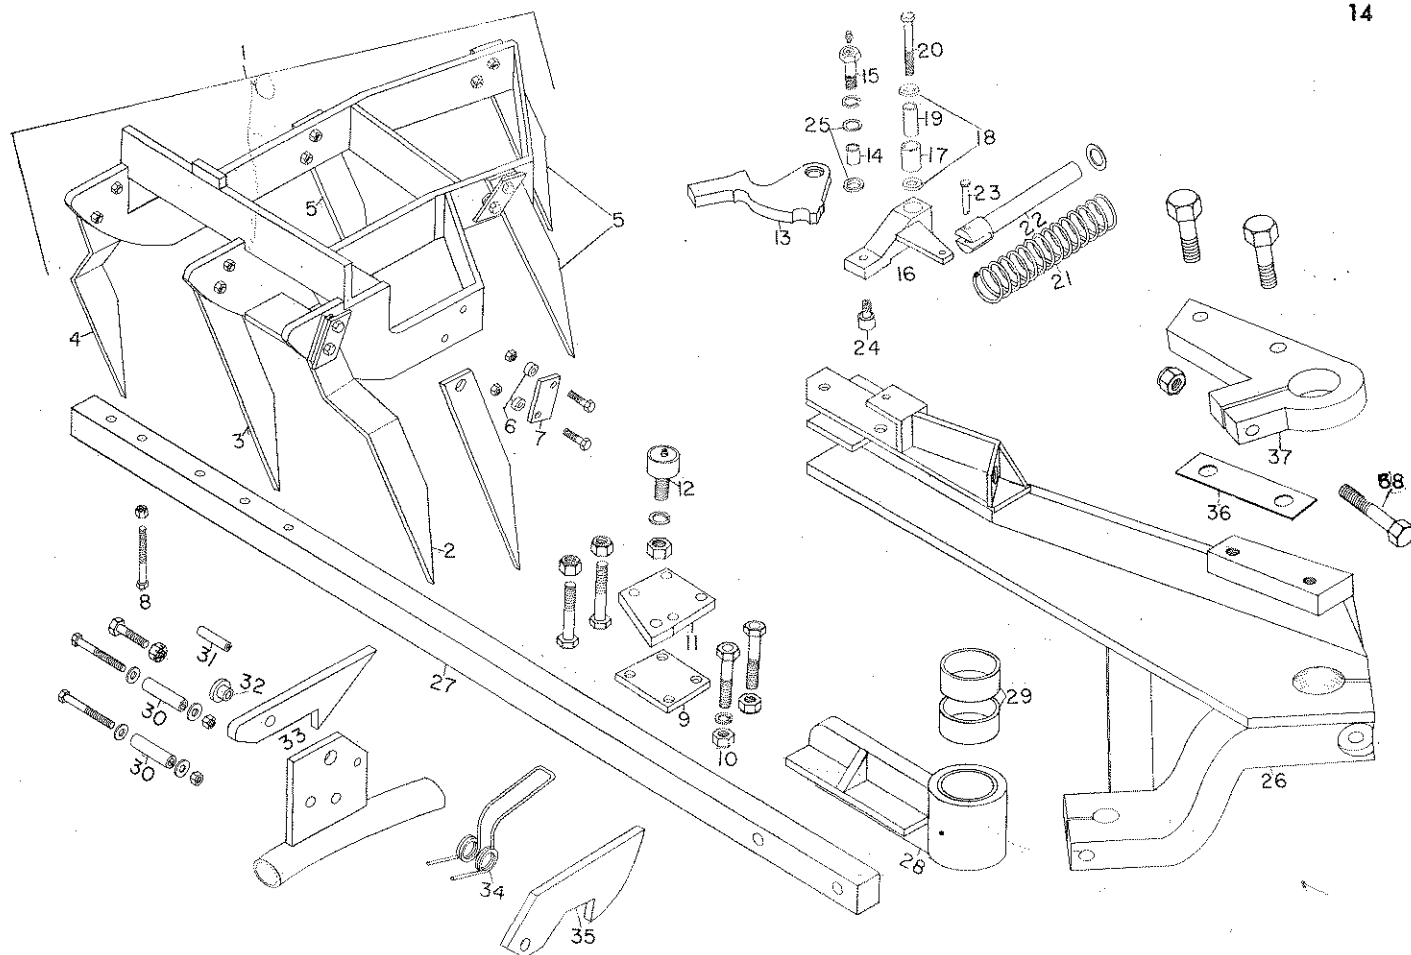


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7530	Feed fork complete 300 only 65-	20.	F 1559	Trip arm pin
	F 7531	Feed fork complete 200 only 65-	21.	F 1635	Trip arm spring 65-
2.	F 7265	Tine, trailing, inside (2-1/2" offset)	22.	F 1643	Trip arm spring rod 65-
3.	F 1191	Tine, trailing, center	23.	F 1561	Trip arm spring rod clevis pin
4.	F 7264	Tine, trailing, outside (2-1/2" offset)	24.	F 822	Cam follower for spring arm CFIS 65-
5.	F 1189	Tine, leading	25.	F 7610	Quad ring for F 7604 latch 65-
6.	F 1193	Bushing and stop for tines	26.	F 7577	Feed arm 65-
7.	F 1195	Clip for tines	27.	F 7529	Torque shaft, 1-1/2" 65-
8.	F 1266	Bolt 3/8" x 2-1/2" N.F.H.T.C.S.	28.	F 7660	Torque shaft bearing with bushing 65-
9.	F 7532	Bottom plate 65-	29.	F 1235	Bushings for torque shaft bearing 2" x 2-1/2" x 1"
10.	F 7534	Bolt 3/8" x 2-3/4" N.F.H.T.C.S.	30.	F 7275	Roll pin 1/2" x 2-1/2" (2 used)
11.	F 7533	Roller plate 65-	31.	F 7239	Roll pin 3/8" x 1-1/2"
12.	F 4050	Latch roller	32.	F 7276	Ferrule for F 1563
13.	F 7604	Latch 65-	33.	F 7277	Catch for torque shaft, 1963 only
14.	F 7607	Bushing for F 7604 latch 65-	34.	F 281	Spring for latch
15.	F 7605	Latch hinge pin 65-	35.	F 1563	Catch for torque shaft 64-
16.	F 7606	Trip arm 65-	36.	F 1648	Shim for straddle mount, 16 ga.
17.	F 1556	Trip arm bushing		F 1649	Shim for straddle mount, 22 ga.
18.	F 1557	O-ring (2 used)	37.	F 1634	Straddle mount plate for pivot shaft
19.	F 1558	Trip arm sleeve	38.	F 1673	Bolt, feed arm clamp, 1/2" x 3" N.F. grade 8

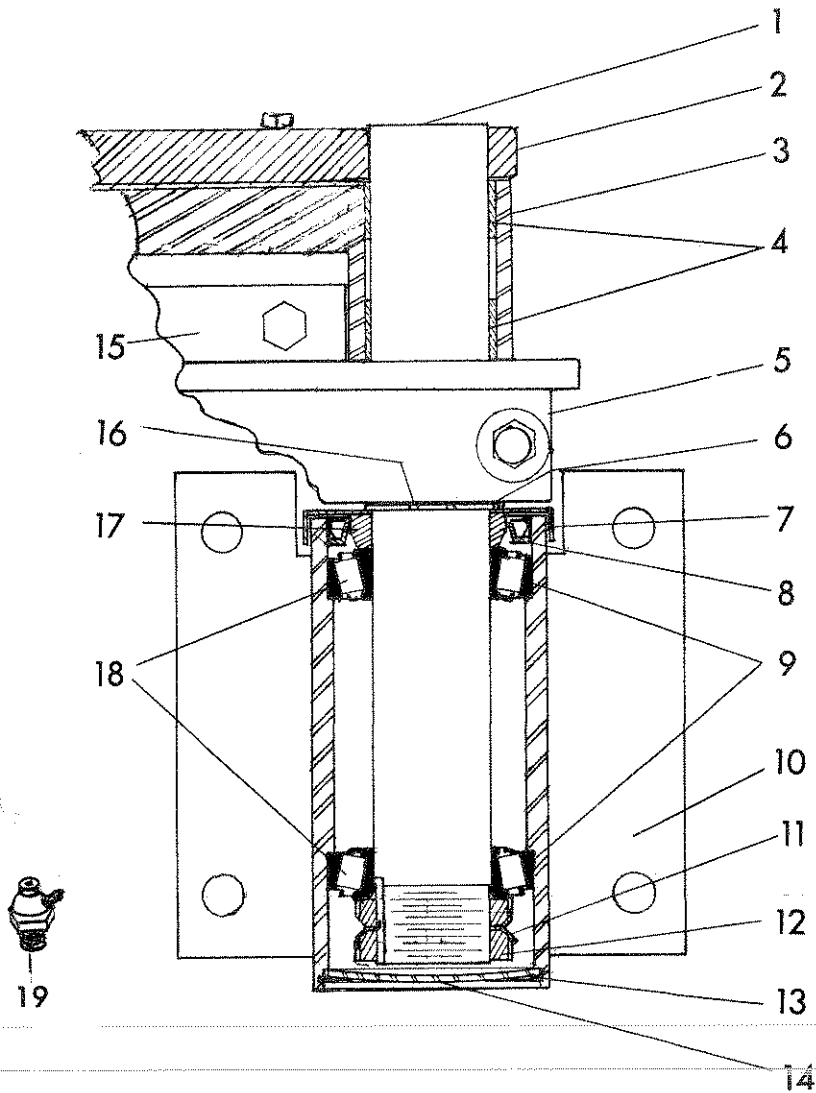 

REF. NO.	PART NO.	DESCRIPTION
1.	F 1427	Pivot shaft, replaces F 1229 63-
	F 1229	Pivot shaft, see F 1427
2.	F 1634	Straddle mount plate for pivot shaft 65-
3.	F 7660	Feed arm torque shaft bearing with bushing
4.	F 1235	Bronze bushing (2" x 2-1/4" x 1") (2 used)
5.	F 7577	Feed arm
6.	F 1238	Retaining pin 5/32" x 3/4" roll pin used w/F 1229 shaft
7.	F 1239	Dust cap
8.	F 1428	Oil seal, used with F 1427 shaft (Nat. 55093)
	F 1240	Oil seal, used with F 1229 shaft (Nat. 55368)
9.	F 5445	Bearing cup 362A (2 used)
10.	F 1244	Feed arm bearing housing w/2-F5445 bearing cups
11.	F 1246	Lock wash (W-10)
12.	F 1245	Nut, bearing takeup (N-10) (2 used)
13.	F 1247	Retaining ring (RR375)
14.	F 1248	Plug cap (HP3750-134)
15.	F 7529	Torque shaft
16.	F 1237	Snap ring used with F 1229 shaft only (5100-200)
17.	F 1241	Bearing shoulder and seal race, used w/F1229 shaft
18.	F 5446	Bearing cone (368A) (2 used)
	F 1377	Spacer washer for feed arm bearing
19.	F 1661	Hydraulic shut-off fitting. #1940B
	F 1444	Pivot shaft tube assembly w/bearings and F 1427 shaft complete
	F 1250	Pivot shaft plate 16" chamber
	F 1251	Pivot shaft plate 17" chamber

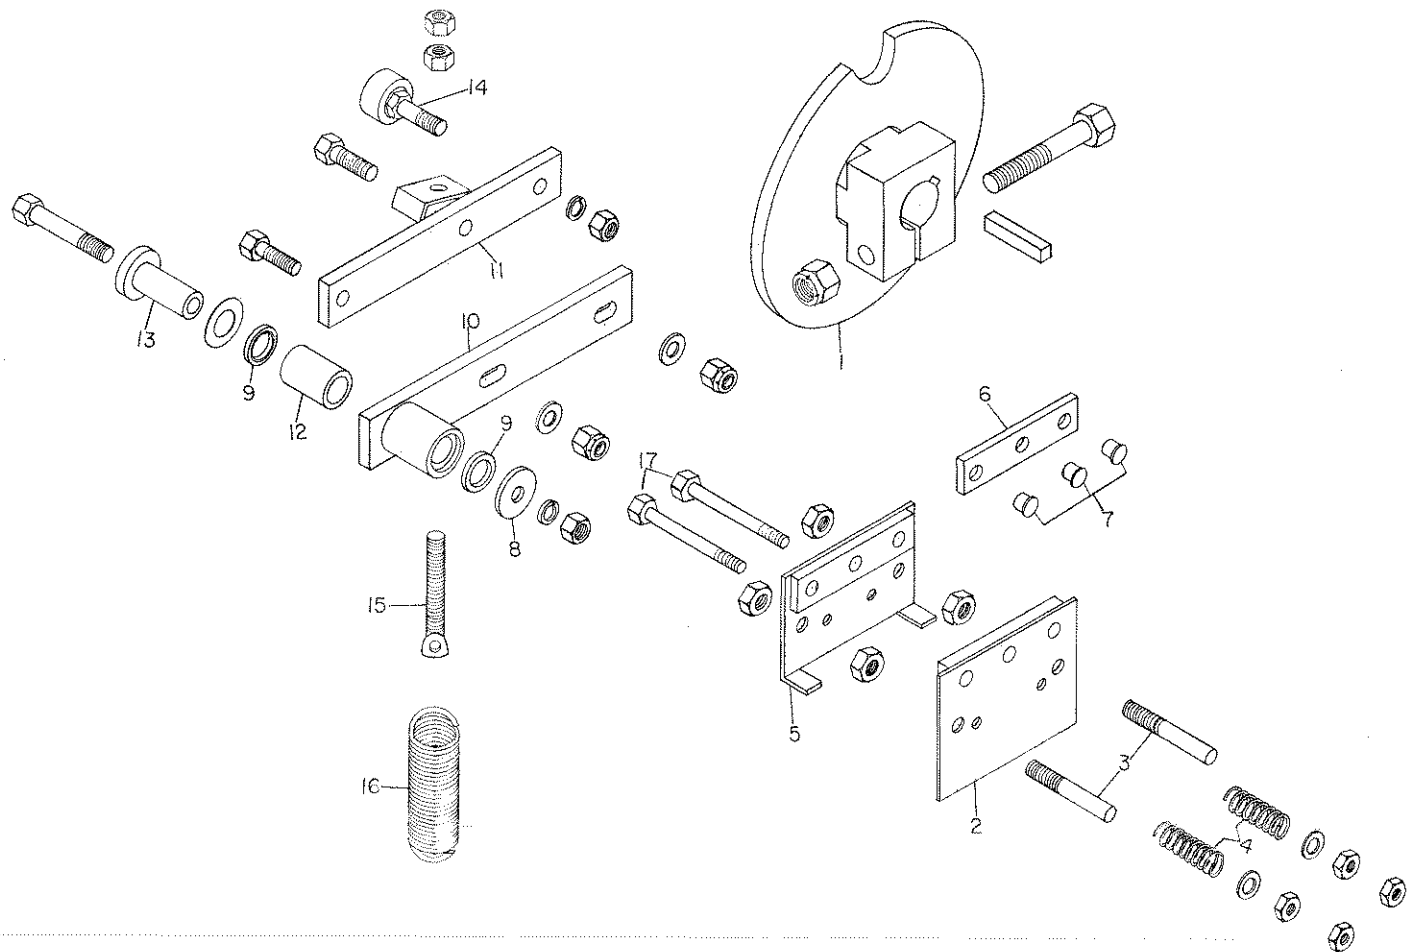 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7528	Brake disc with hard notch
2.	F 7450	Outside brake plate with lining
3.	F 7451	Brake plate stud (2 used)
4.	F 7453	Brake plate spring (2 used)
5.	F 7449	Inside brake plate with lining
6.	F 7454	Brake lining with rivets (2 used)
7.		Rivets for brake lining (6 used)
8.	F 246	Saddle lever washer
9.	F 7587	Seal for saddle lever anchor (63123 Victor) 65-
10.	F 7561	Saddle lever lower half with bushing 65-
11.	F 7560	Saddle lever upperhalf with spring anchor 65-
12.	F 7586	Bushing for saddle lever 3/4" x 1" x 1-1/2" 65-
13.	F 7585	Saddle lever sleeve 65-
14.	F 1572	Cam follower, saddle lever
15.	F 7448	Saddle lever spring eyebolt
16.	F 7559	Saddle lever spring
17.	F 7452	Brake plate bolt, 1/4" x 3-1/2" N.C.
		3/8" x 3/8" x 2" key for brake disc
		1/2" x 3-1/4" N.C. cap screw w/fibre lock nut for brake clamp
		5/16" x 1-1/4" N.C. cap screw w/fibre lock nut for saddle lever
		3/8" x 3-1/2" N.C. cap screw w/fibre lock nut for saddle lever anchor

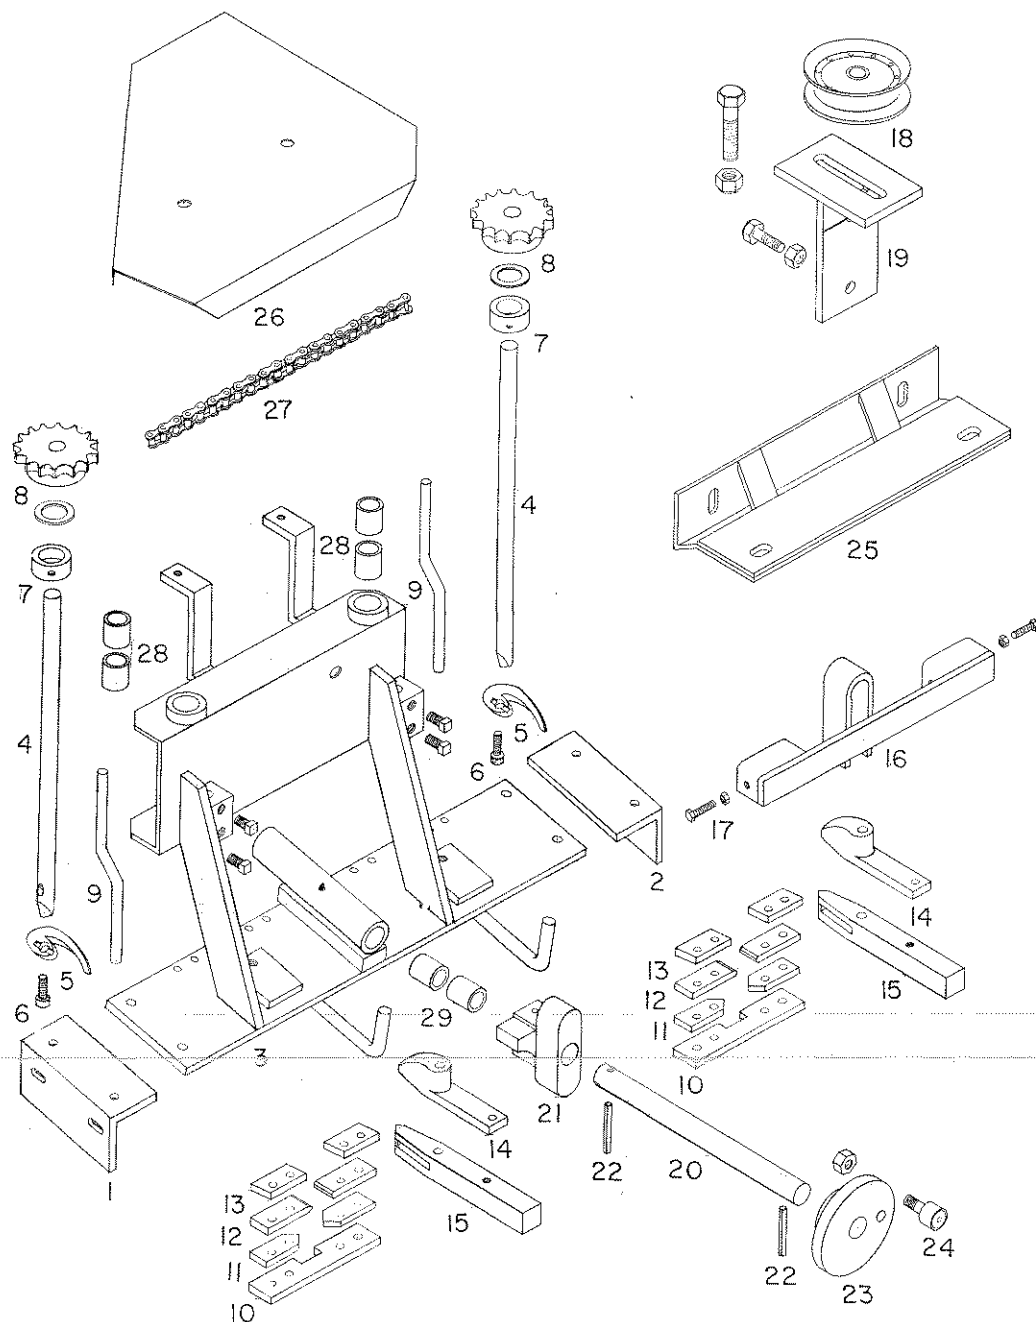 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7062	Knotter mounting angle, L. H.
2.	F 7065	Knotter mounting angle, R. H.
3.	F 7387	Twister and shuttle bar frame, 23" chamber
	F 7388	Twister and shuttle bar frame, 22" chamber
	F 7311	Twister and shuttle bar frame, 18" chamber
4.	F 7089	Twister shaft
5.	F 4046	Twister hook
6.	F 7248	Twister hook bolt
7.	F 172	Set collar, 3/4"
8.	F 4024	Sprocket, twister shaft, 15T
9.	F 7318	Wire holder rod
10.	F 7087	Wire knife
11.	F 7086	Gripper spacer, bottom
12.	F 7085	Wire gripper
13.	F 7084	Gripper, top plate
14.	F 7312	Wire divider
15.	F 7313	Wire gripper tongue
16.	F 7080	Shuttle bar w/adjusting screws, 300W only
	F 7316	Shuttle bar w/adjusting screws, 200W only
17.	F 7081	Shuttle bar adjusting screws

REF. NO.	PART NO.	DESCRIPTION
18.	F 7330	Chain tightener pulley - 300W only
19.	F 7329	Chain tightener pulley bracket
20.	F 7077	Cam shaft
21.	F 7075	Shuttle bar drive cam
22.	F 7076	Roll pin, 1/4" x 1 1/2"
23.	F 7078	Shuttle bar crank flange
24.	F 7079	Cam follower
25.	F 7315	Upper wire guide bracket - 300W only
	F 7353	Upper wire guide bracket - 200W only
26.	F 7064	Shield - 300W only
	F 7317	Shield - 200W only
27.	F 7066	Twister drive chain - 300W only, 84P #40
	F 7348	Twister drive chain - 200W only, 64P #40
28.	F 7227	Bushing, twister shaft
29.	F 7227	Bushing, cam shaft

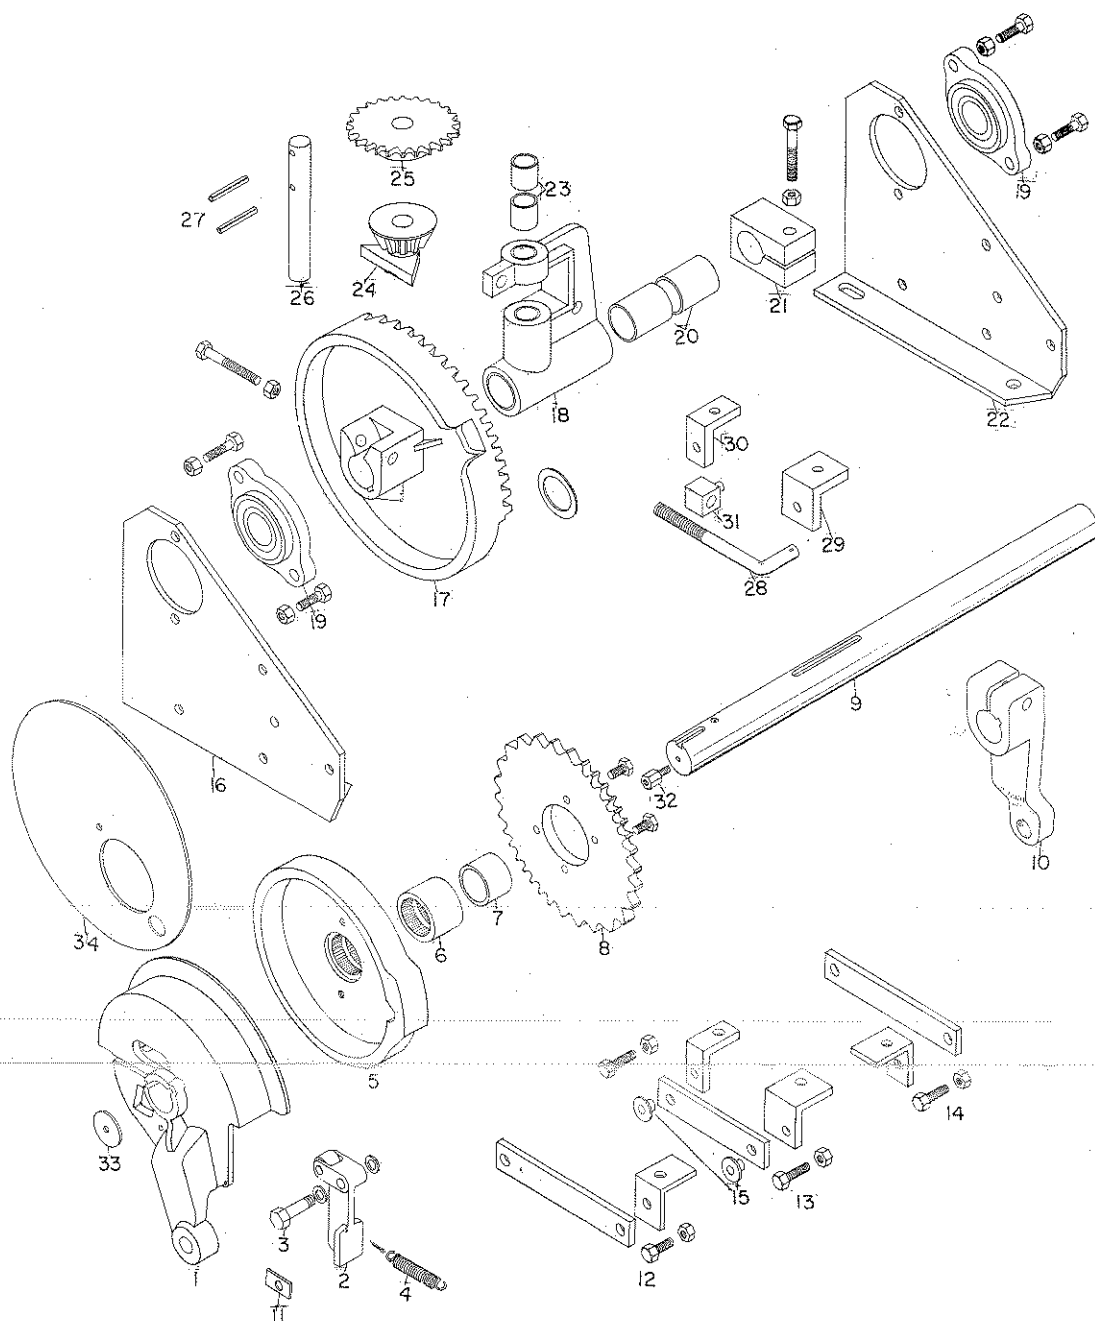 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7519	Clutch w/pawl 1-3/8" 65-
2.	F 1622	Clutch pawl 65-
	F 1623	Washer each side of pawl 7/16" I. D. x 7/8" O. D. x .025 65-
3.	F 1633	Clutch pawl pin 65-
4.	F 4115	Spring, clutch pawl 65-
5.	F 4133	Notched clutch disc with F 4134 bearing 1-3/8"
6.	F 4134	Bearing for F 4133 disc
7.	F 4135	Inner race for F 4134 bearing
	F 4136	Hardened washer between F 7519 and F 4133
8.	F 755	Clutch sprocket (32T-#60)
9.	F 7456	Knotter shaft, 300W
	F 7457	Knotter shaft, 200W
10.	F 7461	Needle yoke drive arm 300 only
11.	F 1620	Clutch pawl pin lock
12.	F 7349	Brace w/angle L. H. 300W only
13.	F 7346	Brace w/angle center, 300W only
14.	F 7345	Brace w/angle R. H., 300W only
15.	F 440	Ferrule for F 7346 brace, 300W only
16.	F 7571	Knotter mount L. H.


REF. NO.	PART NO.	DESCRIPTION
17.	F 7432	Intermittent gear, used with F 7431 pinion
18.	F 7072	Pinion frame
19.	F 7063	Bearing, knotter shaft (2 used)
20.	F 4137	Bushing for F 7072 frame, 1-3/8" x 1-1/2" x 2"
21.	F 4138	Clamp collar
22.	F 7570	Knotter mount R. H.
23.	F 7247	Bushing for F 7072 frame 7/8" x 1" x 1"
24.	F 7431	Pinion, used with F 7432 gear
25.	F 7257	Twister drive sprocket, 25T
26.	F 7069	Pinion shaft
27.	F 7076	Roll pin, pinion to shaft 1/4" x 1-1/2"
	F 4030	Roll pin, sprocket to shaft 1/4" x 2"
28.	F 7334	Chain tightener rod, 200W only
29.	F 7332	Angle for chain tightener rod, rear, 200 only
	F 7333	Angle for chain tightener rod, 200 only
31.	F 7335	Block for chain tightener rod, 200 only
32.	F 1576	Adapter for zerk, end of knotter shaft 3/8" S. A. E.
33.	F 246	Knotter shaft end washer, L. H.
34.	F 1577	Shield for knotter clutch

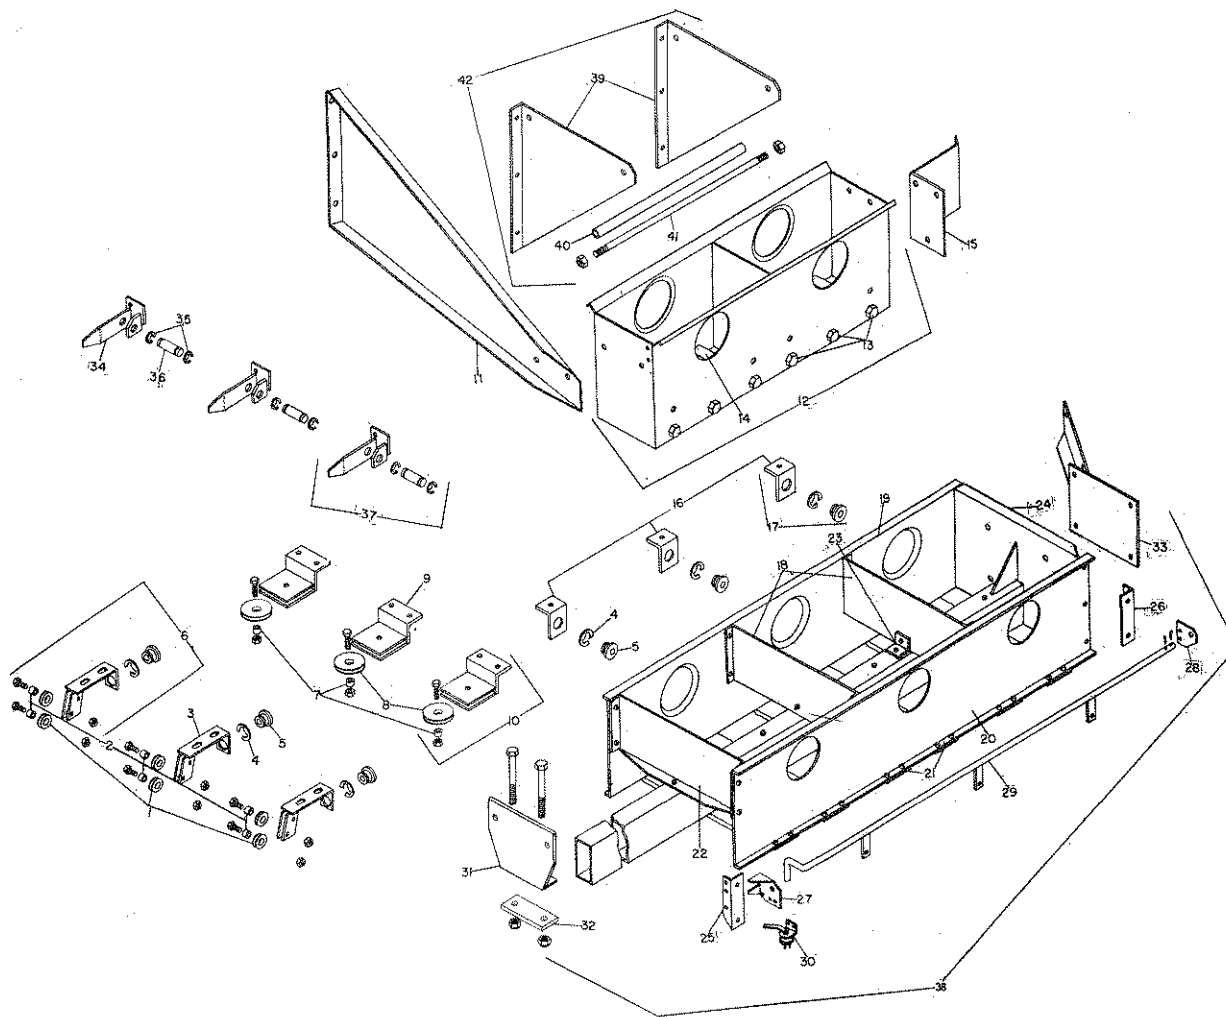 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 4014	Roller for wire guide and needle	25.	F 7644	Angle for wire alarm mounting bracket L.H.
2.	F 4015	Bushing for F 4014 roller	26.	F 7645	Angle for wire alarm mounting bracket R.H.
3.	F 4222	Wire guide frame only lower rear	27.	F 4191	Mounting bracket for F 7608 and F 7648 L.H.
4.	F 857	Snap ring for F 856	28.	F 4190	Mounting bracket for F 7608 and F 7648 R.H.
5.	F 856	Wire guide bushing	29.	F 7608	Rod for wire alarm 300 only
6.	F 4205	Wire guide complete, lower rear		F 7648	Rod for wire alarm 200 only
7.	F 4068	Bushing for F 4067 roller	30.	F 946	Switch only for wire alarm
8.	F 4067	Roller, lower front wire guide	31.	F 7555	Wire box mounting bracket L.H. 300 only
9.	F 4223	Wire guide frame only lower front	32.	F 7556	Bottom support plate for F 7555 300 only
10.	F 4069	Wire guide complete, lower front	33.	F 7557	Wire box mounting bracket R.H. 300 only
11.	F 7327	Wire box mounting bracket L.H., 200 only	34.	F 4225	Upper wire guide bracket only
12.	F 7344	Wire box complete, 2 compartment, 200 only	35.	F 5159	Snap ring for wear pin
	F 7476	Wire box complete, 4 compartment, 200 only	36.	F 4204	Upper wire guide wear pin
13.	F 4194	Stay bolt for 2 compartment wire box	37.	F 4203	Upper wire guide complete with pin
	F 4211	Stay bolt for 4 compartment wire box	38.	F 7515	6 compartment wire box complete with braces, light switch & harness
14.	F 4195	Pipe spacer for wire box	39.	F 7136	Wire carrier bracket (2 used on 200, 3 used on 300)
15.	F 7477	Wire box mounting bracket 200 only 2 compartment box	40.	F 7232	Pipe spacer, wire carrier, long (200 and 300)
	F 7478	Wire box mounting bracket 200 only 4 compartment box		F 7231	Pipe spacer, wire carrier, short 300
16.	F 4163	Wire guide bracket, rear	41.	F 4206	Stay bolt, wire carrier, 200 only
17.	F 4224	Wire guide bracket complete with bushing		F 7230	Stay bolt, wire carrier, 300 only
18.	F 7637	Wire box divider 300 only (2 used)	42.	F 7297	Wire carrier, complete, 200 only
19.	F 7638	Wire box side (front), 300 only		F 7135	Wire carrier complete 300 only
20.	F 7639	Wire box side (rear), 300 only	Not shown		
21.	F 7640	Wire box bottom slats, 300 only (6 used)		F 5906	Wire guide bracket with roller under feeder house, 300W S.P. only
22.	F 7641	Wire box left end			
23.	F 7642	Wire box divider angle (2 used)			
24.	F 7643	Wire box base divider w/end plate			

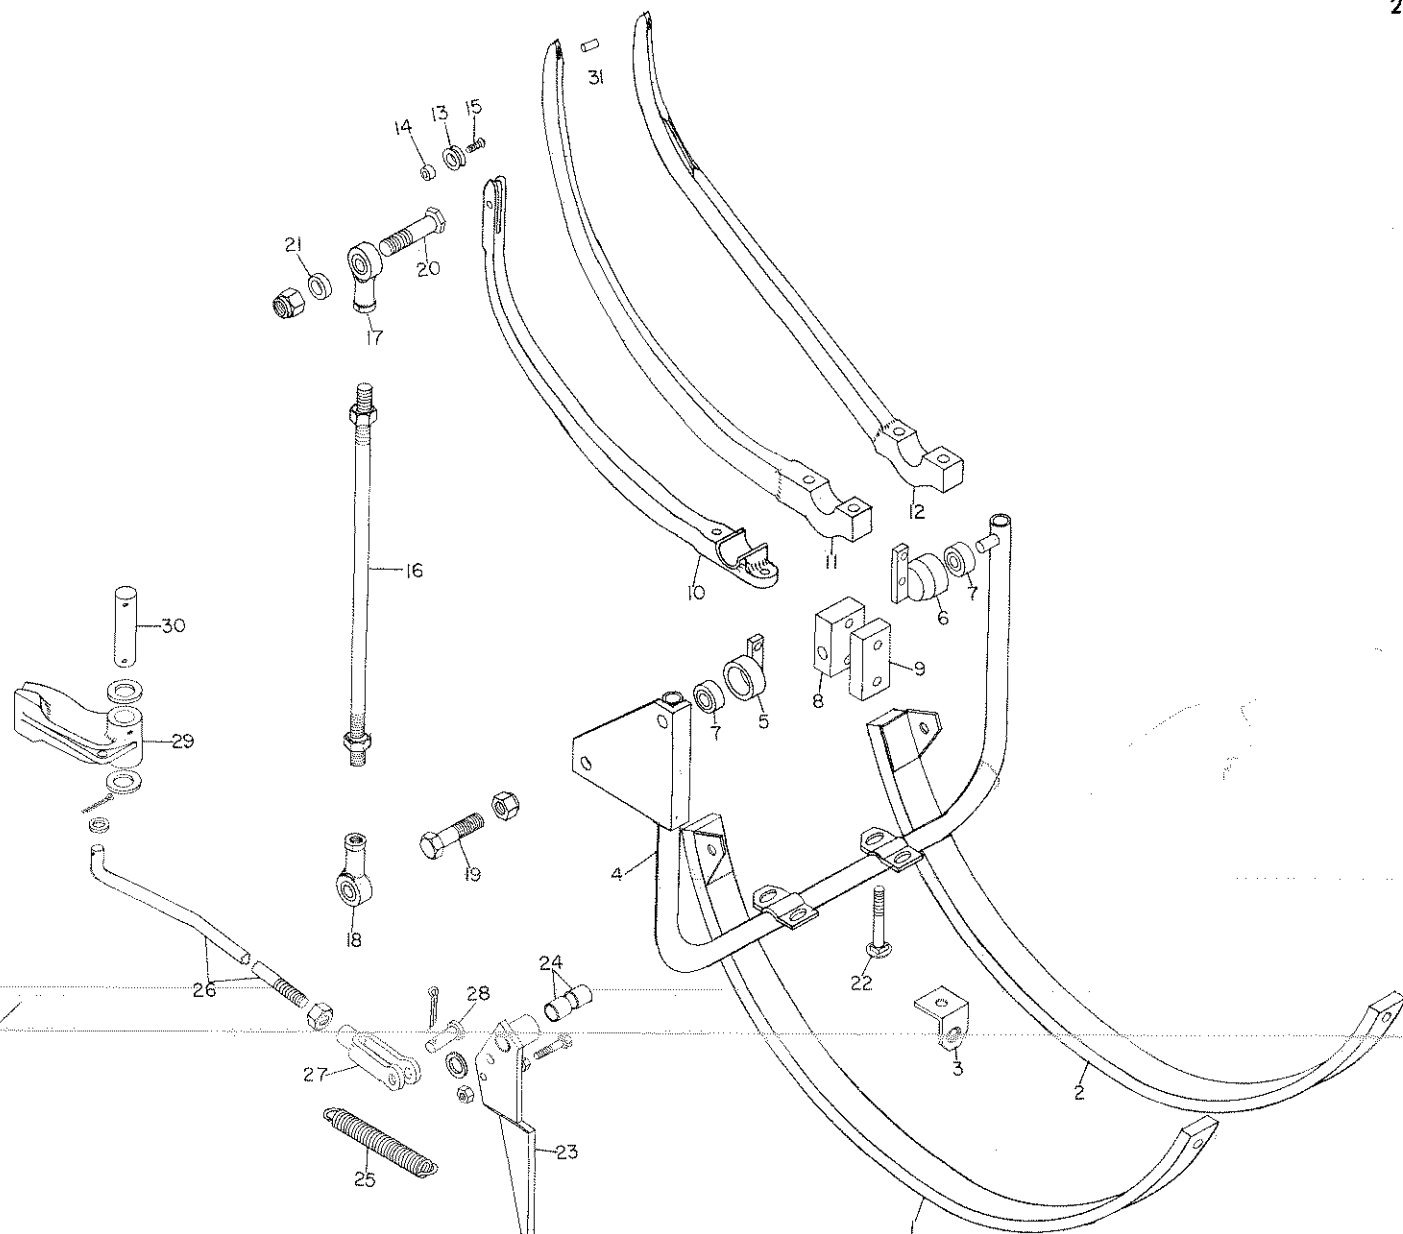 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 7569	Needle guard L.H. 65-	15.	F 4016	Bolt, needle roller
2.	F 7568	Needle guard R.H. 65-	16.	F 7554	Needle yoke drive rod wire only 65-
3.	F 153	Needle twine guide		F 1548	Needle yoke drive rod twine only used with F 1549 and F 1550
4.	F 7558	Needle yoke 200 wire only 65-	17.	F 1549	Needle yoke drive rod end R.H. thread
	F 7575	Needle yoke, 200 twine only 65-	18.	F 1550	Needle yoke drive rod end L.H. thread
	F 7520	Needle yoke 300 wire only 65-	19.	F 1552	Bolt, drive rod to needle yoke with nut
	F 7574	Needle yoke 300 twine only 65-	20.	F 1551	Bolt, drive rod to clutch with nut
5.	F 7522	Needle yoke bearing complete L.H. 65-wire only	21.	F 172	Spacer collar used on twine tie only
6.	F 7521	Needle yoke bearing complete R.H. 65-wire only	22.	F 7552	Bolt, needle to yoke with nut 1/2" x 3-1/4 carriage
7.	F 7523	Bearing for F 7521 and F 7522 KP12A 65-	23.	F 7525	Plunger dog return lever 300W, 200W and 200T 65-
8.	F 4150	Needle yoke bearing, R.H. and L.H. 2 twine only		F 7652	Plunger dog return lever 300T 65-
9.	F 898	Spacer for needle yoke bearing used w/F 333 needles	24.	F 7247	Bushing for plunger dog return lever 7/8" x 1" x 1" 65-
10.	F 7513	Needle, wide base, wire only	25.	F 1517	Plunger dog return spring 65-
11.	F 1395	Needle, Mag. curved twine only	26.	F 7524	Plunger dog return rod 65-
12.	F 333	Needle, Mag. straight, twine only	27.	F 7526	Clevis for dog return rod 65-
13.	F 4014	Roller for needle and wire guide 21/32" bore	28.	F 7527	Clevis pin for F 7526 clevis 65-
14.	F 4015	Bushing for F 4014 roller	29.	F 7547	Plunger stop dog 65-
			30.	F 7588	Plunger stop dog pin 65
			31.	F 1660	Pin for twine needle

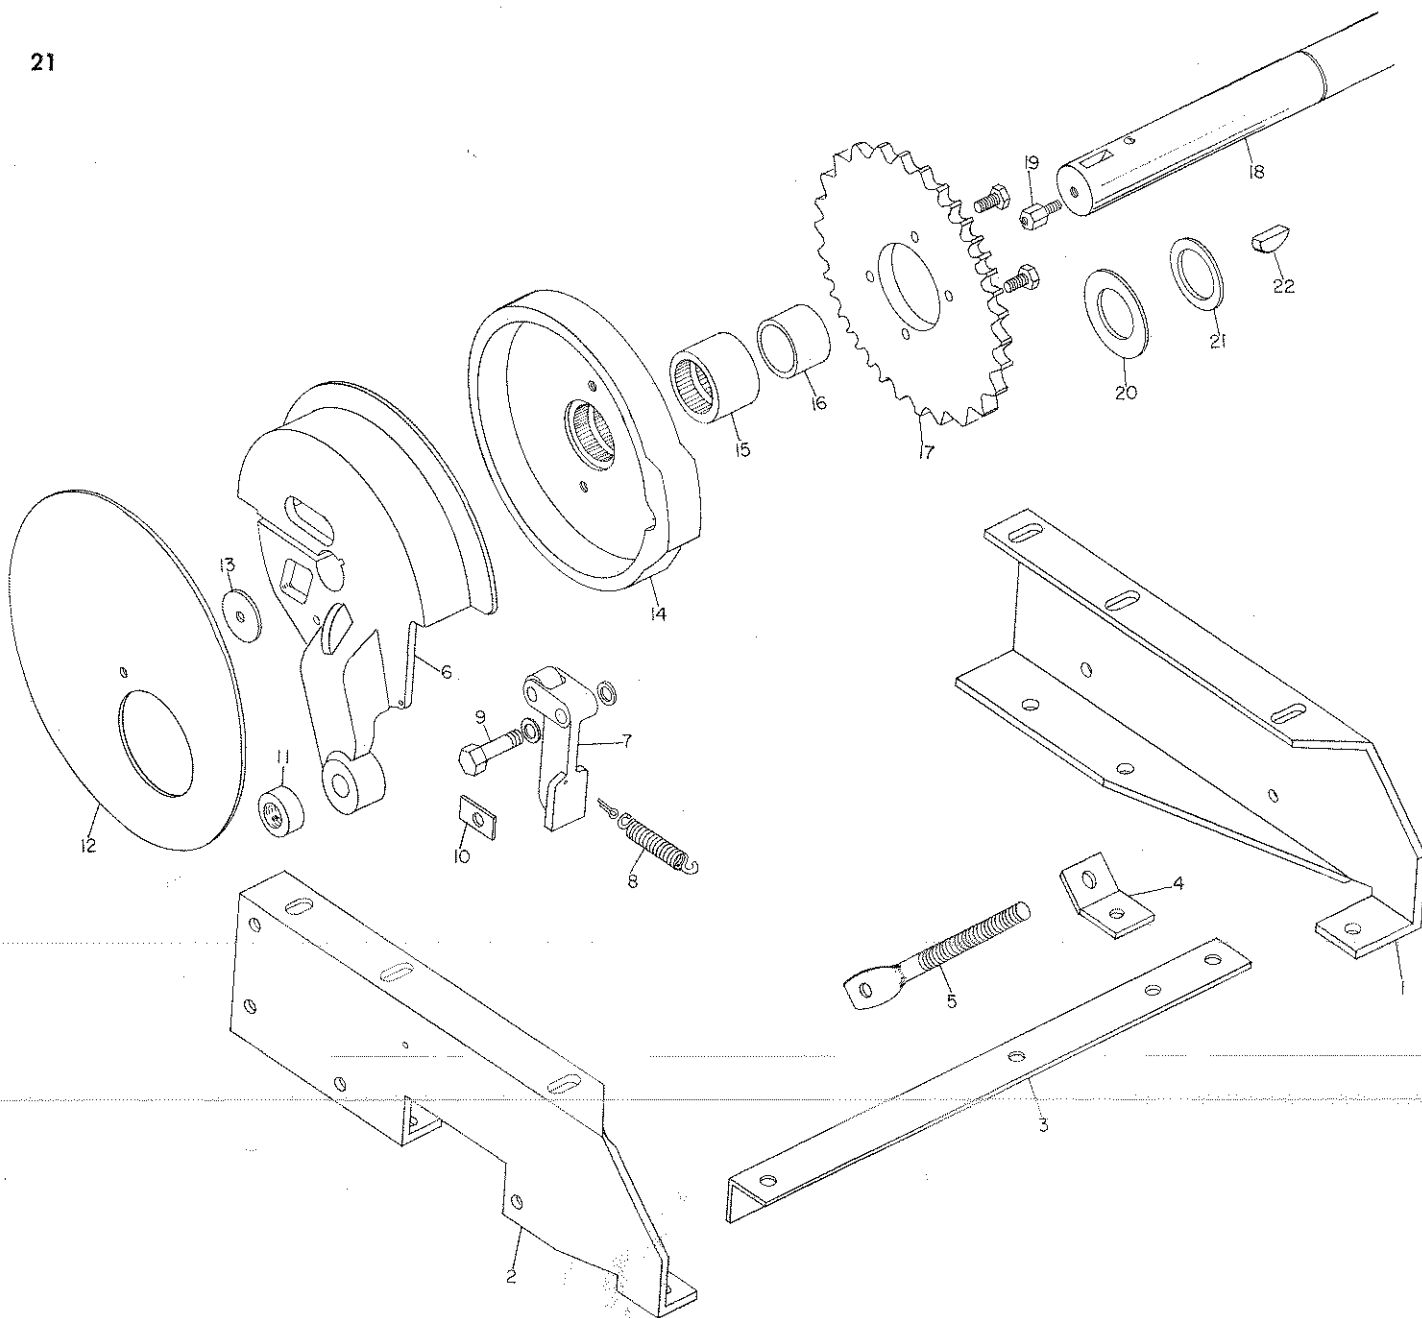 


REF. NO.	PART NO.	DESCRIPTION
1.	F 1393	Knotter mount, R.H. 300T only
	F 7324	Knotter mount, R.H. 200T only
2.	F 1394	Knotter mount, L.H. 300T only
	F 7325	Knotter mount L.H. 200T only
3.	F 710	Tie bar, knotter mounting rail 200T
	F 768	Tie bar, knotter mounting rail 300T
4.	F 711	Knotter anchor strap
5.	F 12	Knotter anchor bolt
6.	F 1621	Clutch with pawl 1-1/8" shaft, twine only 65-
7.	F 1622	Clutch pawl 65-
	F 1623	Washer, each side of clutch pawl (7/16" I. D. x 7/8" O. D. x .025)
8.	F 4115	Spring, clutch pawl
9.	F 1633	Clutch pawl pin
10.	F 1620	Clutch pawl pin lock
11.	F 172	3/4" spacer collar
12.	F 1577	Shield for knotter clutch
13.	F 246	Washer end of knotter shaft L, H.
14.	F 4076	Notched clutch disc, with F 4077 bearing 1-1/8"
15.	F 4077	Bearing in F 4076 clutch disc, GR22 S. S.

REF. NO.	PART NO.	DESCRIPTION
16.	F 4078	Inner race for F 4077 bearing 1-1/8" M. L. 18
17.	F 755	Sprocket, knotter clutch 32T #60
18.	F 539	Knotter shaft 200T
	F 540	Knotter shaft 300T
19.	F 746	Adapter for zerk, end of knotter shaft
20.	F 766	Washer, hardened, each side of F 4077 bearing 1-1/8", 16 ga.
21.	F 247	Washer, knotter shaft spacer, 10 ga.
	F 248	Washer, knotter shaft spacer, 14 ga.
	F 249	Washer, knotter shaft spacer, 18 ga.
22.	F 83	Woodruff key 3/8" x 1-1/4"

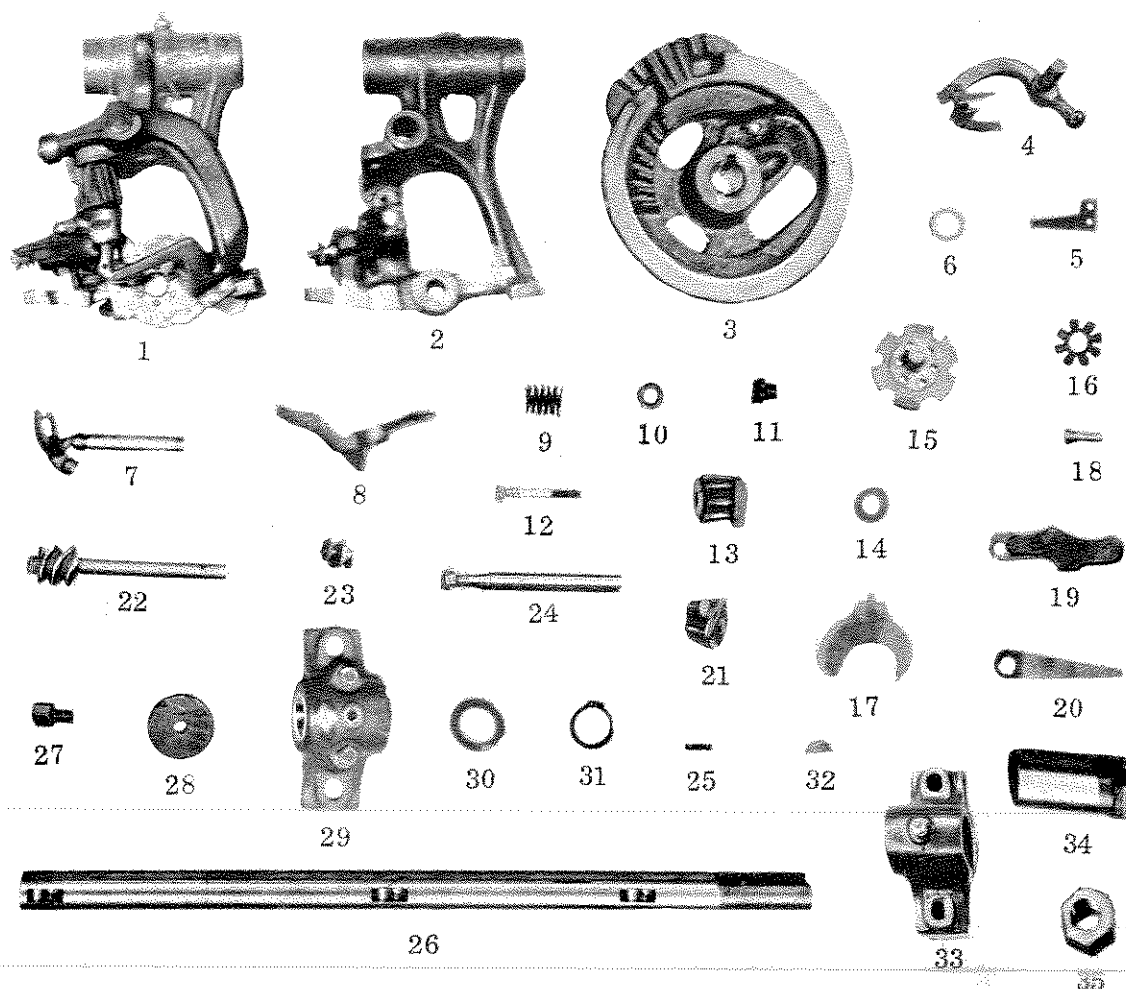 


REF. NO.	PART NO.	DESCRIPTION
1.	F 74A	Knotter frame complete
2.	F 75	Knotter frame only
3.	F 241	Knotter cam gear
4.	F 680	Twine knife arm complete
5.	F 267	Twine knife only
6.	F 660	Washer, knife arm, 14 ga.
	F 661	Washer, knife arm, 20 ga.
7.	F 40	Knotter bill hook
8.	F 238	Knotter hook cam
9.	F 224	Knotter hook cam adj. spring
10.	F 656	Washer, bill hook cam adjusting spring
11.	F 240	Knotter hook cam adj. screw nut
12.	F 239	Knotter hook cam adj. screw
13.	F 263	Pinion, knotter hook
14.	F 657	Washer, knotter worm shaft, 10 ga.
	F 658	Washer, knotter worm shaft, 14 ga.
	F 659	Washer, knotter worm shaft, 18 ga.
15.	F 949	Twine disc (triple)
16.	F 265	Pinion, twine holder disc
17.	F 236	Twine disc cleaner
18.	F 365	Twine holder pin

REF. NO.	PART NO.	DESCRIPTION
19.	F 78	Twine holder
20.	F 235	Twine holder spring
21.	F 234	Pinion, knotter worm
22.	F 264	Knotter worm complete
23.	F 663	Knotter worm only
24.	F 662	Knotter worm shaft
25.	F 237	Taper pin
26.	F 540	Knotter shaft 300T only
	F 539	Knotter shaft 200T only
27.	F 746	Adapter for zerk, end of knotter shaft
28.	F 246	Knotter shaft end washer
29.	F 244	Knotter shaft bearing, L. H.
30.	F 247	Knotter shaft spacer washer, 10 ga.
	F 248	Knotter shaft spacer washer, 14 ga.
	F 249	Knotter shaft spacer washer, 18 ga.
	F 602	Washer, hard (each side of retaining ring)
31.	F 543	Retaining ring
32.	F 83	Woodruff key, 3/8" x 1-1/4"
33.	F 541	Knotter shaft bearing, R. H.
34.	F 542	Adjusting collar
35.	F 544	Lock nut, knotter shaft

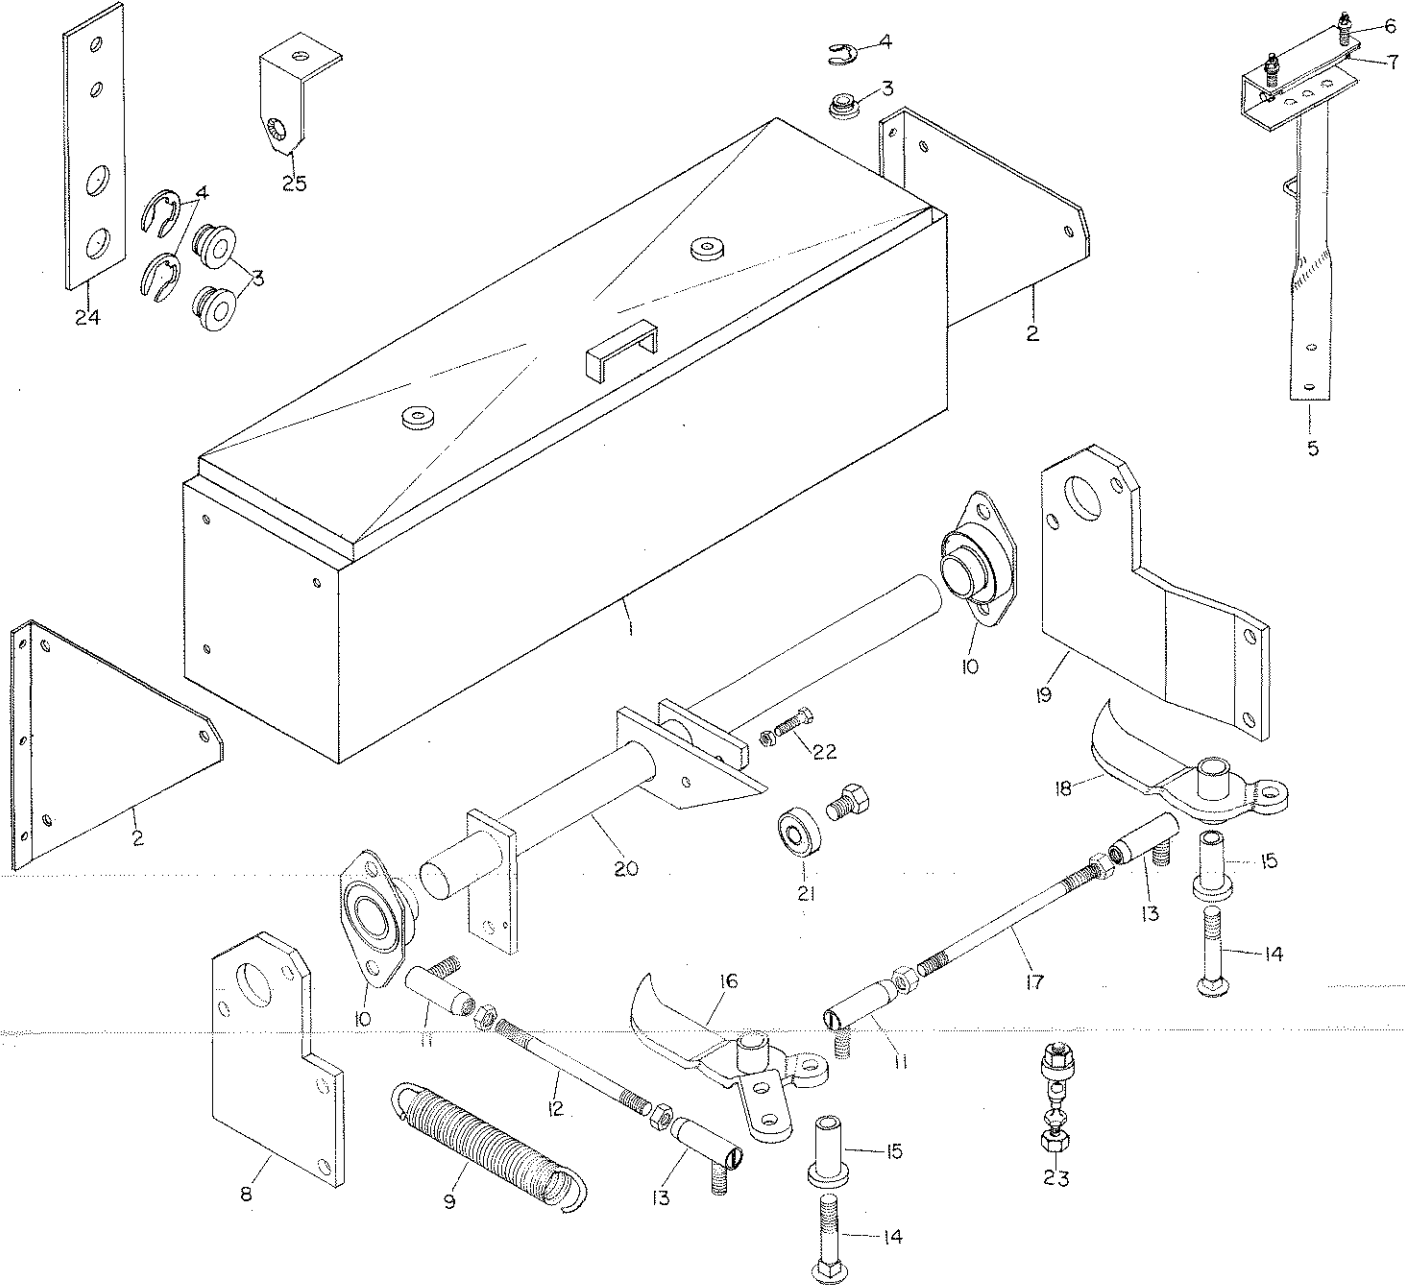 


REF. NO.	PART NO.	DESCRIPTION
1.	F 1456	Twine box (4 compartment) 200 only
	F 7485	Twine box (6 compartment) 300 only
2.	F 7136	Bracket for mounting twine box
3.	F 856	Twine guide bushing
4.	F 857	Snap ring for F 856
5.	F 523	Twine tension assembly complete, 200 and 300
6.	F 169	Spring, twine tension assembly
7.	F 1655	Roller twine tension assembly
8.	F 1291	Mount, twine finger drive shaft L. H.
9.	F 747	Spring, twine finger return
10.	F 1290	Bearing, twine finger drive rod (2 used)
11.	F 1294	Ball joint, twine finger drive R. H. thread (2 used)
12.	F 1293	Twine finger drive rod
13.	F 1295	Ball joint, twine finger drive L. H. thread (2 used)
14.	F 1672	3/8" x 2-1/2" Grade 8, carriage bolt with nut

REF. NO.	PART NO.	DESCRIPTION
15.	F 181	Bushing, twine finger
16.	F 1536	Twine finger, L. H. used with ball joint
17.	F 1297	Twine finger cross rod with nuts 200T only
	F 1298	Twine finger cross rod with nuts 300T only
18.	F 565	Twine finger R. H. and center
19.	F 1292	Mount, twine finger drive shaft R. H.
20.	F 1288	Twine finger drive shaft assembly 200T only
	F 1289	Twine finger drive shaft assembly 300T only
21.	F 570	Roller, twine finger drive (on cam gear) 6200-22
22.		1/4" x 1" N. C. cap screw
23.	F 1296	Ball joint, center 300T only
24.	F 524	Holder for twine guide bushing 200T
	F 525	Holder for twine guide bushing 300T
25.	F 153	Needle twine guide

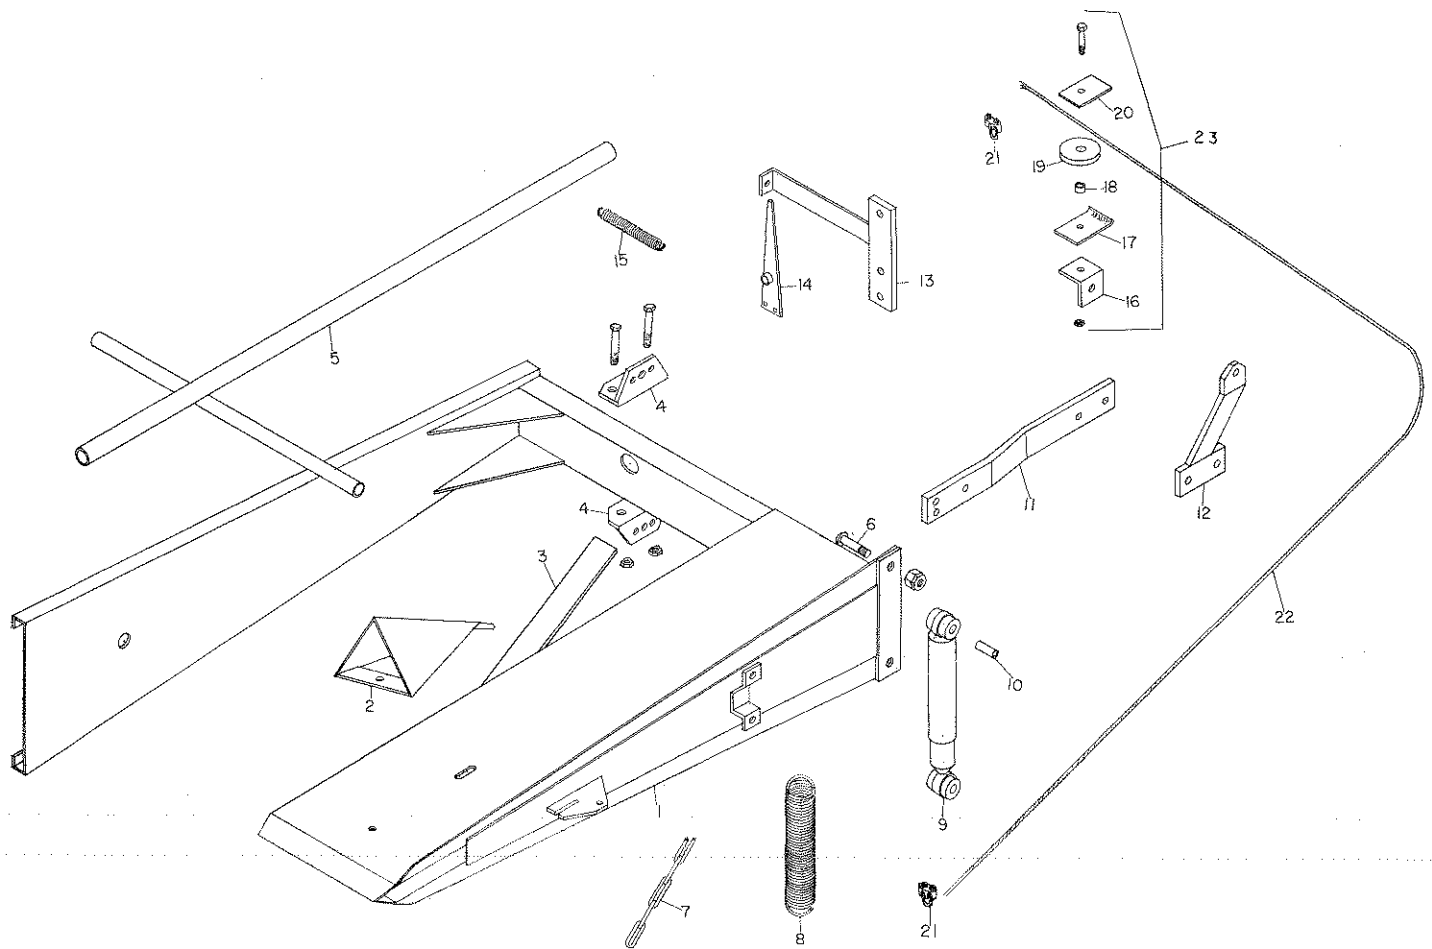 


REF. NO.	PART NO.	DESCRIPTION
1.	F 7600	Bale chute, combination 300 only 65-
	F 7601	Bale chute, combination 200 only 65-
2.	F 7655	Bale turner
3.	F 7656	Bale skid
4.	F 7657	Bale skid bracket, 2 used
5.	F 7624	Flat chute adapter for combination chute 200 and 300
6.	F 7658	Button head bolt 1/2" x 1-1/2"
7.	F 7659	Chain, bale chute
8.	F 108	Spring, bale chute, 2 tie turning
	F 985	Spring, bale chute 2-tie flat and 3-tie turning
	F 987	Spring, bale chute, 3-tie flat
9.	F 988	Shock absorber
10.	F 993	Bushing for shock absorber
11.	F 1638	Shock absorber support
12.	F 1639	Cable bracket
13.	F 997	Weight indicator bracket
14.	F 998	Indicator hand
15.	F 268	Indicator return spring
16.	F 999	Mounting angle for F 7236 sheave
17.	F 994	Shield for F 4067 roller
18.	F 4068	Bushing for F 4067 roller
19.	F 4067	Roller for F 7236 sheave
20.	F 995	Plate for F 4067 roller
21.	F 990	Cable clamp 1/8" (2 used)
22.	F 7661	Indicator cable 1/8" aircraft 65" 65-
23.	F 7236	Sheave complete, bale weight indicator

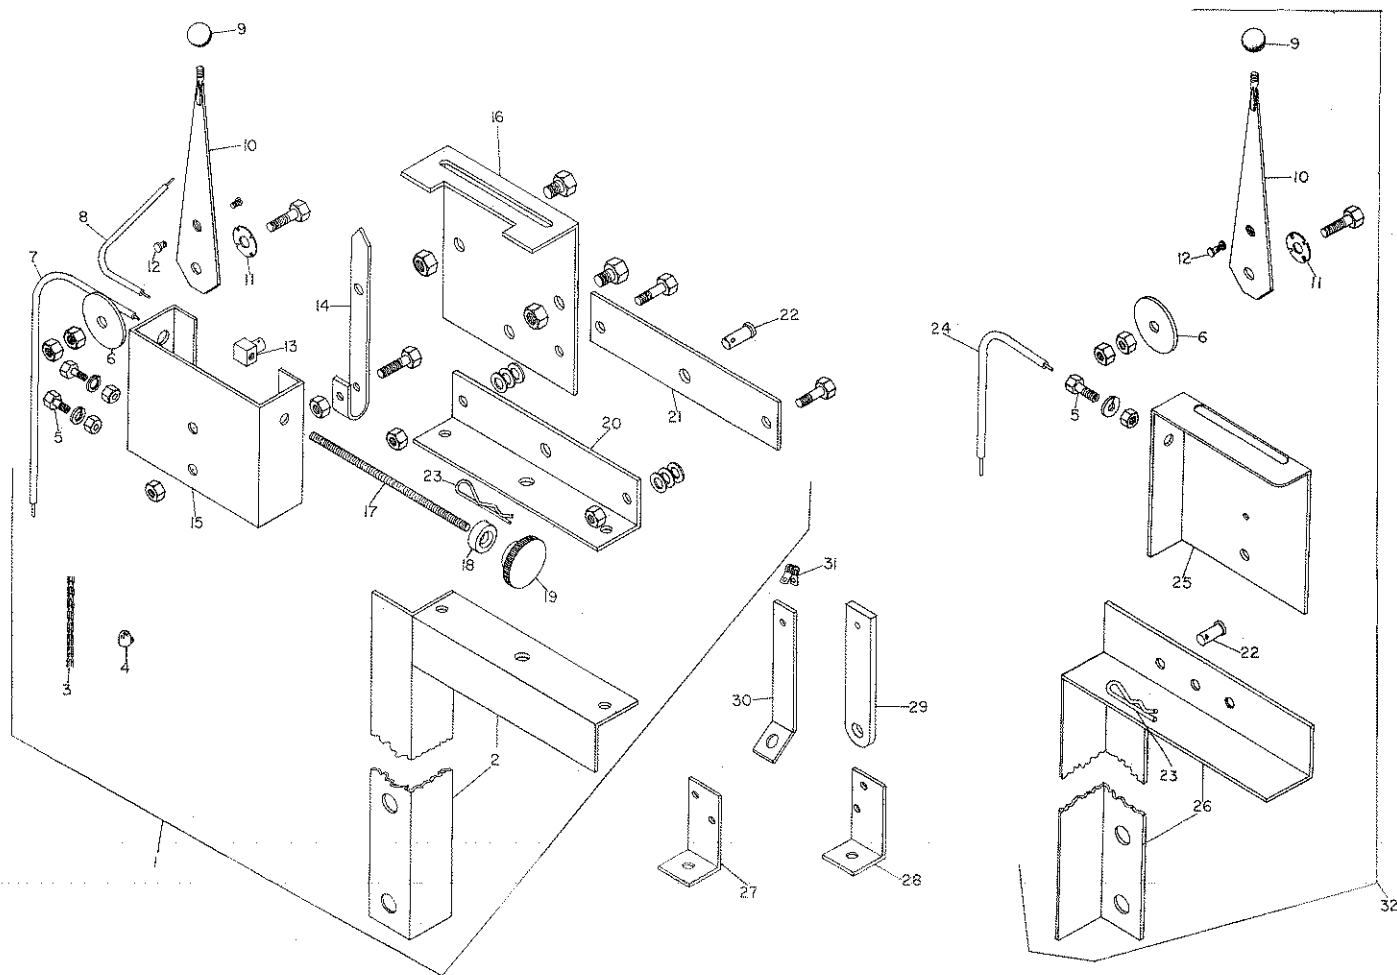 

REF. NO.	PART NO.	DESCRIPTION
1.	F 1025	Control box complete, baler mounted
	F 1026	Control box complete, tractor mounted
	F 1451	Control box complete less cable and standard
2.	F 1658	Standard only
3.	F 1015	Chain, throttle control 4"
4.	F 5080	Cable stop, throttle control
5.	F 5559	Beech nut with nut and washer
6.	F 1003	Friction disc
7.	F 1130	Cable complete for tension control 24 feet
	F 1013	Conduit, tension control 24 feet
	F 1014	Wire, tension control 25 feet
8.	F 1129	Cable complete for throttle control 12 feet
	F 1011	Conduit, throttle control 12 feet
	F 1012	Wire, throttle control, 13 feet
9.	F 5554	Knob for throttle lever
10.	F 1433	Throttle lever
11.	F 1002	Conical washer
12.	F 5545	Swivel fasteners (throttle)
13.	F 1005	Adjusting stud nut (tension)
14.	F 1004	Indicator tension control
15.	F 1008	Control box


REF. NO.	PART NO.	DESCRIPTION
16.	F 1452	Control box cover
17.	F 1006	Adjusting rod
18.	F 1131	Thrust bearing
19.	F 1007	Control knob for F 1006
20.	F 1017	Mounting base angle
21.	F 1018	Mounting base plate
22.	F 1020	Clevis pin 3/8" x 1"
23.	F 1019	Hairpin cotter key
24.	F 1453	Cable complete for throttle control F 1458 7 feet
	F 1454	Conduit, throttle control 7 feet
	F 1455	Wire, throttle control 8 feet
25.	F 1447	Throttle control box only
26.	F 1456	Standard only for throttle control
27.	F 7207	Angle bracket for VG4D throttle
28.	F 1016	Angle bracket for VH4D, VE4D and VF4D
29.	F 7013	Throttle cable bracket VG4D
30.	F 1021	Throttle cable bracket VH4D, VE4D and VF4D
31.	F 5264	Clamp, throttle cable
32.	F 1458	Throttle complete with standard
	F 1459	Throttle box complete with cable less Standard
	F 1446	Throttle box complete less cable and standard

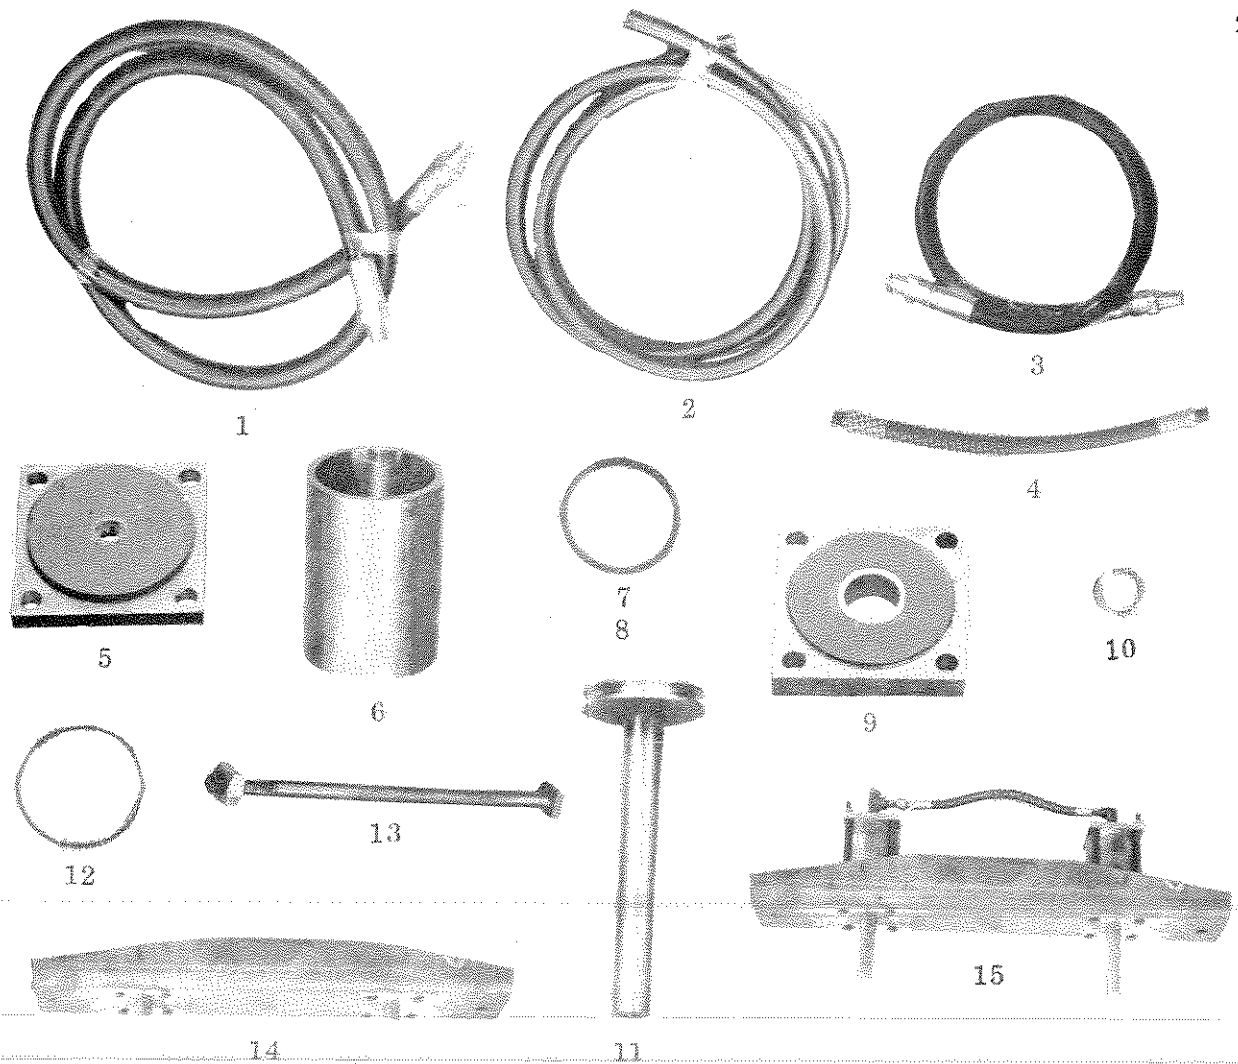 


REF. NO.	PART NO.	DESCRIPTION
1.	FT 150	Pressure hose, pump to bypass 90"
2.	FT 191	Bypass return hose (1/2" x 93")
3.	FT 136	Pressure hose, bypass to ram 24"
4.	FT 163	Pressure hose, ram to ram 13-1/4" 300 only
	FT 200	Pressure hose, ram to ram 8" 200 only
	FT 107	Union swivel (not pictured)
5.	FT 13	Cylinder top
6.	FT 10	Cylinder
7.	FT 12	O-ring for piston
8.	FT 137	Back up ring for FT 12 (MS-28782-37)
9.	FT 14	Cylinder bottom with bushing
10.	FT 19	Bushing for FT 14 (1" x 1-1/4" x 5/8")
11.	FT 11	Piston
12.	FT 15	O-ring top seal
13.	FT 16	Tie bolt 3/8" x 7" N.F.H.T. w/nut
14.	FT 151	Cylinder frame single ram 18" chamber
	FT 199	Cylinder frame, dual ram 18" chamber
	FT 181	Cylinder frame (dual and single ram) 22" chamber
	FT 180	Cylinder frame (dual and single ram) 23" chamber
15.	FT 153	Single ram assembly complete 18" chamber
	FT 183	Dual ram assembly complete 22" chamber
	FT 182	Dual ram assembly complete 23" chamber

Not shown


FT 74	1/4" pipe tee
FT 73	1/4" x 1-1/2" pipe nipple

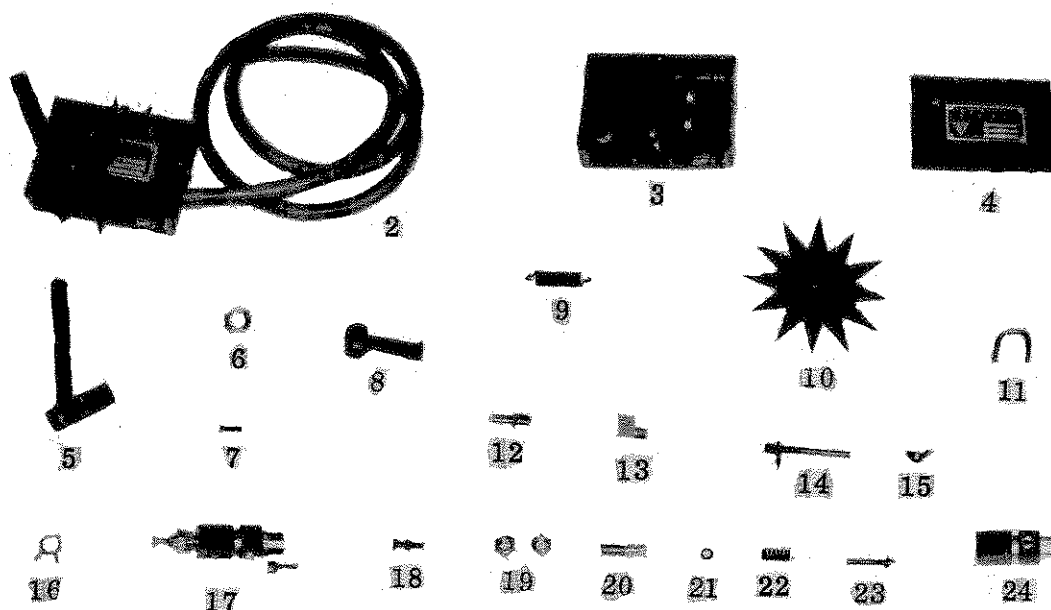 


REF. NO.	PART NO.	DESCRIPTION
1.	FT 192	Bypass box assembly complete w/1/2" hose
2.	FT 191	Bypass hose, 1/2"
3.	FT 51	Box (bypass cylinder) 3/8" hose
	FT 194	Box (bypass cylinder) 1/2" hose
4.	FT 50	Cover (bypass box)
5.	FT 177	Penetration wheel arm (tapped)
6.	FT 68	Spacer, penetration wheel arm
7.		Key, 3/16" x 3/16" x 1"
8.	FT 67	Bypass lever
9.	FT 65	Adjusting screw tension spring
10.	FT 178	Penetration wheel w/bearing
	FT 179	Bearing, penetration wheel
11.	FT 58	U-bolt
12.	FT 193	Hose nipple (1/2" hose)
	FT 172	Hose nipple (5/16" hose)
13.	FT 188	3/8" street elbow, Weatherhead (3400 x 3/8")
	FT 171	1/8" street elbow (3400 x 2)
14.	FT 61	Adjusting screw (eyebolt)
15.	FT 62	Wing nut, adjusting screw
16.	FT 187	Hose clamp, 1/2"
17.	FT 185	Bypass assembly complete 1/2" return hose (square stock)
	FT 85	Bypass assembly complete, 5/16" return hose (round stock)
18.		Cap screw w/nut, 1/4 x 1-1/4 N.C.
19.		Jam nut, 5/8" (2 used)
20.	FT 54	Plunger, bypass less nuts
21.	FT 53	O ring, bypass
22.	FT 63	Spring, bypass check pin
23.	FT 87	Bypass check pin
24.	FT 184	Bypass cylinder, 1/2" hose (square stock)
	FT 52	Bypass cylinder, 5/16" return hose
Not Shown:		
	FT 72	1/4 x 3 pipe nipple
	FT 139	Indicator rod w/nuts for S. P. baler
	FT 140	Thrust bearing for adjusting rod for S. P. baler
	FT 138	Adjusting rod assembly for S. P. baler

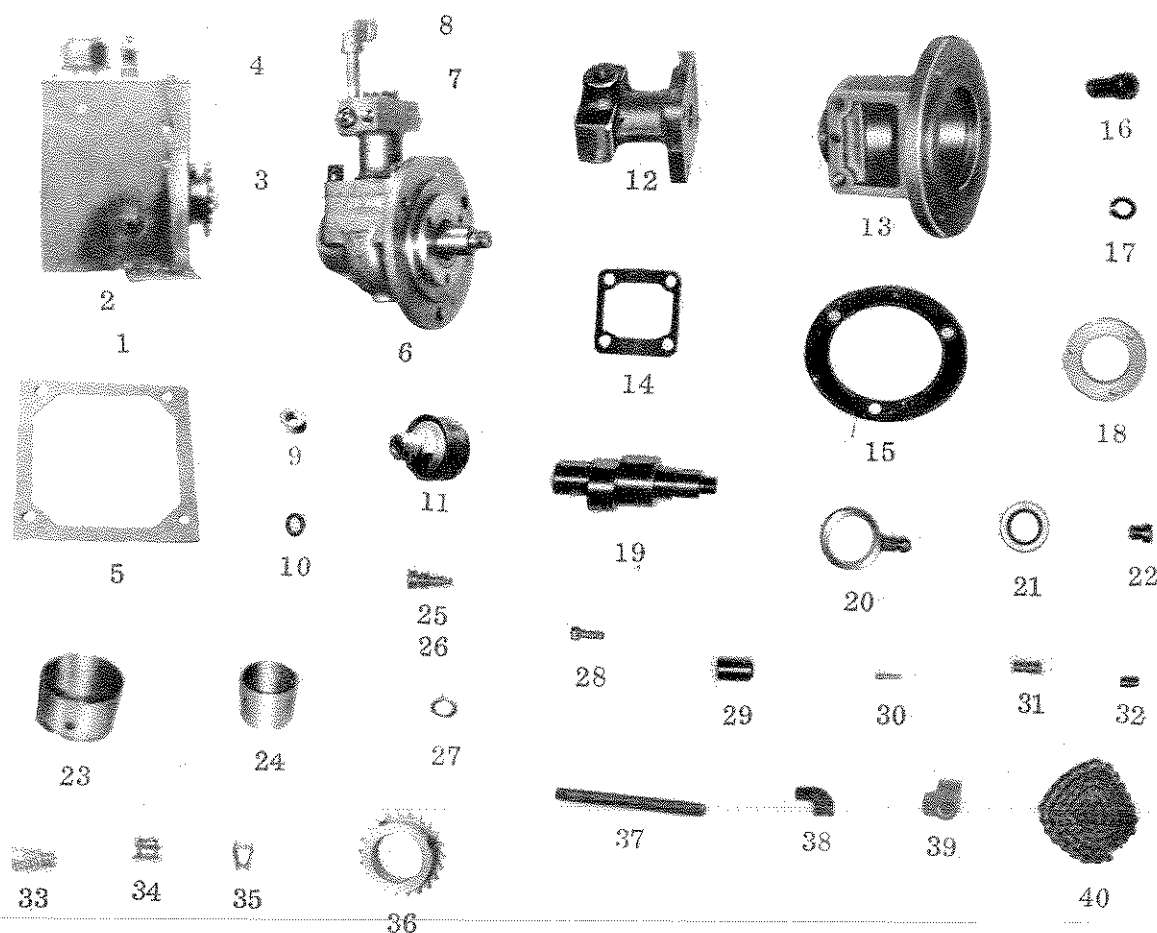 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	FT537	Pump and tank assembly complete $\frac{1}{2}$ hose	22.	FT519	Plug
2.	FT536	Tank only for $\frac{1}{2}$ " hose	23.	FT509	Crankshaft bushing, outer
3.	FT101	Sprocket, driven 22T	24.	FT508	Crankshaft bushing, inner
4.	FT532	Tank cover	25.	FT518	Check valve pin (outlet)
5.	FT528	Tank cover gasket	26.	FT517	Check valve pin (intake)
6.	FT523	Freeman pump complete	27.	FT514	Gasket (3 used)
7.	FT534	$\frac{1}{4}$ " nipple 2" long	28.	FT516	Retaining ring bolt (3 used)
8.	FT82	$\frac{1}{4}$ " elbow, 90°	29.	FT505	Piston
9.	FT529	Outlet gasket	30.	FT506	Piston pin
10.	FT533	Washer for FT529	31.	FT510	Anchor pin for FT508 bushing
11.	FT530	Filter assembly	32.	FT511	Anchor pin for FT509 bushing
12.	FT524	Head	33.	FT107	Union swivel
13.	FT525	Crankcase, $\frac{7}{16}$ " tapped hole	34.	FT114	Connecting link, #41
14.	FT521	Gasket, head	35.	FT113	$\frac{1}{2}$ (offset) link, #41
15.	FT527	Pump base gasket	36.	FT157	Sprocket, drive for hydraulic pump
16.	FT515	Head bolt (4 used)	37.	FT535	$\frac{1}{4}$ " nipple 6"
17.	FT520	Lock washer for FT515 (4 used)	38.	FT18	Street elbow
18.	FT504	Retaining ring	39.	FT170	Side outlet elbow
19.	FT503	Crankshaft	40.	FT197	Chain, pump drive, 69P
20.	FT500	Connecting rod		Not Pictured	
21.	FT507	Oil seal (50045S)		FT512	Check ball, (2 used)
				FT513	Spring, check ball, (2 used)

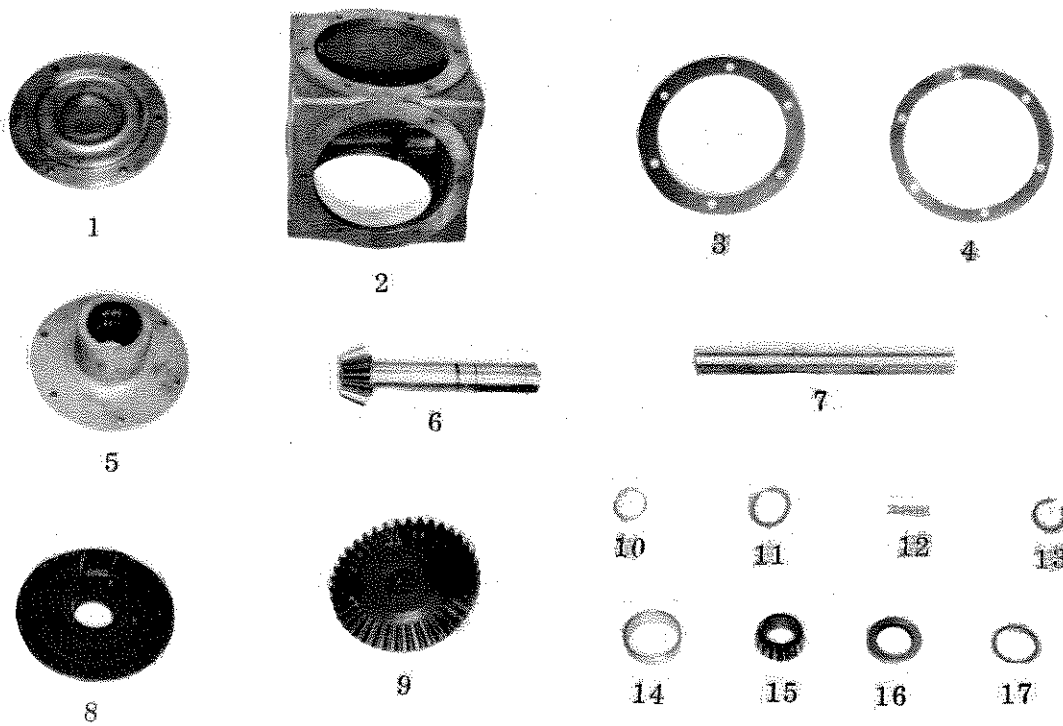 


REF. NO.	PART NO.	DESCRIPTION
1.	F 1077	Cap, drive shaft bearing, (closed end - Hub City box)
	F 1409	Cap, drive shaft bearing, (closed end - Freeman Box)
2.	F 1075	Case for gear box (Hub City)
	F 1407	Case for gear box (Freeman)
3.	F 1095	Gasket, for F 1077, F 1076 & 1078 (.005 thick)
	F 1414	Gasket, for F 1077, F 1076 & F 1078 (.010 thick)
	F 1415	Gasket, for F 1077, F 1076 & F 1078 (.015 thick)
	F 1416	Gasket, for F 1077, F 1076 & F 1078 (1/32" thick)
4.	F 1417	Gasket, for F 1409 cap (.005 thick)
	F 1418	Gasket, for F 1409 cap (.010 thick)
	F 1419	Gasket for F 1409 cap (.015 thick)
5.	F 1078	Housing, pinion shaft bearing
6.	F 1109	Pinion and shaft (13-tooth) (Hub City Box only)
	F 1410	Pinion and shaft - 6 pitch (Freeman box only)
7.	F 1601	Shaft, drive
8.	F 1076	Cap, drive shaft brg. (open end)
9.	F 1080	Bevel gear (39-tooth - Hub City box only)
	F 1411	Bevel gear - 6 pitch (Freeman box only)
10.	F 957	Snap ring, 1-3/8"
11.	F 1420	Steel shim (.003 thick)
12.	F 1093	Key, drive shaft and sheave, 5/16" x 5/16" x 2"
13.	F 1087	Snap ring, pinion and drive shaft
14.	F 1084	Bearing cup, pinion and drive shaft (LM48510)
15.	F 1083	Bearing cone, pinion and drive shaft (LM48548)
16.	F 1421	Grease seal for pinion shaft (CR256112)
17.	F 1085	Seal, drive shaft (CR186112)
	F 1412	Gear box complete less sheave

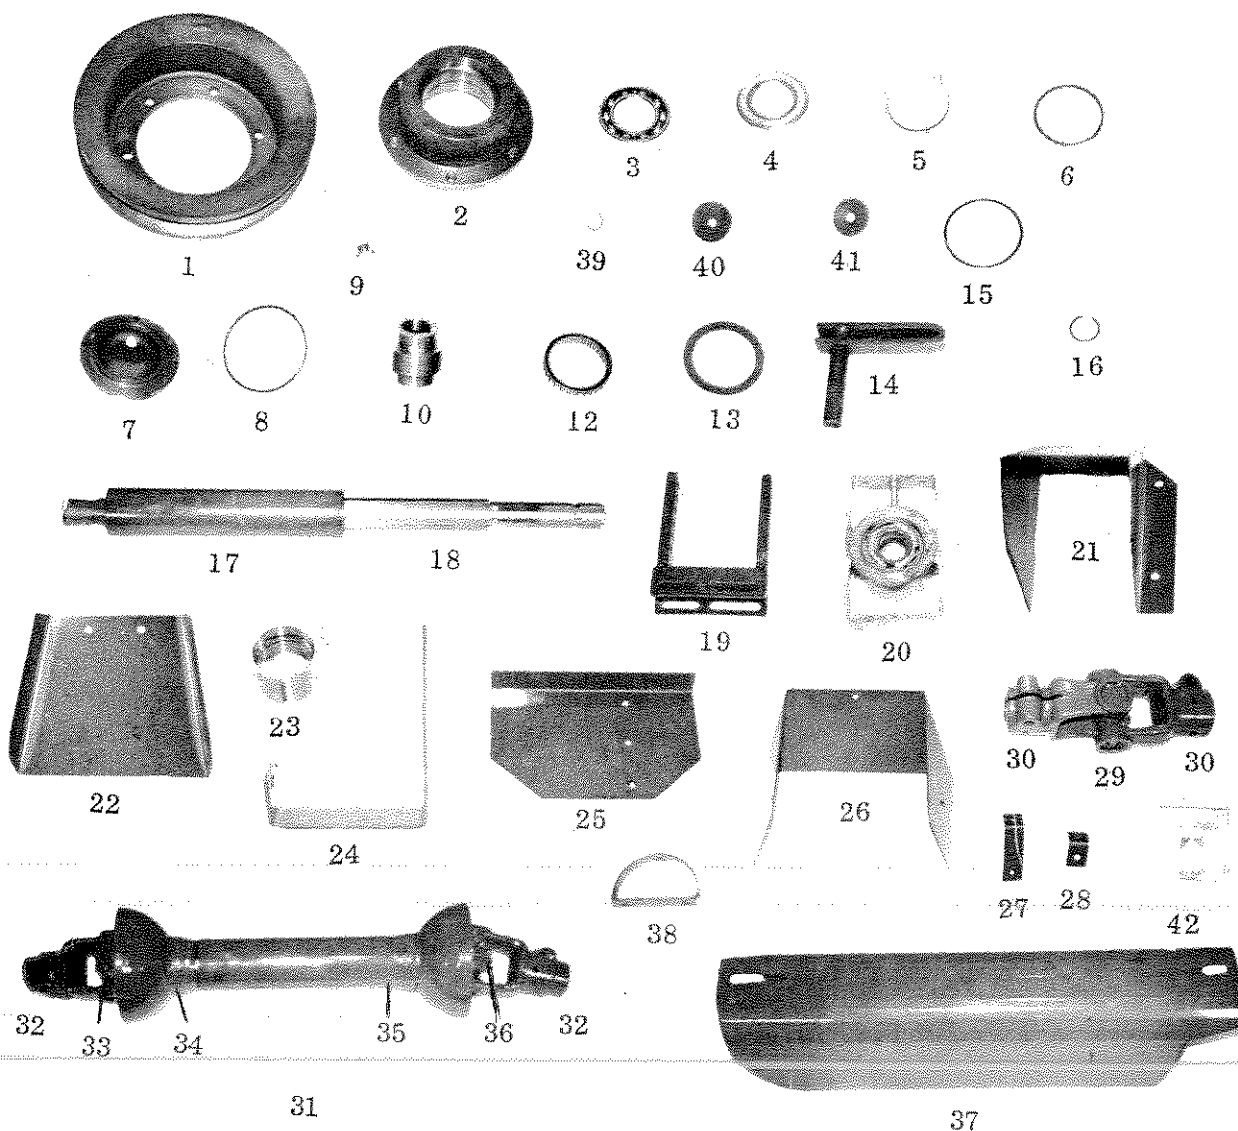 

REF. NO.	PART NO.	DESCRIPTION
1.	F 1161	Sheave, PTO single groove (540 RPM)
2.	F 1165	Hub, for F 1161 Sheave
3.	F 956	Bearing, outer (SKF 6211)
4.	F 955	Bearing, inner w/seal (SKF 6211-RS)
5.	F 954	Seal for clutch (CR/28635)
6.	F 961	Snap ring (RR350)
7.	F 952	Cap for F 1165
8.	FT 25	O ring seal
9.	F 958	Drain plug (DP6)
10.	F 951	Hub, for over-running clutch
12.	F 901	Clutch for F 1165 hub
13.	F 960	Thrust washer
14.	F 7373	Bearing assembly swivel bracket
15.	F 962	Snap ring (RR393)
16.	F 7361	Snap ring, external for PTO shaft
17.	F 7366	Drive line slip tube
18.	F 7367	Drive line spline shaft
19.	F 7372	Bearing assembly adjusting bracket
20.	F 7368	Bearing assembly for PTO drive line
	F 7369	Bearing holder
	F 7370	Bearing for holder (8507)
	F 7371	Snap ring for bearing holder
21.	F 1063	Shield for sheave
22.	F 7377	Front "U" joint shield
23.	F 953	Over-running clutch housings for 5 groove sheave

REF. NO.	PART NO.	DESCRIPTION
24.	F 1222	Bracket for F 1221 shield
25.	F 1221	Shield for belt PTO
26.	F 1066	Shield for universal joint
27.	F 1065	Bracket for F 1066 shield, long
28.	F 1064	Bracket for F 1066 shield, short
29.	F 7365	Universal Joint assembly, 1-3/8" x 1-3/8" round bore
30.	F 1105	Yoke assembly, 1-3/8" bore (2 used)
31.	F 7374	Telescoping universal drive line, 1-3/8" spline x 1-3/8" spline
	F 7375	Half drive line w/square tube
	F 7376	Half drive line w/square shaft
32.	F 890	Yoke, 1-3/8" spline (2 used)
	F 1106	Lock pin w/washer
	F 1108	Spring for F 1106 lock pin
33.	F 1103	Yoke and square shaft assembly (welded)
34.	F 1102	Inner shield and bell assembly
35.	F 1101	Outer shield and bell assembly
36.	F 1104	Yoke and tube assembly (welded)
37.	F 7378	Drive line shield
38.	F 7379	Front mounting bracket for drive line shield
39.	F 959	Gasket, drain plug
40.	F 246	Washer, drive shaft end
41.	F 963	Gasket, drive shaft end
42.	F 889	Universal Cross repair kit for F 873, F 1096, F 7365, and F 7374

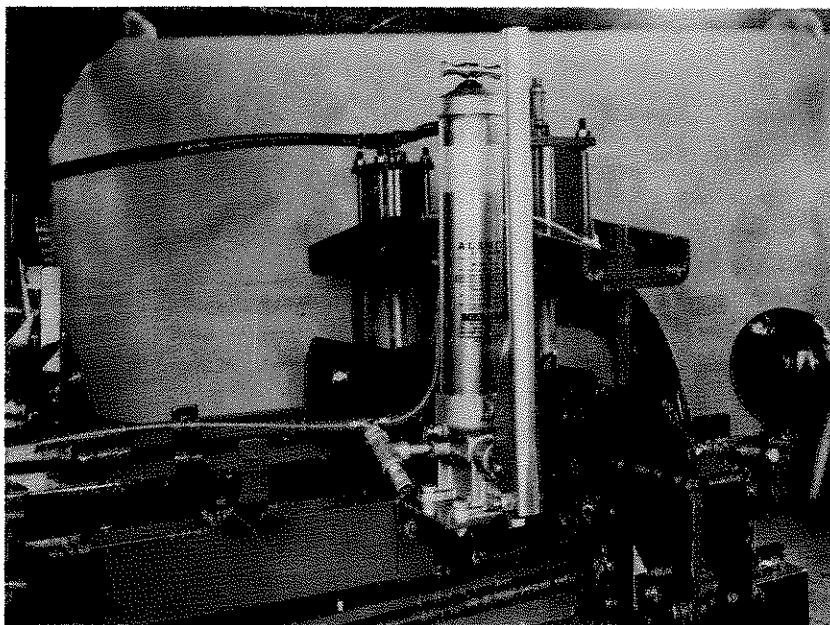 


PART NO.	DESCRIPTION
F 7414	Single stroke pump (4055)
F 7396	Mounting bracket for centralized grease pump
F 7397	Sprocket (1/2" bore) for chain divider (2 used)
F 7400	1/8" O.D. Nylon pressure tubing
F 7402	90° terminating valve (381701-9) (3 used)
F 7403	90° elbow valve (381702-9)
F 7405	Straight thru valve (381703-9) (4 used)
F 7406	Tee valve (381704-9)
F 7408	Top 90° elbow valve (381706-9)
F 7409	Top 60° valve (381709-9)
F 7410	Compression nut for 1/8" O.D. tubing (61637) 21 used
F 7411	Compression sleeve for 1/8" O.D. tubing (61636) 21 used
F 7412	90° adapter, 1/4" x 1/8" pipe (51943)
F 7413	Tube clip (17743) (5 used)
F 7415	Indicator w/pin (380630)
F 7416	1/8" x 1-1/2" nipple
F 7417	1/4" x 1/4" x 1/8" tie
F 7418	1/4" x 1/8" bushing
F 777	Adapter 1/4" to 1/8" pipe (51942) (10 used)
F 7479	90° elbow (769FB)
F 7398	1 LB. centralized type ("OOO") grease
F 7401	5 LB. centralized type ("OOO") grease

5/16" x 1" cadmium cap screws w/nuts & lock washer (4 used)


3/8" x 3/4" cadmium cap screws w/lock washers (2 used)

1/2" x 3" N.C. cap screws

 
1/2" cadmium flat washers (3 used)

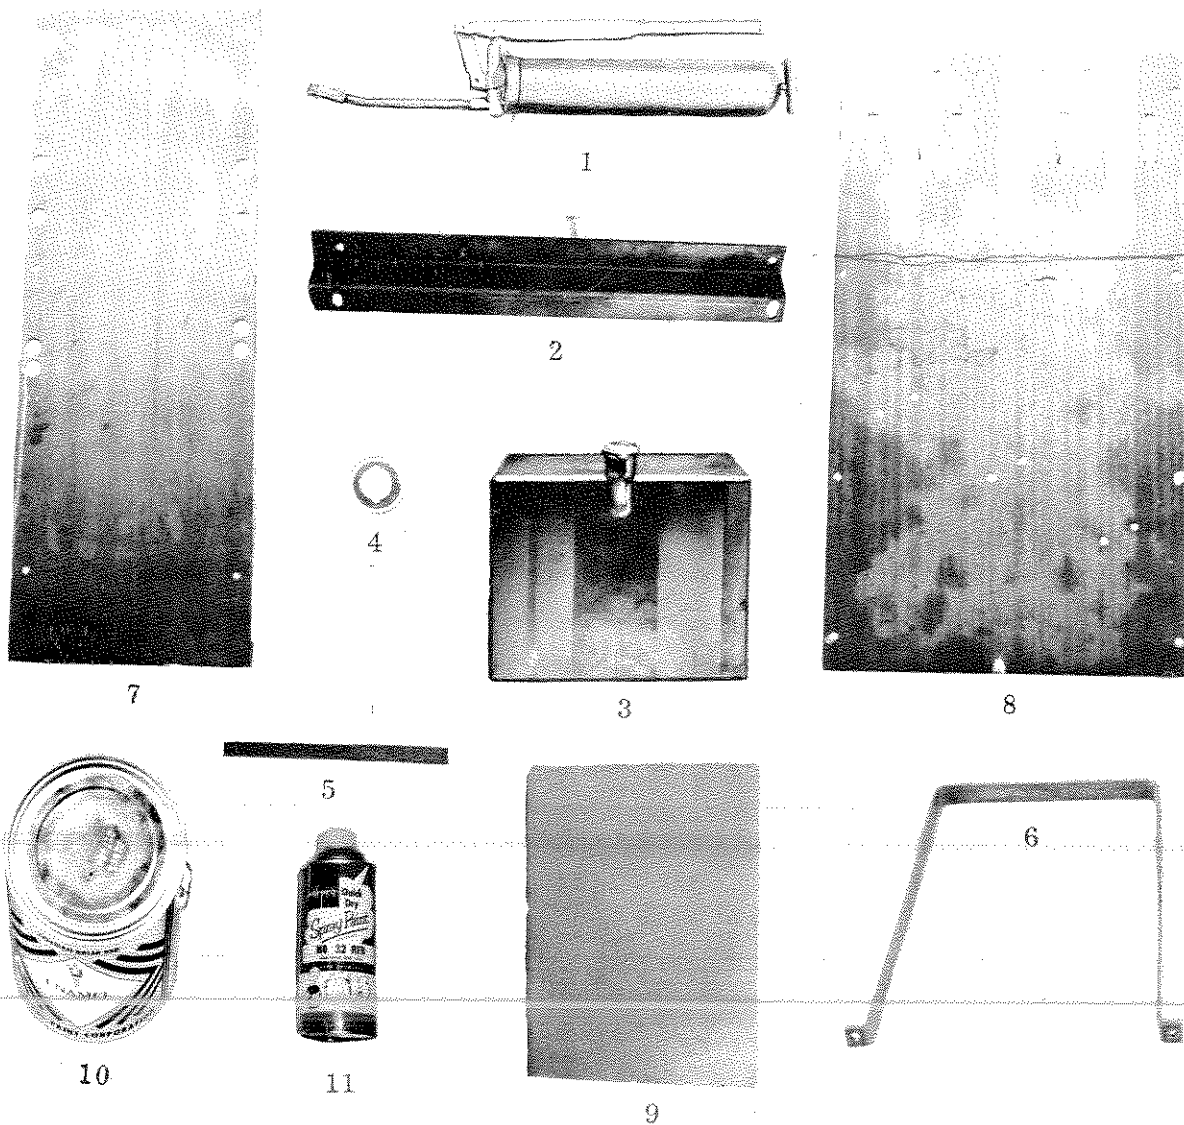


REF. NO.	PART NO.	DESCRIPTION
1.	F 646	Grease gun complete
2.	F 7048	Fuel tank mounting bracket, 23" chamber - 2 used
	F 7212	Fuel tank mounting bracket, 22" chamber - 2 used
	F 7295	Fuel tank mounting bracket, 18" chamber - 2 used
3.	F 7044	Fuel tank w/cap
	F 7045	Fuel tank w/straps and felts
	F 7049	Fuel line only, 62"
4.	F 762	Cap for fuel tank
5.	F 893	Felt for tank straps - set of four
6.	F 7046	Fuel tank straps - 2 used
7.	F 7221	Liner for bale chamber, L. H.
8.	F 7222	Bale chamber bottom, 23" chamber
	F 7223	Bale chamber bottom, 22" chamber
	F 7296	Bale chamber bottom, 18" chamber
9.	F 7220	Liner for bale chamber, R. H.
10.	F 649	Freeman red baler paint, 1 gal.
	F 942	Freeman red baler paint, 1 qt.
	F 1675	Freeman white paint, 1 gal.
	F 1676	Freeman white paint, 1 qt.
11.	F 770	Freeman red paint, spray can
	F 1677	Freeman white paint, spray can

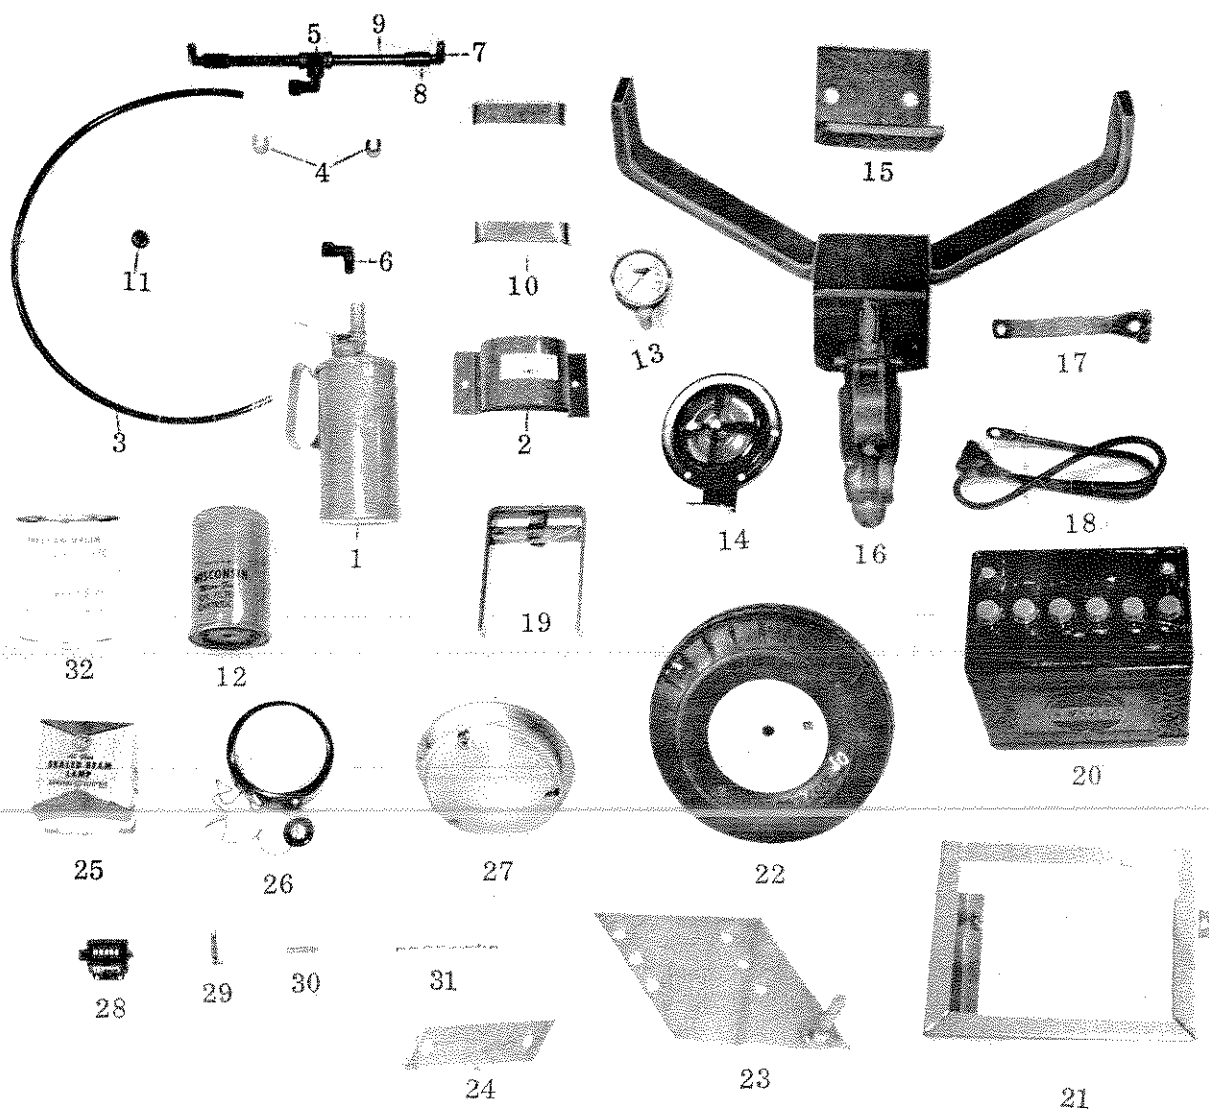 


REF. NO.	PART NO.	DESCRIPTION
	F 7617	Bullgear luber kit 300 pull type
	F 7617A	Bullgear luber kit 200 pull type
	F 7617B	Bullgear luber kit 300 S.P.
	F 7617C	Bullgear luber kit 200 S.P.
1.	F 7671	Oil can with pump
2.	F 7672	Oil can bracket
3.	F 7673	Nylon tubing, pull type baler 20"
	F 7674	Nylon tubing S.P. baler 30"
4.	F 7675	#8 adel clamp (2 used)
	F 5264	#6 adel clamp (2 used on S.P.)
5.	FT 74	1/4" Pipe tee
6.	F 7676	90° nylon elbow (2 used)
7.	F 7677	90° brass elbow
8.	F 7678	1/4" pipe coupling
9.	F 7679	1/4" x 4-1/2" pipe nipple 300
	F 7680	1/4" x 2" pipe nipple 200
10.	F 7609	Quickset lubricant 1 qt.
	F 7626	Quickset lubricant 1 gal.
11.	F 7550	Rubber grommet
12.	F 1511	Oil filter cartridge (4 thread base) (VH4D & VG4D)
	F 5922	Oil filter cartridge (V46OD)
13.	F 800	Hydraulic gauge, 2000#
14.	F 1497	Horn, wire alarm 12 volt
15.	F 736	Trailer hitch angle for clevis pins
16.	F 732	Trailer hitch with Holland hitch 200
	F 733	Trailer hitch less Holland hitch w/F736, 200
	F 734	Trailer hitch w/Holland hitch 300
	F 735	Trailer hitch less Holland hitch w/F736, 300
17.	F 7235	Battery cable (ground)
18.	F 621	Battery cable (insulated)
19.	F 4193	Wire splicer complete
20.	F 1499	Battery 12 volt
21.	F 1498	Battery box for 12 volt battery
22.	F 1338	Depth wheel for pickup complete with bracket, tire and tube
	F 1214	Tire 10 x 3:50 x 4
	F 1215	Tube 10 x 3:50
	F 1212	Wheel (C1484-4" x 2-1/2")
	F 1213	Bearing for F-1212 wheel)
23.	F 7501	Depth wheel bracket (adjustable)
24.	F 7502	Shim only for F-7501 bracket
25.	F 5842	Sealed beam unit 12 volt
26.	F 1645	Light, front and center. Sealed beam 12 volt
	F 1644	Light, rear combination sealed beam 12 volt
27.	F 1505	Light, flush mounted 12 volt
28.	F 304	Bale counter (Veeder root)
29.	F 635	Arm w/screw for F 304
30.	F 638	Spring, bale counter
31.	F 637	Chain, bale counter
32.	F 664	Bullgear grease (2 lb. can)
	F 874	Bullgear grease (1 gal. 10 lbs.)

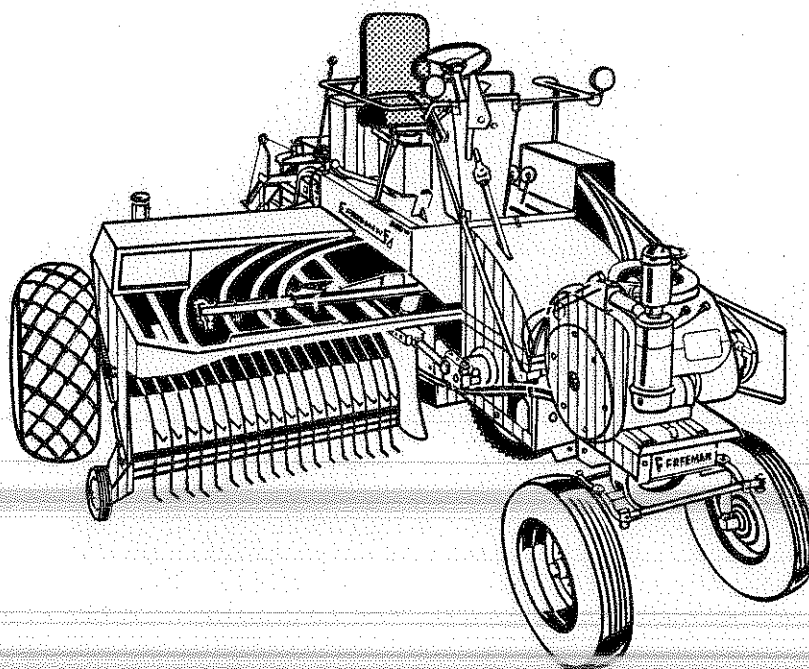 

SELF-PROPELLED BALER


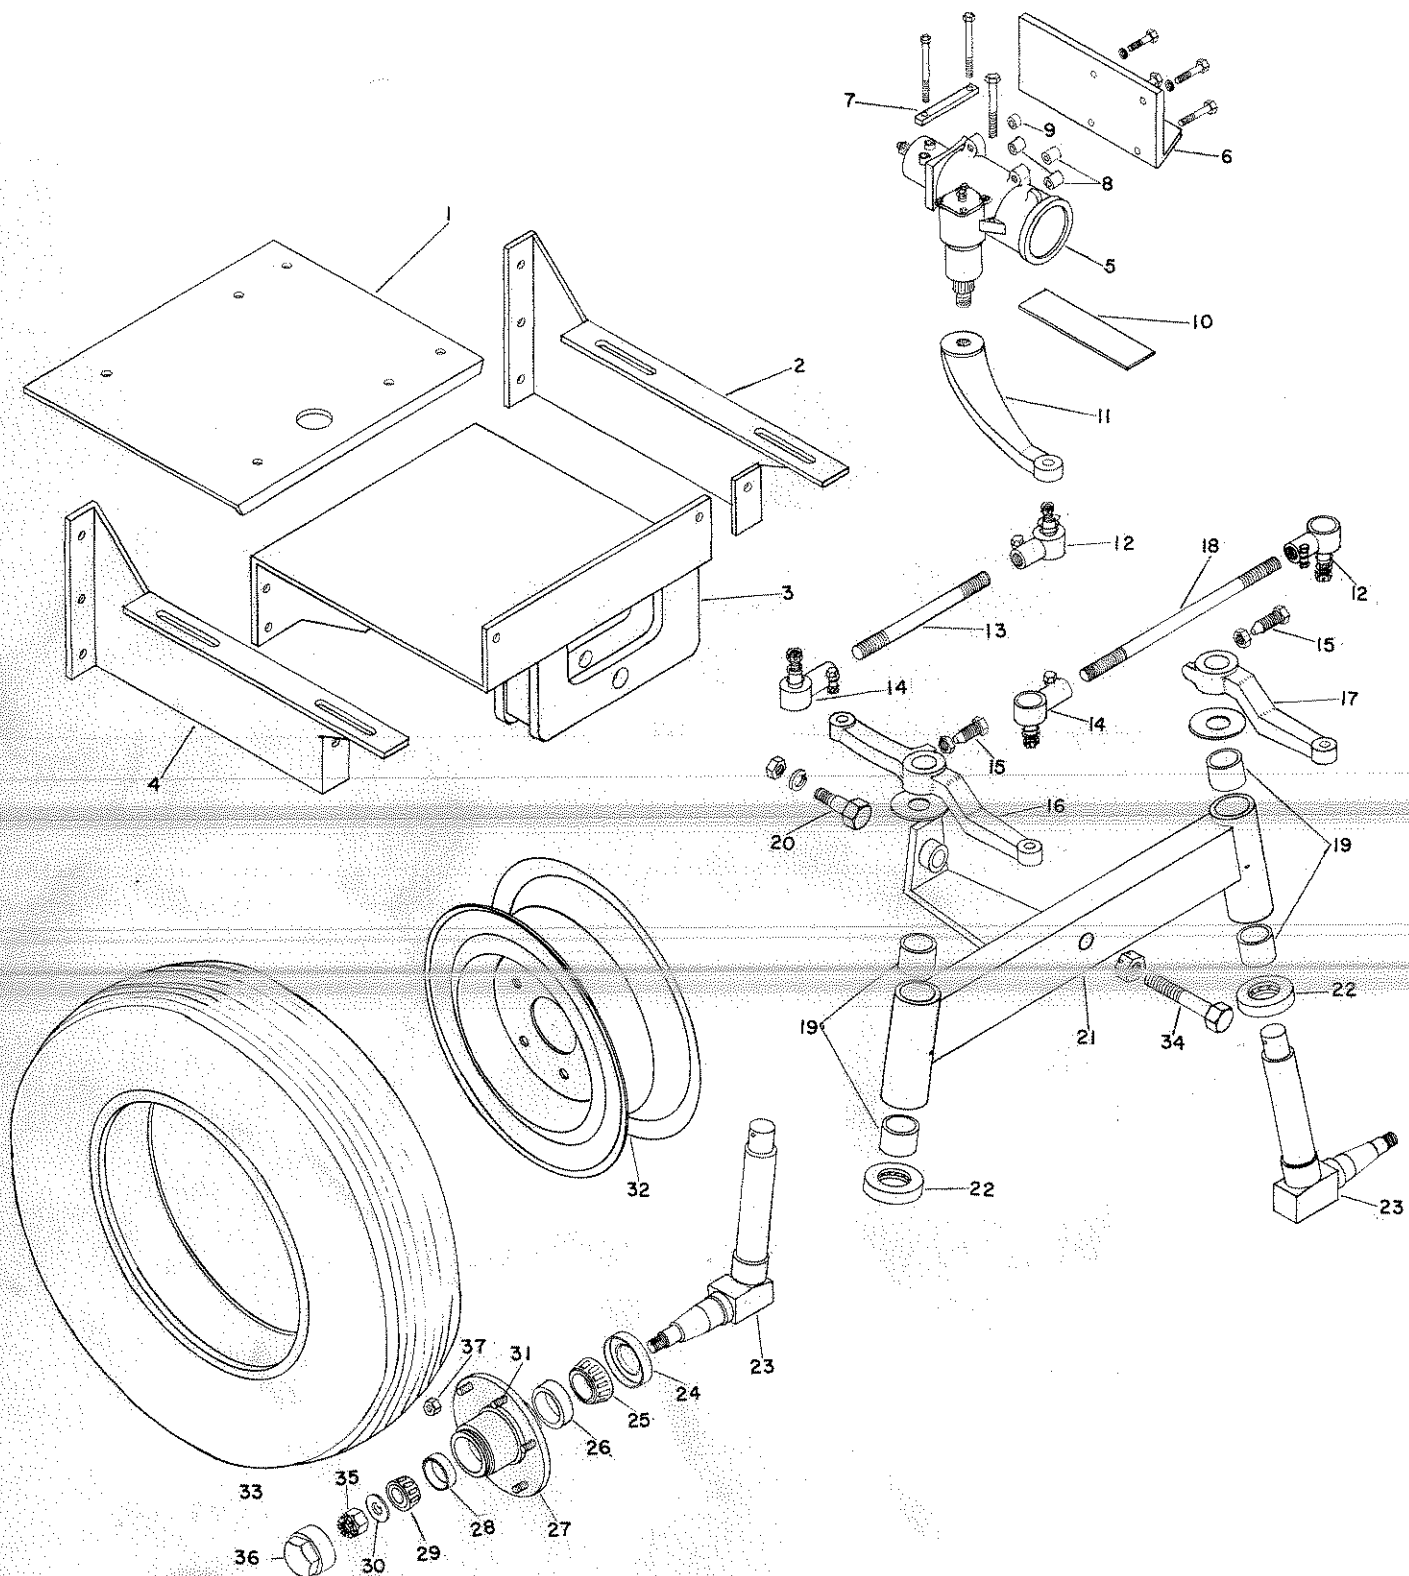 


REF. NO.	PART NO.	DESCRIPTION
1.	F 5851	Motor base plate for 200 w/VH4D or VG4D and 300 w/VG4D
2.	F 5663	Motor support L.H. 200 and 300
3.	F 5803	Front axle bottom support plate 200 power steering
	F 5815	Front axle bottom support plate 300 power steering
4.	F 5804	Motor support R.H. 300 VG4D
	F 5714	Motor support R. H. 200 VG4D and VH4D
5.	F 5765	Steering gear assembly (Saginaw 5691178)
6.	F 5630	Mounting angle for F5765 steering assembly
7.	F 5852	Anchor strap for F5765 steering assembly
8.	F 5626	Spacer, steering assembly 1" long (3 used)
9.	F 5627	Spacer, steering assembly 1/2" long (1 used)
10.	F 5853	Spacer plate for F5765 steering assembly
11.	F 5720	Pitman arm 200
	F 5721	Pitman arm 300
12.	F 5007	Tie rod end R.H. thread (2 used)
13.	F 5760	Drag link 200 7"
	F 5009	Drag link 300 10"
14.	F 5006	Tie rod end L.H. thread (2 used)
15.	F 5016	Set screw for steering arm (2 used)
16.	F 5001	Steering arm R.H.
17.	F 5002	Steering arm L.H.
18.	F 5759	Tie rod shaft 19 1/2" 200
	F 5008	Tie rod shaft 25 1/2" 300
19.	F 5854	Spindle bushing 1 3/4" x 2" x 1 1/2" prs, only (2 pr used)
20.	F 5023	Front axle shoulder bolt
21.	F 5780	Front axle for F5767 and 68 spindles 300
	F 5802	Front axle for F5767 and 68 spindles 200
22.	F 5769	Thrust bearing D21 (2 used)
23.	F 5768	Spindle L.H. 1 3/4"
	F 5767	Spindle R.H. 1 3/4"
24.	F 203	Front wheel grease seal (2 used)
25.	F 207	Front wheel bearing (inner) (2 used) #2788
26.	F 340	Cup for F207 bearing (inner) (2 used) #2729
27.	F 364	Front wheel hub for F5145 and F5650 wheels, 6 hole (2 used)
	F 5817	Front wheel hub for F5816 wheel, 5 hole (2 used) #100778
	F 5820	Adapter plate for F5816 wheel (2 used)
28.	F 341	Cup for F208 bearing (outer) (2 used) #1729
29.	F 208	Front wheel bearing (outer) (2 used) #1779
30.	F 884	Spindle washer (2 used)
31.	F 462	Lug bolt for F364 hub (12 used)
	F 5855	Lug bolt for F5817 hub 9/16" x 1 3/4" N.F. HT cap screw (10 used)
32.	F 5145	Wheel, front 6 hole (regular)
	F 5650	Wheel, front 6 hole (flotation)
	F 5816	Wheel, front 5 hole (9:00 x 10 tire)
33.	F 5039	Tire, front 6:70 x 15 - 6 ply (reg. and flotation)
	F 5040	Tube for front tire 6:70 x 15 (regular)
	F 215	Tube for front tire 7:50 x 16 (flotation)
	F 5818	Tire, front 9:00 x 10 - 10 ply (special rib)
	F 5819	Tube for front tire 9:00 x 10 (Imp.)
34.	F 5578	Front axle pivot bolt w/castillated nut 1" x 5" NC-CS
35.	F 934	Nut for F5767 and F5768 spindle (2 used)
36.	F 210	Hub cap (2 used)
37.	F 214	Lug nut (12 used) #15085

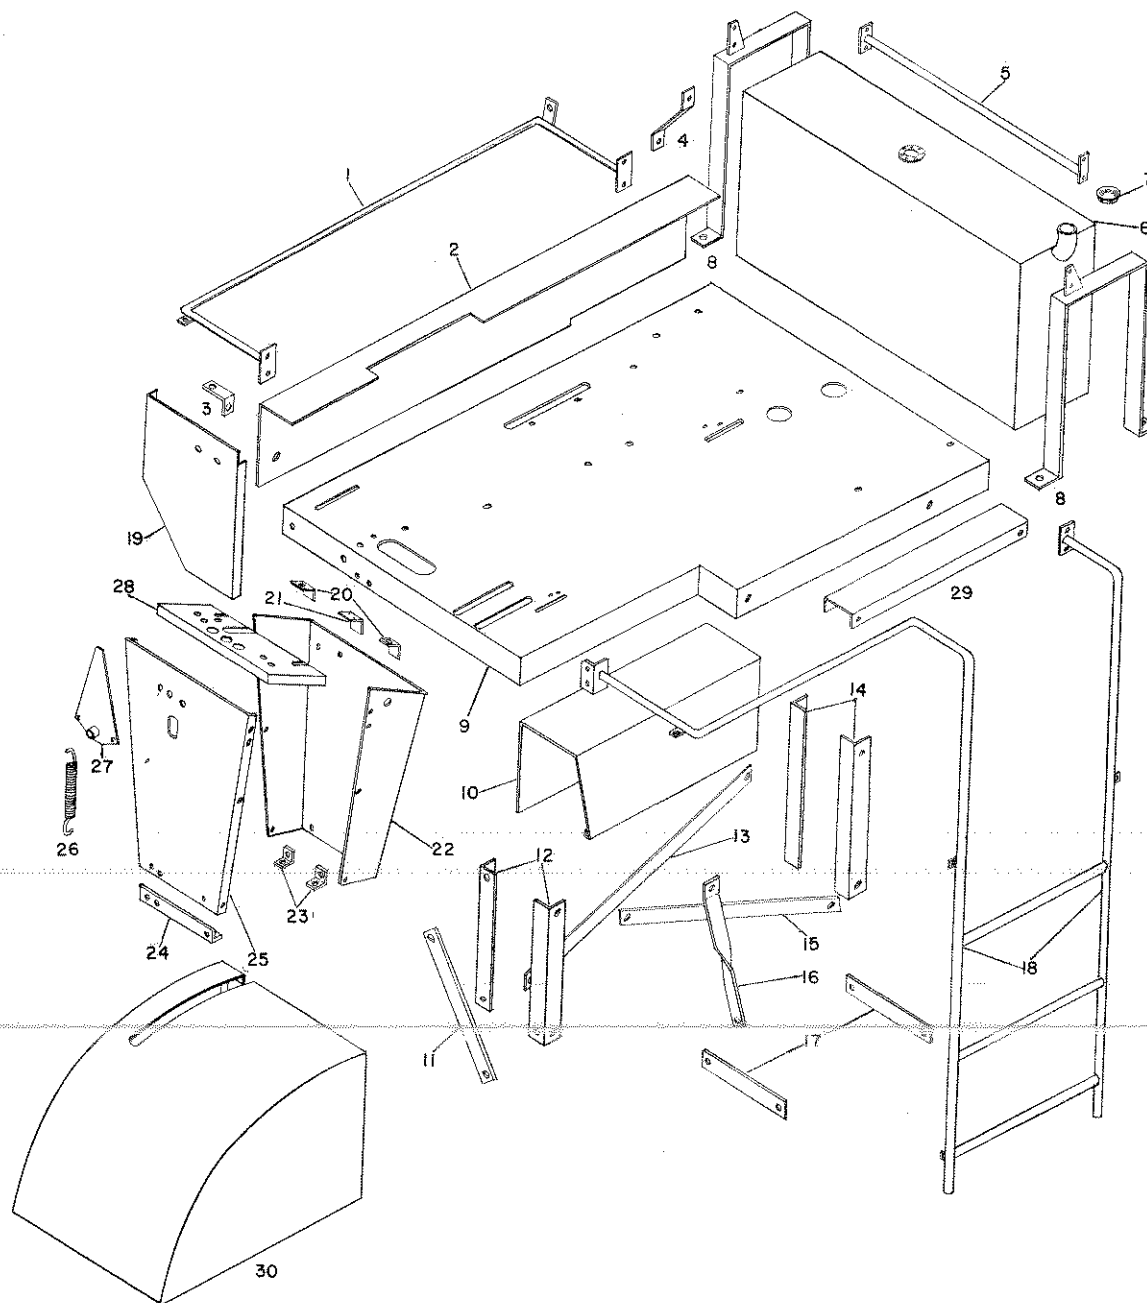 


REF. NO.	PART NO.	DESCRIPTION
1.	F 5494	Guard Rail R.H.
2.	F 5748	Gear shift shield
3.	F 5773	Gear shift shield bracket, forward
4.	F 5774	Gear shift shield bracket, rear
5.	F 5495	Guard rail, rear
6.	F 5256	Gas tank
7.	F 762	Gas tank cap
8.	F 5255	Gas tank strap (2 used)
9.	F 5731	Control deck, 200 only
	F 5732	Control deck, 300 only
10.	F 5745	Flywheel deck shield
11.	F 5481	Front control deck cross brace, 200
	F 5480	Front control deck cross brace, 300
12.	F 5755	Control deck leg, front (2 used)
13.	F 5871	Control deck brace R.H.
14.	F 5289	Control deck leg, rear (2 used)
15.	F 5482	Control deck brace L.H.
16.	F 5475	Upper ladder brace 200
	F 5474	Upper ladder brace 300
17.	F 5477	Lower ladder brace (2 used)

REF. NO.	PART NO.	DESCRIPTION
18.	F 5872	Ladder and guard rail complete 200
	F 5873	Ladder and guard rail complete 300
19.	F 5753	End shield for F5748
20.	F 5071	Choke pad (2 used)
21.	F 5649	Instrument panel plate for steering gear slot
22.	F 5133	Instrument tower
23.	F 5493	Instrument tower front mounting angles (2 used)
24.	F 5698	Instrument tower rear mounting angles
25.	F 5134	Instrument tower cover
26.	F 268	Spring, indicator
27.	F 5570	Indicator
28.	F 5254	Instrument panel
29.	F 5244	Top step 200
	F 5142	Top step 300
30.	F 5746	Bull gear shield 200
	F 5747	Bull gear shield 300









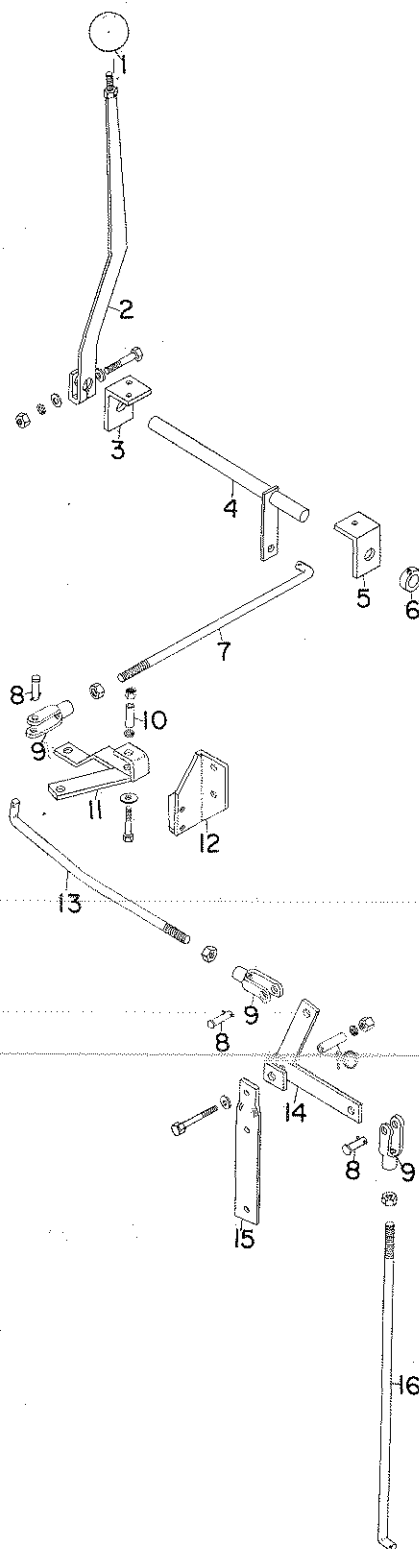 
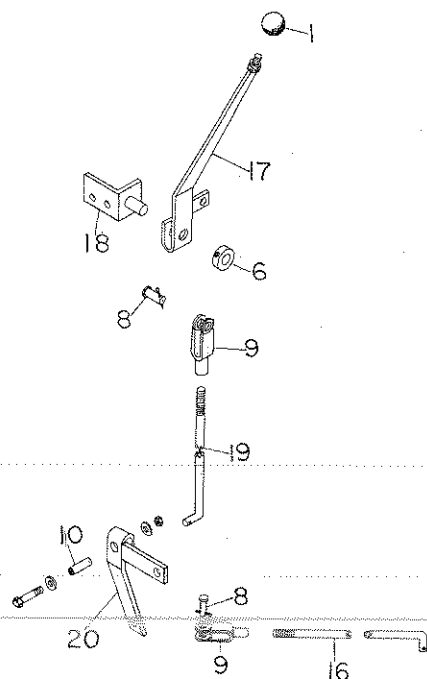 


REF. NO.	PART NO.	DESCRIPTION
1.	F 5055	Gear shift, clutches and tension control knob
2.	F 5672	Traction clutch lever 3/8" x 2-1/2" N.F. cap screw
3.	F 5675	Traction clutch counter shaft bearing L. H.
4.	F 5671	Traction clutch counter shaft
5.	F 5674	Traction clutch counter shaft bearing R.H.
6.	F 172	Set collar 3/4"
7.	F 5170	Traction clutch rod, front 16"
8.	F 5049	Clevis pin 1/2" for clutch rod clevis
9.	F 5048	Clevis, 1/2" for clutch rod
10.	F 5162	Bushing for F 5172, F 5173 and F 5580 3/8" x 2-1/4" N.C. cap screw (3 used)


REF. NO.	PART NO.	DESCRIPTION
11.	F 5172	Traction clutch deck bell crank
12.	F 5174	Traction clutch deck bell crank mounting bracket
13.	F 5849	Traction clutch rod center 16"
14.	F 5173	Traction clutch rear bell crank
15.	F 5730	Traction clutch rear bell crank mounting bracket
16.	F 5171	Traction clutch rod rear and 300 baler front clutch rod 24"
	F 5169	Front clutch rod 200 baler 18"
17.	F 5580	Front clutch lever
18.	F 5673	Front motor clutch lever mounting bracket
19.	F 5718	Front clutch rod 300 only 33"
	F 5919	Front clutch rod 200 only 31"

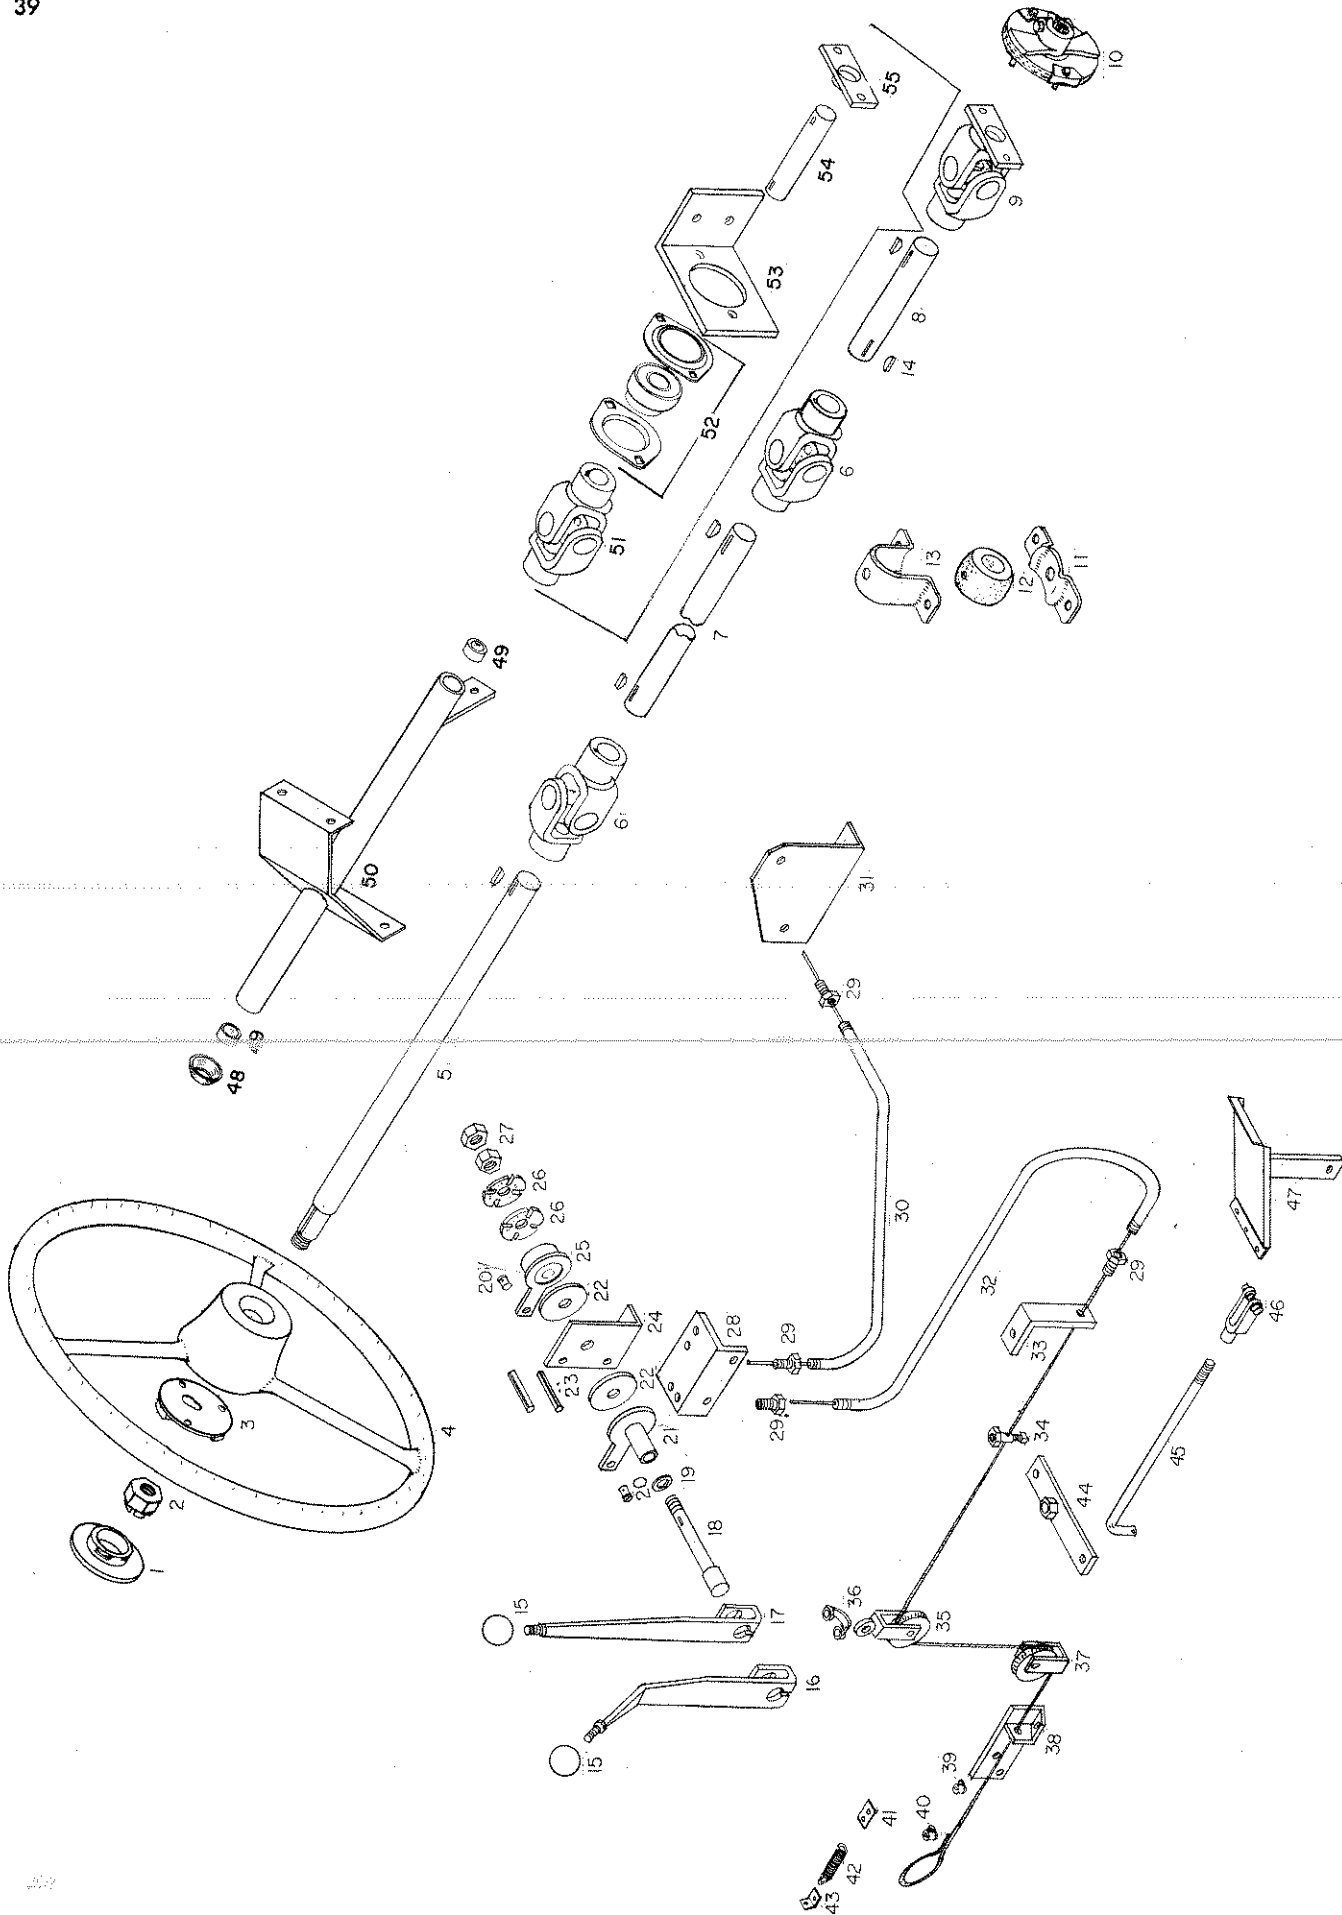 

REF. NO.	PART NO.	DESCRIPTION
1.	F 5031	Steering column cap
2.		Steering column nut 3/4" S.A.E.
3.	F 5032	Steering column cap holder
4.	F 5025	Steering wheel
5.	F 5015	Top steering shaft
6.	F 5012	Universal joint for steering shaft 1" x 1" (2 used)
7.	F 5764	Center steering shaft, 200 only, 1" x 37"
	F 5838	Center steering shaft, 300-16" x 23" chambers only 1"x 39"
	F 5864	Center steering shaft, 300-17" x 22" chambers only 1" x 40"
8.	F 5013	Bottom steering shaft, 300 chambers only 1" x 8-1/2"
	F 5865	Bottom steering shaft, 200 chambers only 1" x 7-1/2"
9.	F 5859	Universal joint w/connecting bar for 200 only
10.	F 5690884	Flange assembly
	F 5686553	Bolt, flange assembly pinch
11.	F 5019	Base for self-aligning sleeve bearing
12.	F 5018	Self-aligning sleeve bearing
13.	F 5017	Top for self-aligning sleeve bearing
14.	F 5020	Woodruff key 1/4" x 1-1/8" (5 used)
15.	F 5554	Knob (2 used)
16.	F 5552	Rear throttle lever (bent)
17.	F 5553	Front throttle lever (straight)
18.	F 5540	Throttle shaft
19.	F 5542	Thrust washer
20.	F 5545	Swivel fastener (2 used)
21.	F 5541	Front engine throttle disc
22.	F 5546	Friction disc (2 used)
23.	F 5547	Throttle stop roll pin (2 used)
24.	F 5548	Throttle control frame
25.	F 5550	Rear engine throttle disc
26.	F 5551	Conical washer (2 used)
27.		Nut 1/2" N.C.
28.	F 5549	Throttle control mounting bracket
29.	F 5559	Beech nut w/nut & washer (4 used)
30.	F 5601	Front throttle cable assembly, complete
31.	F 5193	Front engine control cable mounting bracket
32.	F 5556	Rear throttle Duraflex conduit, 22"
	F 5561	Cable for conduit, 130"
33.	F 5557	Throttle cable bracket
34.	F 5558	Swivel fastener
35.	F 5179	Pulley w/swivel for throttle cable
36.	F 5180	Clevis for cable pulley
37.	F 5198	Pulley for traction throttle cable
38.	F 5860	Pulley holder and throttle stop
39.	F 5080	Throttle cable stop (brass)
40.	F 5861	Throttle cable clamp
41.	F 5862	Strap, spring to gov. lever
42.	F 81	Gov. anti-surge spring
43.	F 5863	Spring anchor angle
44.	F 5177	Traction throttle wobble arm
	F 5286	Bushing, throttle wobble arm
45.	F 5779	Traction throttle rod
46.	F 5075	Clevis for throttle rod, 5/16"
	F 5076	Clevis pin, 5/16"
47.	F 5577	Traction throttle foot pedal w/hinge
48.	F 5030	Steering column flange
49.	FT-19	Bushing for steering column
50.	F 5029	Steering column w/bushings
51.	F 5011	Universal joint, 1" x 7/8" used on 300 only
52.	F 5881	Bearing complete, 7/8" shaft, 300 only
53.	F 5882	Bracket for F5881 bearing, 300 only
54.	F 5883	Lower steering shaft, 7/8 x 4-3/4, 300 only
55.	F 5615	Coupling to F5688292, 300 only
	F 5565	Dual throttle head assembly

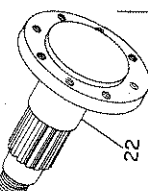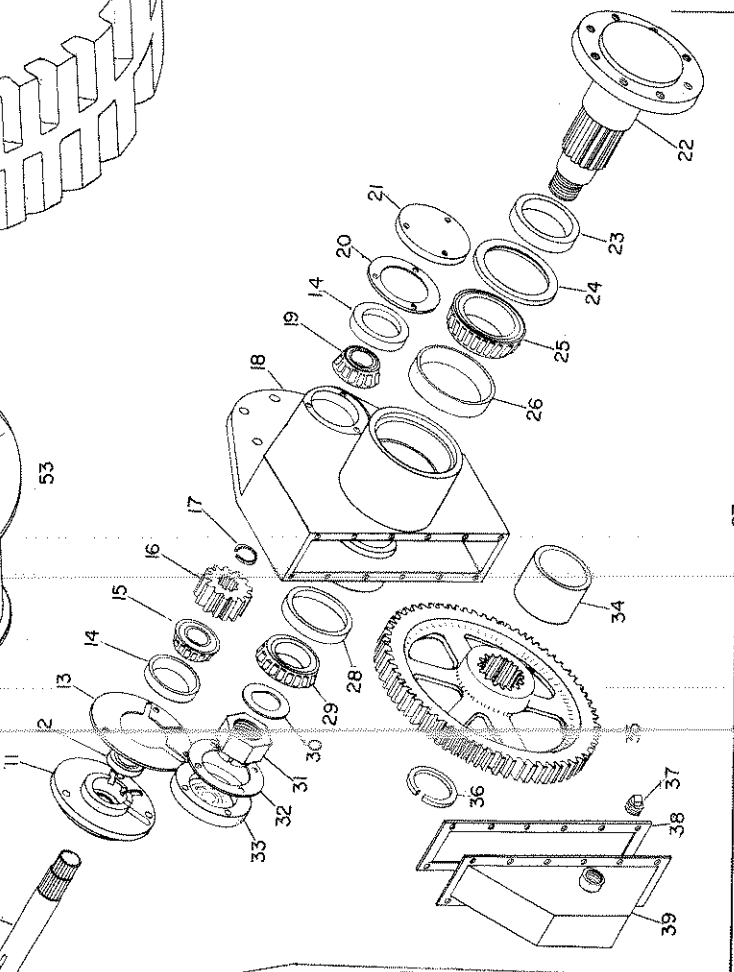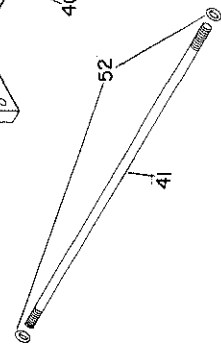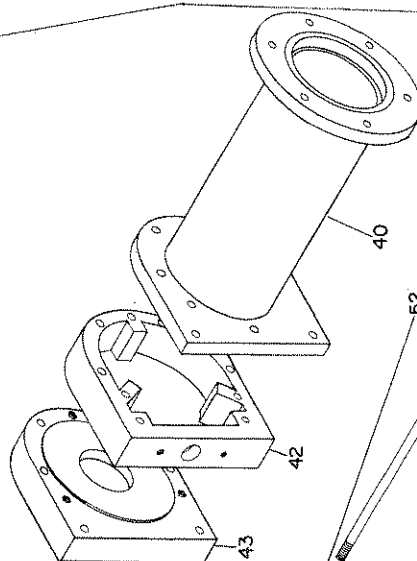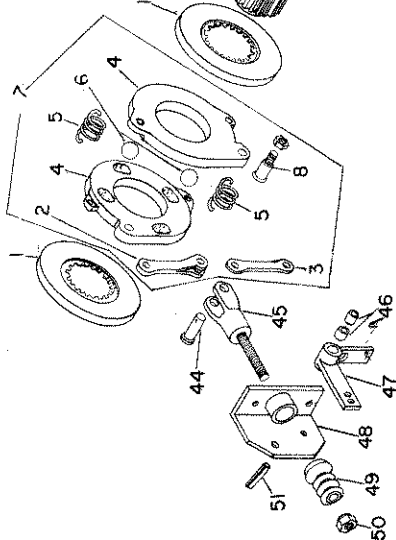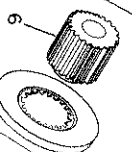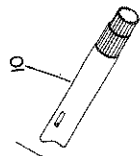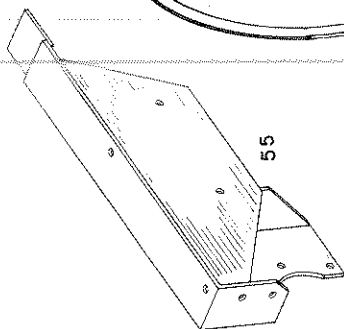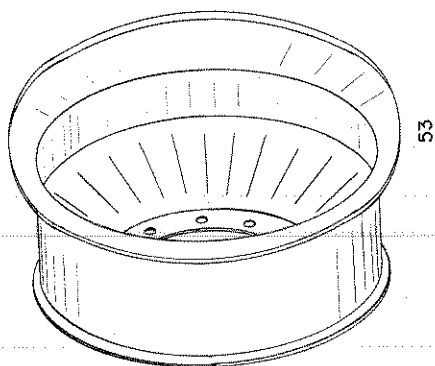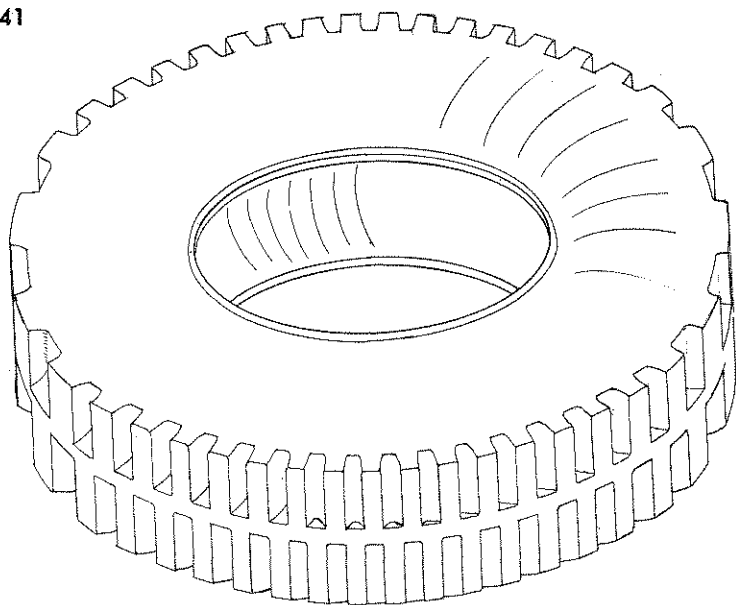          


REF. NO.	PART NO.	DESCRIPTION
1.	F 5794	Brake wear disc
2.	F 5899	Yoke link
3.	F 5900	Strap link
4.	F 5898	Brake pressure plate
5.	F 5901	Pressure plate spring
6.	F 5902	Pressure plate ball
7.	F 5903	Pressure plate complete
8.	F 5904	Linkage bolt
9.	F 5795	Brake hub
10.	F 5791	Axle shaft, RH, 28"
	F 5792	Axle shaft, LH, 57-1/4", 2-tie
	F 5793	Axle shaft, LH, 62-1/4", 3-tie
11.	F 5801	Inside pinion bearing retainer
12.	F 5806	Oil seal for axle shaft (13666 C/R)
13.	F 5826	Gasket, inside pinion bearing, 1/64"
14.	F 5891	Cup for F5457 and F5892 bearings (14282)
15.	F 5457	Inner pinion bearing cone (14137A)
16.	F 5452	Final drive pinion
17.	F 5438	Snap ring, pinion bearing
18.	F 5785	Final drive housing, RH and LH
19.	F 5892	Outer axle shaft bearing (14117A)
20.	F 5828	Shim .005 (steel) outside pinion bearing
	F 5829	Shim .007 (steel) outside pinion bearing
	F 5830	Shim .010 (steel) outside pinion bearing
21.	F 5786	Axle drive cover
22.	F 5848	Wheel shaft, 8 hole
	F 5910	Lug bolt, 5/8"
23.	F 5809	Seal ring for F5848 shaft
24.	F 7035	Seal for axle shaft (255883)
25.	F 7033	Outer bearing for axle shaft (33287)
26.	F 7034	Outer bearing cup for F7033 (33462)
27.	F 5782	Final drive housing cpt. RH w/axle & wheel shaft, 200 & 300
	F 5783	Final drive housing cpt. LH w/axle & wheel shaft, 300
	F 5784	Final drive housing cpt. LH w/axle & wheel shaft, 200
28.	F 5446	Cup for inner wheel shaft bearing
29.	F 5445	Inner bearing cone for wheel shaft
30.	F 5893	Wheel shaft washer
31.	F 5790	Wheel shaft axle nut, 1-1/2" N.F. castellated
32.	F 5827	Wheel shaft bearing cover gasket
33.	F 5788	Wheel shaft cover
34.	F 5808	Spacer for F5763 gear
35.	F 5763	Final drive gear (8620)
36.	F 5840	Snap ring for final drive gear
37.		3/4" pipe plug
38.	F 5831	Gasket, drive gear cover
39.	F 5905	Drive gear cover
40.	F 5796	Axle spacer, 14-3/8" RH, 2 and 3-tie
	F 5797	Axle spacer, 43-5/8" LH, 2-tie
	F 5798	Axle spacer, 48-5/8" LH, 3-tie
41.	F 5810	Bolt, 9/16" x 25"
42.	F 5799	Brake, housing
43.	F 5800	Brake spacer, RH
	F 5890	Brake spacer, LH
44.	F 5076	Clevis pin
45.	F 5894	Brake clevis
46.	F 5813	Bushing for brake lever
47.	F 5812	Brake lever w/bushing
48.	F 5814	Brake lever mount
49.	F 5824	Dust cover for brake rod
50.	F 214	Nut for brake clevis
51.	F 5547	Roll pin, 1/4" x 1"
52.	FT-53	"O" ring
53.	F 5896	Rear wheel, RH (9:00 x 20)
	F 5837	Rear wheel, RH, flotation
	F 5895	Rear wheel, LH (9:00 x 20)
	F 5897	Rear wheel, LH, flotation
54.	F 5268	N.D. Tire, 9:00 x 20
	F 5269	Tube, 9:00 x 20
	F 5270	Flap, 9:00 x 20
	F 5648	Flotation tire, 8-ply, LH (15 x 16A)
	F 5275	Flotation tire, 6-ply, RH (15 x 16A)
	F 5276	Tube, 15 x 16A, flotation
	F 5596	Flap for F5275 and F5648 tires
55.	F 5833	Final drive support plate, RH

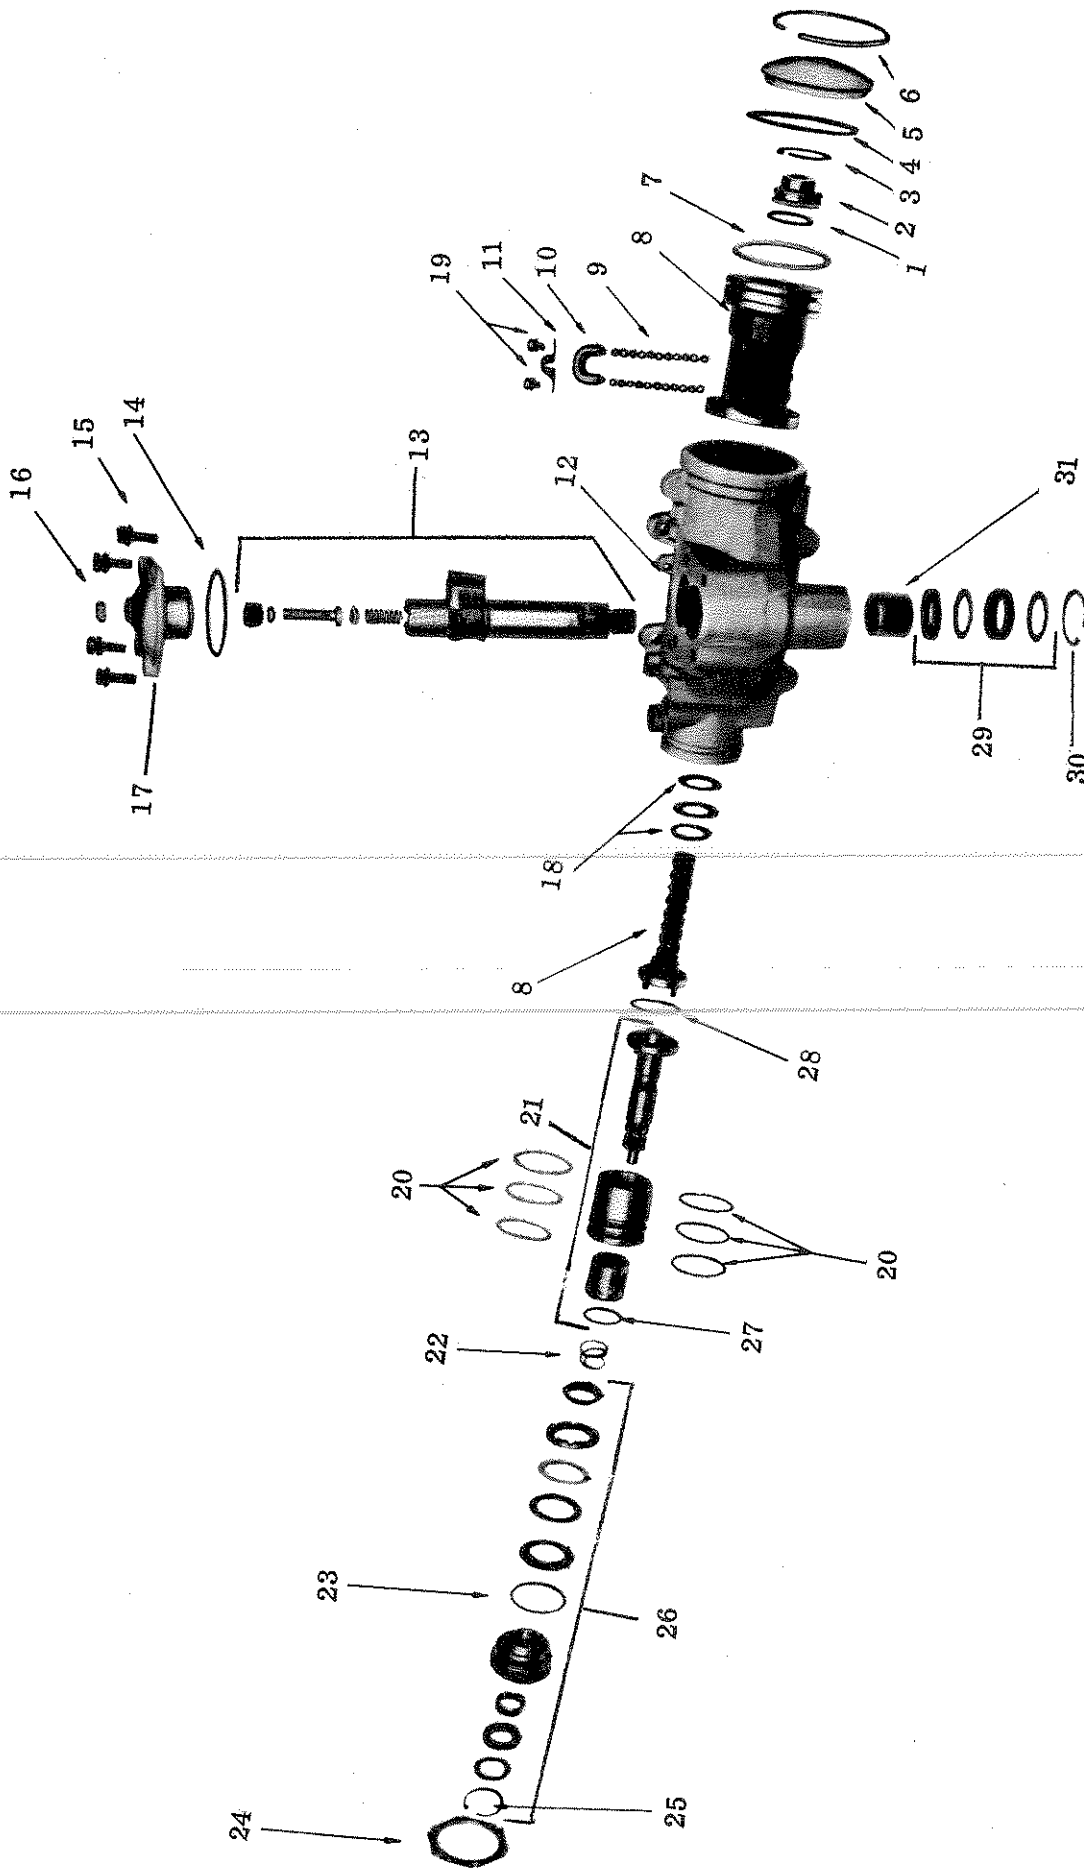 


1. F 5686625 O-Ring Seal
2. F 5689695 Plug, rack piston end
4. F 5686577 O-Ring Seal
5. F 5686815 Plug, housing end
6. F 5686814 Ring, end plug retainer
7. F 5687958 Ring, piston
- F 5688034 Seal, piston ring back-up
8. F 5688752 Rack-piston-nut assembly, worm, pin and
9. F 5685706 Recirculating ball kit (.28117 dia.)
- F 5685707 Recirculating ball kit (.28125 dia.)
- F 5685708 Recirculating ball kit (.28133 dia.)
- F 5685709 Recirculating ball kit (.28141 dia.)
- F 5685710 Recirculating ball kit (.28149 dia.)
- F 5685711 Recirculating ball kit (.28157 dia.)
10. F 5688765 Guide, ball return
11. F 5686539 Clamp, return guide
12. F 5689834 Housing assembly
13. F 5687184 Pitman shaft gear service assembly
14. F 5686570 Seal, side cover
15. F 179839 Bolt, side cover (3/8 x 1 NC)
16. F 5685372 Nut, lash adjuster
17. F 5689021 Cover assembly, housing side
18. F 5687186 Lower thrust bearing service kit
19. F 5696151 Screw and Lockwasher assembly
20. F 5687182 Valve ring and back-up seal service kit
21. F 5690033 Pin and valve assembly
22. F 5687252 Spring, spool
23. F 5686527 O-Ring
24. F 5690698 Nut, adjuster plug lock
25. F 5684820 Ring, Upper end plug oil seal retainer
26. F 5686866 Adjuster plug assembly
27. F 5686546 O-Ring
28. F 5686526 O-Ring
29. F 5685355 Pitman shaft seal service kit
30. F 5682898 Ring, retaining (Pitman shaft seal)
31. F 5689836 Bearing, pitman shaft gear
- F 5689698 O-Ring seal service kit
- F 5689697 Master seal service kit
- F 5687185 Upper thrust bearing kit
- F 5687183 Adjuster plug seal service kit
- F 5692895 Complete steering gear assembly

Clutch Assembly, exploded view

 
(Item 15)

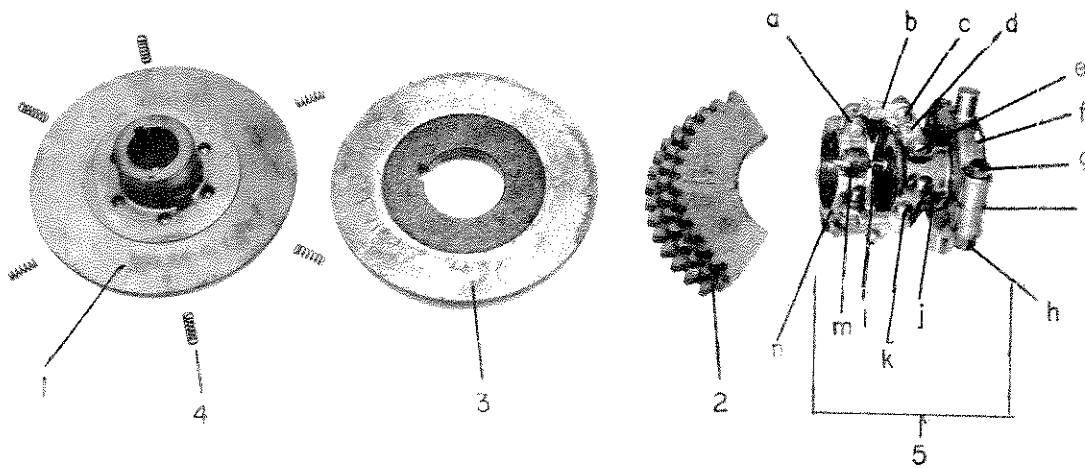

 
Clutch Assembly, & Housing Group of Parts

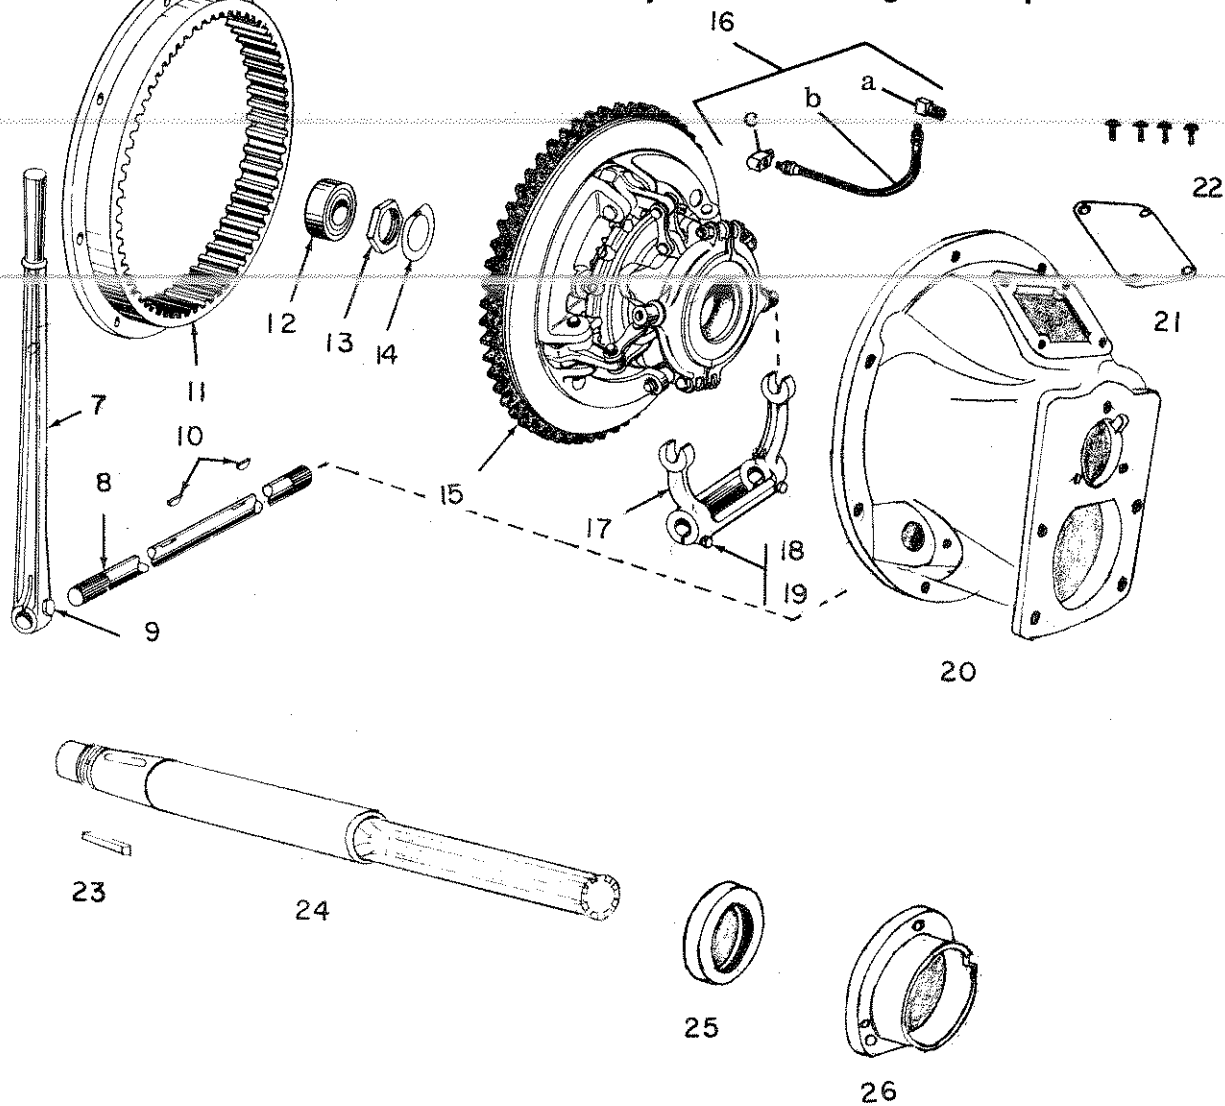

REF. NO.	PART NO.	DESCRIPTION
1.	F-5366	Hub and back plate
2.	F-5367	Driving plate (3 pcs.)
3.	F-5369	Floating plate
4.	F-5375	Return spring
5.	F-5377	Sliding sleeve assembly
a.	F-5370	Lever pivot pin
b.	F-5373	Lever
c.	F-5380	Lever link pin
d.	F-5381	Lever link
e.	F-5373	Lever link pin
f.	F-5378	Sleeve collar assembly
g.		Bolt, 3/8" x 2 1/4" N.F. H.T. C.S.
h.		Nut, 3/8", N.F.
i.	F-5385	Shim
j.	F-5379	Sliding sleeve
k.	F-5376	Snap ring
l.	F-5371	Adjusting lock pin
m.	F-5372	Adjusting lock pin spring
n.	F-5368	Adjusting ring
7.	F-5047	Traction clutch arm
8.	F-5390	Operating shaft
9.		Cap screw 1/2" x 1 3/4" N.C. C.S.
10.	F-5389	Woodruff key (#15) 1/4 x 1
11.	F-5361	Drive ring (6661)
12.	F-5287	Pilot bearing housing to convert 57 Lyc. to Wise.
12.	F-5288	Pilot brg. bush. for 57, 15/16" bore
12.	F-5362	Pilot bearing (#308-F) 58-
13.	F-5363	Hub nut for shaft (2727)
14.	F-5364	Lock washer (A1587)
15.	F-5365	Clutch assembly (XA5060-C107) Spec. #13545, 1 3/8" taper
16.	F-5391	Hose assembly
a.	F-5392	Grease fitting
b.	F-5393	Flex hose (A1663)
c.	F-5394	Right angle fitting
17.	F-5386	Throw-out yoke
18.		Cap screw 3/8" x 1 1/4" N.C. C.S.
19.		Lock washer 3/8" spring lock
20.	F-5000	Clutch housing
21.	F-5395	Hand hole plate
22.		5/16" x 1/2" N.C. C.S. w/5/16" split lock washer
23.	F-5398	Key for clutch shaft
24.	F-5399	Clutch and main shaft in transmission
25.	F-5156	Oil seal for F-5399
26.	F-5153	Seal retainer for F-5156

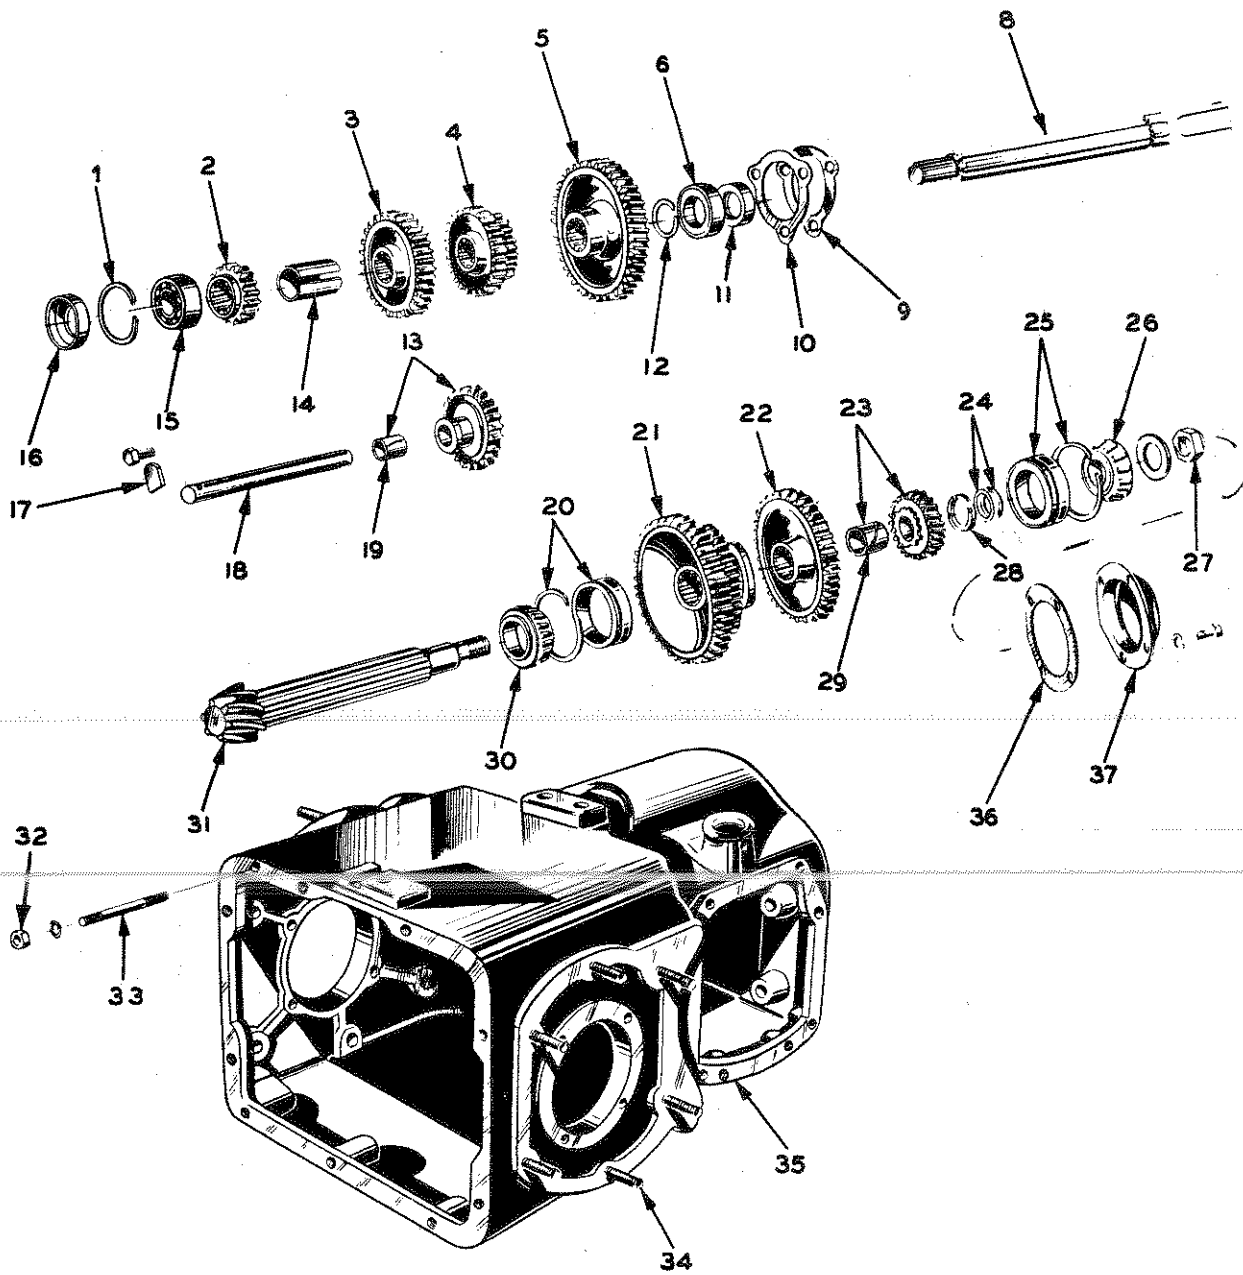 


REF. NO.	PART NO.	DESCRIPTION
1.	F 5301	Mainshaft rear bearing snap ring
2.	F 5302	Mainshaft 1st gear
3.	F 5303	Mainshaft 3rd gear
4.	F 5304	Mainshaft 2nd and reverse gear
5.	F 5305	Mainshaft 4th gear
6.	F 5306	Mainshaft front bearing
8.	F 5399	Clutch and main transmission shaft
9.	F 5307	Mainshaft front bearing cap gasket
10.	F 5308	Mainshaft front bearing cap shim (.004) (A.R.)
10A.	F 5309	Mainshaft front bearing cap shim (.007) (A.R.)
10B.	F 5310	Mainshaft front bearing cap shim (.010) (A.R.)
11.	F 5156	Clutch and mainshaft front oil seal
12.	F 5312	Mainshaft locating snap ring
13.	F 5313	Reverse idler gear assembly - includes Item #19
14.	F 5314	Mainshaft 1st and 3rd gear spacer
15.	F 5306	Mainshaft rear bearing
16.	F 5316	Mainshaft rear bearing oil cup
17.	F 5317	Reverse idler lock
18.	F 5318	Reverse idler shaft
19.	F 5319	Reverse idler bear bushing
20.	F 5320	Pinion shaft rear bearing - includes Item #30
21.	F 5321	Pinion shaft 1st and 3rd gear
22.	F 5322	Pinion shaft 2nd and reverse gear
23.	F 5323	Pinion shaft 4th gear assembly - includes Item #29
24.	F 5324	Pinion shaft front bearing shim (.003) (A.R.)
24A	F 5325	Pinion shaft front bearing shim (.005) (A.R.)
24B	F 5326	Pinion shaft front bearing shim (.010) (A.R.)
25.	F 5327	Pinion shaft front bearing - includes Item #26
26.	See Item #25	
27.	F 5329	Pinion shaft front bearing adjusting nut
28.	F 5332	Pinion shaft front bearing spacer
29.	F 5331	Reverse idler gear bushing
30.		See Item #20
31.	F 5330	Pinion shaft - includes Item #47, Page 76
32.		P.T.O. locating stud nut, 3/8" N.F. hex
33.		P.T.O. locating stud, 3/8" x 1 1/2" N.F. N.C. stud
34.		Axle studs, 9/16" x 6" N.C. C.S. w/9/16" spring lock washer (12 used)
35.	F 5858	Transmission case
36.	F 5333	Pinion shaft front bearing cap gasket
37.	F 5334	Pinion shaft front bearing cap
*		P.T.O. locating stud nut spring lock washer, 3/8"
*		Reverse idler shaft lock screw, 3/8" x 5/8" N.C. C.S.
*		Pinion shaft front bearing cap screw, 3/8" x 1" N.C. C.S. (6 used)
*		P.S. front bearing cap screw lock washer, 3/8" spring, (6 used)
N.I.		Reverse idler lock screw lock washer, 3/8" internal star
*		Illustrated, but not numbered
N.I.		Not illustrated
A.R.		As required

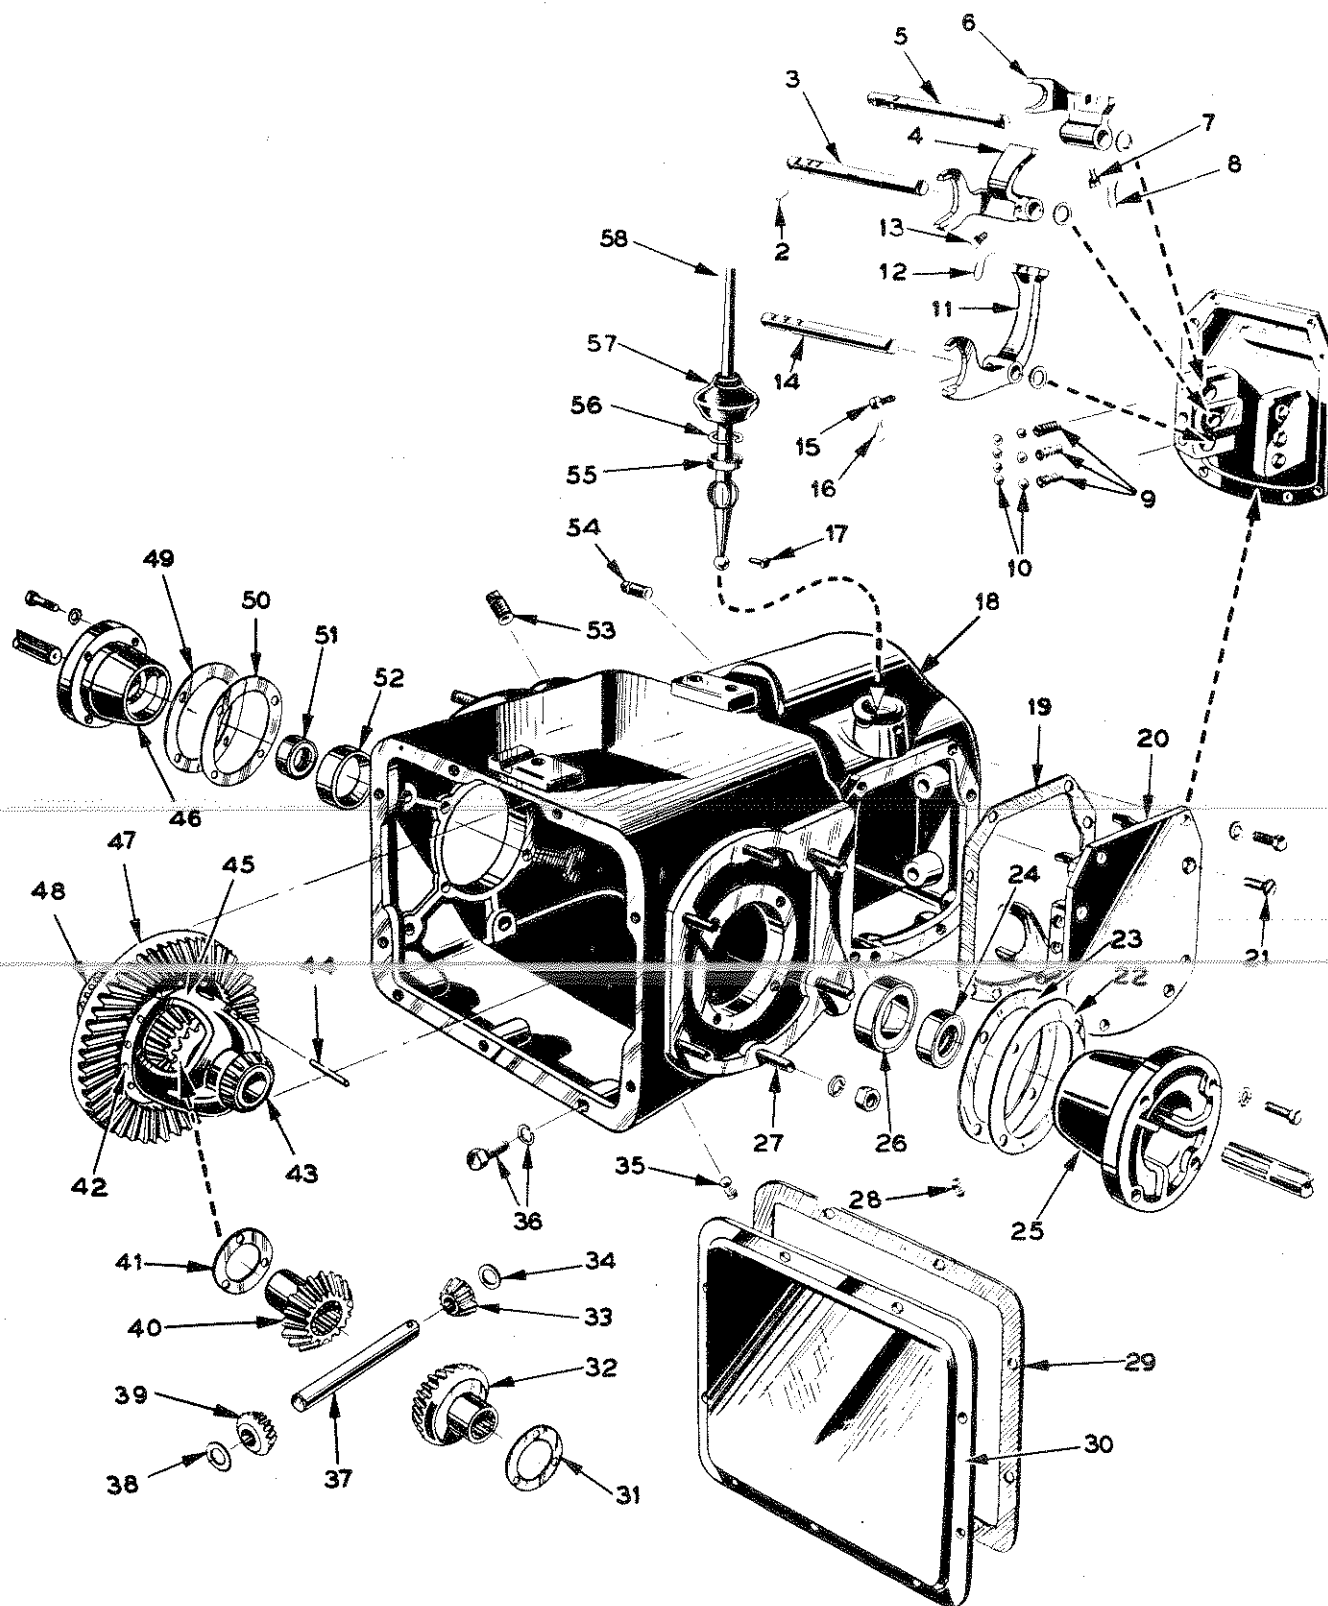 


REF. NO.	PART NO.	DESCRIPTION
2	F-5341	Interlock cross pin
3	F-5342	2nd and 4th shift rail
4	F-5343	2nd and 4th shift fork
5	F-5344	Reverse shift rail
6	F-5345	Reverse shift fork
7	F-5346	Shift fork lock screw
8	F-5347	Shift fork lock screw lock wire
9	F-5348	Mesh lock spring
10	F-5349	Mesh lock ball
11	F-5360	1st and 3rd shift fork
12	F-5347	Lock screw lock wire
13	F-5346	Lock screw
14	F-5351	1st and 3rd shift rail
15	F-5346	Lock screw
16	F-5347	Lock wire
17	F-5352	Pivot pin
18	F-5858	Transmission case
19	F-5353	Control cover gasket
20	F-5354	Control cover
21		Control cover screw, 3/8" x 1", F.H. M.B.
22	F-5356	Differential bearing carrier shim (.004)
25	F-5357	Differential bearing carrier shim (.010)
24	F-5358	Differential bearing carrier oil seal
25	F-5359	Differential bearing carrier assembly - includes Item 24
26		Differential bearing cup - See Item #43
27		Axle stud, 9/16" x 6" N.C. C.S. w/9/16" spring lockwasher
28		Drain plug, 1/2" pipe
29	F-5401	P.T.O. housing gasket
30	F-5402	Differential cover plate
31	F-5403	Differential side gear thrust washer
32	F-5404	Differential side gear
33	F-5405	Differential pinion gear
34	F-5406	Differential pinion gear thrust washer
35		Drain plug, 1/2" pipe
36		P.T.O. housing screw and spring lock washer, 3/8" x 1", N.C. C.S. w/3/8" washer (8 used)
37	F-5409	Differential pinion pin
38	F-5406	Differential pinion gear thrust washer
39	F-5405	Differential pinion gear
40	F-5404	Differential side gear
41	F-5403	Differential side gear thrust washer
42	F-5409	Ring gear rivet (12 used)
43	F-5410	Differential bearing (includes Item #26)
44	F-5411	Differential pinion pin lock pin
45	F-5412	Differential case
46	F-5359	Differential bearing carrier assembly (includes Item #51)
47	F-5330	Ring gear (includes Item #31, illustration page 73)
48	F-5410	Differential bearing (includes Item #52)
49	F-5357	Differential bearing carrier shim (.010) (A.R.)
50	F-5356	Differential bearing carrier shim (.004) (2 used)
51	F-5358	Differential bearing carrier oil seal
52		Differential bearing cup (See item #43)
53		Filler plug, 1" pipe
54		Filler plug, 1/2" pipe
55	F-5414	Shift lever pivot washer
56	F-5415	Shift lever pivot washer ring
57	F-5416	Shift lever dust cover
58	F-5417	Shift lever, 3-T
	F-5418	Shift lever, 2-T
*	F-5419	Shift stop washer
*		Control cover screw, 3/8" x 1", N.C. C.S.
*		Control cover screw spring lockwasher, 3/8"
*		Differential bearing carrier screw, 1/2" x 1 1/2" N.C. C.S.
*		Differential bearing carrier screw spring lockwasher, 1/2"
	F-5350	Ring, pinion and differential assembly - (Includes items 31, 32, 33, 34, 37, 38, 39, 40, 41, 42, 44, 45, 47 and item 31 on page 74)

 
* Illustrated but not numbered

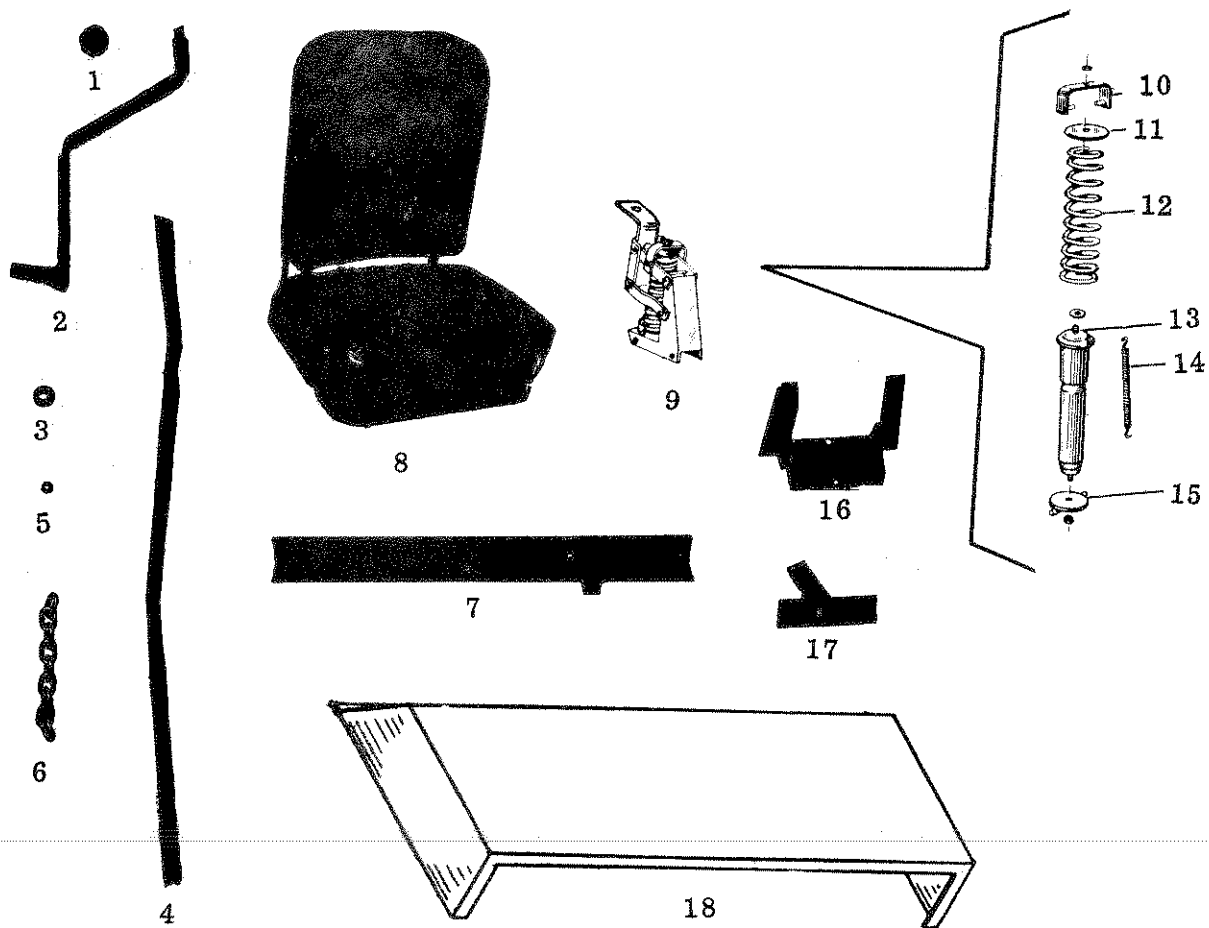


REF. NO.	PART NO.	DESCRIPTION
1.	F 5055	Pickup lift lever knob
2.	F 5740	Pickup lift lever
3.	F 172	Set collar, 3/4"
4.	F 5741	Pickup lift strap
5.	F 5778	Ferrule for pickup lift lever
6.	F 5742	Pickup lift chain
7.	F 5777	Bearing angle bracket for pickup lift lever
8.	F 5918	Seat assembly 65-
	F 5921	Back seat cushion 65-
	F 5920	Bottom seat cushion 65-
	F 5261	Seat frame only
9.	F 5703	Seat spring and hydraulic assembly complete
10.	F 5501	Spring and cylinder adjusting bracket
11.	F 5502	Cup washer for F5705 spring
12.	F 5705	Spring for F5703 seat assembly
13.	F 5866	Hydraulic cylinder for F5703
14.	F 5506	Spring, hold down
15.	F 5505	Plate, bottom pivot
16.	F 5867	Seat bracket
17.	F 5737	Pickup lift bracket
18.	F 5749	Shield over pickup complete
	F 5750	Upright shield for F5749

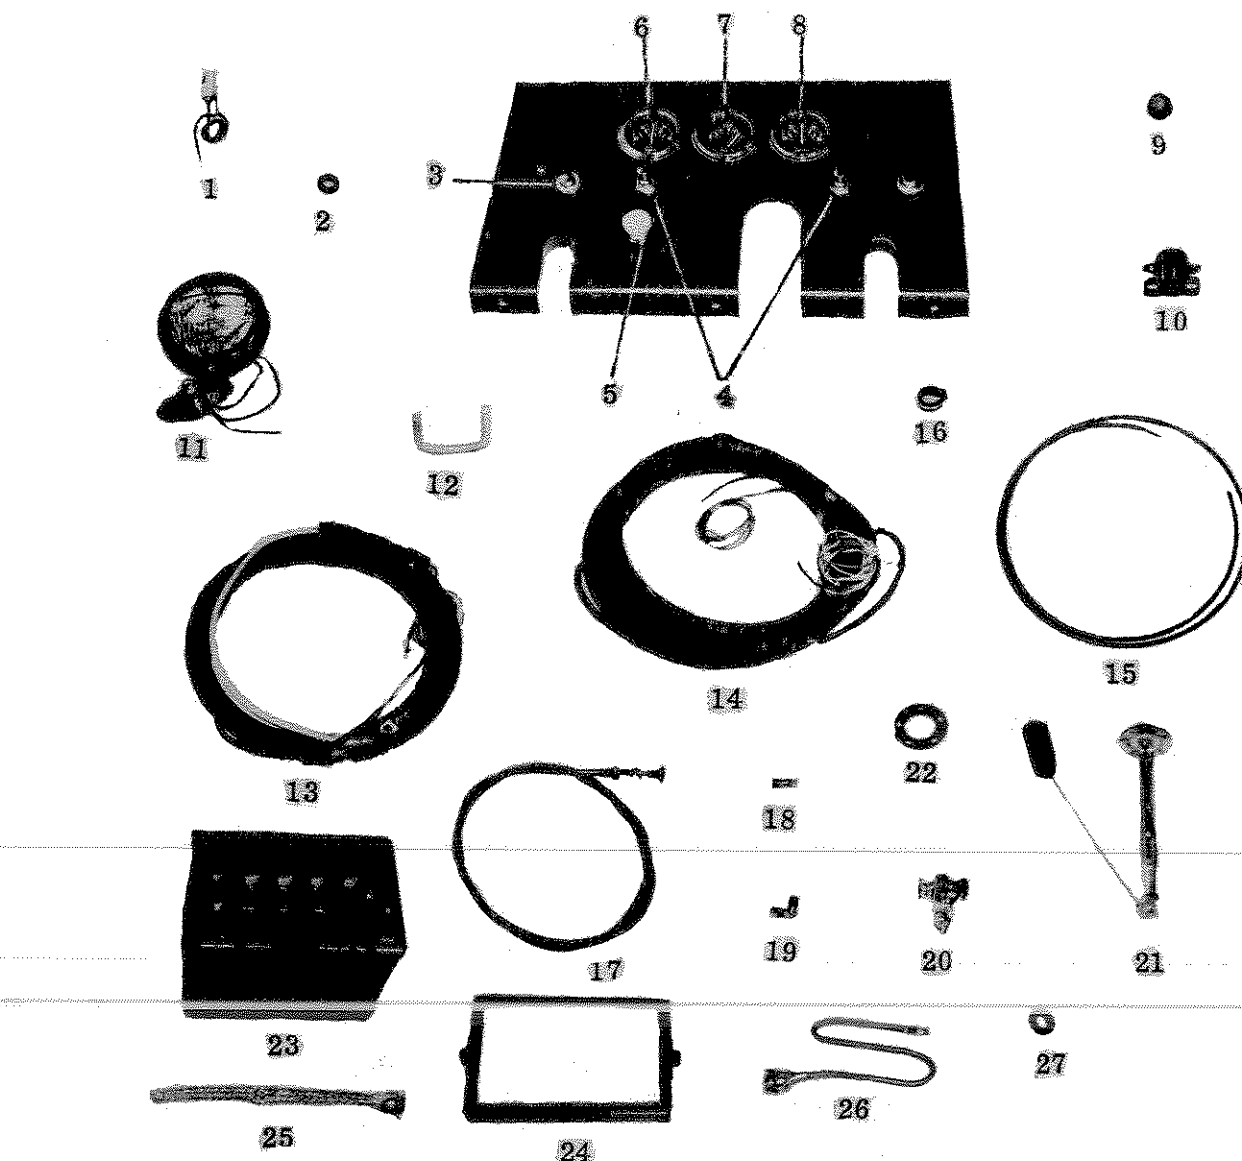 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	F 5234	Instrument panel light socket	16.	F 5264	Hanger clamp, gas line
2.	F 5889	Grommet for light wire, 2 used		F 5265	Hanger clamp, wire harness
3.	F 5237	Starter switch (2 used)	17.	F 5069	Choke, cable complete, rear
4.	F 5235	Ignition switch (2 used)		F 5070	Choke, cable complete, front
5.	F 5877	Light switch	18.	F 5232	Straight fitting for gas line (268P-1/4" x 1/8")
6.	F 5240	Ammeter (2 used)	19.	F 5233	Elbow fitting for gas line (269P-1/4" x 1/8")
7.	F 5847	Fuel gauge indicator, 12V	20.	F 5299	Fuel sediment bowl and shut off valve (2 used)
8.	F 5240	Ammeter (2 used)	21.	F 5846	Fuel gauge, sending unit, 12V
9.	F 5236	Rubber cap for starter switch (2 used)	22.	F 5878	Gasket, sending unit to tank
10.	F 5843	Solenoid, 12V (2 used)	23.	F 1499	Battery, 12V
11.	F 1645	Headlight, sealed beam, 12V (2 used)	24.	F 5499	Battery hold down bracket
	F 5842	Sealed beam unit, 12V (2 used)	25.	F 5869	Battery ground cable, 12V
	F 1644	Rear combination light, 12V	26.	F 5868	Battery cable, insulated, 12V
12.	F 5538	Solenoid cable	27.	F 5239	Grommet, battery cable
13.	F 5727	Wiring harness, front			
14.	F 5728	Wiring harness, rear			
15.	F 5230	Gas line, rear, 63"			
	F 5231	Gas line, front, 116"			

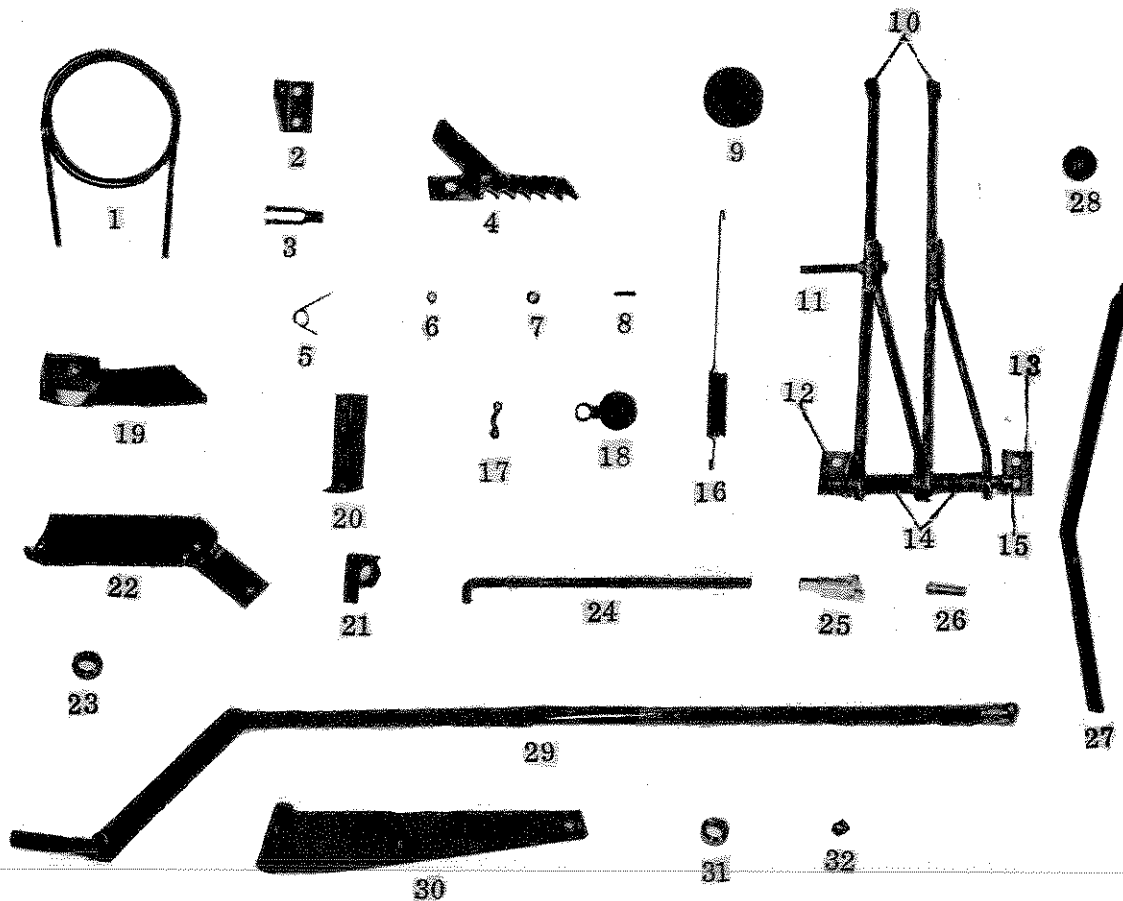 

REF. NO.	PART NO.	DESCRIPTION
1.	F 5879	Brake cable, RH, 105"
2.	F 5098	Brake pedal lock bracket
3.	F 5075	Clevis, 5/16 for brake, cable
4.	F 5754	Brake pedal lock
5.	F 5647	Spring for F5754 lock
6.	F 5874	Bushing for F5647 spring
7.	F 5656	Bushing, brake cable lock
8.	F 5657	Pin for F5754 lock
9.	F 5099	Brake pedal pad
10.	F 5733	Brake pedal (2 used)
11.	F 5888	Brake lock pin
12.	F 5736	Brake pedal shaft support, LH
13.	F 5735	Brake pedal shaft support, RH
14.	F 5875	Spacer pipe, brake pedal
15.	F 5606	Brake pedal shaft
16.	F 5707	Brake return spring (2 used)
17.	F 5180	Clevis for cable pulley
18.	F 5179	Cable pulley w/swivel
19.	F 5876	Brake cable sheave and bracket, complete, rear
	F 4067	Roller for F5876 (2 used)
	F 4068	Bushing for F4067 roller
	F 994	Shield for F4067 roller (2 used)
20.	F 5775	Anchor for gear shift lever adj. rod
21.	F 5772	Gear shift rod front bearing
22.	F 5712	Shift bearing bracket
23.	F 5131	Gear shift rod rear bearing
24.	F 5170	Gear shift lever adj. rod, 16"
25.	F 5048	Clevis 1/2"
26.	F 5049	Clevis pin
27.	F 5770	Gear shift lever
28.	F 5055	Gear shift lever knob
29.	F 5771	Gear shift rod
30.	F 5711	Shift bar
31.	F 5121	Set collar 1"
32.	FT-141	Set collar 1/2" (2 used)

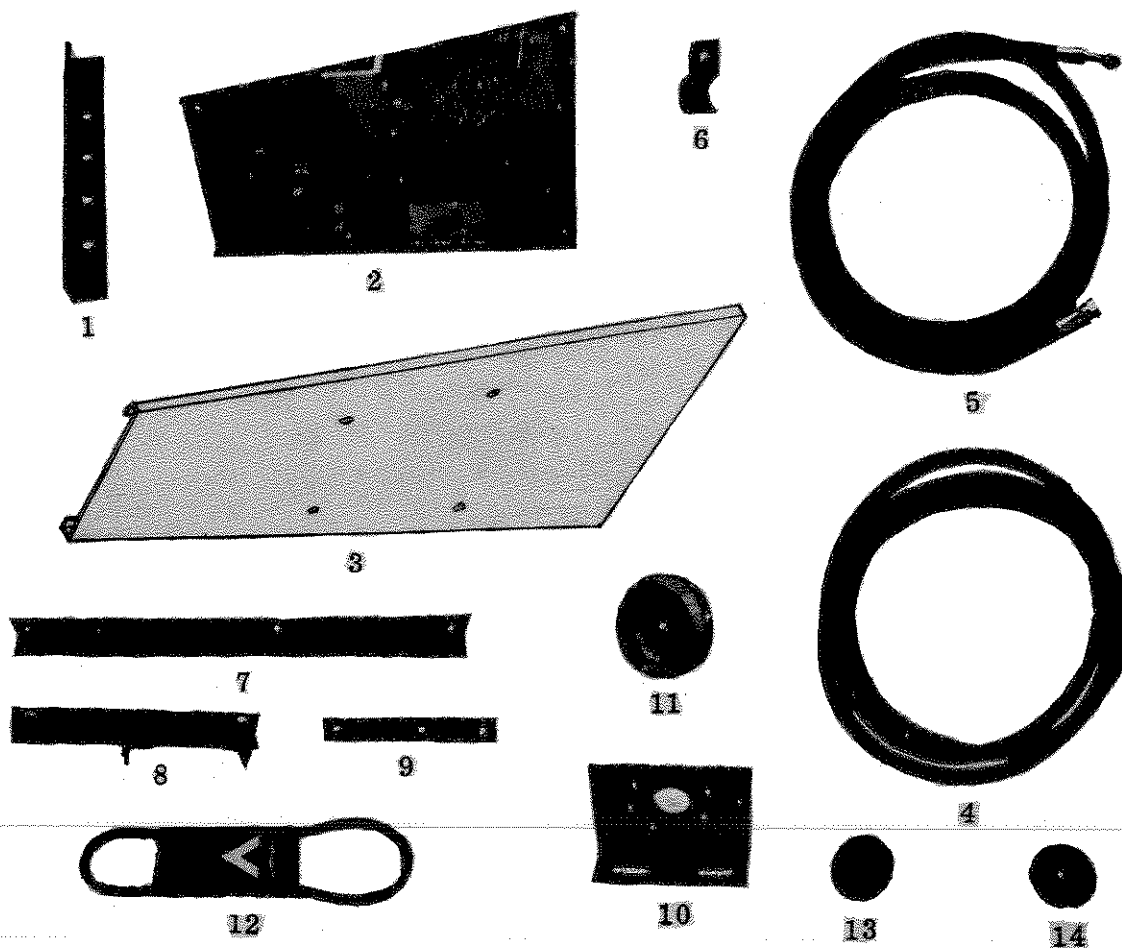 


REF. NO.	PART NO.	DESCRIPTION
1.	F 5884	Angle for mounting belt shield bracket
2.	F 5781	Belt shield bracket
3.	F 5138	Belt shield
4.	F 5637	Hose, return 3/8" x 13'
5.	F 5636	Hose, pressure 3/8" x 12'10"
6.	F 5635	Clip for hydraulic hose
7.	F 5632	Support angle for hydraulic pump, RH (VH4D)
	F 5689	Support angle for hydraulic pump, LH (VH4D)
	F 5856	Support angle for hydraulic pump, RH (VG4D)
	F 5885	Support angle for hydraulic pump, LH (VG4D)
8.	F 5634	Generator mounting angle, VH4D
	F 5886	Generator mounting angle, VG4D
9.	F 5633	Strap, hydraulic pump support, VH4D (2 used)
	F 5887	Strap, hydraulic pump support, VG4D (2 used)
10.	F 5631	Mounting bracket for hydraulic pump for F5610 pump
11.	F 5614	Hydraulic pump sheave, driven, 5-1/2" O. D.
12.	F 5625	Belt, hydraulic pump drive (AX-35)
13.	F 5612	Hydraulic pump drive sheave, 3-1/2" O.D., 5/8" bore
14.	F 5613	Generator drive sheave, 3-1/2" O.D., 9/16" bore
	F 5923	Generator drive sheave, 2-1/2" O.D., 9/16" bore
	F 5924	Generator drive belt, S.P. rear engine VG4D only

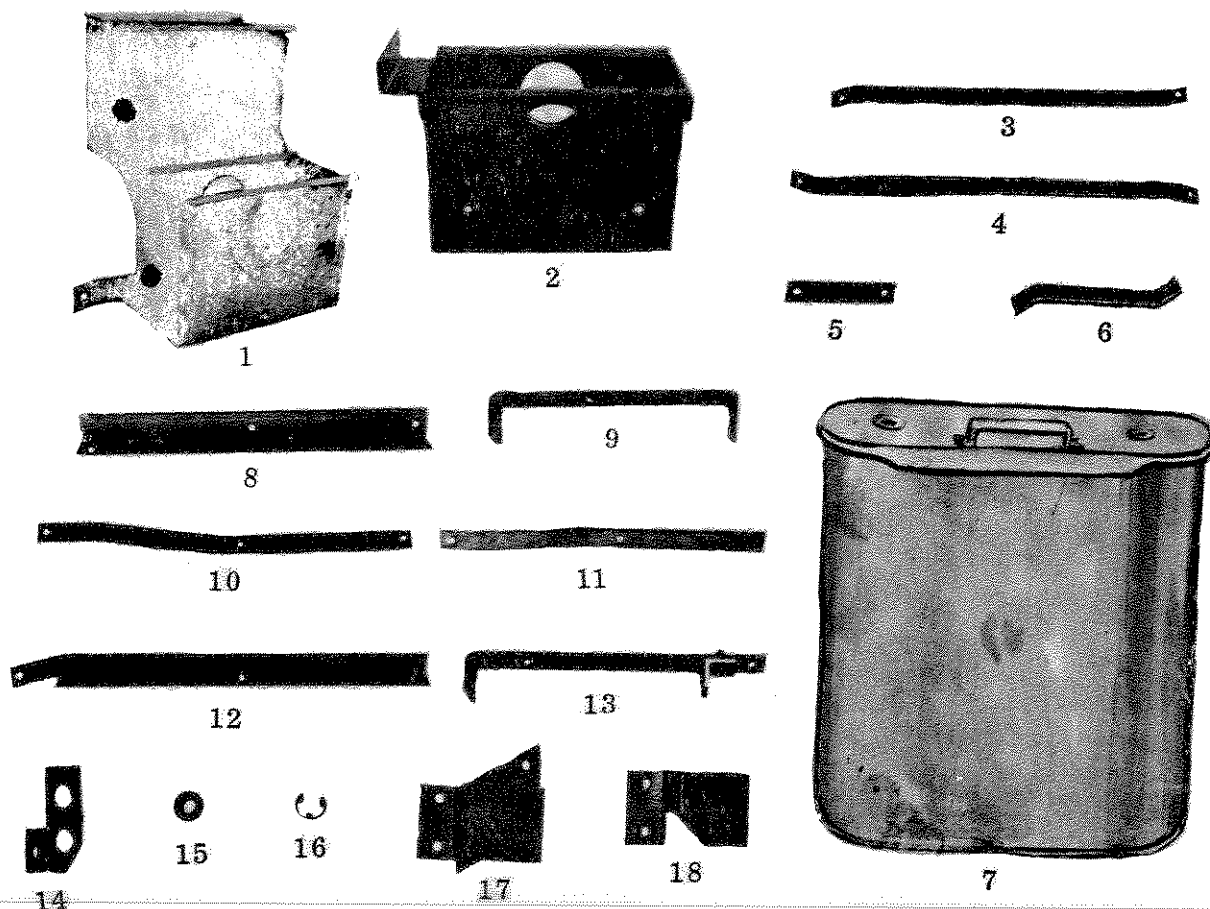 

REF. NO.	PART NO.	DESCRIPTION
1.	F 5665	Double wire box, 200W and 300W
2.	F 5666	Single wire box, 300W
3.	F 5670	Wire box brace, single rear for 300W
4.	F 5667	Wire box brace, single front for 300W
5.	F 5669	Wire box brace, double box upper, 200W and 300W
6.	F 5668	Wire box brace, double box lower, 200W and 300W
7.	F 285	Twine can, 2-tie
	F 399	Twine can, 3-tie
8.	F 5680	Twine can mounting angle, RH, 2-tie
	F 5681	Twine can mounting angle, RH, 3-tie
9.	F 5684	Twine can mounting angle tie strap, rear, 2-tie
	F 5685	Twine can mounting angle tie strap, rear, 3-tie
10.	F 5678	Twine can brace, RH, 2-tie
	F 5679	Twine can brace, RH, 3-tie
11.	F 5676	Twine can brace, LH, 2-tie
	F 5677	Twine can brace, LH, 3-tie
12.	F 5686	Twine can mounting angle, LH, 2-tie
	F 5687	Twine can mounting angle, LH, 3-tie
13.	F 5682	Twine can mounting angle tie strap, front, 2-tie
	F 5683	Twine can mounting angle tie strap, front, 3-tie
14.	F 5870	Wire guide bushing holder
15.	F 856	Bushing, wire guide
16.	F 857	Snap ring for F 856 bushing
17.	F 5532	Lower front wire guide w/roller, LH, 300 only
18.	F 5531	Lower front wire guide w/roller, RH, 300 only

Not shown:

F 5911	4 compartment wire box with braces, dual
F 5912	2 compartment wire box with braces, dual
F 5906	Wire guide bracket with roller, under feeder house, 300W S. P. only

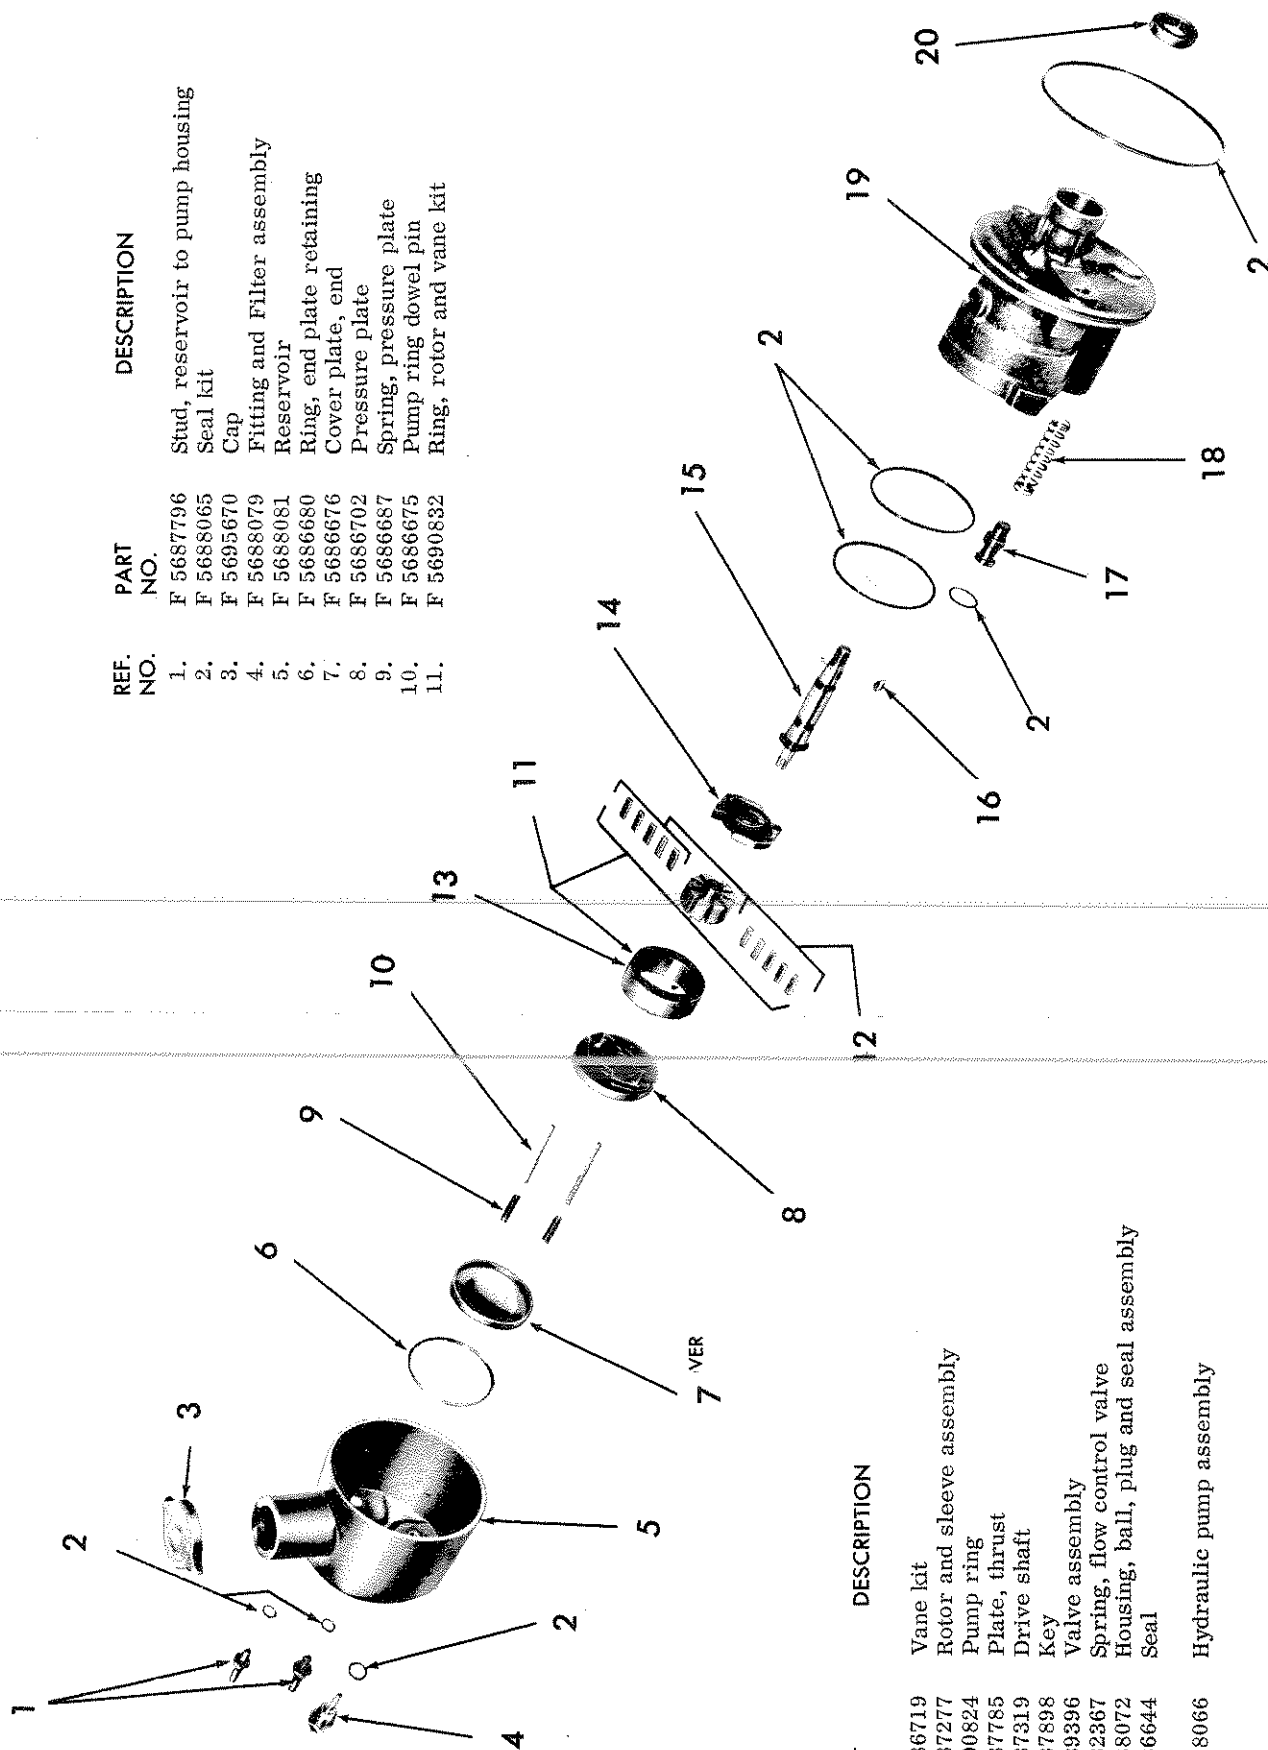 

REF. NO.	PART NO.	DESCRIPTION
1.	F 5687796	Stud, reservoir to pump housing
2.	F 5688065	Seal kit
3.	F 5695670	Cap
4.	F 5688079	Fitting and Filter assembly
5.	F 5688081	Reservoir
6.	F 5686680	Ring, end plate retaining
7.	F 5686676	Cover plate, end
8.	F 5686702	Pressure plate
9.	F 5686687	Spring, pressure plate
10.	F 5686675	Pump ring dowel pin
11.	F 5690832	Ring, rotor and vane kit

REF. NO.	PART NO.	DESCRIPTION
12.	F 5686719	Vane kit
13.	F 5687277	Rotor and sleeve assembly
14.	F 5690824	Pump ring
15.	F 5687785	Plate, thrust
16.	F 5687319	Drive shaft
17.	F 5687898	Key
18.	F 5689396	Valve assembly
19.	F 5682367	Spring, flow control valve
20.	F 5688072	Housing, ball, plug and seal assembly
	F 5686644	Seal
	F 5688066	Hydraulic pump assembly

