


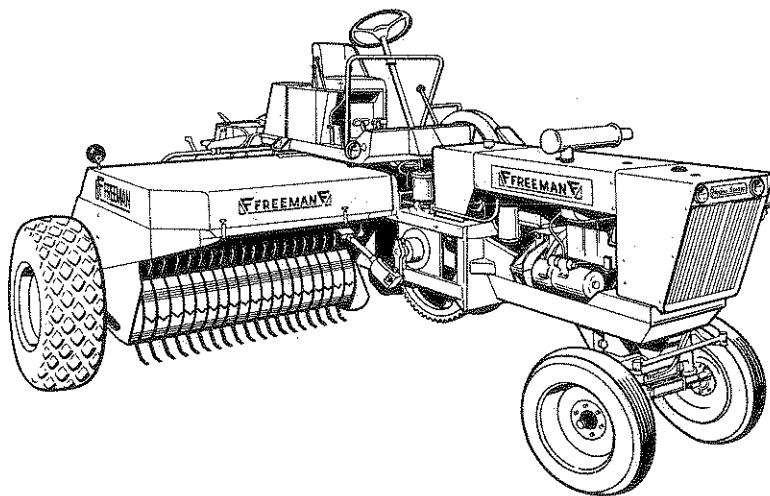

1968 - 1969 PARTS LIST

for

Model 200W and 200T

Model 300W and 300T

Model 330W and 330T

SELF-PROPELLED BALER

HYDROSTATIC

Table of Contents

	Page
Front end engine base and cowl	1
Operators Platform	2
Clutch control and belt drive	3
Steering Assembly	4
Brake controls	5
Gear shift controls and operators seat	6
Pickup shield, exhaust, and air cleaner	7
Electric system	8
Rear axle and final drive	9-10
Hydrostatic Drive system	11-12
Transmission assembly	13-14
Differential assembly	15-16
Hydraulic lift for Pickup	17
Throttle control, tension control, and fuel line	18
Wire box and wire guides	19
Twine box and twine guides	20
Drive gearbox	21
Excel cab	22
Parts Not Illustrated	22

HYDROSTATIC DRIVE

Self-Propelled Balers


Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.
F 96	22	F 5031	4	F 5352	16	F 5808	10
F 214	4, 10	F 5032	4	F 5353	16	F 5809	10
F 215	4	F 5039	4	F 5354	16	F 5812	10
F 462	4	F 5040	4	F 5356	16	F 5813	10
F 524	20	F 5048	3	F 5357	16	F 5814	10
F 525	20	F 5049	3, 17	F 5358	16	F 5824	10
F 853	7	F 5055	3, 6	F 5359	16	F 5826	9
F 856	19, 20	F 5069	18	F 5360	16	F 5827	10
F 857	19, 20	F 5075	5	F 5401	16	F 5828	9
F 862	8	F 5076	5	F 5402	16	F 5829	9
F 884	4	F 5145	4	F 5403	16	F 5830	9
F 934	4	F 5156	14	F 5404	16	F 5831	10
F 946	8, 19	F 5159	19	F 5405	16	F 5837	10
F 994	5	F 5234	8	F 5406	16	F 5840	10
F 1003	18	F 5236	8	F 5408	16	F 5842	8
F 1005	18	F 5237	8	F 5409	16	F 5854	4
F 1007	18	F 5268	10	F 5410	16	F 5858	14, 16
F 1083	21	F 5269	10	F 5411	16	F 5866	6
F 1084	21	F 5270	10	F 5412	16	F 5867	6
F 1087	21	F 5275	10	F 5414	16	F 5890	10
F 1131	18	F 5276	10	F 5415	16	F 5891	9
F 1245	21	F 5299	18	F 5416	16	F 5892	9
F 1246	21	F 5301	14	F 5438	9	F 5893	10
F 1323	17	F 5302	14	F 5445	10, 21	F 5894	10
F 1497	8	F 5303	14	F 5446	10, 21	F 5895	10
F 1624	4	F 5304	14	F 5452	9	F 5896	10
F 1625	4	F 5305	14	F 5457	9	F 5897	10
F 1626	4	F 5306	14	F 5501	6	F 5898	9
F 1627	4	F 5307	14	F 5502	6	F 5899	9
F 1628	4	F 5308	14	F 5505	6	F 5900	9
F 1644	8	F 5309	14	F 5545	18	F 5901	9
F 1645	8	F 5310	14	F 5546	2	F 5902	9
F 1653	4	F 5312	14	F 5547	10	F 5903	9
F 1654	4	F 5313	14	F 5551	2, 18	F 5904	9
F 1689	2	F 5314	14	F 5554	17, 18	F 5905	10
F 1706	7	F 5316	14	F 5559	18	F 5910	10
F 1720	10, 21	F 5317	14	F 5578	4	F 5913	10
F 3102	12	F 5318	14	F 5596	10	F 5918	6
F 3104	12	F 5319	14	F 5648	10	F 5920	6
F 3105	12	F 5320	14	F 5650	4	F 5921	6
F 3109	12	F 5321	14	F 5703	6	F 5941	8
F 3121	4	F 5322	14	F 5705	6	F 5942	14, 16
F 4014	19	F 5323	14	F 5759	4	F 5944	5
F 4015	19	F 5324	14	F 5763	10	F 5945	5
F 4067	5, 19	F 5325	14	F 5769	4	F 5947	2
F 4068	5, 19	F 5326	14	F 5782	10	F 5948	2
F 4069	19	F 5327	14	F 5783	10	F 5949	2
F 4081	10	F 5329	14	F 5784	10	F 5950	2
F 4137	3	F 5330	14, 16	F 5785	9	F 5952	17
F 4163	19	F 5331	14	F 5786	10	F 5953	17
F 4190	19	F 5332	14	F 5788	10	F 5954	8
F 4191	19	F 5333	14	F 5790	10	F 5971	7
F 4203	19	F 5334	14	F 5791	9	F 5979	5
F 4204	19	F 5341	16	F 5792	9	F 5981	5
F 4205	19	F 5342	16	F 5793	9	F 5982	5
F 4206	19	F 5343	16	F 5794	9	F 5984	5
F 4210	5, 19	F 5344	16	F 5795	9	F 5991	5
F 4222	19	F 5345	16	F 5796	10	F 5992	6
F 4223	19	F 5346	16	F 5797	10	F 6003	6
F 4225	19	F 5347	16	F 5798	10	F 6004	6
F 5006	4	F 5348	16	F 5799	10	F 6014	17
F 5007	4	F 5349	16	F 5800	10	F 6015	17
F 5008	4	F 5350	16	F 5801	9	F 6016	17
F 5016	4	F 5351	16	F 5806	9	F 6018	17

Index

Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.
F 6020	17	F 6177	2	F 6251	12	F 6321	19
F 6021	17	F 6178	2	F 6252	12	F 6322	19
F 6026	6	F 6182	2	F 6253	12	F 6323	4
F 6028	6	F 6183	2	F 6254	12	F 6324	4
F 6029	6	F 6184	2	F 6255	12	F 6325	2
F 6030	6	F 6186	6	F 6256	12	F 6326	8
F 6032	2	F 6188	17	F 6257	12	F 6327	8
F 6034	18	F 6189	1	F 6258	12	F 6328	8
F 6035	18	F 6190	1	F 6259	12	F 6329	8
F 6036	18	F 6191	1	F 6260	12	F 6331	1
F 6037	17	F 6192	1	F 6261	12	F 6332	3
F 6041	18	F 6193	1	F 6262	12	F 6333	3
F 6042	18	F 6194	1	F 6263	12	F 6335	4
F 6048	18	F 6195	1	F 6264	12	F 6336	21
F 6049	18	F 6196	1	F 6265	12	F 6337	21
F 6050	18	F 6197	1	F 6266	12	F 6338	21
F 6051	17	F 6198	1	F 6267	12	F 6339	21
F 6053	10	F 6199	1	F 6268	12	F 6340	21
F 6054	3, 5, 6	F 6200	1	F 6269	12	F 6341	3, 12
F 6055	5	F 6201	1	F 6270	2	F 6342	21
F 6056	10	F 6202	1	F 6271	2	F 6343	21
F 6062	7	F 6203	1	F 6272	2	F 6344	21
F 6067	2	F 6204	1	F 6273	2	F 6345	21
F 6069	2	F 6205	3	F 6274	2	F 6346	21
F 6070	6	F 6206	3	F 6275	2	F 6347	21
F 6073	6	F 6207	3	F 6276	2	F 6348	21
F 6074	6	F 6208	3	F 6278	2	F 6349	21
F 6077	5	F 6209	3	F 6279	2	F 6350	21
F 6079	6	F 6210	3	F 6280	2	F 6351	21
F 6080	6	F 6211	3	F 6281	2	F 6352	21
F 6081	6	F 6212	3	F 6282	2	F 6353	21
F 6082	17	F 6213	3	F 6283	2	F 6354	21
F 6083	17	F 6214	3	F 6284	2	F 6355	21
F 6084	17	F 6215	3	F 6285	2	F 6356	21
F 6085	17	F 6216	3	F 6286	2	F 6357	14
F 6086	17	F 6217	3	F 6287	2	F 6358	12
F 6087	17	F 6218	3	F 6288	2	F 6360	21
F 6088	17	F 6219	3	F 6289	2	F 6361	10
F 6104	7	F 6220	3	F 6290	2	F 6362	4
F 6105	7	F 6221	3	F 6291	2	F 6363	4
F 6111	7	F 6222	3	F 6292	4	F 6364	4
F 6128	6	F 6223	3	F 6293	4	F 6365	4
F 6129	6	F 6224	3	F 6294	4	F 6369	17
F 6130	6	F 6225	3	F 6295	4	F 6371	8
F 6132	10	F 6226	3	F 6296	4	F 6372	8
F 6133	16	F 6227	3	F 6297	4	F 6386	22
F 6134	17	F 6228	3	F 6298	4	F 6394	22
F 6135	22	F 6229	3	F 6299	4	F 6395	22
F 6136	22	F 6230	3	F 6300	4	F 6396	22
F 6137	22	F 6231	3	F 6301	4	F 6397	22
F 6138	22	F 6232	3	F 6302	4	F 6398	22
F 6139	22	F 6233	3	F 6303	4	F 6399	1
F 6140	22	F 6234	3	F 6304	4	F 6400	5
F 6141	22	F 6235	12	F 6305	4	F 6401	2
F 6142	22	F 6236	12	F 6306	7	F 6402	2
F 6143	22	F 6237	12	F 6307	7	F 6403	6
F 6144	22	F 6238	12	F 6308	7	F 6405	18
F 6145	22	F 6239	12	F 6309	7	F 6406	18
F 6146	22	F 6240	12	F 6310	7	F 6407	21
F 6148	22	F 6241	12	F 6311	7	F 6408	21
F 6150	22	F 6242	12	F 6312	7	F 6409	21
F 6153	22	F 6243	12	F 6313	7	F 6410	5
F 6155	22	F 6244	12	F 6314	19	F 6411	5
F 6161	10	F 6245	12	F 6315	19, 20	F 6412	2
F 6163	17	F 6246	12	F 6316	19, 20	F 6413	2
F 6164	17	F 6247	12	F 6317	19	F 6414	1
F 6170	6	F 6248	12	F 6318	19, 20	F 6415	4
F 6175	2	F 6249	12	F 6319	19, 20	F 6417	8
F 6176	2	F 6250	12	F 6320	19	F 6418	8


Index

Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.
F 6419	8	F 6450	12	F 7515	19	F 7932	20
F 6420	8	F 6451	17	F 7541	20	F 7933	20
F 6421	8	F 6452	7	F 7555	20	F 7934	20
F 6422	8	F 6453	12	F 7556	20	F 7935	20
F 6423	8	F 6454	1	F 7608	19	F 7936	20
F 6424	8	F 6455	4, 12	F 7635	7	F 7937	20
F 6425	8	F 6456	4	F 7637	19	F 7938	20
F 6426	8	F 6457	4, 12	F 7638	19	F 7939	20
F 6427	8	F 6458	4	F 7639	19	F 7973	20
F 6428	8	F 6459	4	F 7640	19	F 7974	20
F 6429	8	F 6460	8	F 7641	19		
F 6430	8	F 6461	8	F 7642	19	FD 25	2
F 6431	8	F 6462	4	F 7643	19	FD 26	2
F 6432	3	F 6463	4	F 7644	19	FT 18	17
F 6433	12	F 6464	4	F 7645	19	FT 53	10
F 6434	12	F 6465	3	F 7716	19	FT 82	17
F 6435	22	F 7033	10	F 7717	19	FT 103	17
F 6441	7	F 7034	10	F 7889	20	FT 107	4, 17
F 6442	18	F 7035	10	F 7890	20	FT 136	17
F 6443	18	F 7095	5	F 7891	20	FT 150	17
F 6444	18	F 7166	7	F 7898	20	FT 163	17
F 6445	18	F 7230	19	F 7927	20	FT 169	17
F 6446	18	F 7231	19	F 7928	20	FT 530	4
F 6447	18	F 7232	19	F 7929	20		
F 6448	4	F 7247	3, 17	F 7930	20		
F 6449	4	F 7337	3	F 7931	20		

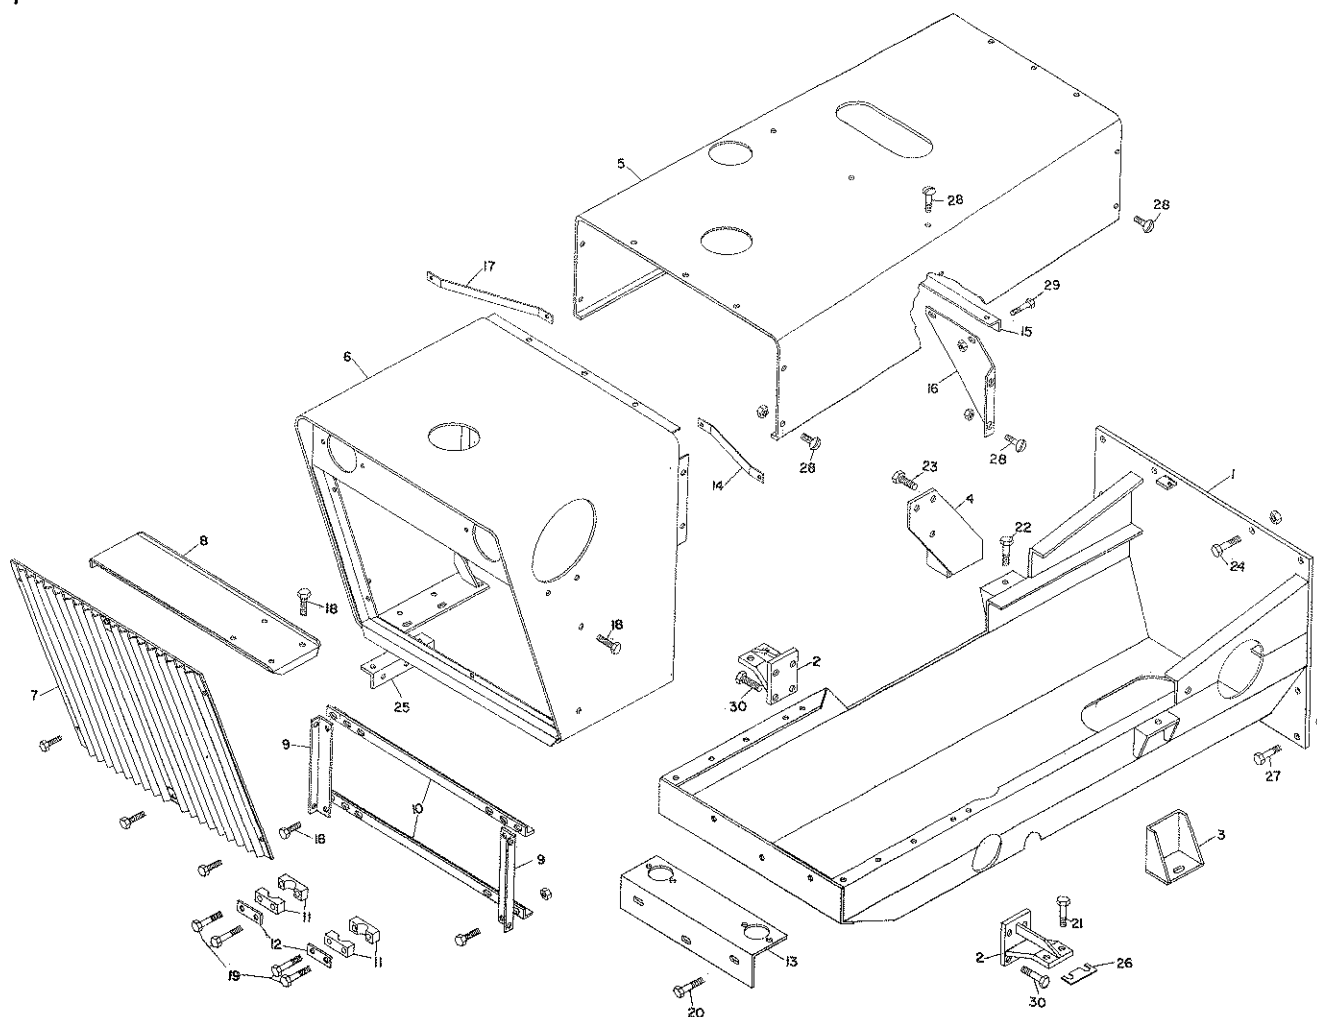


FRONT END ENGINE BASE AND COWL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6189	Front end main frame section for Perkins	16	F 6204	Main cowl gusset brace, Right side
2	F 6190	Front motor mounts, L.H. & R.H.		F 6399	Main cowl gusset brace, Left side
3	F 6191	Rear motor mounts, L.H.	17	F 6331	Cowl brace, Right side
4	F 6192	Rear motor mounts, R.H.	18		5/16" x 3/4" NC cap screw
5	F 6193	Engine main cowl	19		1/4" x 2-3/4" NC cap screw
6	F 6194	Engine front cowl	20		3/8" x 1" NC cap screw
7	F 6195	Front end grill	21		7/16" x 1-1/4" NF cap screw
8	F 6196	Air cleaner mount plate	22		1/2" x 1-1/4" NF cap screw
9	F 6197	Oil cooler bracket	23		1/2" x 1" NC cap screw
10	F 6198	Oil cooler brace	24		1/2" x 1-1/2" NC cap screw
11	F 6199	Oil cooler clamp, 2-piece	25	F 6414	Cowl support, R.H.
12	F 6200	Oil cooler clamp plate	26	F 6454	Shim for front motor mount
13	F 6201	Radiator mount	27		1/2" x 2-1/4" NC cap screw
14	F 6202	Front cowl brace, left side	28		1/4" x 3/4" truss head screw
15	F 6203	Main cowl brace	29		1/4" x 3/4" NC cap screw
			30		7/16" x 1-1/2" Grade 8 NF cap screw

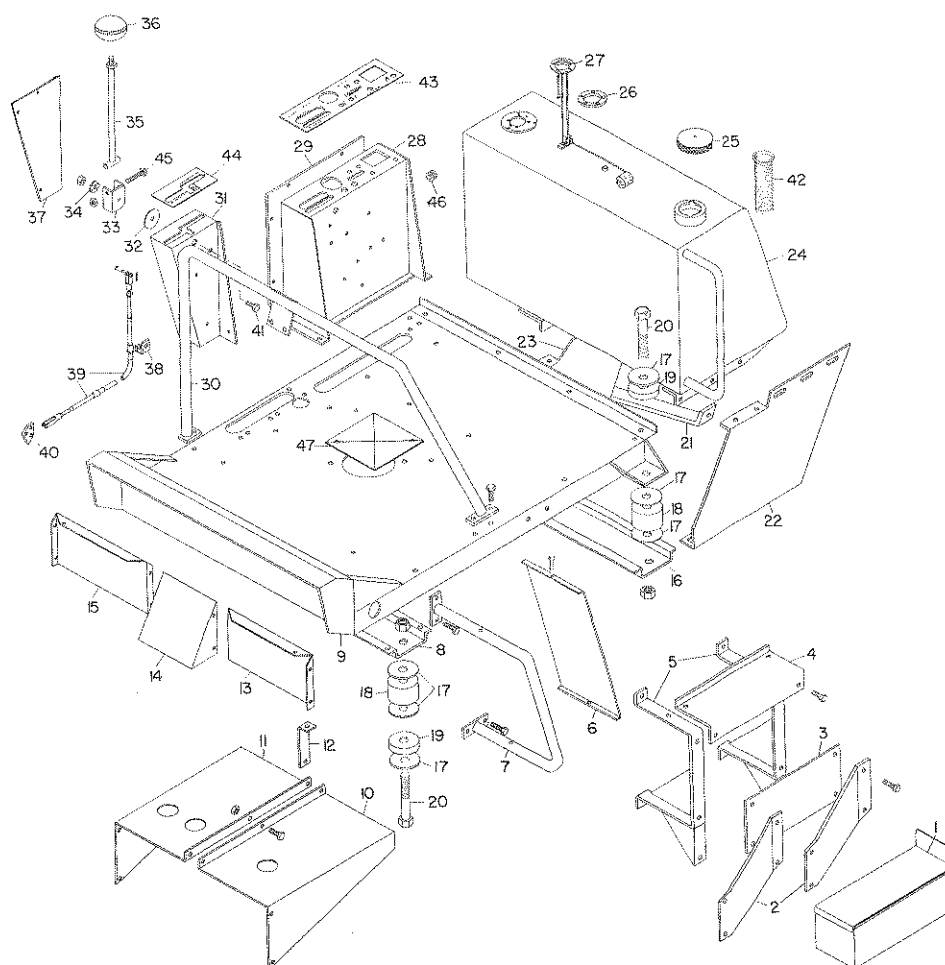


OPERATOR PLATFORM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6270	Step and tool box	23	F 6176	Rear mounting bracket for operators deck, R. H.
2	F 6271	Step and tool box bracket	24	F 5947	30 gal. fuel tank, less fuel gauge
3	F 6272	Step and tool box bracket plate	25	F 1689	Fuel tank cap for F 5947 tank
4	F 6273	Step plate	26	F 5949	Gasket for F 5948 gauge
5	F 6274	Step bracket	27	F 5948	Fuel gauge for F 5947 tank
6	F 6276	Hand rail shield	28	F 6413	Console, Main section
7	F 6275	Hand rail	29	F 6032	Console cover
8	F 6325	Front deck mount channel	30	F 6402	Guard rail and steering shaft mounting bracket
9	F 6401	Main operator deck	31	F 6282	Speed control consol
10	F 6289	Bull gear shield, L.H.	32	F 5546	Friction disc
11	F 6287	Bull gear shield, R.H.	33	F 6280	Speed control lever arm
12	F 6288	Bull gear shield support	34	F 5551	Conical washer
13	F 6286	Front deck shield, L. H.	35	F 6279	Speed control lever
14	F 6285	Front deck shield, center	36	F 6278	Speed control lever knob
15	F 6284	Front deck shield, R. H.	37	F 6281	Speed control consol cover
16	F 6175	Tie bar for deck mount	38	F 6291	Speed control cable clamp angle
17	F 6184	Washer for F 6182 and F 6183 mounts, 3" x 5/8" x 11 ga.	39	F 6283	Speed control Cable
18	F 6183	Deck mount, neoprene, 3" x 3/4" x 1-3/4" w/washer	40	F 6290	Speed control lever, lower
19	F 6182	Deck mount, neoprene, 3" x 3/4" x 1/2" w/washer	41		5/16" x 1" NC cap screw
20		1/2" x 3-3/4" NC cap screw w/lock nut	42	F 5950	Filter screen for gas tank
21	F 6067	Brace for rear mounting bracket	43	FD 25	Decal, main console
22	F 6177	Rear mounting bracket for operators deck, L. H., 2-tie	44	FD 26	Decal, speed control console
	F 6178	Rear mounting bracket for operators deck, L. H., 3-tie	45		1/4" x 2-3/4" NC cap screw
			46	F 6069	Rubber grommet
			47	F 6412	Cover plate, tension control pump inspection hole

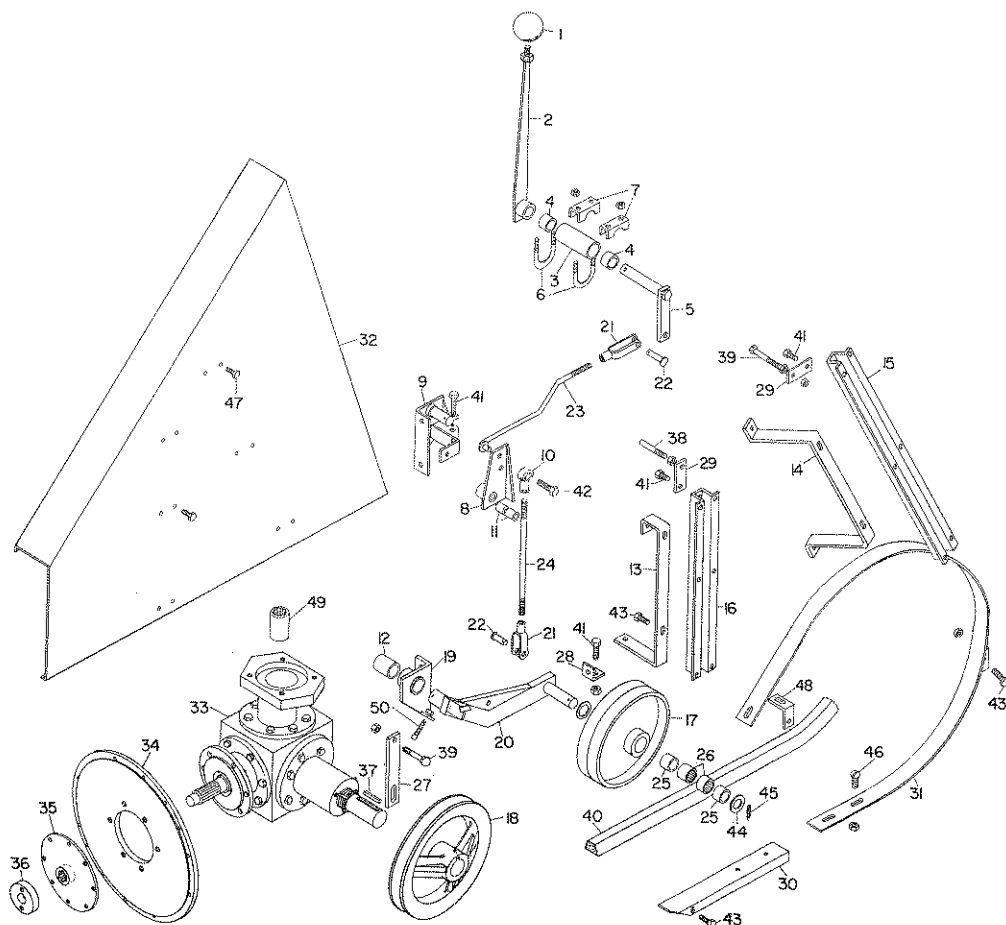


CLUTCH CONTROL AND BELT DRIVE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5055	Lever knob	23	F 6221	Top clutch rod
2	F 6205	Clutch lever	24	F 6222	Lower clutch rod
3	F 6206	Clutch lever bearing complete w/bushing, 3-tie	25	F 6223	Inner race for idler pulley
	F 6332	Clutch lever bearing complete w/bushing, 2-tie	26	F 6224	Bearing for idler pulley
4	F 6054	Clutch lever bearing bushing, 1" x 1-1/8" x 1"	27	F 6225	Top front belt guide
5	F 6207	Clutch shaft, 3-tie	28	F 6226	Front belt shield bracket pad
	F 6333	Clutch shaft, 2-tie	29	F 6227	Top rear belt guide
6	F 6208	"U" bolt bearing clamp, .012 Chicago	30	F 6228	Bottom rear belt guide
7	F 6209	"U" bolt bearing clamp bracket	31	F 6229	Rear belt guide
8	F 6210	Clutch wobble arm	32	F 6230	Belt shield
9	F 6211	Clutch wobble arm bracket	33	F 6231	Gear box, Perkins
10	F 6212	Ball rod end, CTR8N Sperico	34	F 6232	Bell housing plate
11	F 7247	Bushing for clutch wobble arm, 7/8" x 1" x 1"	35	F 6233	Drive plate, Perkins
12	F 4137	Bushing for belt tightener arm brg. bracket, 1-3/8" x 1-1/2" x 2"	36	F 6234	Pilot for gear box shaft, Perkins
13	F 6213	Belt shield bracket, front	37		Key for pulley, 3/8" x 3/8" x 2-3/4"
14	F 6214	Belt shield bracket, rear	38	F 6465	Belt guide stud
15	F 6215	Belt shield & guide bracket, rear	39		3/8" x 3-3/4" NC cap screw
16	F 6216	Belt shield & guide bracket, front	40	F 7337	Drive belt, D 162
17	F 6217	Belt tightener pulley	41		3/8" x 1" NC cap screw
18	F 6218	Drive pulley	42		1/2" x 1-3/4" NC cap screw
19	F 6219	Belt tightener arm bearing bracket	43		5/16" x 1" NC cap screw
20	F 6220	Belt tightener arm	44		1" I.D. x 1-3/4" O.D. Washer
21	F 5048	1/2" clevis	45		3/16" x 1-1/2" cotter key
22	F 5049	Clevis pin for 1/2" clevis	46		5/16" x 3/4" F.H. machine screw
			47		1/4" x 3/4" NC cap screw, cad. plated
			48	F 6432	Top belt guide bracket
			49	F 6341	Shaft coupling, 21 involute
			50		1/2" x 2-1/2" square head set screw

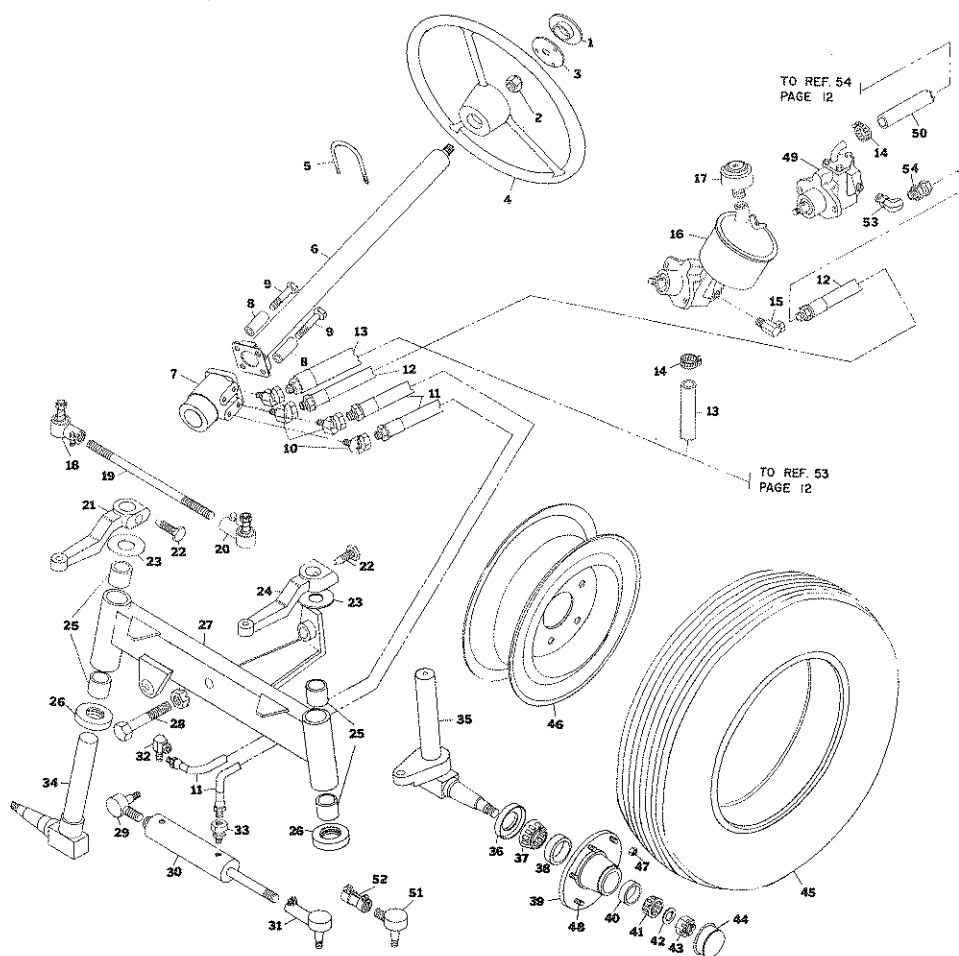


STEERING ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5031	Steering column cap	29	F 6302	Tie rod end, male thread, Garrison, -68
2	F 6323	Nut, steering column, 13/16" - 20		F 6458	Tie rod end, male thread, Allied, -69-
3	F 5032	Steering column cap holder	30	F 6304	Steering cylinder, 2830 Garrison
4	F 6292	Steering wheel		F 6404	Repair kit for F 6304 steering cylinder
5	F 6324	"U" bolt	31	F 6303	Tie rod end, female thread, Garrison, -68
6	F 6415	Steering orbital column, Char-Lynn	32	F 3121	1/4" NPT 90° swivel fitting, 4973 Couplomatic
7	F 6293	Steering orbital control unit, Char-Lynn	33	FT 107	1/4" NPT straight swivel fitting
8	F 6294	Pipe spacer for steering motor mounting	34	F 6335	Front spindle, R.H.
9		3/8" x 3-1/2" NC cap screw	35	F 6305	Front spindle, L.H., with steering cylinder pad
10	F 6295	3/8" NPT 45° swivel fitting, 3974 Couplomatic	36	F 1627	Front wheel grease seal (2 used) 54605 K.H.
11	F 6296	1/4" hydraulic hose w/one 1/4" and one 3/8" male fitting, 108"	37	F 1625	Front wheel bearing, inner, (2 used) #LM29749
12	F 6299	3/8" hydraulic hose w/two 3/8" male fittings, 92"	38	F 1653	Cup for bearing, inner, (2 used) #LM29710
13	F 6298	5/8" return hose with 3/8" male fitting one end, 90", -68	39	F 1624	Front wheel hub, 6 hole (2 used)
	F 6455	5/8" return hose with 1/2" male fitting and 3/8" male fitting, 52", 69-	40	F 1654	Cup for bearing, outer, (2 used) #L44610
14	F 6297	Hose clamp	41	F 1626	Front wheel bearing, outer, (2 used) #L44640
15	F 6301	3/8" NPT 90° swivel fitting, 90-8 x 6 Couplomatic	42	F 884	Spindle washer (2 used)
16	F 6300	Power steering pump with reservoir, Vickers, VTM27, -68	43	F 934	Nut for spindle (2 used)
17	FT 530	Filter assembly	44	F 1628	Hub cap (2 used)
18	F 5006	Tie rod end L.H. thread	45	F 5039	Tire, front 6:70 x 15, 6-ply (reg. and flotation)
19	F 5008	Tie rod shaft, 25-1/2", 3-tie		F 5040	Tube for front tire, 6:70 x 15 (regular)
20	F 5759	Tie rod shaft, 18-1/4", 2-tie		F 215	Tube for front tire 7:50 x 16 (flotation)
21	F 5007	Tie rod end R.H. thread		F 5145	Wheel, front, 6-hole (regular)
22	F 6363	Steering arm, R.H., cast, -68		F 5650	Wheel, front, 6-hole (flotation)
23	F 6448	Steering arm R.H., flame cut, 69-		F 214	Lug nut (12 used) #15085
24	F 5016	Set screw for steering arm (2 used) 2" x 18 ga. machinery bushing		F 462	Lug bolt (12 used)
25	F 6362	Steering arm, L.H., cast, -68		F 6456	Power steering pump with manifold, Vickers VTM27, 69-
26	F 6449	Steering arm, L.H., flame cut, 69-		F 6457	5/8" hydraulic hose with 1/2" male fitting on one end, 62", 69-
27	F 5854	Spindle bushing, 1-3/4" x 2" x 1-1/2" (2 pr. used)		F 6458	Tie rod end, male thread, Allied, 69-
28	F 5789	Thrust bearing, D21 (2 used)		F 6459	Sleeve for tie rod end
29	F 6364	Front axle, 3-tie, w/steering pad		F 6462	Adapter fitting, 90°, #8-3/8 AEOG-S Parker
30	F 6365	Front axle, 2-tie, w/steering pad		F 6463	3/8" NPT straight swivel fitting
31	F 5578	Front axle pivot bolt w/castillated nut, 1" x 5" NC cap screw			

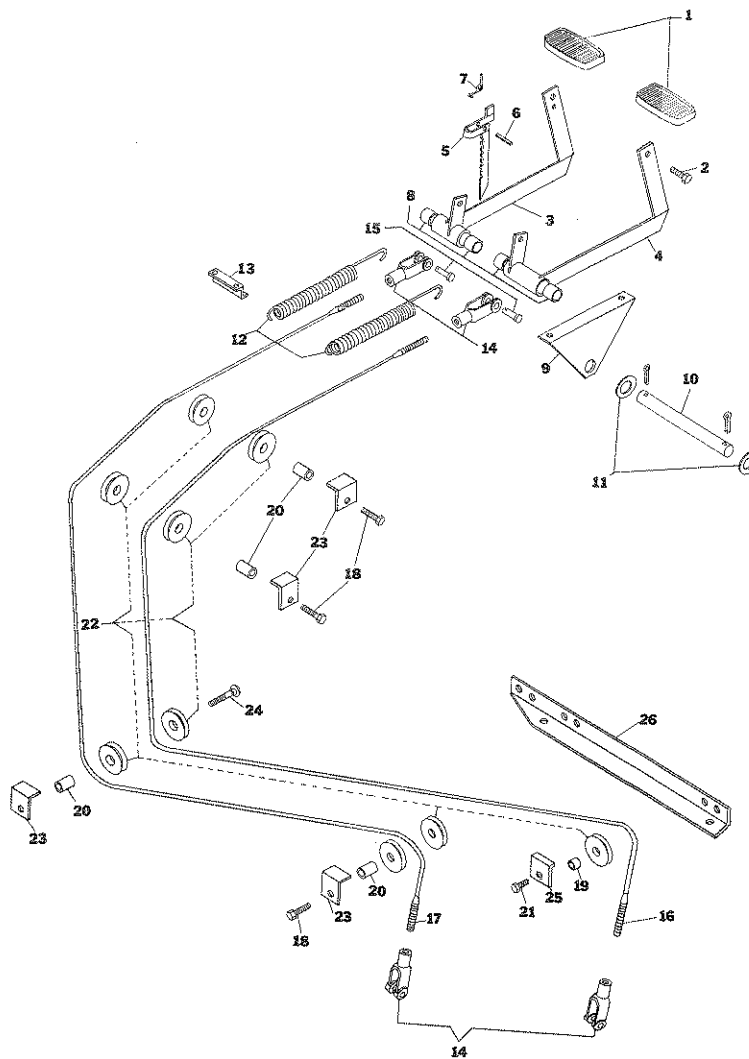


BRAKE CONTROL

REF. NO.	PART NO.	DESCRIPTION
1	F 5979	Brake pedal pad
2		5/16" x 1" NC cap screw
3	F 5944	L. H. brake lever
4	F 5945	R. H. brake lever
5	F 5984	Brake pedal lock
6		1/4" x 1-1/2" roll pin
7	F 4210	Spring for brake release
8	F 6054	Bushing for clutch and brake levers, 1" x 1-1/8" x 1"
9	F 6055	Brake lever shaft support
10	F 6400	Brake pedal cross shaft
11		1" washer
12	F 7095	Brake and clutch return spring
13	F 6077	Brake return spring anchor
14	F 5075	Clevis, 5/16" for brake cable
15	F 5076	5/16" clevis pin
16	F 5981	Brake cable R. H. (110")
17	F 5982	Brake cable L. H. (92")
18		3/8" x 1-3/4" NC cap screw
19	F 4068	Bushing for F 4067 roller
20	F 6410	Bushing for two roller sheave
21		1/4" x 1-1/4" NC cap screw
22	F 4067	Roller for brake pulleys
23	F 6411	Shield for brake pulleys
24		3/8" x 2" carriage bolt
25	F 994	Shield for brake pulley
26	F 5991	Cable pulley mounting bracket

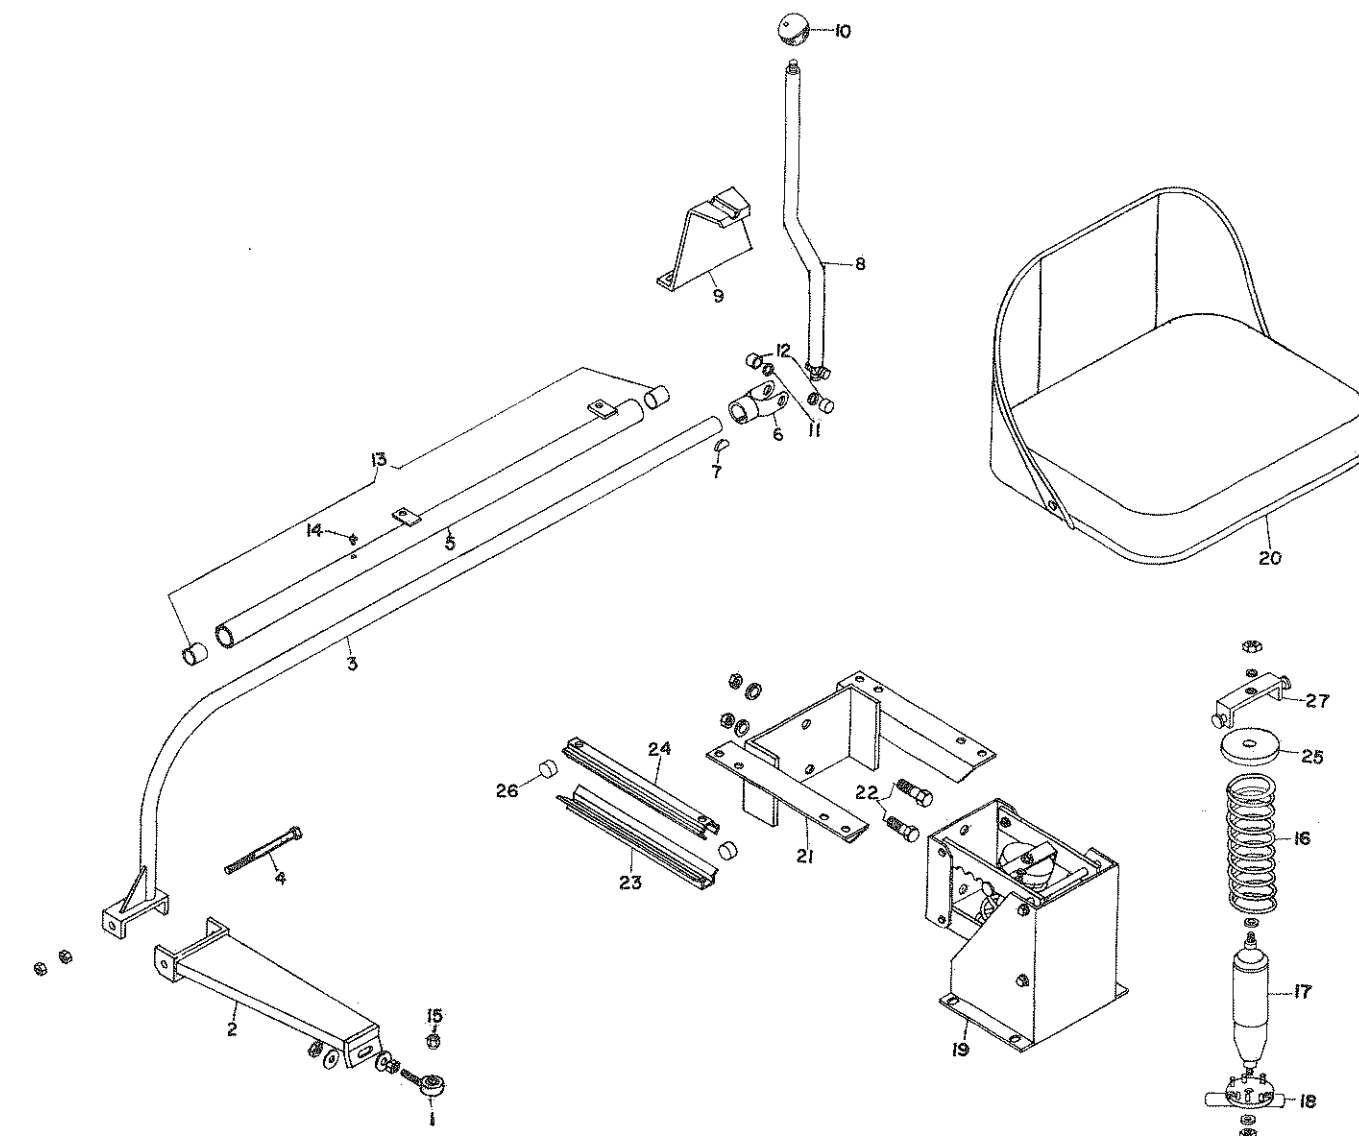


GEAR SHIFT CONTROL AND OPERATORS SEAT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5992	Swivel bearing for shift bar	19	F 5703	Seat spring and hydraulic assembly complete
2	F 6030	Shift bar	20	F 5918	Seat assembly
3	F 6028	Gear shift rod		F 6128	Deluxe Hi-back seat
4		3/8" x 5-1/4" N.C. cap screw		F 5920	Bottom seat cushion for F 5918
5	F 6029	Gear shift tube w/bushings		F 6129	Bottom seat cushion for F 6128
6	F 6070	Shift rod yoke		F 5921	Back cushion for F 5918
7		1/4" x 1-1/8" woodruff key		F 6130	Back cushion for F 6128
8	F 6403	Shift lever	21	F 5867	Seat bracket
9	F 6026	Shift lever bracket	22		1/2" x 1-3/4" N.C. cap screw
10	F 5055	Gear shift lever knob	23	F 6079	Seat adjusting rail (top)
11	F 6074	Oil seal for F 6073 cup	24	F 6080	Seat adjusting rail (bottom)
12	F 6073	Cup for F 6070 yoke	25	F 5502	Cup washer for F 5705 spring
13	F 6054	Bushing, 1" x 1-1/8" x 1"		F 6003	Bearing only
14	F 6170	Grease fitting		F 6004	Stampings only for F 6003 bearing
15	F 6186	Conical nut for F 5992 bearing	26	F 6081	Roller for seat adjusting rails
16	F 5705	Spring, F5703 seat assembly	27	F 5501	Spring and cylinder adjusting bracket
17	F 5866	Hydraulic cylinder			
18	F 5505	Plate, bottom pivot			

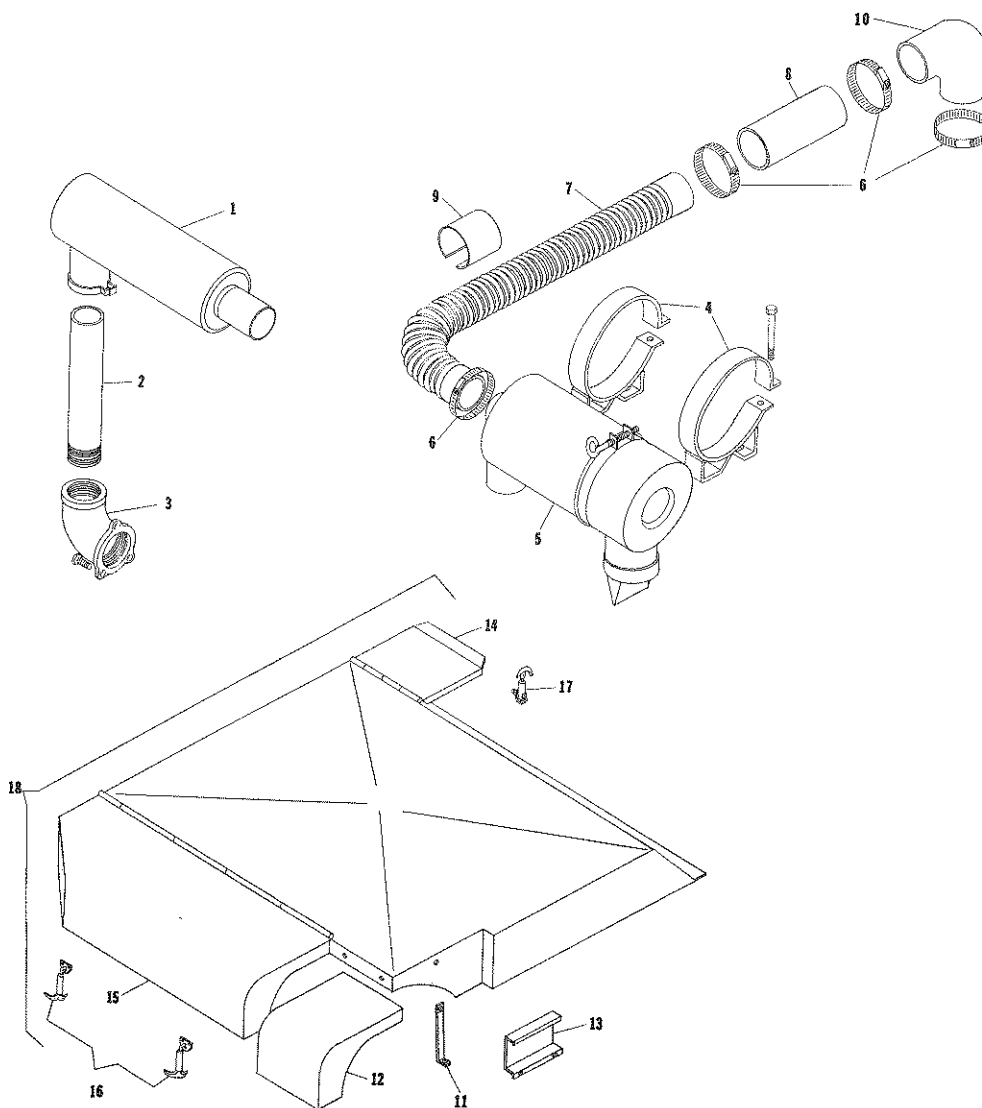


PICKUP SHIELD, EXHAUST AND AIR CLEANER

REF. NO.	PART NO.	DESCRIPTION
1	F 1706	Muffler
2	F 6312	Exhaust pipe
3	F 6313	Exhaust elbow
4	F 6307	Air cleaner band
5	F 6306	Air cleaner complete
	F 6452	Filter element for F 6306 air cleaner
6	F 6308	Air cleaner hose clamp
7	F 6309	Air cleaner hose
8	F 6311	Air cleaner pipe
9	F 6441	Air cleaner hose shield
10	F 6310	Rubber elbow
11	F 6105	Mounting bracket for shield, left side
12	F 6104	Front section of pickup shield (not hinged)
13	F 6062	Shield for tension control chain
14	F 7635	Tool box lid
15	F 6111	Access door for F 5971 shield
16	F 7166	Catch for access door
17	F 853	Catch for tool box cover
18	F 5971	Shield over pickup complete

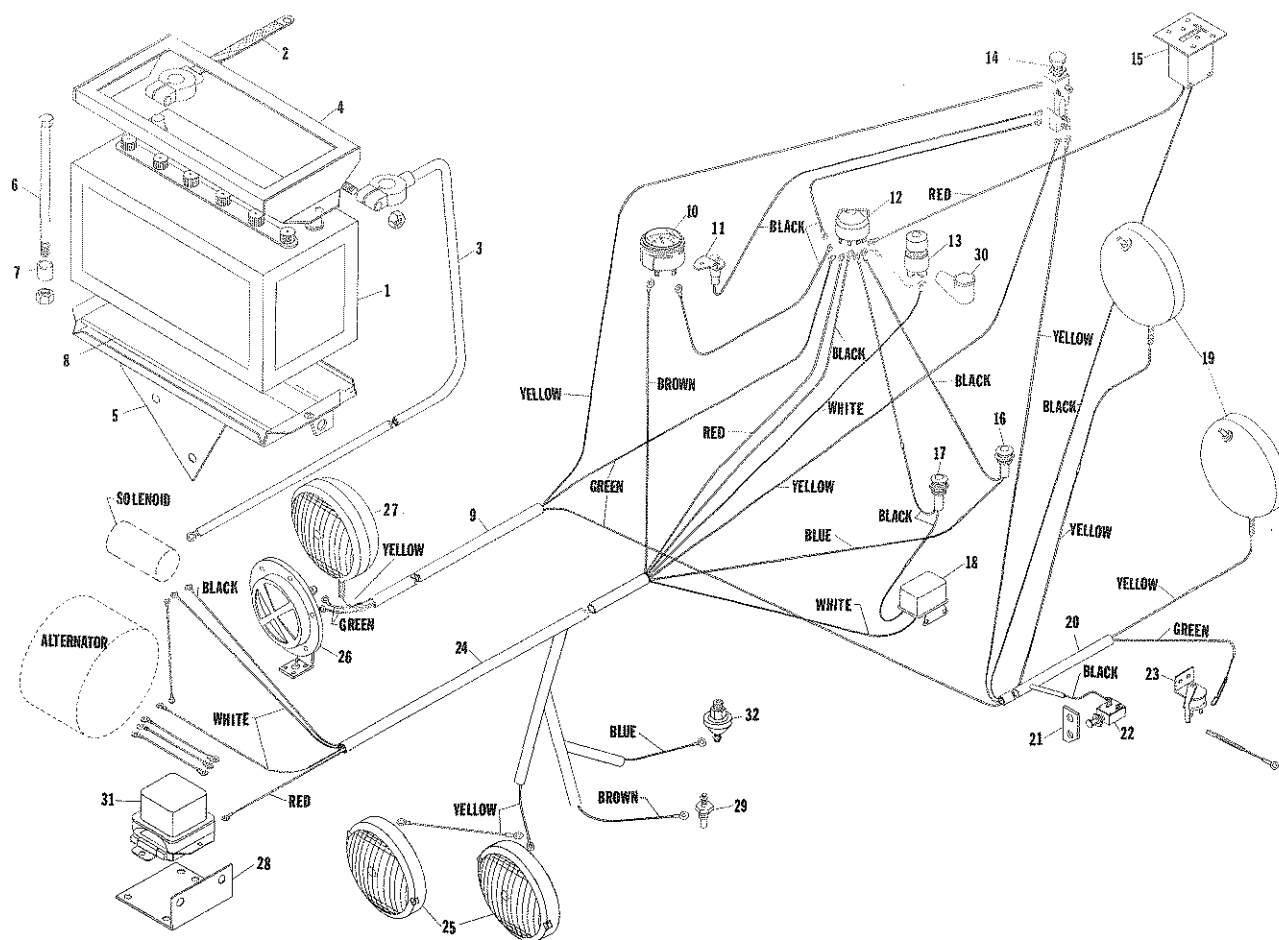

ELECTRIC SYSTEM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6417	Battery, 12 volt	19	F 1644	Light, rear combination, 12 v. sealed beam
2	F 6418	Ground strap		F 5941	Sealed beam unit, 12 v. (comb. red and clear)
3	F 6419	Battery cable, insulated	20	F 6426	Wire harness, (bale counter, wire alarm, light)
4	F 6327	Battery hold down	21	F 6372	Bracket for sending unit
5	F 6326	Battery box	22	F 6371	Sending unit for bale counter
6		5/16" x 8" cap screw	23	F 946	Switch for wire alarm
7	F 6328	Battery hold down grommet	24	F 6427	Wire harness (engine)
8	F 6329	Battery pad	25	F 6428	Headlights with housing
9	F 6420	Wire harness (horn & light)		F 6429	Sealed beam unit for F 6428
10	F 6421	Temperature gauge	26	F 1497	Horn, wire alarm, 12 volt
11	F 5234	Instrument panel light socket	27	F 1645	Light, front, 12 volt, sealed beam
12	F 6422	Starter switch		F 5842	Sealed beam unit, 12 volt, for F 1645
13	F 5237	Safety switch	28	F 6430	Voltage regulator bracket
	F 5236	Rubber cap for safety switch	29	F 6431	Temperature sending unit
14	F 862	Light switch	30	F 6423	Safety switch protector elbow
15	F 5954	Bale counter, electronic	31	F 6461	Voltage regulator
16	F 6424	Oil indicator light	32	F 6460	Oil sending unit
17	F 6424	Amp indicator light			
18	F 6425	Relay			

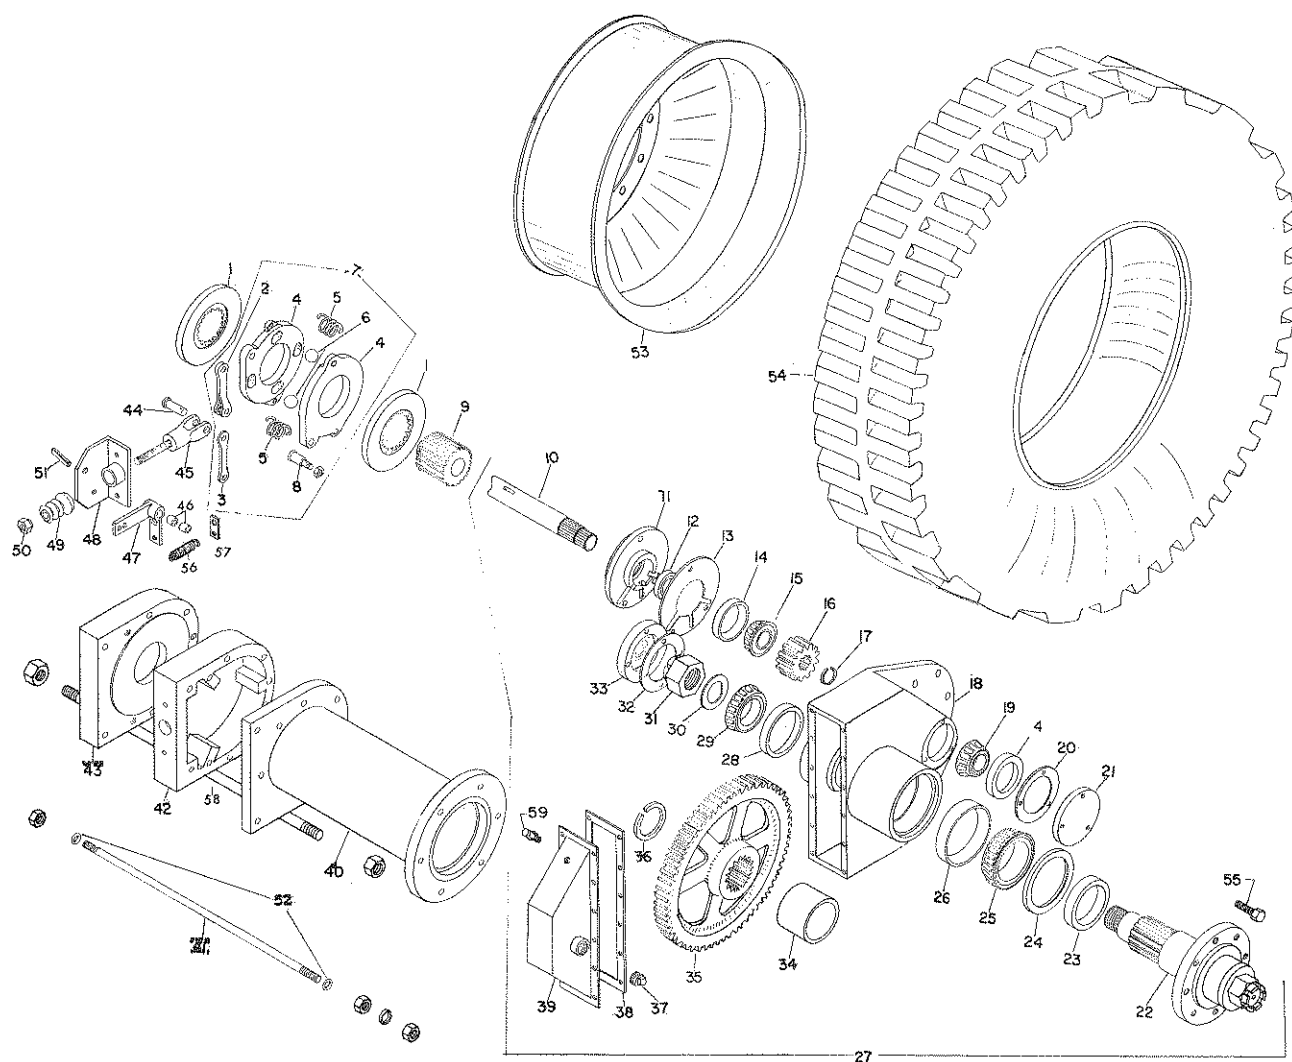


REAR AXLE AND FINAL DRIVE

REF. NO.	PART NO.	DESCRIPTION
1	F 5794	Brake wear disc
2	F 5899	Yoke link
3	F 5900	Strap link
4	F 5898	Brake pressure plate
5	F 5901	Pressure plate spring
6	F 5902	Pressure plate ball
7	F 5903	Pressure plate complete
8	F 5904	Linkage bolt
9	F 5795	Brake hub
10	F 5791	Axle shaft, R.H. 28"
	F 5792	Axle shaft, L.H. 57-1/4" (2-tie)
	F 5793	Axle shaft, L.H. 62-1/4" (3-tie)
11	F 5801	Inside pinion bearing retainer
12	F 5806	Oil seal for axle shaft (13666 C/R)
13	F 5826	Gasket, inside pinion bearing, 1/64"
14	F 5891	Cup for F 5457 and F 5892 bearings (14282)
15	F 5457	Inner pinion bearing cone (14137A)
16	F 5452	Final drive pinion
17	F 5438	Snap ring, pinion bearing
18	F 5785	Final drive housing, R.H. and L.H.
19	F 5892	Outer axle shaft bearing (14117A)
20	F 5828	Shim .005 (steel) outside pinion bearing
	F 5829	Shim .007 (steel) outside pinion bearing
	F 5830	Shim .010 (steel) outside pinion bearing

REAR AXLE AND FINAL DRIVE


(Continued)

REF. NO.	PART NO.	DESCRIPTION
21	F 5786	Axle drive cover
22	F 5913	Wheel shaft, 8 hole
23	F 5809	Seal ring for F 5931 shaft
24	F 7035	Seal for axle shaft (255833)
25	F 7033	Outer bearing for axle shaft (33287)
26	F 7034	Outer bearing cup for F 7033 (33462)
27	F 5782	Final drive housing complete R. H.
	F 5783	Final drive housing complete L. H., 3 tie
	F 5784	Final drive housing complete L. H., 2 tie
28	F 5445	Cup for inner wheel shaft bearing (362A)
29	F 5446	Inner bearing cone for wheel shaft (368A)
30	F 5893	Wheel shaft washer
31	F 5790	Wheel shaft axle nut, 1-1/2" N.F. castellated
32	F 5827	Wheel shaft bearing cover gasket, 1/32"
33	F 5788	Wheel shaft cover
34	F 5808	Spacer for F 5763 gear
35	F 5763	Final drive gear (8620)
36	F 5840	Snap ring for final drive gear
37		3/4" pipe plug
38	F 5831	Gasket, drive gear cover, 1/16"
39	F 5905	Drive gear cover, R.H.
	F 6361	Drive gear cover, L.H.
40	F 5796	Axle spacer, 14-3/8" R.H. (2 and 3 tie)
	F 5797	Axle spacer, 43-5/8", L.H. (2 tie only)
	F 5798	Axle spacer, 48-5/8", L.H. (3 tie only)
41	F 6132	Tie bolt, 5/8" x 25"
42	F 5799	Brake housing
43	F 5800	Brake spacer, R.H.
	F 5890	Brake spacer, L.H.
44	F 6161	Clevis pin, 7/16" x 1-1/4"
45	F 5894	Brake clevis
46	F 5813	Bushing for brake lever
47	F 5812	Brake lever w/bushing
48	F 5814	Brake lever mount
49	F 5824	Dust cover for brake rod
50	F 214	Nut for brake clevis
51	F 5547	Roll pin, 1/4" x 1"
52	FT 53	"O" ring
53	F 5896	Rear wheel, R. H. (9:00 x 20)
	F 5837	Rear wheel, R. H. (flotation)
	F 5895	Rear wheel, L. H. (9:00 x 20)
	F 5897	Rear wheel, L. H. (flotation)
54	F 5268	N. D. tire (9:00 x 20)
	F 5269	Tube (9:00 x 20)
	F 5270	Flap (9:00 x 20)
	F 5648	Flotation tire, 8 ply L. H. (15 x 16A)
	F 5275	Flotation tire, 6 ply R. H. (15 x 16A)
	F 5276	Tube, 15 x 16A flotation
	F 5596	Flap for F 5275 and F 5648 tires
55	F 5910	Lug bolt
56	F 6053	Spring, brake release
57	F 6056	Brake release spring anchor
58	F 4081	Truss rod, 3/4" x 17-1/2"
59	F 1720	Vent

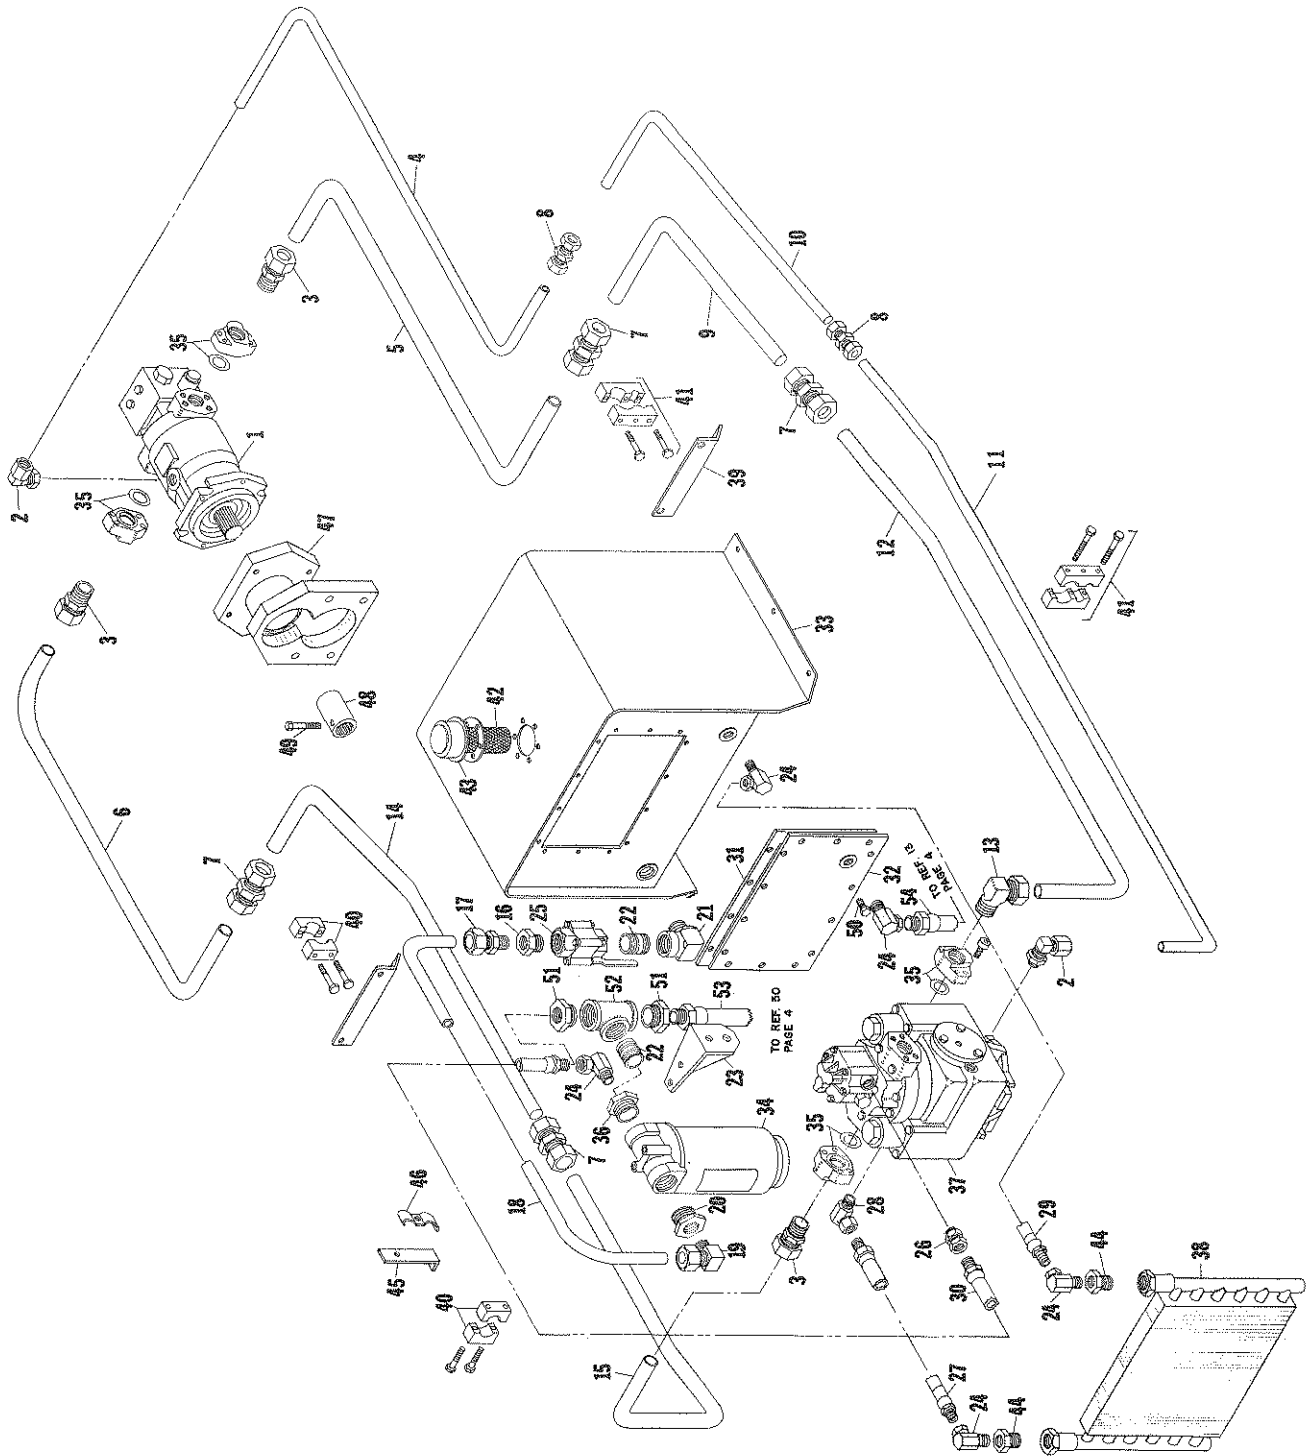


HYDROSTATIC DRIVE SYSTEM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6235	Hydrostatic motor	27	F 6254	1/2" hydraulic hose w/ 1/2" male fitting, 71"
2	F 6236	5/8" x 90° O-ring tube fitting, 7515-10 Weatherhead	28	F 6255	1/2" x 90° swivel adapter, 90-10 x 8 Couplomatic
3	F 3102	1" straight male tube fitting, 8205-16 Weatherhead	29	F 6256	1/2" hydraulic hose with 1/2" male fitting, 77"
4	F 6237	Drain line, rear, 5/8" x .049" steel tube	30	F 6257	1/2" hydraulic hose with 1/2" male fitting, 31"
5	F 6238	L. H. high pressure line, rear, 1" x .109" steel tube	31	F 6258	Hydraulic tank access cover gasket
6	F 6239	R. H. high pressure line, rear, 1" x .109" steel tube	32	F 6259	Hydraulic tank access cover
7	F 6240	1" straight tube union, 8305-16 Weatherhead	33	F 6260	Hydraulic tank
8	F 6241	5/8" straight tube union, 8305-10 Weatherhead	34	F 6261	Oil filter complete
9	F 6242	L. H. high pressure line, center, 1" x .109" steel tube	F 6453		Filter element only for F 6261 oil filter
10	F 6243	Drain line, center, 5/8" x .049" steel tube	35	F 6269	4-bolt flange w/bolts & O rings, W43 x 16 x 16 Anchor
11	F 6244	Drain line, front, 5/8" x .049" steel tube	F 6450		"O" ring only for F 6269 4-bolt flange
12	F 6245	L. H. high pressure line, front, 1" x .109" steel tube	36		1/2" x 1-1/4" NPT reducer bushing, -68
13	F 3104	1" x 90° male tube fitting, 8405-16 Weatherhead			1" x 1-1/4" NPT reducer bushing, 69-
14	F 6246	R. H. high pressure line, center, 1" x .109" steel tube	37	F 6262	Hydraulic pump
15	F 6247	R. H. high pressure line, front, 1" x .109" steel tube	38	F 6263	Heat exchanger
16		3/4" x 1" NPT reducer bushing	39	F 6264	Main line support bracket
17	F 3105	3/4" straight male tube fitting, 8205-12 Weatherhead	40	F 6265	Single 1" tube clamp
18	F 6248	Suction line, 3/4" x .049" steel tube	41	F 6266	Dual tube clamp
19	F 6249	3/4" x 90° male tube fitting, 8405-12 Weatherhead	42	F 6267	Screen for hydraulic tank filler
20		1-1/4" x 3/4" NPT reducer bushing	43	F 6268	Filler cap for hydraulic tank
21	F 6250	Street ell, C3409X16 Weatherhead	44		1/2" x 3/4" NPT reducer bushing
22		1" NPT close nipple	45	F 6433	Oil cooler hose clamp bracket
23	F 6251	Oil filter mounting bracket	46	F 6434	Oil cooler hose clamp
24	F 3109	1/2" NPT 90° swivel fitting, 4975 Couplomatic	47	F 6358	Hydrostatic motor adapter bracket
25	F 6252	1" ball valve, 444T Worcester	48	F 6341	Shaft coupling, 21 involute
26	F 6253	7/8" - 14 straight adapter (87-10 x 8 Couplomatic)	49		5/16" x 2-1/4" NF cap screw
			50		5/16" x 3/4" NC cap screw (14 used)
			51		1/2" x 1" NPT reducer bushing, 69-
			52		1" NPT tee, 69-
			53	F 6457	5/8" Hydraulic hose w/1/2" male fitting on one end, 62", 69-
			54	F 6455	5/8" return hose w/1/2" male fitting & 3/8" male fitting, 52" 69-

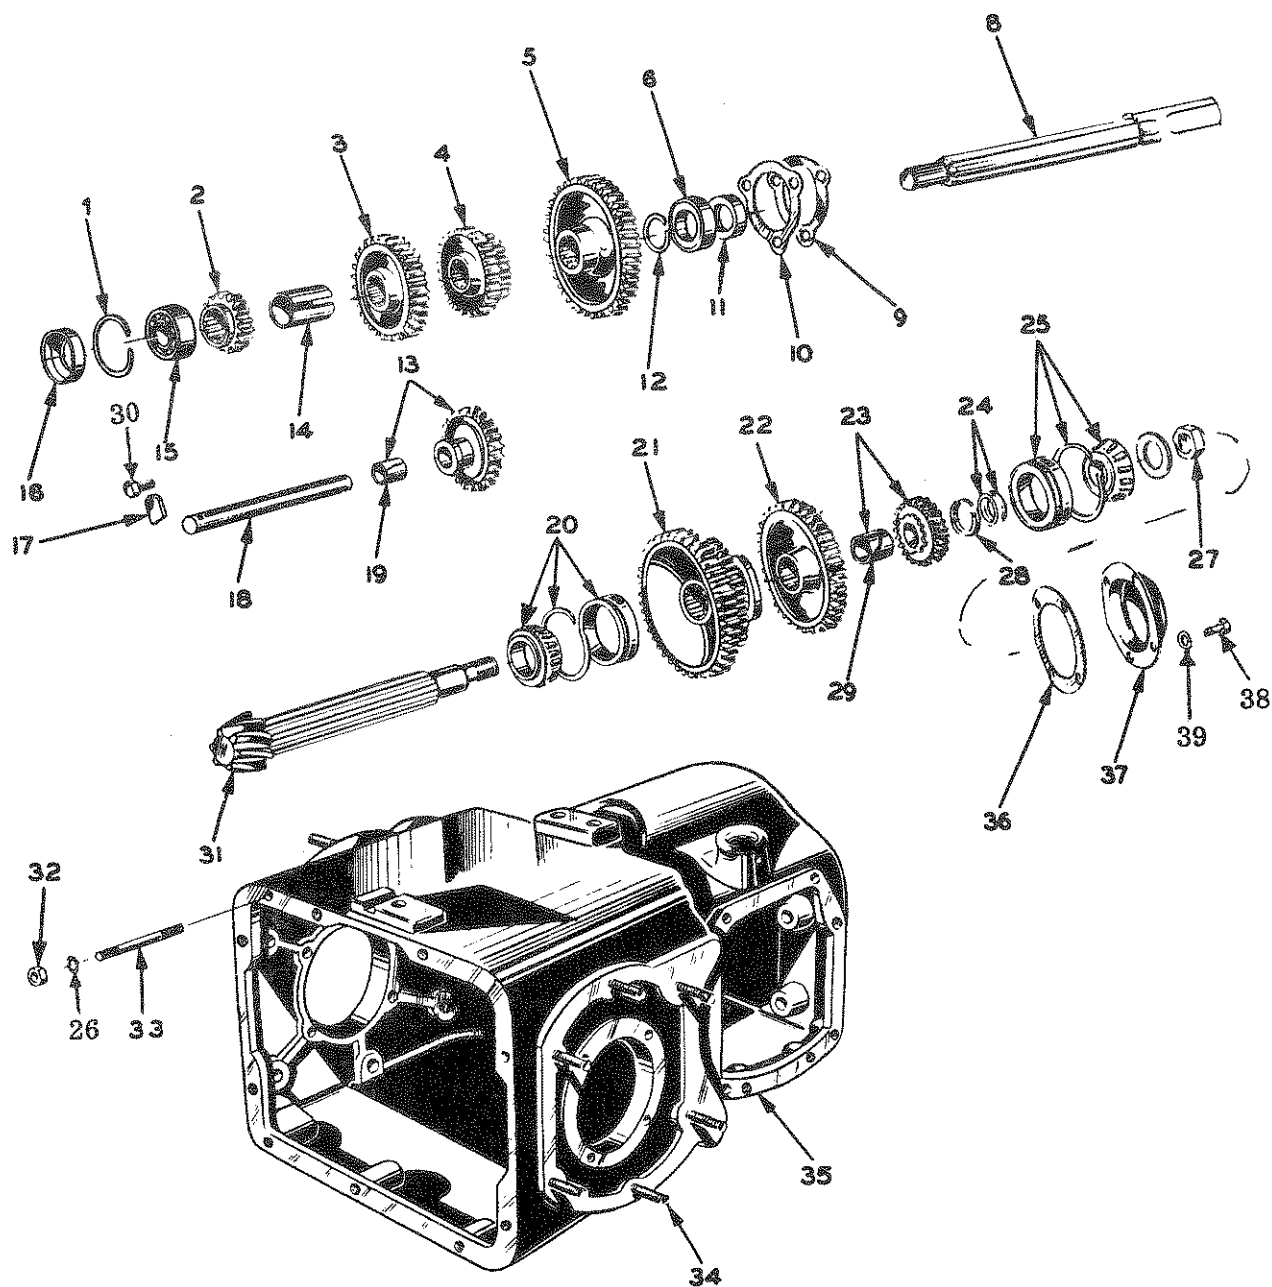


TRANSMISSION ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5301	Mainshaft rear bearing snap ring
2	F 5302	Mainshaft 1st gear
3	F 5303	Mainshaft 3rd gear
4	F 5304	Mainshaft 2nd and reverse gear
5	F 5305	Mainshaft 4th gear
6	F 5306	Mainshaft front bearing
8	F 6357	Transmission shaft for hydraulic motor
9	F 5307	Mainshaft front bearing cap gasket
10	F 5308	Mainshaft front bearing cap shim (.004)
	F 5309	Mainshaft front bearing cap shim (.007)
	F 5310	Mainshaft front bearing cap shim (.010)
11	F 5156	Clutch and mainshaft front oil seal
12	F 5312	Mainshaft locating snap ring
13	F 5313	Reverse idler gear assembly - includes Item #19
14	F 5314	Mainshaft 1st and 3rd gear spacer
15	F 5306	Mainshaft rear bearing
16	F 5316	Mainshaft rear bearing oil cup
17	F 5317	Reverse idler lock
18	F 5318	Reverse idler shaft
19	F 5319	Reverse idler gear bushing
20	F 5320	Pinion shaft rear bearing
21	F 5321	Pinion shaft 1st and 3rd gear
22	F 5322	Pinion shaft 2nd and reverse gear
23	F 5323	Pinion shaft 4th gear assembly - includes Item #29
24	F 5324	Pinion shaft front bearing shim (.003)
	F 5325	Pinion shaft front bearing shim (.005)
	F 5326	Pinion shaft front bearing shim (.010)
25	F 5327	Pinion shaft front bearing
26		P.T.O. locating stud nut spring lock washer, 3/8"
27	F 5329	Pinion shaft front bearing adjusting nut
28	F 5332	Pinion shaft front bearing spacer
29	F 5331	Reverse idler gear bushing
30		Reverse idler shaft lock screw, 3/8" x 5/8" N.C. Cap screw
31	F 5330	Pinion shaft - includes Item #47, Page 16
32		P.T.O. locating stud nut, 3/8" N. F. hex
33		P.T.O. locating stud, 3/8" x 1-1/2" N.F. N.C. stud
34		Axle studs, 9/16" x 6" N.C. C.S. w/9/16" spring lock washer (12 used)
35	F 5858	Transmission case
36	F 5333	Pinion shaft front bearing cap gasket
37	F 5334	Pinion shaft front bearing cap
38		Pinion shaft front bearing cap screw, 3/8" x 1" N.C. Cap screw (6 used)
39		Pinion shaft front bearing cap screw lock washer, 3/8" spring, (6 used)
	F 5942	Transmission & differential assy. for fabricated axle housings

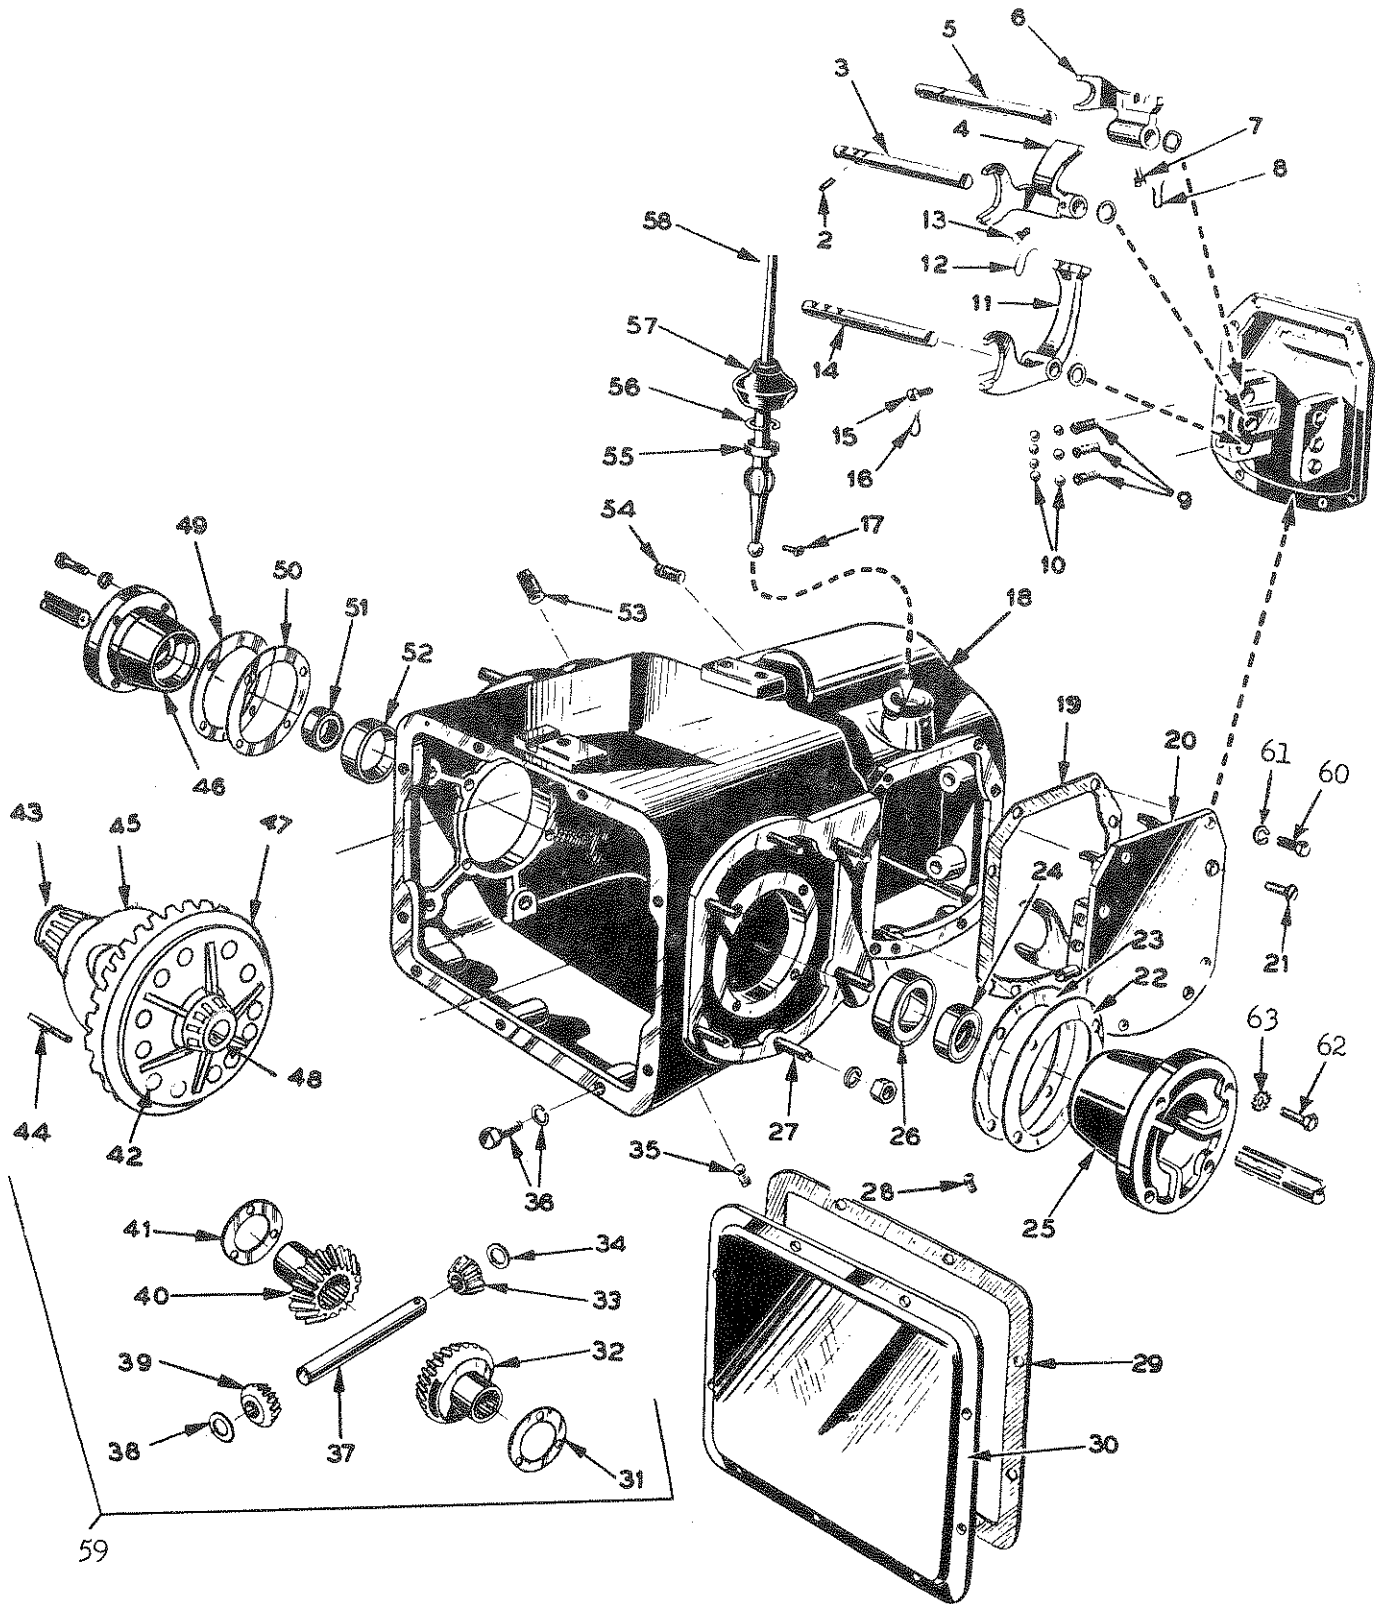


DIFFERENTIAL ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
2	F 5341	Interlock cross pin
3	F 5342	2nd and 4th shift rail
4	F 5343	2nd and 4th shift fork
5	F 5344	Reverse shift rail
6	F 5345	Reverse shift fork
7	F 5346	Shift fork lock screw
8	F 5347	Shift fork lock screw lock wire
9	F 5348	Mesh lock spring
10	F 5349	Mesh lock ball
11	F 5360	1st and 3rd shift fork
12	F 5347	Lock screw lock wire
13	F 5346	Lock screw
14	F 5351	1st and 3rd shift rail
15	F 5346	Lock screw
16	F 5347	Lock wire
17	F 5352	Pivot pin
18	F 5858	Transmission case
19	F 5353	Control cover gasket
20	F 5354	Control cover
21		Control cover screw, 3/8" x 1", F.H. Machine bolt
22	F 5356	Differential bearing carrier shim (.004)
23	F 5357	Differential bearing carrier shim (.010)
24	F 5358	Differential bearing carrier oil seal
25	F 5359	Differential bearing carrier assembly - includes Item 24
26		Differential bearing cup - See Item #43
27		Axle stud, 9/16" x 6" N.C. C.S. w/9/16" spring lockwasher
28		Drain plug, 1/2" pipe
29	F 5401	P.T.O. housing gasket
30	F 5402	Differential cover plate
31	F 5403	Differential side gear thrust washer
32	F 5404	Differential side gear
33	F 5405	Differential pinion gear
34	F 5406	Differential pinion gear thrust washer
35		Drain plug, 1/2" pipe
36		P.T.O. housing screw and spring lock washer, 3/8" x 1", N.C. Cap Screw w/ 3/8" washer (8 used)
37	F 5408	Differential pinion pin
38	F 5406	Differential pinion gear thrust washer
39	F 5405	Differential pinion gear
40	F 5404	Differential side gear
41	F 5403	Differential side gear thrust washer
42	F 5409	Ring gear rivet (12 used)
43	F 5410	Differential bearing (includes Item #26)
44	F 5411	Differential pinion pin lock pin
45	F 5412	Differential case
46	F 5359	Differential bearing carrier assembly (includes Item #51)
47	F 5330	Ring gear (includes Item #31, illustration page 13)
48	F 5410	Differential bearing (includes Item #52)
49	F 5357	Differential bearing carrier shim (.010) (A.R.)
50	F 5356	Differential bearing carrier shim (.004) (2 used)
51	F 5358	Differential carrier oil seal
52		Differential bearing cup (See item #43)
53		Filler plug, 1" pipe
54		Filler plug, 1/2" pipe
55	F 5414	Shift lever pivot washer
56	F 5415	Shift lever pivot washer ring
57	F 5416	Shift lever dust cover
58	F 6133	Shift lever on transmission
59	F 5350	Ring, pinion and differential assembly - Includes items 31, 32, 33, 34, 37, 38, 39, 40, 41, 42, 44, 45, 47 and item 31 on page 14)
60		Control cover screw, 3/8" x 1", N. C. Cap screw
61		Control cover screw spring lockwasher, 3/8"
62		Differential bearing carrier screw, 1/2" x 1-1/2" N.C. Cap screw
63		Differential bearing carrier screw spring lockwasher, 1/2"
	F 5942	Transmission and differential assy. for fabricated axle housing

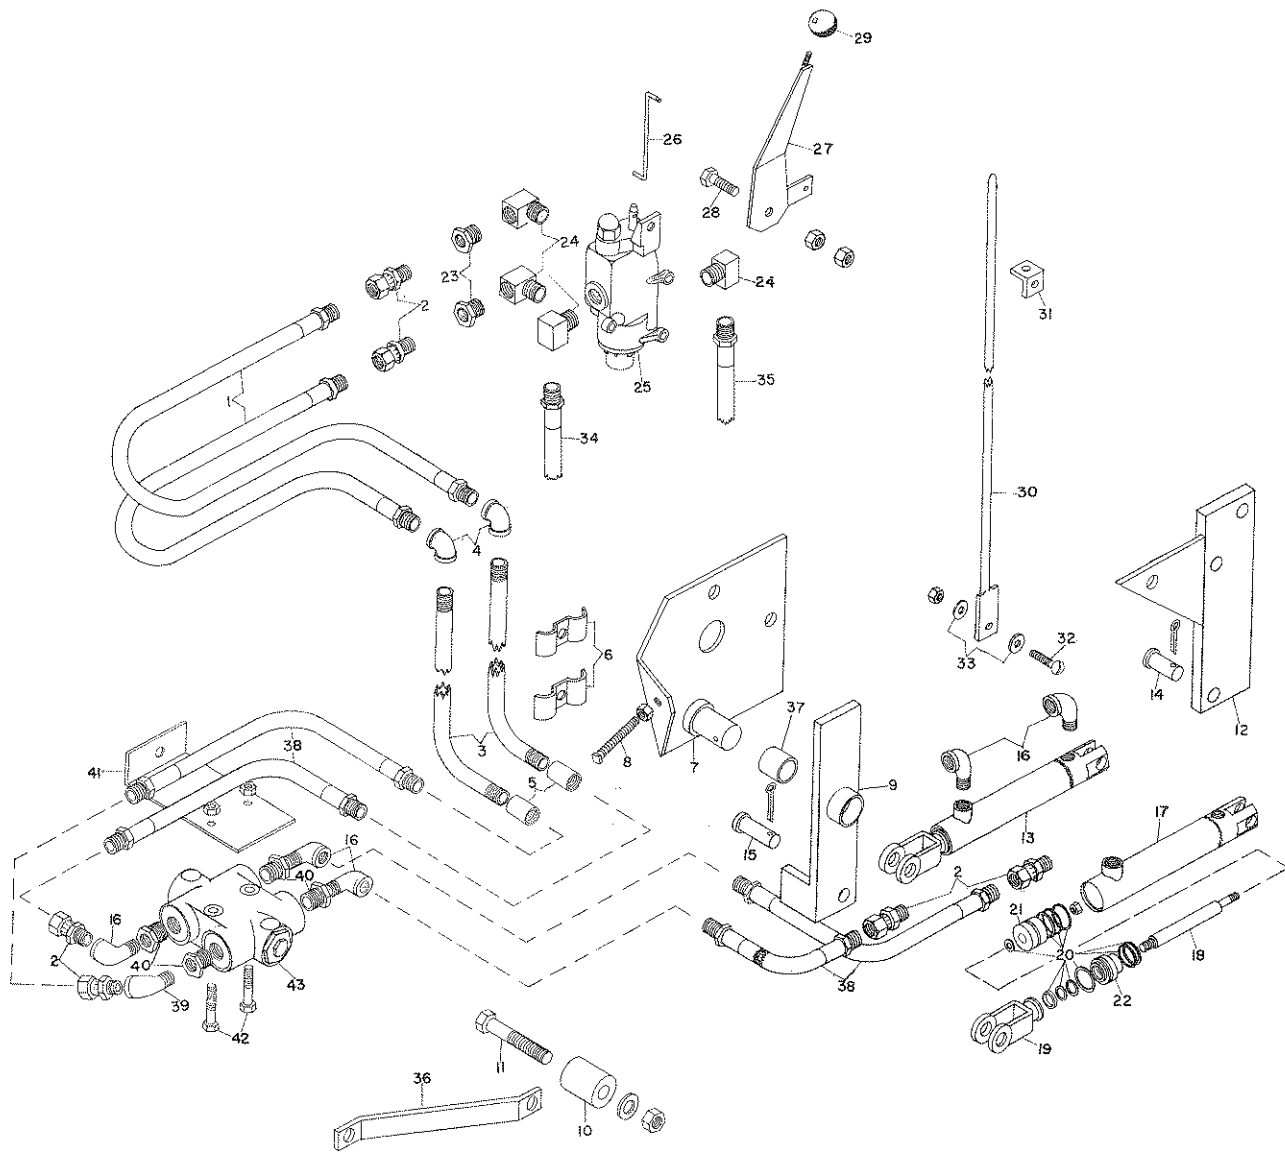


HYDRAULIC LIFT FOR PICKUP

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 136	Pressure hose, 24" (2 used)	23	FT 103	1/4" x 3/8" pipe bushing
2	FT 107	Union swivel	24	F 6037	Brass elbow for F 5952 valve (4 used)
3	F 6020	Ridgid hydraulic tube (2 used)	25	F 5952	Hydraulic control valve
4	FT 82	1/4" pipe elbow	26	F 6163	Linkage rod, -68
5		1/4" pipe coupling		F 6451	Link rod, 69-
6	F 6021	Clamp for F 6020 tubes (2 used)	27	F 6018	Hydraulic pickup control lever
7	F 6015	Pickup ram plate	28		5/16" x 1-1/4" N.C. cap screw
8		1/2" x 2-1/2" square head set screw	29	F 5554	Knob for control lever
9	F 6014	Forward pivot arm	30	F 6087	Pickup lift indicator rod
10	F 6016	Lift bumper on pickup	31	F 6088	Guide for F 6087
11		1/2" x 3-3/4" N.F.H.T. cap screw	32		1/4" x 1-1/4" R. H. stove bolt
12	F 6164	Anchor strap	33		1/4" flat washer
13	F 5953	Hydraulic cylinder for pickup	34	FT 169	Pressure hose (pump to valve) 35"
14	F 5049	1/2" x 1-3/8" pin	35	FT 150	Pressure hose (valve to bypass) 90"
15	F 1323	1/2" x 1-3/4" pin	36	F 6134	Lift bumper brace
16	FT 18	1/4" street elbow	37	F 7247	Bushing, 7/8" x 1" x 1"
17	F 6082	Tube assembly only	38	FT 163	Pressure hose 13-1/4"
18	F 6083	Piston rod	39		1/4" 45° street elbow
19	F 6084	Clevis	40		1/2" to 1/4" pipe bushing
20	F 6051	Ring kit for F 5953 cylinder	41	F 6369	Mounting bracket for lockout valve
21	F 6085	Piston	42		5/16" x 2-1/4" N.C. cap screw
22	F 6086	Cylinder head	43	F 6188	Lockout valve

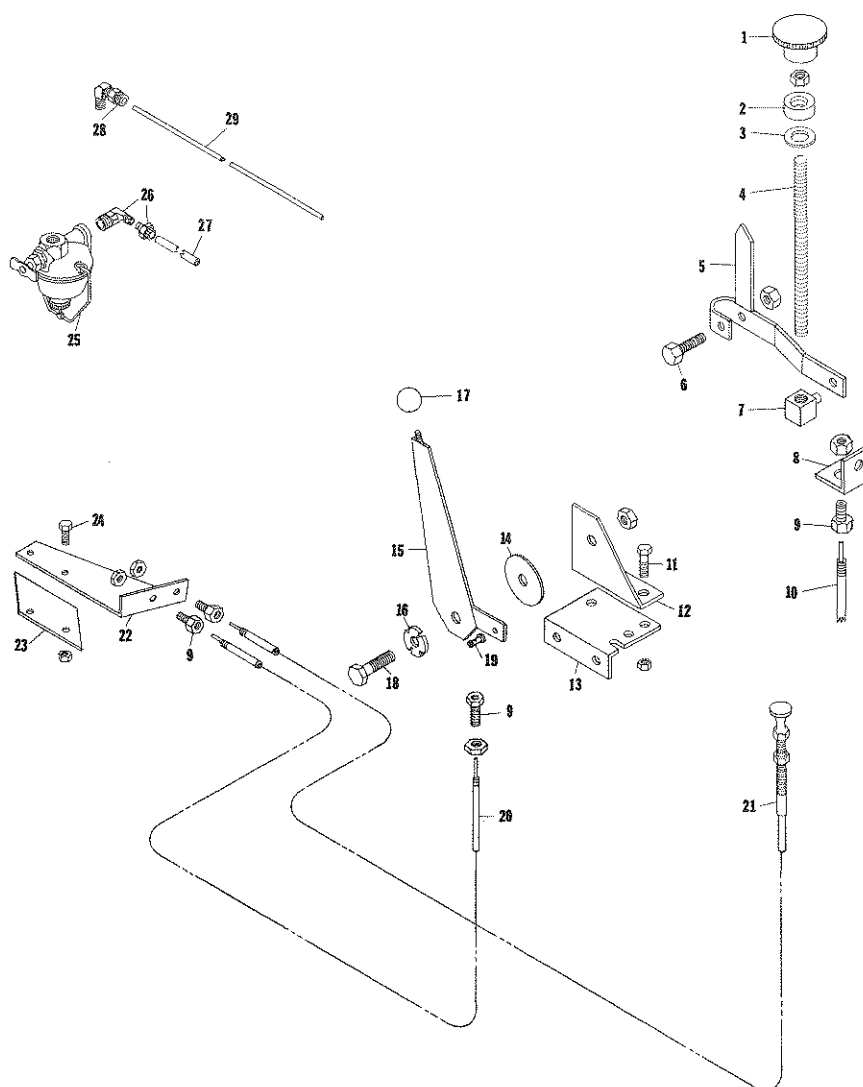


THROTTLE CONTROL TENSION CONTROL AND FUEL LINE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1007	Control knob	16	F 5551	Conical washer
2	F 1131	Thrust bearing	17	F 5554	Knob for throttle lever
3		3/8" flat washer	18		5/16" x 1" NC cap screw
4	F 6042	Adjusting rod	19	F 5545	Swivel fastener
5	F 6041	Tension control indicator	20	F 6442	Throttle control conduit, 124"
6		5/16" x 2" NC cap screw	21	F 6443	Throttle control wire, 134"
7	F 1005	Adjusting stud nut	21	F 5069	Engine shut off control assembly, 12 foot
8	F 6050	Anchor angle for tension control conduit	22	F 6405	Throttle wire bracket
9	F 5559	Beach nut w/nut and washer	23	F 6406	Throttle wire bracket
10	F 6048	Tension control conduit, 91"	24		1/4" x 3/4 NC cap screw
	F 6049	Tension control wire, 96"	25	F 5299	Fuel sediment bowl and shut off valve
11		5/16" x 3/4" NC cap screw	26	F 6444	Elbow fitting for fuel supply line
12	F 6036	Top bracket for throttle lever	27	F 6445	Fuel supply line, 5/16" x 13'3"
13	F 6035	Base bracket for throttle lever	28	F 6446	Elbow fitting for fuel return line
14	F 1003	Friction disc	29	F 6447	Fuel return line 3/16" x 12'
15	F 6034	Throttle lever			

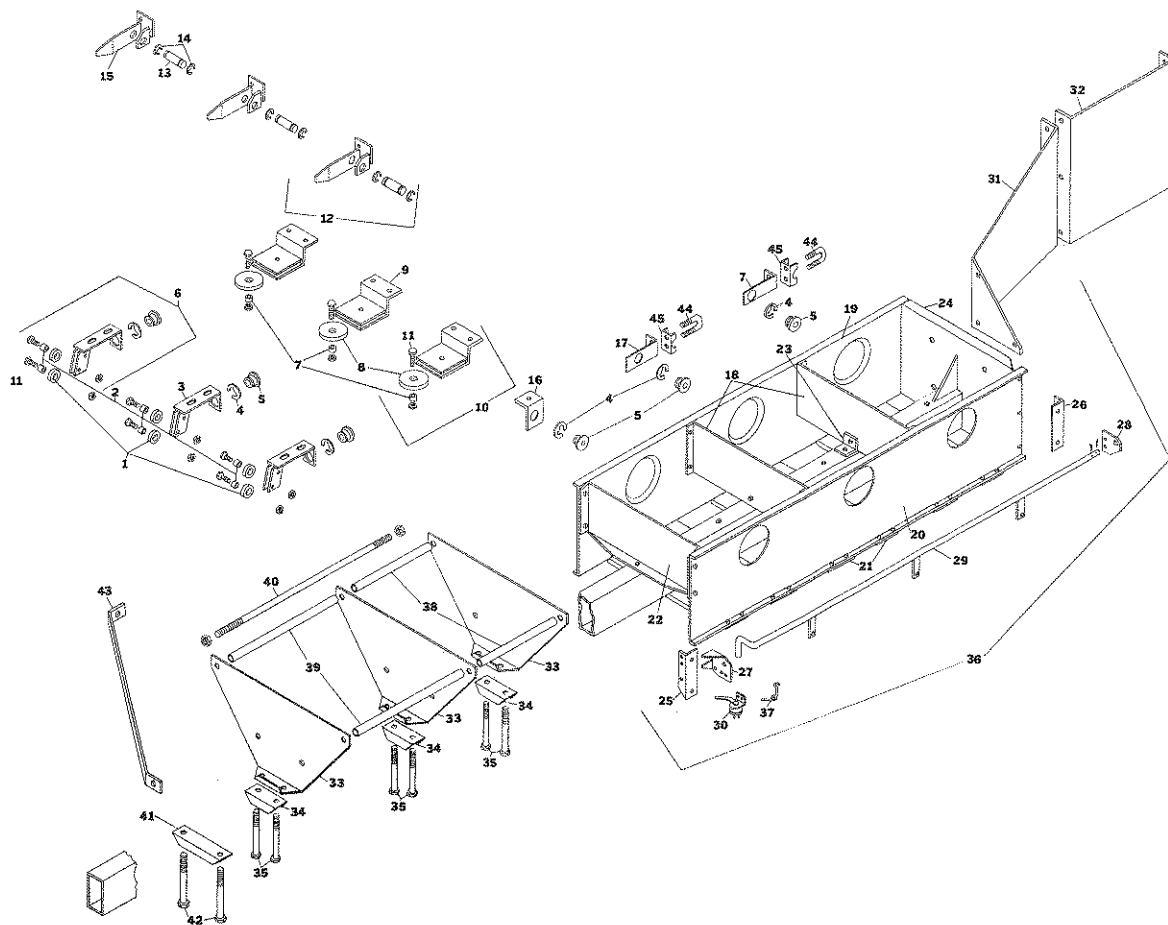


WIRE BOX AND WIRE GUIDE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 4014	Roller for wire guide and needle	27	F 4191	Mounting bracket for wire alarm rod L. H.
2	F 4015	Bushing for F 4014 Roller	28	F 4190	Mounting bracket for wire alarm rod R. H.
3	F 4222	Wire guide frame only (lower rear)	29	F 7608	Rod for wire alarm 3-tie
4	F 857	Snap ring for F 856 bushing		F 7716	Rod for wire alarm 2-tie
5	F 856	Wire guide bushing	30	F 946	Switch only for wire alarm
6	F 4205	Wire guide complete, lower rear	31	F 6315	Wire box mounting bracket, R. H.
7	F 4068	Bushing for F 4067 roller	32	F 6316	Wire box mounting ext. bracket for 18" longer bale chamber
8	F 4067	Roller, lower front wire guide	33	F 6317	Wire carrier end plate
9	F 4223	Wire guide frame only, lower front	34	F 6318	Wire carrier clamp
10	F 4069	Wire guide complete, lower front	35		3/8" x 5" NC cap screw
11		Bolt with lock nut 1/4" x 1" N.C.C.S.	36	F 7515	6 compartment wire box complete w/braces and harness
12	F 4203	Upper wire guide complete with pin		F 7717	4 compartment wire box complete w/braces and harness
13	F 4204	Upper wire guide wear pin	37	F 4210	Spring for wire alarm rod
14	F 5159	Snap ring for wear pin	38	F 7231	Pipe spacer, wire carrier, short
15	F 4225	Upper wire guide bracket only	39	F 7232	Pipe spacer, wire carrier, long
16	F 4163	Wire guide bracket, rear	40	F 4206	Stay bolt, wire carrier, 2-tie
17	F 6314	Wire guide bracket		F 7230	Stay bolt, wire carrier, 3-tie
18	F 7637	Wire box divider	41	F 6319	Wire box clamp
19	F 7638	Wire box side (front)	42		1/2" x 5-1/2" NC cap screw
20	F 7639	Wire box side (rear)	43	F 6320	Brace for L.H. wire box mount
21	F 7640	Wire box bottom slats	44	F 6321	Tube clamp "U" bolt
22	F 7641	Wire box end (left)	45	F 6322	Tube clamp
23	F 7642	Wire box divider angle			
24	F 7643	Wire box base with end plate			
25	F 7644	Angle for wire alarm mounting bracket, L.H.			
26	F 7645	Angle for wire alarm mounting bracket, R. H.			

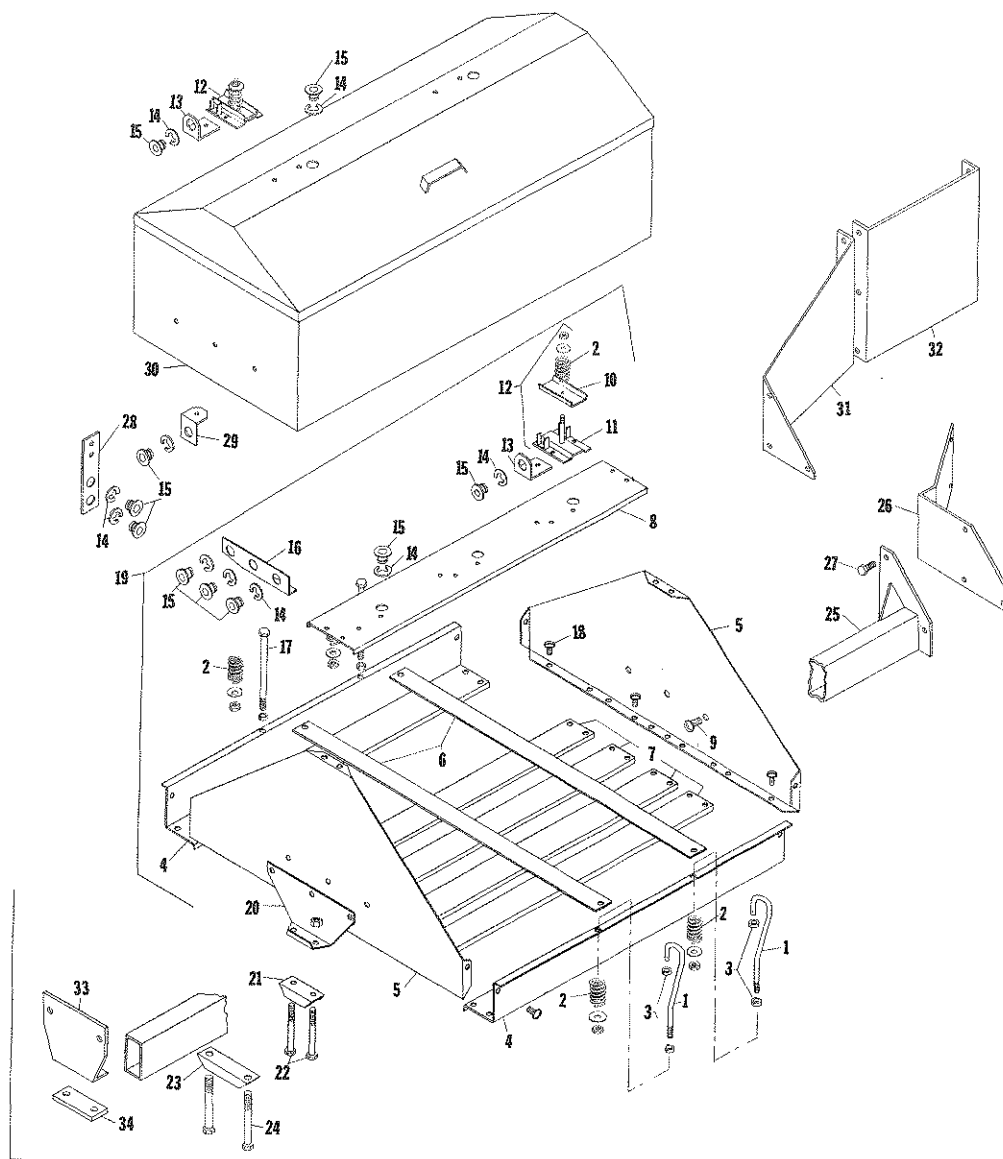


TWINE BOX AND TWINE GUIDES

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7927	Twine box hold down rod	21	F 6318	Twine box clamp
2	F 7541	Spring, twine box hold down	22		3/8" x 5" NC Cap screw
3	F 7928	Set collar, 5/16"	23	F 6319	Twine box base tube clamp, L. H.
4	F 7929	Twine box side	24		1/2" x 5-1/2" NC cap screw
5	F 7930	Twine box end	25	F 7938	Twine box base tube with end mount
6	F 7931	Twine box hold down	26	F 7939	Twine box mounting bracket, R. H., pull-type
7	F 7932	Twine box bottom	27		3/8" x 1" NC cap screw
8	F 7933	Twine box top section	28	F 524	Holder for twine guide bushing, 2-tie
9		3/8" x 3/4" flat head machine screw		F 525	Holder for twine guide bushing, 3-tie
10	F 7890	Twine tension top	29	F 7973	Holder for needle twine guide bushing
11	F 7889	Twine tension base	30	F 7974	Twine box, 8 compartment, dome lid
12	F 7891	Twine tension assembly	31	F 6315	Twine box mounting bracket, R. H., Self-propelled Hydrostatic only
13	F 7898	Twine guide bushing holder	32	F 6316	Twine box mounting bracket extension for 18" long bale chamber, Self-propelled Hydrostatic only
14	F 857	Snap ring for F 856	33	F 7555	Twine box tube mounting bracket, left hand pull type baler
15	F 856	Twine guide bushing	34	F 7556	Bottom support plate for F 7555
16	F 7934	Twine guide bracket			
17	F 7935	Twine box hold down bolt			
18		1/4" x 1/2" flat head machine screw			
19	F 7936	Twine box complete, 9 compartment, large plastic twine ball, Ref. 1-18			
20	F 7937	Twine box bracket			

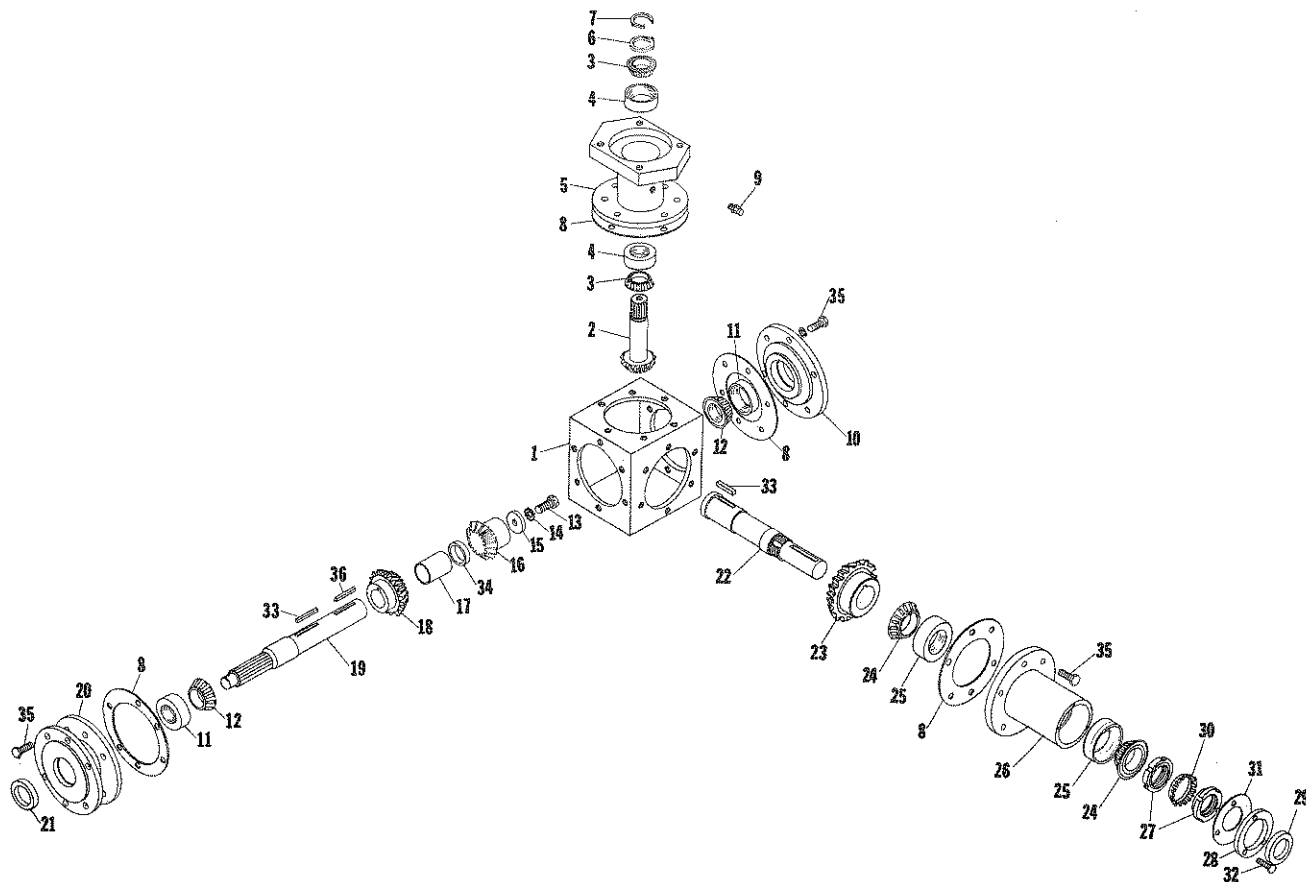

DRIVE GEAR BOX

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6336	Gear box main housing	18	F 6347	Pinion, pulley drive
2	F 6337	Pinion & shaft, pump drive	19	F 6348	Pinion and gear shaft, Perkins
3	F 1083	Bearing cone, pump drive shaft	20	F 6349	Gear box motor housing
4	F 1084	Bearing cup, pump drive shaft	21	F 6350	Seal, gear box motor housing
5	F 6338	Gearbox pump drive housing	22	F 6351	Shaft, pulley drive
6	F 6339	Spacer, pump drive shaft	23	F 6352	Gear, pulley drive
7	F 1087	Snap ring, pump drive shaft	24	F 5446	Bearing cone
8	F 6407	Shim, gearbox housing, .005"	25	F 5445	Bearing cup
	F 6408	Shim, gearbox housing, .010"	26	F 6353	Gear box pulley drive housing
	F 6409	Shim, gearbox housing, .015"	27	F 1245	Nut, bearing take-up
9	F 1720	Vent, 1/8" p.t.	28	F 6354	Seal holder
10	F 6342	Bearing end cap	29	F 6355	Seal, gear box pulley drive housing
11	F 6343	Bearing cup	30	F 1246	Lock washer
12	F 6344	Bearing cone	31	F 6340	Gasket, seal holder
13		1/2" x 1-3/4" NF cap screw	32		1/4" x 3/4" socket head cap screw
14		1/2" star lock washer	33		3/8" x 3/8" square key
15	F 6360	Bearing washer	34	F 6356	Spacer washer
16	F 6345	Gear, pump drive	35		1/2" x 1-1/4" NC cap screw
17	F 6346	Gear and bearing spacer	36		5/16" x 5/16" square key

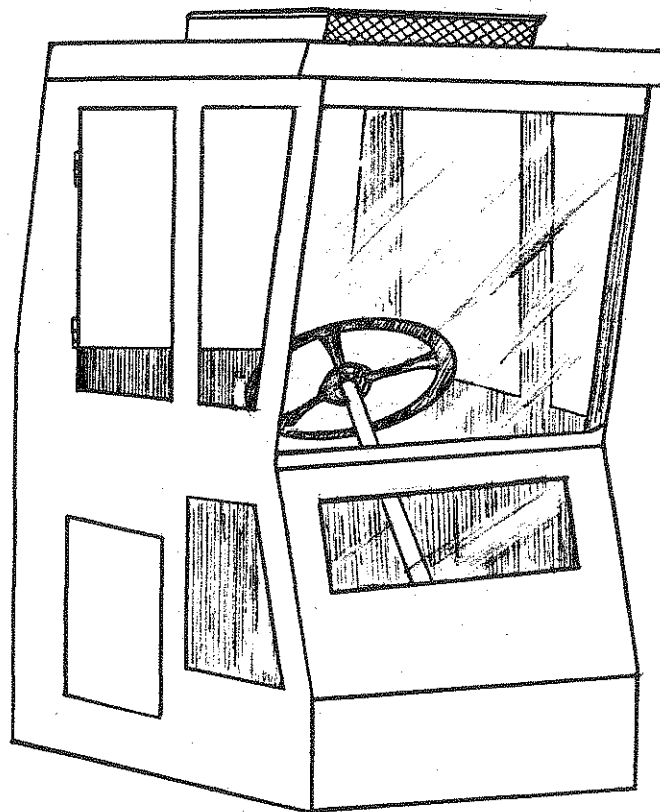

EXCEL CAB

PART NO.	DESCRIPTION
F 6135	Glass, 1/4" tinted safety, top front
F 6136	Glass, 1/4" tinted safety, rear
F 6137	Glass, 1/4" tinted safety, bottom front
F 6138	Glass, 1/4" tinted safety, right and left top front
F 6139	Glass, 1/4" tinted safety, right rear
F 6140	Glass, 1/4" tinted safety, bottom right front
F 6141	Glass, 1/4" tinted safety, door
F 6142	Rubber moulding for setting glass (sold by the foot)
F 6143	Window adjusting arm
F 6144	Door handle, inside
F 6145	Door handle, outside
F 6146	Door latch w/handles
F 6148	Air deflector
F 6150	Floor mat
F 6394	Dome light
F 6395	Blower switch
F 6153	Rear view mirror
F 6396	Blower fan, 12 volt
F 6155	Door latch
F 6397	Blower filter
F 6398	Domelite switch

PARTS NOT ILLUSTRATED

Part No.	Description
F 96	Eyebolt for pickup balance spring
F 6386	Bearing, R. H., pickup
F 6435	Tow bar assembly for Hydrostatic Self-propelled

