


Freeman Automatic Self-Propelled Baler 1970-1971 Parts & 1972 SUPPLEMENT List

Self Propelled
Hydrostatic Drive

Model 200T and 200W
Model 330T and 330W

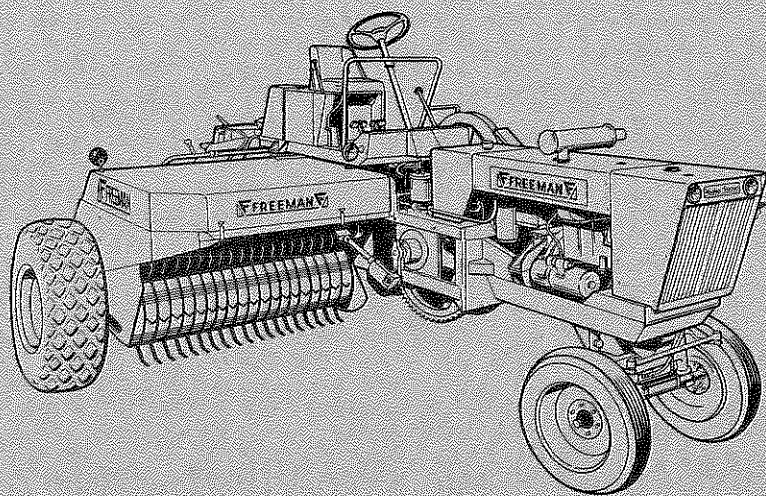


manufactured and distributed by

J. A. FREEMAN & SON, INC.

PB00000152

PORTLAND, OREGON

Printed in U. S. A. 9-71

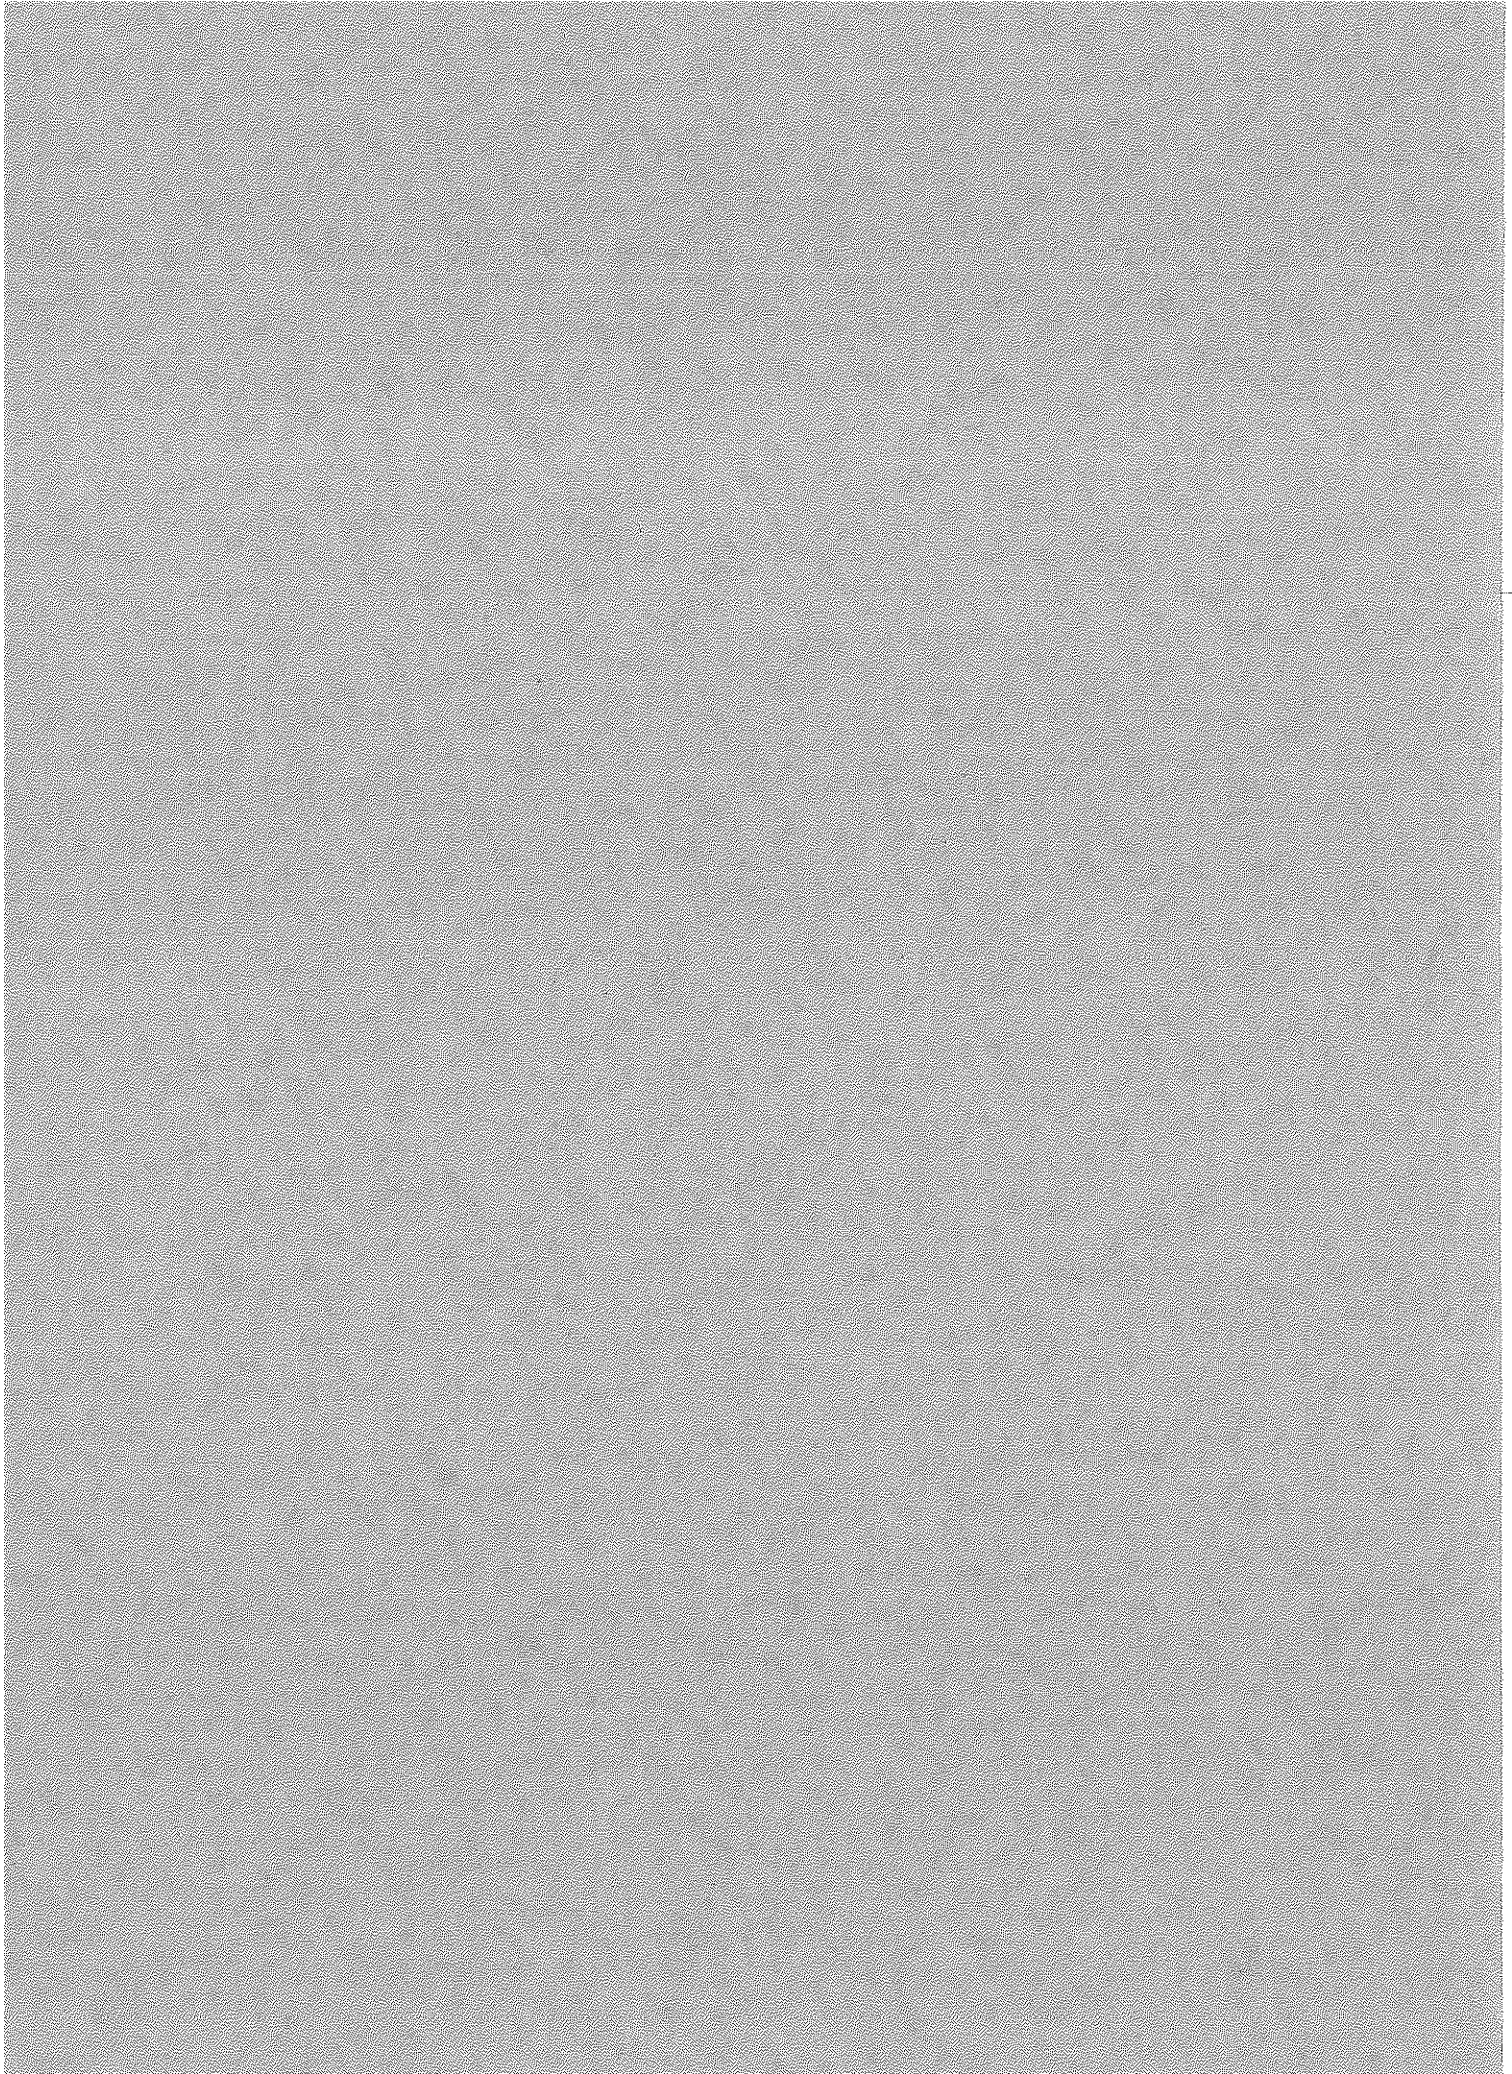


1970 - 1971 PARTS LIST

for

Self Propelled
Hydrostatic Drive

Model 200T and 200W
Model 330T and 330W

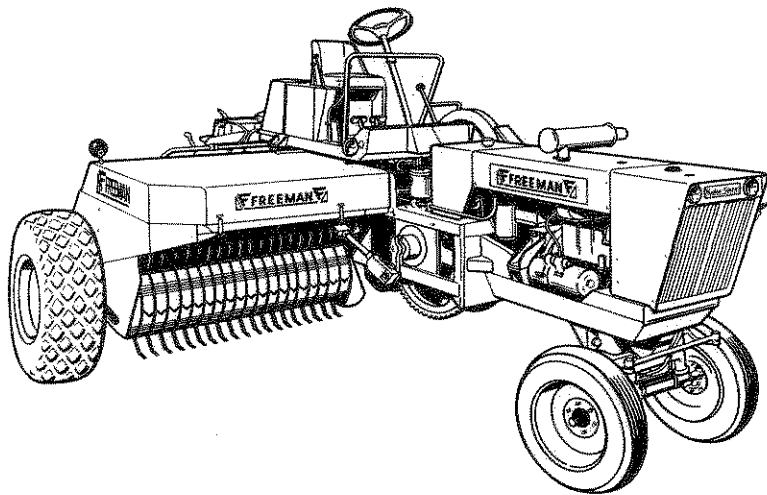

POLICY

1. It is the policy of J. A. Freeman & Son, Inc. to constantly improve its products whenever it is practical to do so.
2. J. A. Freeman & Son, Inc. reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J. A. Freeman & Son, Inc. relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by baler serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, mail, rail, express or freight, air express or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J. A. Freeman & Son, Inc.
Parts Department,
2034 N. W. 27th Avenue,
Portland, Oregon 97210

Place serial number of machine here for your convenience:

Baler Serial No. _____

Motor Serial No. _____

Left and right of machine are understood to mean from a position facing in the direction of baler travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"

Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

Table of Contents

Front end engine base and cowl	1
Operator platform	2
Clutch control and belt drive	3
Gear shift control and operators seat	4
Steering assembly	5, 6
Brake control	7
Electrical system	8
Rear axle and final drive	9, 10
Hydrostatic drive system	11, 12
Transmission assembly	13, 14
Differential assembly	15, 16
Hydraulic lift for pickup	17
Throttle control, tension control and fuel line	18
Wire box and wire guide	19
Twine box and twine guides	20
Drive gear box	21
Pickup shield, exhaust and air cleaner	22
Tow Bar	23
Excel cab	24

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 83	6	F 5076	7	F 5411	16	F 5903	9
F 214	6, 10	F 5156	14	F 5412	16	F 5904	9
F 462	6	F 5159	19	F 5414	16	F 5905	10
F 524	20	F 5234	8	F 5415	16	F 5910	10
F 525	20	F 5236	8	F 5416	16	F 5918	4
F 853	22	F 5237	8	F 5438	9	F 5920	4
F 856	19, 20	F 5275	10	F 5445	10, 21	F 5921	4
F 857	19, 20	F 5276	10	F 5446	10, 21	F 5941	8
F 862	8	F 5299	18	F 5452	9	F 5942	14, 16
F 884	6	F 5301	14	F 5457	9	F 5944	7
F 934	6	F 5302	14	F 5501	4	F 5945	7
F 946	8, 19	F 5303	14	F 5502	4	F 5947	2
F 994	7	F 5304	14	F 5505	4	F 5948	2
F 1003	18	F 5305	14	F 5545	18	F 5949	2
F 1005	18	F 5306	14	F 5546	2	F 5950	2
F 1007	18	F 5307	14	F 5547	10	F 5952	17
F 1083	21	F 5308	14	F 5551	2, 18	F 5953	17
F 1084	21	F 5309	14	F 5554	17, 18	F 5954	8
F 1087	21	F 5310	14	F 5559	18	F 5971	22
F 1131	18	F 5312	14	F 5614	6	F 5979	7
F 1245	10, 21	F 5313	14	F 5650	6	F 5981	7
F 1246	10, 21	F 5314	14	F 5703	4	F 5982	7
F 1323	17	F 5316	14	F 5705	4	F 5984	7
F 1497	8	F 5317	14	F 5763	10	F 5991	7
F 1499	8	F 5318	14	F 5769	6	F 5992	4
F 1624	6	F 5319	14	F 5782	10	F 6014	17
F 1625	6	F 5320	14	F 5783	10	F 6015	17
F 1626	6	F 5321	14	F 5784	10	F 6016	17
F 1627	6	F 5322	14	F 5785	9	F 6018	17
F 1628	6	F 5323	14	F 5786	10	F 6020	17
F 1653	6	F 5324	14	F 5788	10	F 6021	17
F 1654	6	F 5325	14	F 5792	9	F 6026	4
F 1689	2	F 5326	14	F 5793	9	F 6028	4
F 1706	22	F 5327	14	F 5794	9	F 6029	4
F 1720	10, 21	F 5329	14	F 5795	9	F 6030	4
F 3102	12	F 5330	14, 16	F 5797	10	F 6032	2
F 3104	12	F 5331	14	F 5798	10	F 6034	18
F 3105	12	F 5332	14	F 5799	10	F 6035	18
F 3109	12	F 5333	14	F 5800	10	F 6036	18
F 4014	19	F 5334	14	F 5801	9	F 6037	17
F 4015	19	F 5341	16	F 5806	9	F 6041	18
F 4067	7, 19	F 5342	16	F 5808	10	F 6042	18
F 4068	7, 19	F 5343	16	F 5809	10	F 6048	18
F 4069	19	F 5344	16	F 5812	10	F 6049	18
F 4081	10	F 5345	16	F 5813	10	F 6050	18
F 4137	3	F 5346	16	F 5814	10	F 6051	17
F 4163	19	F 5347	16	F 5824	10	F 6053	10
F 4190	19	F 5348	16	F 5826	9	F 6054	3, 4, 7
F 4191	19	F 5349	16	F 5827	10	F 6055	7
F 4203	19	F 5350	16	F 5828	9	F 6056	10
F 4204	19	F 5351	16	F 5829	9	F 6067	2
F 4205	19	F 5352	16	F 5830	9	F 6069	2
F 4206	19	F 5353	16	F 5831	10	F 6070	4
F 4210	7, 19	F 5354	16	F 5840	10	F 6073	4
F 4222	19	F 5356	16	F 5842	8	F 6074	4
F 4223	19	F 5357	16	F 5854	6	F 6077	7
F 4225	19	F 5358	16	F 5858	14, 16	F 6079	4
F 4228	19	F 5359	16	F 5866	4	F 6080	4
F 5023	6	F 5360	16	F 5867	4	F 6081	4
F 5031	6	F 5401	16	F 5890	10	F 6082	17
F 5032	6	F 5402	16	F 5891	9	F 6083	17
F 5039	6	F 5403	16	F 5892	9	F 6084	17
F 5040	6	F 5404	16	F 5894	10	F 6085	17
F 5048	3	F 5405	16	F 5898	9	F 6086	17
F 5049	3, 17	F 5406	16	F 5899	9	F 6087	17
F 5055	3, 4	F 5408	16	F 5900	9	F 6088	17
F 5069	18	F 5409	16	F 5901	9	F 6104	22
F 5075	7	F 5410	16	F 5902	9	F 6105	22

INDEX

II

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 6111	22	F 6249	12	F 6400	7	F 6500	6
F 6132	10	F 6250	12	F 6401	2	F 6501	6
F 6133	16	F 6251	12	F 6402	2	F 6503	6
F 6134	17	F 6252	12	F 6403	4	F 6504	6
F 6135	24	F 6253	12	F 6407	21	F 6505	6
F 6136	24	F 6255	12	F 6408	21	F 6506	6
F 6137	24	F 6257	12	F 6409	21	F 6507	6
F 6138	24	F 6258	12	F 6410	7	F 6508	6
F 6139	24	F 6259	12	F 6411	7	F 6509	6
F 6140	24	F 6260	12	F 6412	2	F 6510	6
F 6141	24	F 6261	12	F 6413	2	F 6511	6
F 6142	24	F 6262	12	F 6415	6	F 6512	23
F 6143	24	F 6263	12	F 6417	8	F 6513	23
F 6144	24	F 6264	12	F 6420	8	F 6514	23
F 6145	24	F 6265	12	F 6421	8	F 6515	23
F 6146	24	F 6266	12	F 6422	8	F 6516	12
F 6148	24	F 6267	12	F 6424	8	F 6517	12
F 6150	24	F 6268	12	F 6425	8	F 6518	12
F 6153	24	F 6269	12	F 6426	8	F 6519	6
F 6155	24	F 6270	2	F 6429	8	F 6520	22
F 6161	10	F 6271	2	F 6431	8	F 6521	22
F 6164	17	F 6272	2	F 6432	3	F 6522	22
F 6170	4	F 6273	2	F 6433	12	F 6523	22
F 6175	2	F 6274	2	F 6442	18	F 6524	22
F 6176	2	F 6278	2	F 6443	18	F 6525	22
F 6177	2	F 6279	2	F 6444	18	F 6526	22
F 6178	2	F 6280	2	F 6445	18	F 6527	10
F 6182	2	F 6281	2	F 6446	18	F 6528	21
F 6183	2	F 6282	2	F 6447	18	F 6529	21
F 6186	4	F 6283	2	F 6450	12	F 6530	21
F 6188	17	F 6290	2	F 6451	17	F 6531	21
F 6199	1	F 6291	2	F 6452	22	F 6532	21
F 6200	1	F 6292	6	F 6453	12	F 6533	21
F 6206	3	F 6293	6	F 6460	8	F 6534	21
F 6208	3	F 6294	6	F 6463	6	F 6535	21
F 6209	3	F 6306	22	F 6465	3	F 6536	21
F 6210	3	F 6307	22	F 6467	9	F 6537	21
F 6211	3	F 6308	22	F 6468	10	F 6538	10
F 6212	3	F 6310	22	F 6469	1	F 6539	6
F 6214	3	F 6312	22	F 6470	1	F 6540	22
F 6215	3	F 6314	19	F 6471	1	F 6541	22
F 6216	3	F 6317	19, 20	F 6472	1	F 6542	22
F 6217	3	F 6318	19, 20	F 6473	1	F 6543	22
F 6218	3	F 6319	19, 20	F 6474	1	F 6544	22
F 6220	3	F 6320	19	F 6475	1	F 6545	22
F 6221	3	F 6321	19	F 6476	1	F 6546	22
F 6222	3	F 6322	19	F 6477	1	F 6547	3
F 6223	3	F 6323	6	F 6478	1	F 6548	8
F 6224	3	F 6324	6	F 6479	1	F 6549	8
F 6226	3	F 6325	2	F 6481	2	F 6550	8
F 6227	3	F 6328	8	F 6482	2	F 6551	8
F 6228	3	F 6332	3	F 6483	3	F 6552	8
F 6229	3	F 6339	21	F 6484	3, 21	F 6553	8
F 6230	3	F 6340	21	F 6485	3	F 6554	8
F 6235	12	F 6341	3, 12	F 6486	3	F 6555	8
F 6236	12	F 6354	21	F 6487	3	F 6556	8
F 6237	12	F 6355	21	F 6488	6	F 6557	8
F 6238	12	F 6357	14	F 6489	6	F 6558	8
F 6239	12	F 6358	12	F 6490	6	F 6559	10
F 6240	12	F 6360	21	F 6491	6	F 6560	22
F 6241	12	F 6361	10	F 6492	6	F 6561	1
F 6242	12	F 6369	17	F 6493	6	F 6562	2
F 6243	12	F 6371	8	F 6494	6	F 6563	3
F 6244	12	F 6394	24	F 6495	6	F 6564	3
F 6245	12	F 6395	24	F 6496	6	F 6565	3
F 6246	12	F 6396	24	F 6497	6	F 6566	6
F 6247	12	F 6397	24	F 6498	6	F 6567	21
F 6248	12	F 6398	24	F 6499	6	F 6568	21

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 6569	21	F 6595	23	F 7640	19	F 7935	20
F 6570	12	F 6596	23	F 7641	19	F 7936	20
F 6571	12	F 6597	24	F 7642	19	F 7937	20
F 6572	12	F 6598	23	F 7643	19	F 7938	20
F 6573	1	F 6599	5	F 7644	19	F 7973	20
F 6574	3	F 6600	24	F 7645	19	F 7974	20
F 6575	6	F 6601	24	F 7671	22	F 7981	19
F 6576	6	F 6602	24	F 7676	22	F 7982	19
F 6577	8	F 6603	24	F 7677	22	F 8059	8
F 6578	8	F 7033	10	F 7716	19	F 8060	8
F 6579	12	F 7034	10	F 7717	19		
F 6580	12	F 7035	10	F 7721	22	FD 25	2
F 6581	18	F 7095	7	F 7722	22	FD 26	2
F 6582	18	F 7166	22	F 7729	22	FT 18	17
F 6583	18	F 7230	19	F 7889	20	FT 53	10
F 6584	18	F 7231	19	F 7890	20	FT 74	6
F 6585	18	F 7232	19	F 7891	20	FT 75	6
F 6586	18	F 7247	3, 17	F 7898	20	FT 82	17
F 6587	6	F 7337	3	F 7927	20	FT 103	17
F 6588	23	F 7515	19	F 7928	20	FT 107	6, 17
F 6589	19, 20	F 7541	8, 20	F 7929	20	FT 136	17
F 6590	23	F 7608	19	F 7930	20	FT 150	17
F 6591	23	F 7635	22	F 7931	20	FT 163	17
F 6592	23	F 7637	19	F 7932	20	FT 169	17
F 6593	23	F 7638	19	F 7933	20		
F 6594	23	F 7639	19	F 7934	20	F 5688066	6

1972 SUPPLEMENT **to** **Self-Propelled Baler** **1970-1971 Parts** **List**

**Self Propelled
Hydrostatic Drive**

Model 200T and 200W Model 330T and 330W



The parts listed in this Supplement are parts which were not used in 1970 or 1971, but have since been added or substituted.

Reference numbers shown in this Supplement refer to the corresponding reference number on the 1970-71 Parts Book illustrated page. These reference numbers indicate that a similar but different part is now being used.

The parts for pages 18 and 19 of the 1970-71 Parts book do not show reference numbers, but should be checked by description to determine what part is needed.

manufactured and distributed by

J. A. FREEMAN & SON, INC.

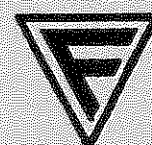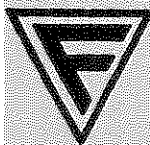

PORTLAND, OREGON

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 6604	11	F 6618	11	F 6633	17	F 6647	18
F 6605	1	F 6619	11	F 6634	17	F 6648	18
F 6606	11	F 6620	11	F 6635	17	F 6649	18
F 6607	2	F 6621	1	F 6636	17	F 6650	18
F 6608	2	F 6622	1	F 6637	17	F 6651	18
F 6609		F 6623	1	F 6638	17	F 6652	18
F 6610	22	F 6625	8	F 6639	8	F 6653	18
F 6611	22	F 6626	8	F 6640	18		
F 6612	22	F 6627	8	F 6641	18	F 8173	19
F 6613	11	F 6628	11	F 6642	18	F 8174	19
F 6614	11	F 6629	11	F 6643	18	F 8175	19
F 6615	11	F 6630	5	F 6644	18	F 8176	19
F 6616	11	F 6631	5	F 6645	18		
F 6617	11	F 6632	5	F 6646	18		
						FT 219	5
						FT 227	17

Page 1

FRONT END ENGINE BASE AND COWL

REF. NO.	PART NO.	DESCRIPTION
9	F 6621	Oil cooler bracket, 2 use
10	F 6622	Oil cooler bar, 2 used
11	F 6623	Oil cooler clamp, 2-piece
12	NOT USED	
13	F 6605	Front end grill

Page 2

OPERATOR PLATFORM

REF. NO.	PART NO.	DESCRIPTION
22	F 6607	Rear mounting bracket for operators deck, L.H. , 2-tie
	F 6608	Rear mounting bracket for operators deck, L.H. , 3-tie
23	F 6609	Rear mounting bracket for operators deck, R.H.

Page 5

STEERING ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
15	F 6630	1/4" hydraulic hose w/J.I.C. female fitting, 76"
16	F 6631	1/4" hydraulic hose w/J.I.C. female fitting, 66"
70	FT 219	3/8" J.I.C. male connector, C 5205 x 6
71	F 6632	3/8" J.I.C. male connector, C 5205 x 6 x 6

ELECTRICAL SYSTEM

REF. NO.	PART NO.	DESCRIPTION
1	F 6639	Battery, 12 volt, 1 used gas, 2 used diesel
2	F 6548	Ground strap, 70622, 1 used gas, 2 used diesel
3	F 6549	Battery cable, insulated, 71931, gas
	F 6625	Battery cable, insulated, diesel
4	F 6626	Battery hold down, gas
	F 6627	Battery hold down, diesel

HYDROSTATIC DRIVE SYSTEM

REF. NO.	PART NO.	DESCRIPTION
9	F 6617	L. H. high pressure line, center, 1" x .109" steel tube, 3-tie
10	F 6619	Drain line, center, 5/8" x .049" steel tube, 3-tie
11	F 6620	Drain line, front, 5/8" x .049" steel tube
12	F 6618	L.H. high pressure line, front, 1" x .109" steel tube, 3-tie
14	F 6616	R.H. high pressure line, center, 1" x .109" steel tube, 3-tie
33	F 6606	Hydraulic tank
	F 6613	Hydraulic tank mounting bracket, L.H., 2-tie
	F 6614	Hydraulic tank mounting bracket, R.H., 2-tie
39	F 6615	Main line support bracket, L.H.
40	F 6628	1" tube clamp
41	F 6629	5/8" tube clamp
	F 6628	1" tube clamp
56	F 6604	Main line support bracket, R.H.

HYDRAULIC LIFT FOR PICKUP

REF. NO.	PART NO.	DESCRIPTION
1	F 6633	1/4" hydraulic hose w/ J.I.C. female fitting, 20"
2	NOT USED	
4	FT 227	3/8" J.I.C. 90° female elbow, C5455 x 6
5	F 6634	3/8" J.I.C. 90° female connector C5255 x 6
16	F 6637	3/8" J.I.C. 90° male elbow, C5405 x 6 x 8, on lockout
	F 6638	3/8" J.I.C. 90° male elbow, C5405 x 6, on cylinder
23	NOT USED	
24	F 6635	3/8" J.I.C. 90° male elbow, C5405x6x6
38	F 6636	1/4" hydraulic hose w/J.I.C. female fitting, 15"
39	F 6637	3/8" J.I.C. 90° male elbow, C5405x6x8
40	NOT USED	

THROTTLE CONTROL TENSION CONTROL AND FUEL LINE


PART NO.	DESCRIPTION
F 6640	Water separator, 18151 HMS
F 6641	Primer assembly, 12385 HMS
F 6642	Brass elbow, 89-LB, 3/8" x 1/4" tube
F 6643	Brass connector, 88-LB, 3/8" x 1/4" tube
F 6644	3/8" line, tank valve to primer, 100"
F 6645	3/8" line, water separator to filter, 49"
F 6646	5/16" return line, 137"
F 6647	3/8" line, primer to water separator
F 6648	5/16" x 1/4", S.A.E. angle, 6703 WH
F 6649	3/8" x 1/4" inverted angle, A6890 WH
F 6650	5 /16" fuel line cover, 137"
F 6651	3/8" fuel line cover, 100"
F 6652	3/8" fuel line cover, 49"
F 6653	5/16" male elbow, 400 x 5 WH

WIRE BOX AND WIRE GUIDE

PART NO.	DESCRIPTION
F 8175	Spacer, 1-1/4"
F 8176	Spacer, 13/32
F 8173	Wire guide bracket, lower front
F 8174	Wire guide complete, lower front


PICKUP SHIELD, EXHAUST AND AIR CLEANER

REF. NO.	PART NO.	DESCRIPTION
22	F 6610	Air cleaner bracket, diesel
31	F 6545	Bull gear shield, L.H., 2-tie
	F 6611	Bull gear shield, L.H., 3-tie
32	F 6546	Bull gear shield, R.H., 2-tie
	F 6612	Bull gear shield, R.H., 3-tie

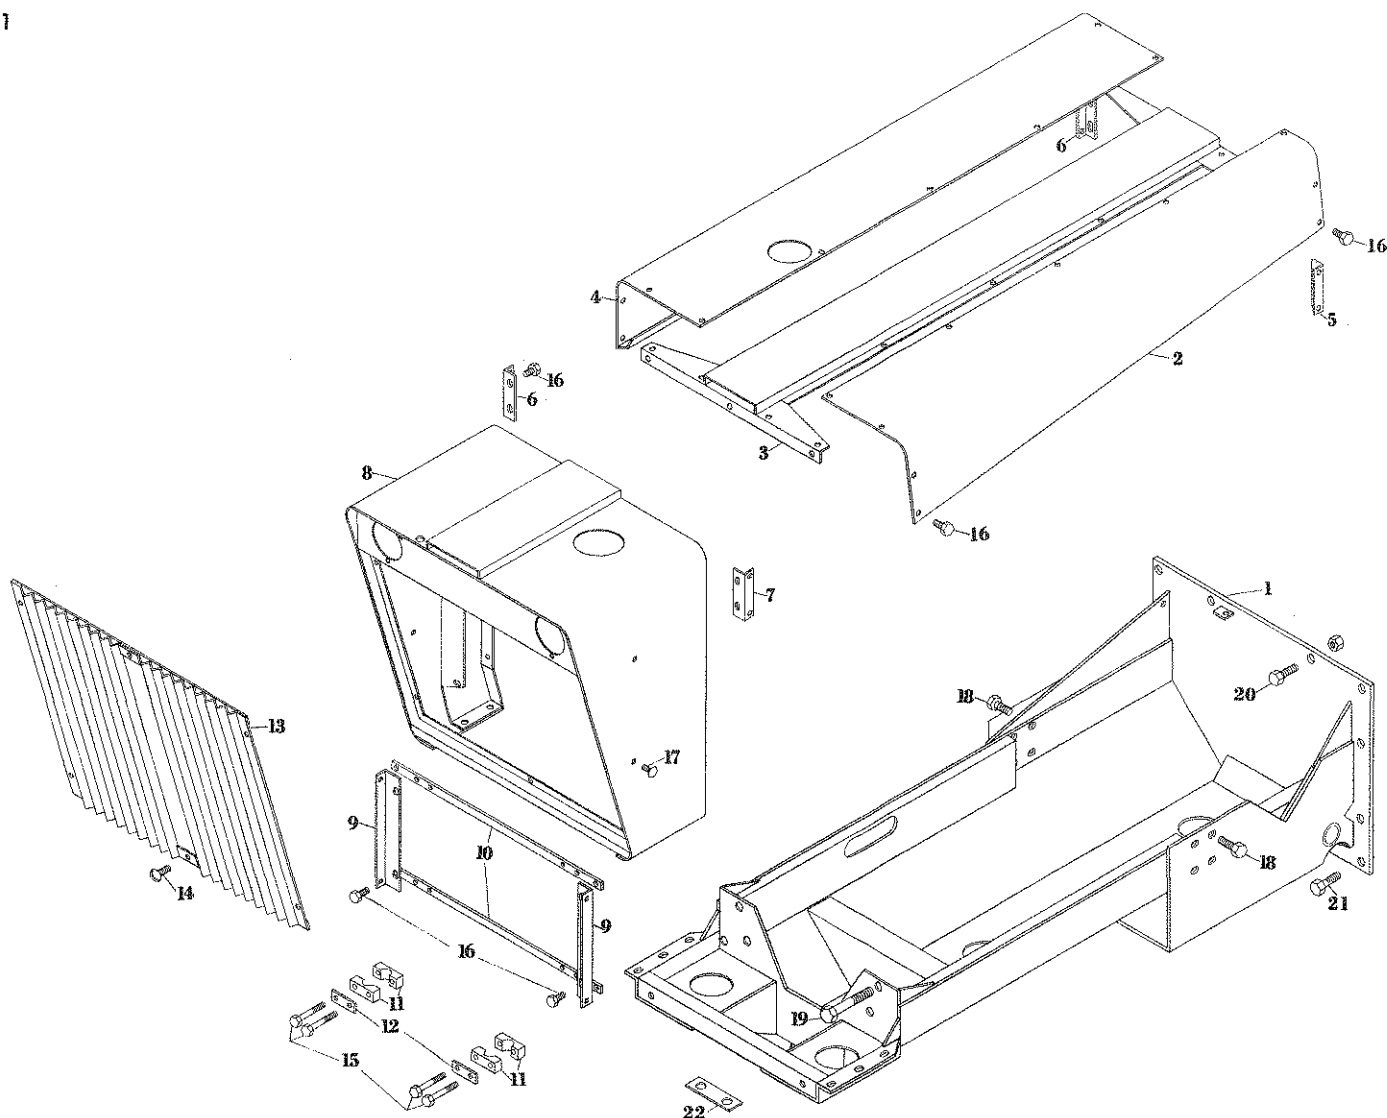


FRONT END ENGINE BASE AND COWL

REF. NO.	PART NO.	DESCRIPTION
1	F 6469	Front end main frame section, 3 tie
	F 6573	Front end main frame section, 2 tie
2	F 6470	Engine cowl, left side
3	F 6471	Engine cowl, center
4	F 6472	Engine cowl, right side
5	F 6473	Hood bracket, left rear
6	F 6474	Hood bracket right side
7	F 6475	Hood bracket, left front
8	F 6476	Engine front cowl
9	F 6477	Oil cooler bracket, 2 used
10	F 6478	Oil cooler bar, 2 used
11	F 6199	Oil cooler clamp, 2-piece
12	F 6200	Oil cooler clamp plate
13	F 6479	Front end grill,
14		5/16" x 3/4" machine screw
15		1/4" x 2-3/4" NC cap screw
16		5/16" x 3/4" NC cap screw
17		5/16" x 3/4" carriage bolt
18		1/2" x 1-1/2" NC cap screw
19		5/8" x 4" NF Cap Screw
20		1/2" x 1-1/2" NF HT cap screw
21		1/2" x 1-3/4" NF HT cap screw
22	F 6561	Shim, motor mount

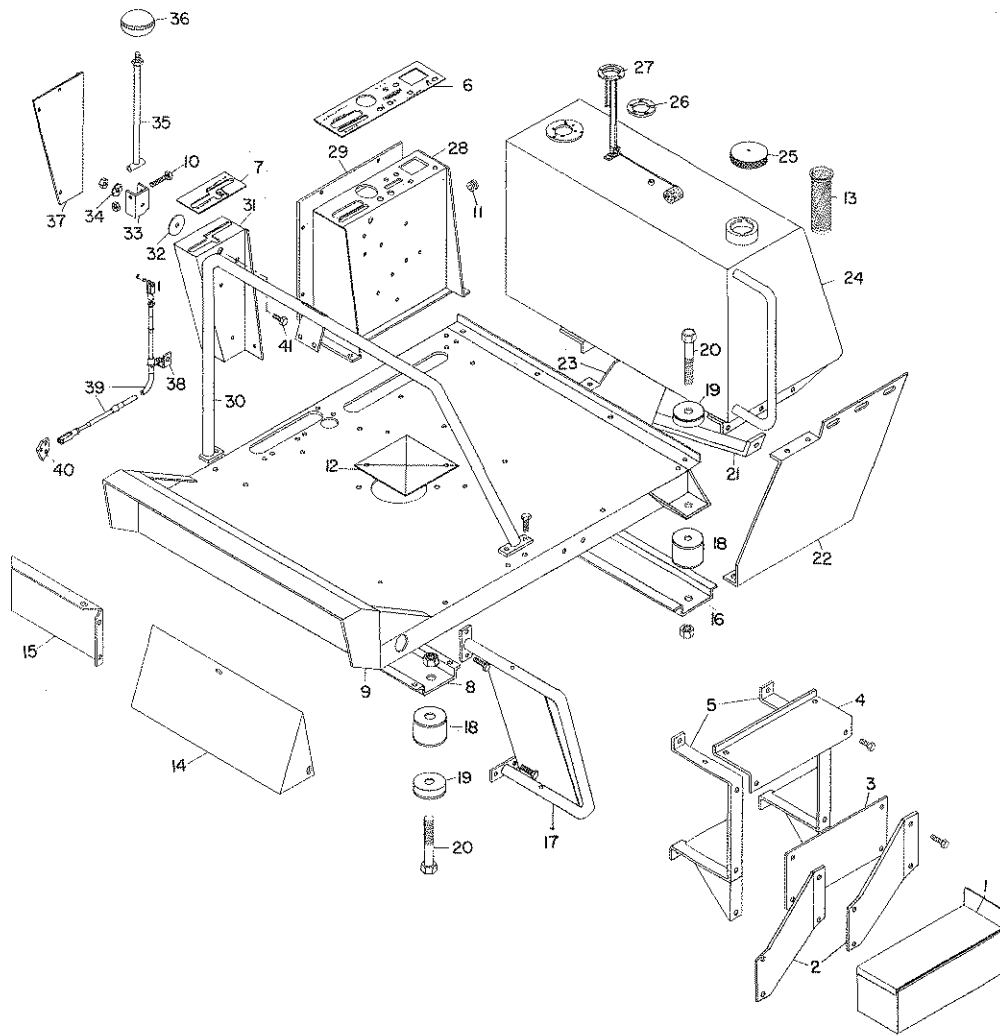


OPERATOR PLATFORM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6270	Step and tool box	22	F 6177	Rear mounting bracket for operators deck, L.H., 2-tie
2	F 6271	Step and tool box bracket		F 6178	Rear mounting bracket for operators deck, L.H., 3-tie
3	F 6272	Step and tool box bracket plate		F 6176	Rear mounting bracket for operators deck, R.H.
4	F 6273	Step plate	23	F 6176	Rear mounting bracket for operators deck, R.H.
5	F 6274	Step bracket	24	F 5947	30 gal. fuel tank, less fuel gauge
6	FD 25	Decal, main console	25	F 1689	Fuel tank cap for F 5947 tank
7	FD 26	Decal, speed control console	26	F 5949	Gasket for F 5948 gauge
8	F 6325	Front deck mount channel	27	F 5948	Fuel gauge for F 5947 tank
9	F 6401	Main operator deck	28	F 6413	Console, Main section
10		1/4" x 2-3/4" cap screw	29	F 6032	Console cover
11	F 6069	Rubber grommet	30	F 6402	Guard rail and steering shaft mounting bracket
12	F 6412	Cover plate, tension control pump inspection hole	31	F 6282	Speed control console
13	F 5950	Filter screen for fuel tank	32	F 5546	Friction disc
14	F 6481	Front deck shield, L.H.	33	F 6280	Speed control lever arm
15	F 6482	Front deck shield, R.H.	34	F 5551	Conical washer
16	F 6175	Tie bar for deck mount	35	F 6279	Speed control lever
17	F 6562	Hand rail and shield	36	F 6278	Speed control lever knob
18	F 6183	Deck mount, neoprene, 3" x 3/4" x 1-3/4" w/washer	37	F 6281	Speed control console cover
19	F 6182	Deck mount, neoprene, 3" x 3/4" x 1/2" w/washer	38	F 6291	Speed control cable clamp angle
20		1/2" x 3-3/4" NF cap screw w/lock nut	39	F 6283	Speed control Cable
21	F 6067	Brace for rear mounting bracket	40	F 6290	Speed control lever, lower
			41		5/16" x 1" NC cap screw

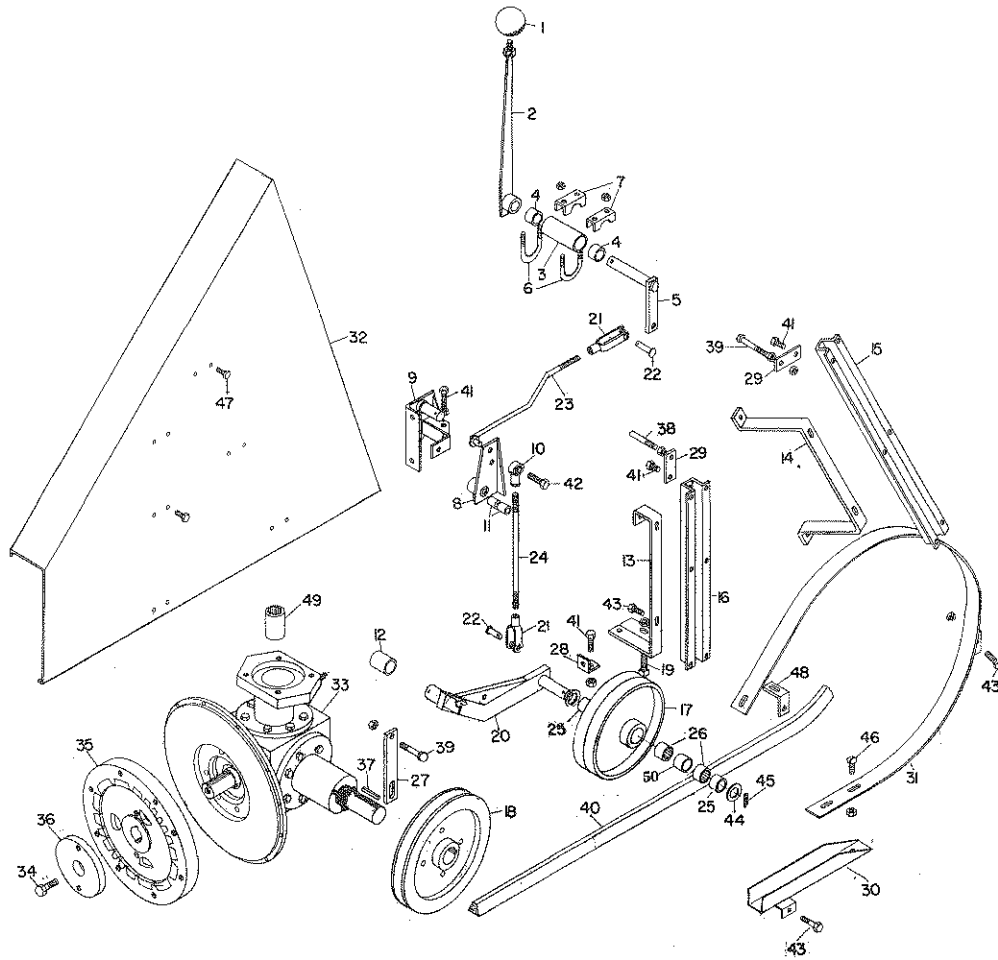


CLUTCH CONTROL AND BELT DRIVE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5055	Lever knob	22	F 5049	Clevis pin for 1/2" clevis
2	F 6563	Clutch lever	23	F 6221	Top clutch rod
3	F 6206	Clutch lever bearing complete w/bushing, 3-tie	24	F 6222	Lower clutch rod
	F 6332	Clutch lever bearing complete w/bushing, 2-tie	25	F 6223	Inner race for idler pulley, 2 used
4	F 6054	Clutch lever bearing bushing, 1" x 1-1/8" x 1"	26	F 6224	Bearing for idler pulley, 2 used
5	F 6564	Clutch shaft, 3-tie	27	F 6483	Top front belt guide
	F 6565	Clutch shaft, 2-tie	28	F 6226	Front belt shield bracket pad
6	F 6208	"U" bolt bearing clamp, 012 Chicago	29	F 6227	Top rear belt guide
7	F 6209	"U" bolt bearing clamp bracket	30	F 6228	Bottom rear belt guide
8	F 6210	Clutch wobble arm	31	F 6229	Rear belt guide
9	F 6211	Clutch wobble arm bracket	32	F 6230	Belt shield
10	F 6212	Ball rod end, CTR8N Sperico	33	F 6484	Gear box IHC
11	F 7247	Bushing for clutch wobble arm, 7/8"x1"x1'	34	F 6485	1/2" x 1-1/2" NF cap screw w/LH thread
12	F 4137	Bushing for belt tightener arm bearing bracket, 1-3/8" x 1-1/2" x 2"	35	F 6486	Drive plate assembly
13	F 6547	Belt shield bracket, front	36	F 6487	Washer
14	F 6214	Belt shield bracket, rear	37		Key for pulley, 3/8" x 3/8" x 2-3/4"
15	F 6215	Belt shield & guide bracket, rear	38	F 6465	Belt guide stud
16	F 6216	Belt shield & guide bracket, front	39		3/8" x 3-3/4" NC cap screw
17	F 6217	Belt tightener pulley	40	F 7337	Drive belt, D 162
18	F 6218	Drive pulley	41		3/8" x 1" NC cap screw
19		1/2" x 2-1/2" square head set screw	42		1/2" x 1-3/4" NC cap screw
20	F 6220	Belt tightener arm	43		5/16" x 1" NC cap screw
21	F 5048	1/2" clevis	44		1" I.D. x 1-3/4" O.D. washer
			45		3/16" x 1-1/2" cotter key
			46		5/16" x 3/4" F.H. machine screw
			47		1/4" x 3/4" NC cap screw
			48	F 6432	Top belt guide bracket
			49	F 6341	Shaft coupling, 21 involute
			50	F 6574	Spacer, idler pulley bearing

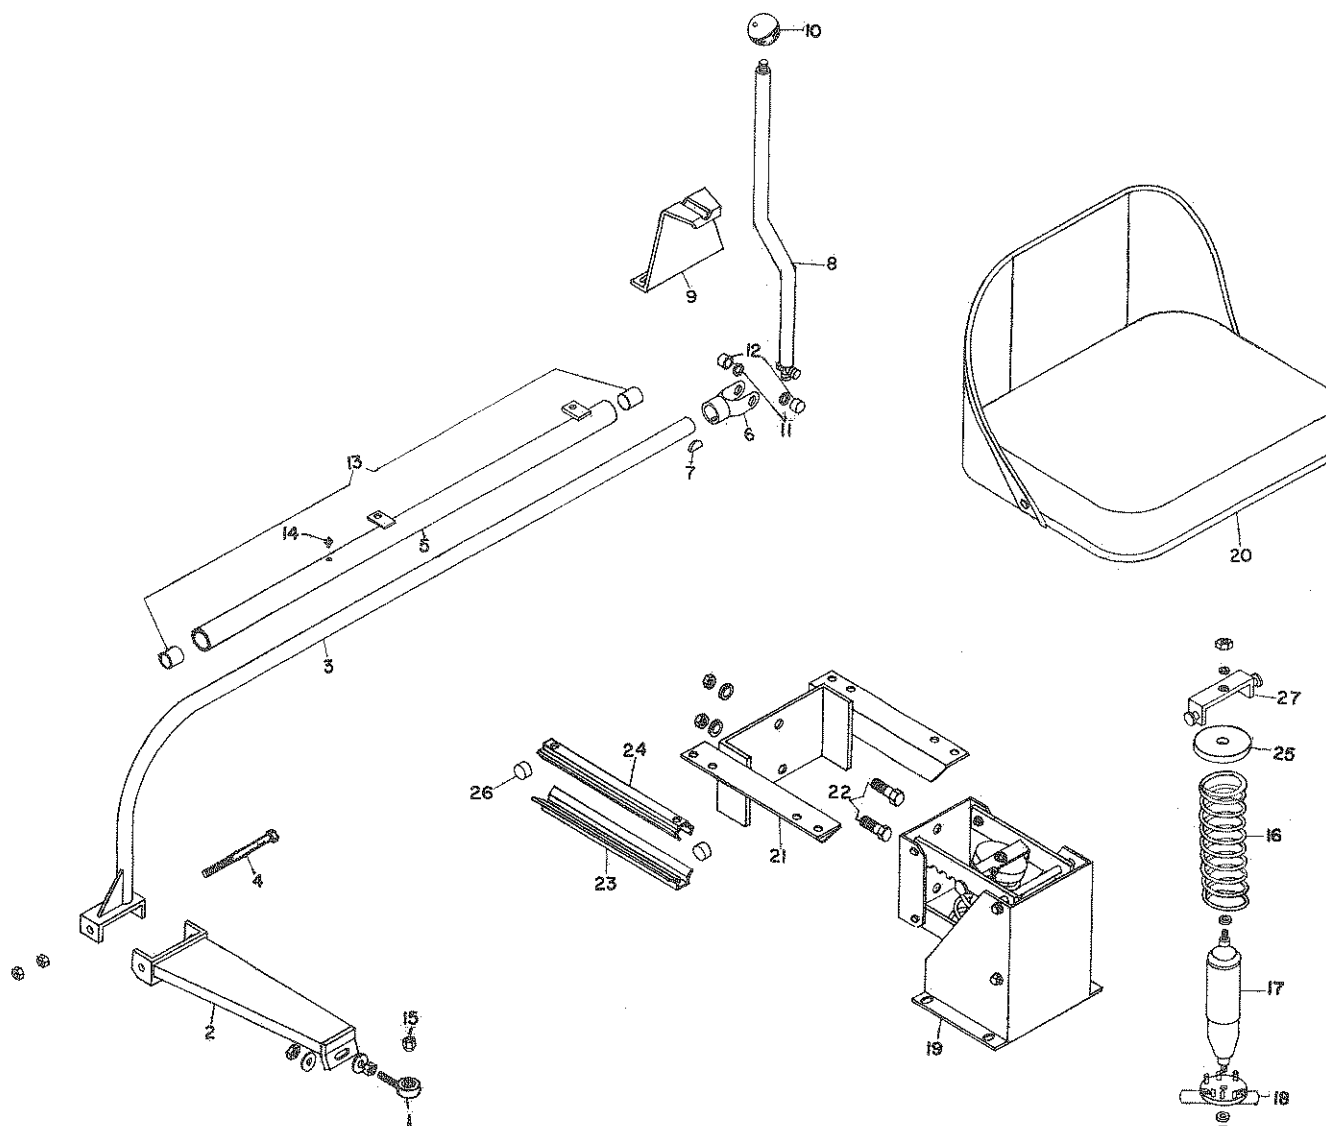

GEAR SHIFT CONTROL AND OPERATORS SEAT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5992	Swivel bearing for shift bar	17	F 5866	Shock absorber
2	F 6030	Shift bar	18	F 5505	Plate, bottom pivot
3	F 6028	Gear shift rod	19	F 5703	Seat spring and hydraulic assembly complete
4		3/8" x 5-1/4" N.C. cap screw	20	F 5918	Seat assembly
5	F 6029	Gear shift tube w/bushings		F 5920	Bottom seat cushion for F 5918
6	F 6070	Shift rod yoke		F 5921	Back cushion for F 5918
7		1/4" x 1-1/8" woodruff key	21	F 5867	Seat bracket
8	F 6403	Shift lever	22		1/2" x 1-3/4" N.C. cap screw
9	F 6026	Shift lever bracket	23	F 6079	Seat adjusting rail (top)
10	F 5055	Gear shift lever knob	24	F 6080	Seat adjusting rail (bottom)
11	F 6074	Oil seal for F 6073 cup	25	F 5502	Cup washer for F 5705 spring
12	F 6073	Cup for F 6070 yoke	26	F 6081	Roller for seat adjusting rails
13	F 6054	Bushing, 1" x 1-1/8" x 1"	27	F 5501	Spring and cylinder adjusting bracket
14	F 6170	Grease fitting			
15	F 6186	Conical nut for F 5992 bearing			
16	F 5705	Spring, F 5703 seat assembly			

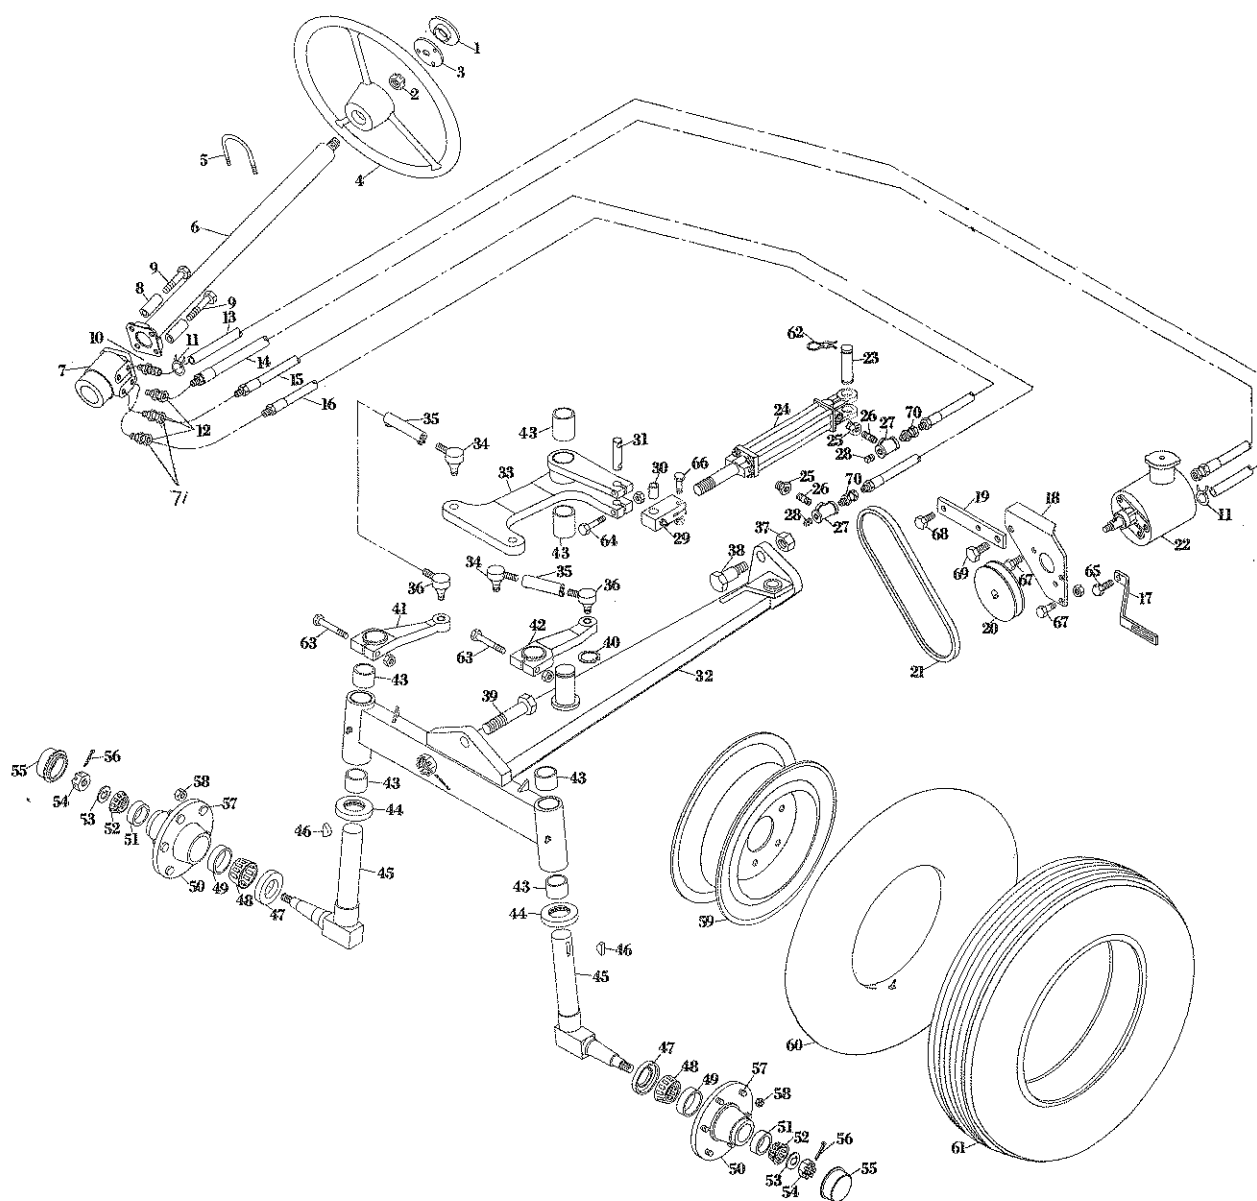


STEERING ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5031	Steering column cap, 18" wheel
	F 6576	Steering column cap, 14" wheel
2	F 6323	Nut, steering column, 13/16" - 20
3	F 5032	Steering column cap holder, 18" wheel
4	F 6292	Steering wheel, 18"
	F 6575	Steering wheel, 14"
5	F 6324	"U" bolt
6	F 6415	Steering orbitrol column
7	F 6293	Steering orbitrol control unit
8	F 6294	Pipe spacer for steering motor mounting
9		3/8" x 3-1/2" NC cap screw
10	F 6488	Barbed hose end, 3/8"
11		3/8" hose clamp
12	F 6463	3/8" straight swivel fitting
13	F 6489	3/8" return hose, 104"
14	F 6490	3/8" hydraulic hose w/one 3/8" male fitting & one female fitting, 102"


STEERING ASSEMBLY—Cont.

15	F 6491	1/4" hydraulic hose w/one 3/8" male fitting & one 1/4" female fitting, 76"
16	F 6492	1/4" hydraulic hose w/one 3/8" male fitting & one 1/4" male fitting, 66"
17	F 6493	Hydraulic pump tightener, IHC gasoline
	F 6566	Hydraulic pump tightener, IHC diesel
18	F 6494	Hydraulic pump mounting bracket, gasoline, IHC
	F 6495	Hydraulic pump mounting bracket, diesel IHC
19	F 6496	Pump bracket
20	F 5614	Sheave, hydraulic pump drive
21	F 6497	Belt, hydraulic pump drive, AX48
22	F 5688066	Hydraulic pump assembly
23	F 6498	Cylinder pivot pin
24	F 6519	Steering cylinder, 2 x 8"
	F 6599	Repair kit for F 6519
25		1/2" x 1/4" reducer bushing
26		1/4" NPT close nipple
27	FT 74	1/4" pipe tee
28	FT 75	1/4" pipe plug
29	F 6499	Steering cylinder rod end
30	F 6500	Bushing, 3/4" x 7/8" x 1-1/4"
31	F 6501	Cylinder rod pin
32	F 6539	Front axle assembly
33	F 6503	Steering bell crank
34	F 6504	Tie rod end, R.H.
35	F 6505	Drag link
36	F 6506	Tie rod end, L.H.
37		3/4" NF hex nut
38	F 5023	Front axle shoulder bolt
39	F 6507	Front axle pivot bolt w/castillated nut
40	F 6508	Snap ring, 175
41	F 6509	Steering arm, right
42	F 6510	Steering arm, left
43	F 5854	Spindle bushing, 1-3/4" x 2" x 1-1/2", 2 pair used
44	F 5769	Thrust bearing, D 21
45	F 6587	Front spindle, R.H. & L. H.
46	F 83	Woodruff key, 3/8" x 1-1/4"
47	F 1627	Front wheel grease seal, 54605 K.H.
48	F 1625	Front wheel bearing, inner, #LM29749
49	F 1653	Cup for bearing, inner, #LM29710
50	F 1624	Front wheel hub, 6-hole
51	F 1654	Cup for bearing, outer, #L44610
52	F 1626	Front wheel bearing, outer, #L44640
53	F 884	Spindle washer
54	F 934	Nut for spindle
55	F 1628	Hub cap
56		Cotter key, 1/8" x 1-1/4"
57	F 462	Lug bolt, (12 used)
58	F 214	Lug nut (12 used) #15085
59	F 5650	Wheel, front, 6-hole
60	F 5040	Tube for front tire, 6:70 x 15
61	F 5039	Tire, front 6:70 x 15, 6-ply
62	F 6511	Hairpin for cylinder pin
63		1/2" x 3-3/4" NF HT cap screw w/locknut
64		5/16" x 2-1/2" NC cap screw
65		5/16" x 3/4" NC cap screw
66		3/8" x 1-3/4" NC cap screw
67		5/16" x 1" NC cap screw
68		7/16" x 1-1/2" NC cap screw
69		5/8" x 1-1/2" NF cap screw
70	FT 107	1/4" Straight swivel fitting

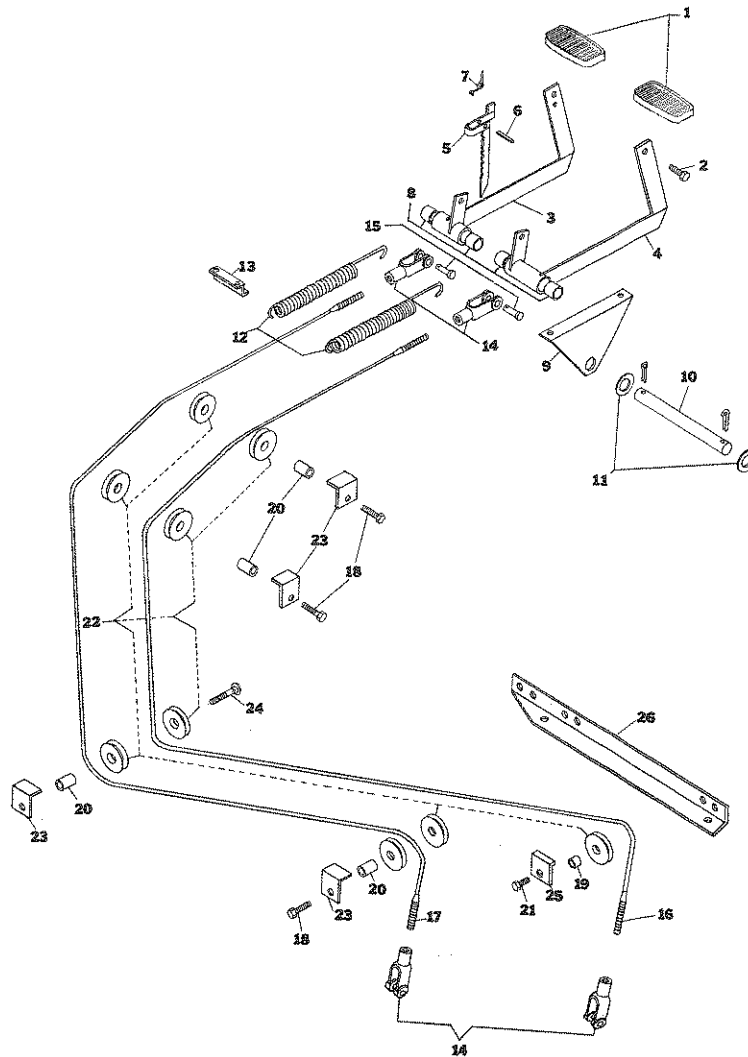


BRAKE CONTROL

REF. NO.	PART NO.	DESCRIPTION
1	F 5979	Brake pedal pad
2		5/16" x 1" NC cap screw
3	F 5944	L. H. brake lever
4	F 5945	R. H. brake lever
5	F 5984	Brake pedal lock
6		1/4" x 1-1/2" roll pin
7	F 4210	Spring for brake release
8	F 6054	Bushing for clutch and brake levers, 1" x 1-1/8" x 1"
9	F 6055	Brake lever shaft support
10	F 6400	Brake pedal cross shaft
11		1" washer
12	F 7095	Brake and clutch return spring
13	F 6077	Brake return spring anchor
14	F 5075	Clevis, 5/16" for brake cable
15	F 5076	5/16" clevis pin
16	F 5981	Brake cable R. H. (110")
17	F 5982	Brake cable L. H. (92")
18		3/8" x 1-3/4" NC cap screw
19	F 4068	Bushing for F 4067 roller
20	F 6410	Bushing for two roller sheave
21		1/4" x 1-1/4" NC cap screw
22	F 4067	Roller for brake pulleys
23	F 6411	Shield for brake pulleys
24		3/8" x 2" carriage bolt
25	F 994	Shield for brake pulley
26	F 5991	Cable pulley mounting bracket

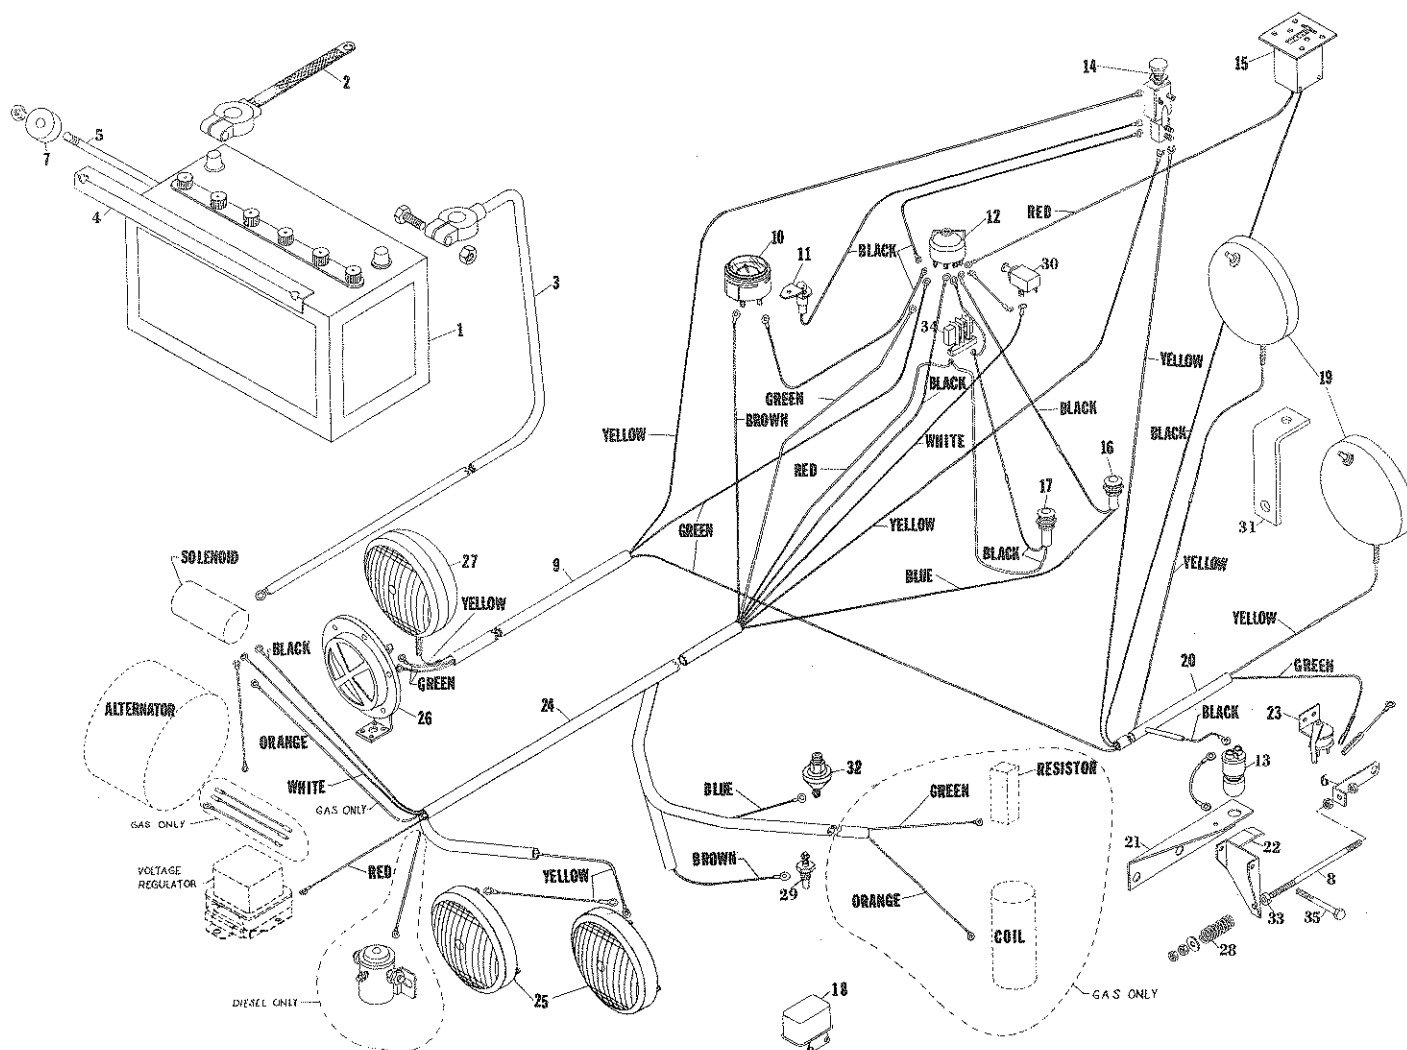

ELECTRICAL SYSTEM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1499	Battery, 12 volt, gasoline	5	F 6551	Battery hold down bolt
2	F 6417	Battery, 12 volt, diesel	6	F 6552	Bale counter switch rod link
3	F 6548	Ground strap, 70622	7	F 6328	Battery hold down grommet
4	F 6549	Battery cable, insulated, 71931	8	F 6553	Bale counter switch rod
5	F 6550	Battery hold down	9	F 6420	Wire harness, horn & light
6	F 6551	Battery hold down bolt	10	F 6421	Temperature gauge
7	F 6328	Bale counter switch rod link	11	F 5234	Instrument panel light socket
8	F 6553	Bale counter switch rod	12	F 6422	Starter switch
9	F 6420	Wire harness, horn & light	13	F 5237	Sending unit for bale counter
10	F 6421	Temperature gauge	14	F 5236	Rubber cap
11	F 5234	Instrument panel light socket	15	F 862	Light switch
12	F 6422	Starter switch	16	F 5954	Bale counter, electronic
13	F 5237	Sending unit for bale counter	17	F 6424	Oil indicator light
14	F 5236	Rubber cap	18	F 6425	Relay
15	F 862	Light switch	19	F 8060	Light, rear combination, 12 volt sealed beam
16	F 5954	Bale counter, electronic	20	F 6426	Wire harness, bale counter, wire alarm light
17	F 6424	Oil indicator light	21	F 6554	Bracket for sending unit
18	F 6425	Relay	22	F 6555	Sending unit lever
19	F 8060	Light, rear combination, 12 volt sealed beam	23	F 946	Switch for wire alarm
20	F 6426	Wire harness, bale counter, wire alarm light	24	F 6556	Wire harness, engine, gasoline
21	F 6554	Bracket for sending unit	25	F 6557	Wire harness, engine, diesel
22	F 6555	Sending unit lever	26	F 6558	Headlights with housing, shock mounted
23	F 946	Switch for wire alarm	27	F 6429	Sealed beam unit, 12 volt
24	F 6556	Wire harness, engine, gasoline	28	F 1497	Horn, wire alarm, 12 volt
25	F 6557	Wire harness, engine, diesel	29	F 8059	Light, front, 12 volt, sealed beam
26	F 6558	Headlights with housing, shock mounted	30	F 5842	Sealed beam unit, 12 volt
27	F 6429	Sealed beam unit, 12 volt	31	F 7541	Spring
28	F 1497	Horn, wire alarm, 12 volt	32	F 6431	Temperature sending unit
29	F 8059	Light, front, 12 volt, sealed beam	33	F 6371	Safety switch
30	F 5842	Sealed beam unit, 12 volt	34	F 6577	Light bracket, right rear
31	F 7541	Spring	35	F 6460	Oil sending unit
32	F 6431	Temperature sending unit	36	F 6578	Resistor and terminal block, 10W-15 Ohm
33	F 6371	Safety switch	37		1/4" x 3" NC cap screw
34	F 6577	Light bracket, right rear			
35	F 6460	Oil sending unit			

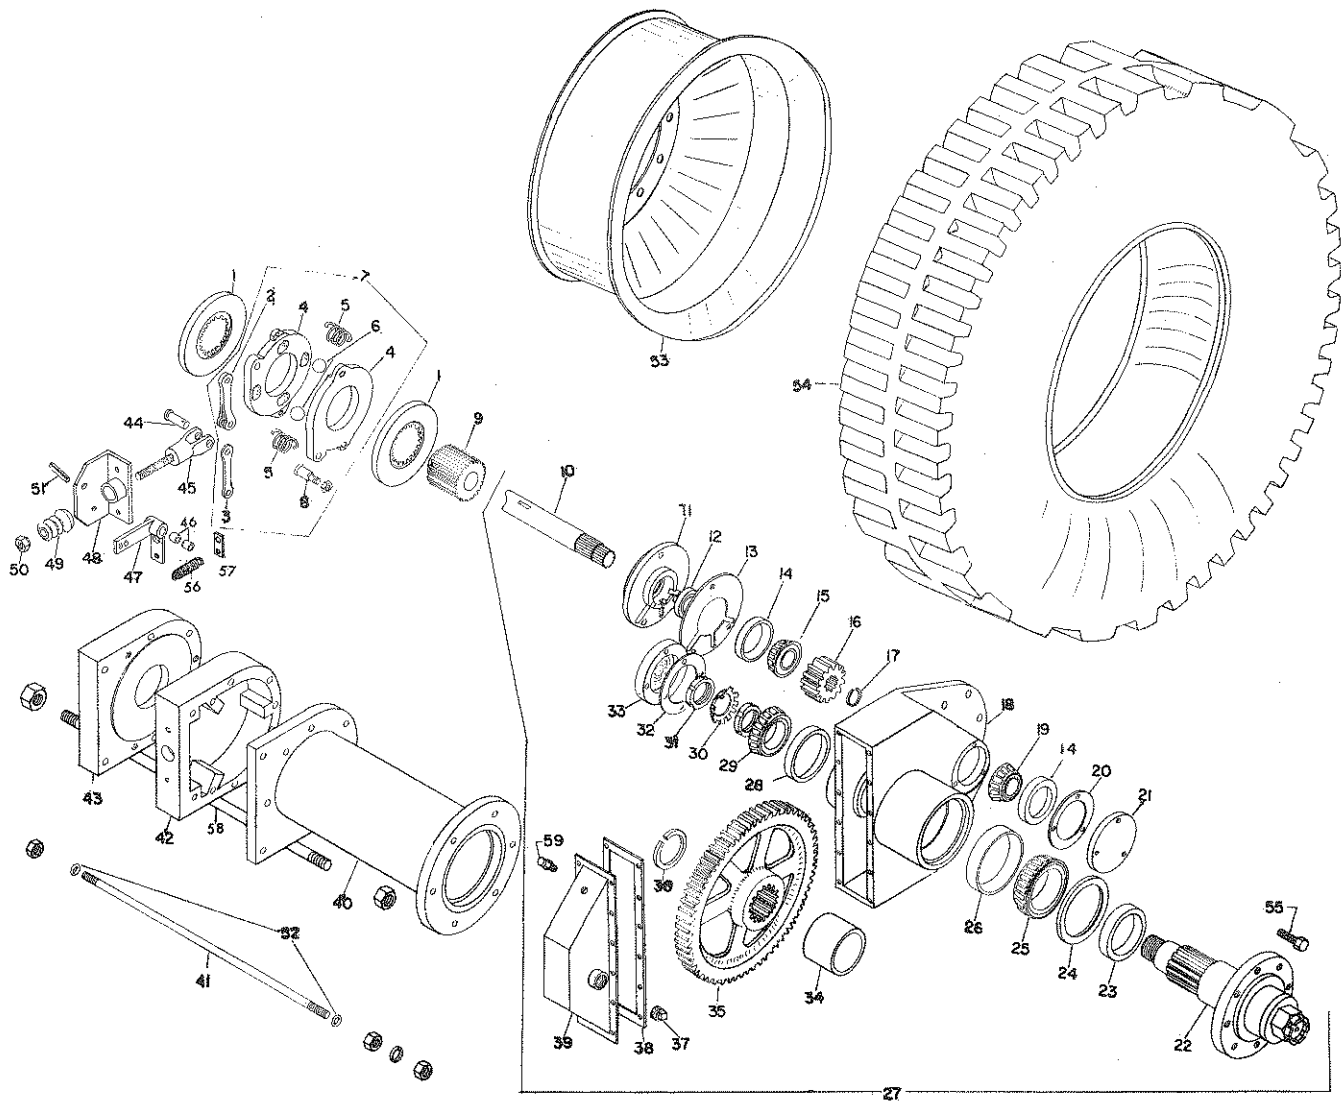

REAR AXLE AND FINAL DRIVE


REF. NO.	PART NO.	DESCRIPTION
1	F 5794	Brake wear disc
2	F 5899	Yoke link
3	F 5900	Strap link
4	F 5898	Brake pressure plate
5	F 5901	Pressure plate spring
6	F 5902	Pressure plate ball
7	F 5903	Pressure plate complete
8	F 5904	Linkage bolt
9	F 5795	Brake hub
10	F 6467	Axle shaft, R. H., 33-1/2"
	F 5792	Axle shaft, L.H., 57-1/4", 2-tie
	F 5793	Axle shaft, L.H., 62-1/4", 3-tie
11	F 5801	Inside pinion bearing retainer
12	F 5806	Oil seal for axle shaft, 13666 C/R
13	F 5826	Gasket, inside pinion bearing, 1/64"
14	F 5891	Cup for F 5457 and F 5892 bearings 14282
15	F 5457	Inner pinion bearing cone, 14137A
16	F 5452	Final drive pinion
17	F 5438	Snap ring, pinion bearing
18	F 5785	Final drive housing, R.H. and L.H.
19	F 5892	Outer axle shaft bearing, 14117A
20	F 5828	Shim .005 (steel) outside pinion bearing
	F 5829	Shim .007 (steel) outside pinion bearing
	F 5830	Shim .010 (steel) outside pinion bearing

REAR AXLE AND FINAL DRIVE—Cont.

REF. NO.	PART NO.	DESCRIPTION
21	F 5786	Axle drive cover
22	F 6559	Wheel shaft with seal ring
23	F 5809	Seal ring
24	F 7035	Seal for axle shaft, 255833
25	F 7033	Outer bearing for axle shaft, 33287
26	F 7034	Outer bearing cup for F 7033, 33462
27	F 5782	Final drive housing complete, R.H.
	F 5783	Final drive housing complete, L.H., 3 tie
	F 5784	Final drive housing complete, L.H., 2 tie
28	F 5445	Cup for inner wheel shaft bearing, 362A
29	F 5446	Inner bearing cone for wheel shaft, 368A
30	F 1246	Lock washer, W-10
31	F 1245	Nut, bearing take-up, N-10
32	F 5827	Wheel shaft bearing cover gasket, 1/32"
33	F 5788	Wheel shaft cover
34	F 5808	Spacer for F 5763 gear
35	F 5763	Final drive gear, 8620
36	F 5840	Snap ring for final drive gear
37		3/4" pipe plug
38	F 5831	Gasket, drive gear cover, 1/16"
39	F 5905	Drive gear cover, R.H.
	F 6361	Drive gear cover, L.H.
40	F 6468	Axle spacer, 19-7/8", R.H., 2 and 3 tie
	F 5797	Axle spacer, 43-5/8", L.H., 2 tie only
	F 5798	Axle spacer, 48-5/8", L.H., 3 tie only
41	F 6132	Tie bolt, 5/8" x 25"
42	F 5799	Brake housing
43	F 5800	Brake spacer, R.H.
	F 5890	Brake spacer, L.H.
44	F 6161	Clevis pin, 7/16" x 1-1/4"
45	F 5894	Brake clevis
46	F 5813	Bushing for brake lever
47	F 5812	Brake lever w/bushing
48	F 5814	Brake lever mount
49	F 5824	Dust cover for brake rod
50	F 214	Nut for brake clevis
51	F 5547	Roll pin, 1/4" x 1"
52	F T 53	"O" ring
53	F 6527	Rear wheel, flotation
54	F 6538	Flotation tire, 10 ply L.H., 18.4 x 16A
	F 5275	Flotation tire, 6 ply R.H., 18.4 x 16A
	F 5276	Tube, 18.4 x 16A
55	F 5910	Lug bolt
56	F 6053	Spring, brake release
57	F 6056	Brake release spring anchor
58	F 4081	Truss rod, 3/4" x 17-1/2"
59	F 1720	Vent
60		9/16" x 6" NC cap screw, (16 used)


HYDROSTATIC DRIVE SYSTEM

REF. NO.	PART NO.	DESCRIPTION
1	F 6235	Hydrostatic motor
2	F 6236	5/8" x 90° O-ring tube fitting, 7515-10 WH
3	F 3102	1" straight male tube fitting, 8205-16 WH
4	F 6237	Drain line, rear, 5/8" x .049" steel tube
5	F 6238	L. H. high pressure line, rear, 1" x .109" steel tube
6	F 6239	R. H. high pressure line, rear, 1" x .109" steel tube
7	F 6240	1" straight tube union, 8305-16 WH
8	F 6241	5/8" straight tube union, 8305-10 WH
9	F 6242	L. H. high pressure line, center, 1" x .109" steel tube, 3 tie
	F 6570	L. H. high pressure line, center, 1" x .109" steel tube, 2 tie
10	F 6243	Drain line, center, 5/8" x .049" steel tube, 3 tie
	F 6571	Drain line, center, 5/8" x .049" steel tube, 2 tie
11	F 6244	Drain line, front, 5/8" x .049" steel tube
12	F 6245	L.H. high pressure line, front, 1" x .109" steel tube
13	F 3104	1" x 90° male tube fitting, 8405-16 WH
14	F 6246	R.H. high pressure line, center, 1" x .109" steel tube
15	F 6247	R.H. high pressure line, front, 1" x .109" steel tube, 3 tie
	F 6572	R.H. high pressure line, front, 1" x .109" steel tube, 2 tie
16		3/4" x 1" NPT reducer bushing
17	F 3105	3/4" straight male tube fitting, 8205-12 WH
18	F 6248	Suction line, 3/4" x .049" steel tube
19	F 6249	3/4" x 90° male tube fitting, 8405-12 WH
20		1-1/4" x 3/4" NPT reducer bushing
21	F 6250	Street ell, C3409x16 WH
22		1" NPT close nipple
23	F 6251	Oil filter mounting bracket
24	F 3109	1/2" NPT 90° swivel fitting, 4975 Couplomatic
25	F 6252	1" ball valve, 444T Worcester
26	F 6253	7/8" - 14 straight adapter 87-10 x 8 Couplomatic
27	F 6516	1/2" hydraulic hose w/ 1/2" male fitting, 83"
28	F 6255	1/2" x 90° swivel adapter, 90-10 x 8 Couplomatic
29	F 6517	1/2" hydraulic hose with 1/2" male fitting, 90"
30	F 6257	1/2" hydraulic hose with 1/2" male fitting, 31"
31	F 6258	Hydraulic tank access cover gasket
32	F 6259	Hydraulic tank access cover
33	F 6260	Hydraulic tank
34	F 6261	Oil filter complete
	F 6453	Filter element only for F 6261 oil filter
35	F 6269	4-bolt flange w/bolts & O rings, W43 x 16 x 16 Anchor
	F 6450	"O" ring only for F 6269 4-bolt flange
36		1" x 1-1/4" NPT reducer bushing
37	F 6262	Hydraulic pump
38	F 6263	Heat exchanger
39	F 6264	Main line support bracket
40	F 6265	Single 1" tube clamp

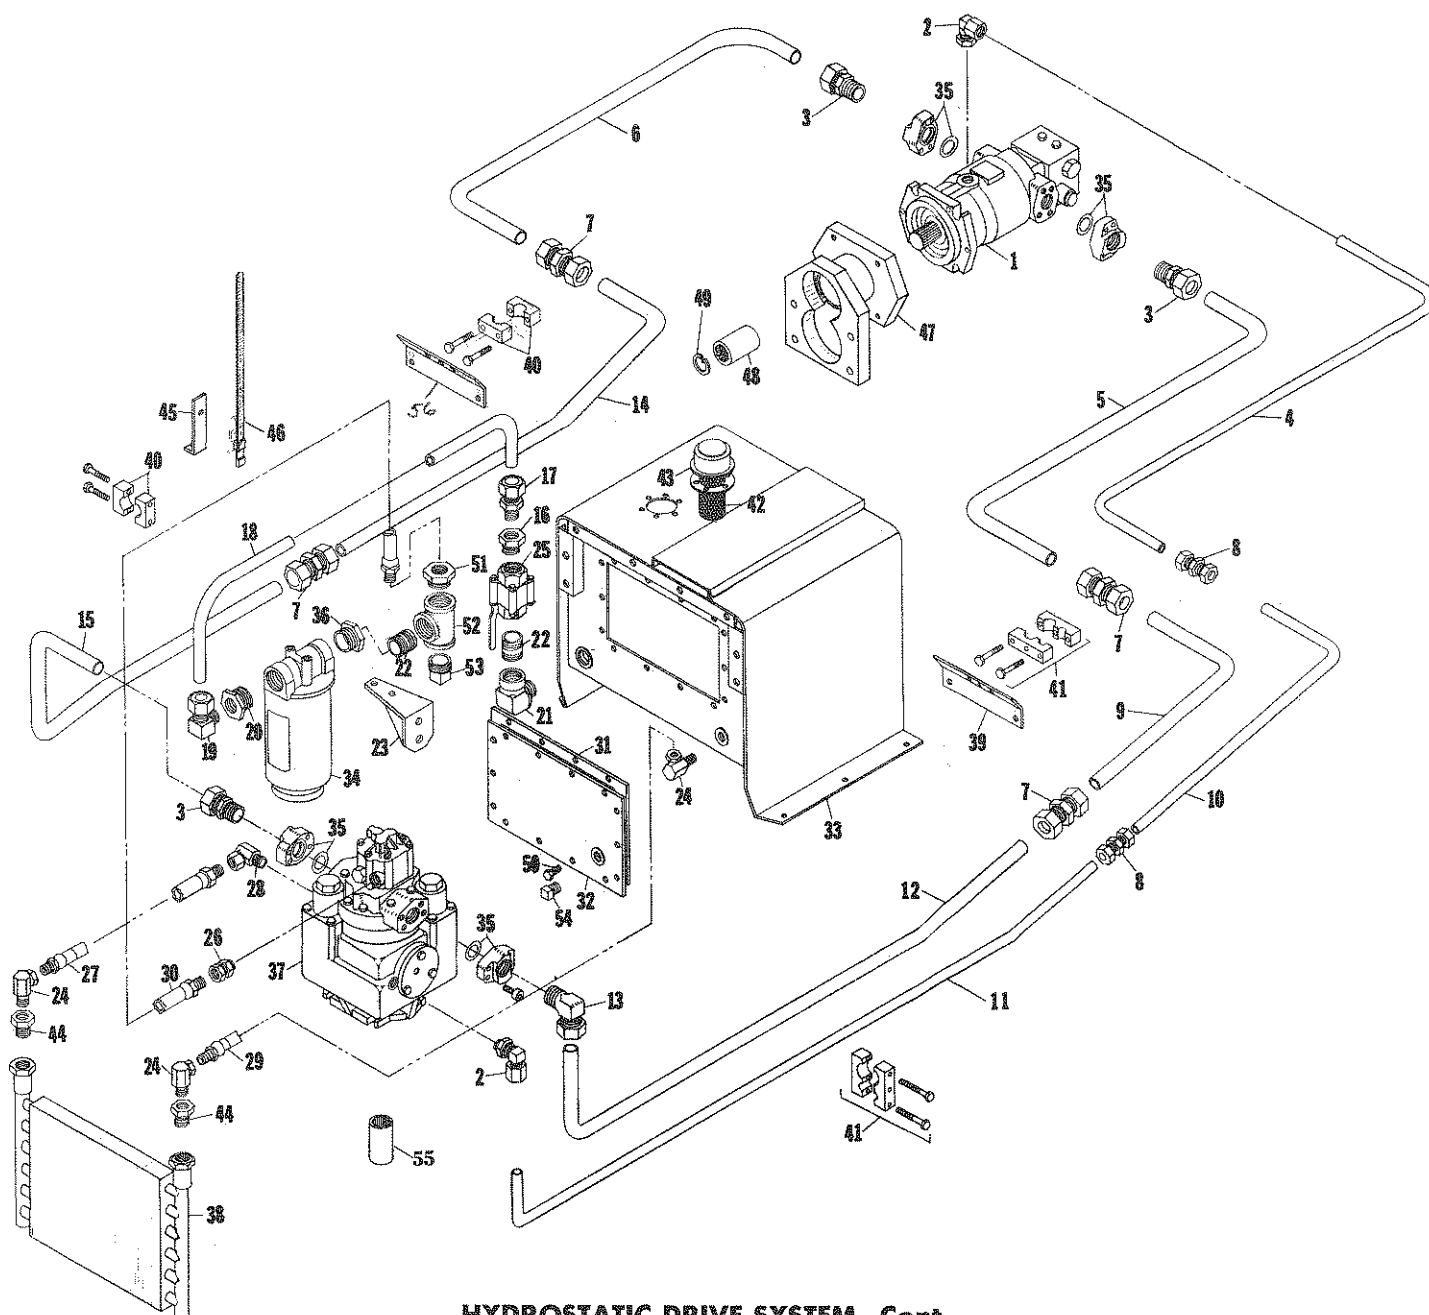


HYDROSTATIC DRIVE SYSTEM—Cont.

REF. NO.	PART NO.	DESCRIPTION
41	F 6266	Dual tube clamp
42	F 6267	Screen for hydraulic tank filler
43	F 6268	Filler cap for hydraulic tank
44		1/2" x 3/4" NPT reducer bushing
45	F 6433	Oil cooler hose clamp bracket
46	F 6580	Nylon tie strap, large
47	F 6358	Hydrostatic motor adapter bracket
48	F 6579	Shaft coupling, 21 involute with snap ring groove
49	F 6518	Snap ring, internal, 125
50		5/16" x 3/4" NC cap screw, 14 used
51		1/2" x 1" NPT reducer bushing
52		1" NPT tee
53		1" NPT plug
54		1/2" NPT plug
55	F 6341	Shaft coupling, 21 involute

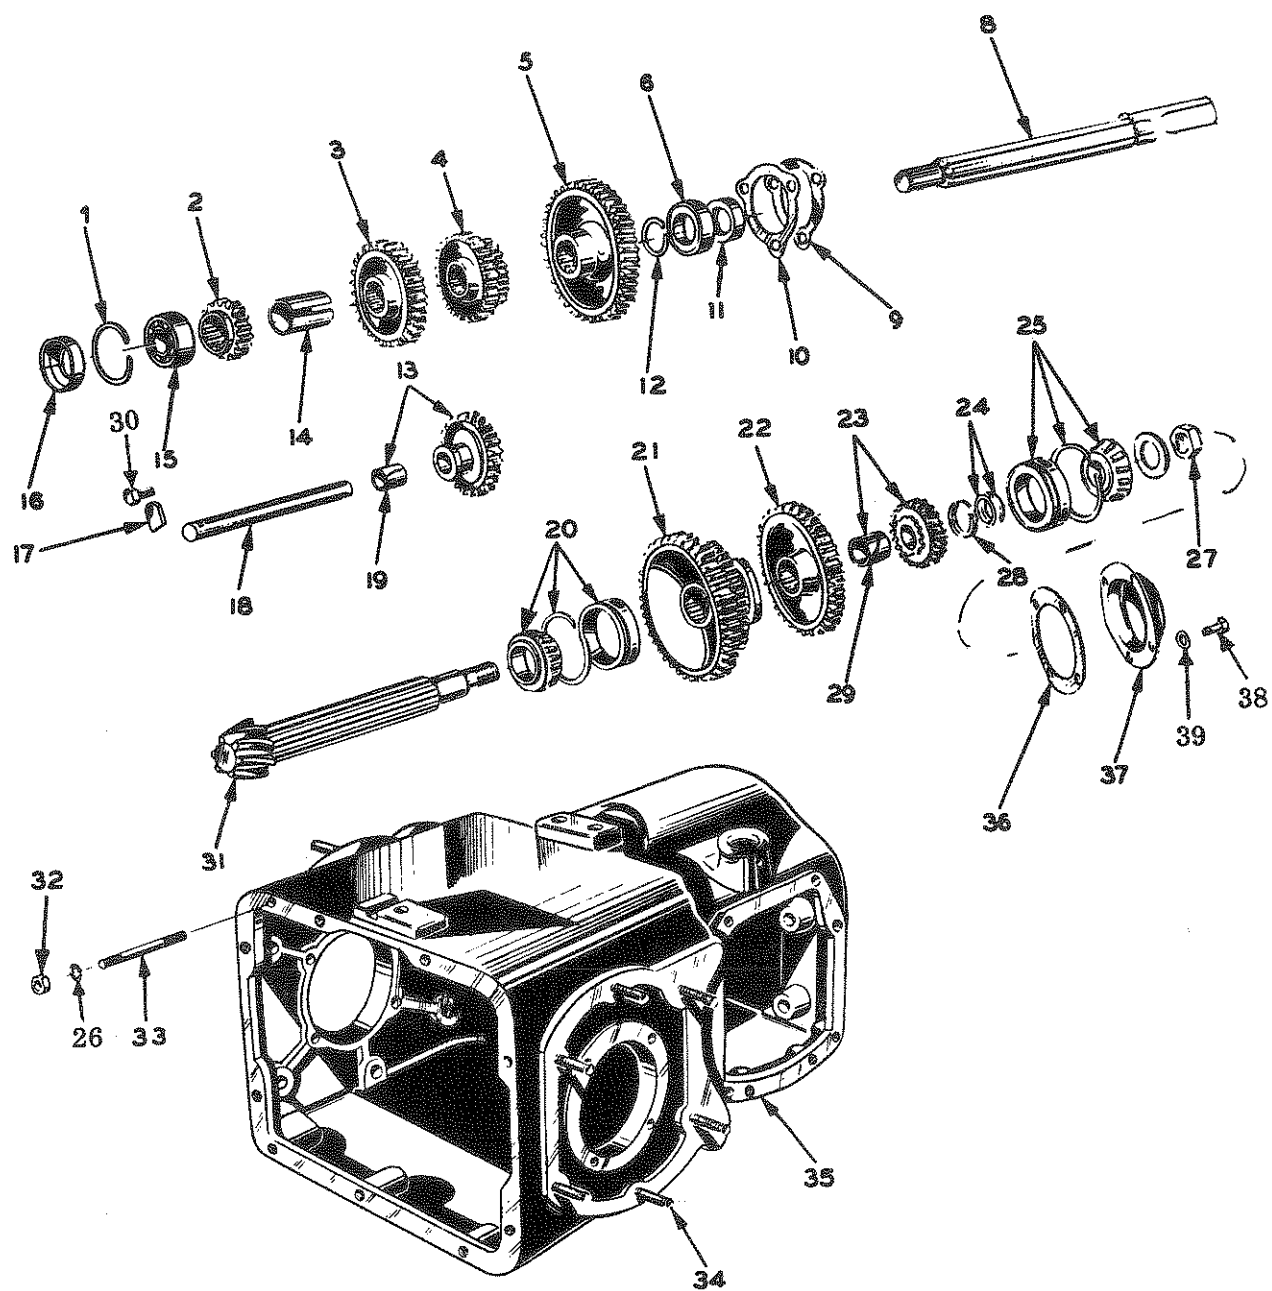


TRANSMISSION ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5301	Mainshaft rear bearing snap ring
2	F 5302	Mainshaft 1st gear
3	F 5303	Mainshaft 3rd gear
4	F 5304	Mainshaft 2nd and reverse gear
5	F 5305	Mainshaft 4th gear
6	F 5306	Mainshaft front bearing
8	F 6357	Transmission shaft for hydraulic motor
9	F 5307	Mainshaft front bearing cap gasket
10	F 5308	Mainshaft front bearing cap shim (.004)
	F 5309	Mainshaft front bearing cap shim (.007)
	F 5310	Mainshaft front bearing cap shim (.010)
11	F 5156	Clutch and mainshaft front oil seal
12	F 5312	Mainshaft locating snap ring
13	F 5313	Reverse idler gear assembly - includes Item #19
14	F 5314	Mainshaft 1st and 3rd gear spacer
15	F 5306	Mainshaft rear bearing
16	F 5316	Mainshaft rear bearing oil cup
17	F 5317	Reverse idler lock
18	F 5318	Reverse idler shaft
19	F 5319	Reverse idler gear bushing
20	F 5320	Pinion shaft rear bearing
21	F 5321	Pinion shaft 1st and 3rd gear
22	F 5322	Pinion shaft 2nd and reverse gear
23	F 5323	Pinion shaft 4th gear assembly - includes Item #29
24	F 5324	Pinion shaft front bearing shim (.003)
	F 5325	Pinion shaft front bearing shim (.005)
	F 5326	Pinion shaft front bearing shim (.010)
25	F 5327	Pinion shaft front bearing
26		P.T.O. locating stud nut spring lock washer, 3/8"
27	F 5329	Pinion shaft front bearing adjusting nut
28	F 5332	Pinion shaft front bearing spacer
29	F 5331	Reverse idler gear bushing
30		Reverse idler shaft lock screw, 3/8" x 5/8" N.C. Cap screw
31	F 5330	Pinion shaft - includes Item #47, Page 16
32		P.T.O. locating stud nut, 3/8" N. F. hex
33		P.T.O. locating stud, 3/8" x 1-1/2" N.F. N.C. stud
34		Axle studs, 9/16" x 6" N.C. C.S. w/9/16" spring lock washer (12 used)
35	F 5858	Transmission case
36	F 5333	Pinion shaft front bearing cap gasket
37	F 5334	Pinion shaft front bearing cap
38		Pinion shaft front bearing cap screw, 3/8" x 1" N.C. Cap screw (6 used)
39		Pinion shaft front bearing cap screw lock washer, 3/8" spring, (6 used)
	F 5942	Transmission & differential assy. for fabricated axle housings

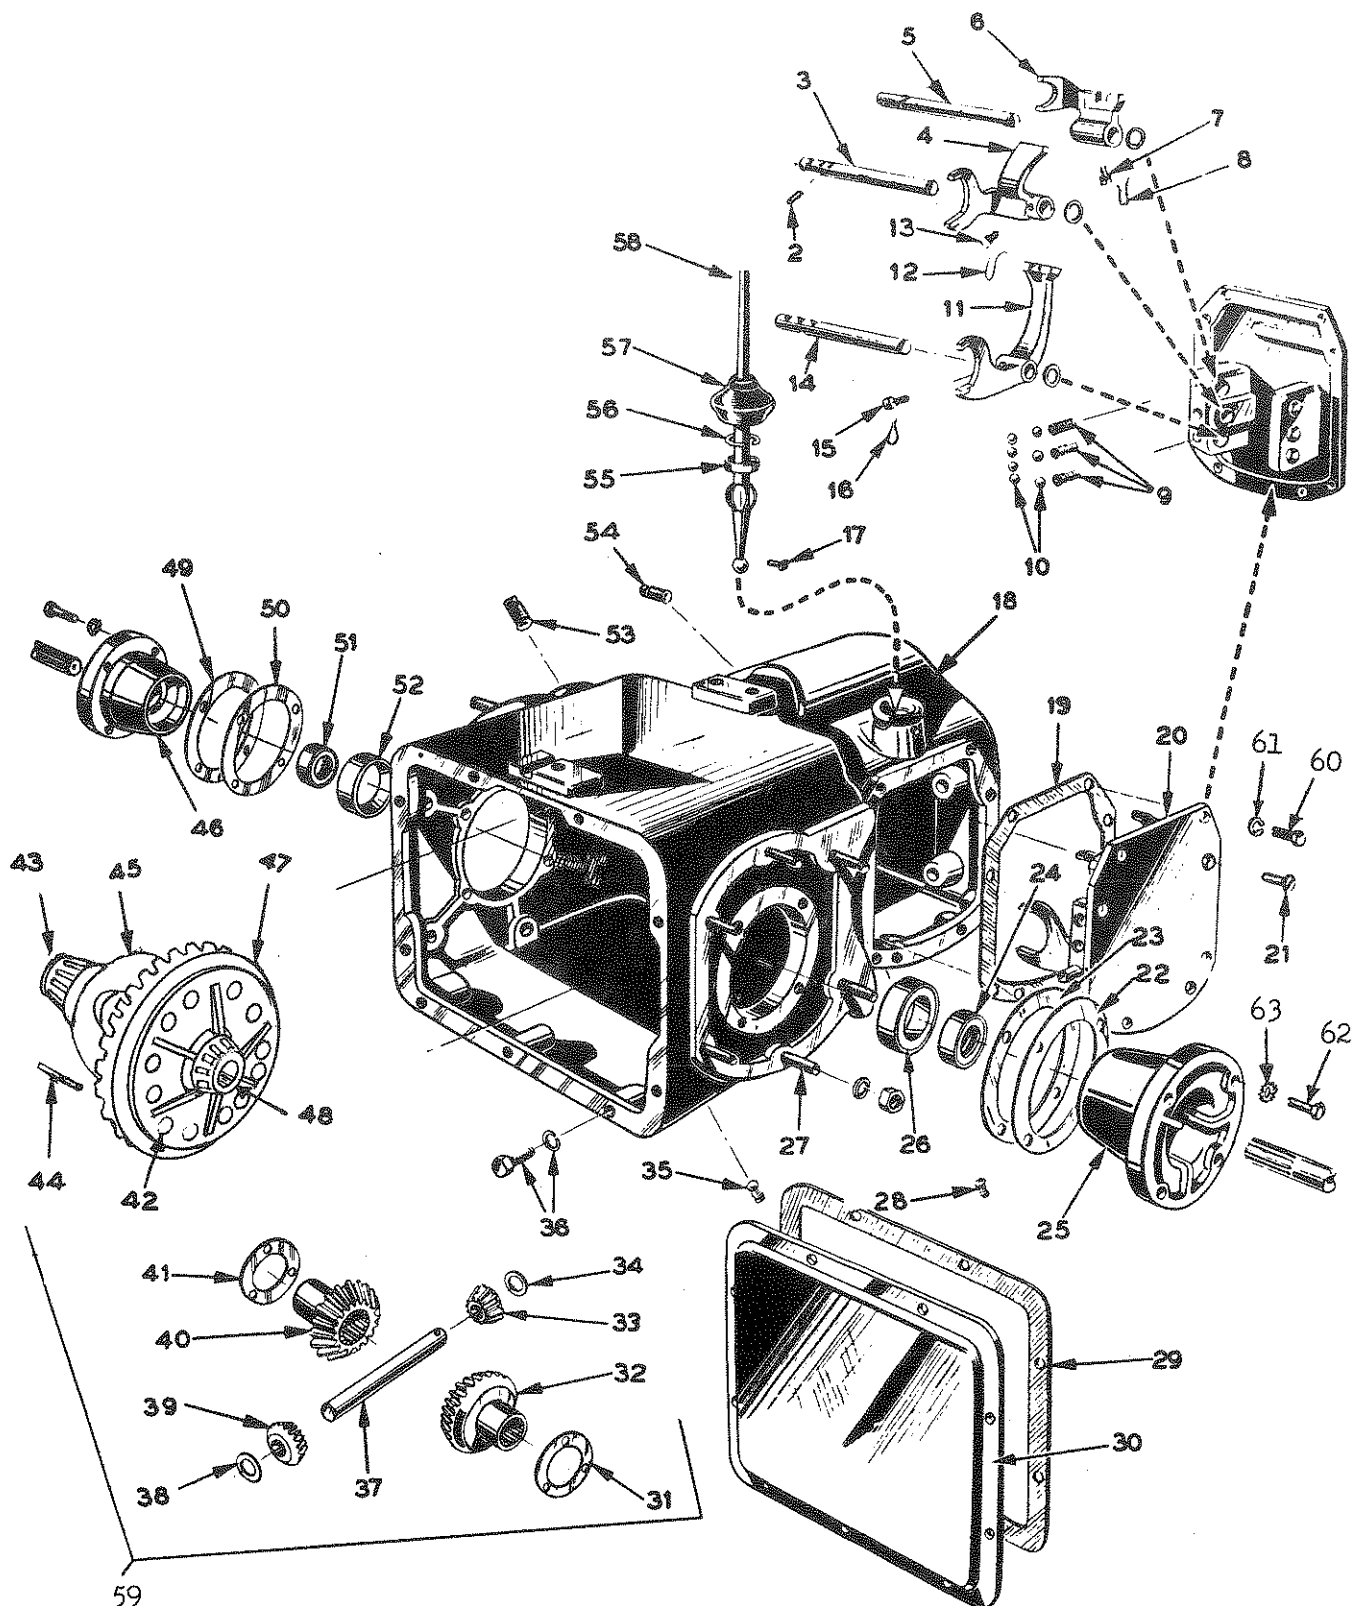


DIFFERENTIAL ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
2	F 5341	Interlock cross pin
3	F 5342	2nd and 4th shift rail
4	F 5343	2nd and 4th shift fork
5	F 5344	Reverse shift rail
6	F 5345	Reverse shift fork
7	F 5346	Shift fork lock screw
8	F 5347	Shift fork lock screw lock wire
9	F 5348	Mesh lock spring
10	F 5349	Mesh lock ball
11	F 5360	1st and 3rd shift fork
12	F 5347	Lock screw lock wire
13	F 5346	Lock screw
14	F 5351	1st and 3rd shift rail
15	F 5346	Lock screw
16	F 5347	Lock wire
17	F 5352	Pivot pin
18	F 5858	Transmission case
19	F 5353	Control cover gasket
20	F 5354	Control cover
21		Control cover screw, 3/8" x 1", F.H. Machine bolt
22	F 5356	Differential bearing carrier shim (.004)
23	F 5357	Differential bearing carrier shim (.010)
24	F 5358	Differential bearing carrier oil seal
25	F 5359	Differential bearing carrier assembly - includes Item 24
26		Differential bearing cup - See Item #43
27		Axle stud, 9/16" x 6" N.C.C.S. w/9/16" spring lockwasher
28		Drain plug, 1/2" pipe
29	F 5401	P.T.O. housing gasket
30	F 5402	Differential cover plate
31	F 5403	Differential side gear thrust washer
32	F 5404	Differential side gear
33	F 5405	Differential pinion gear
34	F 5406	Differential pinion gear thrust washer
35		Drain plug, 1/2" pipe
36		P.T.O. housing screw and spring lock washer, 3/8" x 1", N.C. Cap Screw w/ 3/8" washer (8 used)
37	F 5408	Differential pinion pin
38	F 5406	Differential pinion gear thrust washer
39	F 5405	Differential pinion gear
40	F 5404	Differential side gear
41	F 5403	Differential side gear thrust washer
42	F 5409	Ring gear rivet (12 used)
43	F 5410	Differential bearing (includes Item #26)
44	F 5411	Differential pinion pin lock pin
45	F 5412	Differential case
46	F 5359	Differential bearing carrier assembly (includes Item #51)
47	F 5330	Ring gear (includes Item #31, illustration page 13)
48	F 5410	Differential bearing (includes Item #52)
49	F 5357	Differential bearing carrier shim (.010) (A.R.)
50	F 5356	Differential bearing carrier shim (.004) (2 used)
51	F 5358	Differential carrier oil seal
52		Differential bearing cup (See item #43)
53		Filler plug, 1" pipe
54		Filler plug, 1/2" pipe
55	F 5414	Shift lever pivot washer
56	F 5415	Shift lever pivot washer ring
57	F 5416	Shift lever dust cover
58	F 6133	Shift lever on transmission
59	F 5350	Ring, pinion and differential assembly - Includes items 31, 32, 33, 34, 37, 38, 39, 40, 41, 42, 44, 45, 47 and item 31 on page 14)
60		Control cover screw, 3/8" x 1", N.C. Cap screw
61		Control cover screw spring lockwasher, 3/8"
62		Differential bearing carrier screw, 1/2" x 1-1/2" N.C. Cap screw
63		Differential bearing carrier screw spring lockwasher, 1/2"
	F 5942	Transmission and differential assy. for fabricated axle housing

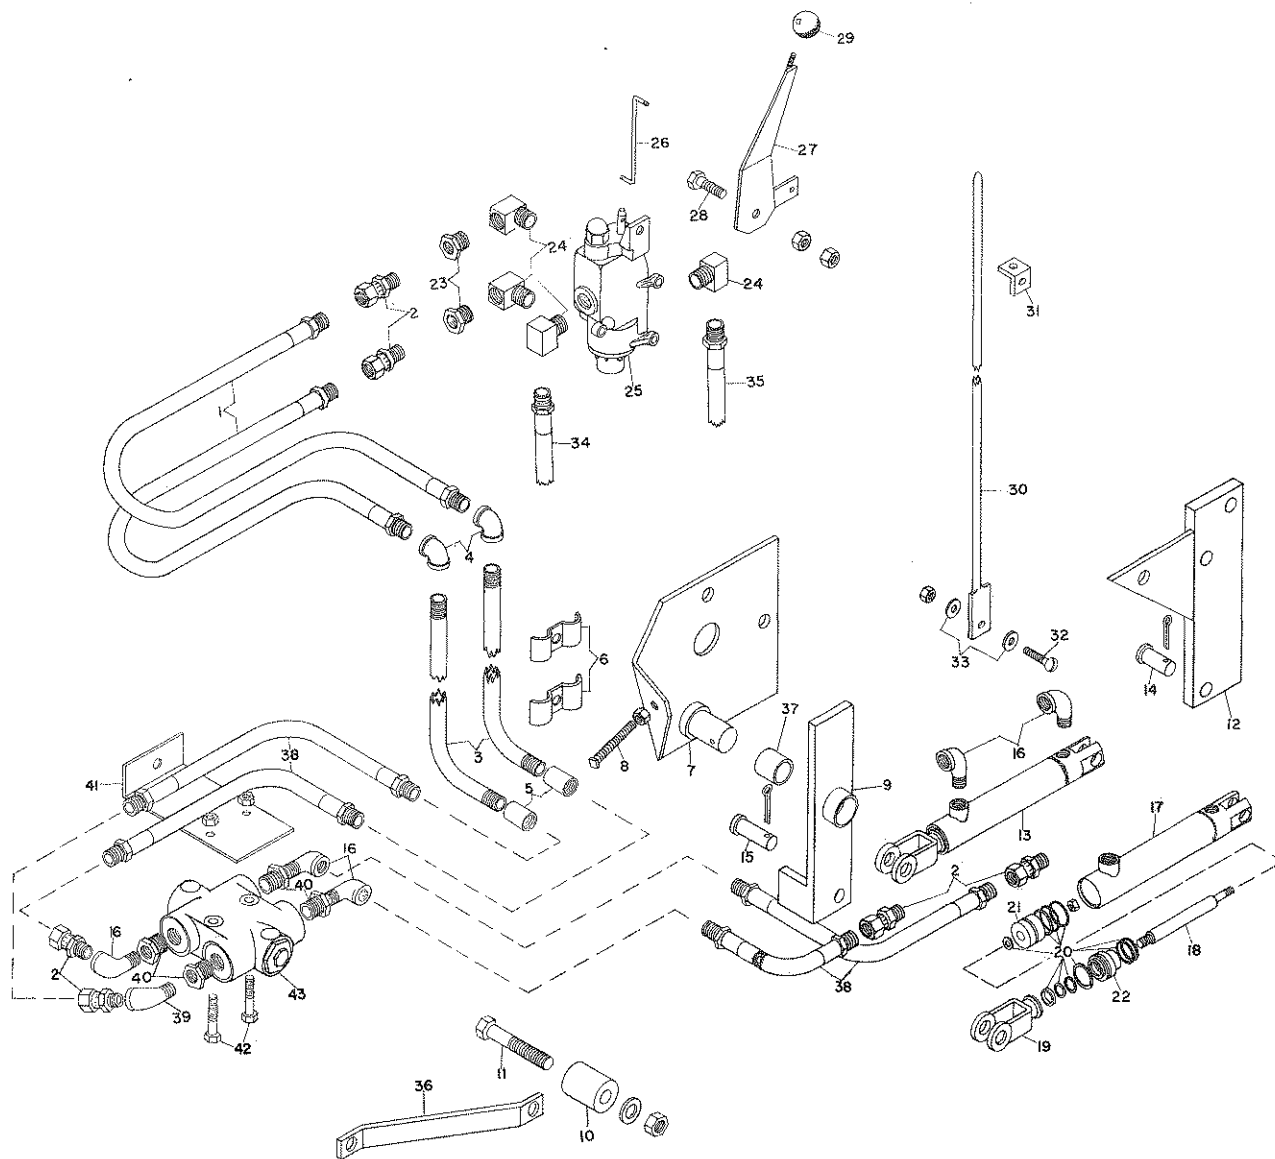


HYDRAULIC LIFT FOR PICKUP

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 136	Pressure hose, 24" (2 used)	22	F 6086	Cylinder head
2	FT 107	Union swivel	23	FT 103	1/4" x 3/8" pipe bushing
3	F 6020	Ridgid hydraulic tube (2 used)	24	F 6037	Brass elbow for F 5952 valve (4 used)
4	FT 82	1/4" pipe elbow	25	F 5952	Hydraulic control valve
5		1/4" pipe coupling	26	F 6451	Link rod
6	F 6021	Clamp for F 6020 tubes (2 used)	27	F 6018	Hydraulic pickup control lever
7	F 6015	Pickup ram plate	28		5/16" x 1-1/4" N.C. cap screw
8		1/2" x 2-1/2" square head set screw	29	F 5554	Knob for control lever
9	F 6014	Forward pivot arm	30	F 6087	Pickup lift indicator rod
10	F 6016	Lift bumper on pickup	31	F 6088	Guide for F 6087
11		1/2" x 3-3/4" N.F.H.T. cap screw	32		1/4" x 1-1/4" R.H. stove bolt
12	F 6164	Anchor strap	33		1/4" flat washer
13	F 5953	Hydraulic cylinder for pickup	34	FT 169	Pressure hose (pump to valve) 35"
14	F 5049	1/2" x 1-3/8" pin	35	FT 150	Pressure hose (valve to bypass) 90"
15	F 1323	1/2" x 1-3/4" pin	36	F 6134	Lift bumper brace
16	FT 18	1/4" street elbow	37	F 7247	Bushing, 7/8" x 1" x 1"
17	F 6082	Tube assembly only	38	FT 163	Pressure hose 13-1/4"
18	F 6083	Piston rod	39		1/4" 45° street elbow
19	F 6084	Clevis	40		1/2" to 1/4" pipe bushing
20	F 6051	Ring kit for F 5953 cylinder	41	F 6369	Mounting bracket for lockout valve
21	F 6085	Piston	42		5/16" x 2-1/4" N.C. cap screw
			43	F 6188	Lockout valve

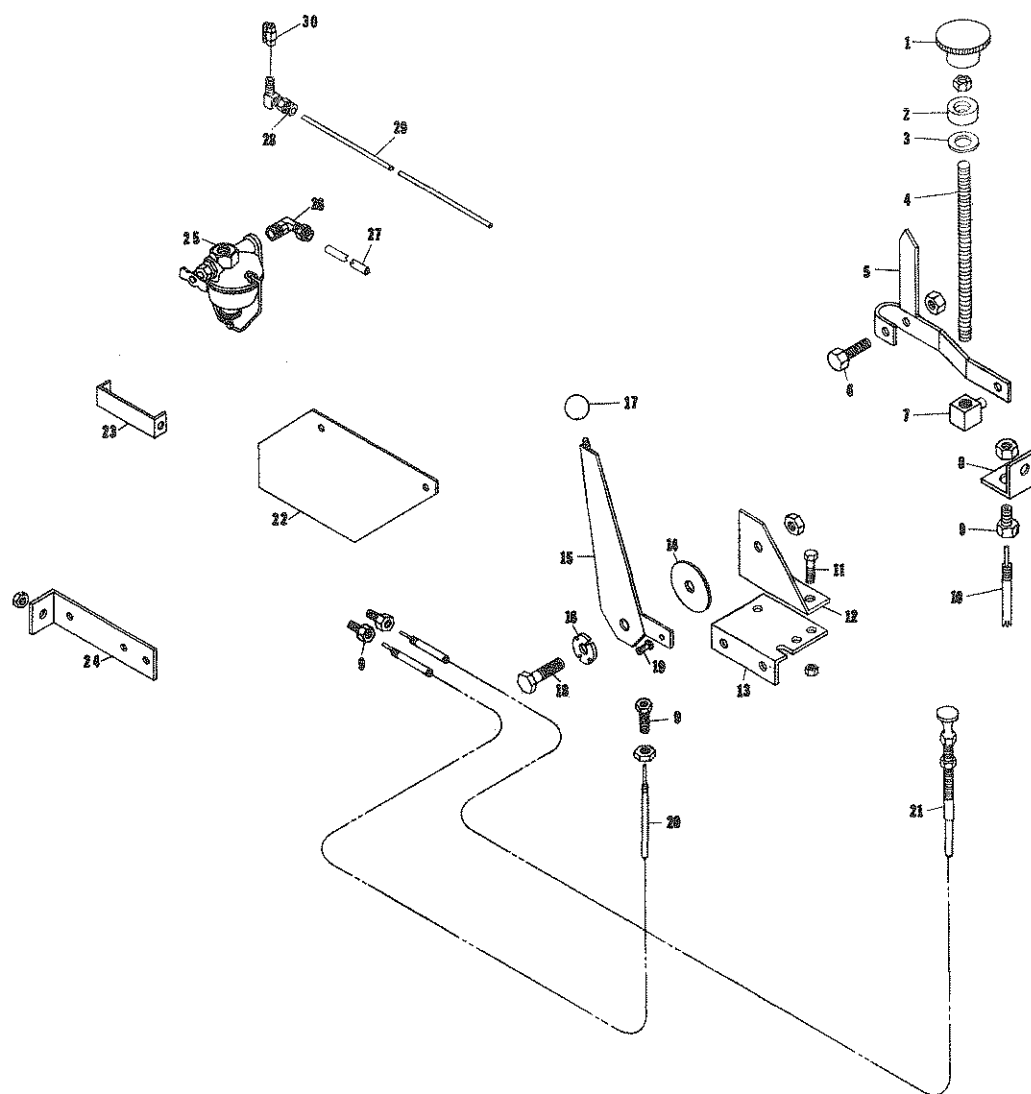


THROTTLE CONTROL TENSION CONTROL AND FUEL LINE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1007	Control knob	16	F 5551	Conical washer
2	F 1131	Thrust bearing	17	F 5554	Knob for throttle lever
3		3/8" flat washer	18		5/16" x 1" NC cap screw
4	F 6042	Adjusting rod	19	F 5545	Swivel fastener
5	F 6041	Tension control indicator	20	F 6442	Throttle control conduit, 124", diesel
6		5/16" x 2" NC cap screw		F 6581	Throttle control conduit, 114", gasoline
7	F 1005	Adjusting stud nut		F 6443	Throttle control wire, 134" diesel
8	F 6050	Anchor angle for tension control conduit		F 6582	Throttle control wire, 124", gasoline
9	F 5559	Beach nut w/nut and washer	21	F 5069	Engine shut off control assembly, diesel
10	F 6048	Tension control conduit, 91"		F 5069	Engine choke assembly, gasoline
	F 6049	Tension control wire, 96"	22	F 6583	Throttle wire bracket, gasoline
11		5/16" x 3/4" NC cap screw	23	F 6584	Throttle wire bracket, gasoline
12	F 6036	Top bracket for throttle lever	24	F 6585	Throttle wire bracket, diesel
13	F 6035	Base bracket for throttle lever	25	F 5299	Fuel sediment bowl and shut off valve
14	F 1003	Friction disc	26	F 6444	Elbow fitting for fuel supply line
15	F 6034	Throttle lever	27	F 6445	Fuel supply line, 5/16" x 13'3"
			28	F 6446	Elbow fitting for fuel return line, diesel
			29	F 6447	Fuel return line, 3/16" x 12', diesel
			30	F 6586	Shut off valve, fuel line, 6800 WH

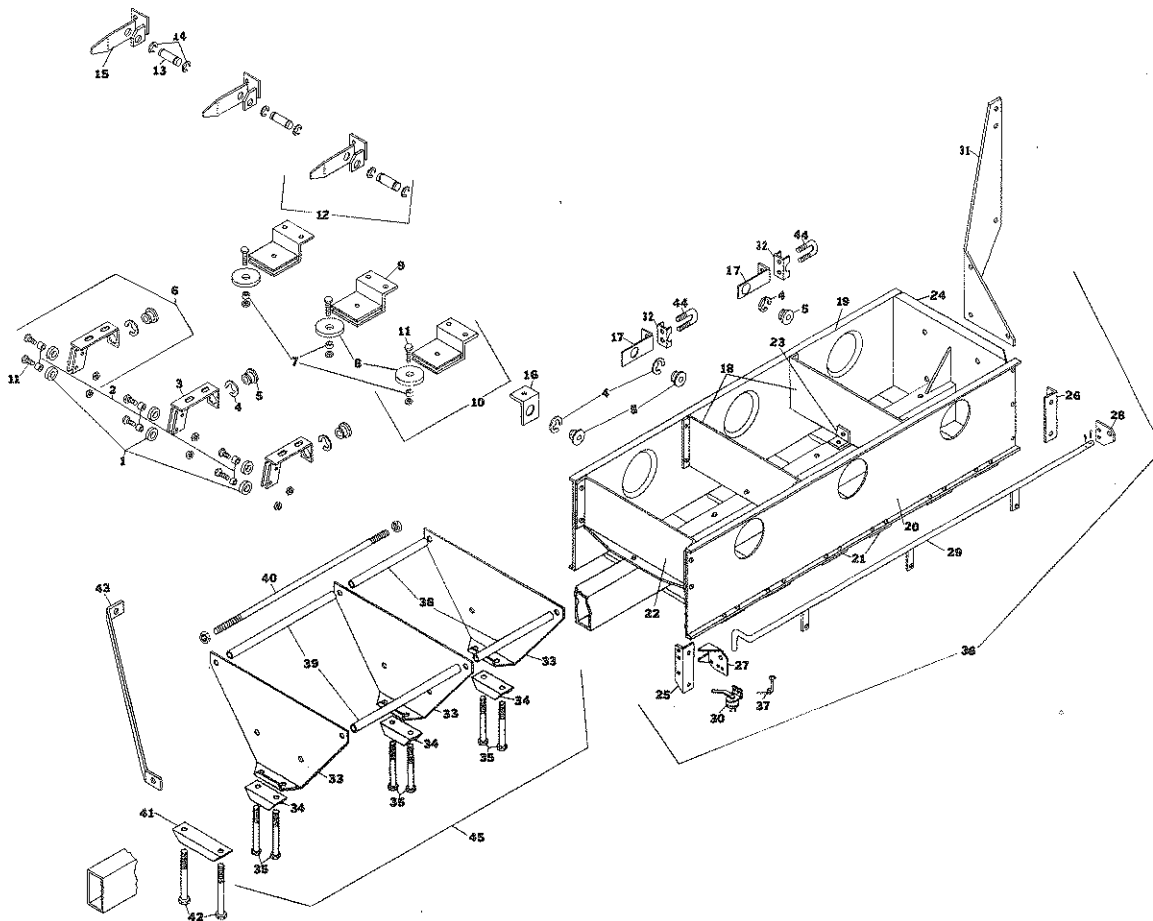


WIRE BOX AND WIRE GUIDE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 4014	Roller for wire guide and needle	26	F 7645	Angle for wire alarm mounting bracket, R.H.
2	F 4015	Bushing for F 4014 Roller	27	F 4191	Mounting bracket for wire alarm rod L. H.
3	F 4222	Wire guide frame only, lower rear	28	F 4190	Mounting bracket for wire alarm rod R. H.
4	F 857	Snap ring for F 856 bushing	29	F 7608	Rod for wire alarm, 3-tie
5	F 856	Wire guide bushing		F 7716	Rod for wire alarm, 2-tie
6	F 4205	Wire guide complete, lower rear	30	F 946	Switch only for wire alarm
7	F 4068	Bushing for F 4067 roller	31	F 6589	Wire box mounting bracket, R.H.
8	F 4067	Roller, lower front wire guide	32	F 6322	Tube clamp
9	F 4223	Wire guide frame only, lower front	33	F 6317	Wire carrier end plate
10	F 4069	Wire guide complete, lower front	34	F 6318	Wire carrier clamp
11		Bolt with lock nut 1/4" x 1" N.C.C.S.	35		3/8" x 5" NC cap screw
12	F 4203	Upper wire guide complete with pin	36	F 7515	6 compartment wire box complete w/braces and harness
13	F 4204	Upper wire guide wear pin		F 7717	4 compartment wire box complete w/braces and harness
14	F 5159	Snap ring for wear pin	37	F 4210	Spring for wire alarm rod
15	F 4225	Upper wire guide bracket only	38	F 7231	Pipe spacer, wire carrier, short
16	F 4163	Wire guide bracket, rear	39	F 7232	Pipe spacer, wire carrier, long
17	F 6314	Wire guide bracket	40	F 4206	Stay bolt, wire carrier, 2-tie
18	F 7637	Wire box divider		F 7230	Stay bolt, wire carrier, 3-tie
19	F 7638	Wire box side, front, 3 tie	41	F 6319	Wire box clamp
	F 7981	Wire box side, front, 2 tie	42		1/2" x 5-1/2" NC cap screw
20	F 7639	Wire box side, rear, 3 tie	43	F 6320	Brace for L.H. wire box mount
	F 7982	Wire box side, rear, 2 tie	44	F 6321	Tube clamp "U" bolt
21	F 7640	Wire box bottom slats	45	F 4228	Wire carrier complete
22	F 7641	Wire box end, left			
23	F 7642	Wire box divider angle			
24	F 7643	Wire box base with end plate			
25	F 7644	Angle for wire alarm mounting bracket, L. H.			

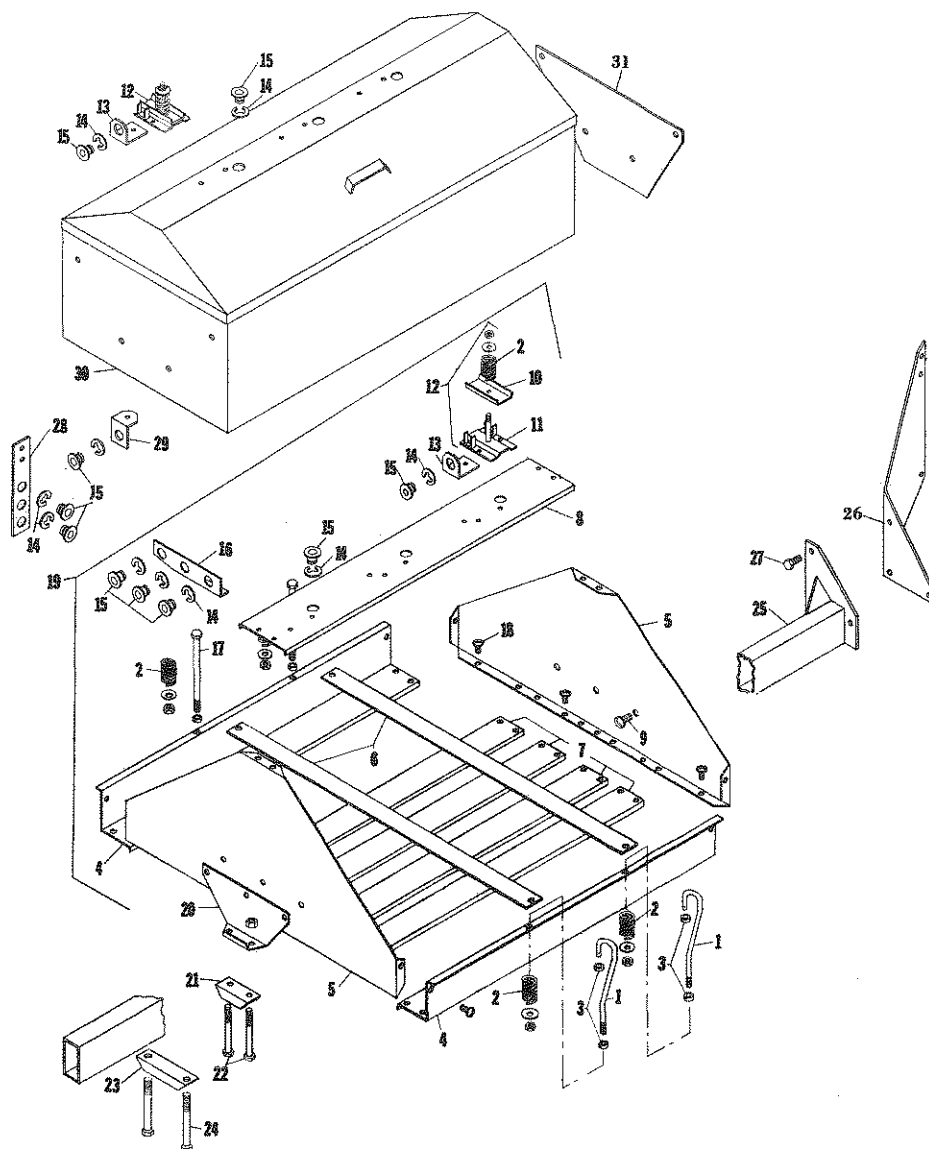


TWINE BOX AND TWINE GUIDES

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7927	Twine box hold down rod	18		1/4" x 1/2" flat head machine screw
2	F 7541	Spring, twine box hold down	19	F 7936	Twine box complete, 9 compartment large plastic twine ball, Ref. 1-18
3	F 7928	Set collar, 5/16"	20	F 7937	Twine box bracket
4	F 7929	Twine box side	21	F 6318	Twine box clamp
5	F 7930	Twine box end	22		3/8" x 5" NC cap screw
6	F 7931	Twine box hold down	23	F 6319	Twine box base tube clamp, L. H.
7	F 7932	Twine box bottom	24		1/2" x 5-1/2" NC cap screw
8	F 7933	Twine box top section	25	F 7938	Twine box base tube with end mount
9		3/8" x 3/4" flat head machine screw	26	F 6589	Twine box mounting bracket, R.H.
10	F 7890	Twine tension top	27		3/8" x 1" NC cap screw
11	F 7889	Twine tension base	28	F 524	Holder for twine guide bushing, 2-tie
12	F 7891	Twine tension assembly		F 525	Holder for twine guide bushing, 3-tie
13	F 7898	Twine guide bushing holder	29	F 7973	Holder for needle twine guide bushing
14	F 857	Snap ring for F 856	30	F 7974	Twine box 8 compartment, dome lid
15	F 856	Twine guide bushing	31	F 6317	Twine box bracket
16	F 7934	Twine guide bracket			
17	F 7935	Twine box hold down bolt			

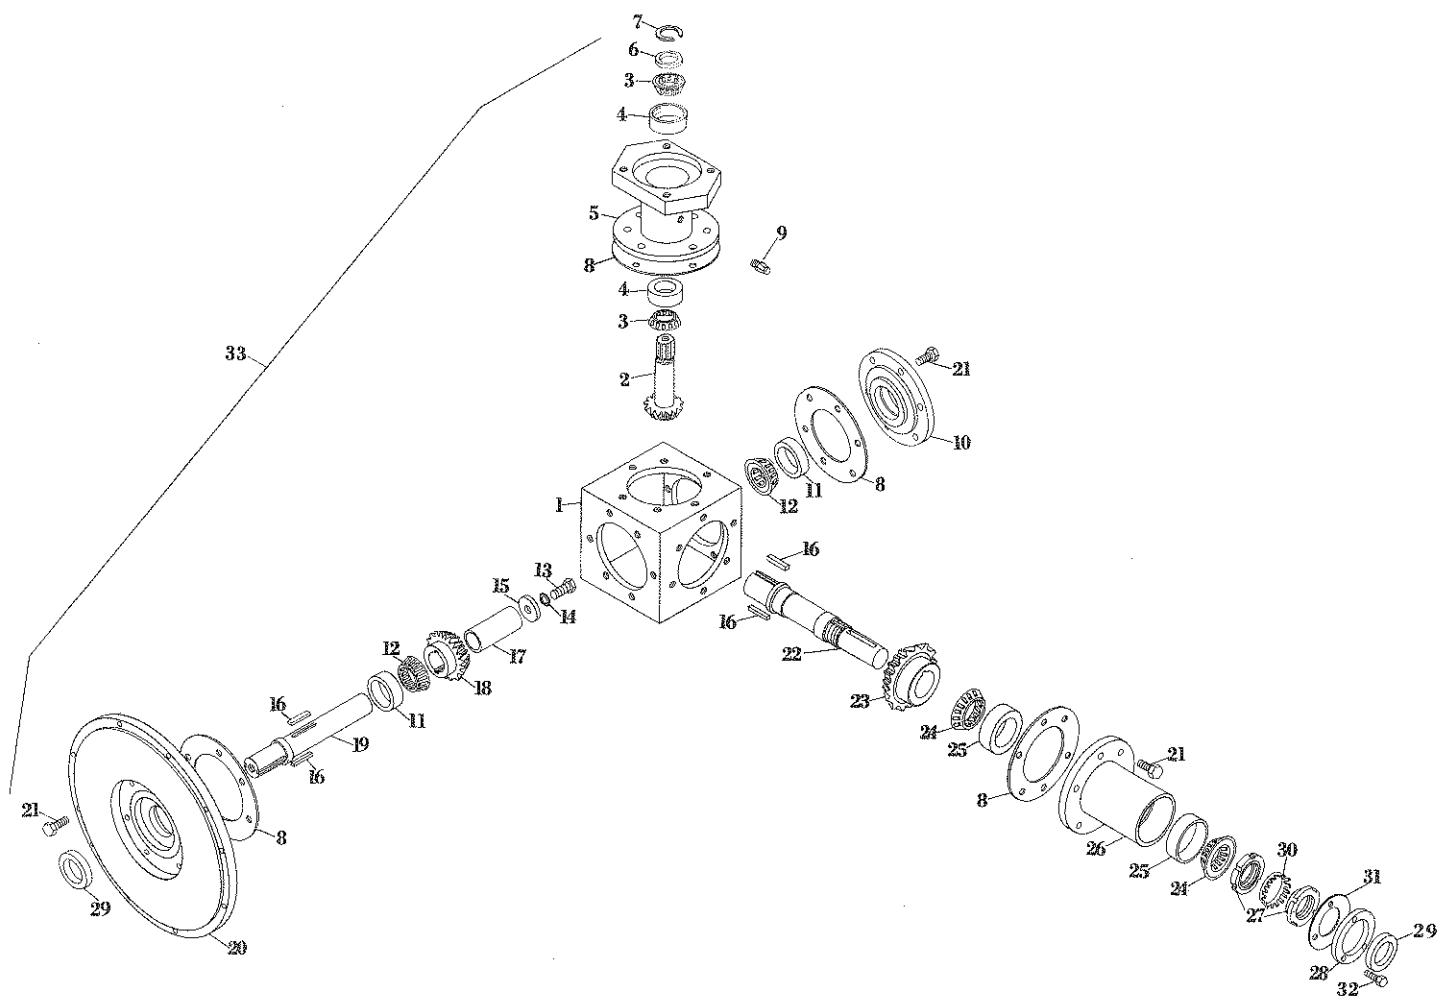


DRIVE GEAR BOX

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6528	Gear box main housing	15	F 6360	Bearing washer, 2 used
2	F 6529	Pinion & shaft, pump drive	16		3/8" x 3/8" square key, 2", 2 used
3	F 1083	Bearing cone, pump drive shaft	17	F 6536	Gear and bearing spacer
4	F 1084	Bearing cup, pump drive shaft	18	F 6530	Pinion, pulley drive
5	F 6567	Gearbox pump drive housing	19	F 6531	Pinion and gear shaft, I.H.C.
6	F 6339	Spacer, pump drive shaft	20	F 6532	Gear box motor bell housing
7	F 1087	Snap ring, pump drive shaft	21		1/2" x 1-1/4" NC cap screw
8	F 6407	Shim, gearbox housing, .005"	22	F 6533	Shaft, pulley drive
	F 6408	Shim, gearbox housing, .010"	23	F 6537	Gear, pulley drive
	F 6409	Shim, gearbox housing, .015"	24	F 5446	Bearing cone
9	F 1720	Vent, 1/8" p.t.	25	F 5445	Bearing cup
10	F 6568	Bearing end cap	26	F 6569	Gear box pulley drive housing
11	F 6534	Bearing cup, #3420	27	F 1245	Nut, bearing take-up
12	F 6535	Bearing cone, #3490	28	F 6354	Seal holder
13		1/2" x 1-3/4" NF cap screw	29	F 6355	Seal
14		1/2" star lock washer	30	F 1246	Lock washer
			31	F 6340	Gasket, seal holder
			32		1/4" x 3/4" socket head cap screw
			33	F 6484	Gear Box complete

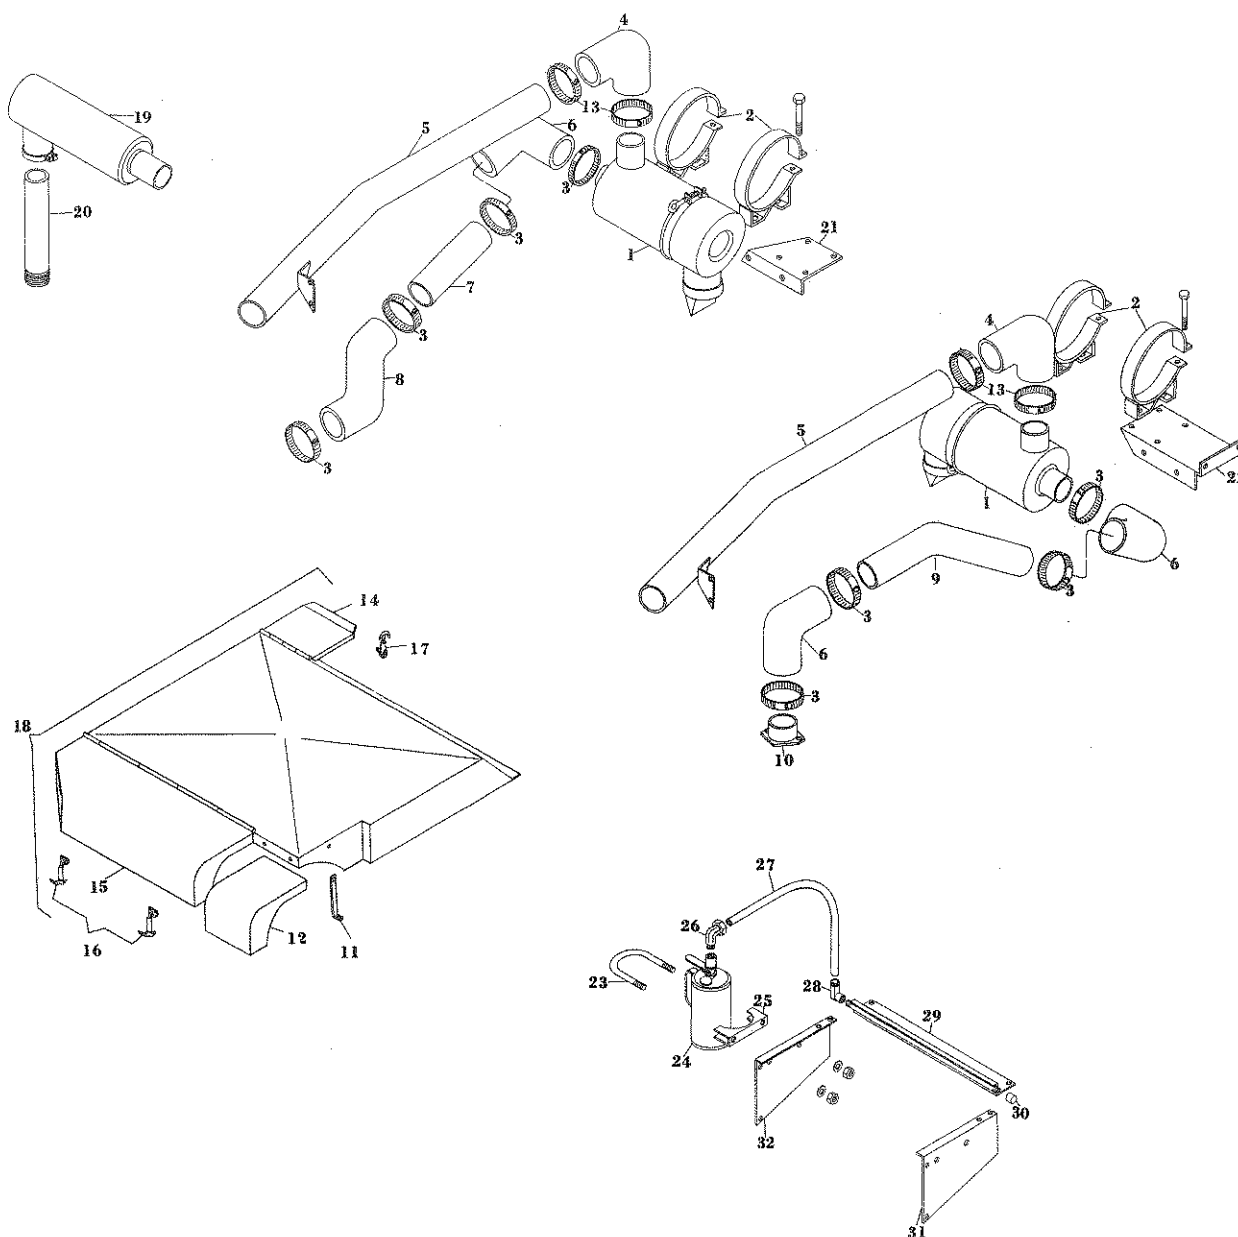


PICKUP SHIELD, EXHAUST AND AIR CLEANER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6306	Air Cleaner Complete	18	F 5971	Shield over pickup complete
	F 6452	Filter element for F 6306 air cleaner	19	F 1706	Muffler
2	F 6307	Air cleaner band	20	F 6312	Exhaust pipe, gasoline
3	F 6308	Air cleaner hose clamp, 4-4559		F 6526	Exhaust pipe, diesel
4	F 6310	Rubber elbow, 2-1/2"	21	F 6540	Air cleaner bracket, gasoline
5	F 6520	Air intake tube	22	F 6541	Air cleaner bracket, diesel
6	F 6521	Rubber elbow, 2-1/4", diesel	23	F 7721	"U" bolt, grease can
7	F 6522	Air cleaner pipe, gasoline	24	F 7671	Oil can with pump
8	F 6523	Rubber elbow, gasoline		F 7729	Spring for pump
9	F 6524	Intake elbow, diesel	25	F 7722	Grease can clamp base
10	F 6525	Intake manifold adapter, diesel	26	F 7676	90° nylon elbow
11	F 6105	Mounting bracket for shield, left side	27	F 6542	Nylon tubing
12	F 6104	Front section of pickup shield (not hinged)	28	F 7677	90° brass elbow
13	F 6560	Air cleaner hose clamp, 4-4560	29	F 6543	Bull gear luber, 2 tie
14	F 7635	Tool box lid		F 6544	Bull gear luber, 3 tie
15	F 6111	Access door for F 5971 shield	30		1/4" pipe cap
16	F 7166	Catch for access door	31	F 6545	Bull gear shield, L.H.
17	F 853	Catch for tool box cover	32	F 6546	Bull gear shield, R.H.

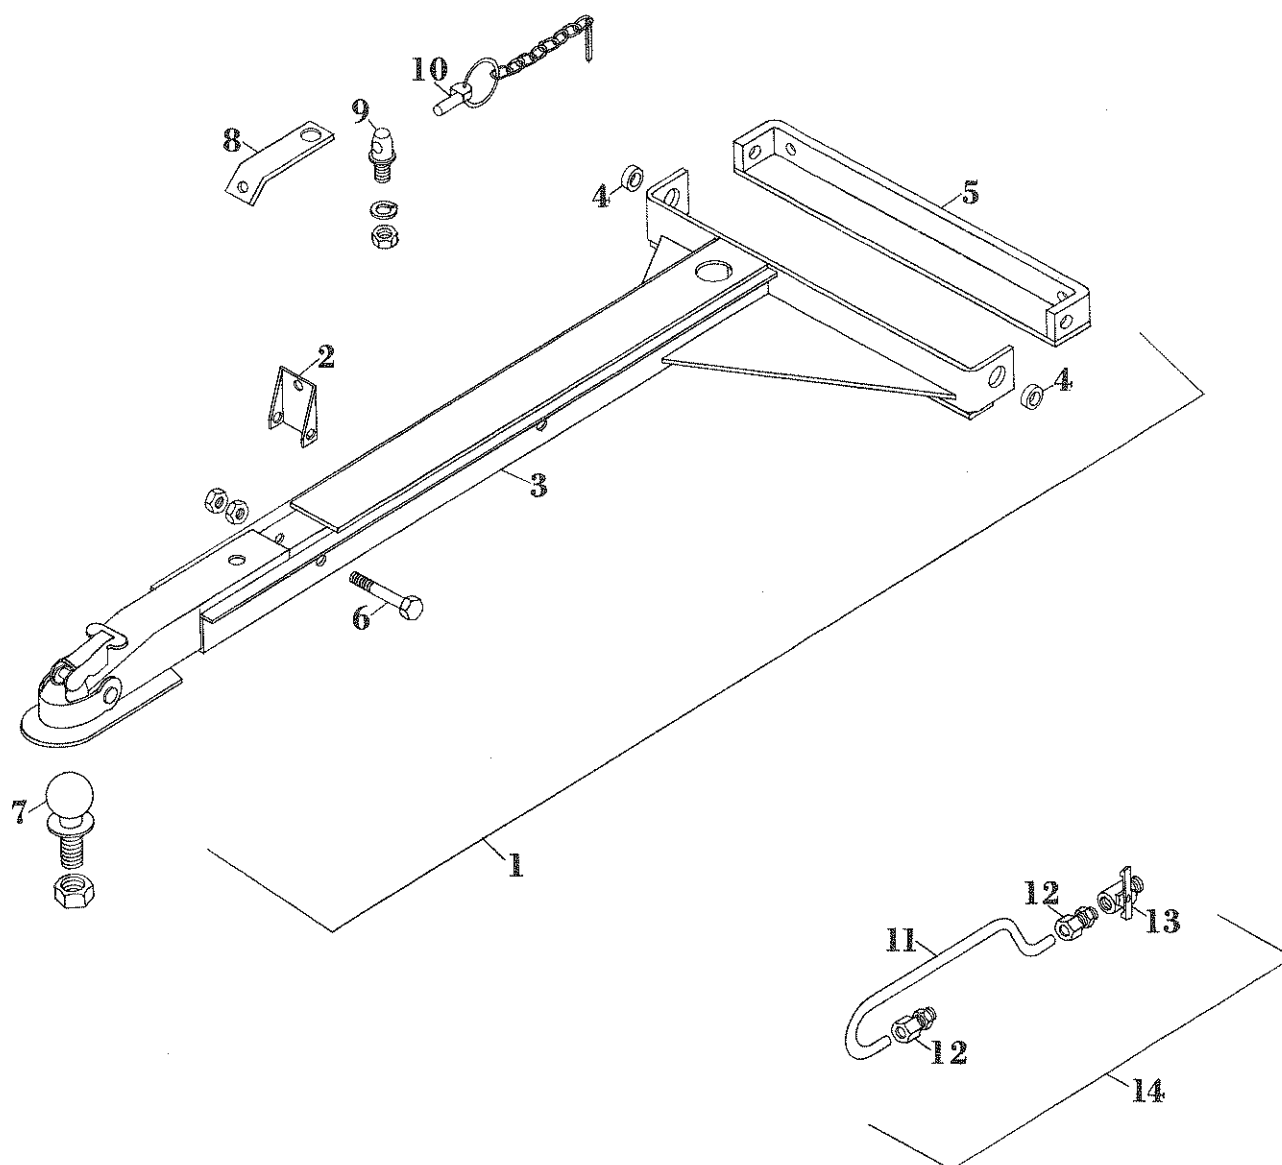

TOW BAR

REF. NO.	PART NO.	DESCRIPTION
1	F 6598	Tow bar complete
2	F 6590	Tow bar latch
3	F 6591	Tow bar
4	F 6592	Bushing, two used
5	F 6593	Tow bar bracket
6		9/16" x 3-1/4" NC cap screw
7	F 6594	Hitch ball, 2", 3/4 shank
8	F 6588	Tow bar anchor strap
9	F 6595	Anchor strap pin
10	F 6596	Snap pin
11	F 6512	Steering cylinder bypass tube
12	F 6513	Tube fitting, 7205 x 4 x 4 WH
13	F 6514	Shutoff valve, 6825 WH
14	F 6515	Steering cylinder bypass assembly for towing

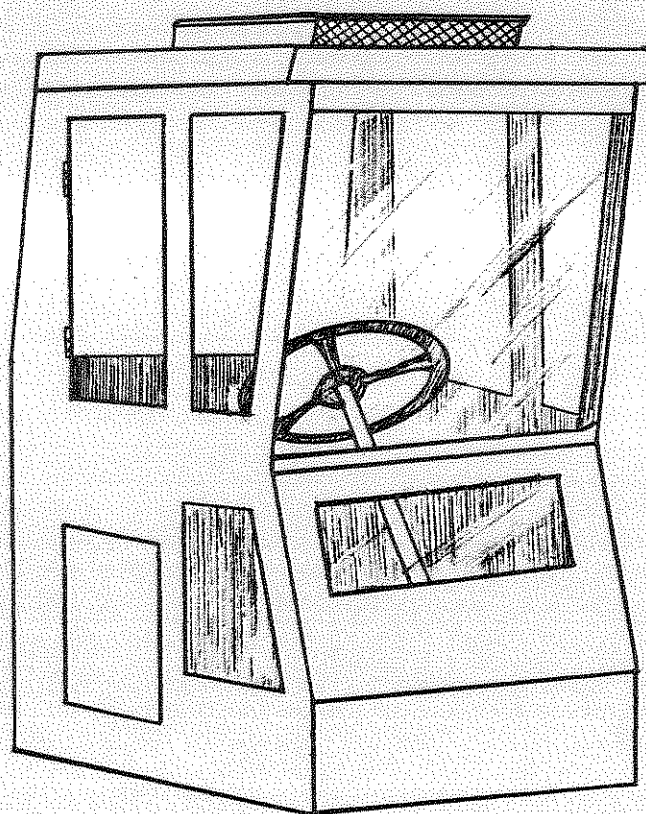

EXCEL CAB

PART NO.	DESCRIPTION
F 6135	Glass, 1/4" tinted safety, top front
F 6136	Glass, 1/4" tinted safety, rear
F 6137	Glass, 1/4" tinted safety, bottom front
F 6138	Glass, 1/4" tinted safety, right and left top front
F 6139	Glass, 1/4" tinted safety, right rear
F 6140	Glass, 1/4" tinted safety, bottom right front
F 6141	Glass, 1/4" tinted safety, door
F 6142	Rubber moulding for setting glass (sold by the foot)
F 6143	Window adjusting arm
F 6144	Door handle, inside
F 6145	Door handle, outside
F 6146	Door latch w/handles
F 6148	Air deflector
F 6150	Floor mat
F 6394	Dome light
F 6395	Blower switch
F 6153	Rear view mirror
F 6396	Blower fan, 12 volt
F 6155	Door latch
F 6397	Blower filter
F 6398	Domelite switch

PARTS NOT ILLUSTRATED

F 6597	Anchor plate, pickup spring
F 6600	Radiator for IHC engine
F 6601	Radiator shroud
F 6602	Radiator hose, upper
F 6603	Radiator hose, lower, gasoline

