


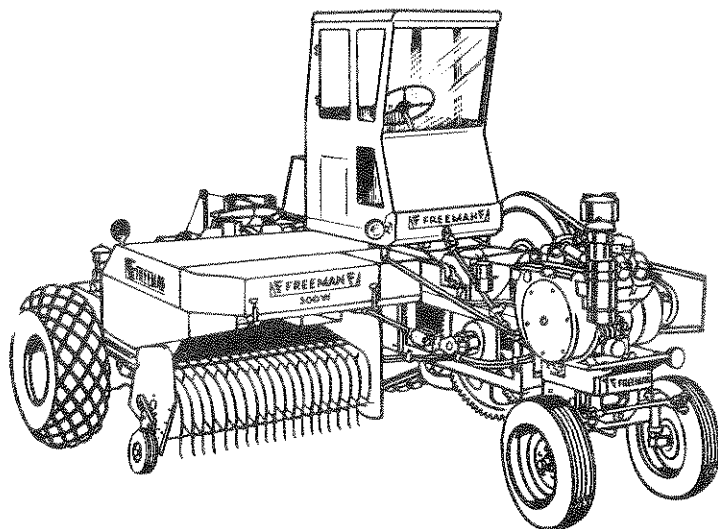

1968 PARTS LIST

for

Model 200W and 200T

Model 300W and 300T

Model 330W

SELF-PROPELLED BALER

TWIN ENGINE

PB00000170

Table of Contents

	Page
Front Axle & Engine Mount	2
Operators Platform	3
Steering Shafts & Operators Seat	4
Rear Clutch & Brake Controls	5
Front & Rear Throttle Controls	6
Front Clutch & Gear Shift Controls	7
Rear Engine Clutch	8
Rear Axle & Final Drive	9
Rear Axle & Final Drive (continued)	10
Steering Gear Assembly	12
Transmission Assembly	14
Differential Assembly	16
Hydraulic Lift For Pickup	17
Steering Pump Assembly	18
Electric System	19
Shields	20
Bale Weight Indicator & Hydraulic Pump Mount And Drive	21
Wire & Twine Box	22
Items Different From Pull Type	23
Excel Cab	24

Index

Twin Engine Self-Propelled Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 96	 23	F 5039	 2	F 5348	 16	F 5721	 2
F 181	 5, 7	F 5040	 2	F 5349	 16	F 5759	 2
F 214	 2, 10	F 5048	 7	F 5350	 16	F 5760	 2
F 215	 2	F 5049	 7, 17	F 5351	 16	F 5763	 10
F 268	 21	F 5055	 7	F 5352	 16	F 5765	 2
F 285	 22	F 5069	 6	F 5353	 16	F 5769	 2
F 399	 22	F 5070	 6	F 5354	 16	F 5782	 10
F 462	 2	F 5075	 5	F 5356	 16	F 5783	 10
F 842	 22	F 5077	 6	F 5357	 16	F 5784	 10
F 853	 20	F 5080	 6	F 5358	 16	F 5785	 10
F 856	 22	F 5092	 6	F 5359	 16	F 5786	 10
F 857	 22	F 5145	 2	F 5360	 16	F 5788	 10
F 862	 19	F 5156	 8, 14	F 5362	 8	F 5790	 10
F 884	 2	F 5169	 7	F 5401	 16	F 5791	 10
F 934	 2	F 5170	 7	F 5402	 16	F 5792	 10
F 946	 19, 22	F 5179	 6	F 5403	 16	F 5793	 10
F 990	 21	F 5232	 6	F 5404	 16	F 5794	 10
F 994	 5, 6, 21	F 5233	 6	F 5405	 16	F 5795	 10
F 995	 6, 21	F 5234	 19	F 5406	 16	F 5796	 10
F 1003	 6	F 5235	 19	F 5408	 16	F 5797	 10
F 1005	 21	F 5236	 19	F 5409	 16	F 5798	 10
F 1007	 21	F 5237	 19	F 5410	 16	F 5799	 10
F 1131	 21	F 5268	 10	F 5411	 16	F 5800	 10
F 1323	 17	F 5269	 10	F 5412	 16	F 5801	 10
F 1461	 6	F 5270	 10	F 5414	 16	F 5803	 2
F 1497	 19	F 5275	 10	F 5415	 16	F 5806	 10
F 1499	 19	F 5276	 10	F 5416	 16	F 5808	 10
F 1624	 2	F 5299	 6	F 5438	 10	F 5809	 10
F 1625	 2	F 5301	 14	F 5445	 10	F 5812	 10
F 1626	 2	F 5302	 14	F 5446	 10	F 5813	 10
F 1627	 2	F 5303	 14	F 5452	 10	F 5814	 10
F 1628	 2	F 5304	 14	F 5457	 10	F 5815	 2
F 1644	 19	F 5305	 14	F 5483	 21	F 5824	 10
F 1645	 19	F 5306	 14	F 5499	 19	F 5826	 10
F 1653	 2	F 5307	 14	F 5501	 4	F 5827	 10
F 1654	 2	F 5308	 14	F 5502	 4	F 5828	 10
F 1689	 3	F 5309	 14	F 5505	 4	F 5829	 10
F 1691	 19	F 5310	 14	F 5531	 22	F 5830	 10
F 1720	 10	F 5312	 14	F 5532	 22	F 5831	 10
F 4014	 6, 21	F 5313	 14	F 5545	 6	F 5837	 10
F 4015	 6, 21	F 5314	 14	F 5547	 10	F 5840	 10
F 4067	 5, 6, 21, 22	F 5316	 14	F 5551	 6	F 5842	 19
F 4068	 5, 6, 21, 22	F 5317	 14	F 5554	 6, 17	F 5852	 2
F 4081	 10	F 5318	 14	F 5559	 6, 21	F 5853	 2
F 4115	 6	F 5319	 14	F 5561	 6	F 5854	 2
F 4191	 22	F 5320	 14	F 5578	 2	F 5856	 21
F 4195	 22	F 5321	 14	F 5596	 10	F 5858	 14, 16
F 4210	 5	F 5322	 14	F 5612	 21	F 5861	 6
F 4211	 22	F 5323	 14	F 5613	 21	F 5862	 6
F 5006	 2	F 5324	 14	F 5614	 21	F 5863	 6
F 5007	 2	F 5325	 14	F 5615	 4	F 5866	 4
F 5008	 2	F 5326	 14	F 5625	 21	F 5867	 4
F 5009	 2	F 5327	 14	F 5626	 2	F 5881	 4
F 5011	 4	F 5329	 14	F 5627	 2	F 5882	 4
F 5012	 4	F 5330	 14, 16	F 5630	 2	F 5883	 4
F 5013	 4	F 5331	 14	F 5632	 21	F 5884	 20
F 5016	 2	F 5332	 14	F 5633	 21	F 5885	 21
F 5017	 4	F 5333	 14	F 5635	 21	F 5887	 21
F 5018	 4	F 5334	 14	F 5648	 10	F 5890	 10
F 5019	 4	F 5341	 16	F 5650	 2	F 5891	 10
F 5023	 2	F 5342	 16	F 5663	 2	F 5892	 10
F 5025	 4	F 5343	 16	F 5689	 21	F 5893	 10
F 5031	 4	F 5344	 16	F 5703	 4	F 5894	 10
F 5032	 4	F 5345	 16	F 5705	 4	F 5895	 10
		F 5346	 16	F 5714	 2	F 5896	 10
		F 5347	 16	F 5720	 2	F 5897	 10

Index


Twin Engine
Self-Propelled Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 5898	 10	F 5990	 5	F 6070	 5, 7	F 6142	 24
F 5899	 10	F 5991	 5	F 6071	 7	F 6143	 24
F 5900	 10	F 5992	 7	F 6072	 7	F 6144	 24
F 5901	 10	F 5993	 8	F 6073	 7	F 6145	 24
F 5902	 10	F 5994	 8	F 6074	 7	F 6146	 24
F 5903	 10	F 5995	 8	F 6075	 8	F 6148	 24
F 5904	 10	F 5996	 8	F 6076	 8	F 6150	 24
F 5905	 10	F 6000	 3	F 6077	 5	F 6153	 24
F 5906	 22	F 6001	 3	F 6079	 4	F 6155	 24
F 5910	 10	F 6002	 4	F 6080	 4	F 6157	 22
F 5911	 22	F 6003	 4	F 6081	 4	F 6158	 21
F 5912	 22	F 6004	 4	F 6082	 17	F 6159	 7
F 5913	 10	F 6006	 19	F 6083	 17	F 6161	 10
F 5916	 23	F 6007	 21	F 6084	 17	F 6163	 17
F 5918	 4	F 6008	 21	F 6085	 17	F 6164	 17
F 5920	 4	F 6009	 21	F 6086	 17	F 6165	 3
F 5921	 4	F 6010	 21	F 6087	 17	F 6167	 20
F 5927	 21	F 6011	 3	F 6088	 17	F 6168	 23
F 5941	 19	F 6014	 17	F 6089	 6	F 6169	 6
F 5942	.. 14, 16	F 6015	 17	F 6090	 6	F 6170	 7
F 5943	 8	F 6016	 17	F 6091	 6	F 6171	 4
F 5944	 5	F 6018	 17	F 6092	 6	F 6172	 4
F 5945	 5	F 6020	 17	F 6093	 6	F 6173	 8
F 5946	 5	F 6021	 17	F 6094	 22	F 6174	 3
F 5947	 3	F 6022	 7	F 6095	 22	F 6175	 3
F 5948	 3	F 6023	 7	F 6096	 22	F 6176	 3
F 5949	 3	F 6024	 7	F 6097	 22	F 6177	 3
F 5950	 3	F 6025	 7	F 6098	 22	F 6178	 3
F 5951	 23	F 6026	 7	F 6099	 22	F 6179	 3
F 5952	 17	F 6027	 7	F 6100	 22	F 6182	 3
F 5953	 17	F 6028	 7	F 6101	 22	F 6183	 3
F 5954	 19	F 6029	 7	F 6102	 22	F 6184	 3
F 5955	 8	F 6030	 7	F 6103	 22	F 6185	 23
F 5956	 8	F 6032	 3	F 6104	 20	F 6186	 7
F 5957	 2	F 6033	 6	F 6105	 20	F 6187	 3
F 5958	 2	F 6034	 6	F 6106	 20	F 6188	 17
F 5959	.. 2, 21	F 6035	 6	F 6107	 20	F 6312	 23
F 5961	 19	F 6036	 6	F 6108	 20	F 6330	 2
F 5962	 23	F 6037	 17	F 6111	 20	F 6334	 2
F 5963	 23	F 6039	 19	F 6112	 21	F 6335	 2
F 5964	 23	F 6040	 19	F 6113	 21	F 6366	 2
F 5965	 23	F 6041	 21	F 6114	 19	F 6367	 2
F 5966	 23	F 6042	 21	F 6115	 19	F 6368	 2
F 5967	... 8, 14	F 6044	 6	F 6116	 19	F 6369	 17
F 5968	 8	F 6045	 6	F 6117	 19	F 6370	 3
F 5969	 20	F 6046	 6	F 6119	 21	F 6371	 19
F 5970	 20	F 6047	 6	F 6120	 21	F 6372	 19
F 5971	 20	F 6048	 21	F 6121	 21	F 6373	 21
F 5972	 20	F 6049	 21	F 6122	 21	F 6374	 21
F 5973	 4	F 6050	 21	F 6123	... 2, 21	F 6375	 21
F 5974	 4	F 6051	 17	F 6125	 23	F 6376	 21
F 5975	 4	F 6053	... 8, 10	F 6126	 6	F 6377	 21
F 5976	 8	F 6054	... 5, 7	F 6127	 6	F 6378	 21
F 5977	 6	F 6055	 5	F 6128	 4	F 6379	 22
F 5978	 19	F 6056	 10	F 6129	 4	F 6380	 22
F 5979	 5	F 6057	 5	F 6130	 4	F 6381	 22
F 5980	 5	F 6059	 8	F 6132	 10	F 6382	 22
F 5981	 5	F 6060	 8	F 6133	 16	F 6383	 22
F 5982	 5	F 6061	 3	F 6134	 17	F 6384	 22
F 5983	 5	F 6062	 20	F 6135	 24	F 6385	 22
F 5984	 5	F 6063	 6	F 6136	 24	F 6386	 23
F 5985	 6	F 6064	 3	F 6137	 24	F 6387	 23
F 5986	 6	F 6065	 3	F 6138	 24	F 6388	 23
F 5987	 6	F 6067	 3	F 6139	 24	F 6389	 23
F 5988	 6	F 6068	 3	F 6140	 24	F 6390	 23
F 5989	 5	F 6069	 3	F 6141	 24	F 6391	 23

Index


Twin Engine Self-Propelled Balers

PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.	PART NO.	PAGE NO.
F 6392	 23	F 5682898	.. 12	F 5686814	.. 12	F 5689695	.. 12
F 6393	 23	F 5684820	.. 12	F 5686815	.. 12	F 5689697	.. 12
F 6394	 24	F 5695355	.. 12	F 5686866	.. 12	F 5689698	.. 12
F 6395	 24	F 5685372	.. 12	F 5687182	.. 12	F 5689834	.. 12
F 6396	 24	F 5685706	.. 12	F 5687183	.. 12	F 5689836	.. 12
F 6397	 24	F 5685707	.. 12	F 5687184	.. 12	F 5690033	.. 12
F 6398	 24	F 5685708	.. 12	F 5687185	.. 12	F 5690698	.. 12
F 7010	 2	F 5685709	.. 12	F 5687186	.. 12	F 5690824	.. 18
F 7033	 10	F 5685710	.. 12	F 5687252	.. 12	F 5690832	.. 18
F 7034	 10	F 5685711	.. 12	F 5687277	.. 18	F 5790884	.. 4
F 7035	 10	F 5686526	.. 12	F 5687319	.. 18	F 5691895	.. 12
F 7095	... 5, 8	F 5686527	.. 12	F 5687785	.. 18	F 5695670	.. 18
F 7136	 22	F 5686539	.. 12	F 5687796	.. 18	F 5696151	.. 12
F 7166	 20	F 5686546	.. 12	F 5687898	.. 18	FD 24	 3
F 7236	 21	F 5686553	.. 4	F 5687958	.. 12	FT 18	 17
F 7247	 17	F 5686570	.. 12	F 5688034	.. 12	FT 53	 10
F 7550	 20	F 5686577	.. 12	F 5688065	.. 18	FT 82	 17
F 7608	 22	F 5686625	.. 12	F 5688066	18, 21	FT 103	 17
F 7635	 20	F 5686644	.. 18	F 5688072	.. 18	FT 107	 17
F 7648	 22	F 5686675	.. 18	F 5688079	.. 18	FT 136	 17
F 7707	 2	F 5686676	.. 18	F 5688081	.. 18	FT 150	 17
F 7742	 19	F 5686680	.. 18	F 5688752	.. 12	FT 163	 17
F 7743	 19	F 5686687	.. 18	F 5688765	.. 12	FT 169	 17
F 179839	.. 12	F 5686702	.. 18	F 5689021	.. 12	FT 208	 23
F 5682367	.. 18	F 5686719	.. 18	F 5689396	.. 18		

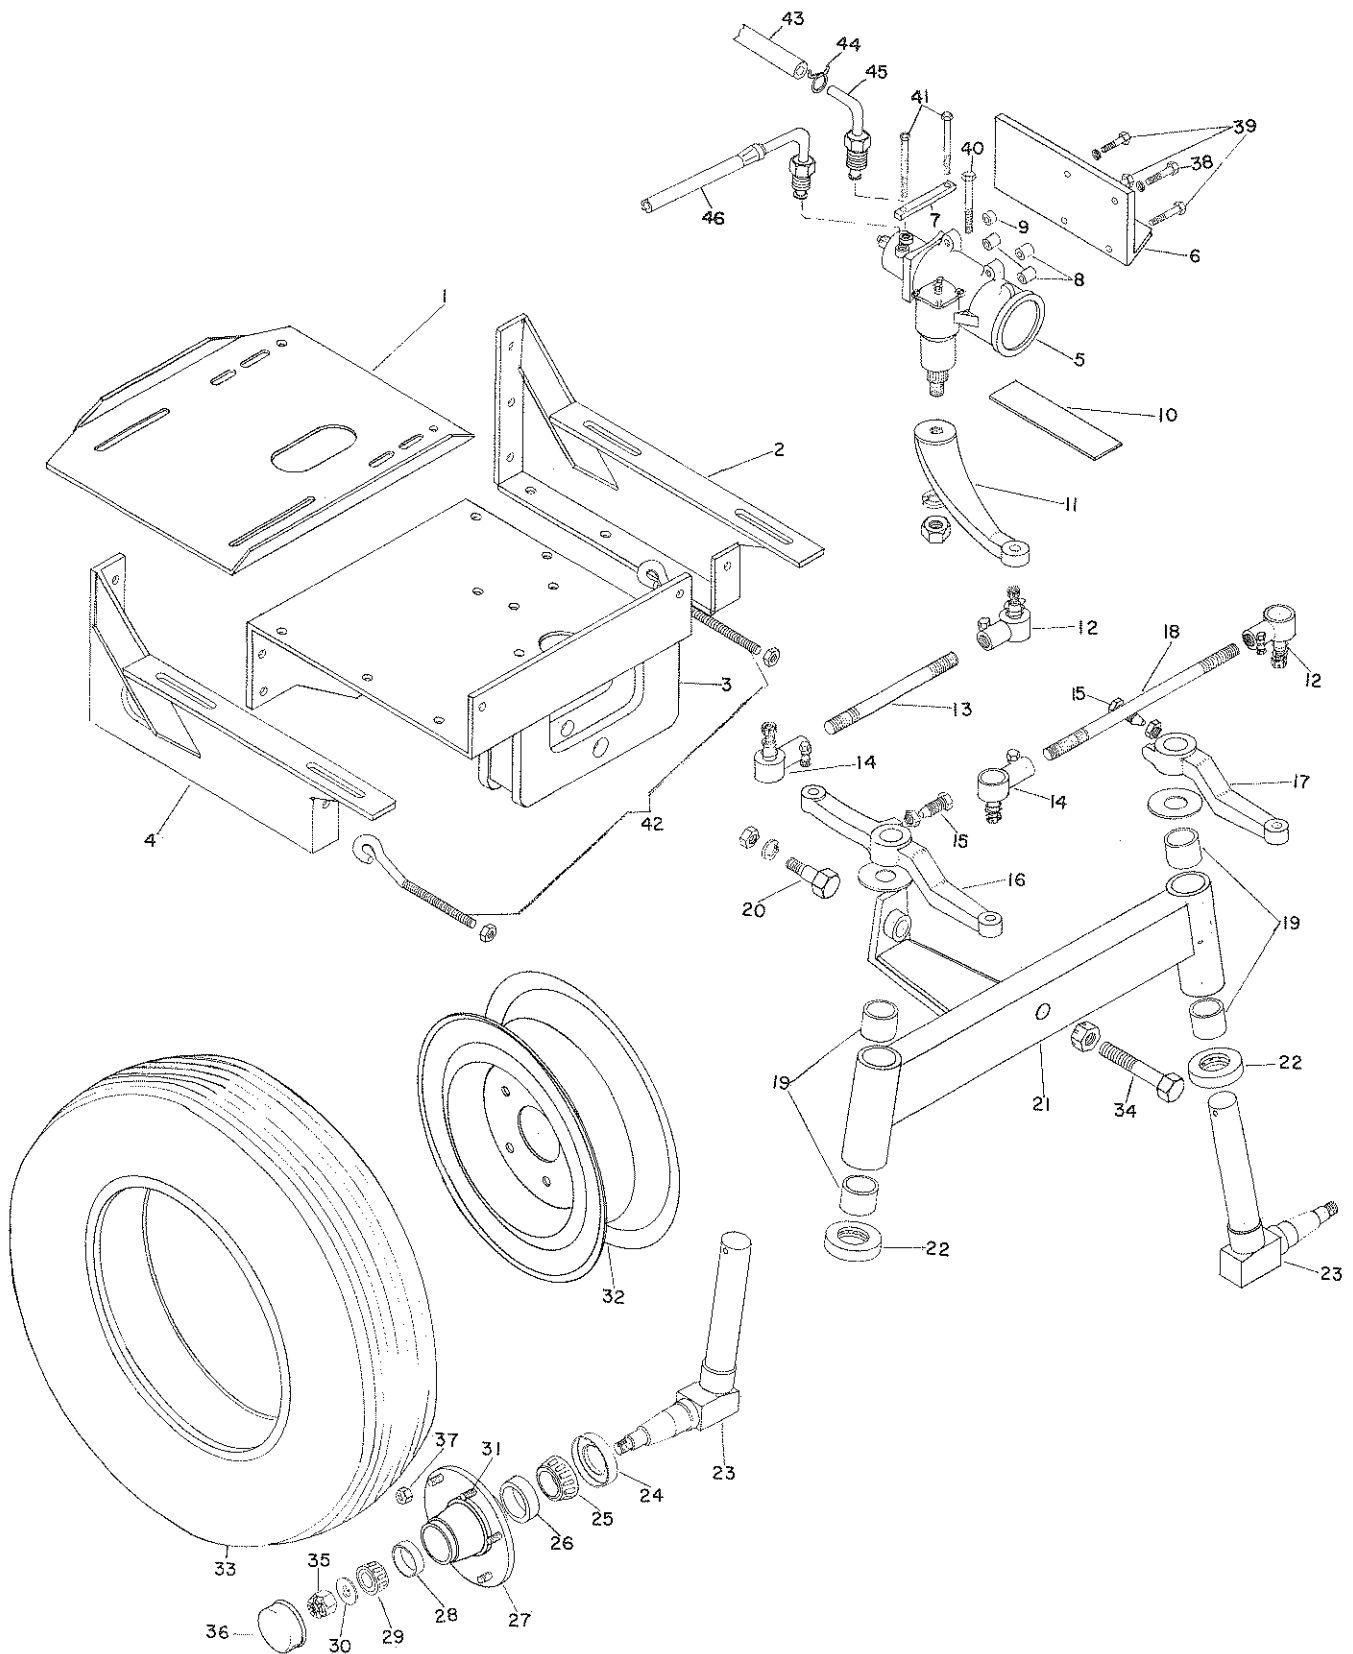


FRONT AXLE AND ENGINE MOUNT

REF. NO.	PART NO.	DESCRIPTION
1	F 7707	Motor base plate
2	F 5663	Motor support L.H.
3	F 5803	Front axle bottom support plate, 2 tie
	F 5815	Front axle bottom support plate, 3 tie
4	F 6330	Motor support R.H., 3 tie
	F 5714	Motor support R.H., 2 tie
5	F 5765	Steering gear assembly (Saginaw 5691895)
6	F 5630	Mounting angle for F 5765 steering assembly
7	F 5852	Anchor strap for F 5765 steering assembly
8	F 5626	Spacer, steering assembly 1" long (3 used)
9	F 5627	Spacer, steering assembly 1/2" long (1 used)
10	F 5853	Spacer plate for F 5765 steering assembly
11	F 5720	Pitman arm, 2 tie
	F 5721	Pitman arm, 3 tie
12	F 5007	Tie rod end R.H. thread (2 used)
13	F 5760	Drag link, 6-1/2", 2 tie
	F 5009	Drag link, 10", 3 tie
14	F 5006	Tie rod end L.H. thread (2 used)
15	F 5016	Set screw for steering arm (2 used)
16	F 6367	Steering arm, R.H.
17	F 6366	Steering arm, L.H.
18	F 5759	Tie rod shaft, 18-1/4", 2 tie
	F 5008	Tie rod shaft, 25-1/2", 3 tie
19	F 5854	Spindle bushing, 1-3/4" x 2" x 1-1/2" prs. only (2 pr. used)
20	F 5023	Front axle shoulder bolt
21	F 5957	Front axle, solid, 3 tie
	F 5958	Front axle, solid, 2 tie
22	F 5769	Thrust bearing, D21 (2 used)
23	F 6334	Spindle L.H., 1-3/4"
	F 6335	Spindle R.H., 1-3/4"
24	F 1627	Front wheel grease seal (2 used) 54605 K.H.
25	F 1625	Front wheel bearing inner, (2 used) #LM 29749
26	F 1653	Cup for bearing, inner, (2 used) #LM 29710
27	F 1624	Front wheel hub, 6 hole (2 used)
28	F 1654	Cup for bearing, outer, (2 used) # L 44610
29	F 1626	Front wheel bearing, outer, (2 used) #L 44640
30	F 884	Spindle washer (2 used)
31	F 462	Lug bolt (12 used)
32	F 5145	Wheel, front 6 hole (regular)
	F 5650	Wheel, front 6 hole (flotation)
33	F 5039	Tire, front 6:70 x 15 - 6 ply (reg. and flotation)
	F 5040	Tube for front tire, 6:70 x 15 (regular)
	F 215	Tube for front tire, 7:50 x 16 (flotation)
34	F 5578	Front axle pivot bolt w/castillated nut, 1" x 5" NC cap screw
35	F 934	Nut for spindle (2 used)
36	F 1628	Hub cap (2 used)
37	F 214	Lug nut (12 used) # 15085
38		3/8" x 1-1/2" N.C. cap screw
39		3/8" x 2-1/2" N.C. cap screw (3 used)
40		3/8" x 4" N.C. cap screw
41		3/8" x 5-1/2" N.C. cap screw (2 used)
42	F 7010	Front engine tightener bolt, 2 used
43	F 6123	Return hose, 3/8" x 14 ft.
44		3/8" hose clamp
45	F 6368	Tube adapter with fitting
46	F 5959	Pressure hose, 13' 10"

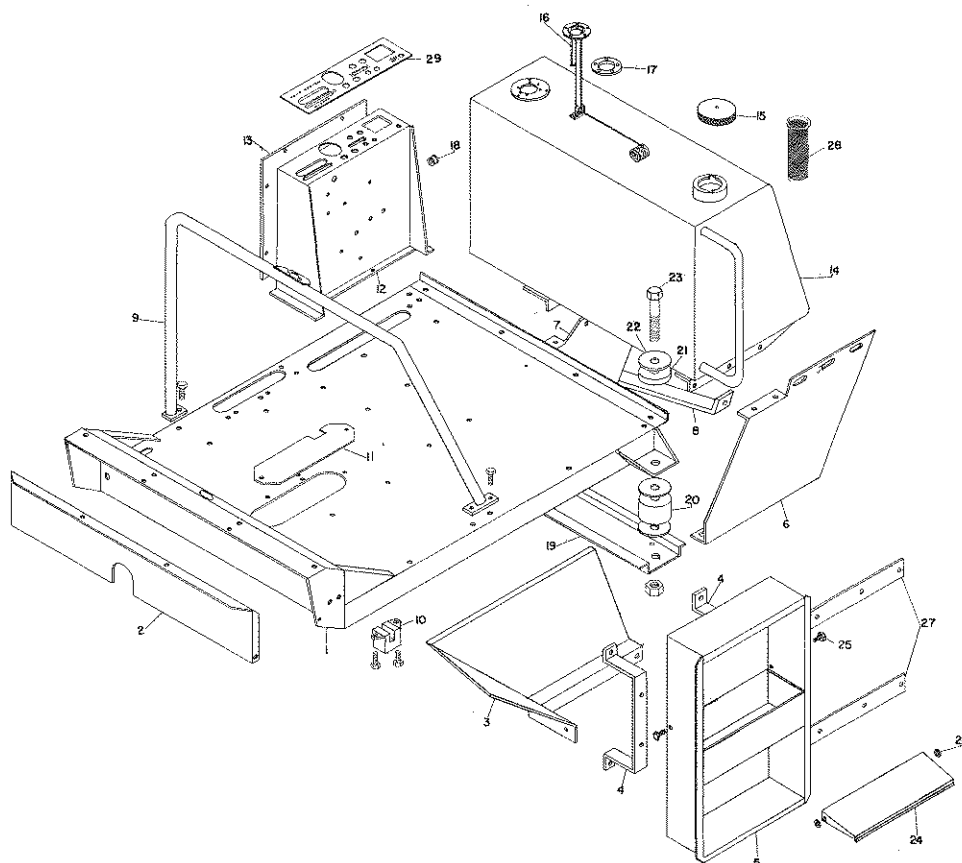


OPERATORS PLATFORM

REF. NO.	PART NO.	DESCRIPTION
1	F 6187	Main operator deck
2	F 6064	Front deck shield
3	F 6061	Shield for chain (mounts to ladder section), 3 tie
	F 6065	Shield for chain (mounts to ladder section), 2 tie
4	F 6011	Ladder mounting bracket, (2 used)
5	F 6174	Ladder main section
6	F 6177	Rear mounting bracket for operator deck, L.H., 2 tie
	F 6178	Rear mounting bracket for operator deck, L.H., 3 tie
7	F 6176	Rear mounting bracket for operator deck, R.H.
8	F 6067	Brace for rear mounting bracket
9	F 6001	Guard rail and steering shaft mounting bracket
10	F 6000	Rubber mounting pad front for deck (2 used)
11	F 6068	Access cover for tension control tank
12	F 6165	Console, main section
13	F 6032	Console cover
14	F 5947	30 gal. fuel tank, less fuel gauge
15	F 1689	Fuel tank cap for F 5947 tank
16	F 5948	Fuel gauge for F 5947 tank
17	F 5949	Gasket for F 5948 gauge
18	F 6069	Rubber grommet
19	F 6175	Tie bar for deck mount,
20	F 6183	Deck mount, neoprene, 3" x 3/4" x 1-3/4" w/washer
21	F 6182	Deck mount, neoprene, 3" x 3/4" x 1/2" w/washer
22	F 6184	Washer for F 6182 and F 6183 mounts, 3" x 5/8" x 11 ga.
23		1/2" x 3-3/4" N. C. C. S. w/lock nut
24	F 6179	Tool box lid and step
25		5/16" x 3/4" N. C. C. S. w/lock nut
26		5/16" flat washer
27	F 6370	Ladder mount bracket (2 used)
28	F 5950	Filter screen for gas tank
29	FD 24	Decal, main console, twin engine

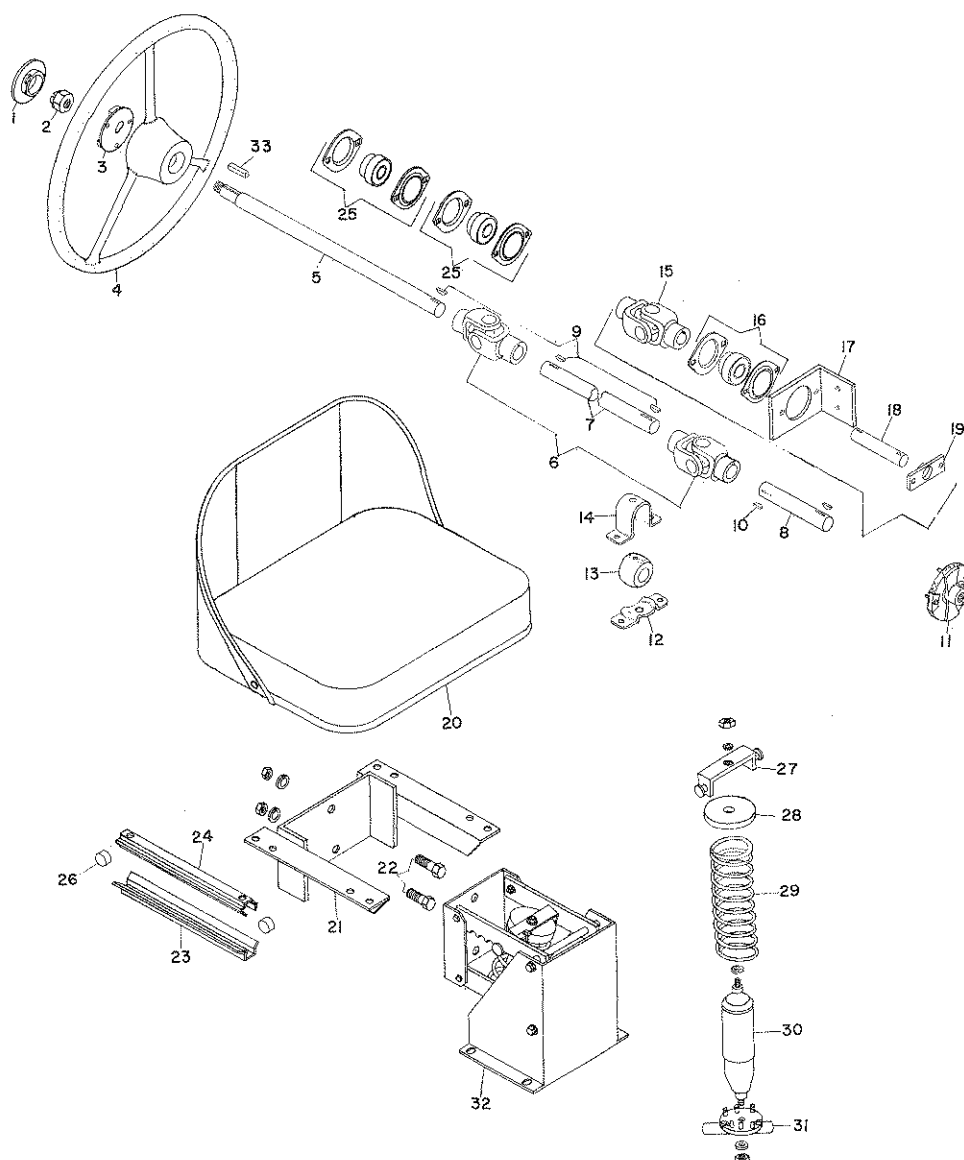


STEERING SHAFTS AND OPERATORS SEAT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5031	Steering column cap	18	F 5883	Lower steering shaft, 7/8" x 4-3/4"
2		Nut, steering column, 3/4" S. A. E.	19	F 5615	Coupling
3	F 5032	Steering column cap holder	20	F 5918	Seat
4	F 5025	Steering wheel		F 6128	Deluxe Hi-back seat
5	F 5973	Top steering shaft		F 5920	Bottom seat cushion for F 5918
6	F 5012	Universal joint 1" x 1" (2 used)		F 6129	Bottom seat cushion for F 6128
	F 6170	Universal joint repair kit		F 5921	Back cushion for F 5918
	F 6070	Yoke only, 1" bore		F 6130	Back cushion for F 6128
7	F 5974	Center steering shaft, 1" x 30-1/2"	21	F 5867	Seat bracket
8	F 5975	Lower steering shaft, 1" x 11-1/4", 3 tie			1/2" x 1-3/4" N.C. cap screw
	F 5013	Lower steering shaft, 1" x 8-1/2", 2 tie	22		Seat Adjusting rail (top)
9		1/4" x 1-1/8" Woodruff key	23	F 6079	Seat adjusting rail (bottom)
10		3/16" x 3/4" Woodruff key	24	F 6080	Seat adjusting rail (bottom)
11	F 5690884	Flange assembly	25	F 6002	Bearing w/stampings for top steering shaft (2 used)
	F 5686553	Bolt, flange assembly pinch		F 6003	Bearing only
12	F 5019	Base for self-aligning sleeve bearing		F 6004	Stampings only for F 6003 bearing
13	F 5018	Self-aligning sleeve bearing	26	F 6081	Roller for seat adjusting rails
14	F 5017	Top for self-aligning sleeve bearing	27	F 5501	Spring and cylinder adjusting bracket
15	F 5011	Universal joint, 1" x 7/8"	28	F 5502	Cup washer for F 5705 spring
	F 6171	Universal joint repair kit	29	F 5705	Spring, F 5703 seat assembly
	F 6172	Yoke only, 7/8" bore	30	F 5866	Hydraulic cylinder
	F 6070	Yoke only, 1" bore	31	F 5505	Plate, bottom pivot
16	F 5881	Bearing complete, 7/8"	32	F 5703	Seat spring and hydraulic assembly complete
17	F 5882	Bracket for F 5881 bearing	33		1/4" x 1/4" x 7/8" square key

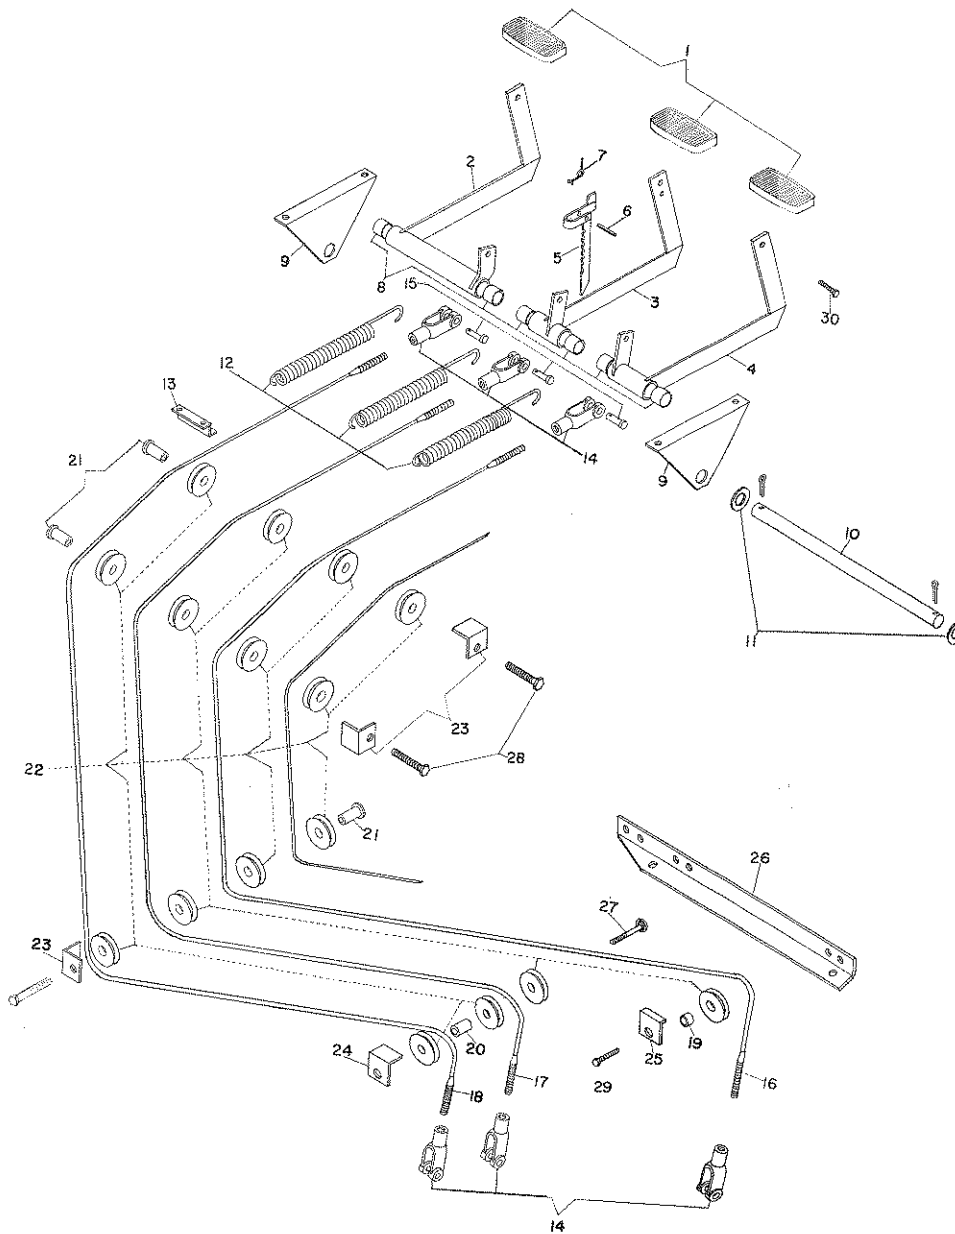


REAR CLUTCH AND BRAKE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5979	Brake and clutch pedal pad (3 used)	15		5/16" clevis pin
2	F 5946	Clutch pedal lever	16	F 5981	Brake cable, R.H. (110")
3	F 5944	L.H. brake lever	17	F 5982	Brake cable, L.H. (92")
4	F 5945	R.H. brake lever	18	F 5983	Clutch operating cable (96")
5	F 5984	Brake pedal lock	19	F 4068	Bushing for F 4067 roller
6		1/4" x 1-1/2" roll pin	20	F 6057	Bushing for three roller sheave
7	F 4210	Spring for F 5976 brake release	21	F 181	Bushing for four roller sheave (3 used)
8	F 6054	Bushing for clutch and brake levers 1" x 1-1/8" x 1"	22	F 4067	Roller for brake and clutch pulley
9	F 6055	Brake cross shaft support (2 used)	23	F 5989	Shield for brake, clutch and throttle pulleys
10	F 5980	Brake pedal cross shaft	24	F 5990	Shield for brake and clutch pulley
11		1" washer	25	F 994	Shield for brake pulley
12	F 7095	Brake and clutch return spring	26	F 5991	Cable pulley mounting bracket
13	F 6077	Brake return spring anchor	27		3/8" x 2-1/2" carriage bolt
14	F 5075	Clevis 5/16" for brake and clutch cable	28		3/8" x 2-1/2" N.C. Cap screw
			29		1/4" x 1" N.C. Cap screw
			30		1/4" x 1" N.C. Cap screw

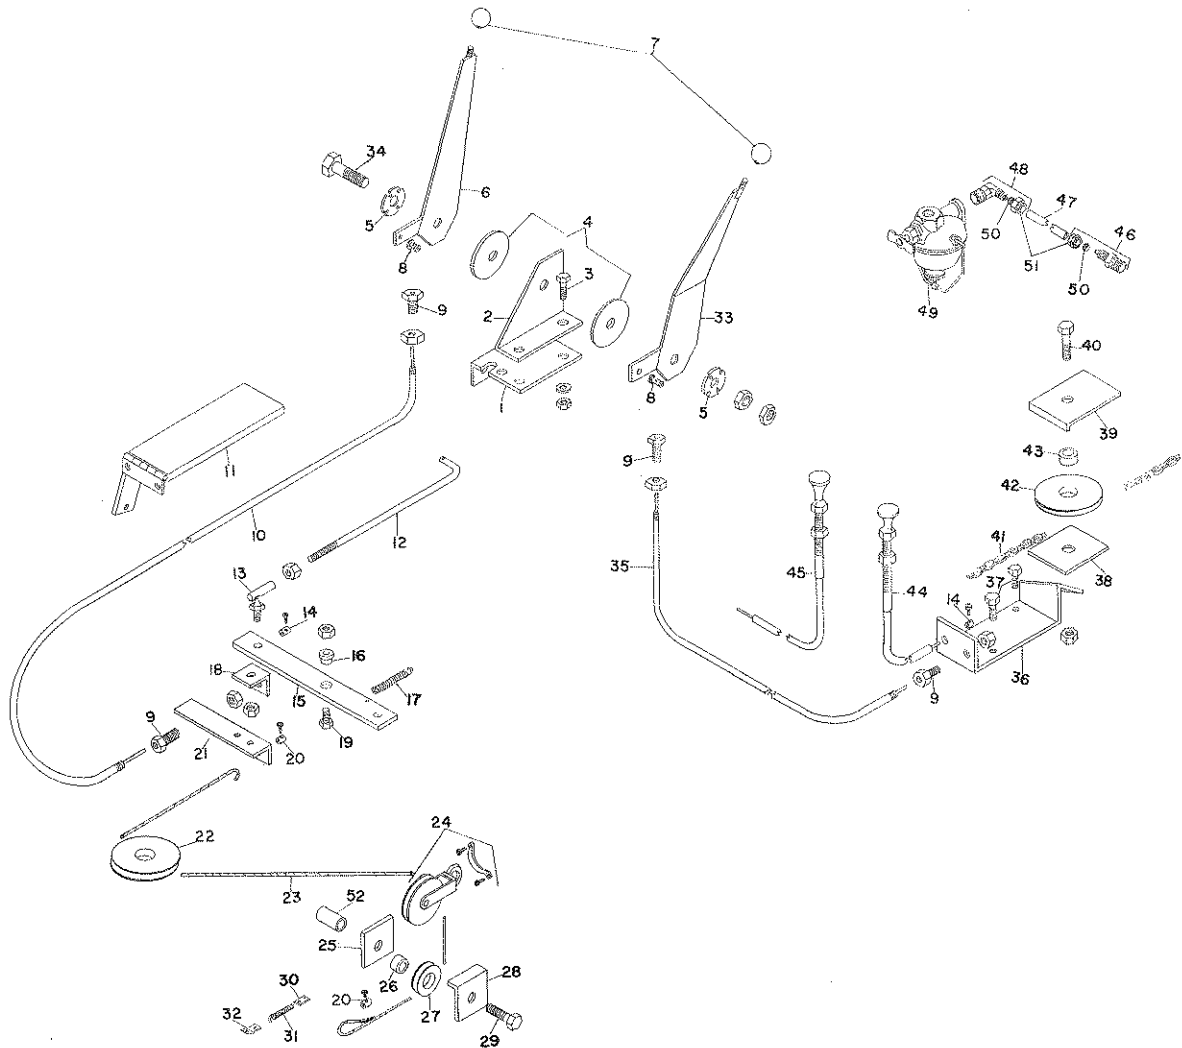


FRONT AND REAR THROTTLE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 6035	Base bracket for throttle levers	29		1/4" x 1-1/4" cap screw
2	F 6036	Top bracket for throttle levers	30	F 5862	Strap, spring to gov. lever
3		5/16" x 3/4" cap screw	31	F 6063	Gov. anti-surge spring
4	F 1003	Friction disc (2 used)	32	F 5863	Spring anchor angle
5	F 5551	Conical washer (2 used)	33	F 6033	Front throttle lever
6	F 6034	Rear throttle lever	34		3/8" x 1-3/4" cap screw
7	F 5554	Knob for throttle levers	35	F 6044	Front throttle wire conduit 109"
8	F 5545	Swivel fastener (2 used)		F 6045	Front throttle wire 114"
9	F 5559	Beech nut w/nut and washer (4 used)	36	F 6090	Pulley holder and throttle stop
10	F 6046	Rear throttle wire conduit, 28"	37		No. 10 sheet metal screw
	F 6047	Rear throttle wire, 33"	38	F 995	Plate for F 4067 roller
11	F 5985	Traction throttle pedal w/hinge	39	F 994	Shield for F 4067 roller
12	F 5977	Traction throttle rod	40		1/4" x 1-1/4" cap screw
13	F 5077	Ball joint, 1/4"	41	F 6091	Chain for throttle 18"
14	F 5080	Throttle stop	42	F 4067	Roller
15	F 5986	Traction throttle wobble arm	43	F 4068	Bushing for F 4067 roller
16	F 1461	Bushing	44	F 5069	Front motor choke assembly
17	F 4115	Spring	45	F 5070	Rear motor choke assembly
18	F 5987	Traction throttle cable angle stop	46	F 5232	Straight fitting for fuel line (268P-1/4" x 1/8")
19		5/16" x 1" cap screw	47	F 6092	Fuel line (rear) 65"
20	F 5861	Throttle cable clamp		F 6093	Fuel line front 10'
21	F 5988	Traction throttle cable anchor angle	48	F 5233	Elbow fitting for fuel line (269P-1/4" x 1/8")
22	F 4067	Roller (part of four roller pulley)	49	F 5299	Fuel sediment bowl and shut off valve (2 used)
23	F 5561	Throttle cable 10' - 10"	50	F 6126	Poly-sleeve for F 5233 fitting
24	F 5179	Pulley w/ swivel	51	F 6127	Brass nut for F 5233 fitting
25	F 6089	Plate for F 4014 roller	52	F 6169	Spacer for rear throttle cable bracket
26	F 4015	Bushing for F 4014 roller			
27	F 4014	Roller, throttle cable			
28	F 5092	Cable sheave slip			

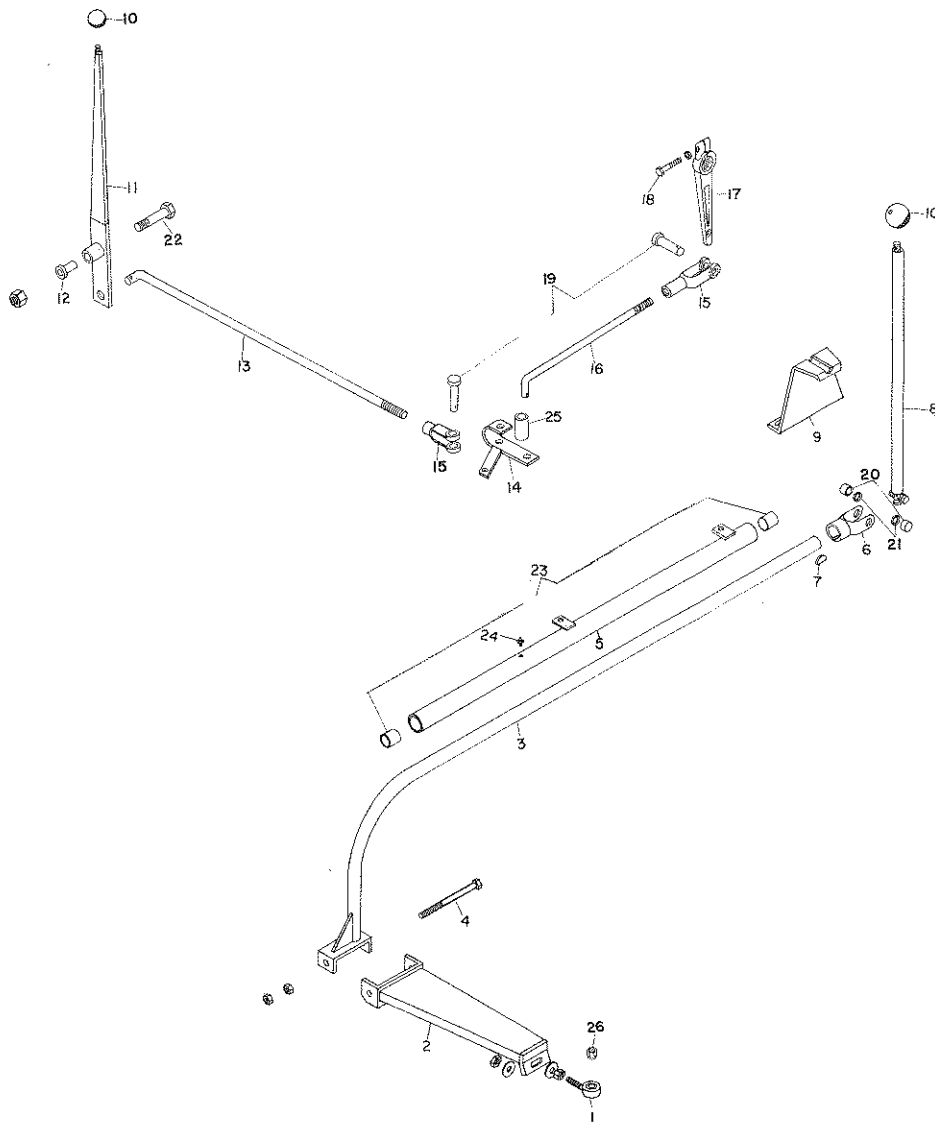


FRONT CLUTCH AND GEAR SHIFT CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5992	Swivel bearing for shift bar	16	F 6024	Front clutch cross rod, 22" 3 tie
2	F 6030	Shift bar	17	F 6071	Engine clutch lever for VH4D
3	F 6028	Gear shift rod	18	F 6072	Engine clutch lever for VG4D and V461D
4		3/8" x 5-1/4" N.C. cap screw	19	F 5049	Pin for 1/2" clevis
5	F 6029	Gear shift tube w/ bushings	20	F 6073	Cup for F 6070 yoke
6	F 6070	Shift rod yoke	21	F 6074	Oil seal for F 6073 cup
7		1/4" x 1-1/8" woodruff key	22		3/8" x 2-1/2" N.C. cap screw
8	F 6027	Shift lever	23	F 6054	Bushing, 1" x 1-1/8" x 1"
9	F 6026	Shift lever bracket	24	F 6170	Grease Fitting
10	F 5055	Gear shift lever and clutch lever knob	25	F 6159	Bushing for clutch bell crank, 1-3/8" long
11	F 6022	Front clutch lever	26	F 6186	Conical nut for F 5992 bearing
12	F 181	Bushing			
13	F 6025	Front clutch rod, 41"			
14	F 6023	Front clutch bell crank			
15	F 5048	1/2" clevis (2 used)			

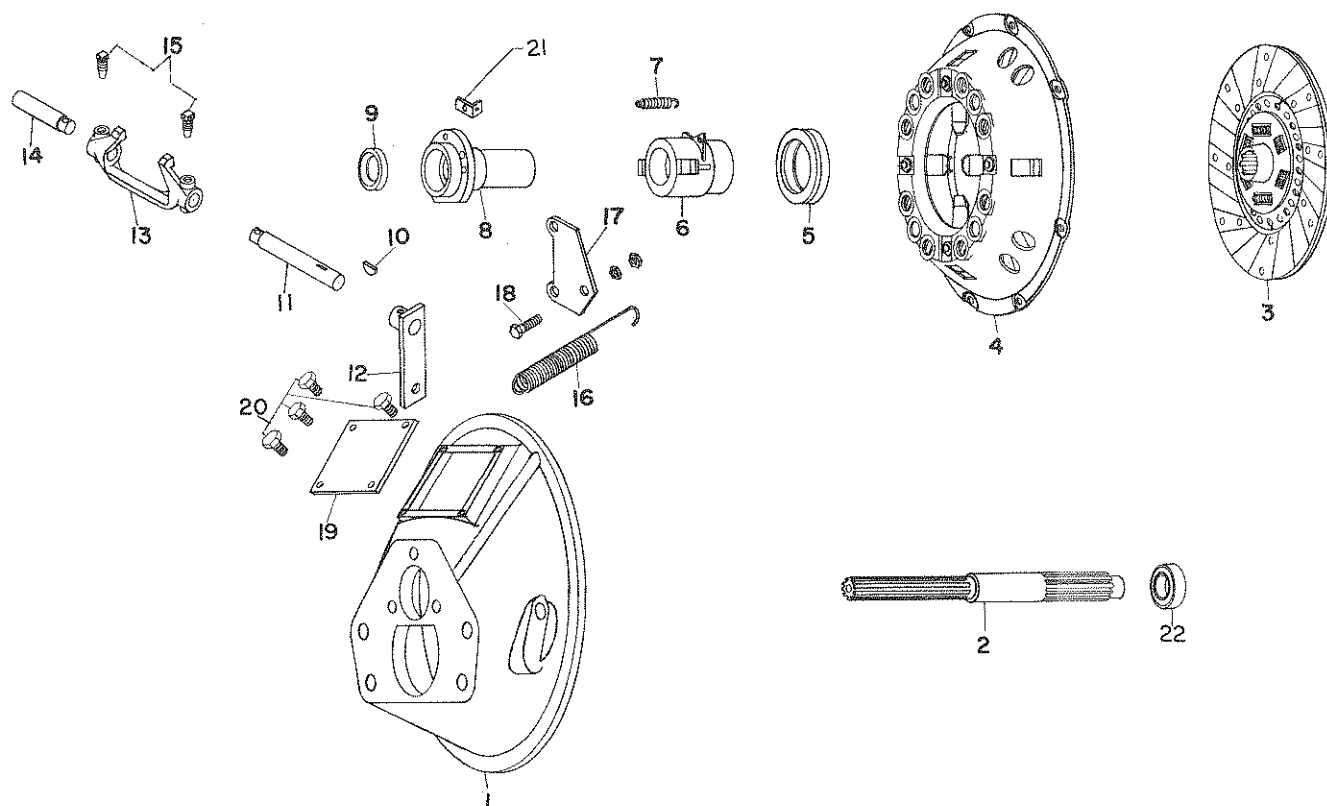

REAR ENGINE CLUTCH

REF. NO.	PART NO.	DESCRIPTION
1	F 5943	Clutch housing
2	F 5967	Clutch and main shaft in transmission
3	F 5956	Driven plate assembly
4	F 5955	Cover assembly
5	F 6075	Throwout bearing
6	F 5976	Bearing assembly
7	F 6053	Spring for F 5976 assembly
8	F 5968	Seal retainer for F 5976
9	F 5156	Oil seal (CR/13559)
10		3/16" x 3/4" Woodruff key
11	F 5995	Shaft for F 5993 yoke (long)
12	F 6059	Lever arm for F 5995 shaft
13	F 5993	Clutch operating yoke
14	F 5996	Shaft for F 5993 yoke (short)
15	F 5994	Set screw for operating yoke (2 used)
16	F 7095	Spring
17	F 6060	Stop bracket for drive clutch lever arm
18		5/16" x 1-1/4" N.C. cap screw
19	F 6076	Inspection cover plate
20		5/16" x 3/4" N. C. cap screw
21	F 6173	Throw-out bearing spring anchor
22	F 5362	Pilot bearing

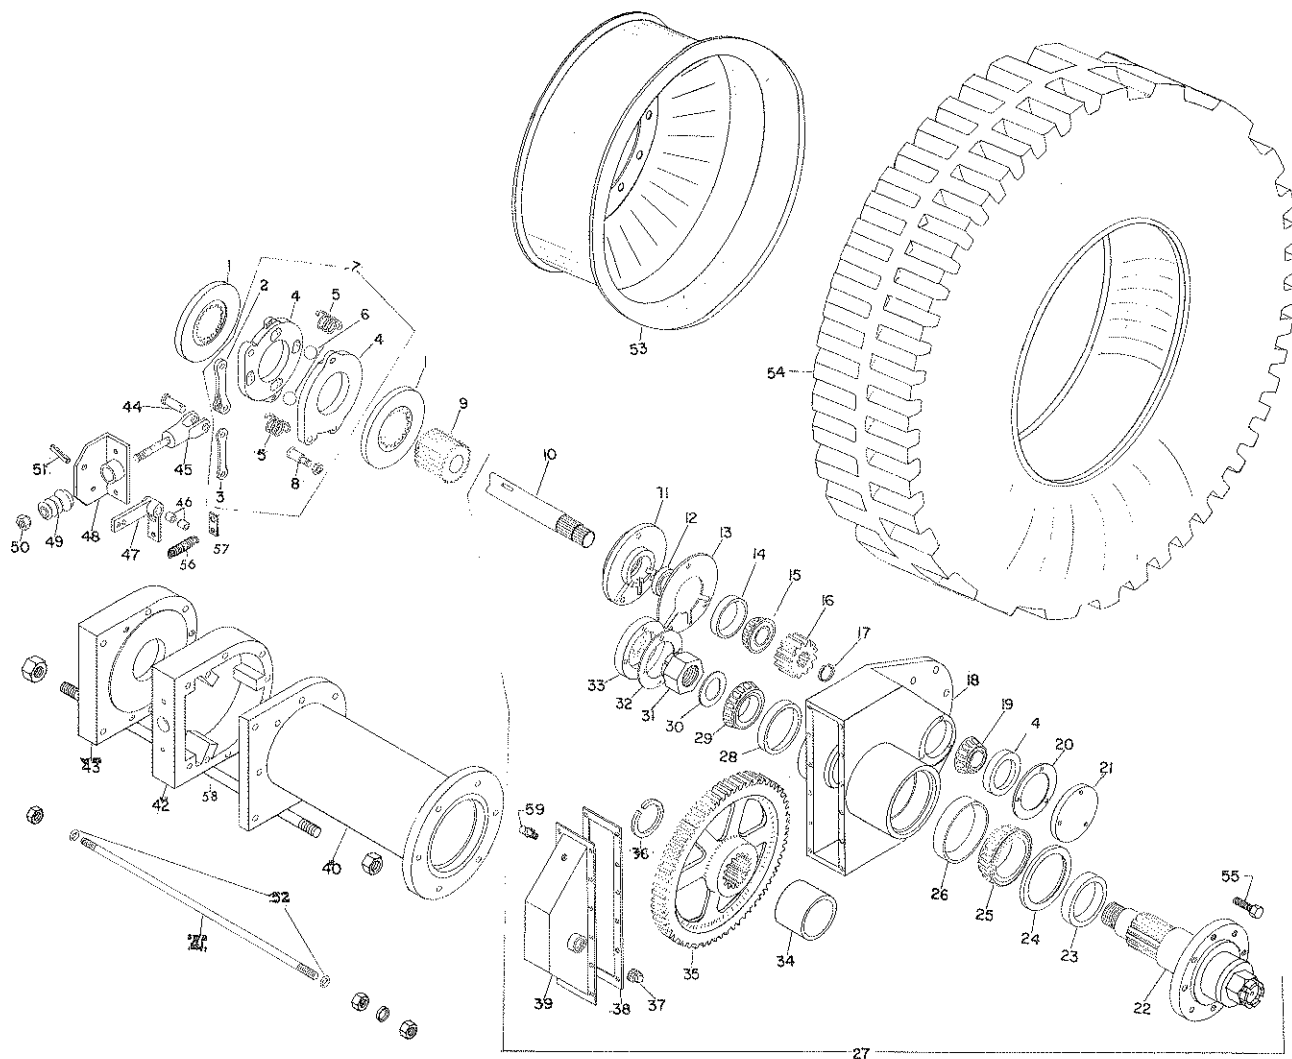


REAR AXLE AND FINAL DRIVE

REF. NO.	PART NO.	DESCRIPTION
1	F 5794	Brake wear disc
2	F 5899	Yoke link
3	F 5900	Strap link
4	F 5898	Brake pressure plate
5	F 5901	Pressure plate spring
6	F 5902	Pressure plate ball
7	F 5903	Pressure plate complete
8	F 5904	Linkage bolt
9	F 5795	Brake hub
10	F 5791	Axle shaft, R.H. 28"
	F 5792	Axle shaft, L.H. 57-1/4" (2-tie)
	F 5793	Axle shaft, L.H. 62-1/4" (3-tie)
11	F 5801	Inside pinion bearing retainer
12	F 5806	Oil seal for axle shaft (13666 C/R)
13	F 5826	Gasket, inside pinion bearing, 1/64"
14	F 5891	Cup for F 5457 and F 5892 bearings (14282)
15	F 5457	Inner pinion bearing cone (14137A)
16	F 5452	Final drive pinion
17	F 5438	Snap ring, pinion bearing
18	F 5785	Final drive housing, R.H. and L.H.
19	F 5892	Outer axle shaft bearing (14117A)
20	F 5828	Shim .005 (steel) outside pinion bearing
	F 5829	Shim .007 (steel) outside pinion bearing
	F 5830	Shim .010 (steel) outside pinion bearing

REAR AXLE AND FINAL DRIVE


(Continued)

REF. NO.	PART NO.	DESCRIPTION
21	F 5786	Axle drive cover
22	F 5913	Wheel shaft, 8 hole
23	F 5809	Seal ring for F 5931 shaft
24	F 7035	Seal for axle shaft (255833)
25	F 7033	Outer bearing for axle shaft (33287)
26	F 7034	Outer bearing cup for F 7033 (33462)
27	F 5782	Final drive housing complete R. H.
	F 5783	Final drive housing complete L. H., 3 tie
	F 5784	Final drive housing complete L. H., 2 tie
28	F 5445	Cup for inner wheel shaft bearing (362A)
29	F 5446	Inner bearing cone for wheel shaft (368A)
30	F 5893	Wheel shaft washer
31	F 5790	Wheel shaft axle nut, 1-1/2" N.F. castellated
32	F 5827	Wheel shaft bearing cover gasket, 1/32"
33	F 5788	Wheel shaft cover
34	F 5808	Spacer for F 5763 gear
35	F 5763	Final drive gear (8620)
36	F 5840	Snap ring for final drive gear
37		3/4" pipe plug
38	F 5831	Gasket, drive gear cover, 1/16"
39	F 5905	Drive gear cover, R.H.
	F 6361	Drive gear cover, L.H.
40	F 5796	Axle spacer, 14-3/8" R.H. (2 and 3 tie)
	F 5797	Axle spacer, 43-5/8", L.H. (2 tie only)
	F 5798	Axle spacer, 48-5/8", L.H. (3 tie only)
41	F 6132	Tie bolt, 5/8" x 25"
42	F 5799	Brake housing
43	F 5800	Brake spacer, R.H.
	F 5890	Brake spacer, L.H.
44	F 6161	Clevis pin, 7/16" x 1-1/4"
45	F 5894	Brake clevis
46	F 5813	Bushing for brake lever
47	F 5812	Brake lever w/bushing
48	F 5814	Brake lever mount
49	F 5824	Dust cover for brake rod
50	F 214	Nut for brake clevis
51	F 5547	Roll pin, 1/4" x 1"
52	FT 53	"O" ring
53	F 5896	Rear wheel, R. H. (9:00 x 20)
	F 5837	Rear wheel, R. H. (flotation)
	F 5895	Rear wheel, L. H. (9:00 x 20)
	F 5897	Rear wheel, L. H. (flotation)
54	F 5268	N. D. tire (9:00 x 20)
	F 5269	Tube (9:00 x 20)
	F 5270	Flap (9:00 x 20)
	F 5648	Flotation tire, 8 ply L. H. (15 x 16A)
	F 5275	Flotation tire, 6 ply R. H. (15 x 16A)
	F 5276	Tube, 15 x 16A flotation
	F 5596	Flap for F 5275 and F 5648 tires
55	F 5910	Lug bolt
56	F 6053	Spring, brake release
57	F 6056	Brake release spring anchor
58	F 4081	Truss rod, 3/4" x 17-1/2"
59	F 1720	Vent

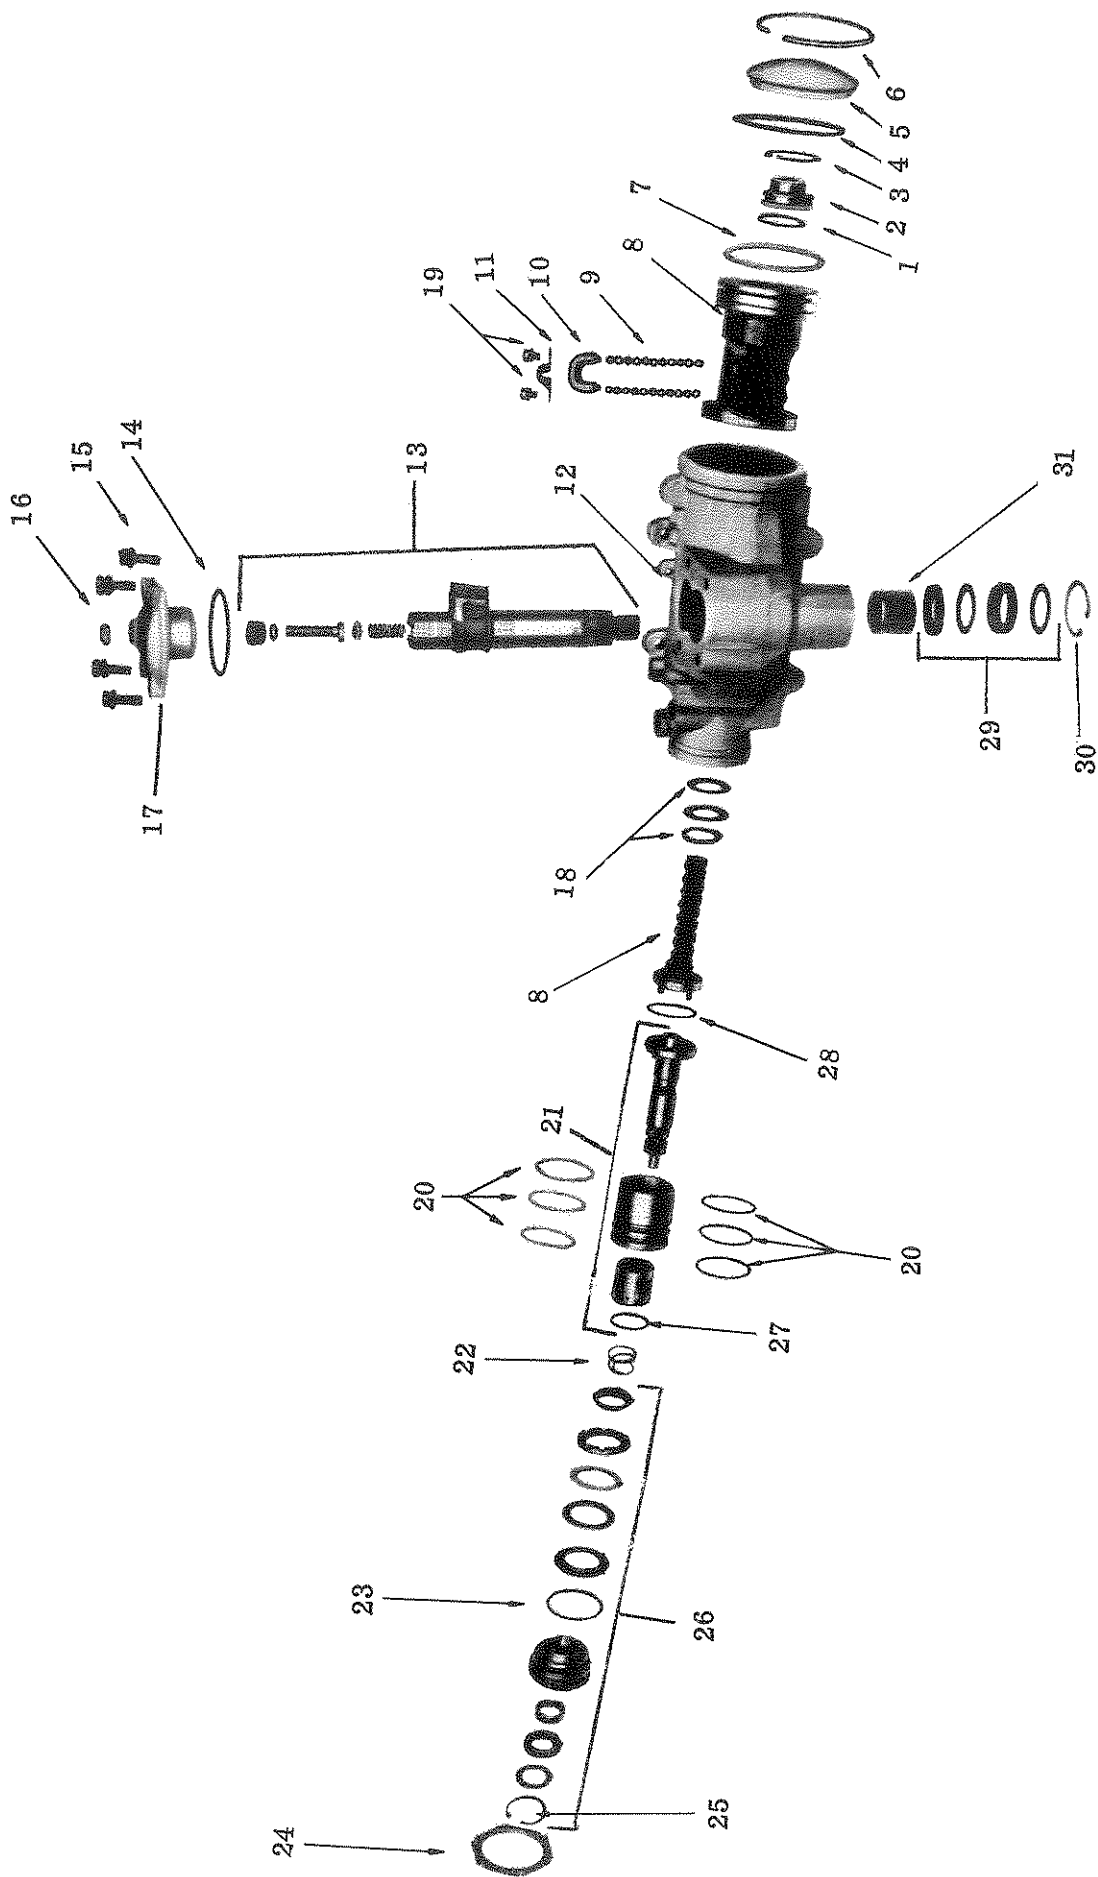


STEERING GEAR ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5686625	O-Ring Seal
2	F 5689695	Plug, rack piston end
4	F 5686577	O-Ring Seal
5	F 5686815	Plug, housing end
6	F 5686814	Ring, end plug retainer
7	F 5687958	Ring, piston
	F 5688034	Seal, piston ring back-up
8	F 5688752	Rack-piston-nut assembly
9	F 5685706	Recirculating ball kit (.28117 dia.)
	F 5685707	Recirculating ball kit (.28125 dia.)
	F 5685708	Recirculating ball kit (.28133 dia.)
	F 5685709	Recirculating ball kit (.28141 dia.)
	F 5685710	Recirculating ball kit (.28149 dia.)
	F 5685711	Recirculating ball kit (.28157 dia.)
10	F 5688765	Guide, ball return
11	F 5686539	Clamp, return guide
12	F 5689834	Housing assembly
13	F 5687184	Pitman shaft gear service assembly
14	F 5686570	Seal, side cover
15	F 179839	Bolt, side cover (3/8 x 1 NC)
16	F 5686372	Nut, lash adjuster
17	F 5689021	Cover assembly, housing side
18	F 5687186	Lower thrust bearing service kit
19	F 5696151	Screw and Lockwasher assembly
20	F 5687182	Valve ring and back-up seal service kit
21	F 5690033	Pin and valve assembly
22	F 5687252	Spring, spool
23	F 5686527	O-Ring
24	F 5690698	Nut, adjuster plug lock
25	F 5684820	Ring, Upper end plug oil seal retainer
26	F 5686866	Adjuster plug assembly
27	F 5686546	O-Ring
28	F 5686526	O-Ring
29	F 5685355	Pitman shaft seal service kit
30	F 5682898	Ring, retaining (Pitman shaft seal)
31	F 5689836	Bearing, pitman shaft gear
	F 5689698	O-Ring seal service kit
	F 5689697	Master seal service kit
	F 5687185	Upper thrust bearing kit
	F 5687183	Adjuster plug seal service kit
	F 5691895	Complete steering gear assembly

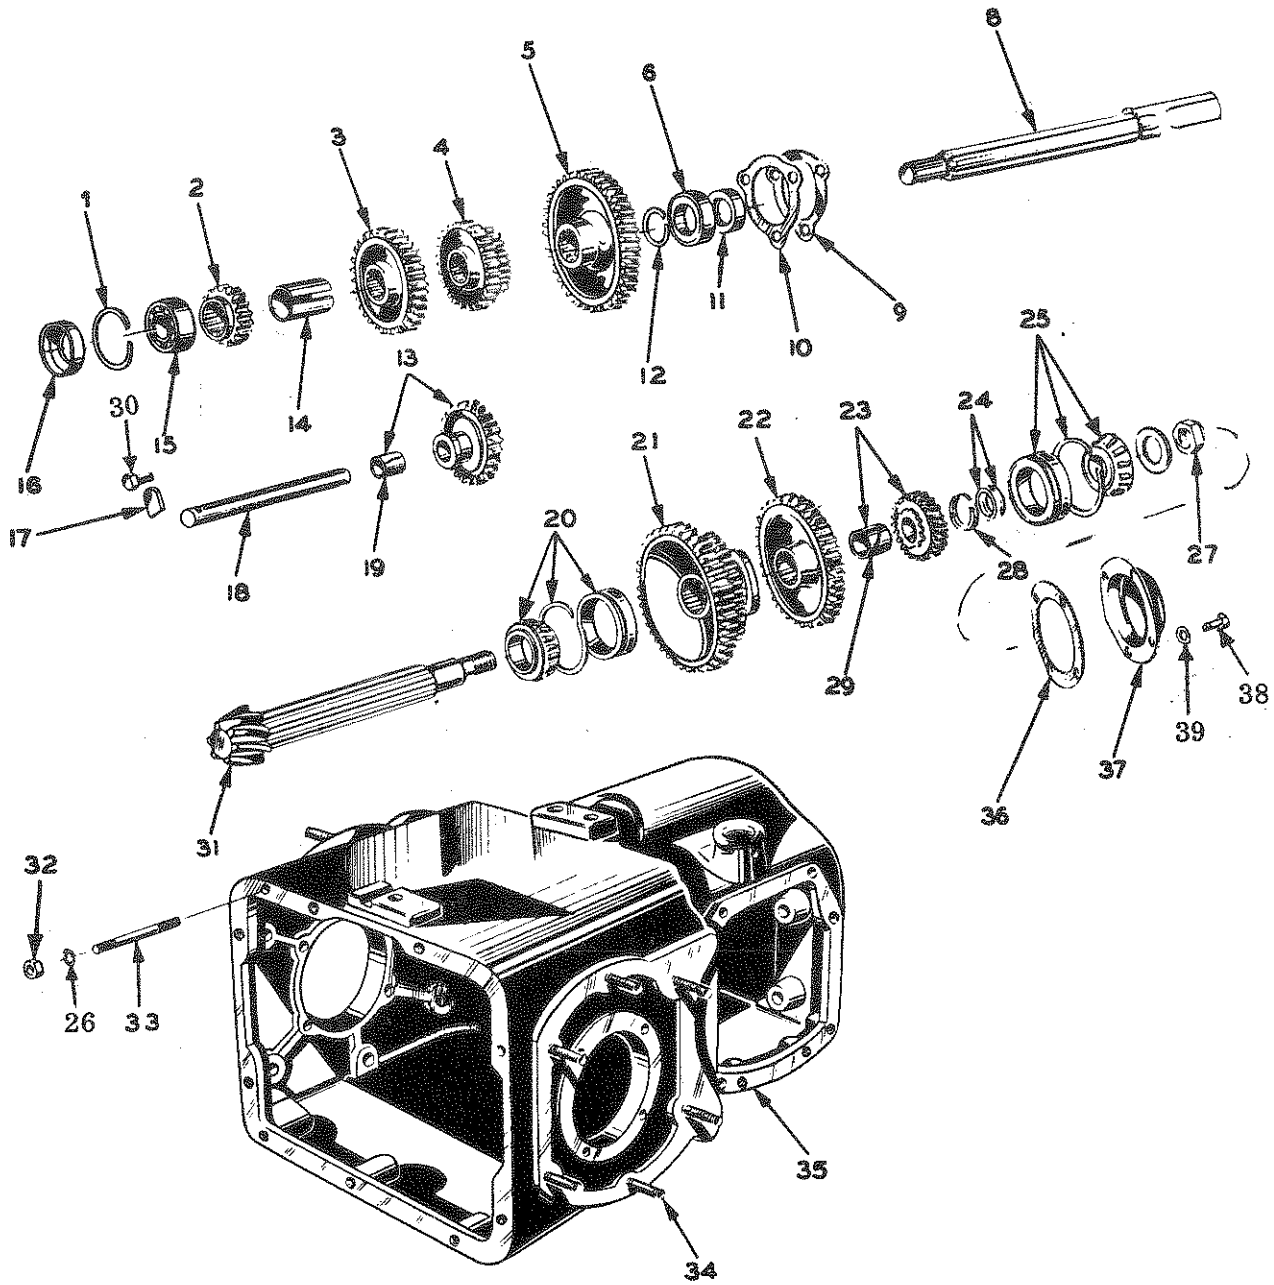


TRANSMISSION ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 5301	Mainshaft rear bearing snap ring
2	F 5302	Mainshaft 1st gear
3	F 5303	Mainshaft 3rd gear
4	F 5304	Mainshaft 2nd and reverse gear
5	F 5305	Mainshaft 4th gear
6	F 5306	Mainshaft front bearing
8	F 5967	Clutch and main transmission shaft
9	F 5307	Mainshaft front bearing cap gasket
10	F 5308	Mainshaft front bearing cap shim (.004)
	F 5309	Mainshaft front bearing cap shim (.007)
	F 5310	Mainshaft front bearing cap shim (.010)
11	F 5156	Clutch and mainshaft front oil seal
12	F 5312	Mainshaft locating snap ring
13	F 5313	Reverse idler gear assembly - includes Item #19
14	F 5314	Mainshaft 1st and 3rd gear spacer
15	F 5306	Mainshaft rear bearing
16	F 5316	Mainshaft rear bearing oil cup
17	F 5317	Reverse idler lock
18	F 5318	Reverse idler shaft
19	F 5319	Reverse idler gear bushing
20	F 5320	Pinion shaft rear bearing
21	F 5321	Pinion shaft 1st and 3rd gear
22	F 5322	Pinion shaft 2nd and reverse gear
23	F 5323	Pinion shaft 4th gear assembly - includes Item #29
24	F 5324	Pinion shaft front bearing shim (.003)
	F 5325	Pinion shaft front bearing shim (.005)
	F 5326	Pinion shaft front bearing shim (.010)
25	F 5327	Pinion shaft front bearing
26		P.T.O. locating stud nut spring lock washer, 3/8"
27	F 5329	Pinion shaft front bearing adjusting nut
28	F 5332	Pinion shaft front bearing spacer
29	F 5331	Reverse idler gear bushing
30		Reverse idler shaft lock screw, 3/8" x 5/8" N.C. Cap screw
31	F 5330	Pinion shaft - includes Item #47, Page 16
32		P.T.O. locating stud nut, 3/8" N. F. hex
33		P.T.O. locating stud, 3/8" x 1-1/2" N.F. N.C. stud
34		Axle studs, 9/16" x 6" N.C. C.S. w/9/16" spring lock washer (12 used)
35	F 5858	Transmission case
36	F 5333	Pinion shaft front bearing cap gasket
37	F 5334	Pinion shaft front bearing cap
38		Pinion shaft front bearing cap screw, 3/8" x 1" N.C. Cap screw (6 used)
39		Pinion shaft front bearing cap screw lock washer, 3/8" spring, (6 used)
	F 5942	Transmission & differential assy. for fabricated axle housings

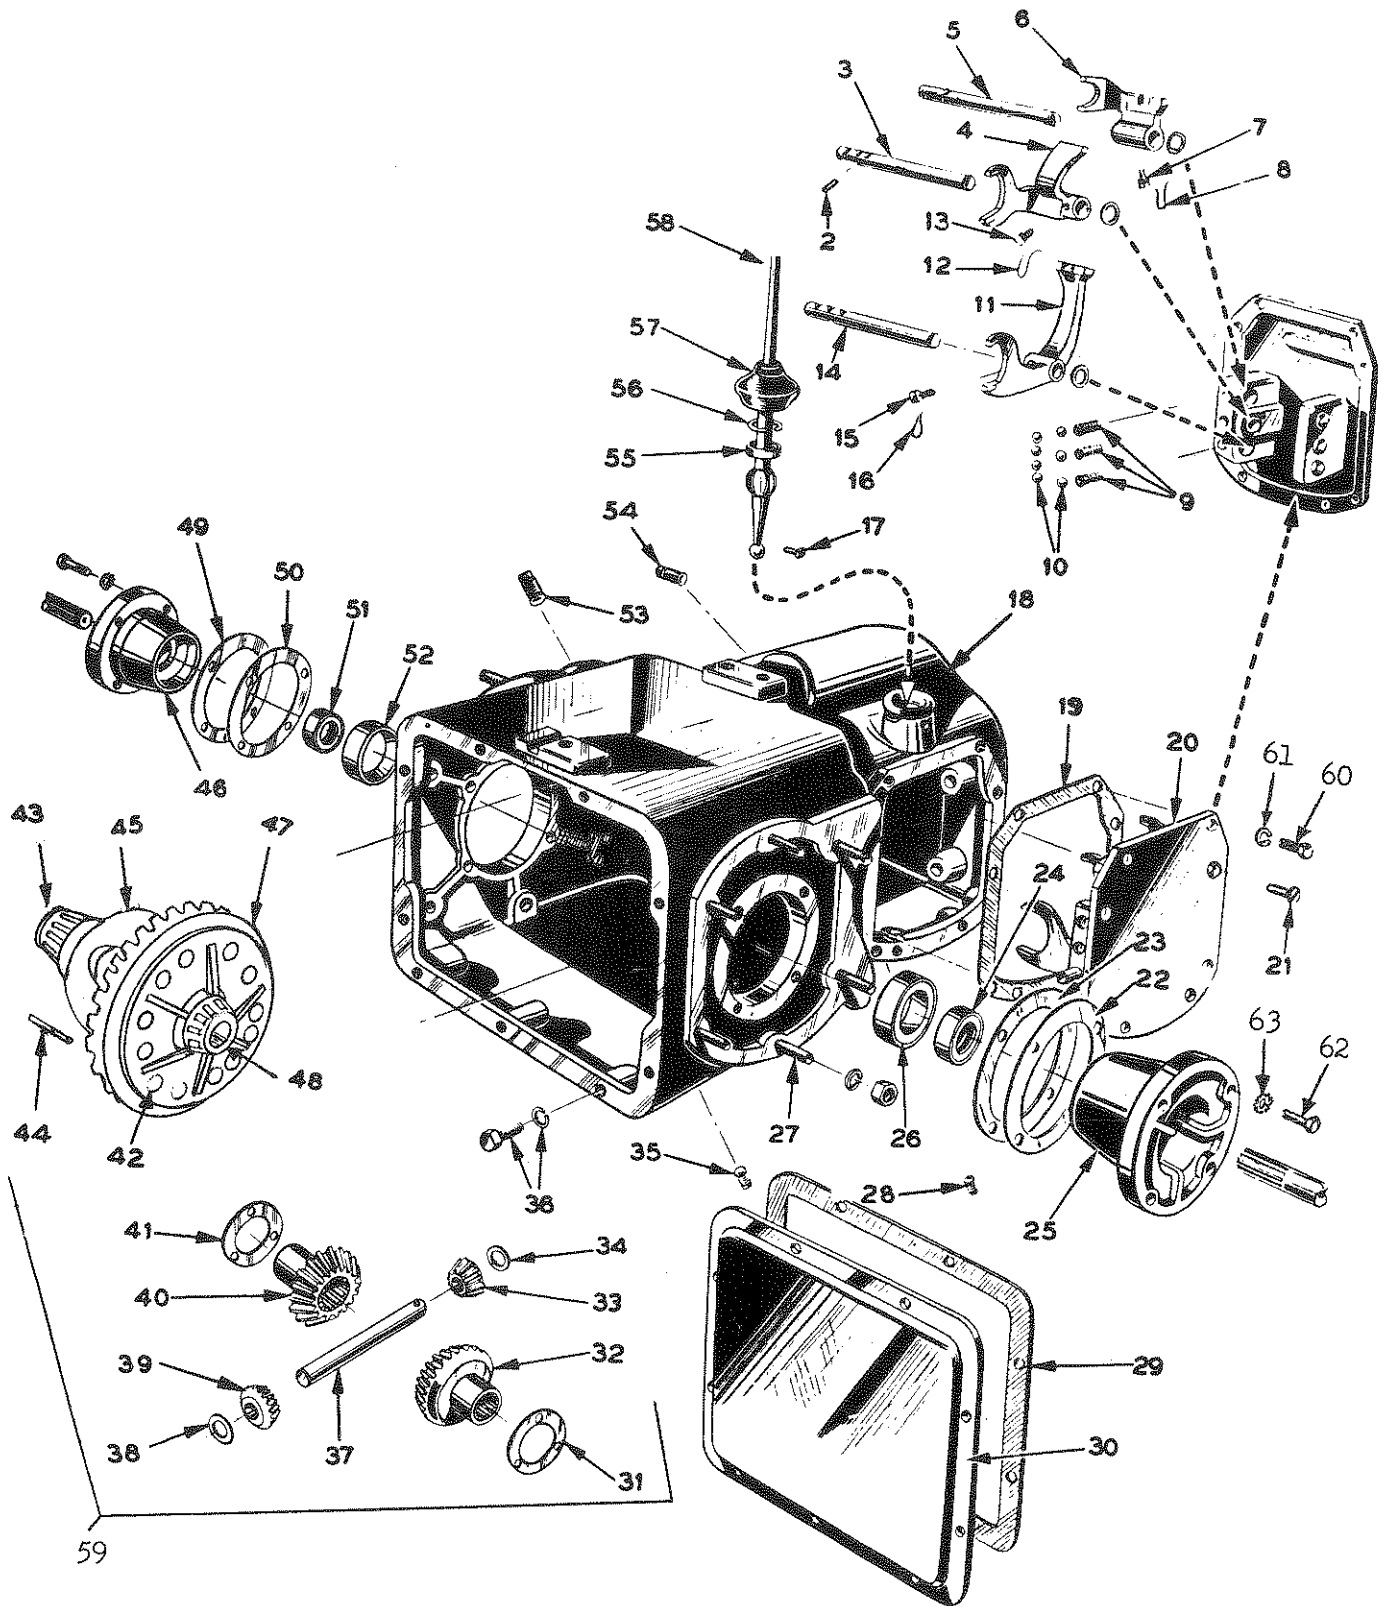

DIFFERENTIAL ASSEMBLY


REF. NO.	PART NO.	DESCRIPTION
2	F 5341	Interlock cross pin
3	F 5342	2nd and 4th shift rail
4	F 5343	2nd and 4th shift fork
5	F 5344	Reverse shift rail
6	F 5345	Reverse shift fork
7	F 5346	Shift fork lock screw
8	F 5347	Shift fork lock screw lock wire
9	F 5348	Mesh lock spring
10	F 5349	Mesh lock ball
11	F 5360	1st and 3rd shift fork
12	F 5347	Lock screw lock wire
13	F 5346	Lock screw
14	F 5351	1st and 3rd shift rail
15	F 5346	Lock screw
16	F 5347	Lock wire
17	F 5352	Pivot pin
18	F 5858	Transmission case
19	F 5353	Control cover gasket
20	F 5354	Control cover
21		Control cover screw, 3/8" x 1", F.H. Machine bolt
22	F 5356	Differential bearing carrier shim (.004)
23	F 5357	Differential bearing carrier shim (.010)
24	F 5358	Differential bearing carrier oil seal
25	F 5359	Differential bearing carrier assembly - includes Item 24
26		Differential bearing cup - See Item #43
27		Axle stud, 9/16" x 6" N.C.C.S. w/9/16" spring lockwasher
28		Drain plug, 1/2" pipe
29	F 5401	P.T.O. housing gasket
30	F 5402	Differential cover plate
31	F 5403	Differential side gear thrust washer
32	F 5404	Differential side gear
33	F 5405	Differential pinion gear
34	F 5406	Differential pinion gear thrust washer
35		Drain plug, 1/2" pipe
36		P.T.O. housing screw and spring lock washer, 3/8" x 1", N.C. Cap Screw w/ 3/8" washer (8 used)
37	F 5408	Differential pinion pin
38	F 5406	Differential pinion gear thrust washer
39	F 5404	Differential pinion gear
40	F 5404	Differential side gear
41	F 5403	Differential side gear thrust washer
42	F 5409	Ring gear rivet (12 used)
43	F 5410	Differential bearing (includes Item #26)
44	F 5411	Differential pinion pin lock pin
45	F 5412	Differential case
46	F 5359	Differential bearing carrier assembly (includes Item #51)
47	F 5330	Ring gear (includes Item #31, illustration page 13)
48	F 5410	Differential bearing (includes Item #52)
49	F 5357	Differential bearing carrier shim (.010) (A.R.)
50	F 5356	Differential bearing carrier shim (.004) (2 used)
51	F 5358	Differential carrier oil seal
52		Differential bearing cup (See item #43)
53		Filler plug, 1" pipe
54		Filler plug, 1/2" pipe
55	F 5414	Shift lever pivot washer
56	F 5415	Shift lever pivot washer ring
57	F 5416	Shift lever dust cover
58	F 6133	Shift lever on transmission
59	F 5350	Ring, pinion and differential assembly - Includes items 31, 32, 33, 34, 37, 38, 39, 40, 41, 42, 44, 45, 47 and item 31 on page 14)
60		Control cover screw, 3/8" x 1", N. C. Cap screw
61		Control cover screw spring lockwasher, 3/8"
62		Differential bearing carrier screw, 1/2" x 1-1/2" N.C. Cap screw
63		Differential bearing carrier screw spring lockwasher, 1/2"
	F 5942	Transmission and differential assy. for fabricated axle housing

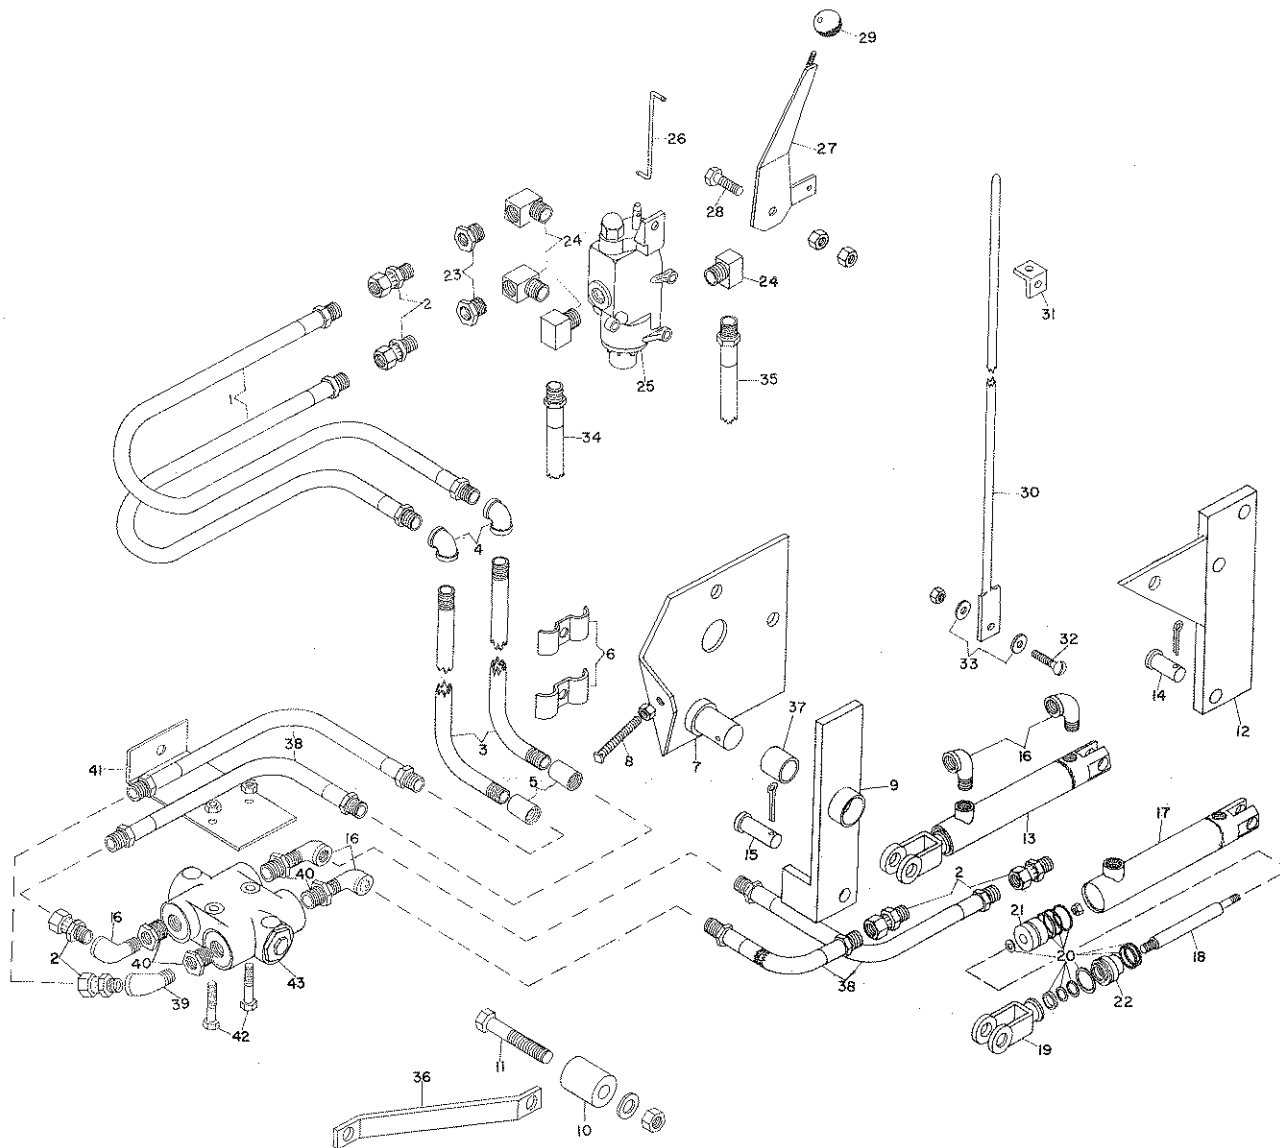

HYDRAULIC LIFT FOR PICKUP


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 136	Pressure hose, 24" (2 used)	23	FT 103	1/4" x 3/8" pipe bushing
2	FT 107	Union swivel	24	F 6037	Brass elbow for F 5952 valve (4 used)
3	F 6020	Ridgid hydraulic tube (2 used)	25	F 5952	Hydraulic control valve
4	FT 82	1/4" pipe elbow	26	F 6163	Linkage rod
5		1/4" pipe coupling	27	F 6018	Hydraulic pickup control lever
6	F 6021	Clamp for F 6020 tubes (2 used)	28		5/16" x 1-1/4" N.C. cap screw
7	F 6015	Pickup ram plate	29	F 5554	Knob for control lever
8		1/2" x 2-1/2" square head set screw	30	F 6087	Pickup lift indicator rod
9	F 6014	Forward pivot arm	31	F 6088	Guide for F 6087
10	F 6016	Lift bumper on pickup	32		1/4" x 1-1/4" R. H. stove bolt
11		1/2" x 3-3/4" N. F. H. T. cap screw	33		1/4" flat washer
12	F 6164	Anchor strap	34	FT 169	Pressure hose (pump to valve) 35"
13	F 5953	Hydraulic cylinder for pickup	35	FT 150	Pressure hose (valve to bypass) 90"
14	F 5049	1/2" x 1-3/8" pin	36	F 6134	Lift bumper brace
15	F 1323	1/2" x 1-3/4" pin	37	F 7247	Bushing, 7/8" x 1" x 1"
16	FT 18	1/4" street elbow	38	FT 163	Pressure hose 13-1/4"
17	F 6082	Tube assembly only	39		1/4" 45° street elbow
18	F 6083	Piston rod	40		1/4" to 1/4" pipe bushing
19	F 6084	Clevis	41	F 6369	Mounting bracket for lockout valve
20	F 6051	Ring kit for F 5953 cylinder	42		5/16" x 2-1/4" N.C. cap screw
21	F 6085	Piston	43	F 6188	Lockout valve
22	F 6086	Cylinder head			

STEERING PUMP ASSEMBLY

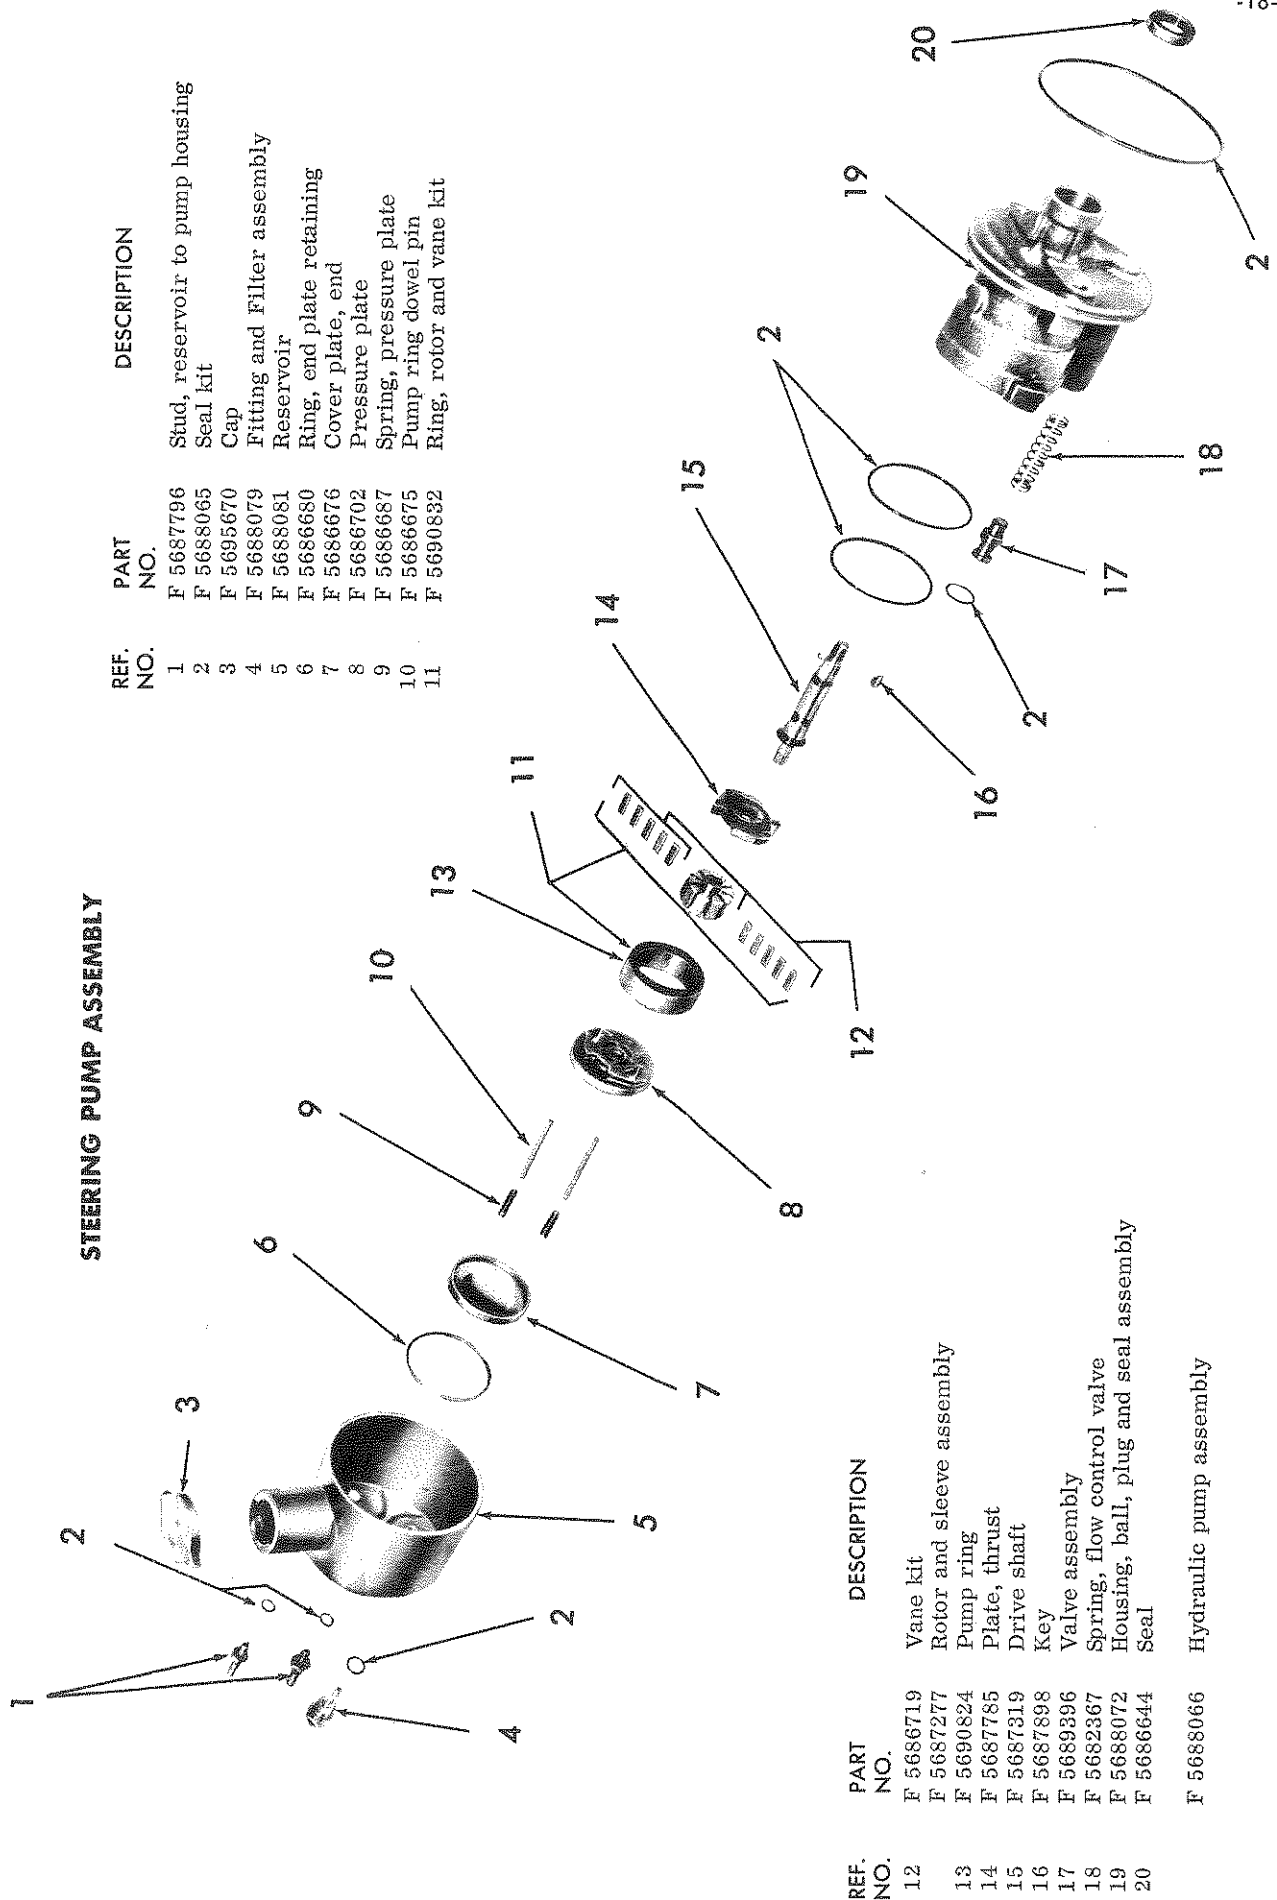


REF. NO.	PART NO.	DESCRIPTION
1	F 5687796	Stud, reservoir to pump housing
2	F 5688065	Seal kit
3	F 5695670	Cap
4	F 5688079	Fitting and Filter assembly
5	F 5688081	Reservoir
6	F 5686680	Ring, end plate retaining
7	F 5686676	Cover plate, end
8	F 5686702	Pressure plate
9	F 5686687	Spring, pressure plate
10	F 5686675	Pump ring dowel pin
11	F 5690832	Ring, rotor and vane kit

REF. NO.	PART NO.	DESCRIPTION
12	F 5686719	Vane kit
13	F 5687277	Rotor and sleeve assembly
14	F 5690824	Pump ring
15	F 5687785	Plate, thrust
16	F 5687319	Drive shaft
17	F 5687898	Key
18	F 5689396	Valve assembly
19	F 5682367	Spring, flow control valve
20	F 5688072	Housing, ball, plug and seal assembly
21	F 5686644	Seal
22	F 5688066	Hydraulic pump assembly

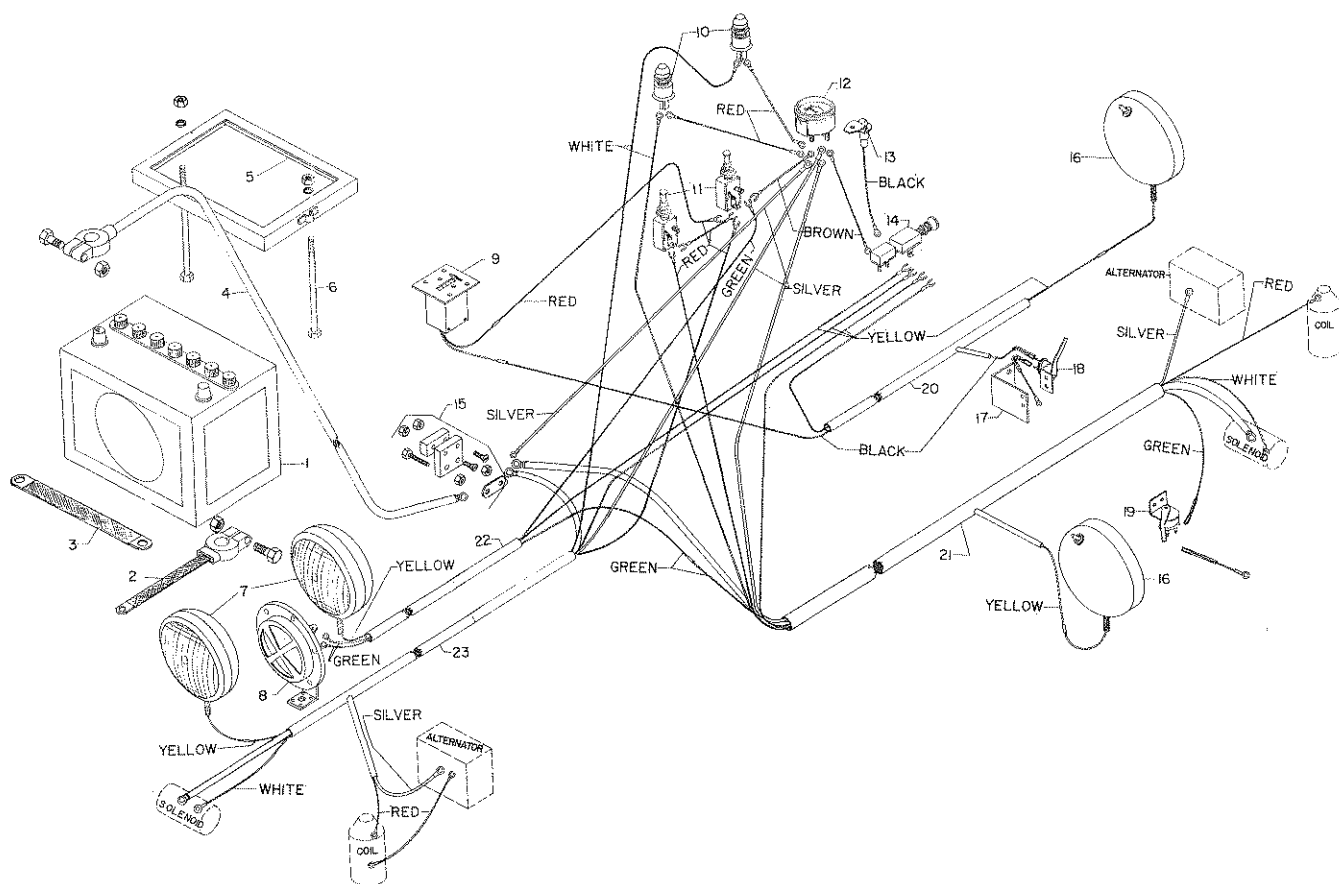


ELECTRIC SYSTEM

REF. NO.	PART NO.	DESCRIPTION
1	F 1499	Battery, 12V
2	F 7742	Battery ground cable
3	F 6006	Ground strap, deck to frame
4	F 7743	Battery cable, insulated
5	F 5499	Battery hold down bracket
6	F 1691	Bolt for battery hold down
7	F 1645	Light, front 12V sealed beam (2 used)
	F 5842	Sealed beam unit, 12V
8	F 1497	Horn, wire alarm, 12V
9	F 5954	Bale counter, electronic
10	F 5237	Starter switch (2 used)
	F 5236	Rubber cap for starter switch (2 used)
11	F 5235	Ignition switch (2 used)
12	F 6040	Ammeter
13	F 5234	Instrument panel light socket
14	F 862	Light switch
15	F 6039	Junction block assembly
16	F 1644	Light, rear combination, 12V sealed beam (2 used)
	F 5941	Sealed beam unit 12V (Comb. red and clear)
17	F 5961	Bracket for F 5978 sending unit (arm type)
	F 6372	Bracket for F 6371 sending unit (Push Button type)
18	F 5978	Sending unit for bale counter (arm type)
	F 6371	Sending unit for bale counter (push button type)
19	F 946	Switch for wire alarm
20	F 6114	Wire harness (bale counter and light)
21	F 6115	Wire harness (rear motor)
22	F 6116	Wire harness (horn and light)
23	F 6117	Wire harness (front motor)

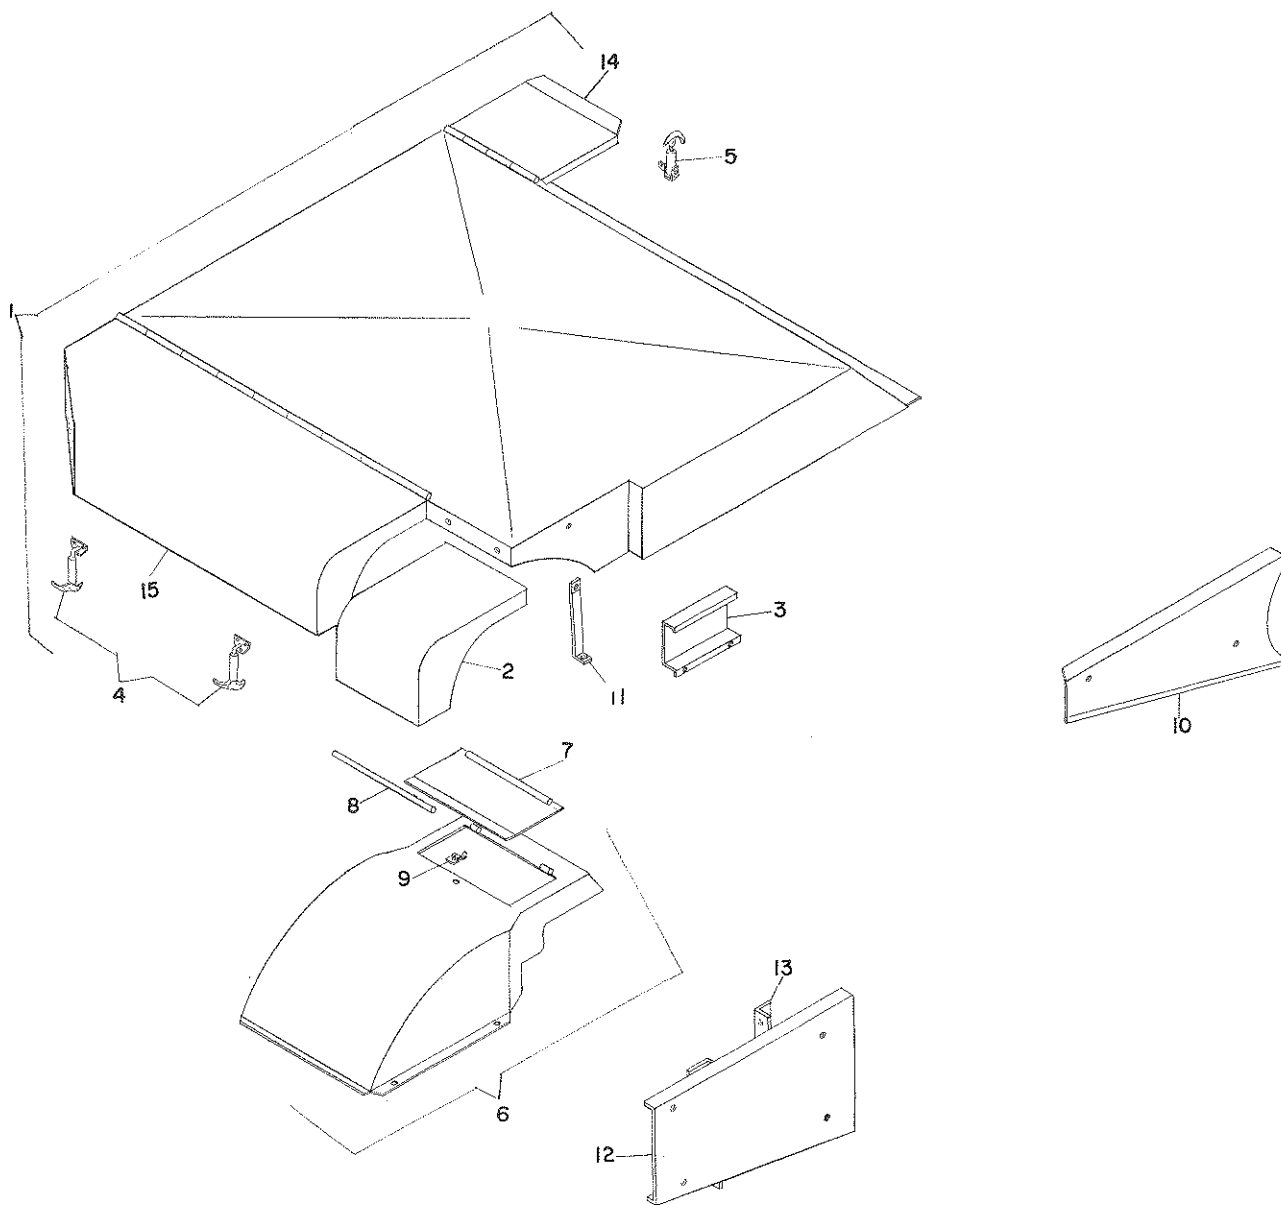


SHIELDS

REF. NO.	PART NO.	DESCRIPTION
1	F 5971	Shield over pickup complete
2	F 6104	Front section (not hinged)
3	F 6062	Shield for tension control chain
4	F 7166	Catch for access door
5	F 853	Catch for tool box cover
6	F 5969	Bull gear shield complete, 2 tie
	F 5970	Bull gear shield complete, 3 tie
	F 7550	Rubber grommet for mounting shield
7	F 6106	Inspection cover
8	F 6107	Hinge pin for inspection cover
9	F 6108	Catch for inspection cover
10	F 5972	Knotter chain shield
11	F 6105	Mounting bracket for shield left side
12	F 6167	Belt shield bracket with battery box
13	F 5884	Belt shield bracket mounting angle
14	F 7635	Tool box lid
15	F 6111	Access door for F 5971 shield

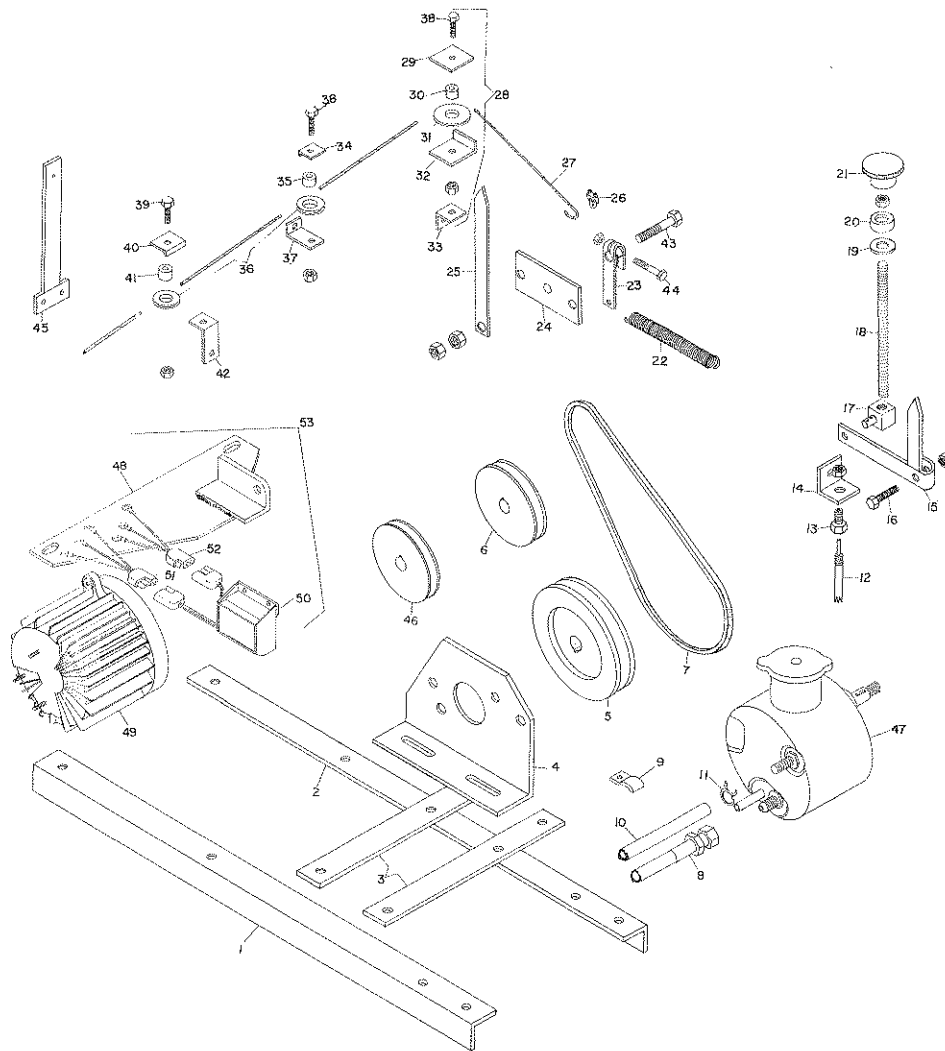


BALE WEIGHT INDICATOR & HYDRAULIC PUMP MOUNT AND DRIVE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 5632	Support angle for hydraulic pump, front (VH4D)	25	F 6009	Bale weight indicator
	F 5856	Support angle for hydraulic pump, front (VG4D & V461)	26	F 990	1/8" cable clamp
2	F 5689	Support angle for hydraulic pump, rear (VH4D)	27	F 6010	Cable, bale weight 16'
	F 5885	Support angle for hydraulic pump, rear (VG4D & V461)	28	F 7236	Sheave complete
3	F 5633	Strap, hydraulic pump support (VH4D) (2 used)	29	F 995	Plate
	F 5887	Strap, hydraulic pump support (VG4D and V461)	30	F 4068	Bushing
4	F 6112	Pump mounting bracket	31	F 4067	Roller
5	F 5614	Sheave, hydraulic pump driven	32	F 994	Shield for F 4067 roller
6	F 5612	Sheave, hydraulic pump drive	33	F 6007	Mounting angle (front)
7	F 5625	Belt, hydraulic pump drive (AX35)	34	F 5483	Clip for F 4014 roller
8	F 5959	Pressure hose, 13' - 10"	35	F 4015	Bushing
9	F 5635	Hose clip, 3/8" hole	36	F 4014	Roller
	F 6158	Hose clip, 17/32" hole	37	F 6008	Mounting angle for center sheave
10	F 6123	Return hose, 3/8" -14'	38		1/4" x 1" N.C. cap screw
11		3/8" hose clamp	39		1/4" x 1" N.C. cap screw, 2 tie
12	F 6048	Tension control conduit 91"			3/8" x 1-1/2" N.C. cap screw, 3 tie
	F 6049	Tension control wire 96"	40	F 5483	Clip for F 4014 roller, 2 tie
13	F 5559	Beach nut w/nut and washer	41	F 4015	Clip for F 4014 roller, 3 tie
14	F 6050	Anchor angle for tension control conduit		F 4015	Bushing, 2 tie
15	F 6041	Tension control indicator		F 6120	Bushing, 3 tie
16		5/16" x 2" N.C. cap screw	42	F 6121	Mounting angle for rear sheave, 2 tie
17	F 1005	Adjusting stud nut	43		3/8" x 2-1/2" N.C. cap screw
18	F 6042	Adjusting rod	44		5/16" x 1-1/4" N.C. cap screw
19		3/8" flat washer	45	F 5927	Cable bracket for bale weight indicator
20	F 1131	Thrust bearing	46	F 5613	Generator drive sheave, 3-1/2" O.D., 9/16" bore
21	F 1007	Control knob	47	F 568806	Hydraulic pump assembly
22	F 268	Indicator return spring	48	F 6373	Alternator mounting bracket
23	F 6113	Bale weight indicator lever	49	F 6374	Sealed Motorola alternator with pulley
24	F 6122	Bale weight indicator base plate	50	F 6375	Motorola regulator for F 6374 alternator
			51	F 6376	Cable for alternator
			52	F 6377	Cable for alternator
			53	F 6378	Sealed alternator kit with regulator, cable and bracket

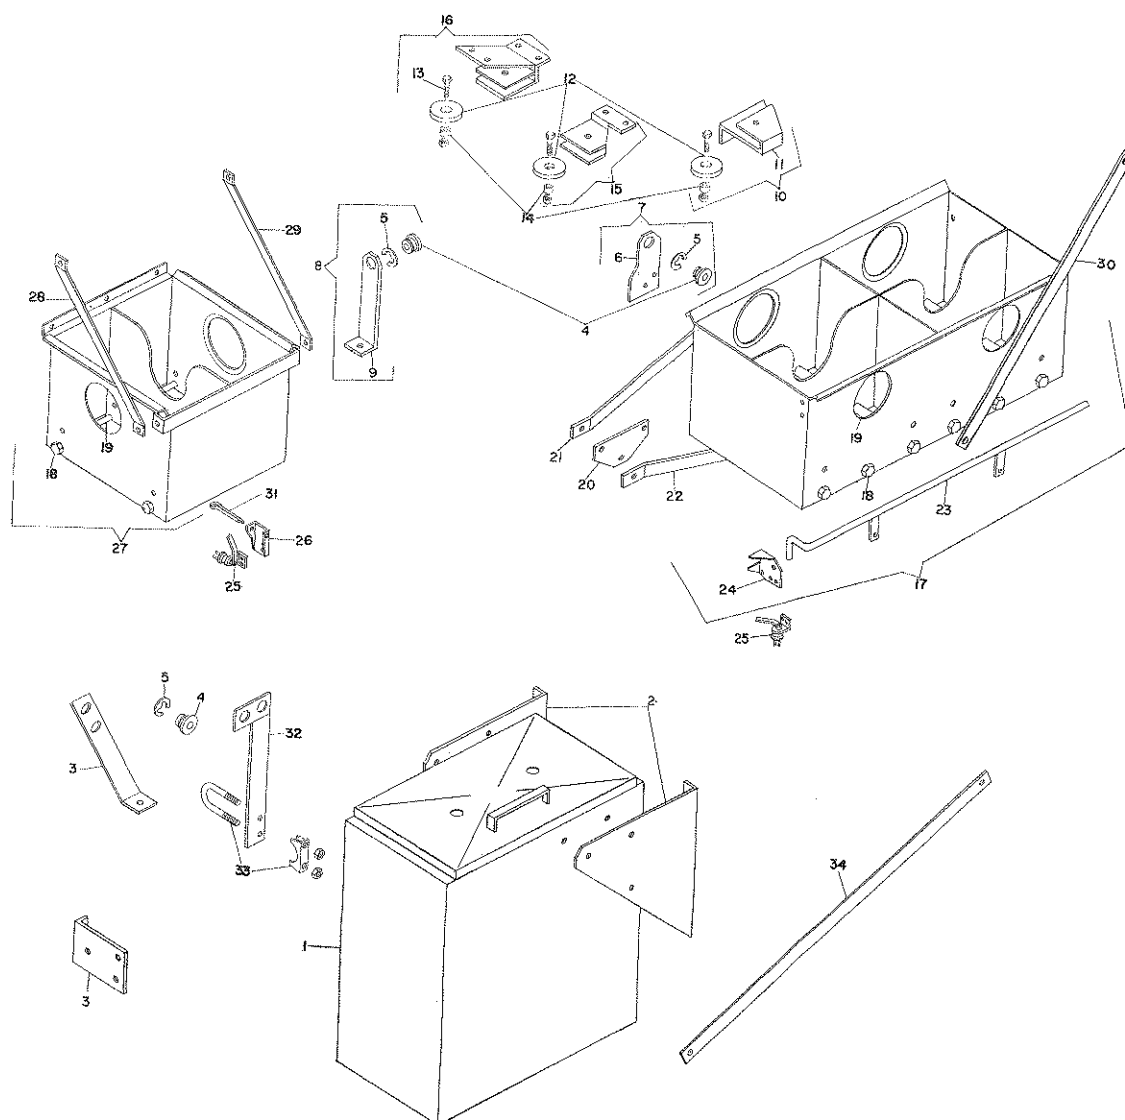


WIRE AND TWINE BOX

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 285	Twine box (4 compartment)	15	F 5531	Lower front wire guide w/roller R.H. 3 tie
	F 399	Twine box (6 compartment)	16	F 5532	Lower front wire guide w/roller L.H., 3 tie
2	F 7136	Bracket for mounting 4 compartment twine box	17	F 5911	4-compartment wire box w/ braces
	F 7691	Bracket for mounting 6 compartment twine box	18	F 4211	Stay bolt
3	F 6379	Twine guide holder, 2 tie	19	F 4195	Pipe spacer
	F 6380	Twine guide holder, 3 tie	20	F 6098	Wire box brace bracket
4	F 856	Twine and wire guide bushing	21	F 6100	Wire box brace, L.H., top
5	F 857	Snap ring for F 856	22	F 6101	Wire box brace, L.H., bottom
6	F 6094	Wire guide bushing holder (bolts to engine)	23	F 7648	Rod for wire alarm, 2 tie
7	F 6095	Wire guide complete (bolts to engine)		F 7608	Rod for wire alarm, 3 tie
8	F 6096	Wire guide complete for 2 compartment wire box	24	F 4191	Mounting bracket for wire alarm, L.H.
9	F 6097	Wire guide bushing holder for 2 compartment wire box	25	F 946	Switch for wire alarm
10	F 5906	Wire guide complete (bolts under feeder house) 3 tie	26	F 842	Bracket w/cotter key for wire alarm switch
11	F 6099	Frame only for F 5906, 3 tie	27	F 5912	2-compartment wire box w/braces
12	F 4067	Roller for wire guides	28	F 6102	Brace for wire box, rear
13		1/4" x 1-1/4" N.C. cap screw	29	F 6103	Brace for wire box, front
14	F 4068	Bushing for F 4067 roller	30	F 6157	Brace, wire box, R.H.
			31	F 6381	Cotter Key with hole
			32	F 6382	Twine guide holder, 2 tie
				F 6383	Twine guide holder, 3 tie
			33	F 6384	Clamp, 1-3/4 "U"
			34	F 6385	Brace, 6 compartment twine box

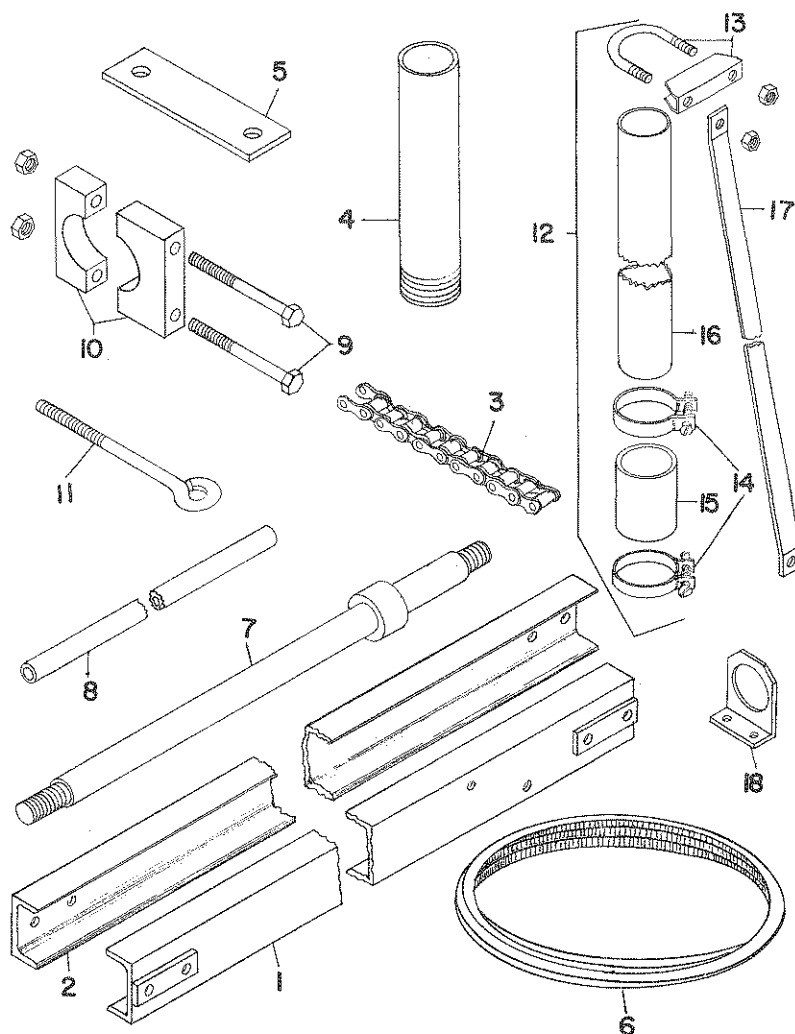

ITEMS DIFFERENT FROM PULL TYPE

REF. NO.	PART NO.	DESCRIPTION
1	F 5962	Conn rod channel, L.H. drilled for F 7542
2	F 5963	Conn rod channel, R.H.
3	F 5965	Knotter drive chain, 270P (twine tie)
	F 5966	Knotter drive chain, 271P (wire tie)
4	F 6312	Exhaust pipe, 12"
5	F 6125	Shim under F 34 bearing
6	F 5951	Pickup drive belt (CX128)
7	F 5964	Feed arm conn rod
8	FT 208	Return hose, pump to bypass 1/2" x 105"
9		1/2" x 5-1/2" N.C. cap screw
10	F 6386	Bearing, R.H. pickup mounting
11	F 96	Eyebolt for pick-up balance springs
12	F 6387	Air cleaner extension kit
13	F 6388	Brace clamp for air cleaner extension
14	F 6389	Clamp, air cleaner hose
15	F 6390	Hose, air cleaner
16	F 6391	Extension pipe, 5 ft. for air cleaner
17	F 6392	Brace, 56", for air cleaner extension
	F 6393	Brace, 57", for air cleaner extension
18	F 6168	Bracket for oil gauge
	F 5916	Bull gear luber for SP baler
	F 6185	Tow bar complete with ball for S.P. baler

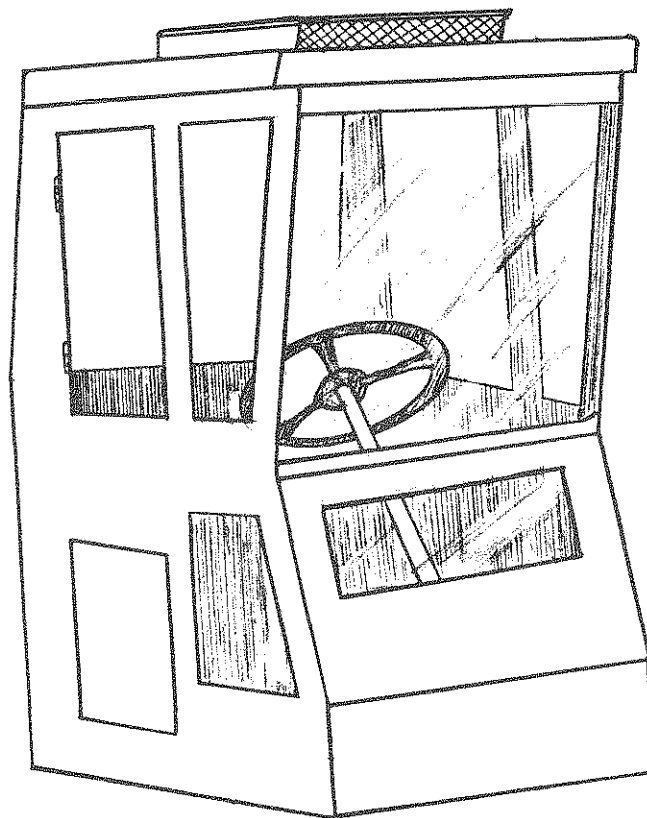

EXCEL CAB

REF. NO.	PART NO.	DESCRIPTION
F 6135		Glass, 1/4" tinted safety, top front
F 6136		Glass, 1/4" tinted safety, rear
F 6137		Glass, 1/4" tinted safety, bottom front
F 6138		Glass, 1/4" tinted safety, right and left top front
F 6139		Glass, 1/4" tinted safety, right rear
F 6140		Glass, 1/4" tinted safety, bottom right front
F 6141		Glass, 1/4" tinted safety, door
F 6142		Rubber moulding for setting glass (sold by the foot)
F 6143		Window adjusting arm
F 6144		Door handle, inside
F 6145		Door handle, outside
F 6146		Door latch w/handles
F 6148		Air deflector
F 6150		Floor mat
F 6394		Dome light
F 6395		Blower switch
F 6153		Rear view mirror
F 6396		Blower fan, 12 volt
F 6155		Door latch
F 6397		Blower filter
F 6398		Domelite switch

INTENTIONALLY BLANK