

Hoist & Dump Valve

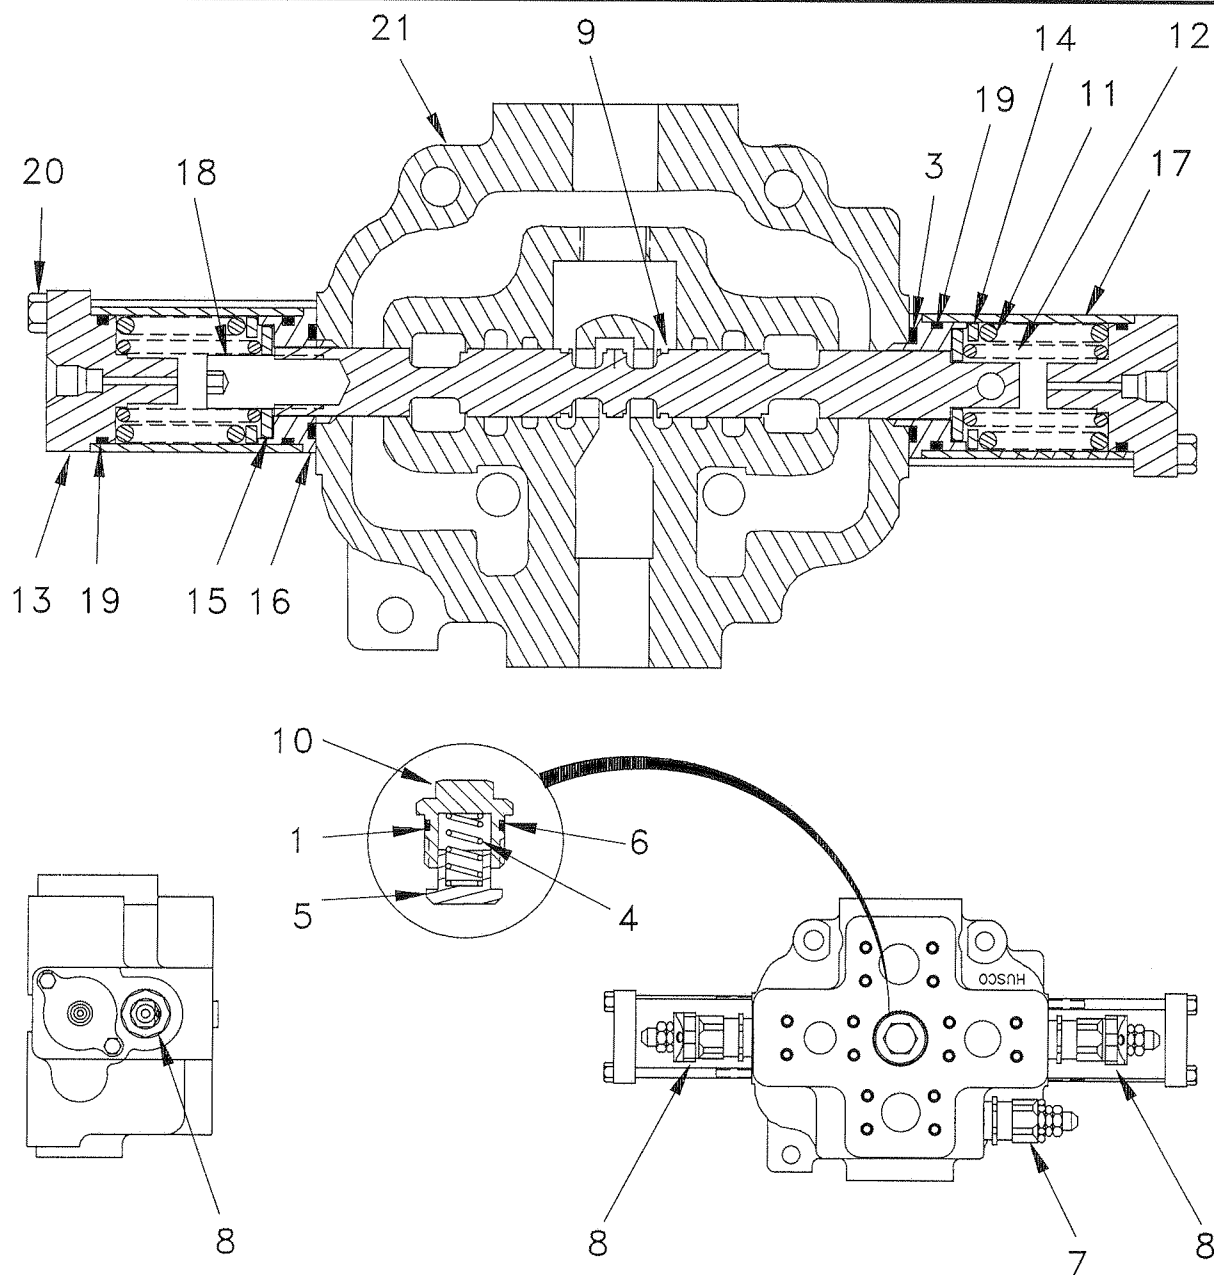


Hoist & Dump Valve

Item	Part No	Qty	Description
	233624		Hoist & Dump Valve
1	* -----	1	. O-Ring
2	235592	2	. Plug, NPTF
3	* -----	2	. O-Ring
4	* -----	1	. Spring
5	206968	1	. Poppet, C.V.
6	231405	1	. Backup Ring
7	223821	1	. Relief Valve Asm (See Pg 3)
8	223822	2	. Relief Valve Asm (See Pg 4)
9	NSS	1	. Spool
10	235594	1	. Plug
11	* -----	2	. Spring
12	* -----	2	. Spring
13	227038	2	. End Cap

Item	Part No	Qty	Description
14	232230	2	. Spacer
15	232231	2	. Spacer
16	232232	2	. Retainer Cap, Spool
17	232227	2	. Tube
18	232233	1	. Spool End
19	* -----	4	. O-Ring
20	223852	4	. Capscrew
21	NSS	1	. Valve Housing

* 569870 Seal & Spring Kit
 NSS Not Sold Separately

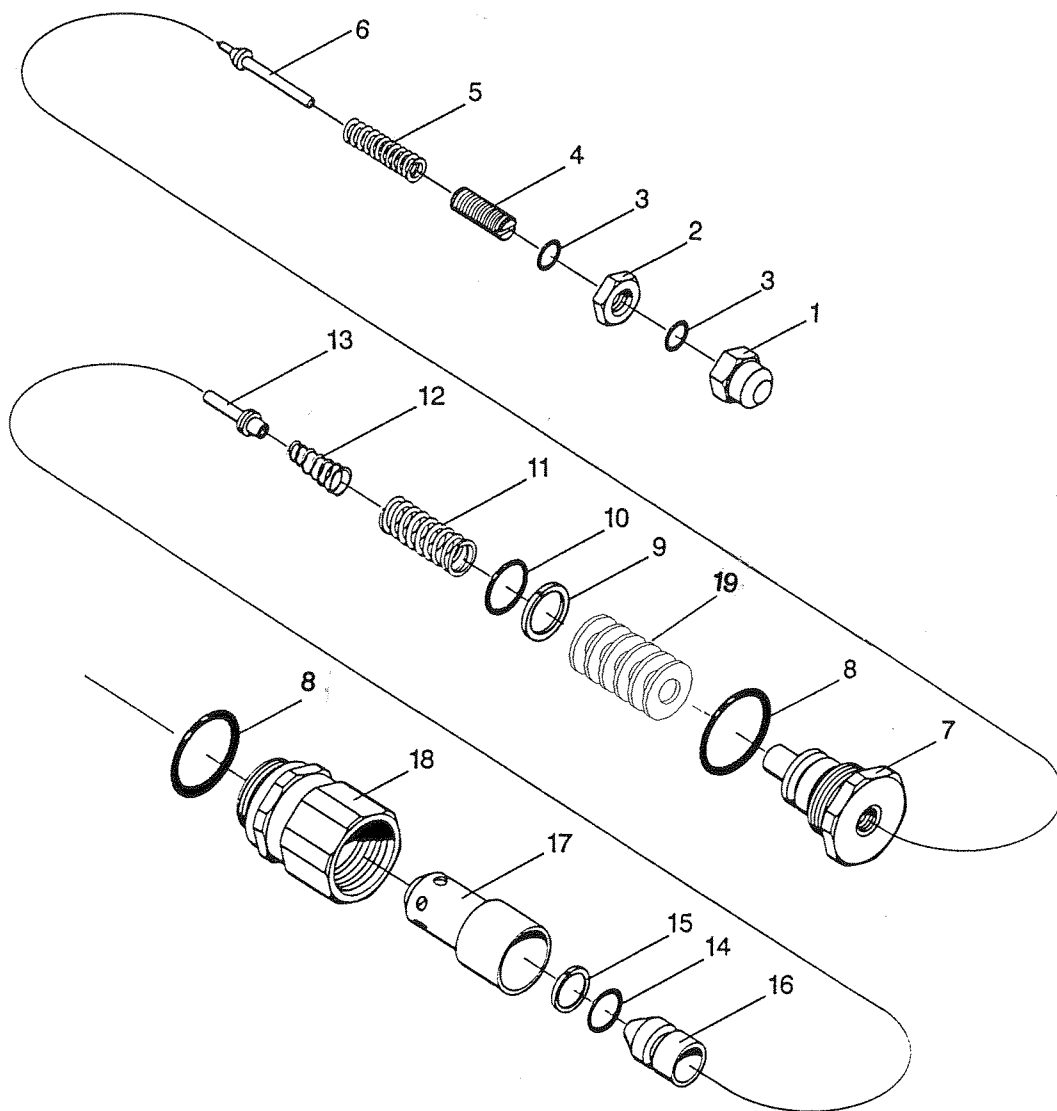


Relief Valve Assembly

Item	Part No	Qty	Description	Item	Part No	Qty	Description
	223821		Relief Valve Assembly (See Page 2)				
1	235588	1	. Nut	12	* -----	1	. Spring
2	235587	1	. Nut	13	235596	1	. Piston
3	* -----	2	. O-Ring	14	* -----	1	. O-Ring
4	211721	1	. Adjusting Screw	15	211715	1	. Backup Ring
5	* -----	1	. Spring	16	NSS	1	. Poppet, R.V.
6	211719	1	. Poppet, R.V.	17	NSS	1	. Poppet Housing
7	NSS	1	. Plug, R.V.	18	NSS	1	. Body
8	* -----	2	. O-Ring	19	235599	6	. Washer
9	* -----	2	. Backup Ring				
10	* -----	1	. O-Ring				
11	* -----	1	. Spring				

* 231406 Seal & Spring Kit

NSS Not Sold Separately

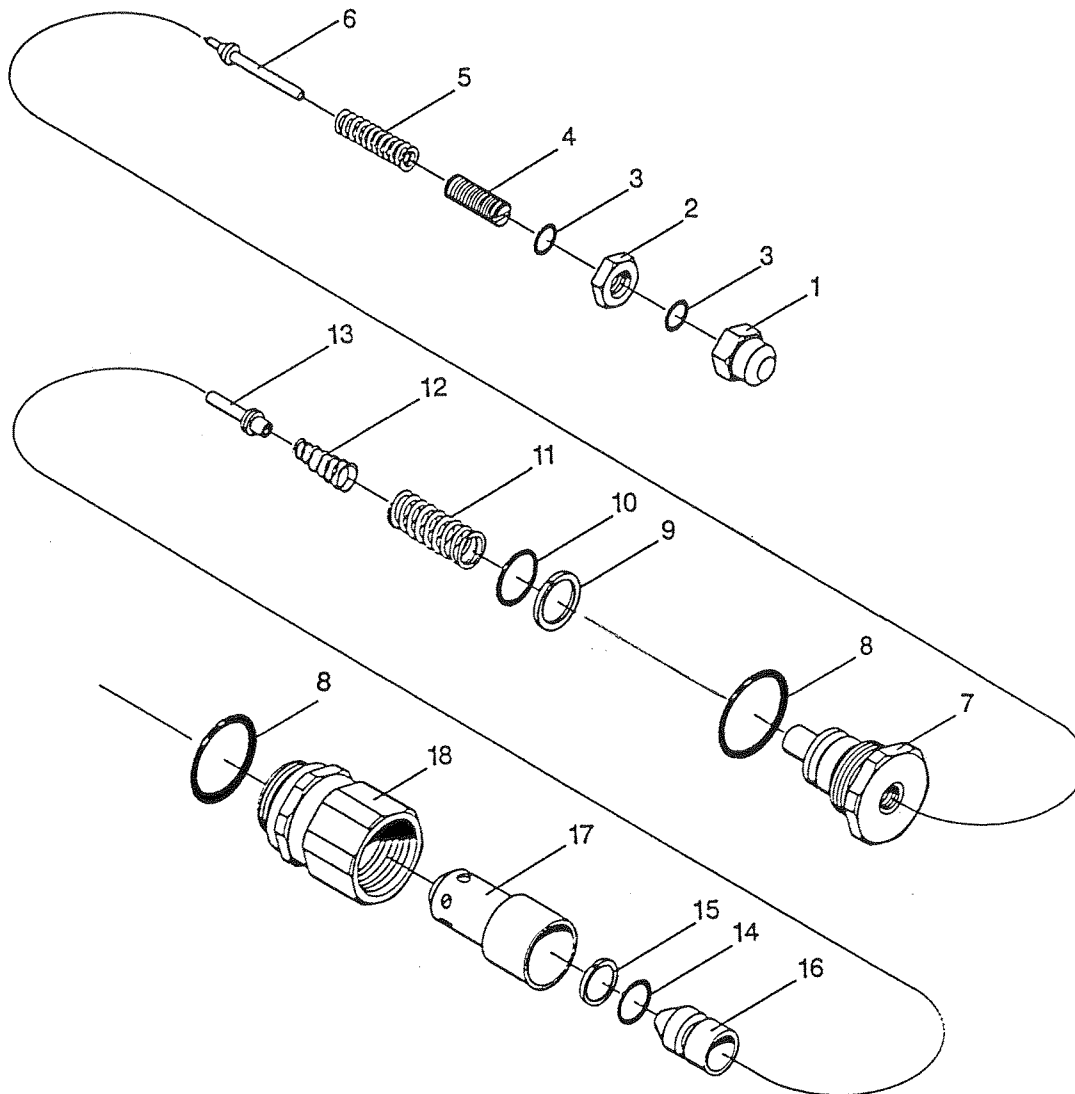

Relief Valve Assembly

Item	Part No	Qty	Description
	223822		Relief Valve Assembly (See Page 2)
1	235588	1	. Nut
2	235587	1	. Nut
3	* -----	2	. O-Ring
4	211721	1	. Adjusting Screw
5	* -----	1	. Spring
6	211719	1	. Poppet, R.V.
7	NSS	1	. Plug, R.V.
8	* -----	2	. O-Ring
9	* -----	1	. Backup Ring
10	* -----	1	. O-Ring

Item	Part No	Qty	Description
11	* -----	1	. Spring
12	* -----	1	. Spring
13	NSS	1	. Piston
14	* -----	1	. O-Ring
15	* -----	1	. Backup Ring
16	NSS	1	. Poppet, R.V.
17	NSS	1	. Poppet Housing
18	NSS	1	. Body

* 231407 Seal & Spring Kit
 NSS Not Sold Separately