


---

Joystick Handle

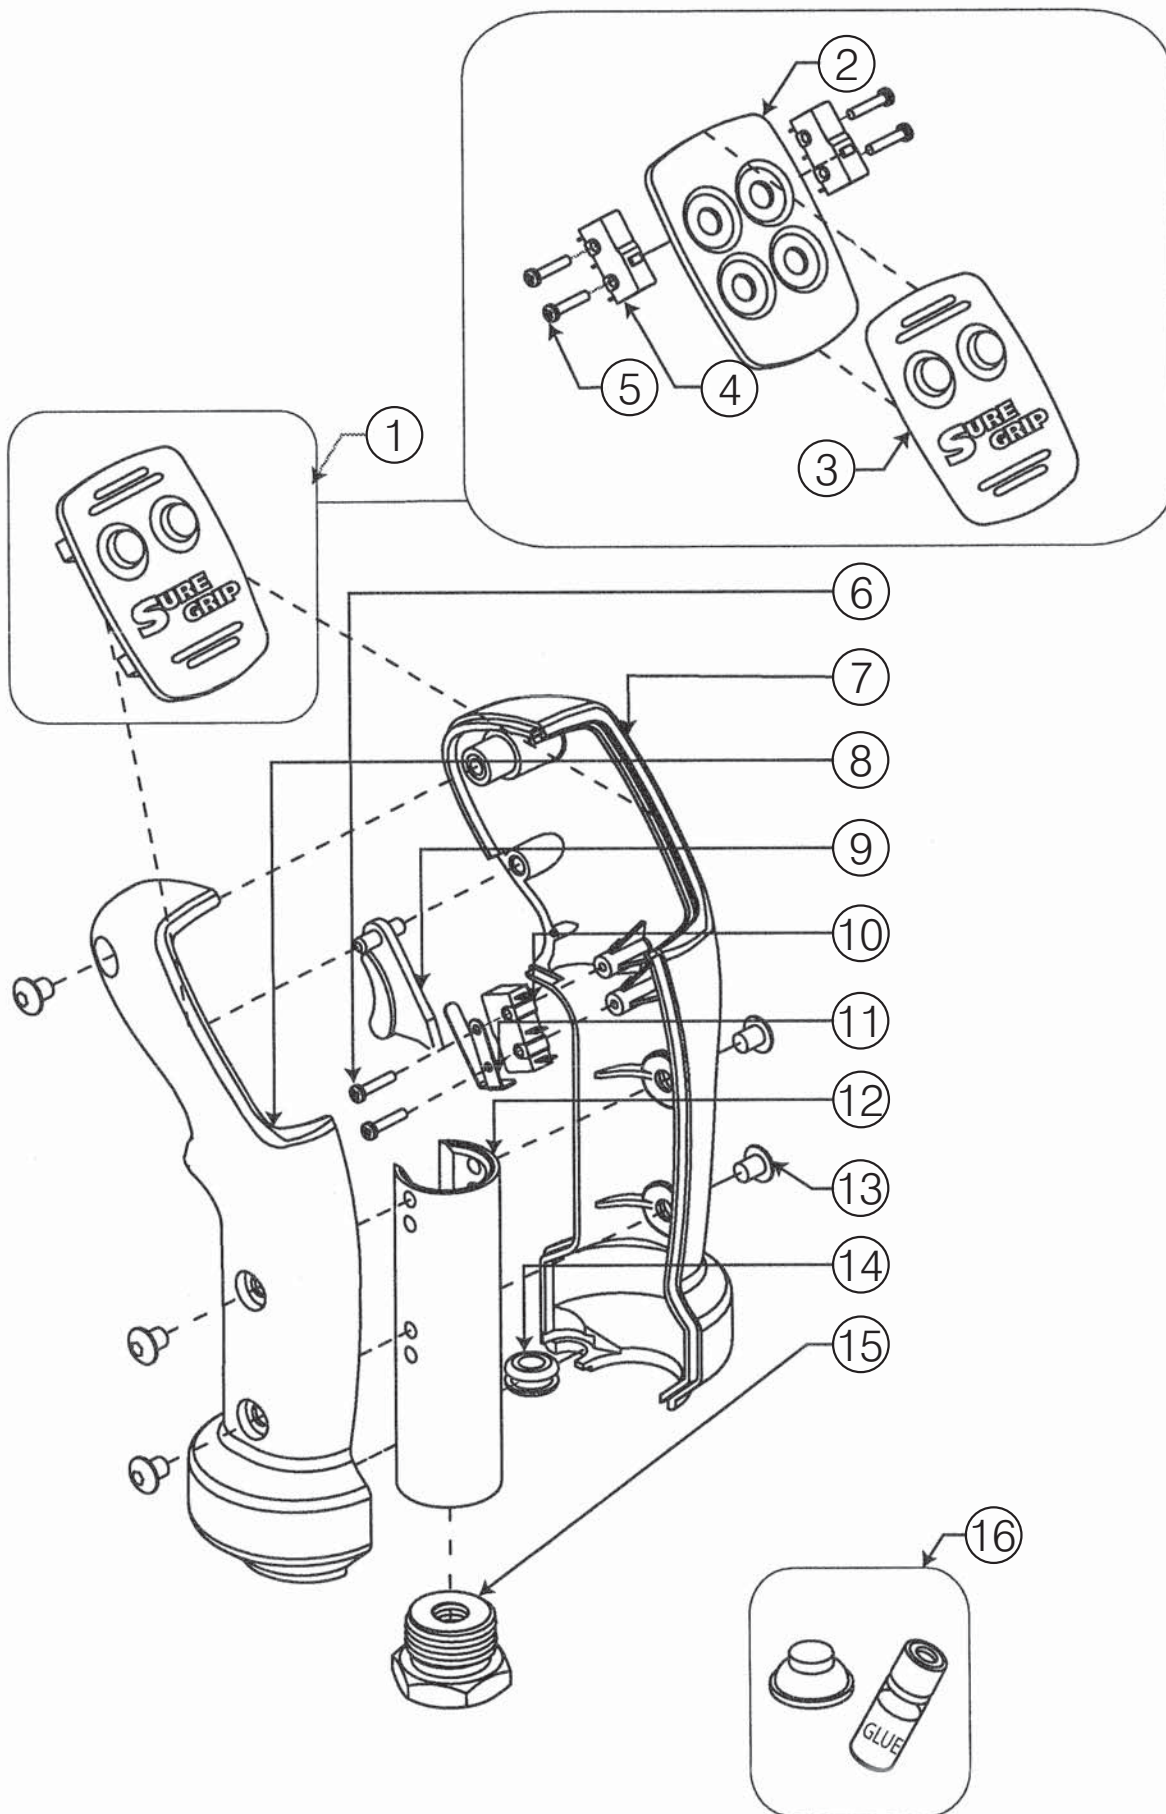

## Joystick Handle

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	<b>251318</b>		<b>Joystick Handle</b>				
1	249900	1	. Faceplate Assy, 2 Button	9	253041	1	. Single Trigger, "C" Series
2	249901	1	. . Faceplate	10	250627	1	. Momentary Switch
3	249902	1	. . 2 Button Overlay	11	253042	1	. Leaf Spring for Trigger
4	250627	2	. . Momentary Switch	12	249908	1	. Mounting Pin
5	249904	4	. . Capscrew	13	249909	5	. Capscrew
6	253037	2	. Capscrew	14	249910	1	. Grommet
7	250173	1	. Handle Case, Right	15	249911	1	. Adapter Bushing
8	250174	1	. Handle Case, Left	16	249912	1	. Flex Button Repair Kit