

SERVICE BULLETIN INDEX

NUMBER	SUBJECT	SECTION
E0013	Towing Vehicles w/Powershift Transmissions	Transmission (04)
E0017	Transmission Breather Maintenance	Transmission (04)
E0024	Air Cleaner Service Gauge Operation	Engine (02)
E0025	Initial Lubrication	Lubrication (17)
E0040	Flushing Hydraulic Systems	Hydraulics (12)
E0041	Slack Adjuster Failure	Brakes (09)
E0054	Driveline Installation & Lubrication	Driveline (06)
E0058	Packing Kits, Hydraulic Cylinders	Hydraulics (12)
E0079	Hydraulic Pump Failures	Hydraulics (12)
E0081	Loctite Usage & Application	General (01)
0087	Troubleshooting Hydraulic System	Hydraulics (12)
E0113	Assembly of Swivel Box to Bogie	Swivel (07)
E0115	Steering Linkage Adjustment (Articulated)	Steering (11)
E0124	Radiator Fill Procedures	Engine (02)
E0130	Standard Capscrew Torque Specifications	General (01)
E0159	Brake Adjustment for Clark 75,503 Axle	Brakes (09)
E0161	Alternator Service Precautions	Electrical (03)
0166	Brake Frame Fastening Bolt Replacement	Brakes (09)
E0173	Cessna Hydraulic Pump Service Kit	Hydraulics (12)
E0174	Plastic Tube Repair Kit	Air System (10)
E0179	Wheel & Tire Maintenance	Wheels (23)
E0183	Rim & Tire Safety	Wheels (23)
E0185	Lumberjack Loadlock Deactivation	Hydraulics (12)
E0197	Cab Tilting Procedures	Cab (13)
E0205	Cylinder Mounted Restrictors - Hoist & Tilt	Hydraulics (12)
E0206	Plastic Pilot control Tube Conversion	Hydraulics (12)
E0225	Lumberjack Kit Conversions for Air Controls	Air System (10)
E0231	Safety Check Valve Installation, P/N 207917	Air System (10)
E0236	Clark 85,000 Axle Wheel Studs & Nuts	Axle (08)
0237	Pin Redesign Holddown & Kickoff	Carriage (18)
E0240	Hand Operated Fire Extinguisher Bracket	General (01)
E0243	CHD Wheel Service	Wheels (23)
0244	Clark Axle 75,503 Series Brake Transition	Brakes (09)
E0248	Electronic Declutch System	Electrical (03)
E0250	Air System Leaks	Air System (10)
0253	Exhaust Blankets	Engine (02)
E0254	Brake Shuttle Relocation Kit	Air System (10)
E0260	Ansul Fire Suppression System (-65°F)	Options (10)
E0261	Expello Automatic Heat & Drain Air Valve Kit	Air System (10)
E0262	Premature Failure of Seat Air Spring Assembly	Cab (13)
E0265	Cummins Engine Lubrication	Engine (02)
E0266	Ross Steering Pressures	Steering (11)
0269	Tailpost Housing Reinforcing Kit	Steering (11)
0271	Safety - Fire Suppression system Failure	Options (22)
E0272	Troubleshooting "PT" Fuel Pump Shutdown Valves	Engine (02)
0273	Lubrication of Swivel Box Hinge Pins	Swivel (07)
E0277	Disc Brake Power Cluster, P/N 217612	Brakes (09)
E0283	Resurfacing the 32" Brake Disc	Brakes (09)
E0285	No., 2-D Fuel (Cummins)	Engine (02)

NUMBER

SUBJECT

SECTION

0286	Lumberjack Steering Gear & Column Replacement	Steering	(11)
0287	Finning 4-Wheel Drive LJ Steering Campaign	Steering	(11)
0288	HCC 4-Wheel Drive LJ Steering Field Campaign	Steering	(11)
E0291	Synchro-Start Speed Switch	Electrical	(03)
E0292	New Style Disc Brakes	Brakes	(09)
E0293	Chassis Axle Brake Air Can	Brakes	(09)
0294	Bucket Push Arm Kit	Push Arm	(21)
0295	Hydraulic & Fuel Tank Covers	Chassis	(26)
E0296	High Temperature Brake Lining	Brakes	(09)
0297	Boom Reinforcing Kit	Boom	(14)
E0298	Cummins Engine, Pre-Lubrication	Engine	(02)
E0299	Pressurized Hydraulic Tanks	Hydraulics	(12)
E0303	Flow Divider & Relief Change	Hydraulics	(12)
E0304	Electric Float Kit - P/L 10216	Hydraulics	(12)
E0307	Bucket Cutting Edge Hardface	Bucket	(27)
E0310	Hub to Drum Fastener, Size 3/4" vs 7/8"	Axle	(08)
E0311	Steel Back Brake Lining, CHD-17, 24 & CD-500, 800	Brakes	(09)
E0312	Cab Heater Installation	Cab	(13)
E0313	Modulated Trans Clutch Supports	Transmission	(04)
E0314	Adjustment of Differential Ring Gear Thrust Screw	Axle	(08)
E0315	Diff Pinion Shaft Inner Bearing Staking	Axle	(08)
E0316	Bevel Ring Gear & Pinion Gear Timing	Axle	(08)
E0317	Powershift Transmission Oil Level	Transmission	(04)
E0318	Converter Charging Pump	Converter	(05)
E0319	Lubricating Planetary Wheel Ends	Axle	(08)
E0320	Drive Axle Wheel Bearing Adjustment	Axle	(08)
E0321	Dexron II Automatic Transmission Fluid	Lubrication	(17)
E0322	Axle Housing to Spindle Studs	Axle	(08)
E0323	Wheel Hub Oil Seal Installation	Axle	(08)
E0324	37.5-33 Drive Tires, L-490	Tires	(24)
WSB0325	Air System Modifications	Air System	(10)
WSB0326	Hinge Pin Lubrication, L-4100, L-4130	Maint & Lube	(17)