

## High Pressure Filter Service

**1** Stop system power and vent captive pressure.

**2** Drain filter assembly.

**3** Remove bowl and element assembly.

**4** Push down to squeeze tangs and lift element.

**5** Twist to remove core.

**6** Retain reusable core.

**7** Discard used element.

**8** Insert reusable core into new element until it snaps.

**9** Push element assembly into bowl, snap tangs.

**10** Inspect o-ring and anti-extrusion ring.

**11** Install bowl with new element.

**12** Torque bowl, vent and drain plugs.

**13** Power up and inspect.

