

### **Spring Applied / Hydraulically Released Liquid Cooled Brake Friction Disc Lining Wear Check Procedure**

The brake must be applied to make the wear indicator check.

1. Clean thoroughly the area around the wear indicator.
2. Push wear indicator pin against the reaction plate.
3. When the wear indicator pin is flush with the indicator nut face or raised casting surface the friction and lining disc must be replaced.

**(See Illustration)**

