

Rear View Monitor



Figure 1 Rear View Monitor

1. **POWER/MENU** 
 - **Power:** Press the power/menu button to turn the screen ON (Switch Red to Green Lamp). Press the power/menu button to turn the screen OFF.
 - **Menu:** Press the power/menu button to enter the MENU Mode. Press the button 5 to enter the FUNCTION, PICTURE, NOR/MIR, UP/DOWN TRIGGER, CAMERA NAME, CAM MODES, SCAN, REAR SCALE ADJ.
2. **QUAD(PIP) SELECT** 

Press the QUAD(PIP) button to enter the QUAD.
-> 3 PIP (CA1 LARGE, CA3/4/2 SMALL), 2 PIP (CA1 LARGE, CA3/2 SMALL)
-> 3 SPLIT (CA1/2/3) -> 2 SPLIT (CA3/2) -> 2 SPLIT (CA4/1) -> QUAD
3. **AUTO SCAN & LOCKING** 
 - Press the scan button, it shows the CA1 -> CA2 -> CA3 -> CA4.
 - Press the lock button for 3 seconds-> 'BUTTONS HAVE BEEN LOCKED!'
 - Press the lock button for 3 seconds to unlock -> 'BUTTONS HAVE BEEN UNLOCKED!'
4. **CAMERA SELECT** 
 - Press the camera button one by one, it shows CA1 -> CA2 -> CA3 -> CA4.
5. **ZOOM & AV SELECT** 
 - Press the zoom button in single channel full screen mode.
 - Press the zoom button for 2 seconds, it turns to A/V mode.
6. **VOLUME CONTROL** 
 - Press the  button for volume up and the  button for volume down.
7. **DIMMER CONTROL** 
 - Use to set the LCD Backlight brightness. Default is brightest mode.

Menu

Select  menu button to enter or exit the monitor menu.

Monitor will switch to main screen while no key input in 10 secs.

Main Menu Titles : FUNCTION, PICTURE, NOR/MIR, UP/ DOWN, TRIGGER, CAMERA NAME, CAM MODES, SCAN

Operation:


- From menu to menu :  Previous Menu,  Next Menu
- Sub-menu selection :  Enter the sub-menu from the menu
- From sub-menu to sub-menu :  Up,  Down
- Sub-menu selection :  or 

Menu Tree


FUNCTION		DESCRIPTION	TRIGGER		DESCRIPTION
LANGUAGE	ENGLISH	8 LANGUAGES	REAR SCALE	ON	OFF
SYSTEM	NTSC/PAL	TV SYSTEM	BLINK MARK	ON	OFF
DIRECTION	0° / 180°	ANGLE	TRIG 1	CAM1	
DIMMER	1(2,3,4,5,OFF)	SET BRIGHTNESS	TRIG 2	CAM3/CAM2	
AUTO POWER	ON		TRIG 3	2 PIP	
LOGO SET		ON, (2~20Sec)	TRIG 4	3 PIP	
AV OUTPUT	LIVE/QUAD		HAZARD	QUAD	
SHUTTER	ON		CAMERA NAME		DESCRIPTION
RESET		FACTORY DEFAULT	CAM1	REAR	
PICTURE		DESCRIPTION	CAM2	RIGHT	
CONTRAST	15		CAM3	LEFT	
BRIGHTNESS	15		CAM4	FRONT	
COLOR	15		CAM MODES		DESCRIPTION
TINT	15		QUAD	ON	OFF
NOR/MIR		DESCRIPTION	3 PIP	ON	OFF
CAM1	NORMAL	MIRROR	2 PIP	ON	OFF
CAM2	NORMAL	MIRROR	3 SPLIT	ON	OFF
CAM3	NORMAL	MIRROR	CAM3/2 SPLIT	ON	OFF
CAM4	NORMAL	MIRROR	CAM4/1 SPLIT	ON	OFF
ALL	NORMAL	MIRROR	SCAN		DESCRIPTION
UP/DOWN		DESCRIPTION	AUTO SCAN	ON	
CAM1	UP/DOWN	UP SIDE DOWN	SCAN KEY	ONE	FULL
CAM2	UP/DOWN	DOWN SIDE UP	CAM1	3	(SEQUENCE)
CAM3	UP/DOWN		CAM2	3	
CAM4	UP/DOWN		CAM3	3	
ALL	UP/DOWN		CAM4	3	
REAR SCALE ADJ					
STOP			REAR		

Figure 2 Menu Tree


SCREEN DISPLAY

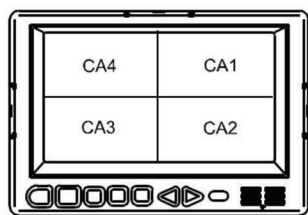


QUAD DISPLAY

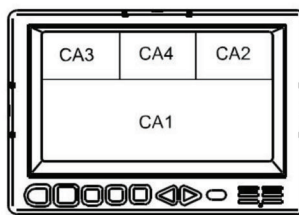


3 PIP DISPLAY

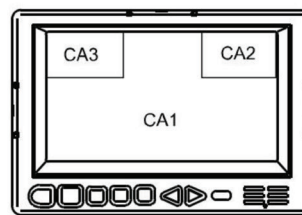


2 PIP DISPLAY

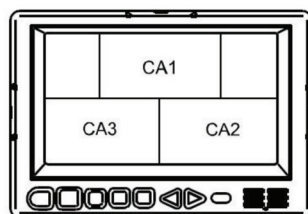

3 SPLIT DISPLAY

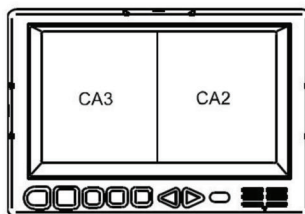


2 SPLIT DISPLAY(CA3/CA2)

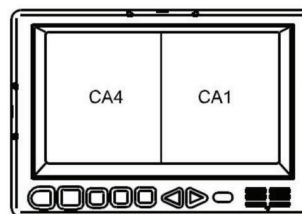


2 SPLIT DISPLAY(CA4/CA1)


TRIGGER DISPLAY

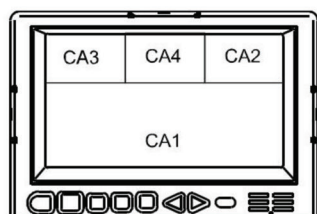


TRIGGER 3 PIP DISPLAY

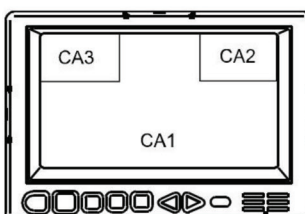


TRIGGER 2 PIP DISPLAY

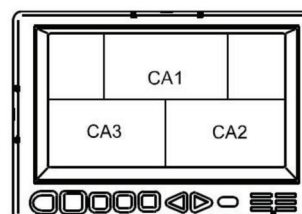


TRIGGER 3 SPLIT DISPLAY

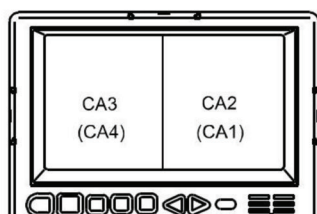

TRIGGER 2 SPLIT DISPLAY

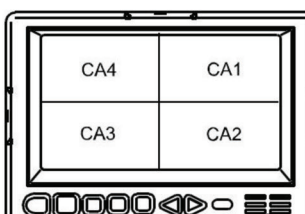

TRIGGER QUAD DISPLAY

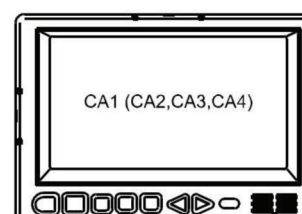

TRIGGER SINGLE DISPLAY

Figure 3 Display Modes

INTENTIONALLY LEFT BLANK