

## 6 PISTON BRAKE CALIPER

### BRAKE PAD REPLACEMENT

To replace the front disc brake pads on the L-130B Lumberjack proceed as follows:

1. Loosen the six 1"NC mounting bolts, Item (1).
2. Slide the outer caliper half, Item (2), out toward the wheel hub approximately 3/4 inch.
3. Remove the outer brake pad by sliding it out between the disc driver, Item (3), and the caliper frame.

NOTE: Refer to detailed instructions on Page 3 of MAINTENANCE/OVERHAUL MANUAL - 6 PISTON BRAKE CALIPER, FORM 80-249.

