

# 579702 Override System Operating Instructions

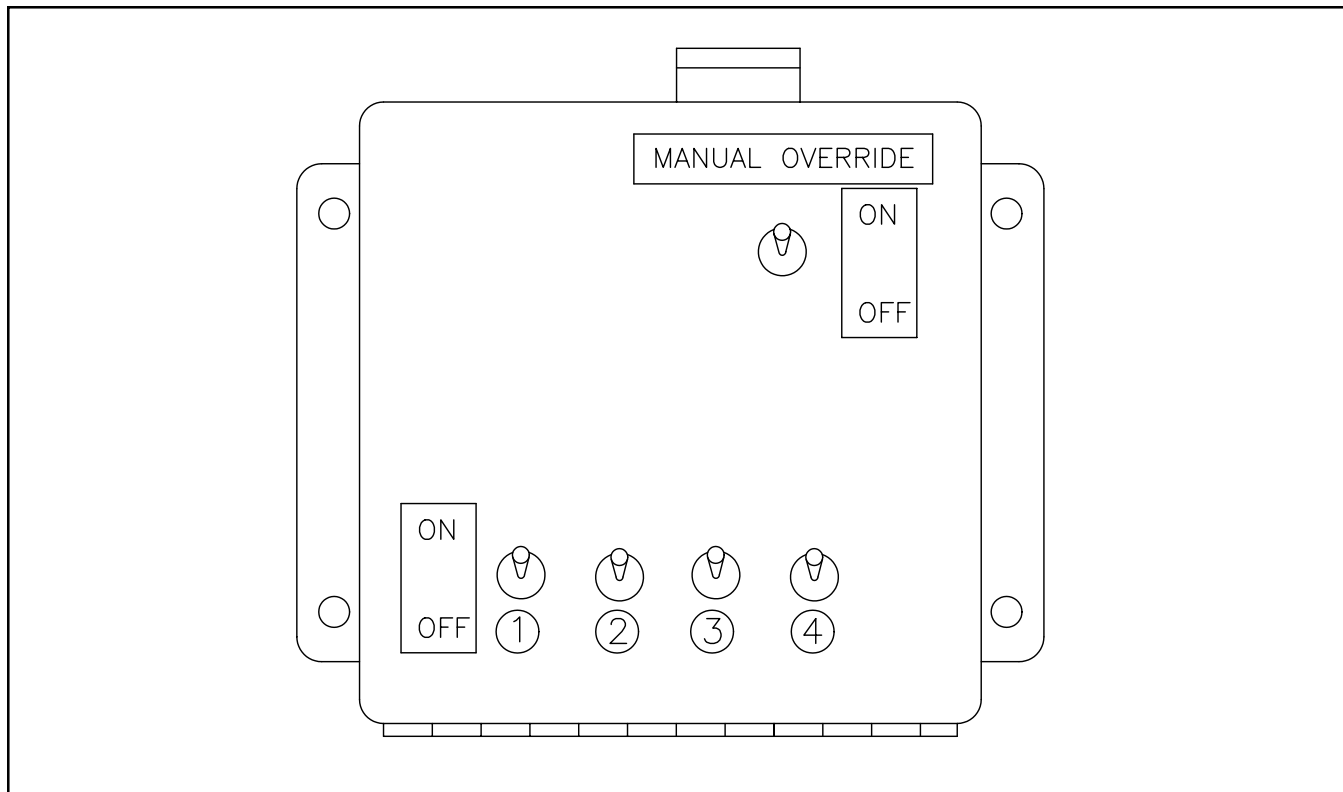


Figure 1: Override Box

## To Raise or Lower All Quadrants:

1. Turn the 4-position selector switch on the display box off.



## CAUTION

**CAUTION: DAMAGE TO THE CPU MAY RESULT FROM LEAVING THE CPU ON.**

2. Flip the manual override toggle switch on the override box to ON. See Figure 1.
3. Flip the four quadrant toggle switches to on.
4. Operate the proportional joystick as usual.  
**NOTE: SINCE THE CPU IS NOT OPERATING, THE QUADRANTS WILL NOT NECESSARILY BE RAISED OR LEVELED AT THE SAME RATE AND MAY NEED INDIVIDUAL ADJUSTMENT.**

## To Adjust Individual Quadrants:

1. Turn off all the quadrant toggle switches, except the quadrant(s) that need(s) adjusting.
2. Operate the proportional joystick as usual.

When finished, turn the manual override toggle switch to OFF.

**NOTE: IT IS IMPORTANT THAT THE MANUAL OVERRIDE SWITCH IS TURNED OFF AFTER LEVELING. OTHERWISE, THE CYLINDERS ARE ALLOWED TO DRIFT AND WILL COME OUT OF LEVEL.**