

Wagner Chipdozer Battery Disconnect Switch



CAUTION

Turn the Battery Master Disconnect **OFF** during shipping. Failure to do so will drain the batteries and the Wagner Chipdozer may not work properly when put into operation.

