

## Suggested Stocking Guide HLT185-612

### Tools

Allied P/N	Description	On-Hand Quantity (Recommended)	See Section In Parts Book	Where Used
243274	Accumulator Recharge Valve	1	5-1	R13646
509574	Air Hose Kit	1		Various
558533	Fire Extinguisher Wrench	1	9-1	579079

### Consumables (Approximately 1 Year Supply\*)

Allied P/N	Description	On-Hand Quantity (Recommended)	See Section In Parts Book	Where Used
219374	Grease	20 Gallons		Various
238206	Transmission Fluid	10 Gallons	3-2	109-0156
219371	Hydraulic Oil	110 Gallons	5-6	583364
243458	Hydraulic Return Filter Elements	8	5-5	243457
236077	Engine Oil	110 Gallons	2-1	253666
235720	Axle- Differential-Rear	5 Gallons	3-1 (583082)	578903
	Axle- Differential-Front	5 Gallons	3-1 (583082)	578786
	Axle- Planetary Hubs	8 Gallons (2 Gal Each)	3-1 (583082)	241600
	Flow Divider Gearbox	1 Gallon	5-6	400-0009
239408	Additive For Front & Rear Differential	1 QT	3-1 (583082)	578903
		1 QT	3-1 (583082)	578786
221340	Anti-Freeze	20 Gallons	2-1 (583089)	087-0206
210299	Air Filter	4	4-1	583083
254866	Air Cleaner Safety Element	2	2-5	089-0129
587676	Engine Oil Filter	12	2-1	253666
587677	Engine Fuel Filter Element	12	2-1	253666
232153	Cooling System Filter	12	2-1	253666
570245	Service Kit, 100 GPM Hyd Filter	12	5-5	228201
247429	Transmission Filter Element	8	3-2	583091
587678	Fan Belt	1	2-1	253666
254108	Shoe, Brake	8	3-1	583082
254116	Kit, Hardware, Brake	4	3-1	583082

\*Calculated at 2000 hours/year.

**Suggested Stocking Guide HLT185-612****Miscellaneous Parts / Seals**

Allied P/N	Description	Quantity on Machine	See Section In Parts Book	Where Used
R238535	Breather Element	2	3-2	583091
578833	Suction Filter Cover Plate Gasket	1	5-6	583364
203257	Cross Assembly F/Driveline Assy	2	3-1	583082
216426	Cross Assembly F/Driveline Assy	1	3-1	583082
212389	Cross Assembly F/Driveline Assy	2	3-1	583082
200307	Elbow, Air Intake (Rubber)	3	2-5	583095
253478	Elbow, Air Intake (Rubber)	1	2-5	583095
241644	Rubber Boot, Control Valve	1	7-2	109-0159
241819	Shock Absorber, Seat	1	7-3	575305
176-0089	Rubber Door Stop	2	8-1	583087
103-0173	Gasket, Axle W/Out Brakes, Steering	24	8-2	583357
579051	Gasket, Cab Group	1	7-1	583084
236847	Gasket, Door Group Assembly	1	7-1	400-0062
		1	7-1	400-0063
222451	Gasket, Tandem Pump	1	3-2 (583156)	093-0157
27360	Gasket, Steering/Hoist, Pump	1	5-2	093-0155
254889	Gasket, Pilot, Pump	1	5-2	254889
505449	Gasket, Hoist, Pump	1	5-2	254888

## Suggested Stocking Guide HLT185-612

### Electrical

Allied P/N	Description	Quantity on Machine	See Section In Parts Book	Where Used
249692	Display Module, Powerview	1	7-2	583097
584089	Program, DVC10	1	4-1	586782
584026	Transducer Assembly	4	4-1	586782
584030	Remote Control Box Assembly	1	4-1	586782
200220	Battery, 12v	2	2-1	583089
249803	Battery, Lithium; 3.6 Vdc	1	9-1	575455
249106	Battery Disconnect Switch	1	2-1	583089
117-0235	Light, Side Marker, Yellow	6	6-2	583093
117-0230	Light, Signal, Red	6	6-2	583093
117-0229	Light, Signal, Yellow	2	6-2	583093
117-0232	Light, Rear Marker, Red	2	6-2	583093
117-0238	Light, Signal, Yellow	2	6-2	583093
232906	Light, Flasher, Amber	1	6-2	583093
117-0234	Light, Reverse	2	6-2	583093
117-0240	Light, Platform	2	6-2	583093
117-0227	Headlight, Assembly	2	6-2	583093
225644	Light, Blue	1	7-2	583097
224065	Light, Green	2	7-2	583097
117-0242	Light, Red	9	7-2	583097
117-0245	Light, Amber	5	7-2	583097
085-0216	Switch, Ignition	1	7-2	583097
085-0219	Switch, Toggle	5	7-2	583097
085-0220	Switch, Light Dimmer	1	7-2	583097
085-0234	Switch, Mirror Position	2	7-2	583097
085-0300	Switch, Rotary 4-Pos	1	7-2	583097
254619	Switch, Wiper Delay; 12V, 4-Position	2	7-2	583097
162-0120	Cable, Heater Pull	1	7-2	583097
558929	Knob Kit (Green and Yellow Knobs F/ Brake Valve)	1	4-4	218928

## Suggested Stocking Guide HLT185-612

### Rebuild Kits/Components

Allied P/N	Description	Quantity on Machine	See Section In Parts Book	Where Used
R14093	Service Kit, Front Differential, Pinion & Side Gear	1	3-4	241591
	Service Kit, Rear Differential, Pinion & Side Gear	1	3-4	241543
241586	Service Kit, Front Differential, Ring & Pinion	1	3-4	241591
	Service Kit, Rear Differential, Ring & Pinion	1	3-4	241543
241587	Service Kit, Front Differential, Cap & Cover Asy	1	3-4	241591
	Service Kit, Rear Differential, Cap & Cover Asy	1	3-4	241543
241593	Service Kit, Front Differential, Sub Assembly	1	3-4	241591
241588	Service Kit, Rear Differential, Sub Assembly	1	3-4	241543
241589	Service Kit, Front Differential, Case	1	3-4	241591
	Service Kit, Rear Differential, Case	1	3-4	241543
587692	Service Kit, Planet Carrier	4	3-4	241523
578377	Service Kit, Suspension Cyl	12	5-4	578308
009-1508	Service Kit, Steering Group Cyl	4	5-4	578619
587683	Service Kit, Transmission	1	3-2	109-0156
570774	Service Kit, Converter	1	3-2	583156
218966	Service Kit, Brake Valve	1	4-4	218928
247515	Service Kit, Quick Release Valve	1	4-4	030-0534
247516	Service Kit, Modulating Relay Valve Cartridge & Diaphragm	1	4-3	030-1058
224747	Service Kit, Treadle Valve	1	4-4	211369
221647	Service Kit, Expello		4-3	217734
214419	Service Kit, Relay Valve	1	4-4	216285
234639	Service Kit, Steering Flow Amplifier Valve	1	5-3	234990
255140	Service Kit, Sectional For Control Valve	2	5-3	253982
255141	Service Kit, Mid-Inlet For Control Valve	4	5-3	253982
254832	Kit, Blanking;Indicator Trans Filter	2	5-5	584259

## Suggested Stocking Guide HLT185-612

### Bushings and Pins

Allied P/N	Description	Quantity on Machine	See Section In Parts Book	Where Used
200744	Bushing, Air Chamber	1	3-1	004-1653
		1	3-1	004-1656
		1	3-1	004-1654
		1	3-1	004-1657
219005	Bushing, Cab Mounting Group	2	7-1	578315
071-0723	Bushing, Drive Suspension Group	4	8-2	583086
501209	Bushing, Steering Suspension Group	12	8-2	583085
	Bushing, Drive Suspension Group	4	8-2	583086
578311	Bushing, Steering Suspension Group	24	8-2	583085
	Bushing, Drive Suspension Group	8	8-2	583086
578312	Bushing, Steering Suspension Group	24	8-2	583085
	Bushing, Drive Suspension Group	8	8-2	583086
578834	Bushing, Steering Suspension Group	24	8-2	583085
	Bushing, Drive Suspension Group	8	8-2	583086
071-0050	Bushing, Rubber	2	2-1	583089
071-0662	Bushing, Steering Assembly	4	3-1	578620
071-0728	Bushing, Beam End, Drive Suspension Group	4	8-2	583086
071-0821	Bushing, Drive Suspension Group	12	8-2	583085
		4	8-2	583086
019-1472	Pin, Cylinder, Steering Suspension Group	12	8-2	583085
	Pin, Cylinder, Drive Suspension Group	4	8-2	583086
578309	Pin, Drive Suspension Group	4	8-2	583086
	Pin, Steering Suspension Group	12	8-2	583085
578310	Pin, Drive Suspension Group	4	8-2	583086
	Pin, Steering Suspension Group	12	8-2	583085
019-1264	Pin, Steering Assembly	36	3-1	578620
019-1270	Pin, Steering Assembly	2	3-1	578620

**Suggested Stocking Guide HLT185-612****Bearings**

Allied P/N	Description	Quantity on Machine	See Section In Parts Book	Where Used
135-0284	Bearing, Carrier, Drivetrain	1	3-1	583082
135-0360	Bearing, Steering Suspension Group	12	8-2	583085
241534	Bearing Cone, Axle Kit	4	3-1	245299
204594	Bearing Cup, Axle Kit	4	3-1	245299
241531	Bearing Cone, Axle Kit	4	3-1	245299
241532	Bearing Cup, Axle Kit	4	3-1	245299
236719	Bearing, Seat Installation	1	7-3	583786
135-0372	Bearing, RH Rod End, Steering Layout	14	3-1	575635
	Bearing, LH Rod End, Steering Layout	14	3-1	135-0373
	Bearing, Cylinder Assembly, Steering Layout	8	3-1	578619
135-0057	Bearing, Drive Suspension Group	8	8-2	583086
135-0370	Bearing, Engine Mount	4	2-1	583089
136-0177	Bearing Cone, Outer, Steering Suspension Group	24	8-2	583357
136-0179	Bearing Cone, Inner, Steering Suspension Group	24	8-2	583357

## Suggested Stocking Guide HLT185-612

### Major Components

Allied P/N	Description	Quantity on Machine	See Section In Parts Book	Where Used
583156	Converter	1	2-1	583089
093-0155	Pump, Steering/Hoist	1	2-1	583089
093-0157	Pump, Tandem	1	2-1	583089
254889	Pump, Pilot	1	2-1	583089
254888	Pump, Hoist	1	2-1	583089
109-0156	Transmission	1	3-1	583082
109-0158	Transmission Cooler	1	2-1	583089
241543	Differential & Carrier, Rear	1	3-1	245299
241591	Differential & Carrier, Front	1	3-1	245299
241523	Planet Carrier Assembly	4	3-1	245299
098-0343	Axle Shaft	4	3-1	583082
246901	Driveline	1	3-1	583082
578983	Driveline	1	3-1	583082
203257	. Cross Assembly	2	3-1	578983
066-0687	Cylinder, Shutter	1	4-1	583083
578308	Cylinder, Suspension Group	12	8-2	583086
578619	Cylinder, Steering Group	4	3-1	578620
218928	Valve, Brake	2	4-1	583083
030-0534	Valve, Quick Release	1	4-1	583083
030-1058	Valve, Modulating Relay	1	4-1	583083
211369	Valve, Treadle	1	4-1	583083
030-1065	Valve, Treadle	1	4-1	583083
030-0024	Valve, Pop-Off	1	4-1	583083
030-0044	Valve, Check For Air Tank	2	4-1	583083
217734	Valve, Expello	4	4-1	583083
030-1060	Valve, Shuttle	1	4-1	583083
030-0667	Valve	2	7-2	583097
			4-1	583083
030-1065	Valve, For Air Horn	1	4-1	583083
030-1073	Valve, Flow Control	1	5-1	583094
030-1074	Valve, Flow Control	1	4-1	583083
204695	Valve, Check	1	4-1	583083
216285	Valve, Relay	1	4-1	583083
030-1071	Valve, Heater	1	7-3	583096
226271	Valve, Check	2	9-1	575455
232061	Valve, Shift Module	1	3-2	583091
234990	Valve, Steering Flow Amplifier	1	5-1	583094
245847	Valve, Check	1	5-1	583094
253982	Valve, Control Valve, 2 Spool	1	5-1	583094
254171	Valve, Check	1	5-1	583094

**Major Components Continued**

<b>Allied P/N</b>	<b>Description</b>	<b>Quantity on Machine</b>	<b>See Section In Parts Book</b>	<b>Where Used</b>
254173	Valve, Check	1	5-1	583094
030-0058	Valve, Check	1	5-1	583094
030-1028	Valve, Gauge	1	5-1	583094
030-1031	Valve, Shuttle	3	5-3	030-1030
030-1165	Valve, Push Button	1	7-3	583786
254173	Valve, Check	1	5-1	583094
030-0058	Valve, Check	1	5-1	583094
218728	Valve, Relief	1	9-1	575455



## Every 10 Hours / Daily

### Shift Maintenance Checklist

Note general vehicle condition. Clear away all collected debris - steam clean if necessary. Check for mechanical damage and loose or leaking components. Report all faults to maintenance department.

#### NOTICE

Always refer to engine manufacture operators and maintenance manuals before performing any maintenance on engine.

#### Before Starting Engine, Check the Following:

Ref	Component	OK	NO	ADD
1	ENGINE (Check oil level - check for leaks)			
2	V-BELTS (Check tension - check for damage - change as required)			
3	HYDRAULIC TANK (Check oil level - check for leaks)			
4	HYDRAULIC CYLINDERS (Check for leaks)			
5	RADIATOR & OIL COOLER (Check coolant level - check for leaks; are fins clean and unobstructed?)			
6	AIR CLEANER/INTAKE SYSTEM (Check indicator - clean / change element as required, empty dust cup, check for leaks / damage)			
7	ENGINE BELTS (Check for adjustment and wear)			
8	WHEELS & TIRES (Check condition and pressure)			
9	AIR TANK (Check drain valves for correct operation)			
10	LUBRICATION CHECK POINTS (See Page 17)			
11	WALK AROUND INSPECTION OF STRUCTURE (Check welds, leaks, damaged components, etc...)			
12	FIRE SAFETY CHECK (Check for accumulated debris in engine compartment, etc)			
13	FIRE SUPPRESSION SYSTEMS (Verify certifications are current)			

#### After Starting Engine, Check the Following:

Ref	Component	OK	NO	ADD
14	ENGINE (Does it sound normal?)			
15	INSTRUMENTS (Check for normal readings)			
16	CONTROLS (Check for normal operation)			
17	EXHAUST SYSTEM (Check for leaks and excessive smoke)			
18	TRANSMISSION (After warming to operation temp, check oil level - check for leaks)			

#### Note Anything Abnormal or in Need of Repair:

Component	Comments
LIGHTS	
DEFROSTER	
REVERSE WARNING HORN	
HORN	
WINDSHIELD WIPERS	
HEATER	
AIR CONDITIONER	

OPERATOR \_\_\_\_\_

SUPERVISOR \_\_\_\_\_

DATE \_\_\_\_\_

MODEL HLT185 \_\_\_\_\_

SERIAL No 118612 \_\_\_\_\_

HOUR METER \_\_\_\_\_

## Every 50 Hours or Weekly

### Checklist

1	Repeat the 10 hour check	OK <input type="checkbox"/>	No <input type="checkbox"/>
2	Check for fluid leaks - oil, fuel, water, transmission	OK <input type="checkbox"/>	Repair <input type="checkbox"/>
3	Check wheel lug nuts and studs mechanically	OK <input type="checkbox"/>	Repair <input type="checkbox"/>
4	Check battery electrolyte level	OK <input type="checkbox"/>	Add <input type="checkbox"/>
5	Lubricate - refer to Lubrication chart	OK <input type="checkbox"/>	No <input type="checkbox"/>
6	Check for structural damage - inspect chassis & attachments for bending, cracking & broken welds	OK <input type="checkbox"/>	Repair <input type="checkbox"/>

### Consumables

Allied P/N	Description	Quantity Required for this Interval
219374	Grease, Mobilgrease XHP 222 Special	As Required
238206	Transmission Fluid, Mobil 424	As Required
219371	Hydraulic Oil, Mobil DTE 10 Excel 32	As Required
236077	Engine Oil	As Required
235720	Drive Axle Gear Oil	As Required

MECHANIC \_\_\_\_\_

SUPERVISOR \_\_\_\_\_

DATE \_\_\_\_\_

MODEL HLT185 \_\_\_\_\_

SERIAL No 118612 \_\_\_\_\_

HOUR METER \_\_\_\_\_

## Every 250 Hours or Monthly

### Checklist

1	Repeat the 50 hour check	OK <input type="checkbox"/>	No <input type="checkbox"/>
2	Take engine oil sample for analysis	OK <input type="checkbox"/>	No <input type="checkbox"/>
3	Change engine oil & filters	OK <input type="checkbox"/>	No <input type="checkbox"/>
4	Change fuel filters	OK <input type="checkbox"/>	No <input type="checkbox"/>
5	Check axle differential oil level	OK <input type="checkbox"/>	Add <input type="checkbox"/>
6	Check axle planetary oil level	OK <input type="checkbox"/>	Add <input type="checkbox"/>
7	Change Cooling System Filter	OK <input type="checkbox"/>	No <input type="checkbox"/>
8	Check all hydraulic pressures and record	OK <input type="checkbox"/>	No <input type="checkbox"/>

### Consumables

Allied P/N	Description	Quantity Required for this Interval
236077	Engine Oil	9 Gallons
587676	Engine Oil Filter	1
232153	Engine Cooling System Filter	1
587677	Fuel Filter Element	1

MECHANIC \_\_\_\_\_

SUPERVISOR \_\_\_\_\_

DATE \_\_\_\_\_

MODEL HLT185 \_\_\_\_\_

SERIAL No 118612 \_\_\_\_\_

HOUR METER \_\_\_\_\_

### Every 500 Hours or Quarterly

#### Checklist

1	Repeat the 250 hour check	OK <input type="checkbox"/>	No <input type="checkbox"/>
2	Change Hydraulic filters	OK <input type="checkbox"/>	No <input type="checkbox"/>
3	Change Transmission filters	OK <input type="checkbox"/>	No <input type="checkbox"/>
4	Take oil samples from transmission, axle, and hydraulic system for analysis	OK <input type="checkbox"/>	No <input type="checkbox"/>
5	Check Accumulator pre-charge pressure	OK <input type="checkbox"/>	No <input type="checkbox"/>

#### Consumables

Allied P/N	Description	Quantity Required for this Interval
243458	Return Filter Elements	2
570245	Filter Service Kit, 100 GPM Hyd Filter	3
247429	Transmission Filter Element	2

MECHANIC \_\_\_\_\_

SUPERVISOR \_\_\_\_\_

DATE \_\_\_\_\_

MODEL HLT185 \_\_\_\_\_

SERIAL No 118612 \_\_\_\_\_

HOUR METER \_\_\_\_\_

## Every 1,000 Hours or Semi-Annually

### Checklist

1	Repeat the 500 hour check	OK <input type="checkbox"/>	No <input type="checkbox"/>
2	Change transmission oil	OK <input type="checkbox"/>	No <input type="checkbox"/>
3	Clean and flush cooling system	OK <input type="checkbox"/>	No <input type="checkbox"/>
4	Check pins and bushings for wear	OK <input type="checkbox"/>	No <input type="checkbox"/>
5	Steam clean machine, inspect for structural cracks	OK <input type="checkbox"/>	No <input type="checkbox"/>
6	Have ANSUL representative inspect and recertify fire suppression system	OK <input type="checkbox"/>	No <input type="checkbox"/>

### Consumables

Allied P/N	Description	Quantity Required for this Interval
238206	Transmission Fluid, Mobil 424	10 Gallons
221340	Anti-Freeze	7 Gallons

MECHANIC \_\_\_\_\_  
 SUPERVISOR \_\_\_\_\_  
 DATE \_\_\_\_\_  
 MODEL HLT185 \_\_\_\_\_  
 SERIAL No 118612 \_\_\_\_\_  
 HOUR METER \_\_\_\_\_

### Every 2,000 Hours or Annually

#### Checklist

1	Repeat the 1,000 hour check	OK <input type="checkbox"/>	No <input type="checkbox"/>
2	Drain, flush and fill differential	OK <input type="checkbox"/>	No <input type="checkbox"/>
3	Drain, flush and fill planetaries	OK <input type="checkbox"/>	No <input type="checkbox"/>
4	Change hydraulic oil	OK <input type="checkbox"/>	No <input type="checkbox"/>
5	Have Allied representative inspect machine (annually)	OK <input type="checkbox"/>	No <input type="checkbox"/>

#### Consumables

Allied P/N	Description	Approximate Quantity Required for this Interval
235720	Axle - Differential - Rear	5 U.S. Gallons
	Axle - Differential - Front	5 U.S. Gallons
	Planetaries	2 U.S. Gallons Each
219371	Hydraulic Oil, Mobil DTE 10 Excel 32	106 Gallons

MECHANIC \_\_\_\_\_

SUPERVISOR \_\_\_\_\_

DATE \_\_\_\_\_

MODEL HLT185 \_\_\_\_\_

SERIAL No 118612 \_\_\_\_\_

HOUR METER \_\_\_\_\_

## Major Overhaul


### Checklist

1	Replace all hydraulic hoses	OK <input type="checkbox"/>	No <input type="checkbox"/>
2	Rebuild drive axle	OK <input type="checkbox"/>	No <input type="checkbox"/>
3	Rebuild hydraulic cylinders	OK <input type="checkbox"/>	No <input type="checkbox"/>
4	Rebuild hydraulic valves	OK <input type="checkbox"/>	No <input type="checkbox"/>
5	Rebuild transmission	OK <input type="checkbox"/>	No <input type="checkbox"/>
6	Rebuild torque converter	OK <input type="checkbox"/>	No <input type="checkbox"/>
7	Pumps (Steering/Hoist, Tandem, Pilot, Hoist)	OK <input type="checkbox"/>	No <input type="checkbox"/>

### Kits

Allied P/N	Description	Quantity Required for this Interval	See Section In Parts Book	Where Used
R14093	Service Kit, Front Differential, Pinion & Side Gear	1	3-4	241591
	Service Kit, Rear Differential, Pinion & Side Gear	1	3-4	241543
241586	Service Kit, Front Differential, Ring & Pinion	1	3-4	241591
	Service Kit, Rear Differential, Ring & Pinion	1	3-4	241543
241587	Service Kit, Front Differential, Cap & Cover Asy	1	3-4	241591
	Service Kit, Rear Differential, Cap & Cover Asy	1	3-4	241543
241593	Service Kit, Front Differential, Sub Assembly	1	3-4	241591
241588	Service Kit, Rear Differential, Sub Assembly	1	3-4	241543
241589	Service Kit, Front Differential, Case	1	3-4	241591
	Service Kit, Rear Differential, Case	1	3-4	241543
587692	Service Kit, Planet Carrier	4	3-4	241523
578377	Service Kit, Suspension Cyl	12	5-4	578308
009-1508	Service Kit, Steering Group Cyl	4	5-4	578619
587683	Service Kit, Transmission	1	3-2	109-0156
570774	Service Kit, Converter	1	3-2	583156
218966	Service Kit, Brake Valve	1	4-4	218928
247515	Service Kit, Quick Release Valve	1	4-4	030-0534
247516	Service Kit, Modulating Relay Valve Cartridge & Diaphragm	1	4-3	030-1058
224747	Service Kit, Treadle Valve	1	4-4	211369
221647	Service Kit, Expello		4-3	217734
214419	Service Kit, Relay Valve	1	4-4	216285
234639	Service Kit, Steering Flow Amplifier Valve	1	5-3	234990
255140	Service Kit, Sectional For Control Valve	2	5-3	253982
255141	Service Kit, Mid-Inlet For Control Valve	4	5-3	253982
254832	Kit, Blanking; Indicator Trans Filter	2	5-5	584259
254108	Shoe, Brake	8	3-1	583082
241966	Service Kit, Pump, Steering/Hoist	1	5-2	093-0155
255023	Service Kit, Pump, Pilot	1	5-2	254889
250728	Service Kit, Pump, Hoist	1	5-2	254888

## Maintenance and Lubrication Checkpoints

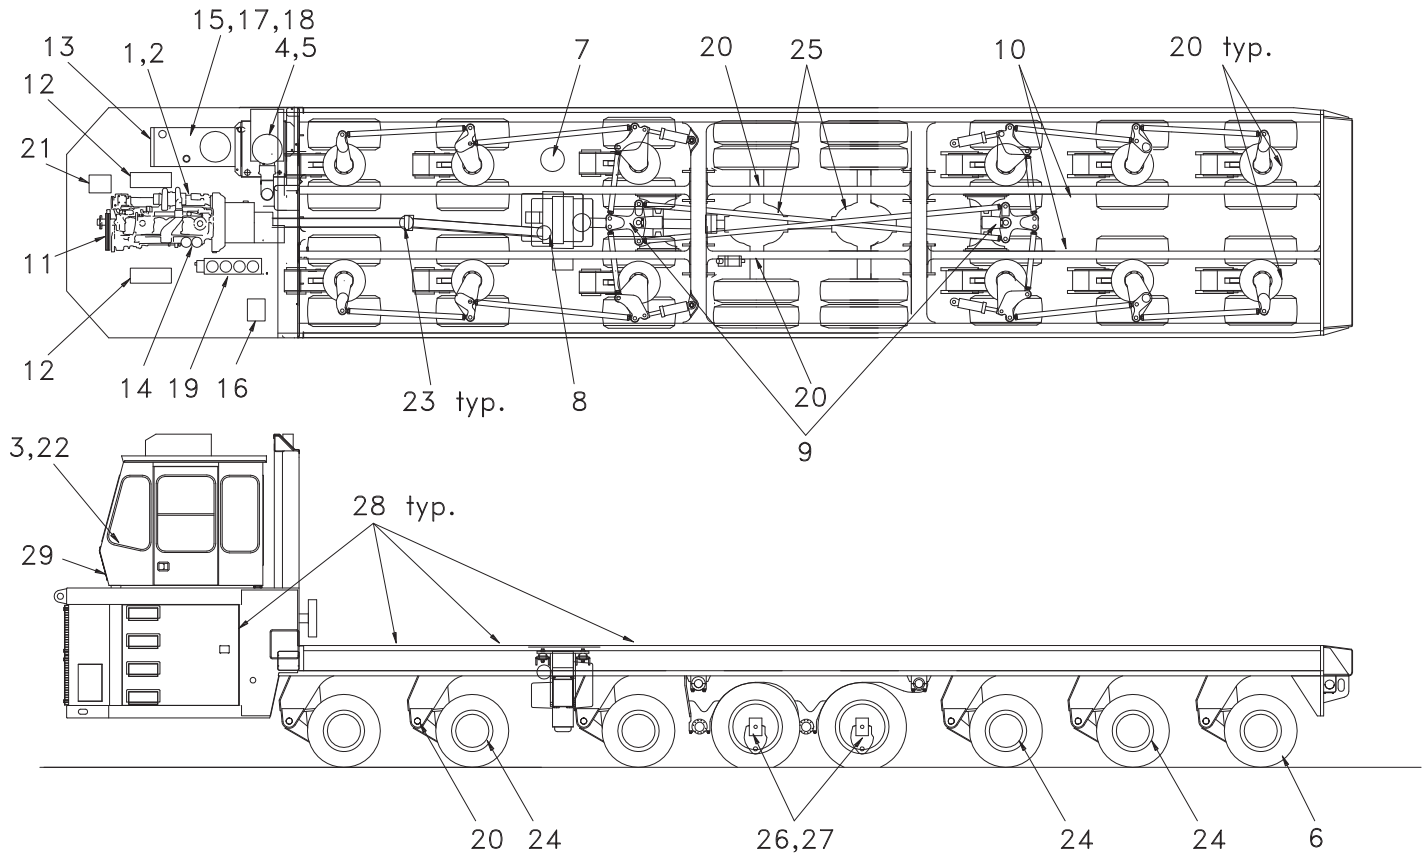

Checkpoint	Interval	Checkpoint	Interval
1 Engine Oil Filter	Daily	16 Flow Divider Gearbox - Check Oil Level	Every 250 Hours
2 Engine Oil Level Dipstick	Daily	17 Hydraulic Tank Breather	Every 150 Hours
3 Fuel Level Gauge/Sight Gauge	Daily	18 Hydraulic Suction Filters	Every 1000 Hours
4 Engine Air Cleaner (Restriction/Leaks)	Daily	19 Hydraulic Pressure Filters	Every 1000 Hours
5 Engine Pre-Cleaner	Daily	20 Lubrication Points	Every 250 Hours
6 Condition of wheels and tires	Daily	21 Cooling System (Level, Leaks)	Daily
7 Transmission Filter	Every 500 Hours	22 Gauges And Indicators (Acceptable Readings)	Daily
8 Transmission Oil Level	Daily	23 Driveline Lube Points	Every 50 Hours
9 Steering Idler Pivot Lube Points	Every 250 Hours	24 Brake Calipers (Pads, Disks, And Lines)	Every 250 Hours
10 Air/Hydraulic Brake Actuator Fluid Level	Daily	25 Differential Oil Level (2 Places)	Every 250 Hours
11 Engine Belts (Condition And Tension)	Daily	26 Planetary Axle Housing Oil Level (4 Places)	Every 250 Hours
12 Batteries	Every 250 Hours	27 Drive Axles - Slack Adjuster And Cam Bushing Lube Points	Every 250 Hours
13 Hydraulic Oil Level Sight Gauge	Daily	28 Engine, Deck And Frame Access Door Hinges (10 Places)	Every 500 Hours
14 Engine Fuel Filters	Every 250 Hours	29 Steering Column U-Joints And Slip (6 Places)	Every 2500 Hours
15 Hydraulic Return Filter Gauge	Daily		