

Suggested Spares Guide L90-148

This suggested spares guide is specifically developed for this serial number. The parts are grouped into 4 tiers, with each tier representing a higher level of support. The items in tier 1 will be required for periodic maintenance within the first year.

Tier 1 - Maintenance - Includes all periodic maintenance items.

Tier 2 - Basic - Includes wear items and specialized tools.

Tier 3 - Intermediate - Includes some key, larger, longer lead-time items.

Tier 4 - Advanced - Includes rebuild kits for major assemblies, complete cylinders, etc.

Tier 1 - Maintenance				
Allied P/N	Description	Where Used	Quantity on Machine	Order Quantity
230463	Filter Element, Breather	224744	2	
600048	Filter Element, Coolant	596989	1	
600142	O-Ring Kit, Fuel/Water Separator	600138	2	
600148	Filter Element, Fuel/Water Separator		1	
600156	Primary Element, Air Cleaner	600155	2	
600157	Secondary Element, Air Cleaner		2	
586655	Cab Air Recirculation Element	597899	1	
		597898	1	
600165	Secondary Fuel Filter Element	600164	1	
600168	Filter, DEF Supply Module	600167	1	
588563	Filter Element, Engine Oil	600178	1	
600187	Filter Element, Crankcase	600186	1	
600194	Filter, DEF Suction	600188	1	
600637	Filter Element, Pressurizer	600613	1	
259470	Service Kit, Return Filter	600875	2	
247429	Filter Element, Spin-On, Brake Cooling and Transmission	600991	2	
		602175	1	
R12968390	Filter Element, Hydraulic High Pressure	603741	1	
600169	Alternator Drive Belt	596989	1	
600171	Fan Drive Belt	596989	1	
258774	Wiper Blade Assembly	599890	2	
590724	Wiper Motor	599890	2	
591266	Filter, Intake, Air Cond/Heater	590073	1	
208136	Air Filter Indicator	598950	1	
R233598	Breather, 1-Way	602171	1	
600891	Breather, Hyd 3 Micron	598459	1	
203496	O-Ring, Tank Inspection Cover	598459	1	
		600878	1	
598938	Spanner for Wheel Bearing Adjustment Nut	597694	1	

Suggested Spares Guide L90-148

Tier 2 - Basic

Allied P/N	Description	Where Used	Quantity on Machine	Order Quantity
597769	Resistor, 125 Ohm, 5 Watt	598870	1	
241893	Resistor, 18k Ohm	598870	1	
		598872	1	
237172	Resistor, 1k Ohm	598868	1	
		598871	3	
83246	Resistor, 2700 Ohm	602716	1	
240519	Thermistor, 1.3 Ohms	599681	1	
601846	Housing - Receptacle, W/ Diode	602716	2	
258535	Diode, 3 amp, 1000v	602716	4	
587434	Digital Speed Sensor	605120	1	
260419	DEF Tank Sensor	600188	1	
600238	Sensor, Coolant Level	600351	1	
246905	Sensor, Press Transducer	605120	1	
259599	Speed Sensor	597894	2	
598644	Linear Position Sensor	602177	3	
251424	Fluid Temp. Sensor	600878	1	
		602175	1	
		602171	1	
597377	Relay, Micro, 24V SPDT	597898	10	
		598877	5	
		602701	5	
600615	Relay, Mini ISO	598872	1	
		600910	1	
		599681	2	
598718	Pressure Transducer	600878	2	
598153	Pressure Transducer	598738	1	
		602171	2	
		602175	1	
		598056	1	
		601788	2	
		606280	4	
203564	O-Ring, Tailpost Installation	598963	2	
510444	Gasket, Tailpost Installation		2	
562468	Gasket, Hydraulic Tank Dirt Box Cover	600878	1	
505499	Gasket, Pump, SAE C Drive	602171	3	
598213	Gasket, Pump, SAE D Drive	602171	3	
598177	Packing Kit, HD/KO Cylinder	603000	2	
		603003	2	
597890	Packing Kit, Hoist Cylinder	606134	2	

Suggested Spares Guide L90-148

Tier 2 - Basic (Continued)

Allied P/N	Description	Where Used	Quantity on Machine	Order Quantity
593802	Packing Kit, Steering Cylinder	599534	2	
597897	Packing Kit, Tilt Cylinder	606128	2	
Y056839	Seal Kit, Cylinder, Tilt Cab	Y27.423	1	
593125	Parking Brake Lining Kit	593014	1	
257099	Kit, Flexplate	602171	1	
599602	Service Kit, Coverter	597688	1	
234497	Dampener, Vibration	595520	1	
		602169	5	
		602171	2	
234774	Gas Spring	601880	1	
		601881	1	
258338	Floodlight	597669	2	
		600439	2	
		600440	2	
		602700	1	
		603635	2	
598449	U-Joint, 8.5C	598440	2	
598451	U-Joint, 9C	598442	2	
599410	Pressure Cap, Surge Tank	599696	1	
X-204248	Installation Tool, 5.5" Pin (Used on 597633)	Service Tools	1	
593471	Piston Loading Sleeve for Accumulator		1	
260102	Seal Ring Sleeve Driver		1	
260103	Centering Tools for Brake Discs		1	
593406	Installation Tool for Face Seal		1	
593402	Tool, Sleeve Driver			
593404	Wrench, Spanner			
256059	Charging Kit, Top Repairable Accumulator		1	
559139	Wrench, Tail Wheel Nut		1	

Suggested Spares Guide L90-148

Tier 3 - Intermediate

Allied P/N	Description	Where Used	Quantity on Machine	Order Quantity
587161	Thermostat, Air Conditioner/Heater	600021	1	
590799	Evaporator Probe Assembly		1	
587162	Valve, Expansion, Air Conditioner/Heater		1	
587301	Core, Heater/Evaporator, Air Conditioner/Heater		1	
587160	Motor, Double Blower 24V, Air Conditioner/Heater		1	
591268	Heater Core Assembly	590073	1	
591269	Evaporator Assembly		1	
597617	Module Assy, Elect. Thermostat		1	
597619	Valve, Expansion		1	
239190	Switch, 3-Speed, Air Conditioner/Heater	600332	1	
597920	Joystick, LH	597644	1	
597921	Joystick, RH		1	
234081	Steering Control Unit	598943	1	
234990	Steering Flow Amplifier	600639	1	
598440	Driveline Assembly	598953	1	
598442	Driveline Assembly		1	
597894	Motor, Cooling Package	601880	1	
		601881	1	
597830	Pump, Var Piston (Implement, LH & RH)	602171	2	
597831	Pump, Var Piston (Steering)		1	
597832	Pump, Gear Tandem (Fan Pump)		1	
600282	Pump, Gear Tandem (Charge/Brake Cooling)		1	
599853	Wagner Smart Screen	602162	1	
254837	Expansion Module	603635	1	
		602177	2	
		602162	1	
79603	Expansion Module	602177	1	

Suggested Spares Guide L90-148

Tier 4 - Advanced

Allied P/N	Description	Where Used	Quantity on Machine	Order Quantity
259380	Service Brake Lining Kit	598835	2	
259381	Service Brake Seal Kit	598835	2	
596435	Parking Brake Seal Kit	593014	1	
259605	Service Kit, Front Axle	597694	1	
259606	Service Kit, Front Differential	598832	1	
261197	Service Kit, Transmission	603696	1	
600179	Diesel Particulate Filter	600177	1	
599534	Cylinder Assembly, Steering	598952	2	
603000	Cylinder Assembly, Kickoff	603016	2	
603003	Cylinder Assembly, Holddown	603015	2	
605940	Cylinder Assembly, Hoist	605930	2	
605947	Cylinder Assembly, Tilt	605931	2	