

## Seat Mounted Controls

### Left Hand Armrest Control Unit

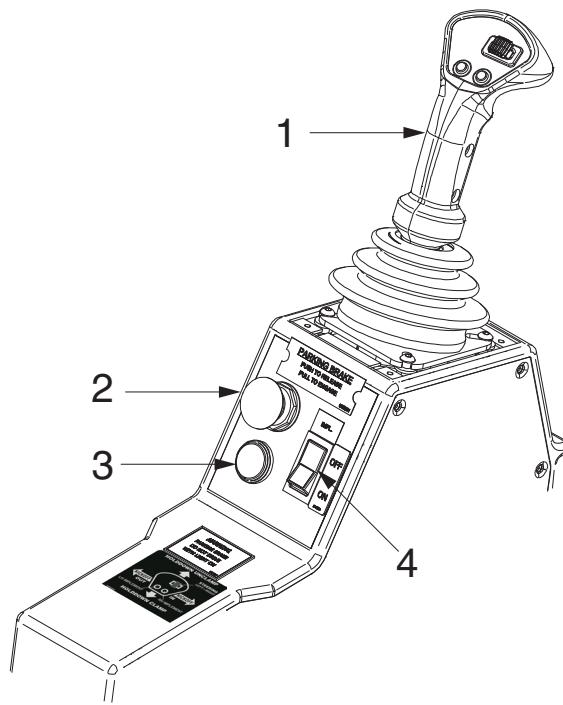


Figure 2-4-1 Left Hand Armrest Control Unit

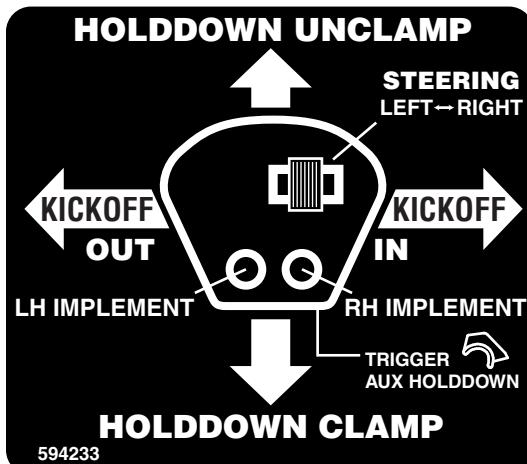


Figure 2-4-2 Left Hand Joystick Detail

**NOTE:** the left armrest control unit will raise to allow clearance for ingress and egress of the operator from the cab. Raise the cushioned armrest, and lift up on the left armrest control unit.

#### 1. Holdown and Kickoff Joystick

- Push joystick forward to unclamp holdown arms.
- Pull joystick back to clamp holdown arms.
- Push joystick right to move kickoff arms IN.
- Push joystick left to move kickoff arms OUT.
- Hold trigger in while pushing or pulling joystick to extend or retract auxiliary holdown arms.
- Press and hold the LH implement button while operating the joystick to control the left kickoff/holdown/auxiliary holdown arm only.
- Press and hold the RH implement button while operating the joystick to control the right kickoff/holdown/auxiliary holdown arm only.
- Push STEERING slider lever to left or right to steer in either direction.

**NOTE:** Steering wheel overrides LH and RH joystick steering. RH joystick steering overrides LH joystick steering.

#### 2. Parking Brake Control

To apply the parking brakes, pull the button out. To release the brakes push the button in.

## NOTICE

*DO NOT apply parking brakes when the machine is moving. Damage to components will occur.*

#### 3. Parking Brake Indicator Light

If the key switch is ON, and the parking brake is ON, this light will be ON.

#### 4. Implement Control - ON / OFF Switch

Place this switch in the OFF position when there is any danger of inadvertently moving the implement control levers during service or repair while the engine is running. Place the switch in the OFF position before leaving the cab. With the switch in the OFF position, the implement controls are shut off, including optional bucket float feature.



## CAUTION

**Always place the Implement Control Switch in the OFF position while the engine is running before leaving the cab and performing any service work.**

## Right Hand Armrest Control Unit

### 1. Hoist and Tilt Joystick

- Push joystick forward to lower hoist.
- Pull joystick back to raise hoist.
- Push joystick right to tilt carriage out.
- Push joystick left to tilt carriage back.
- Press bottom right button to rotate seat right.
- Press bottom left button to rotate seat left.
- Press upper middle button to shift the transmission into a higher gear.
- Press upper right button to shift the transmission into a lower gear.

## NOTICE

*Always let up on the throttle slightly when shifting speed ranges. This will significantly reduce shock loads to drivetrain components during shift. Also, always reduce engine RPM when downshifting, as you can over-speed the engine.*

- Push STEERING slider lever to left or right to steer in either direction.

**NOTE: Steering wheel (if equipped) overrides LH and RH joystick steering. RH joystick steering overrides LH joystick steering.**

- Roll trigger down to place the transmission in **forward**. Place the trigger in the center position to place the transmission in **neutral**. Roll the trigger up to place the transmission in **reverse** (see Shift Sequence on page 2-4-3).

### 2. Declutch Control Switch

If the control is ON, the declutch system automatically shifts the transmission into neutral when you apply the service brakes. This allows you to perform all hydraulic functions at any rpm smoothly, without causing converter stall or other unnecessary strains on the brake or drivetrain components. If downgrades are encountered, the control may be turned to the OFF position, and the transmission will remain in gear when the brakes are applied. This control should be left in the ON position for normal operations.

### 3. Hand Throttle ON/OFF Switch (For engine warm up only)

Overrides foot throttle. To engage flip switch into the on position. Used with item 4.

### 4. Hand Throttle Up/Down Switch

Adjusts RPM's up or down when adjacent switch item 3 is engaged.

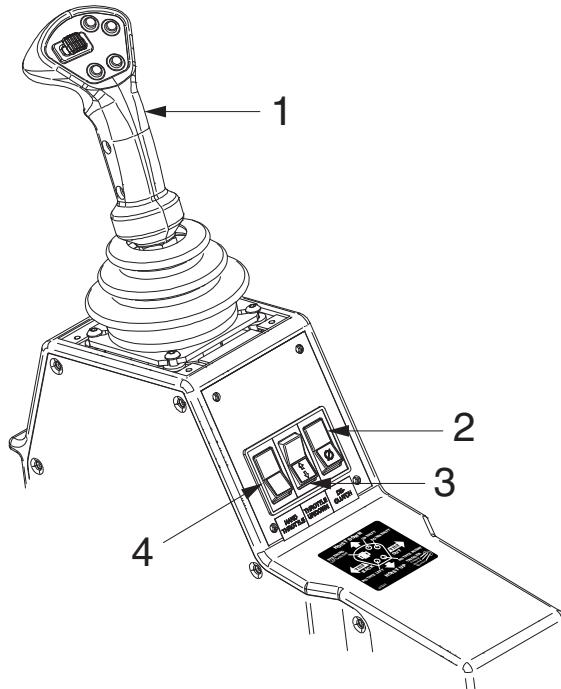


Figure 2-4-3 Right Hand Arm Rest Control Unit

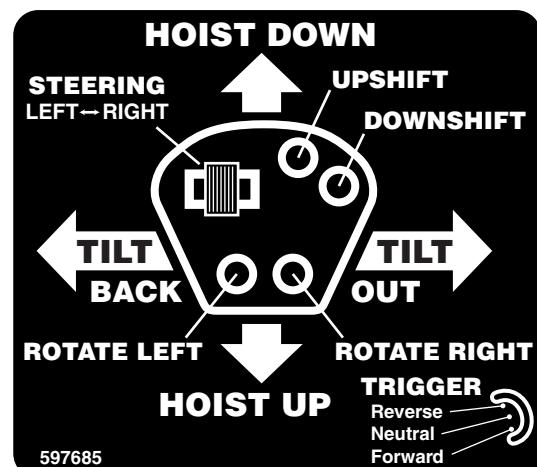


Figure 2-4-4 Right Hand Joystick Decal

## Shift Sequence

To start shift sequence, apply service brake, release parking brake, and place the transmission in either FORWARD or REVERSE using the trigger on the right joystick.

Gear SHIFTS are controlled by the upper buttons on the right joystick.

Shift to NEUTRAL by activating parking brake or placing the trigger in the middle position on the joystick.

### Trigger in FORWARD or REVERSE position.

Pressing the upper middle button causes the transmission to UPSHIFT.

Pressing the upper right button causes the transmission to DOWNSHIFT.

DIRECTION shift allowed:

- In first gear.
- In all other gears if the brake is pressed for 1 second and throttle released for 1 sec.

**Note: If trigger is switched without the throttle and service brake conditions being met then the transmission will go into neutral, the indicator lights will show the gear and direction and the neutral light will flash. The transmission will go into the requested direction and range when throttle and service conditions are met.**

## Declutch

Declutch is activated with the declutch switch and service brake. It is deactivated after the service brake is released.

**Note: If declutch is actively engaged, the “Neutral” light will flash but the direction and gear will remain displayed.**

While in active declutch, gear and direction can still be changed if conditions above are met (see DIRECTION shift allowed) but the transmission remains in temporary neutral until the brake is released.

## Emergency Lowering of Boom

The Boom can be lowered with the key start switch in the ACC position.

---

**INTENTIONALLY LEFT BLANK**