

## Seat Adjustments



Figure 2-5-1 Operators Seat

---

**1. Armrest Forward/Back Knob**

Turn knob CCW to unlock armrest and slide armrest to desired position. Turn knob CW to lock knob

**NOTE: The right and left armrest control units will raise to allow clearance for ingress and egress of the operator from the cab. Raise the cushioned armrest, and lift up on the armrest control unit.**

**2. Armrest Inclination Knob**

Turn the knob to unlock armrest and slant armrest to desired position. Turn knob to lock armrest.

**3. Seat Slide Release Lever**

Lift this lever to slide the seat top assembly fore or aft to set a comfortable working distance to the steering wheel and pedals.

**4. Seat Height and Ride Control**

Push button to raise seat. Pull button to lower seat.

**5. Seat Depth Adjustment Handle**

Pull the handle upwards to allow the seat cushion to slide forward or back relative to the seat back. Use this to establish a comfortable working position for the seat cushion.

**6. Seat Cushion Pitch Adjustment Handle**

Pull the handle upwards to set the pitch of the seat cushion. By exerting pressure on or off the front or rear part of the seat cushion it can be moved to desired position.

**7. Seat Back Recline Lever**

Raise this lever to change the angle of the seat back relative to the seat cushion.

**8. Lumbar Support Adjustment Knob**


Use this knob (back side of seat) to adjust the lumbar support in the seat back.

**9. Headrest**

The headrest can be individually adjusted for height by pulling it upward over the various increments up the end stop.

By pushing forward or rearward the angle of the headrest can be adjusted individually.

To remove the headrest, pull it over the end stop.

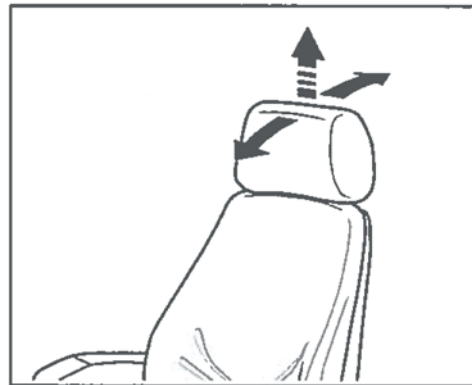

*Figure 2-5-2 Headrest*