

## Drivetrain

### Swivel Box / Bogie Assembly

The swivel box and bogie assembly allows four wheel drive machines to turn. The swivel box rotates (articulates) on the frame when the hydraulic steering cylinders are activated, causing the machine to turn. The bogie assembly tilts (oscillates) on the swivel box up to 10°, improving traction and providing stability on soft or rough yards.

### Transmission

The transmission changes the gearing from the engine to the wheels. It allows the machine to move forward, run in neutral, or to move in reverse. It also allows the vehicle to move at a faster speed because it shifts into different gears allowing the engine to run at a lower rpm, yet spin the wheels faster. An engine can only spin a certain rpm before damage is done. Without being able to change gears, the speed at which the machine is traveling just before that point would be the maximum speed of the vehicle.

Shifting from forward to reverse or reverse to forward is inhibited in second, third and fourth gear.



### CAUTION

**Never shift the gear selector down without momentarily letting off the throttle pedal. Personal injury or severe damage to the drivetrain could result.**

This transmission is equipped with "full reversing", which means that you have approximately the same speeds forward and reverse in all speed ranges.

### NOTICE

*Shifting from forward to reverse, or reverse to forward, does not require the brakes to be activated. However, it is still highly recommended to brake to a full stop when changing directions (e.g. Forward to Reverse). Drivelines are not strong enough to withstand the forces created when tons of vehicle and load are reversed suddenly.*

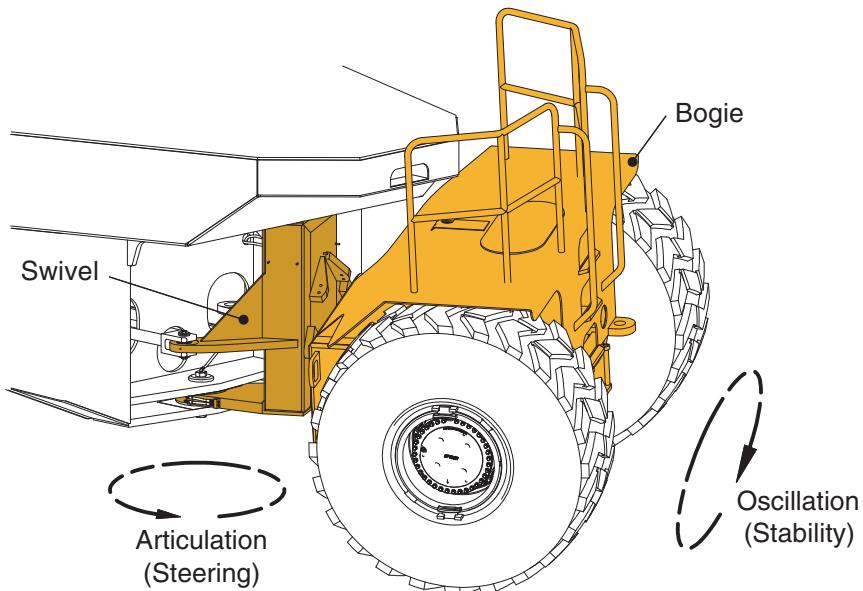


Figure 3-2-1 Swivel Box / Bogie Assembly



Figure 3-2-2 Transmission

The transmission uses constant mesh gearing in all ranges, forward and reverse. All gears are engaged by means of hydraulically controlled multiple disc clutches, through the control valve actuated by the controller in the cab.

## Drivelines

Drivelines transmit the engine torque (after being multiplied by the converter and transmission) to the drive axles.

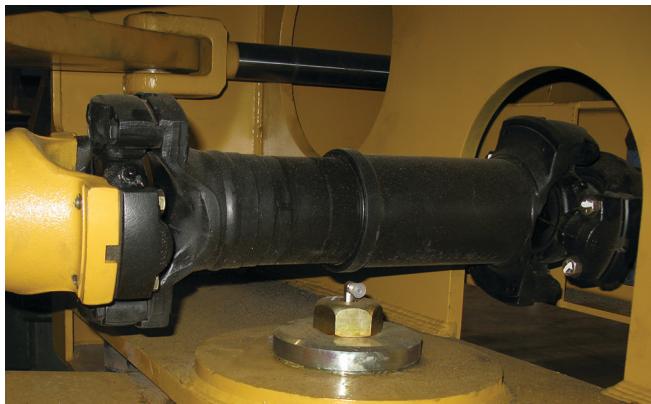


Figure 3-2-3 Drivelines

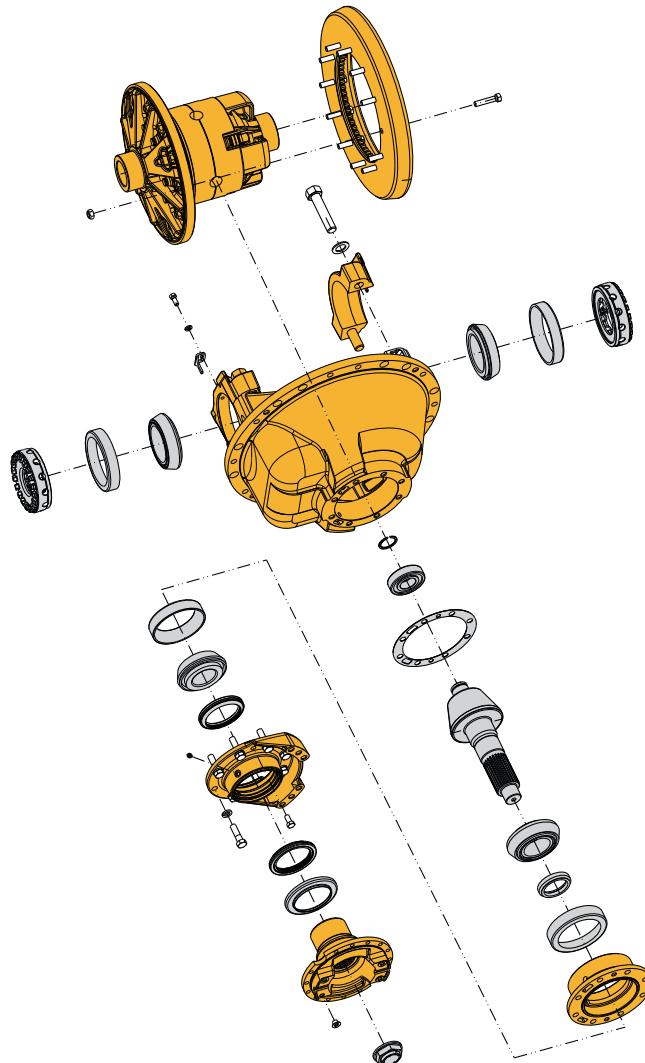


Figure 3-2-4 Differential

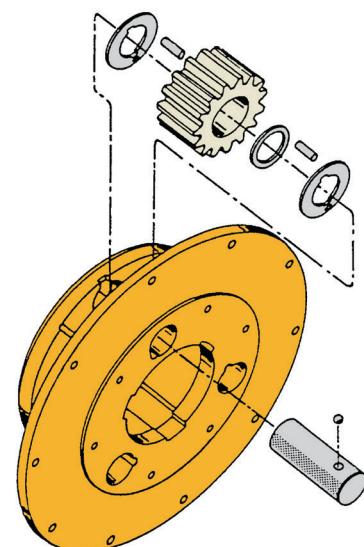


Figure 3-2-5 Planetary