

## Moving, Stopping and Steering

### To move the machine:

1. Make sure that the area is clear of obstructions and/or personnel. It is possible for several people to stand under or near the machine, out of sight of the operator. Sound the horn before moving the machine.



### CAUTION

**This machine cannot be stopped instantly. The stopping distance varies, depending on load and speed. To avoid collisions, be sure to allow ample stopping distance.**

2. Ensure the engine is at idle RPM (no throttle).



### CAUTION

**Never attempt to operate with the throttle set slider on the smart screen operator interface instead of the foot throttle. The throttle set slider is to be used for warm-up only.**

3. Turn declutch ON with the button on the joystick.

**NOTE: Keep declutch ON for normal operation. If a downgrade is encountered, declutch may be turned OFF, and the transmission will remain in gear while braking.**

4. Apply the brake pedal.
5. Lift the carriage, if required, to clear any obstructions you might encounter.
6. Release the parking brake and select 1st gear.



### CAUTION

**Operate the Logstacker in 1st gear only, until you become familiar with the machine and all of its operating characteristics.**

7. Place the trigger into the “forward” or “reverse” position on the left hand control lever. Moving the trigger not only selects the direction of travel, but also shifts the transmission from neutral to “in gear”.
8. Release the brake pedal.
9. Depress the throttle pedal slowly and smoothly. Avoid sudden or jerky starts. Depress the pedal just enough to begin moving slowly.

### NOTICE

**Always brake to a full stop when changing directions. Drivelines are not strong enough to withstand the forces created when tons of vehicle and load are reversed suddenly. Keep the speed low until you feel comfortable with the machine.**

### Steering (with steering wheel)

With the operator facing the front, turning the wheel clockwise will turn the machine right, while turning the wheel counterclockwise will turn the machine left.

Practice moving the machine around the yard. Make several practice stops to develop a “feel” for the brakes. Practice driving and steering in forward and reverse. Always use the brakes to slow and stop the machine, never gear down.

### Steering (with Joystick steering option)

The LH micro-joystick may also be used as a steering control. With the operator facing the front, pushing the micro-joystick to the right will turn the machine to the right, while pushing the micro-joystick to the left will turn the machine to the left. Releasing the micro-joystick will maintain the current steering angle.

The joystick steering control is proportional. The farther the micro-joystick is pushed, the faster the turn radius will be reduced. The micro-joystick must be moved in the opposite direction to return to straight travel.

---

**INTENTIONALLY LEFT BLANK**