

Seat Mounted Controls

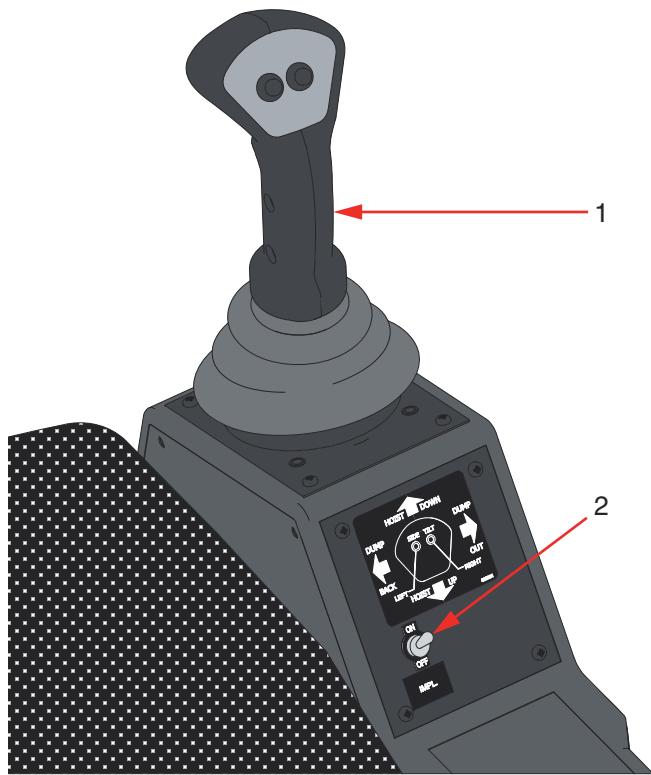


Figure 2-5-1 Right Armrest Controls

1. Single lever (mono-stick) control for hoist, dump, and side tilt.

- Push the lever forward to lower the bucket.
- Pull the lever back to raise the bucket.
- Move the lever right to dump the bucket.
- Move the lever left to roll the bucket back.
- Push the left button to side tilt the bucket to the left.
- Push the right button to side tilt the bucket to the right.

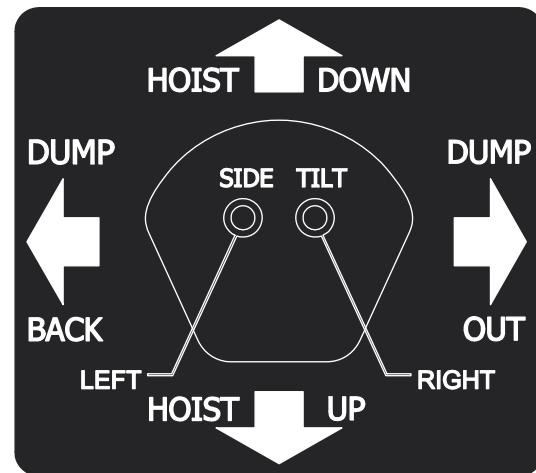


Figure 2-5-2 Joystick Functions

2. Implement Control - Shut Off Switch

Place this switch in the OFF position when there is any danger of inadvertently moving the implement control levers during service or repair while the engine is running. With the switch in the OFF position, the implement controls are shut off.

INTENTIONALLY LEFT BLANK