

## Seat Adjustments

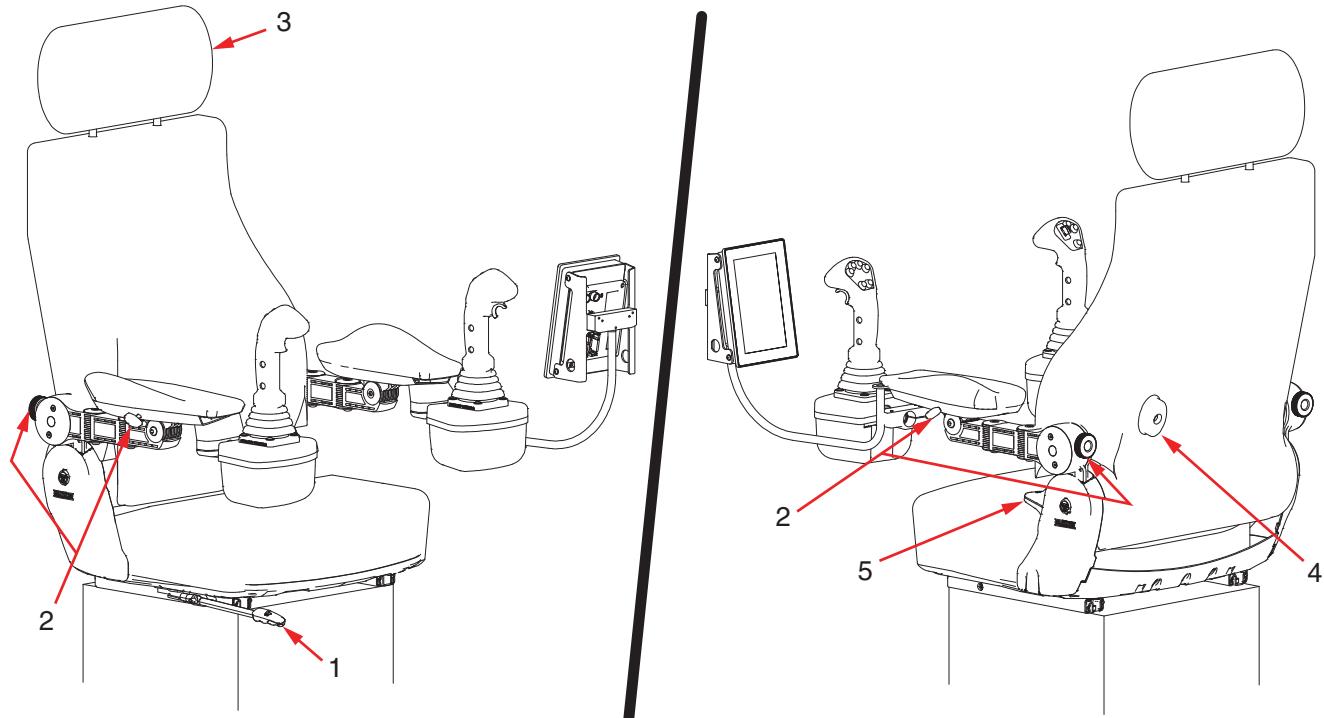


Figure 2-6-1 Operator's Seat

### 1. Fore/Aft Adjustment

Lift this lever to allow the seat back, seat cushion, cushioned armrests, and armrest control units to slide forward or backward as a whole. Use this to set a comfortable working distance to the pedals and steering wheel.



### WARNING

#### Crash hazard!

**Accidentally shifting the seat while the machine is operating could cause loss of control.**

**Make sure the lever locks in place with an audible click. Test to make sure the seat is locked in place before operating the machine.**

**Note: Do not lift the locking lever with your leg or calf.**

### 2. Right and Left Armrest Adjustments

The armrests may be adjusted for comfort, or swung up and out of the way when leaving the cab, by loosening the knobs shown and adjusting as necessary.

### 3. Headrest

The headrest can be individually adjusted for height by pulling it upward over the various increments up the end stop.

By pushing forward or backward the angle of the headrest can be adjusted individually.

To remove the headrest, pull it over the end stop.

### 4. Lumbar Support Adjustment Knob

Use this knob (back side of seat) to adjust the lumbar support in the seat back.

### 5. Seat Back Recline Lever

Raise this lever to change the angle of the seat back relative to the seat cushion.

---

**INTENTIONALLY LEFT BLANK**