

## Steering Column and Pedals

### 1. Accelerator Pedal

Foot controlled engine accelerator pedal.

### 2. Steering Wheel and Column

### 3. Telescopic and Tilt Steering Column

To move telescopic wheel in or out, pull lever up to release the lock. To tilt steering wheel, push lever down.

### 4. Horn Button on Steering Column

Center hub of steering wheel contains horn button. Depress to sound horn.

### 5. Brake Pedal

Will also “declutch” the transmission if the declutch switch is ON.

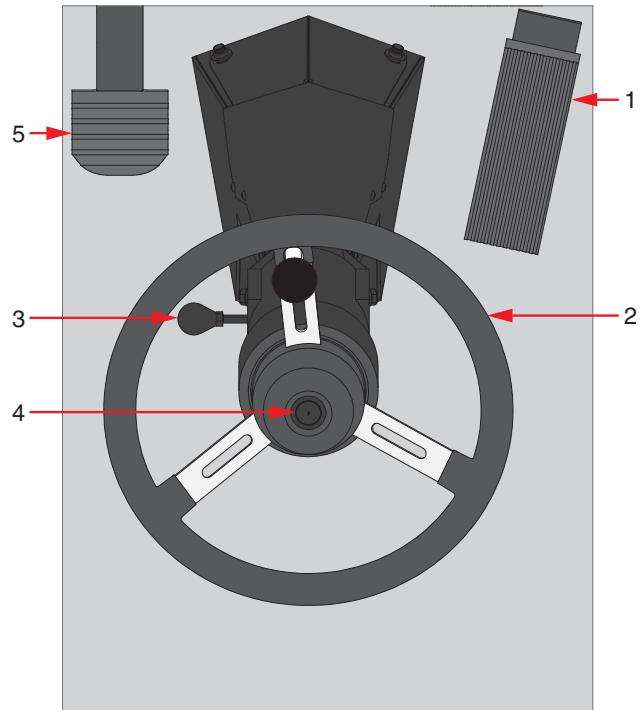


Figure 2-7-1 Steering Wheel and Pedals

---

**INTENTIONALLY LEFT BLANK**