

Steering Column and Pedals

1. Steering Wheel Telescopic Adjustment

Loosen this knob to adjust the telescopic height of the steering wheel. Tighten when comfortable height is achieved.

2. Steering Wheel

Used to steer the machine. The steering wheel overrides joystick steering.

3. Horn

Press the handle toward the steering column to actuate the vehicle horn.

4. Steering Wheel Angle Adjustment

Lift this lever to adjust the angle of the steering wheel relative to the lower half of the steering column.

5. Steering Column Angle Adjustment.

Depress this foot lever to adjust the angle of the entire steering column relative to the cab floor.

6. Brake Pedal

Will also “declutch” the transmission if the declutch function is activated.

7. Key Switch Start

The key switch is used to start and stop the engine and to turn the accessories on and off. This is a four position switch: ACC, OFF, RUN and START. When turning the key clockwise from the center, or OFF position, the first position to the right is RUN. The second is START. The START position is spring loaded, and will return the key to the RUN position when released. ACC is to the left of OFF: this position is used for accessories operation only.

8. Throttle Pedal

Foot controlled engine throttle pedal.

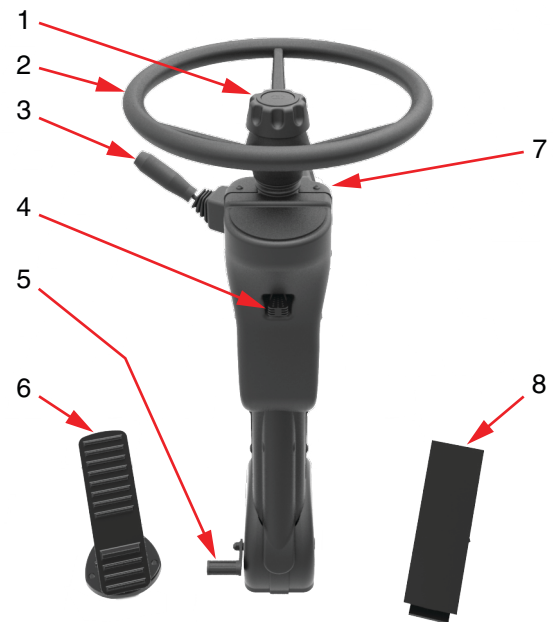


Figure 2-7-1 Steering Wheel and Pedals

INTENTIONALLY LEFT BLANK