

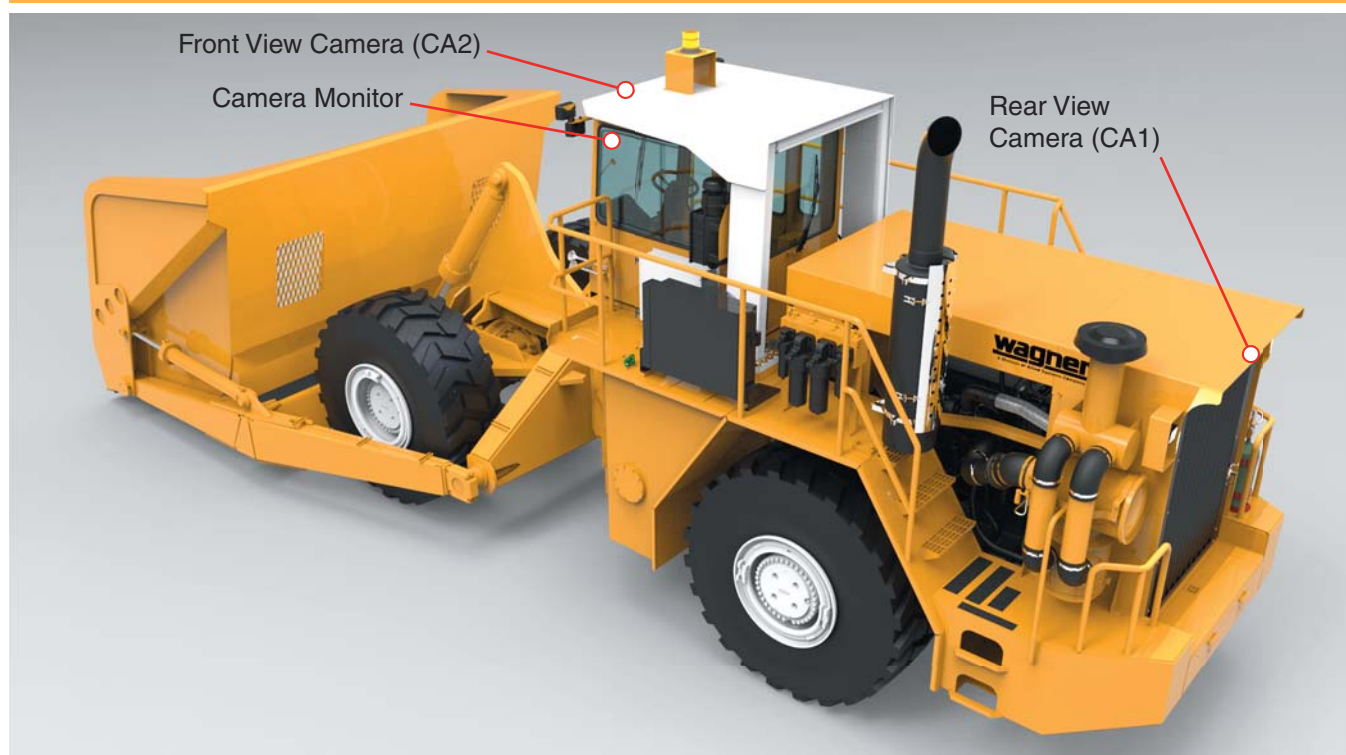


Figure 2-9-2-1 Cameras and Monitor Locations

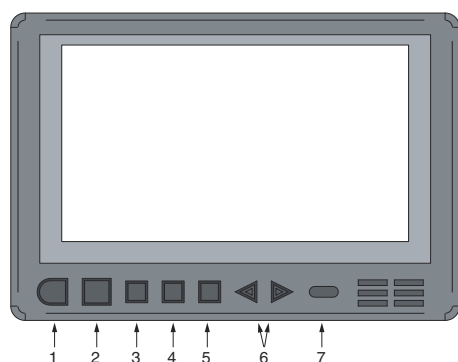


Figure 2-9-2-2 Monitor Detail

1. **POWER/MENU**
 Power - Press the Power/Menu button (1) to turn the screen on. Press for one second to turn the screen off.
 Menu - Press the Power/Menu button (1) to enter the menu code.
 Press Zoom button (5) to enter the FUNCTION, PICTURE, NOR/MIR, UPDOWN, TRIGGER, CAMERA NAME, CAM MODUS, SCAN, REAR SCALE ADJ.
2. **QUAD(PIP) SELECT**
 Press the QUAD(PIP) button (2) to enter the QUAD →2PIP(CA1 LARGE, CA3/2 SMALL)→3SPLIT(CA1/CA2/CA3)→2SPLIT (CA3/CA2)→2SPLIT(CA4/CA1)→QUAD.
3. **AUTO SCAN AND LOCKING**
 Press the Scan button (3), displays CA1→CA2→CA3→CA4.
 Press the Lock button (3) for three seconds; buttons have been locked. Once locked, press the Lock button (3) for three seconds to unlock.
4. **CAMERA SELECT**
 Press the camera button (4) one by one, displays CA1,CA2,CA3 and CA4.
5. **ZOOM & AV SELECT**
 Press the Zoom button in either CA1,CA2, CA3 or CA4.
 Press ◀▶ buttons (6) to scroll in zoomed image. Press the zoom button (5) again to scroll in the zoomed image up or down.
 Press the AV button (5) for two seconds to display AV.
6. **VOLUME CONTROL**
 Press the ◀ button (6) to turn the volume down. Press the ▶ button (6) to turn the volume up. Press the ◀▶ buttons (6) to change the function.
7. **CDS SENSOR**
 Auto dimmer feature for night viewing.
 Automatic LED back-lit buttons for cool operation.

INTENTIONALLY LEFT BLANK