

## Fuse Panel

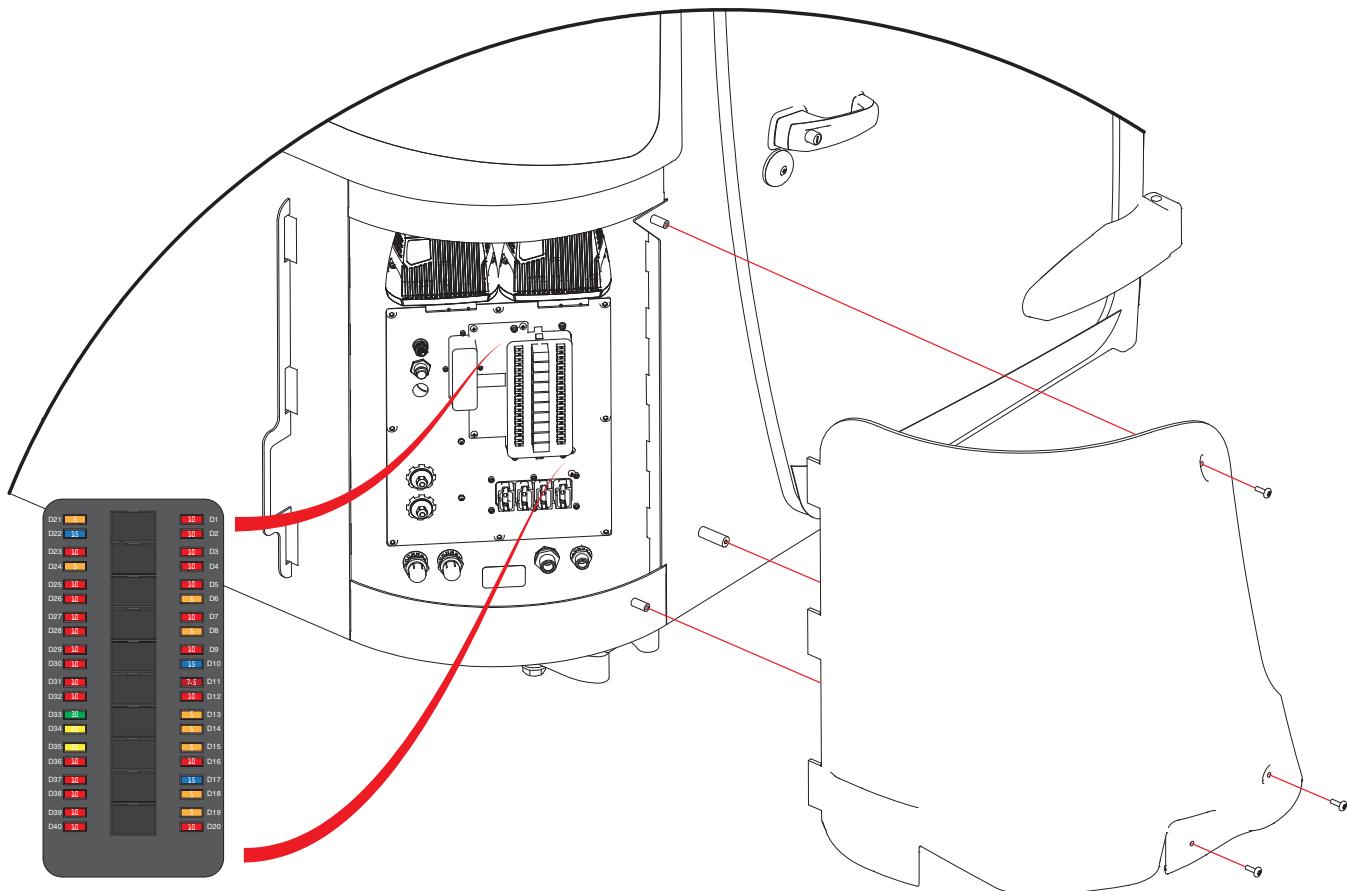


Figure 2-10-1 Fuse Panel

### Fuse Panel

The fuse panel is mounted on the outside of the cab. Remove the right rear quarter panel of the cab as shown, then remove the plastic box cover over the fuse panel.

### CAUTION

Never replace a fuse with one that has different amperage than the original. The new fuse must be the same color and size as the one you're replacing.



### WARNING

Before you remove the quarter panel, be sure that the machine's ignition is turned off.

The fuse amperage is printed on the fuse. A fuse may be inspected by pulling it out and inspecting the filament. If it has burned through, the fuse needs to be replaced. See Figure 2-10-2.

Replace a blown fuse with an equivalent fuse of the same amperage.

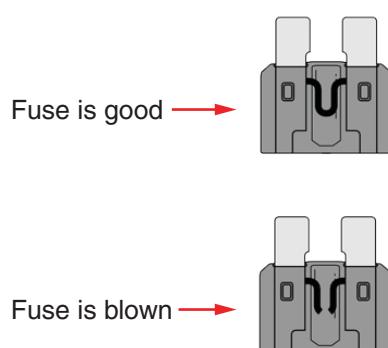


Figure 2-10-2 Fuse Inspection

---

**INTENTIONALLY LEFT BLANK**