

Seat Adjustments



Figure 2-6-1 Operators Seat

- 1. Joystick Forward/Back Knob (both sides)**
Turn knob CCW to unlock joystick mount and slide the joystick to a comfortable working position. Turn knob CW to lock joystick in place.
- 2. Seat Recline Knob**
Turn the knobs (both sides) CCW to adjust the angle of the seat back relative to the seat cushion. Turn knobs CW to lock seat back in position.
- 3. Seat Slide Release Lever**
Use this lever to slide the seat top assembly fore or aft to set a comfortable working distance to the pedals.
- 4. Seat Height and Ride Control**
Push button to raise seat. Pull button to lower seat.
- 5. Seat Swivel Release Lever**
Lift this lever to release the swivel to rotate the seat 90° to the left or right.

INTENTIONALLY LEFT BLANK