

## Fuse Panel



Figure 2-9-1 Fuse Panel

### Fuse Panel

The fuse panels are mounted inside the cab, on the front wall, left side. Remove the plastic box cover over the fuse panel.



## WARNING

**Before you remove the box cover, be sure that the machine's ignition is turned off.**

The fuse amperage is printed on the fuse. A fuse may be inspected by pulling it out and inspecting the filament. If it has burned through, the fuse needs to be replaced. See Figure 2-9-2.

Replace a blown fuse with an equivalent fuse of the same amperage.


**NOTE:** The ECM Communications Port is mounted next to the fuse panels. See Section 7 in your service manual for details.



## CAUTION

**Never replace a fuse with one that has different amperage than the original. The new fuse must be the same color and size as the one you're replacing.**

Fuse is good →

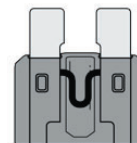

Fuse is blown →

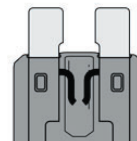


Figure 2-9-2 Fuse Inspection

---

**INTENTIONALLY LEFT BLANK**