

Belly Pans

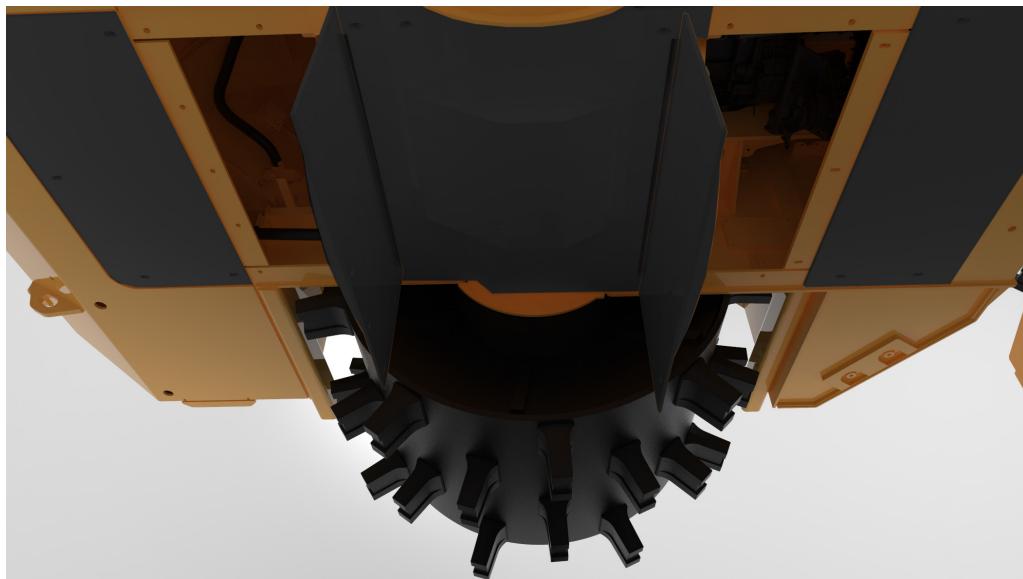


Figure 2-10-1 Belly Pans (Shown in the open position)

Belly Pans

The belly pans may be opened up for routine service and maintenance in the chassis.



WARNING

Make sure to put the machine in the service position, and employ lockout/tagout procedures before working under the machine.

Hydraulic pressure in the actuating cylinder can bleed off over time. Before removing the capscrews, use the joystick to activate the belly pan hydraulics and fully raise the belly pans.

To avoid injury, do not work directly under the belly pans while removing or reinstalling the hardware.

Remove and retain the capscrews and washers that retain the plates shown in the open position in Figure 2-10-1.

Open the battery disconnect door as shown in Figure 2-10-2 to access the joystick.

Depress and hold the trigger, and simultaneously

depress either the Front or Rear Open or Close Button. If at any time during operation the selected button or trigger is released, all function stops.

When done, use the joystick to close (raise) the belly pans. Reinstall the capscrews and washers and torque per 80-1057 in section 10 of your service manual.



Figure 2-10-2 Joystick

INTENTIONALLY LEFT BLANK