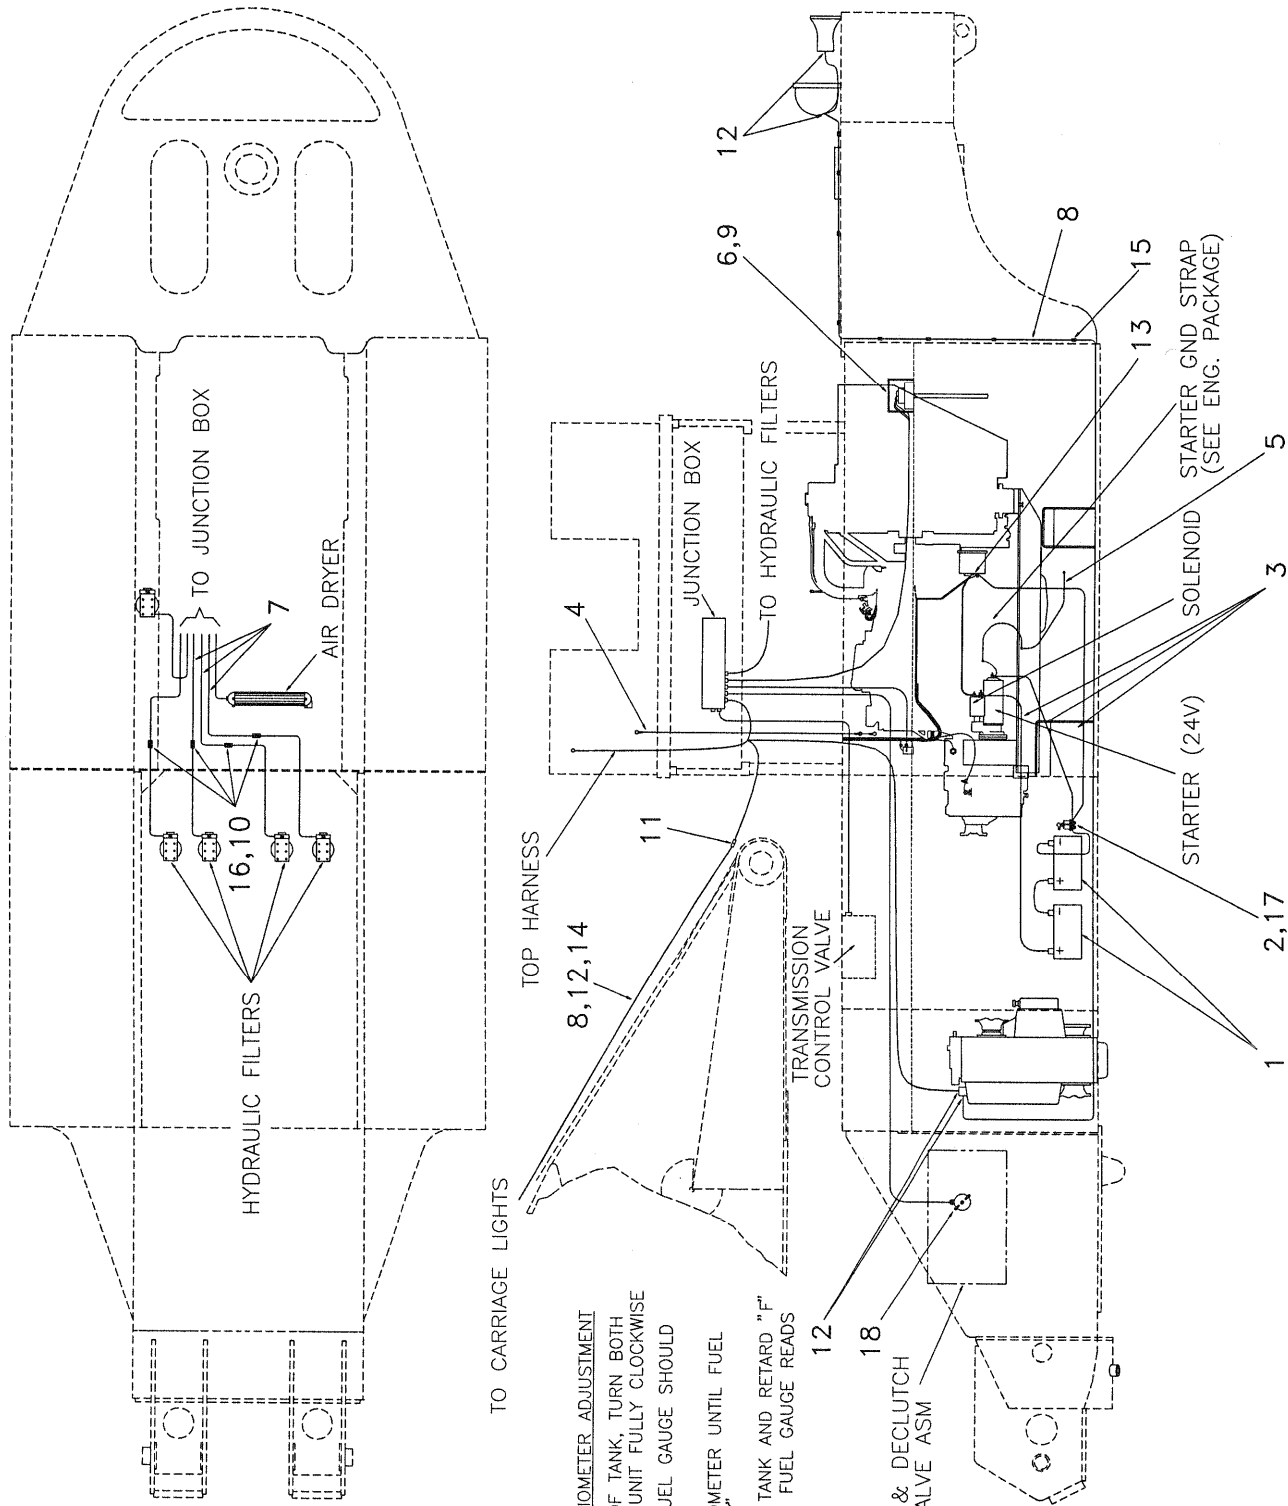

Chassis Wiring



TO CARRIAGE LIGHTS

- FUEL_SENDER - POTENTIOMETER ADJUSTMENT
1. WHILE UNIT IS OUT OF TANK, TURN BOTH POTENTIOMETERS ON UNIT FULLY CLOCKWISE
 2. TURN IGNITION ON, FUEL GAUGE SHOULD READ "FULL"
 3. RETARD "E" POTENTIOMETER UNTIL FUEL GAUGE READS "EMPTY"
 4. INSERT SENDER INTO TANK AND RETARD "F" POTENTIOMETER UNTIL FUEL GAUGE READS "FULL"

Chassis Wiring

Item	Part No	Qty	Description	Item	Part No	Qty	Description
	571709		Chassis Wiring				
1	200220	2	. Battery	11	221966	1	. Terminal
2	224299	1	. Switch, Master Disconnect	12	200248	6	. Terminal Ring
3	571689	1	. Battery Harness	13	221181	1	. Boot, Rubber
4	526544	1	. Ground Strap	14	223872	20	. Tie Strap
5	562535	1	. Ground Strap	15	200499	14	. Clamp, Hose
6	560516	1	. Bracket	16	221963	9	. Terminal
7	29103	A/R	. Cord	17	557276	1	. Bracket
8	219386	A/R	. Wire				
9	226250	1	. Sending Unit	A/R	As Required		
10	221964	9	. Terminal				